



instruction book

212G-1 Broadcast Console

This manual includes:

SP-144 Broadcast Console 212G-1 523-0755412

TD-323 Preamplifier 356A-1 520-5446000

TD-324 Program/Monitor Amplifier 356B-1 520-5447000

TD-325 Limiter Amplifier 356E-1 520-5448000

TD-326 Cue Amplifier 356Q-1 523-0034000

TD-327 Relay Unit 274K-2 523-0036000

TD-328 Power Supply 409X-2 523-0035000

© Collins Radio Company 1960, 1962

SYSTEM INSTRUCTIONS

SP-144

4th EDITION, 15 OCTOBER 1961

BROADCAST CONSOLE 212G-1

© **COLLINS RADIO COMPANY**
1960, 1961

CEDAR RAPIDS, IOWA, U.S.A.

PRINTED IN THE UNITED STATES OF AMERICA



TABLE OF CONTENTS

Section		Page
I	GENERAL DESCRIPTION	5
1.1	Purpose of Instruction Book	5
1.2	Purpose of Equipment	5
1.3	Basic Equipment	5
1.4	Applicable Subassembly Instruction Books	6
1.5	Description of Major Components	6
1.5.1	Broadcast Console 212G-1	6
1.5.2	Preamplifier 356A-1	6
1.5.3	Program/Monitor Amplifier 356B-1	6
1.5.4	Limiter Amplifier 356E-1	6
1.5.5	Cue Amplifier 356Q-1	6
1.5.6	Relay Unit 274K-2	6
1.5.7	Power Supply 409X-2	6
1.5.8	Rack Mounting Shelf 499G-1	6
1.5.9	Jumper Plug	6
1.5.10	Amplifier Test Cable	7
1.6	Electrical Characteristics	7
1.7	Physical Specifications	8
II	INSTALLATION AND ADJUSTMENT	8
2.1	Unpacking and Inspecting	8
2.2	Installation Procedure	8
2.2.1	General	8
2.2.2	Equipment Location	8
2.2.3	Equipment Mounting Procedure	8
2.2.4	Installation Wiring	10

Section		Page
2.3	Modification and Initial Adjustments	11
2.3.1	General	11
2.3.2	Selection of Impedances	11
2.3.3	Gain Adjustment for Program/Monitor Amplifier 356B-1	11
2.3.4	Adjustment of 300 Volts D-C Output from Power Supply 409X-2	11
2.3.5	Initial Adjustments for Use of Limiter Amplifier 356E-1	11
2.3.6	Monitoring External Circuit Level with VU Meter	12
2.3.7	Resistor Values for Fixed Pads	12
2.3.8	Suggested Function for Spare Switches	13
2.3.9	Speaker and Warning Light Control Circuits	13
III	OPERATION	14
3.1	Control Functions	14
3.1.1	Mixer	14
3.1.2	Mixer Selector Switches	14
3.1.3	Program/Audition Selector Switches	14
3.1.4	Gain Controls	14
3.1.5	Mixer 9 Net/Remote Switch	14
3.1.6	Remote Function Selector Switches	14
3.1.7	Monitor Input Switch	15
3.1.8	Meter Input Switch	15
3.1.9	Program Switch	15
3.1.10	Spare Switches	15
3.2	Operating Procedures	15
3.2.1	Routine Operation	15
3.2.1.1	Local Program on the Air	15
3.2.1.2	Audition Program	15
3.2.2	Remote Line Operation	15
3.2.2.1	Remote Program on the Air	15
3.2.2.2	Feed Cue Signal and Switch Remote Line to on the Air	15
3.2.2.3	Record Operation	15
3.2.2.4	Talk-Back Operation Using Speakers	16
3.2.2.5	Talk-Back Operation Using Headphones	16
IV	PRINCIPLES OF OPERATION	16
4.1	General	16
4.2	Mixer Circuits	16
4.3	Program Circuits	16
4.4	Monitor Circuits	21
4.5	Studio Speaker and Warning Light Control Circuits	21
V	MAINTENANCE	24
5.1	Periodic Inspection and Preventive Maintenance	24
5.1.1	Attenuators	24
5.1.2	Key Switches	24
5.1.3	Wiring	24
5.2	Trouble Shooting	24
5.2.1	General	24
5.2.2	Replacement of Meter Lamps	24
5.2.3	Excessive Distortion	24
VI	PARTS LIST	25
VII	ILLUSTRATIONS	29

LIST OF ILLUSTRATIONS

Figure		Page
1-1	Broadcast Console 212G-1 (C583-12-P)	4
2-1	Broadcast Console 212G-1, Mounting and Wiring Detail (C583-20-P)	9
2-2	Broadcast Console 212G-1, Amplifier Connector Location (C583-02-3)	9
2-3	Jumper Plug Wiring Schematic Diagram (C187-02-2)	11
2-4	Resistor Values for Fixed Pads (C583-24-3)	13
3-1	Broadcast Console 212G-1, Control Locations (C583-16-P)	14
4-1	Broadcast Console 212G-1, Functional Block Diagram (C583-01-4)	17/18
4-2	Mixer Circuits, Simplified Schematic Diagram (C583-09-5)	19/20
4-3	Program Circuits, Simplified Schematic Diagram (C583-04-4)	21
4-4	Monitor Circuits, Simplified Schematic Diagram (C583-08-4)	22
4-5	Speaker and Warning Light Control Circuits, Simplified Schematic Diagram (C583-07-4)	23
6-1	Broadcast Console 212G-1, Front Panel, Rear View (C583-21-P)	25
6-2	Broadcast Console 212G-1, Inside View (C583-23-P)	25
6-3	Jumper Plug (C187-27-P)	27
6-4	Test Cable (C187-26-P)	27
7-1	Broadcast Console 212G-1, Schematic Diagram (C583-10-6)	29
7-2	Broadcast Console 212G-1, Switch Pin Orientation (C583-11-5)	30
7-3	Broadcast Console 212G-1, Outline and Mounting Dimensions (C583-15-5)	31/32

LIST OF TABLES

Table		Page
1-1	Broadcast Console 212G-1, Equipment Available	5
1-2	Subassembly Instruction Books	6
1-3	Broadcast Console 212G-1 Electrical Characteristics	7
1-4	Broadcast Console 212G-1 Physical Specifications	8
2-1	Connections to Terminal Strip TB1	10
2-2	Line Levels	12
2-3	Line Levels	12

UNIT INSTRUCTIONS

TD No.	Title
323	Preamplifier 356A-1
324	Program/Monitor Amplifier 356B-1
325	Limiter Amplifier 356E-1
326	Cue Amplifier 356Q-1
327	Relay Unit 274K-2
328	Power Supply 409X-2



Figure 1-1. Broadcast Console 212G-1