




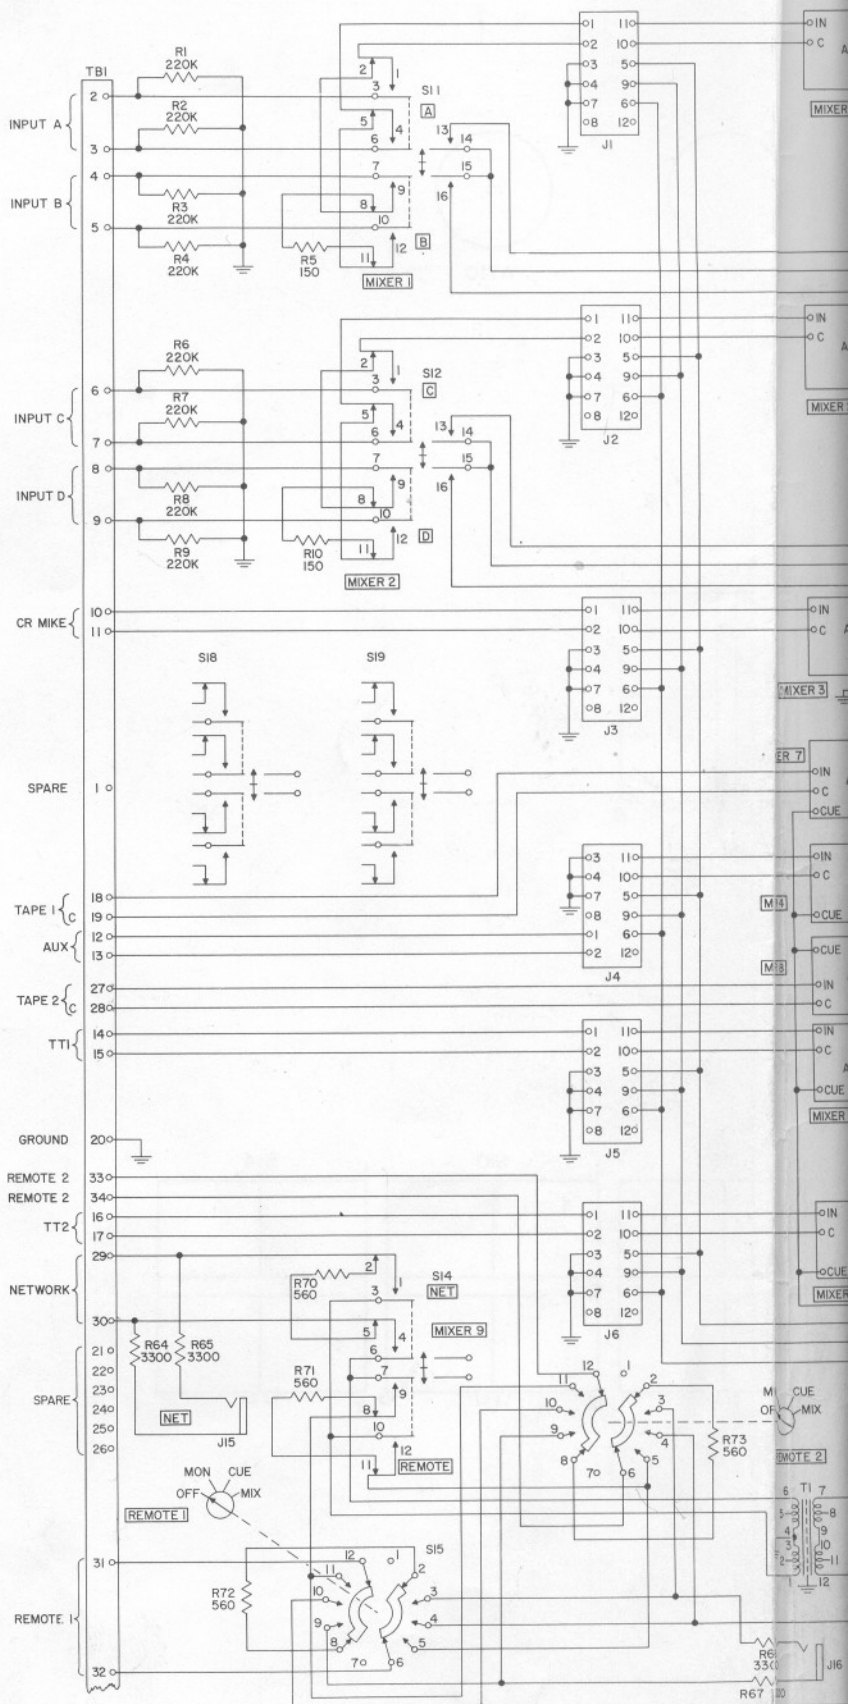

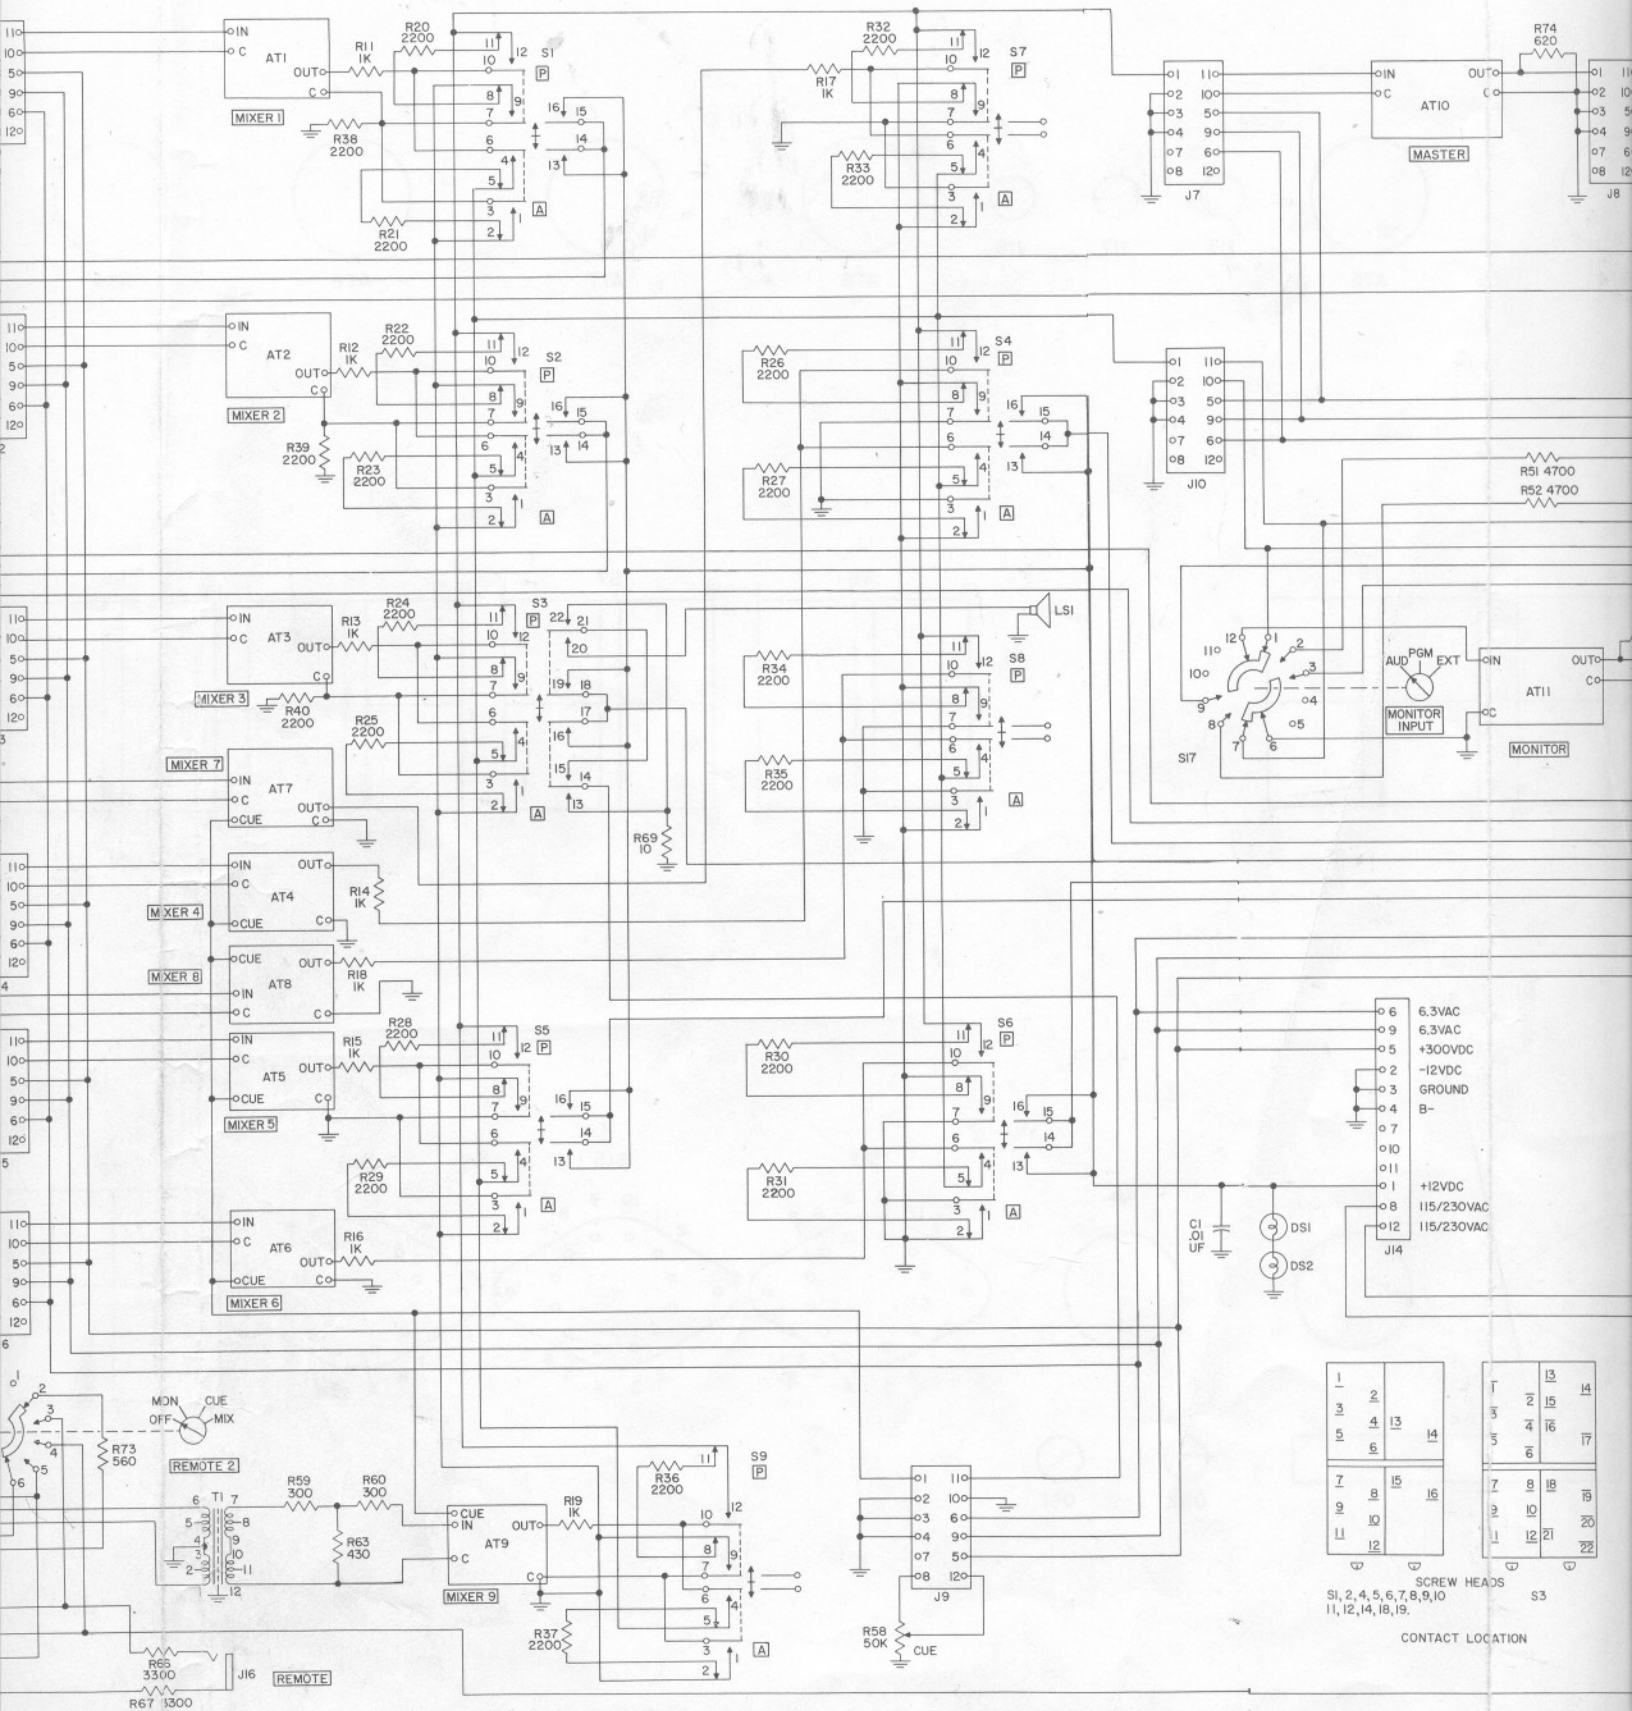

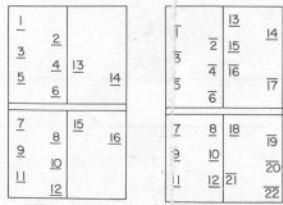

29


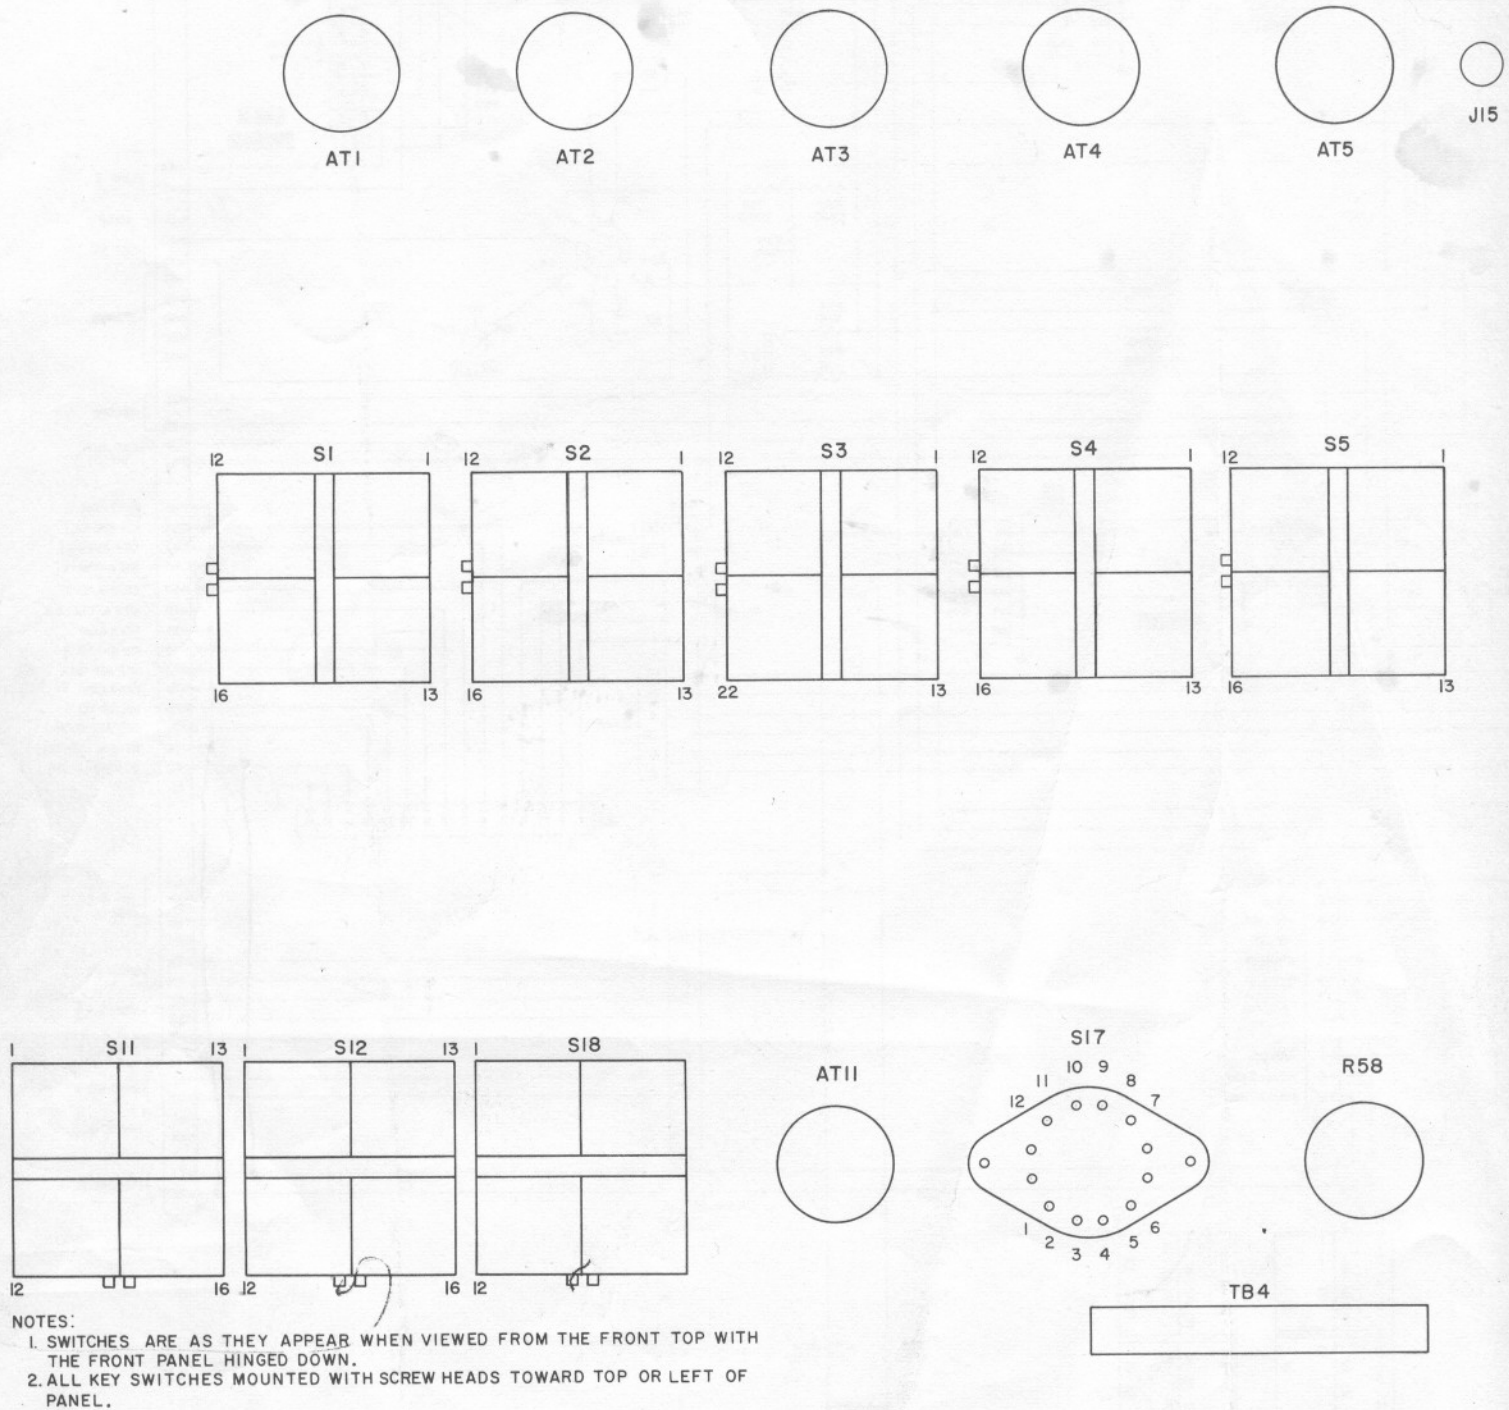


Figure 7-2. Broadcast Console 212G-1 Switch Pin Orientation



AT4

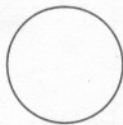

AT5



J15




J17




J16



AT6

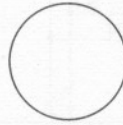





AT7

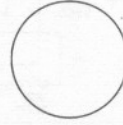


AT8








AT9

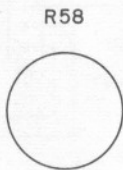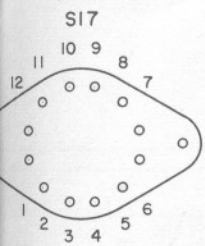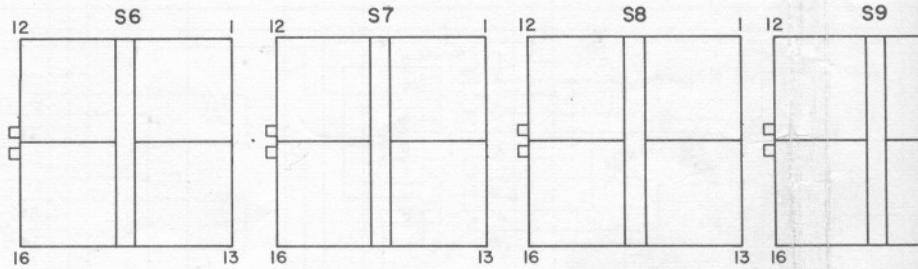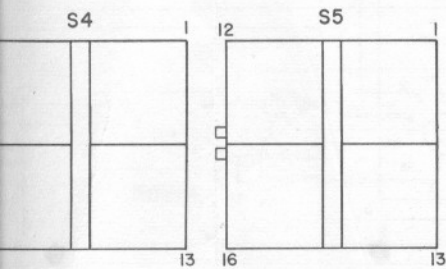

R58

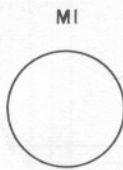

M1

 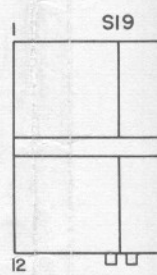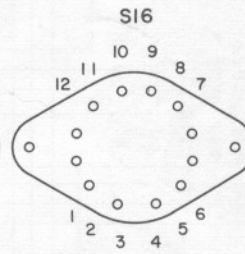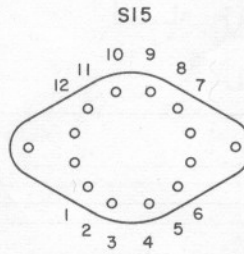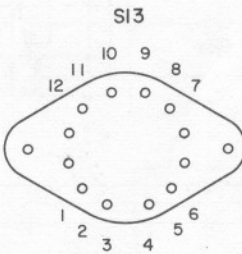


TB4




DS2



DS1

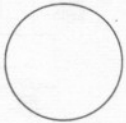




AT8


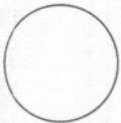



AT9



AT10

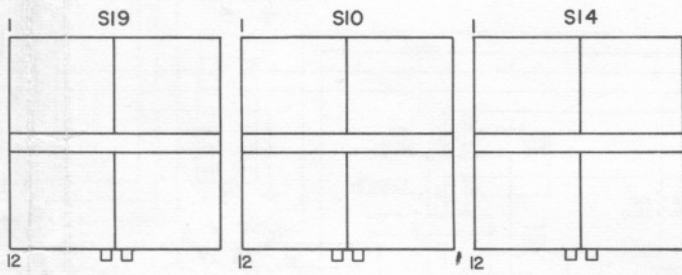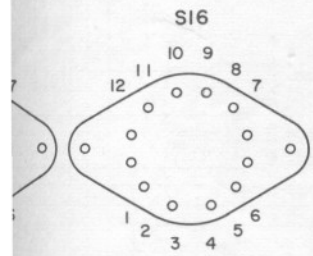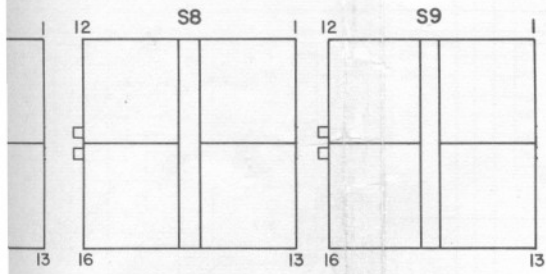

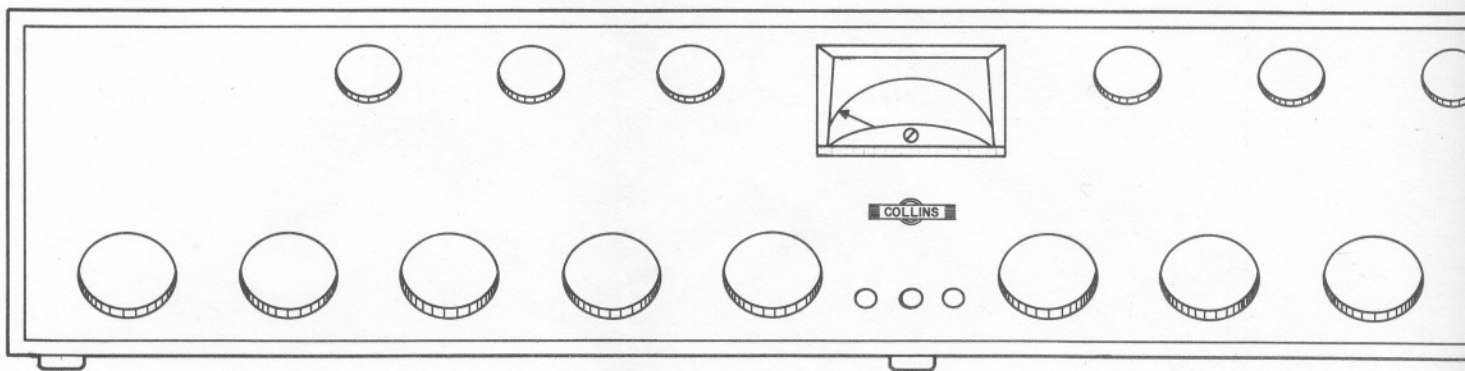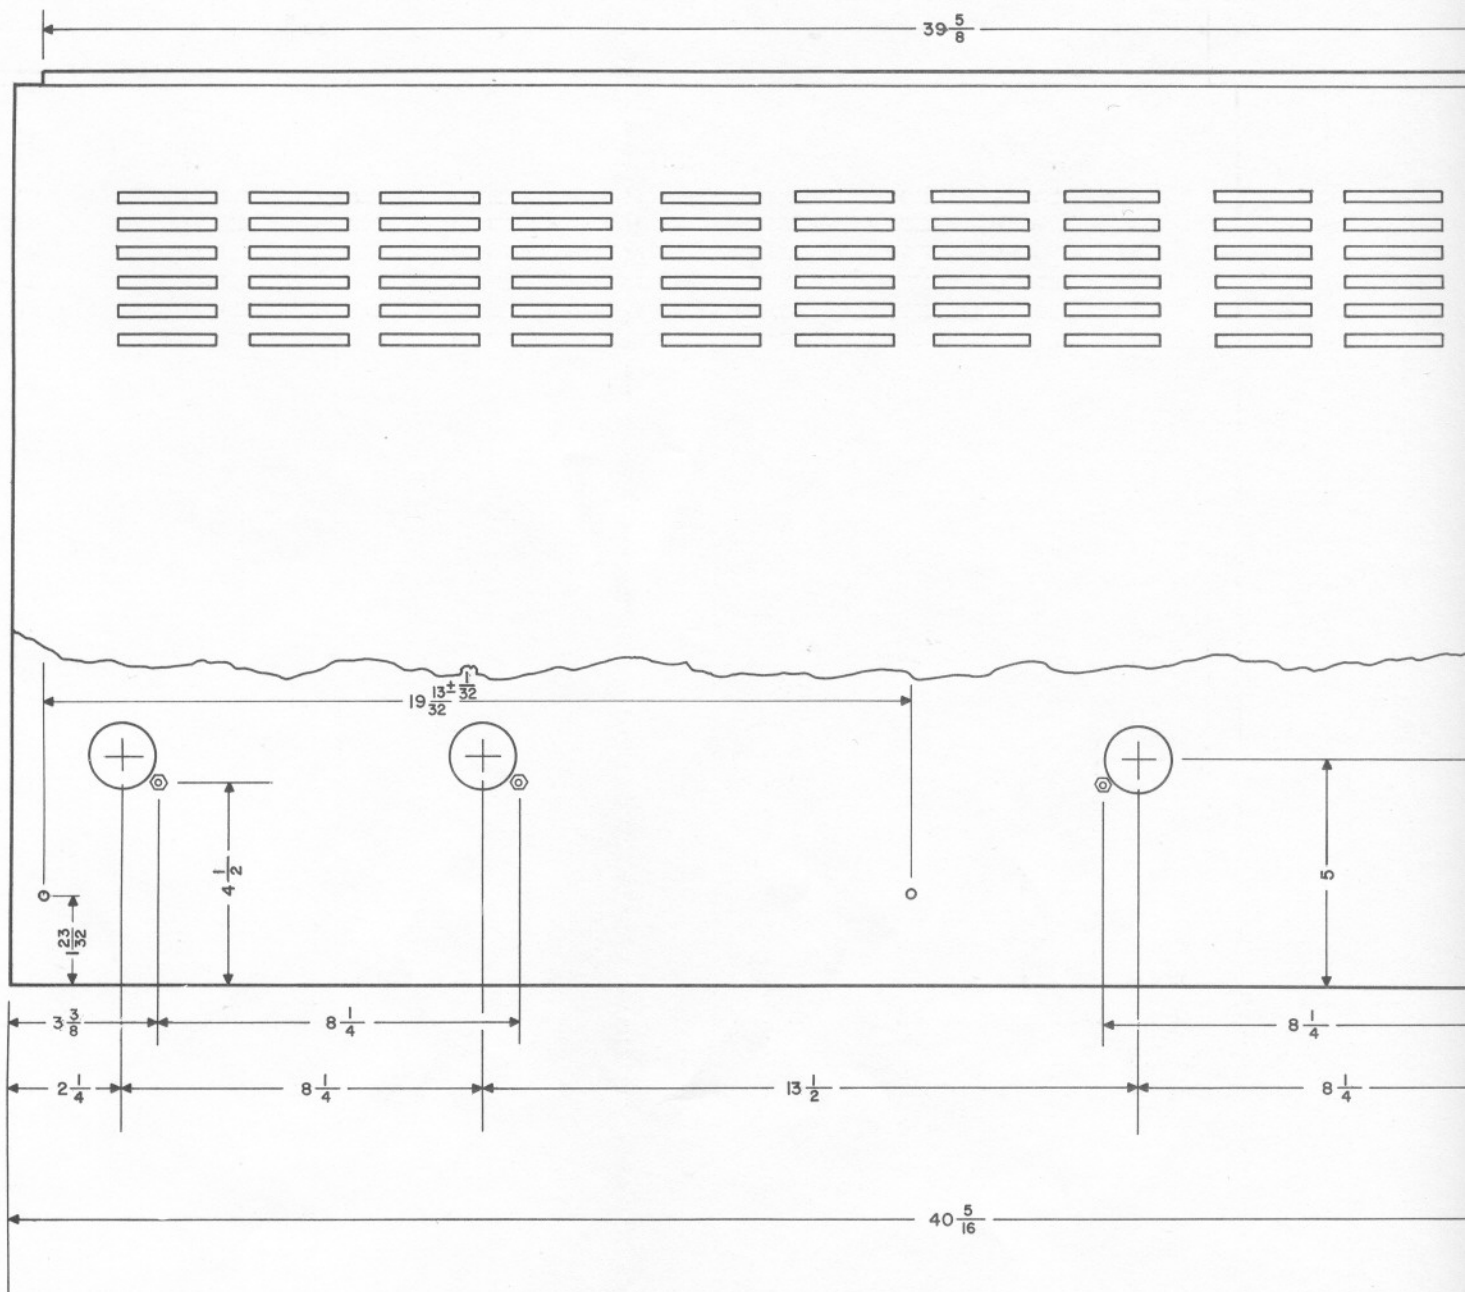

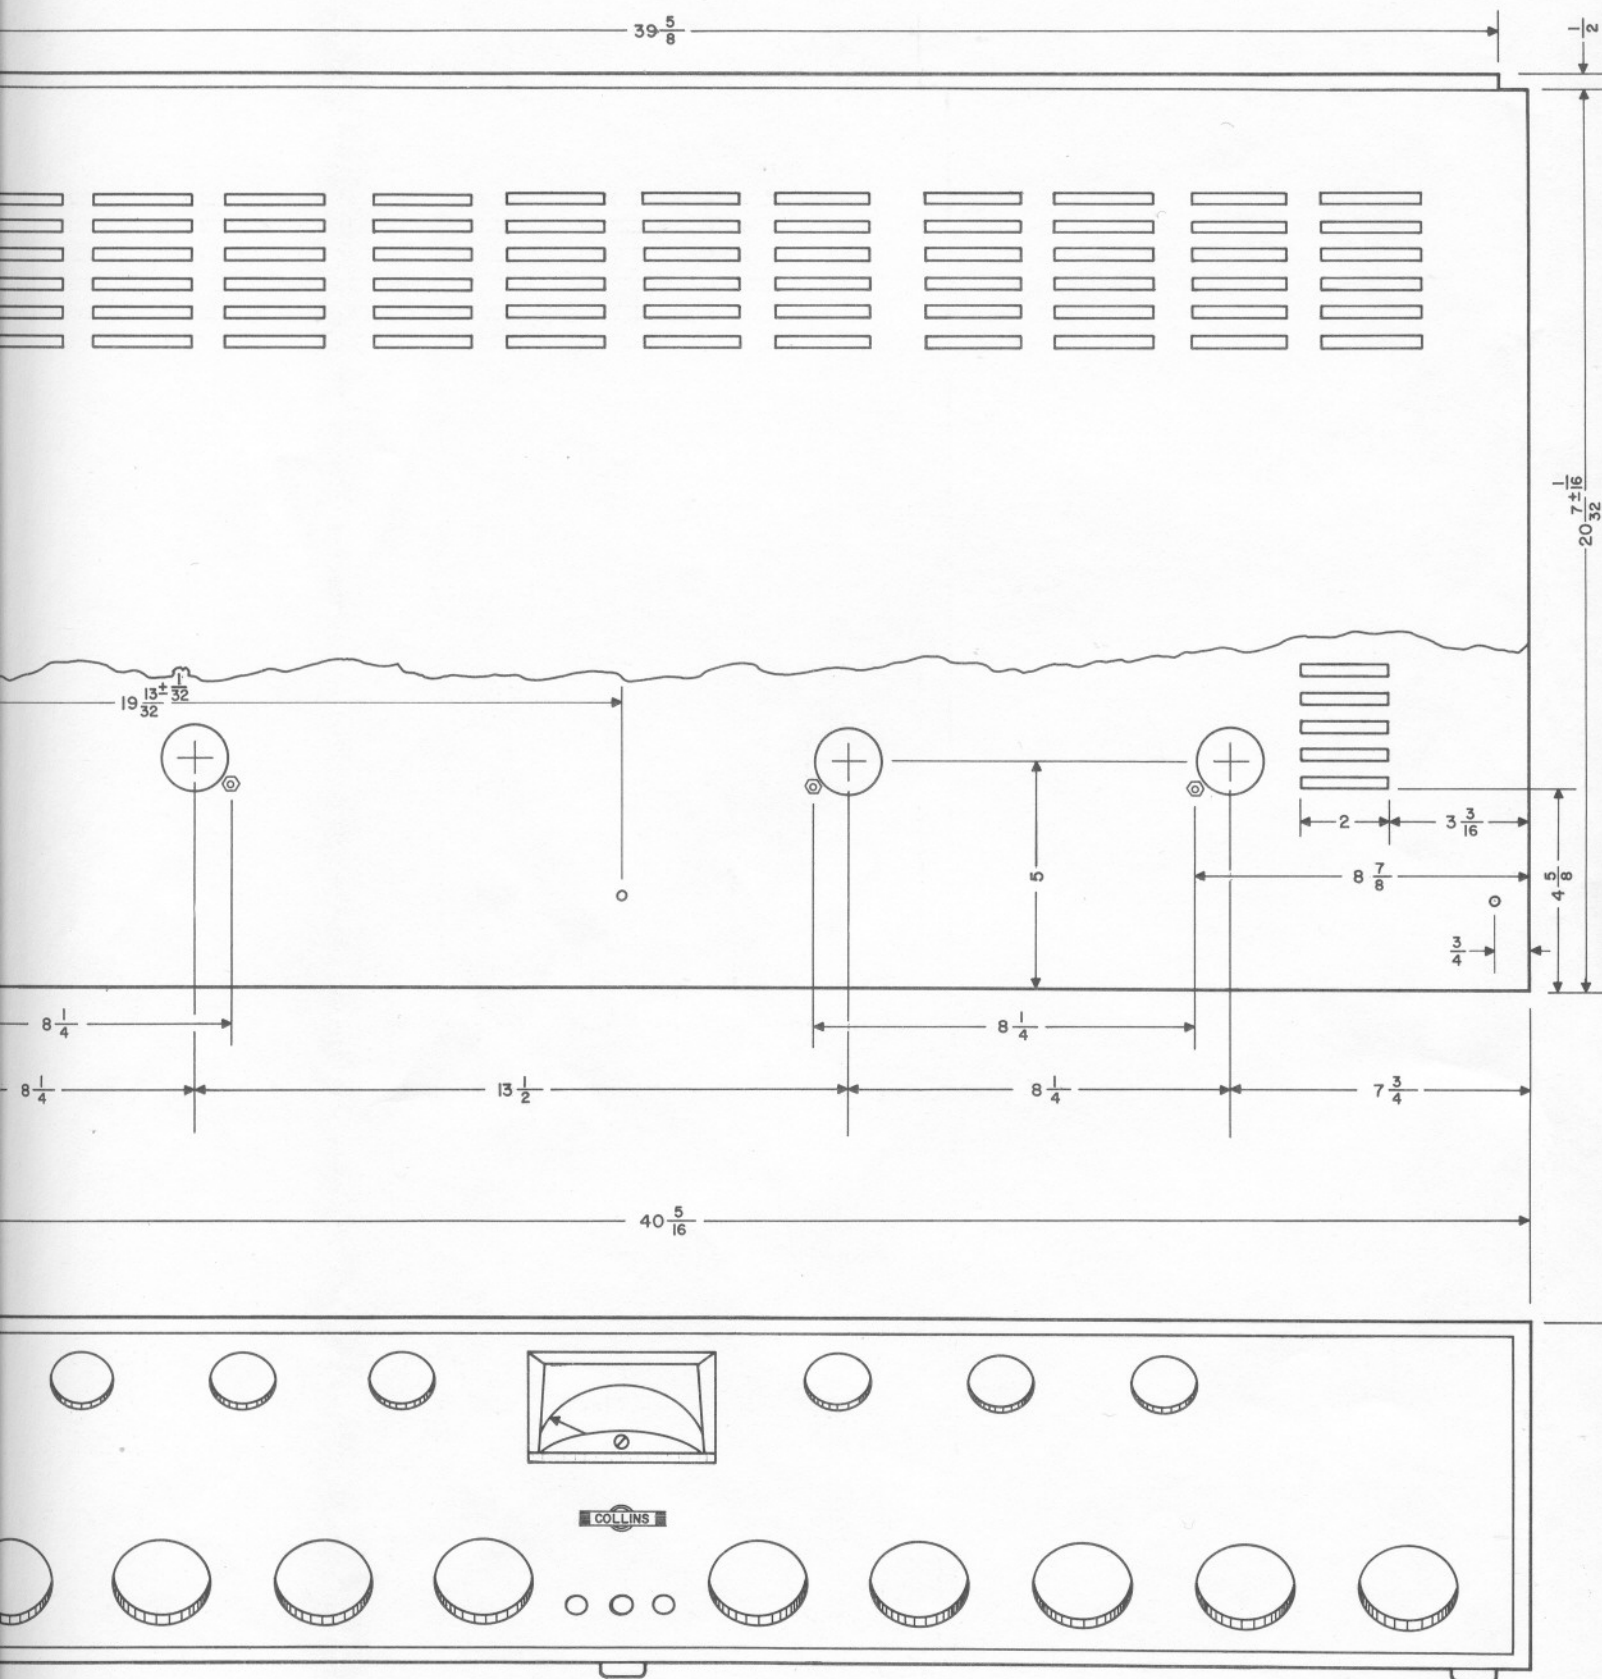

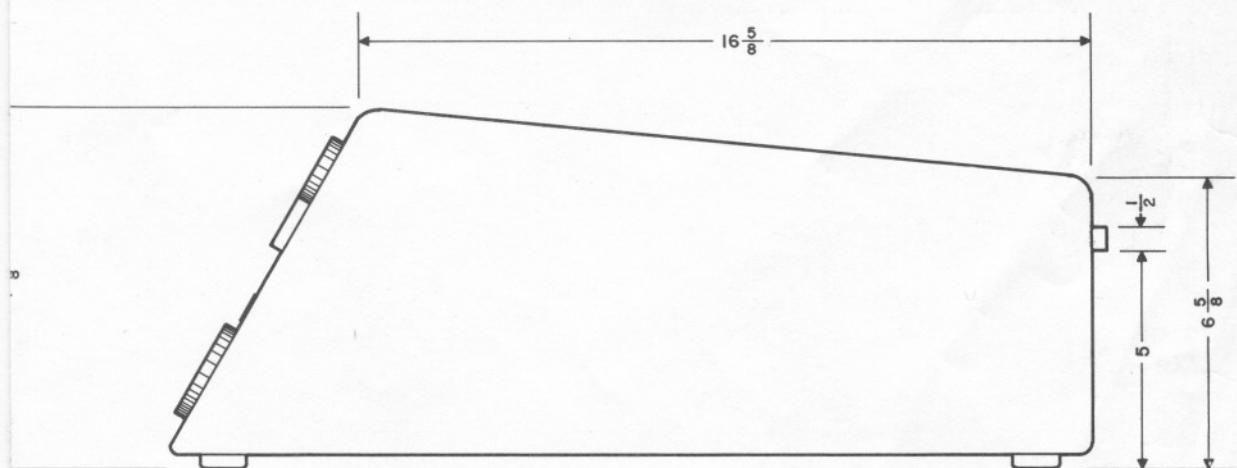


Figure 7-3. Broadcast Console 212G-1, Outline and Mounting Dimensions