



Guitar Wiring Schematic #2 (Tone Switch)
June 2005

For Models:

G6073
G6117HT
G6118
G6118T
G6118TJR
G6118T-120
G6119SP
G6120
G6120BK
G6120BS
G6120AM
G6120TM
G6120-1960
G6120GA
G6121
G6122
G6122-1958
G6128
G6128T
G6128T-1962
G6129
G6129T
G6129T-1962
G6129TAU
G6129TG
G6129TL
G6131
G6131T
G6136
G6136BK
G6136I
G6136SL
G6136T
G6136TBK
G6136TSL
G6136-1958
G7593
G7593BK

