




1. STANDARD HUMBUCKING OPERATION/ SINGLE CONDUCTOR WIRING

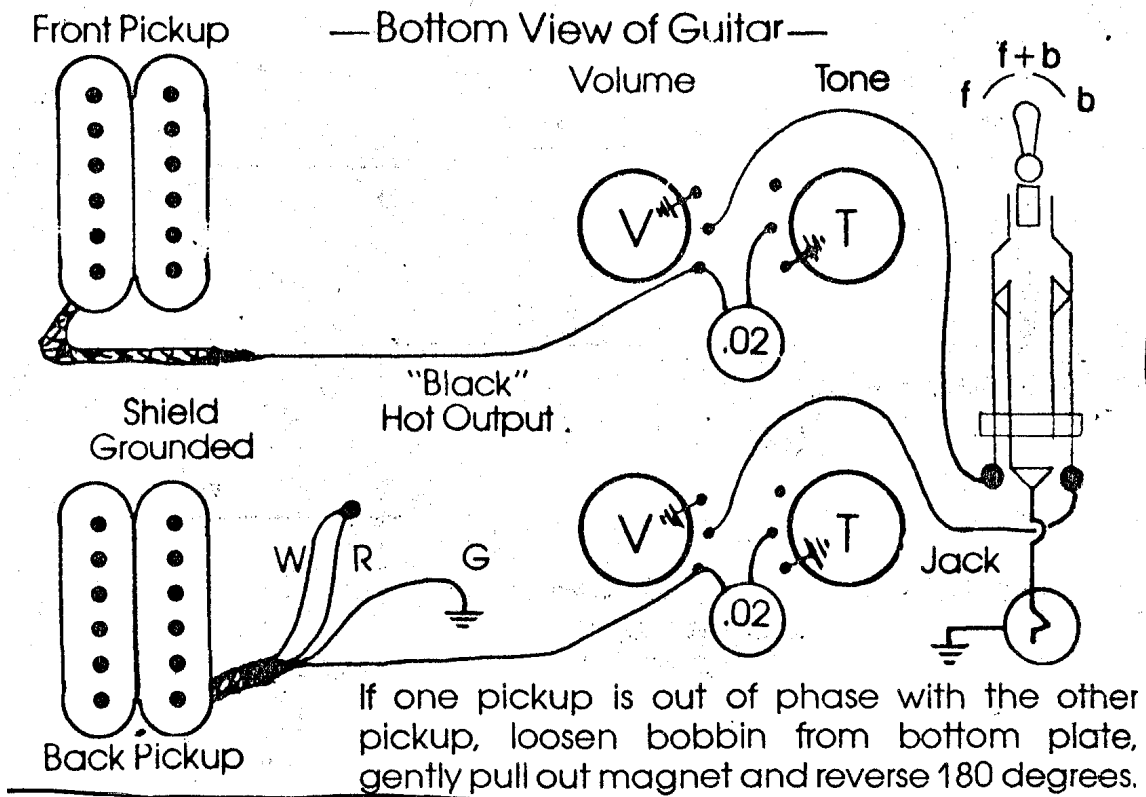

2. STANDARD HUMBUCKING OPERATION 4-CONDUCTOR WIRING

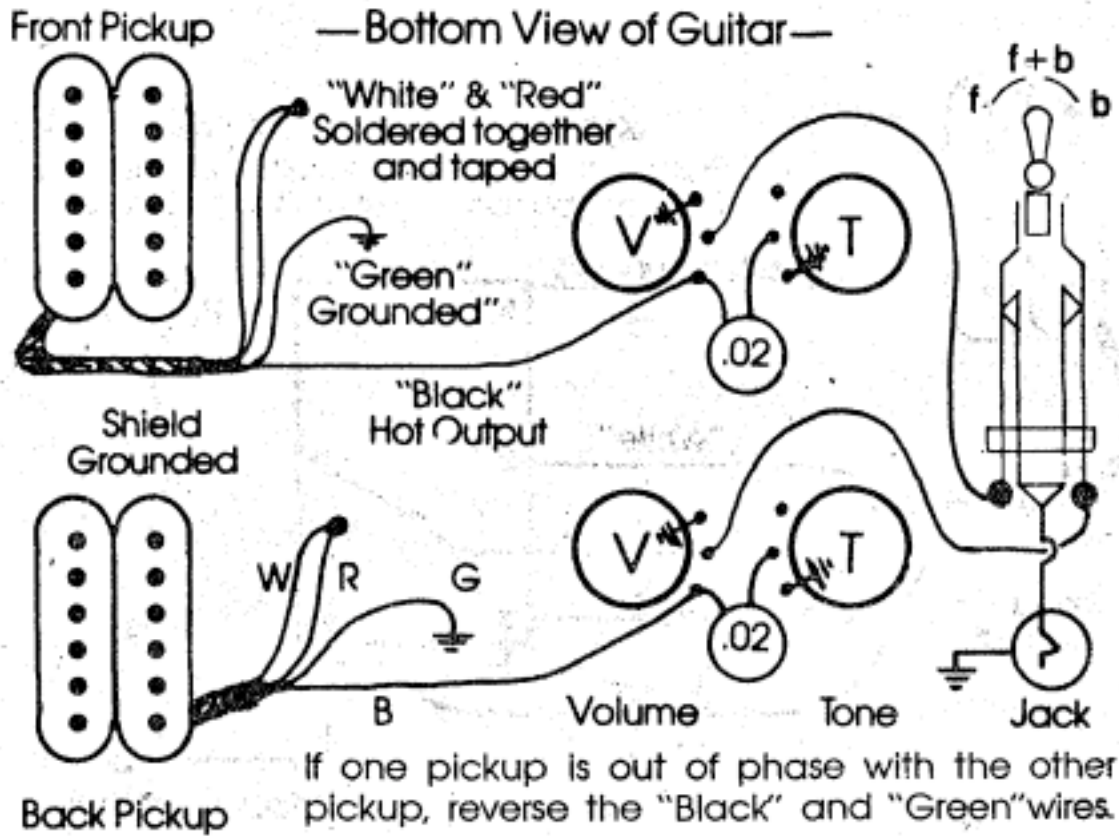


3. SPLITTING—WHEN THE PICKUP IS USED BY ITSELF

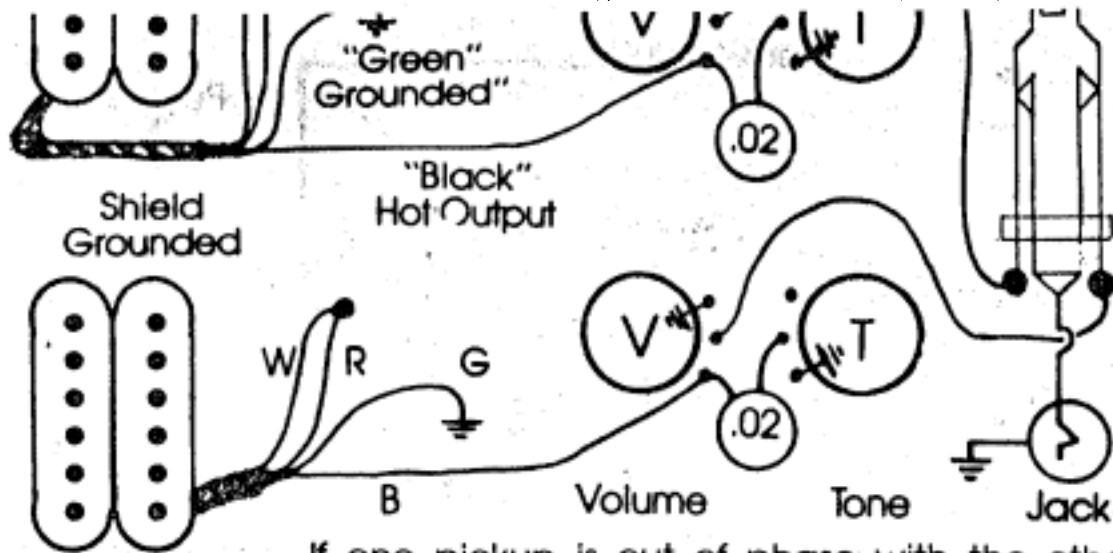


Back Pickup

If one pickup is out of phase with the other pickup, reverse the "Black" and "Green" wires.


3. SPLITTING—WHEN THE PICKUP IS USED BY ITSELF 4-CONDUCTOR WIRING

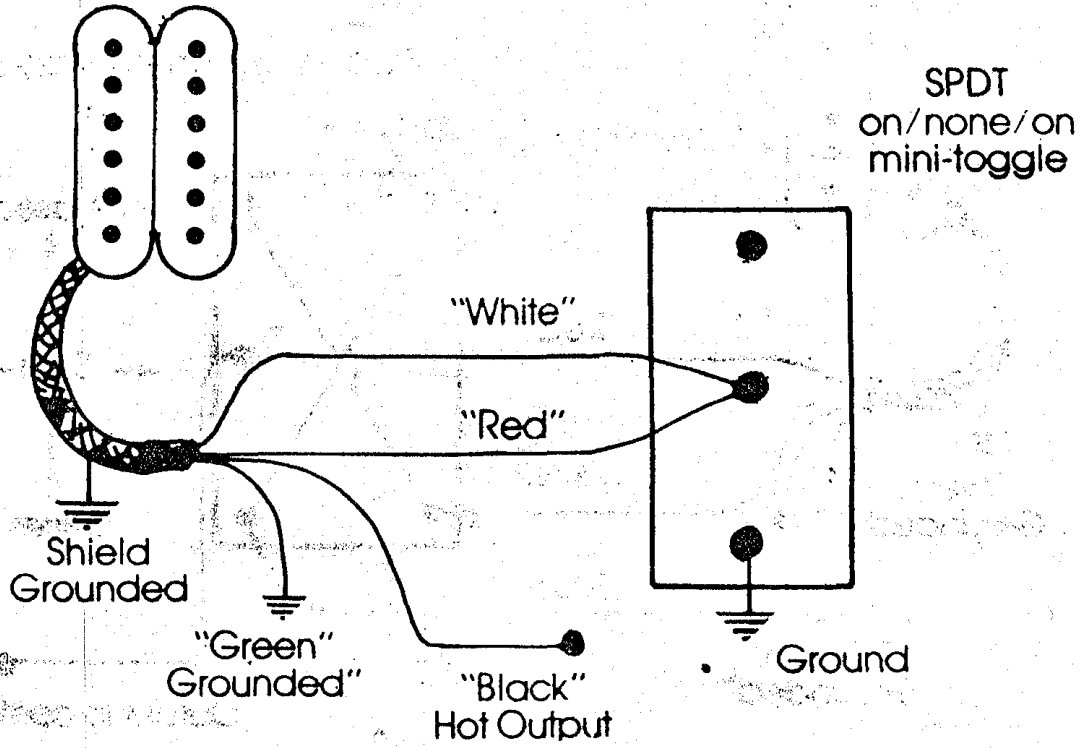


4. PHASING - WHEN USED WITH ANOTHER PICKUP 4-CONDUCTOR WIRING

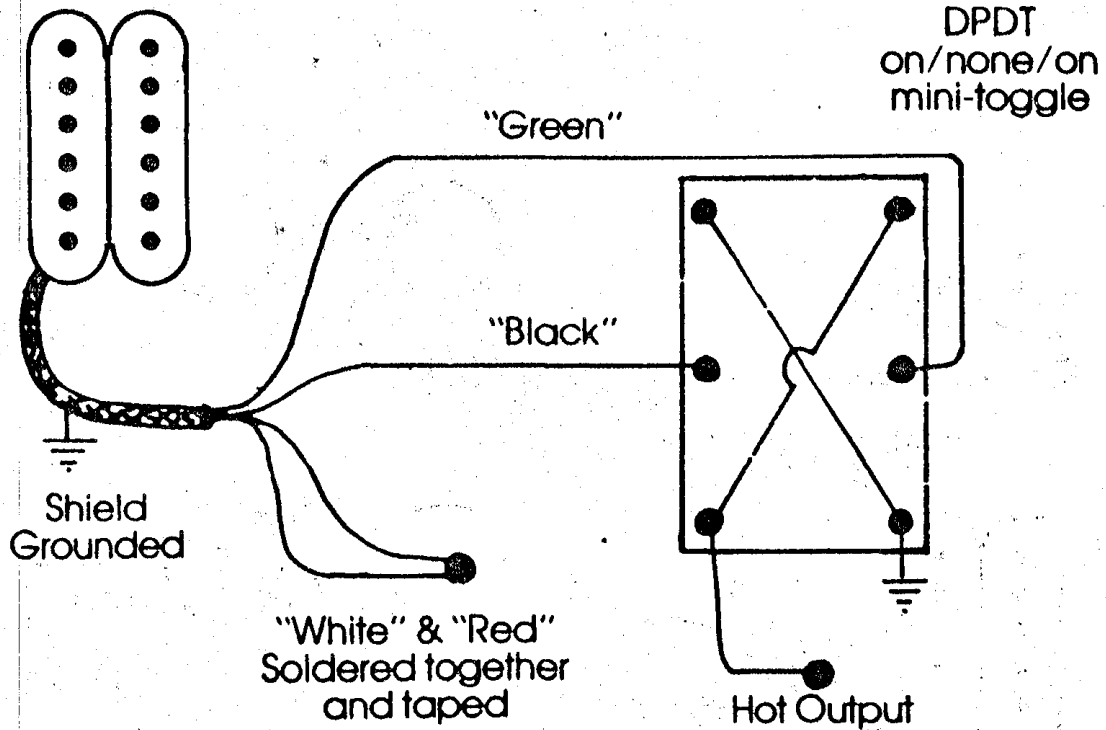


5. SERIES/PARALLEL OR SERIES/SPLIT/PARALLEL 4-CONDUCTOR WIRING

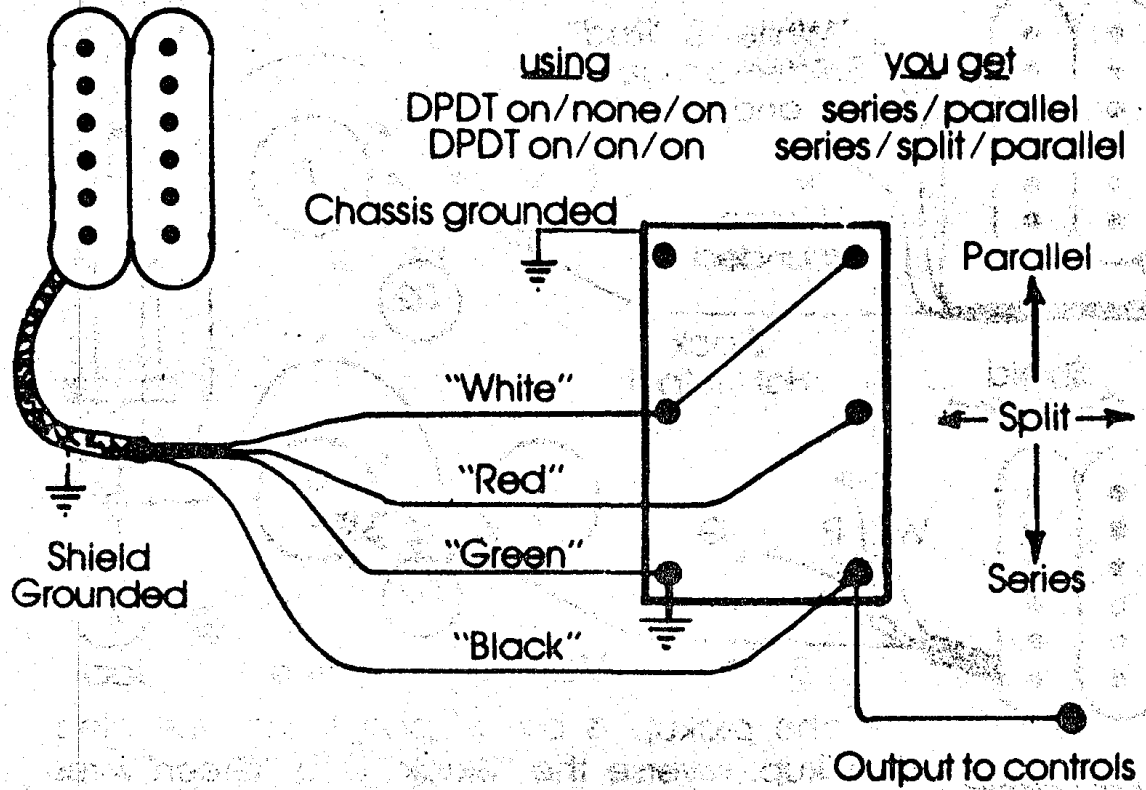

6. SERIES/SPLIT/PHASED WITH ITSELF 4-CONDUCTOR WIRING

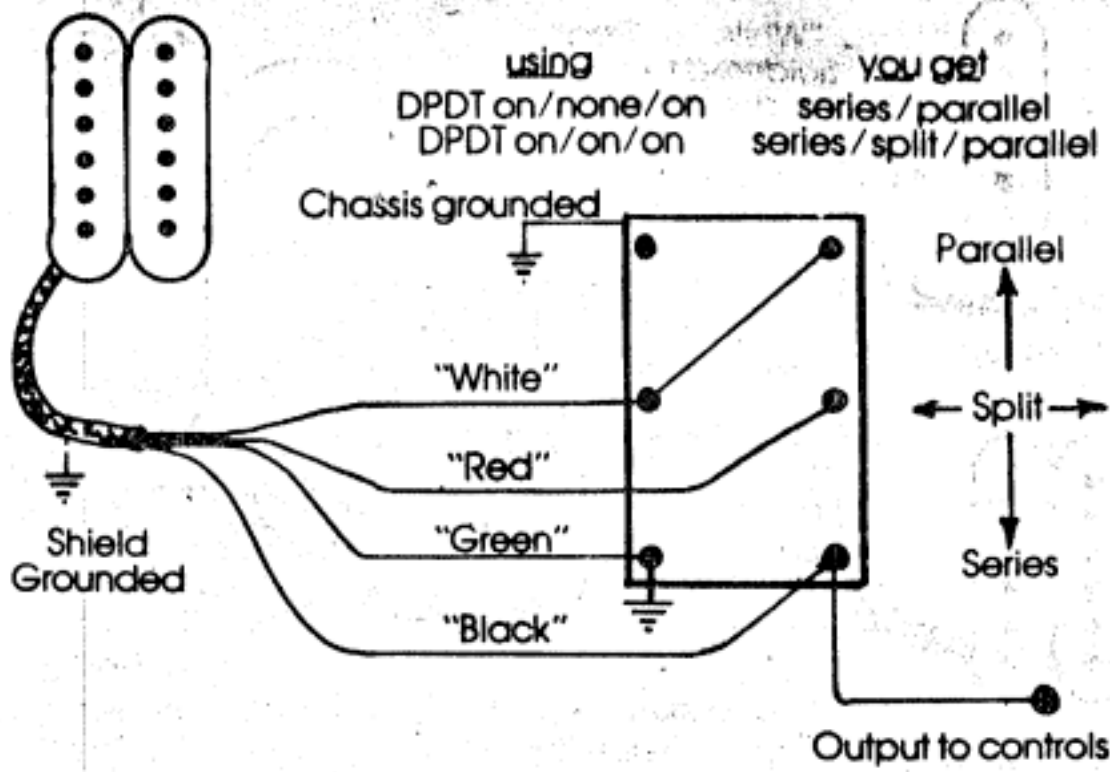

6. SERIES/SPLIT/PHASED WITH ITSELF 4-CONDUCTOR WIRING

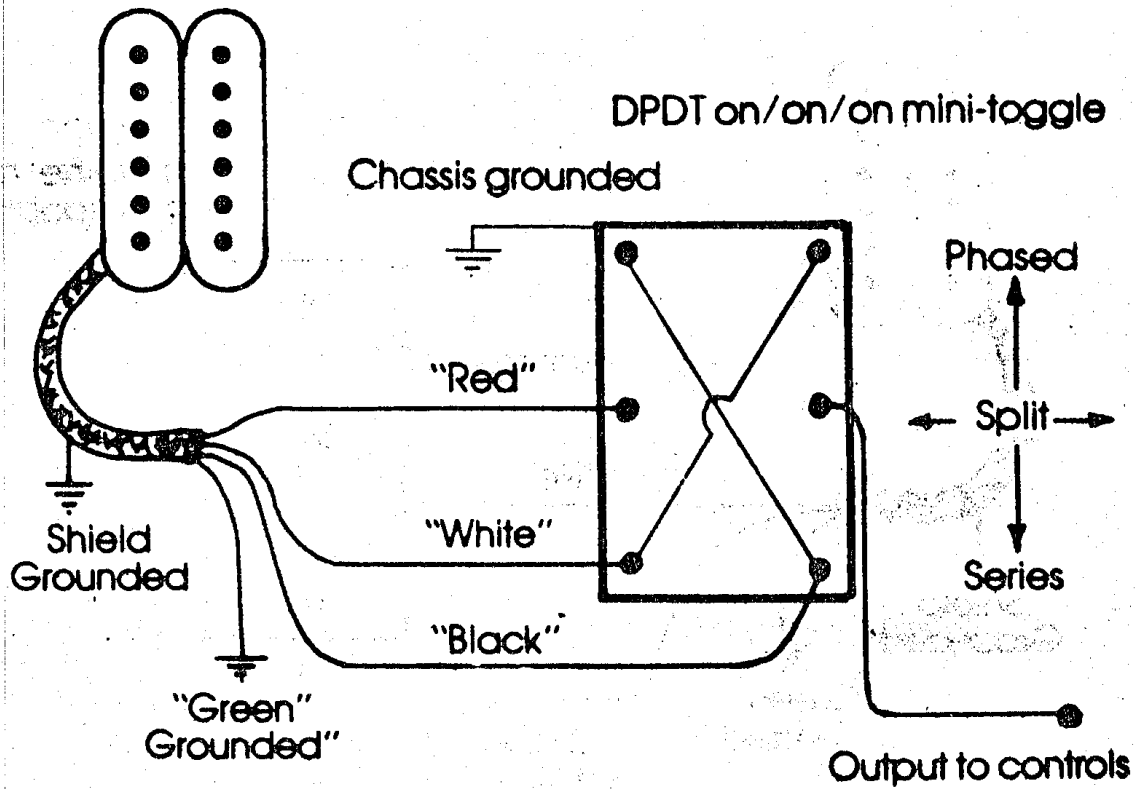

P/N 390008-602 Rev. C