

























## CONNECTS TO CHANNEL PCB J1 40 PIN CABLE 040-093-

| CH 1 IN +     | 1  | 2  | CH 1 IN -     |
|---------------|----|----|---------------|
| CH 1 GROUND   | 3  | 4  | CH 1 PHANTOM  |
| CH 1 GROUND   | 5  | 6  | CH 1 RETURN - |
| CH 1 RETURN + | 7  | 8  | CH 1 SEND     |
| CH 1 48V      | 9  | 10 | CH 1 GROUND   |
| CH 2 IN +     | 11 | 12 | CH 2 IN -     |
| CH 2 GROUND   | 13 | 14 | CH 2 PHANTOM  |
| CH 2 GROUND   | 15 | 16 | CH 2 RETURN - |
| CH 2 RETURN + | 17 | 18 | CH 2 SEND     |
| CH 2 48V      | 19 | 20 | CH 2 GROUND   |
| CH 3 IN +     | 21 | 22 | CH 3 IN -     |
| CH 3 GROUND   | 23 | 24 | CH 3 PHANTOM  |
| CH 3 GROUND   | 25 | 26 | CH 3 RETURN - |
| CH 3 RETURN + | 27 | 28 | CH 3 SEND     |
| CH 3 48V      | 29 | 30 | POS 16V       |
| CH 4 IN +     | 31 | 32 | CH 4 IN -     |
| CH 4 GROUND   | 33 | 34 | CH 4 PHANTOM  |
| CH 4 GROUND   | 35 | 36 | CH 4 RETURN - |
| CH 4 RETURN + | 37 | 38 | CH 4 SEND     |
| CH 4 48V      | 39 | 40 | POS 16V       |

## J2 CONNECTS TO CHANNEL PCB J8 10 PIN CABLE 040-102-

|    | 1 DIR |   | 2  | CH 2 DIR |
|----|-------|---|----|----------|
|    | 3 DIR |   | 4  | CH 4 DIR |
| CH | 5 DIR | 5 | 6  | CH 6 DIR |
| CH | 7 DIR | 7 |    | CH 8 DIR |
|    | NC    | 9 | 10 | NC       |
|    |       |   |    |          |

## P2 CONNECTS TO CHANNEL PCB J2 40 PIN CABLE 040-093-

CH 5 IN + 1 2 CH 5 IN CH 5 GROUND 3 4 CH 5 PHANTOM
CH 5 GROUND 5 6 CH 5 RETURN CH 5 RETURN + 7 8 CH 5 SEND
CH 6 IN + 11 12 CH 6 IN CH 6 GROUND 15 16 CH 6 RETURN CH 6 GROUND 15 16 CH 6 RETURN CH 6 GROUND 15 16 CH 6 GROUND
CH 7 IN + 21 22 CH 7 IN CH 7 GROUND 25 26 CH 7 RETURN CH 7 RETURN + 27 28 CH 7 SEND
CH 7 48V 29 30 NEG 16V
CH 8 IN + 31 32 CH 8 IN CH 8 GROUND 35 36 CH 8 RETURN CH 8 GROUND 35 36 CH 8 SEND
CH 8 48V 39 40 NEG 16V



























































