



GUITAR OUT

PU SEL

I PU

II PU

TOUCH PLATE

HEX PU

VIB DEPTH

RES

CUTOFF

MODE SEL

G TONE

M VOL

BALANCE

1 G2

#4 SIG	122
#1 SIG	119
MODE2	116
DPT SIG	117
BEND CV	113
COF CV	111
MODE3	17
SYN VOL	19
GND	16
GND	13
+15V	11
GND	14

1 G3

#5 SIG	123
#6 SIG	124
#3 SIG	121
#2 SIG	120
GT SIG	118
MODE1	115
RES CV	112
TP CV	114
GT VOL	110
M VOL	108
GND	105
-15V	102

10 micro
16 volt BP

IC 1,2,3,4,5,6
7,8=4558
IC 9=4011
— = 1S2473VE
— = 1S188FM