## LIMITED WARRANTY


This product is warranted to the original consumer purchaser to be free from defects in materials and workmanship under normal installation, use and service for a period of one (1) year from the date of purchase as shown on the purchaser's receipt.

The obligation of Rolls Corporation under this warranty shall be limited to repair or replacement (at our option), during the warranty period of any part which proves defective in material or workmanship under normal installation, use and service, provided the product is returned to Rolls Corporation, TRANSPORTATION CHARGES PRE-PAID. Products returned to us or to an authorized Service Center must be accompanied by a copy of the purchase receipt. In the absence of such purchase receipt, the warranty period shall be one (1) year from the date of manufacture.


This warranty shall be invalid if the product is damaged as a result of defacement, misuse, abuse, neglect, accident, destruction or alteration of the serial number, improper electrical voltages or currents, repair, alteration or maintenance by any person or party other than our own service facility or an authorized Service Center, or any use violative of instructions furnished by us.

This one-year warranty is in lieu of all expressed warranties, obligations or liabilities. ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MER-CHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE ONE YEAR DURATION OF THIS WRITTEN LIMITED WARRANTY. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

IN NO EVENT SHALL WE BE LIABLE FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESSED OR IMPLIED, WHATSOEVER. Some states do not allow the exclusion or limitation of special, incidental or consequential damages so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

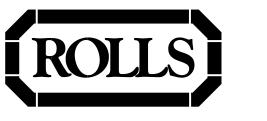

# RA200 100 WATT/CHANNEL POWER AMPLIFIER

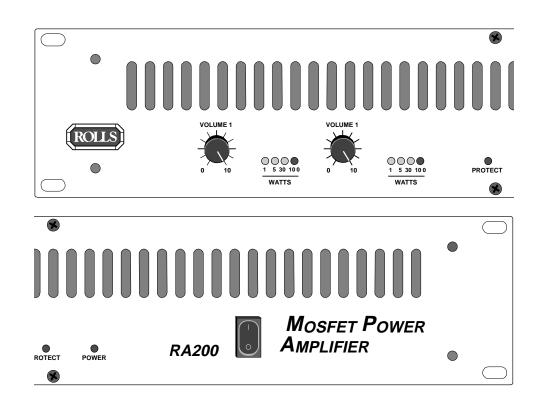



**OWNERS MANUAL** 

## INTRODUCTION

Thank you for your purchase of the ROLLS RA200 Power Amplifier. The RA200 is a stereo 100 Watt per channel MOSFET power amplifier. It bridges to 200 Watts into eight ohms. It is intended for professional audio applications such as recording studios and small live performances.

### INSPECTION

 
1. Unpack and inspect the RA200 box and package.

If obvious physical damage is noticed, contact the carrier immediately to make a damage claim. We suggest saving the shipping carton and packing materials for safely transporting the unit in the future.

2. Please complete the Warranty Registration Card and return it to the factory.

## INSTALLATION

Connect the power cord to an AC power source, connect the input to the signal source and to the RA200 via the RCA or 1/4" input jacks. Speakers may be connected by using the 1/4" output jacks, or the dual banana posts. Turn the Volume controls fully counterclockwise (off), and turn on the power switch, the power LED should light. With the program material running, slowly increase the Volume controls until the desired level of sound is present. There is a one second turn-on delay provided to prevent possible speaker damage in case all equipment is on a signal power strip.



#### BRIDGING

To bridge the RA200, first ensure the power is off. Move the Bridging switch to the "Bridge" position. The Channel 1 Volume control will be the master volume, Channel two Volume is inactive.

Connect the input to Channel 1 input, then connect the load (speakers) to the two positive (red) banana jacks. Make no connections to the black posts. The level meters will both light, and the output power into 8 ohms is the sum of the LEDs that light.

## FAULT PROTECTION

The fault protection in the RA200 limits the current to the output stage in the faulted channel and turns on all the LEDs in that channel. This mode is entered whenever the output stage is called upon for too much power, it may also be fooled by impedances lower than four ohms - which may cause the output stage to overheat and burn up the MOSFETs.

Since the RA200 is convection cooled, the unit radiates heat from the rear panel

and , depending on the load demand, it may become very hot if drawn upon heavily.

#### SPECIFICATIONS

Power Output, Stereo:

Input Connectors: Output Connectors: Sensitivity: THD: S/N Ratio: Power Bandwidth: Damping Factor: Slew Rate: Phase Shift: Input Impedance: Power:

Size:

Weight:

# SCHEMATIC

100 Watts RMS/ch. 4 w 70 Watts RMS/ch. 8 W Bridged - 200 Watts RMS 8 w 1/4" TRS balanced and RCA 1/4" and 5-way binding posts <1 VRMS for full output <.08% (1kHz @ 1 Watt) 106 dBU DC - 30 kHz +/- 1dB > 150 100 Volts/microSecond <10 Deg., 20Hz - 20kHz 10 KW Balanced 120 VAC 60Hz 2.5A 230 VAC 50Hz 19" x 3.5" x 7.5" (48 x 9 x 19 cm) 12 lbs (5.5 kg)

