 



■ REC MODULE (REC1, REC2, VR)



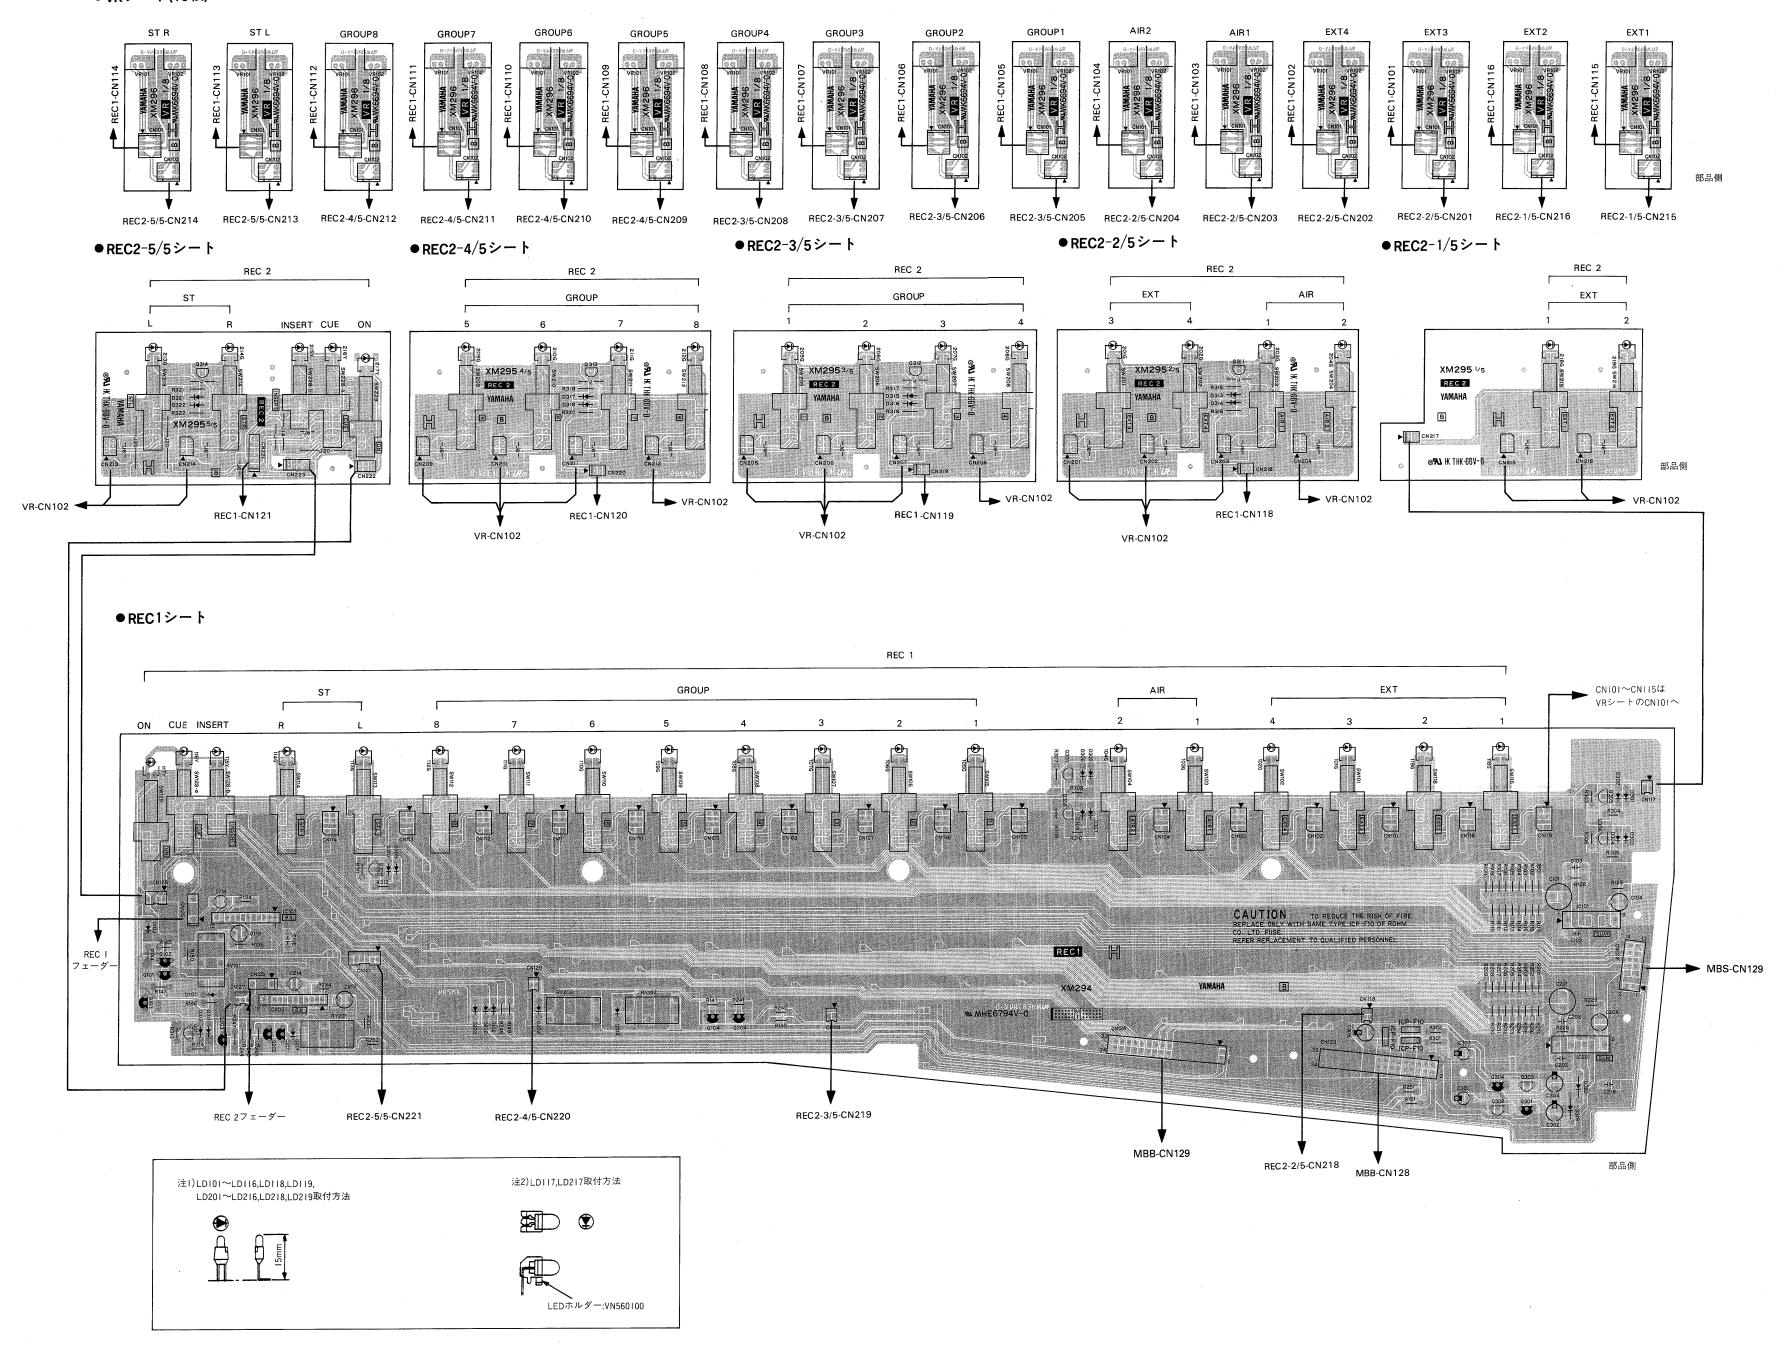


3NA-VQ43260 **A: REC1**


: REC2


3NA-VQ43270

3NA-VQ43280


■ MATRIX MODULE (MX1, MX2, MX3, VR)

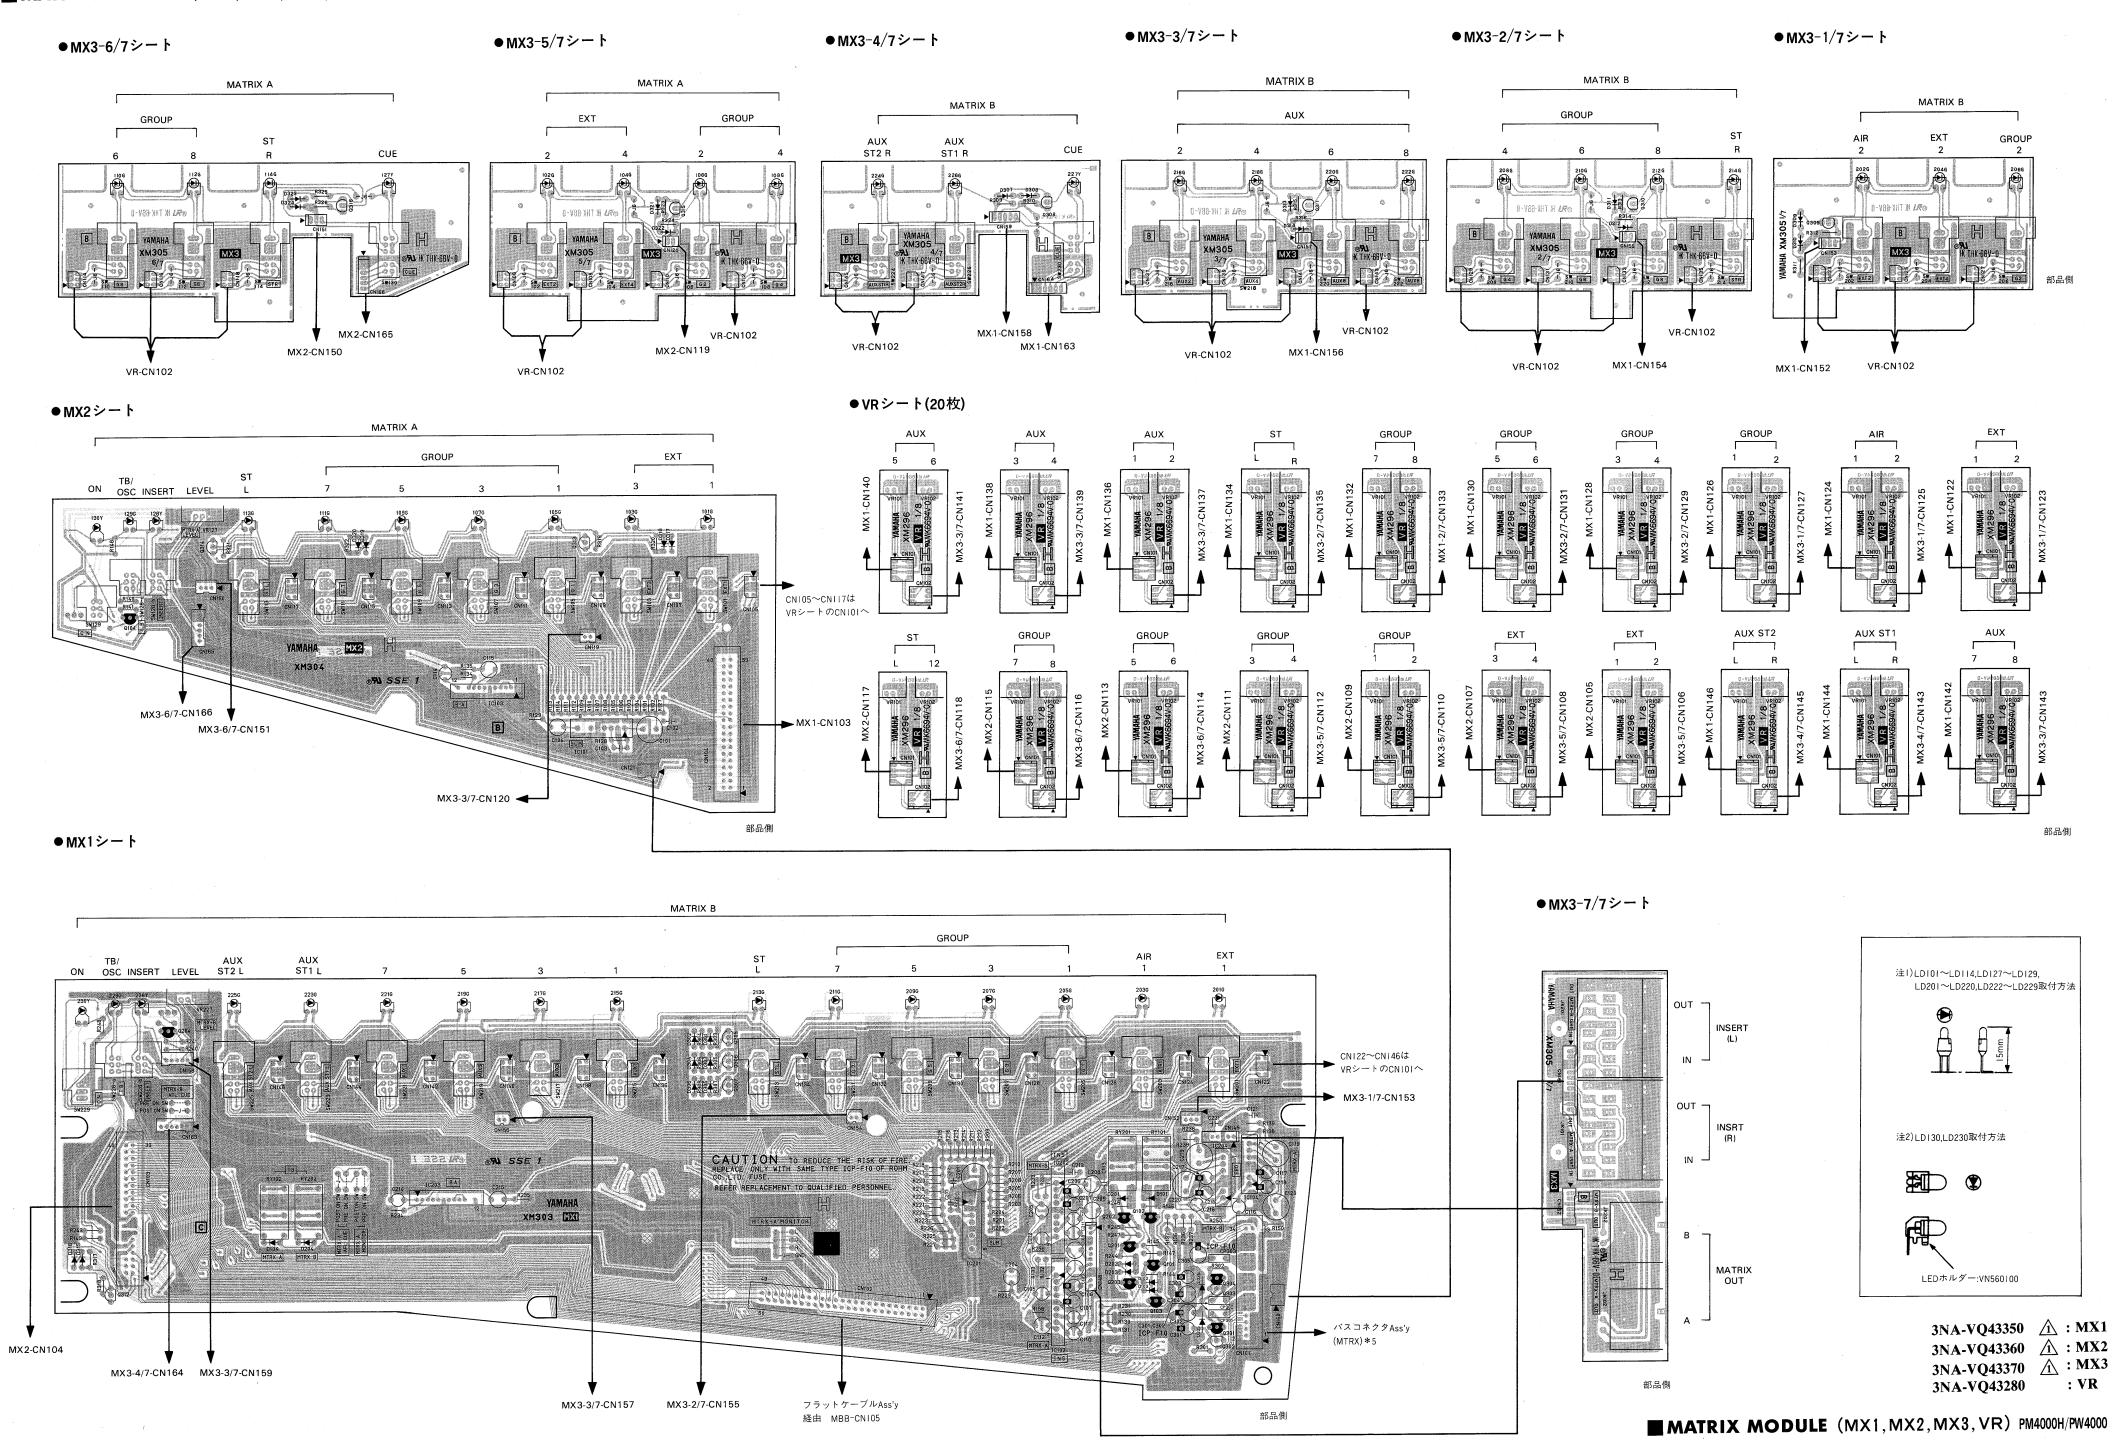


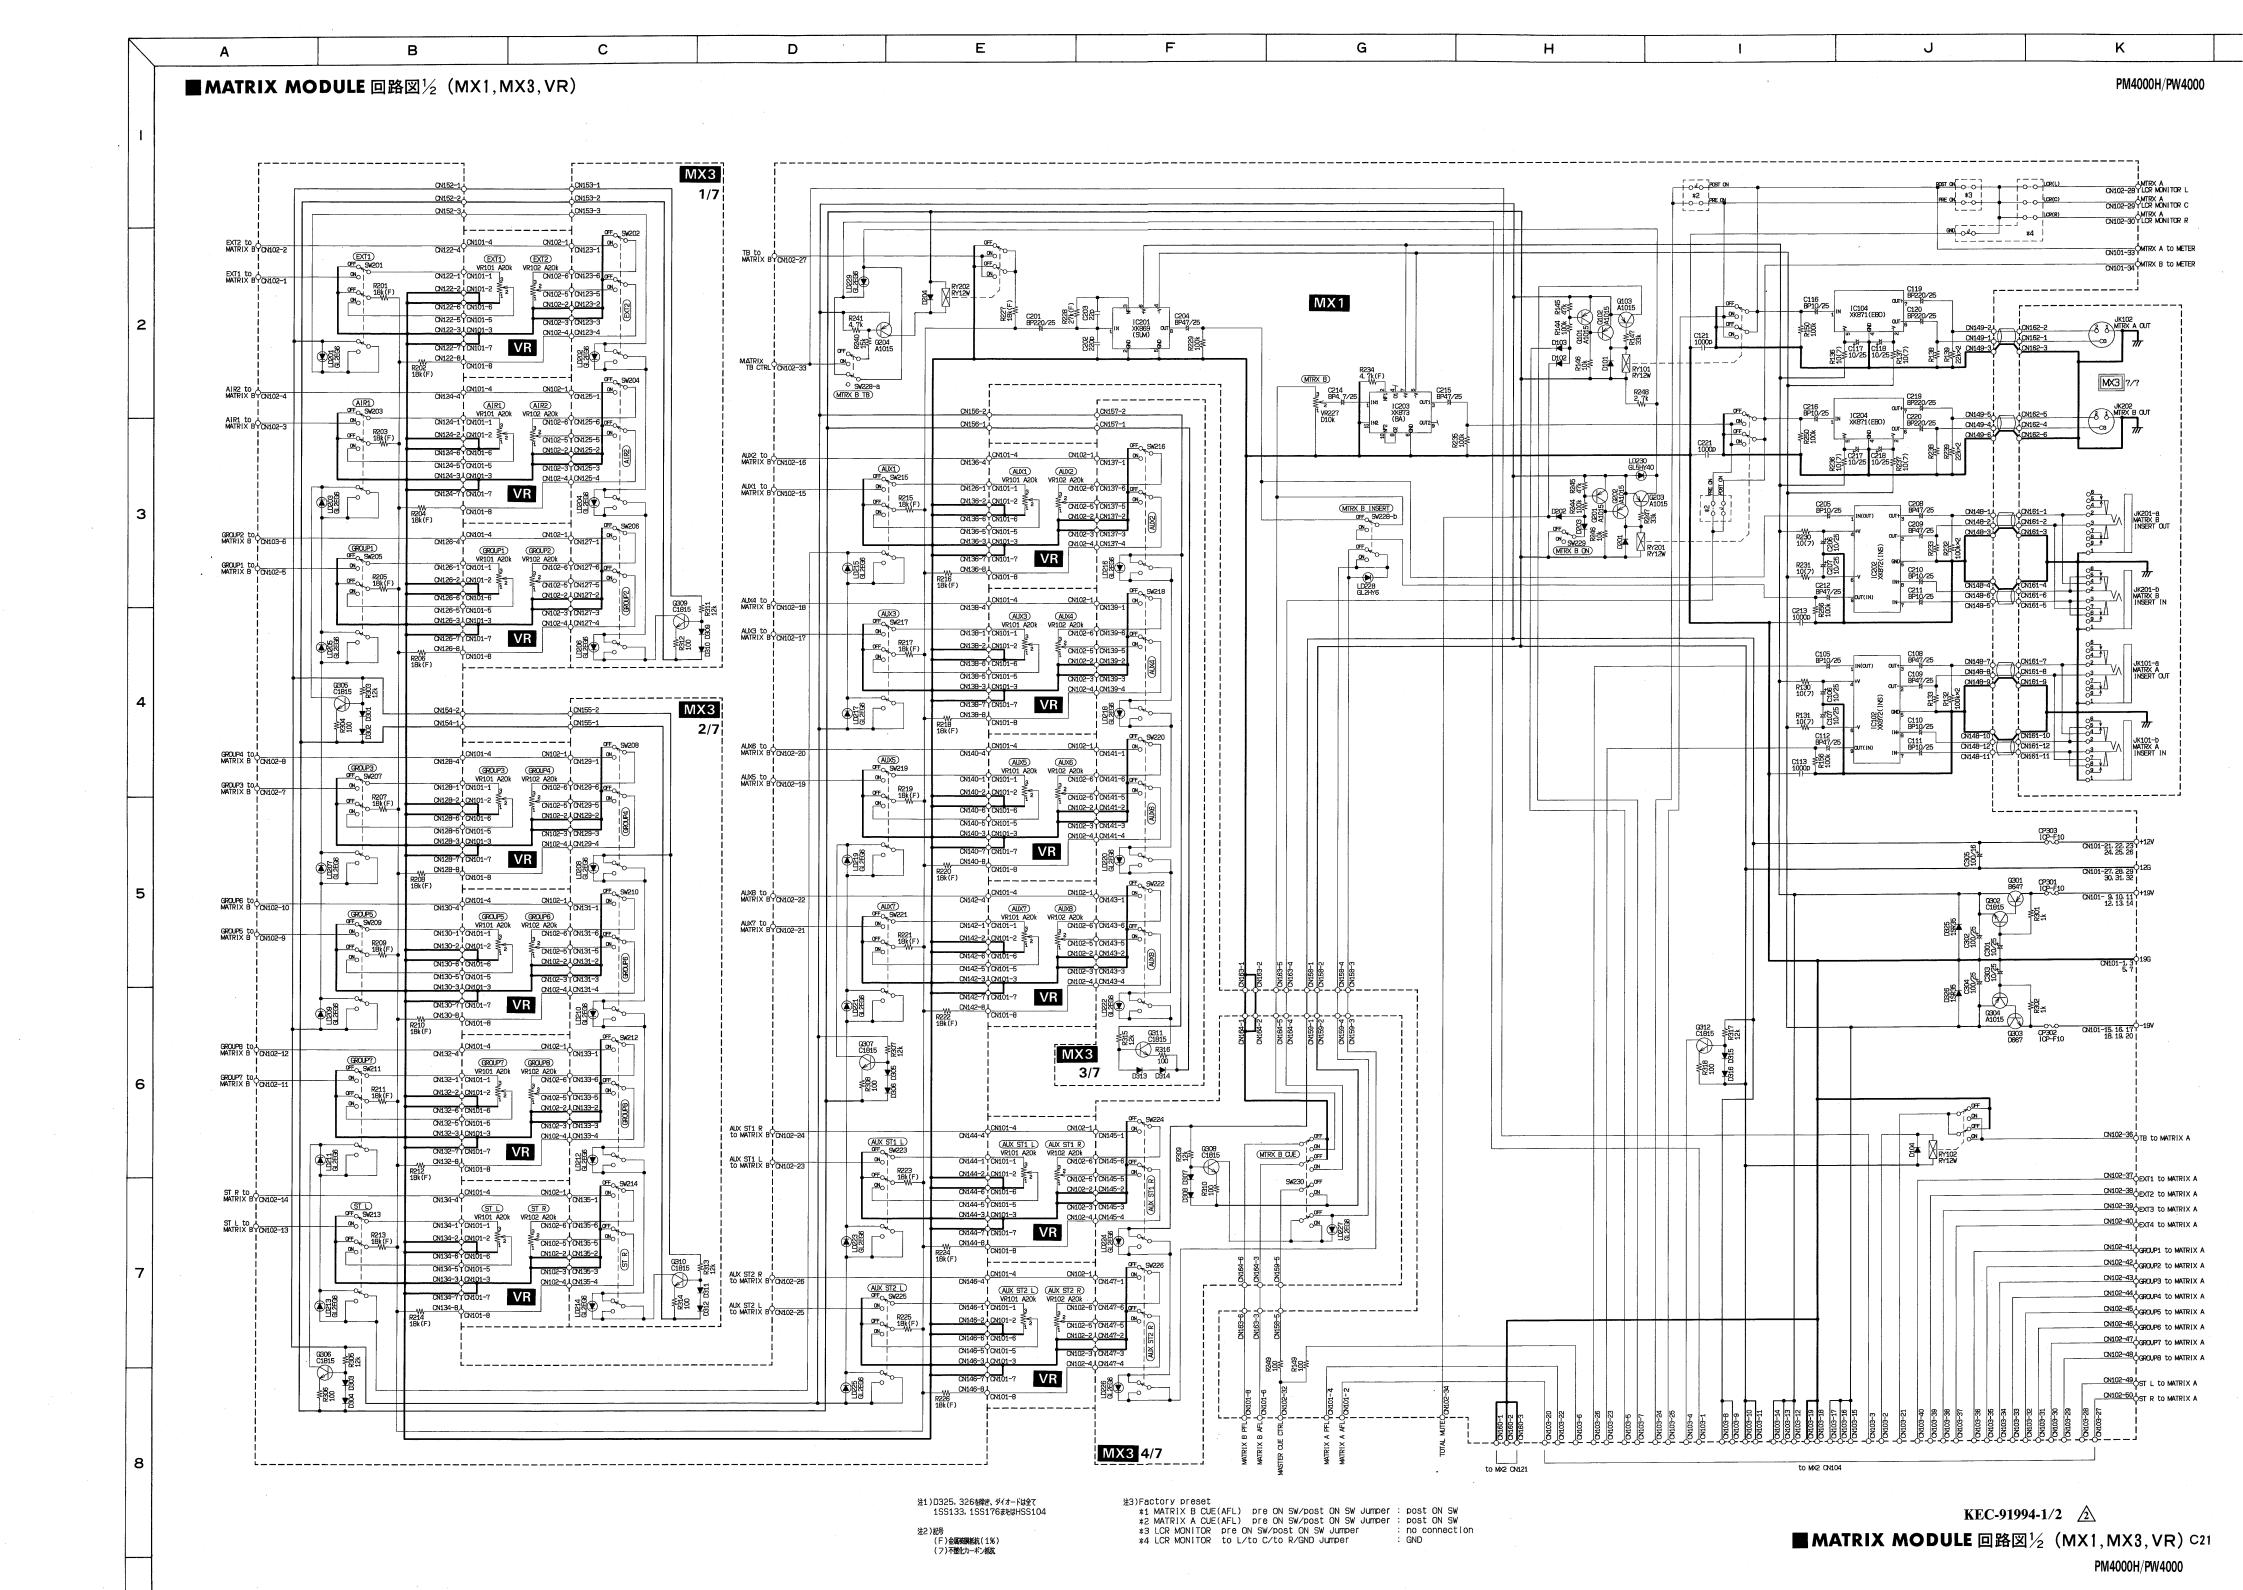


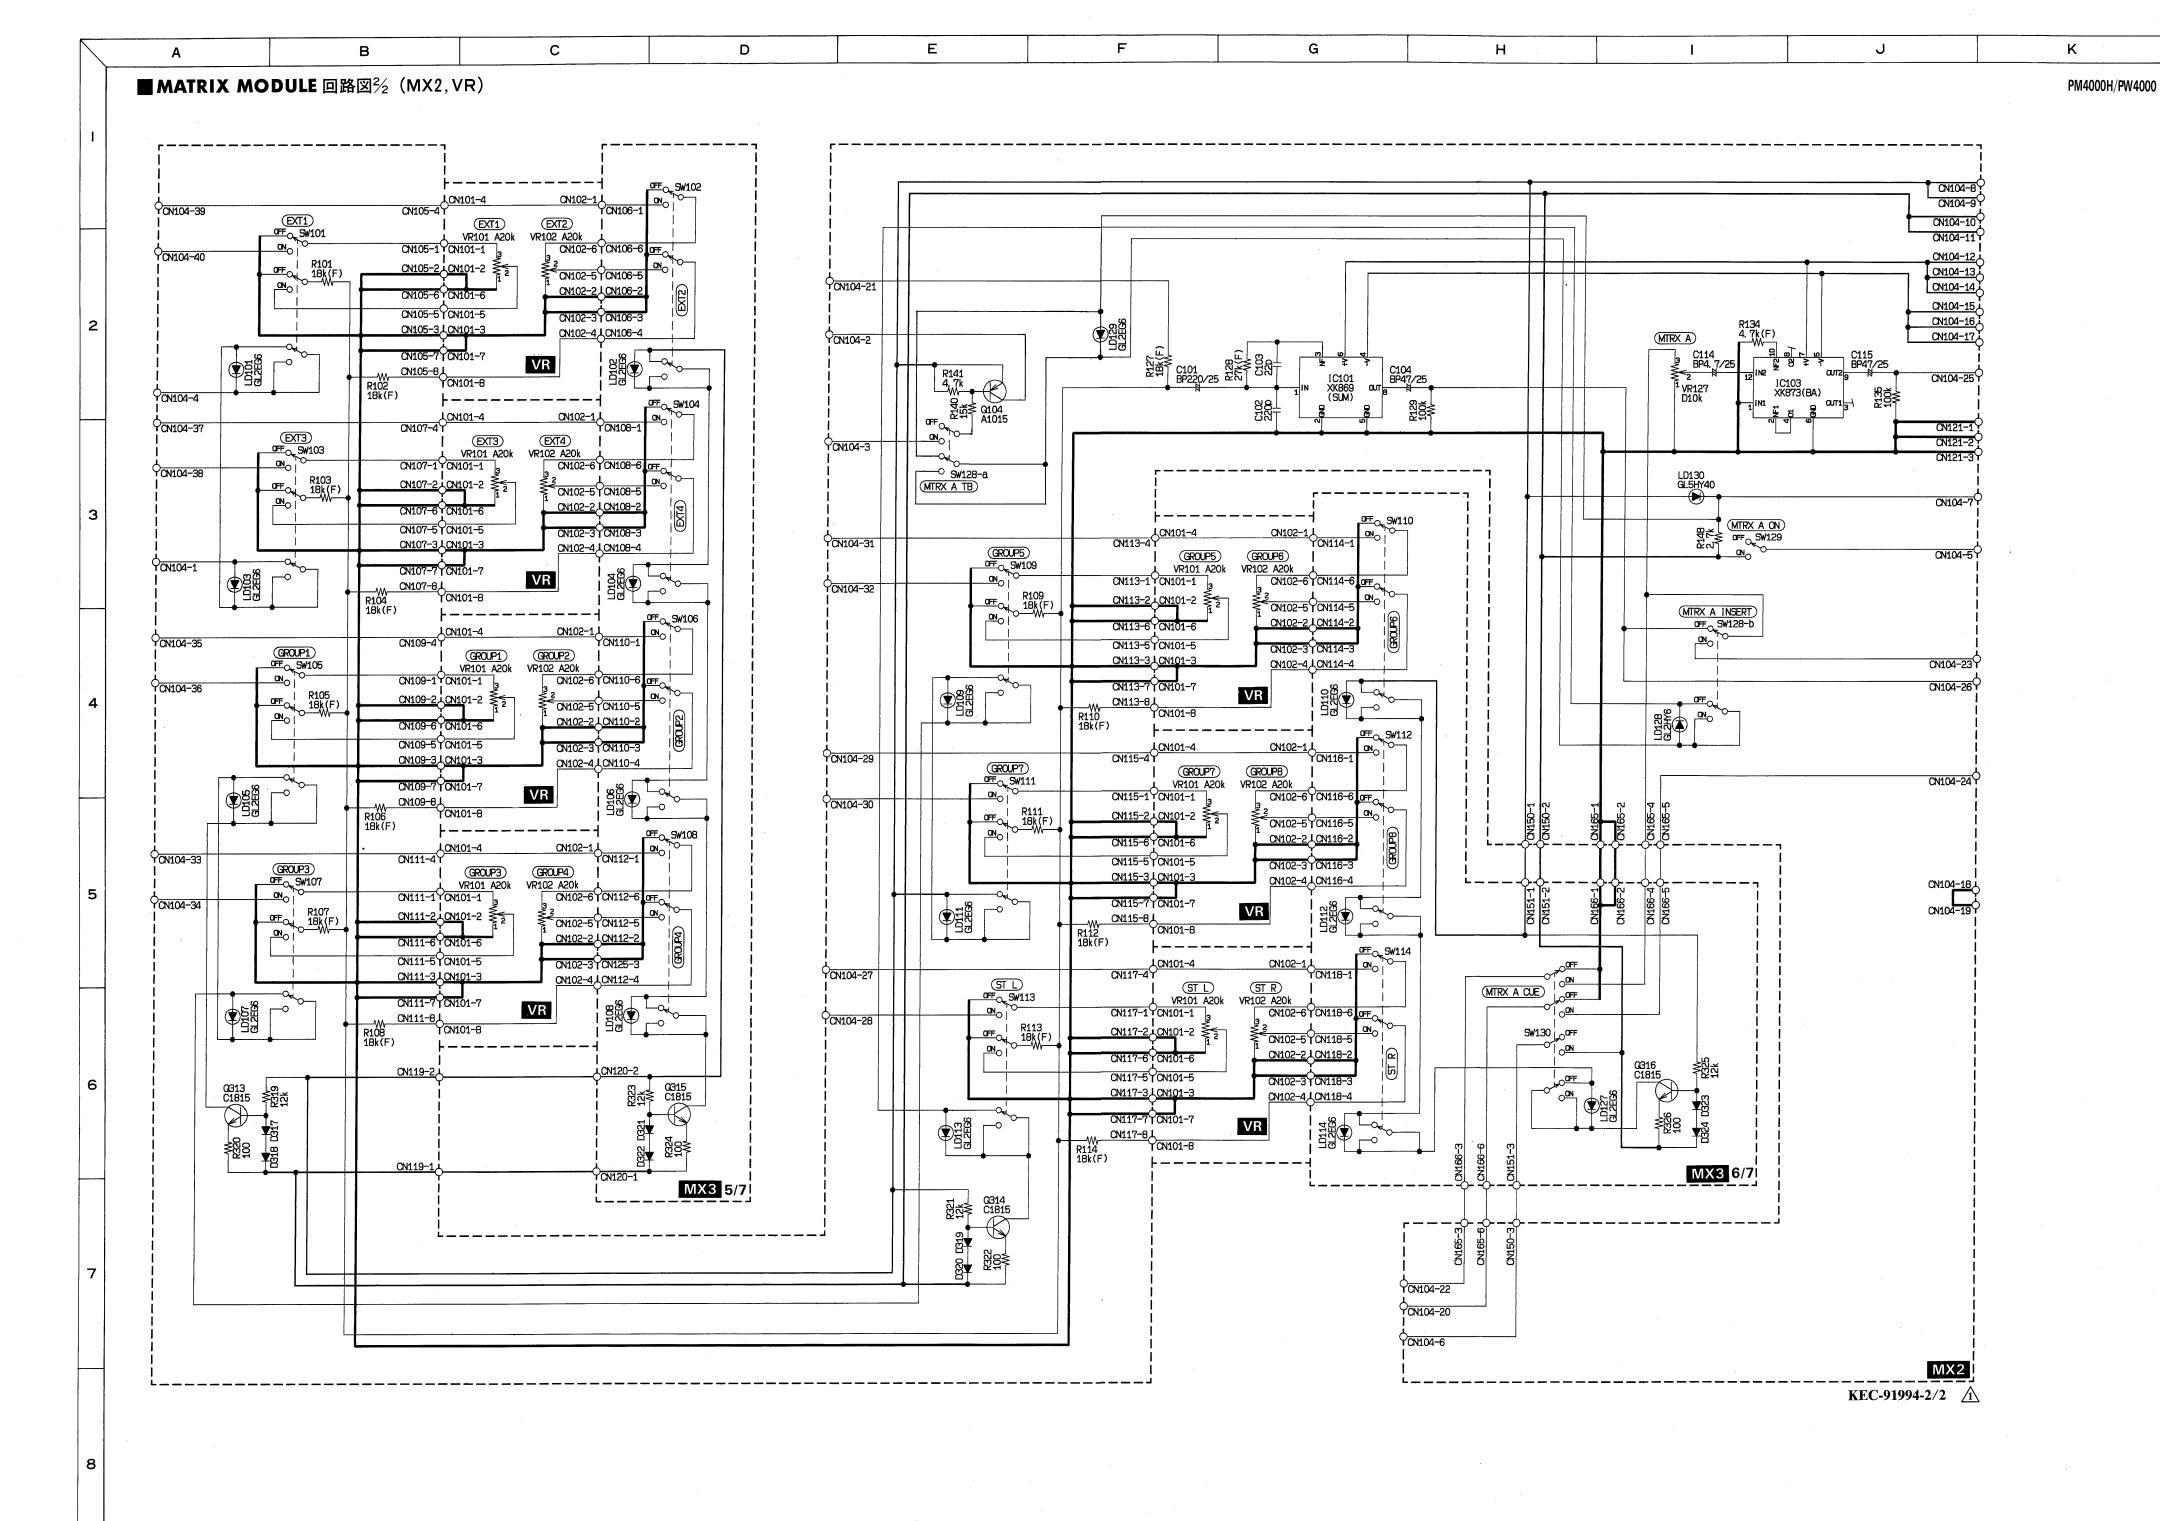


TREAR PANEL (U) ASSEMBLY (CS, DR, EBI, INS, MF, VP, EMG, EIO)

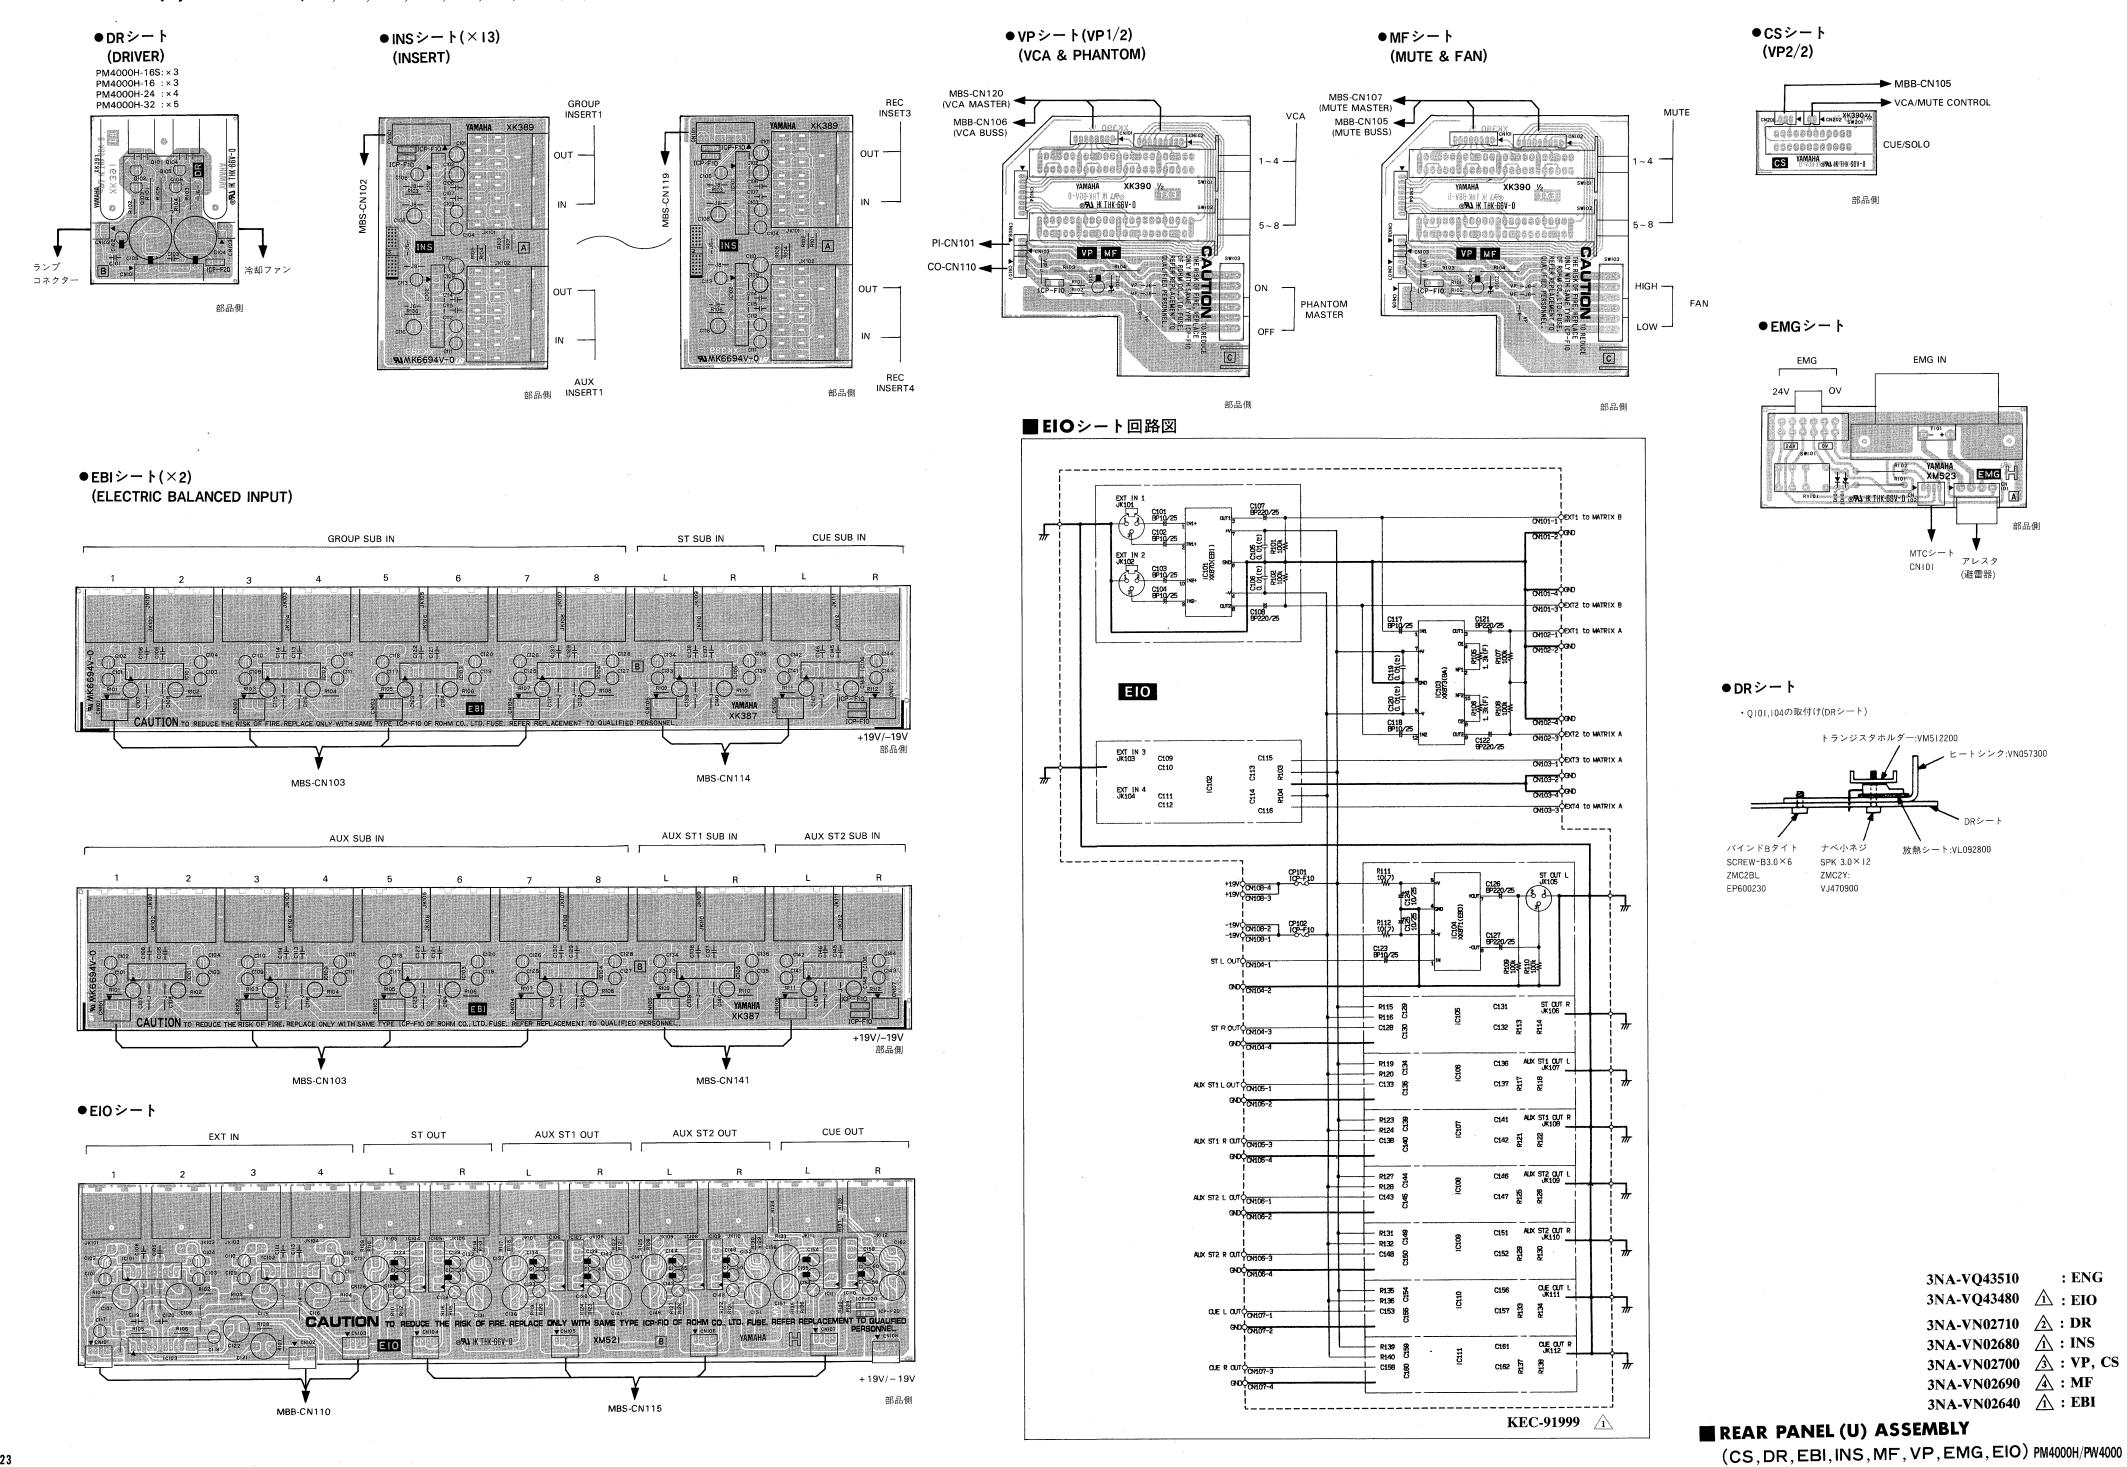


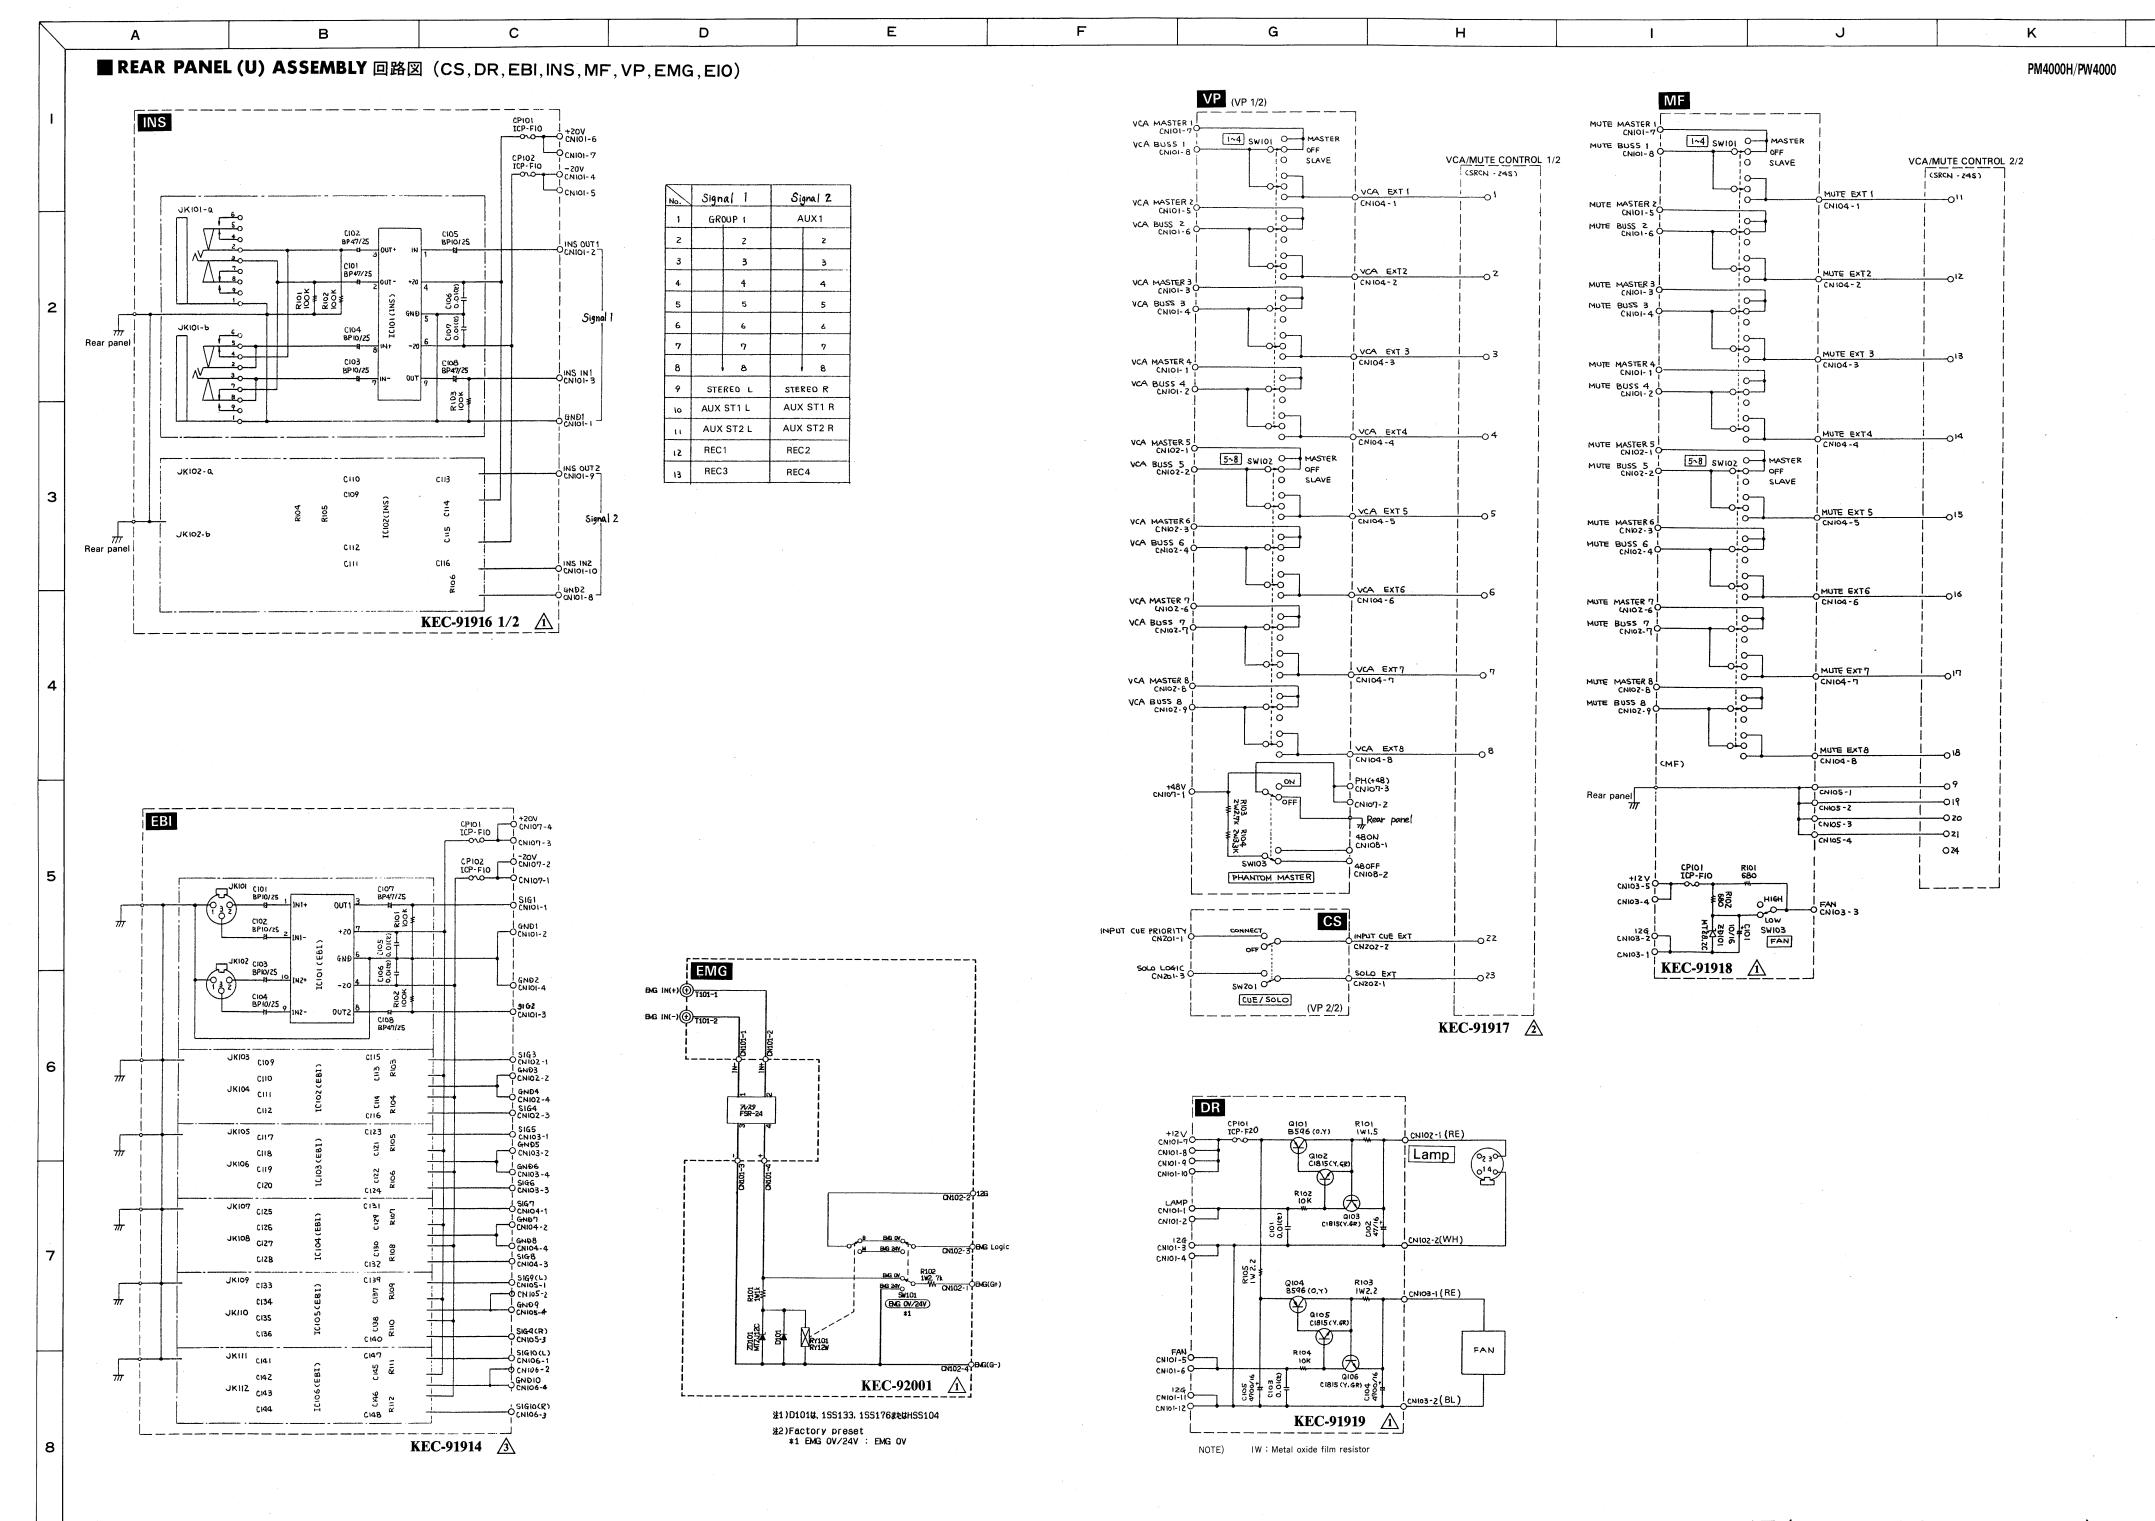


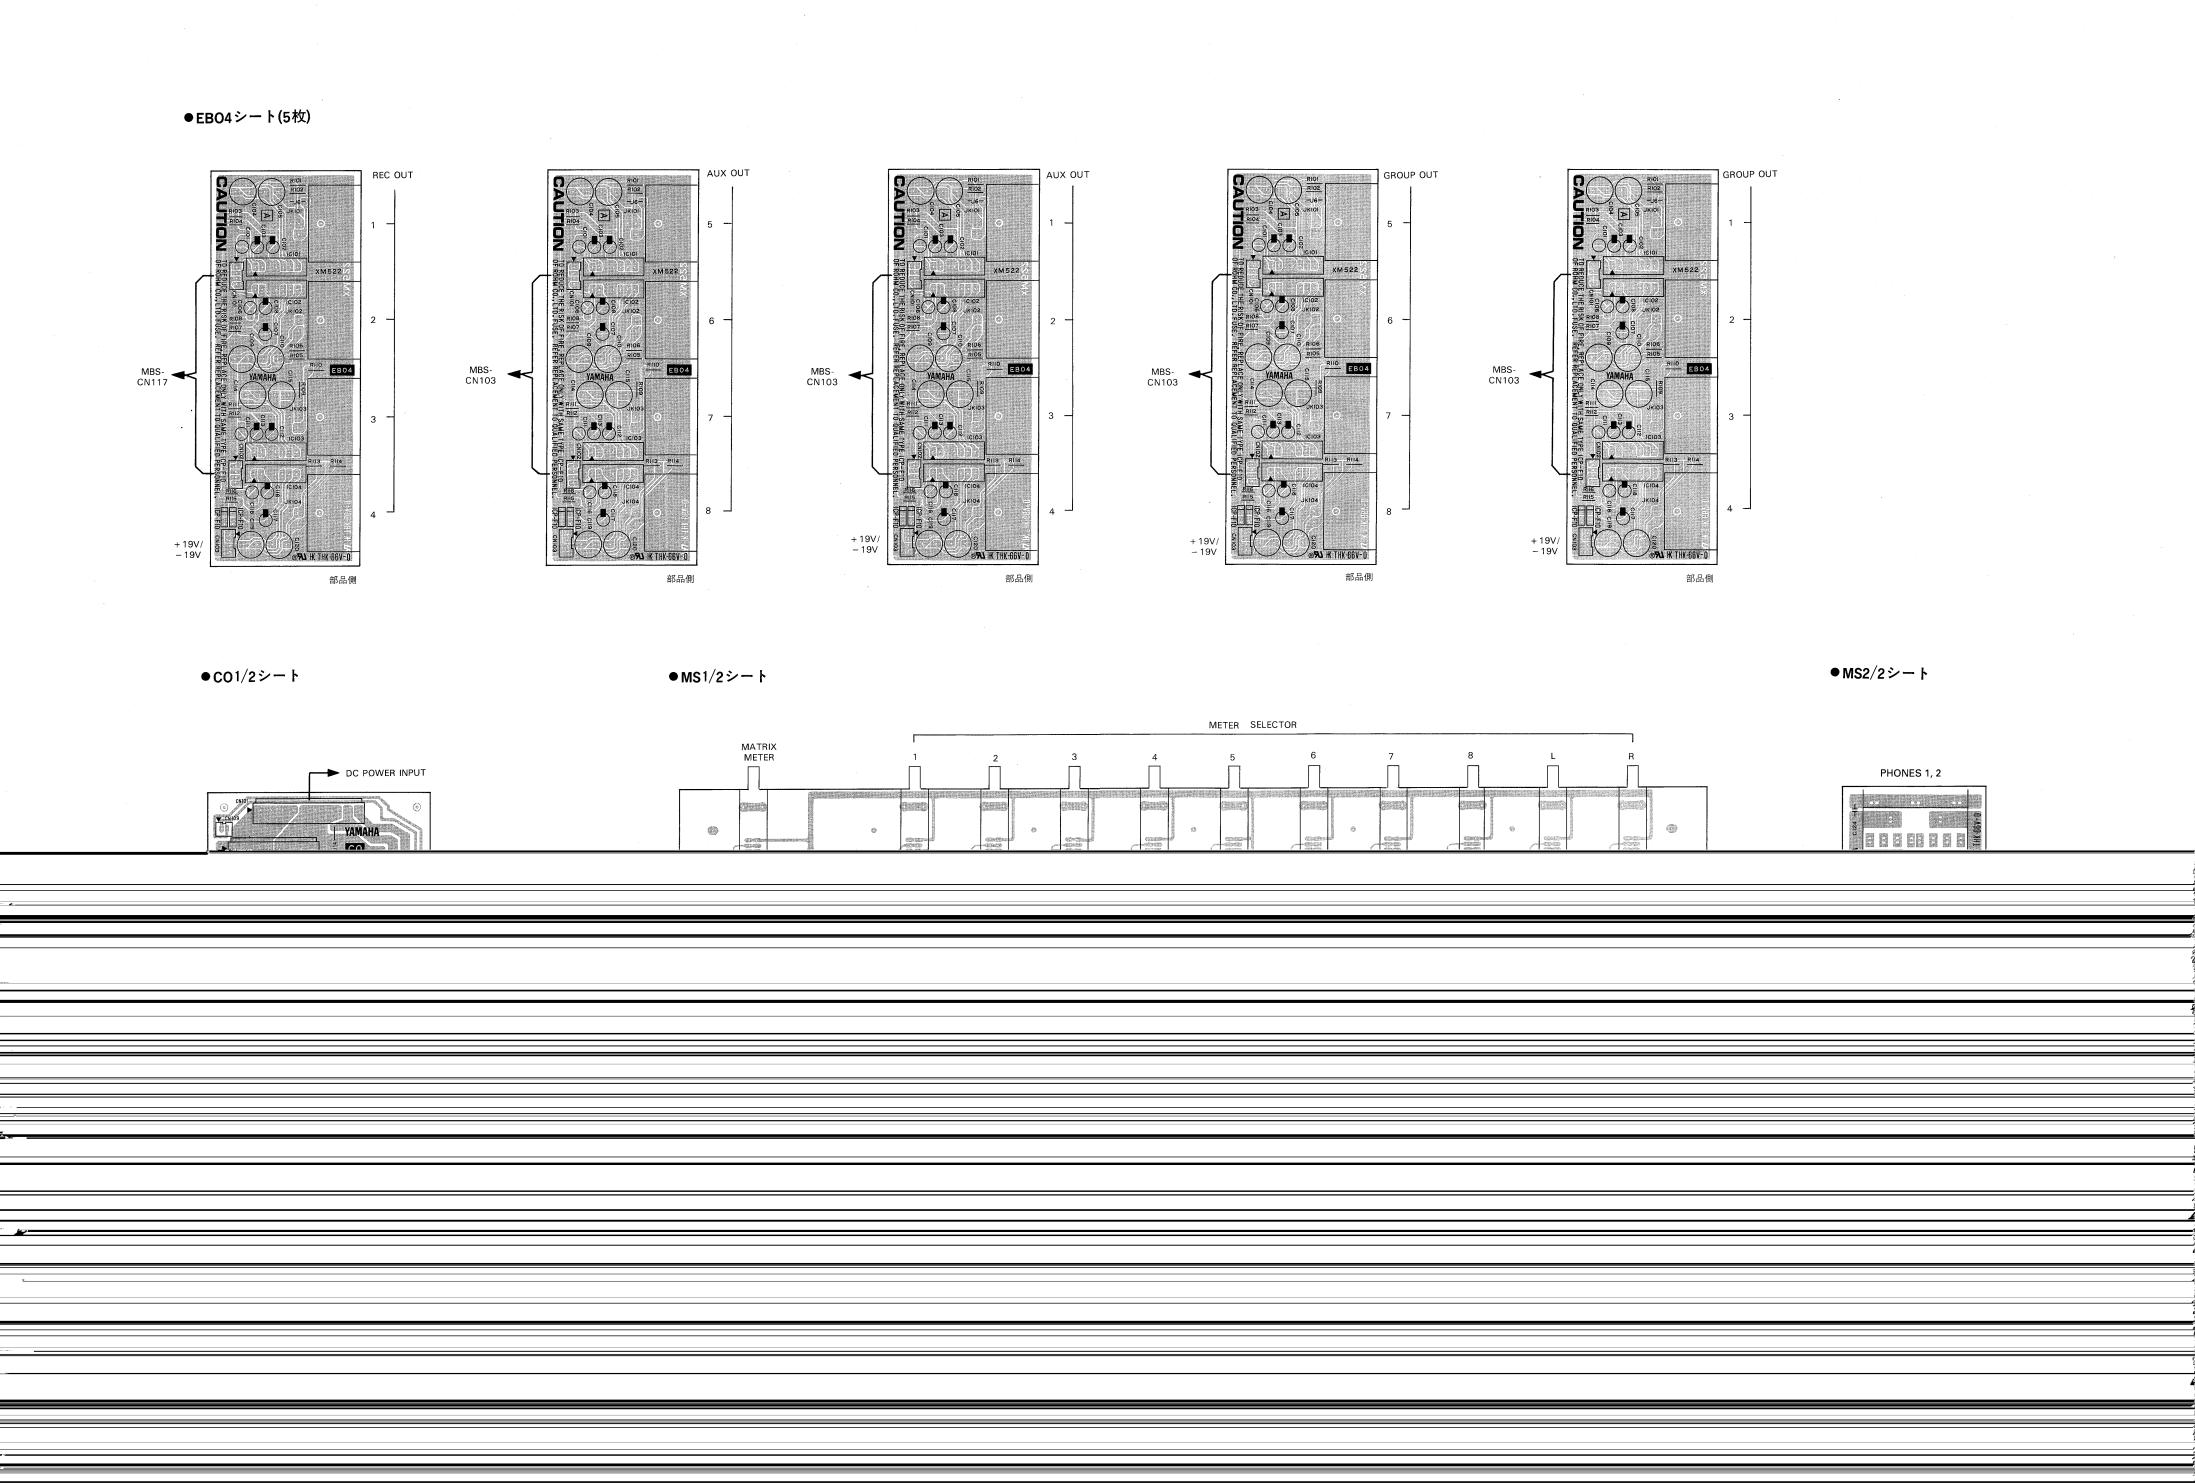

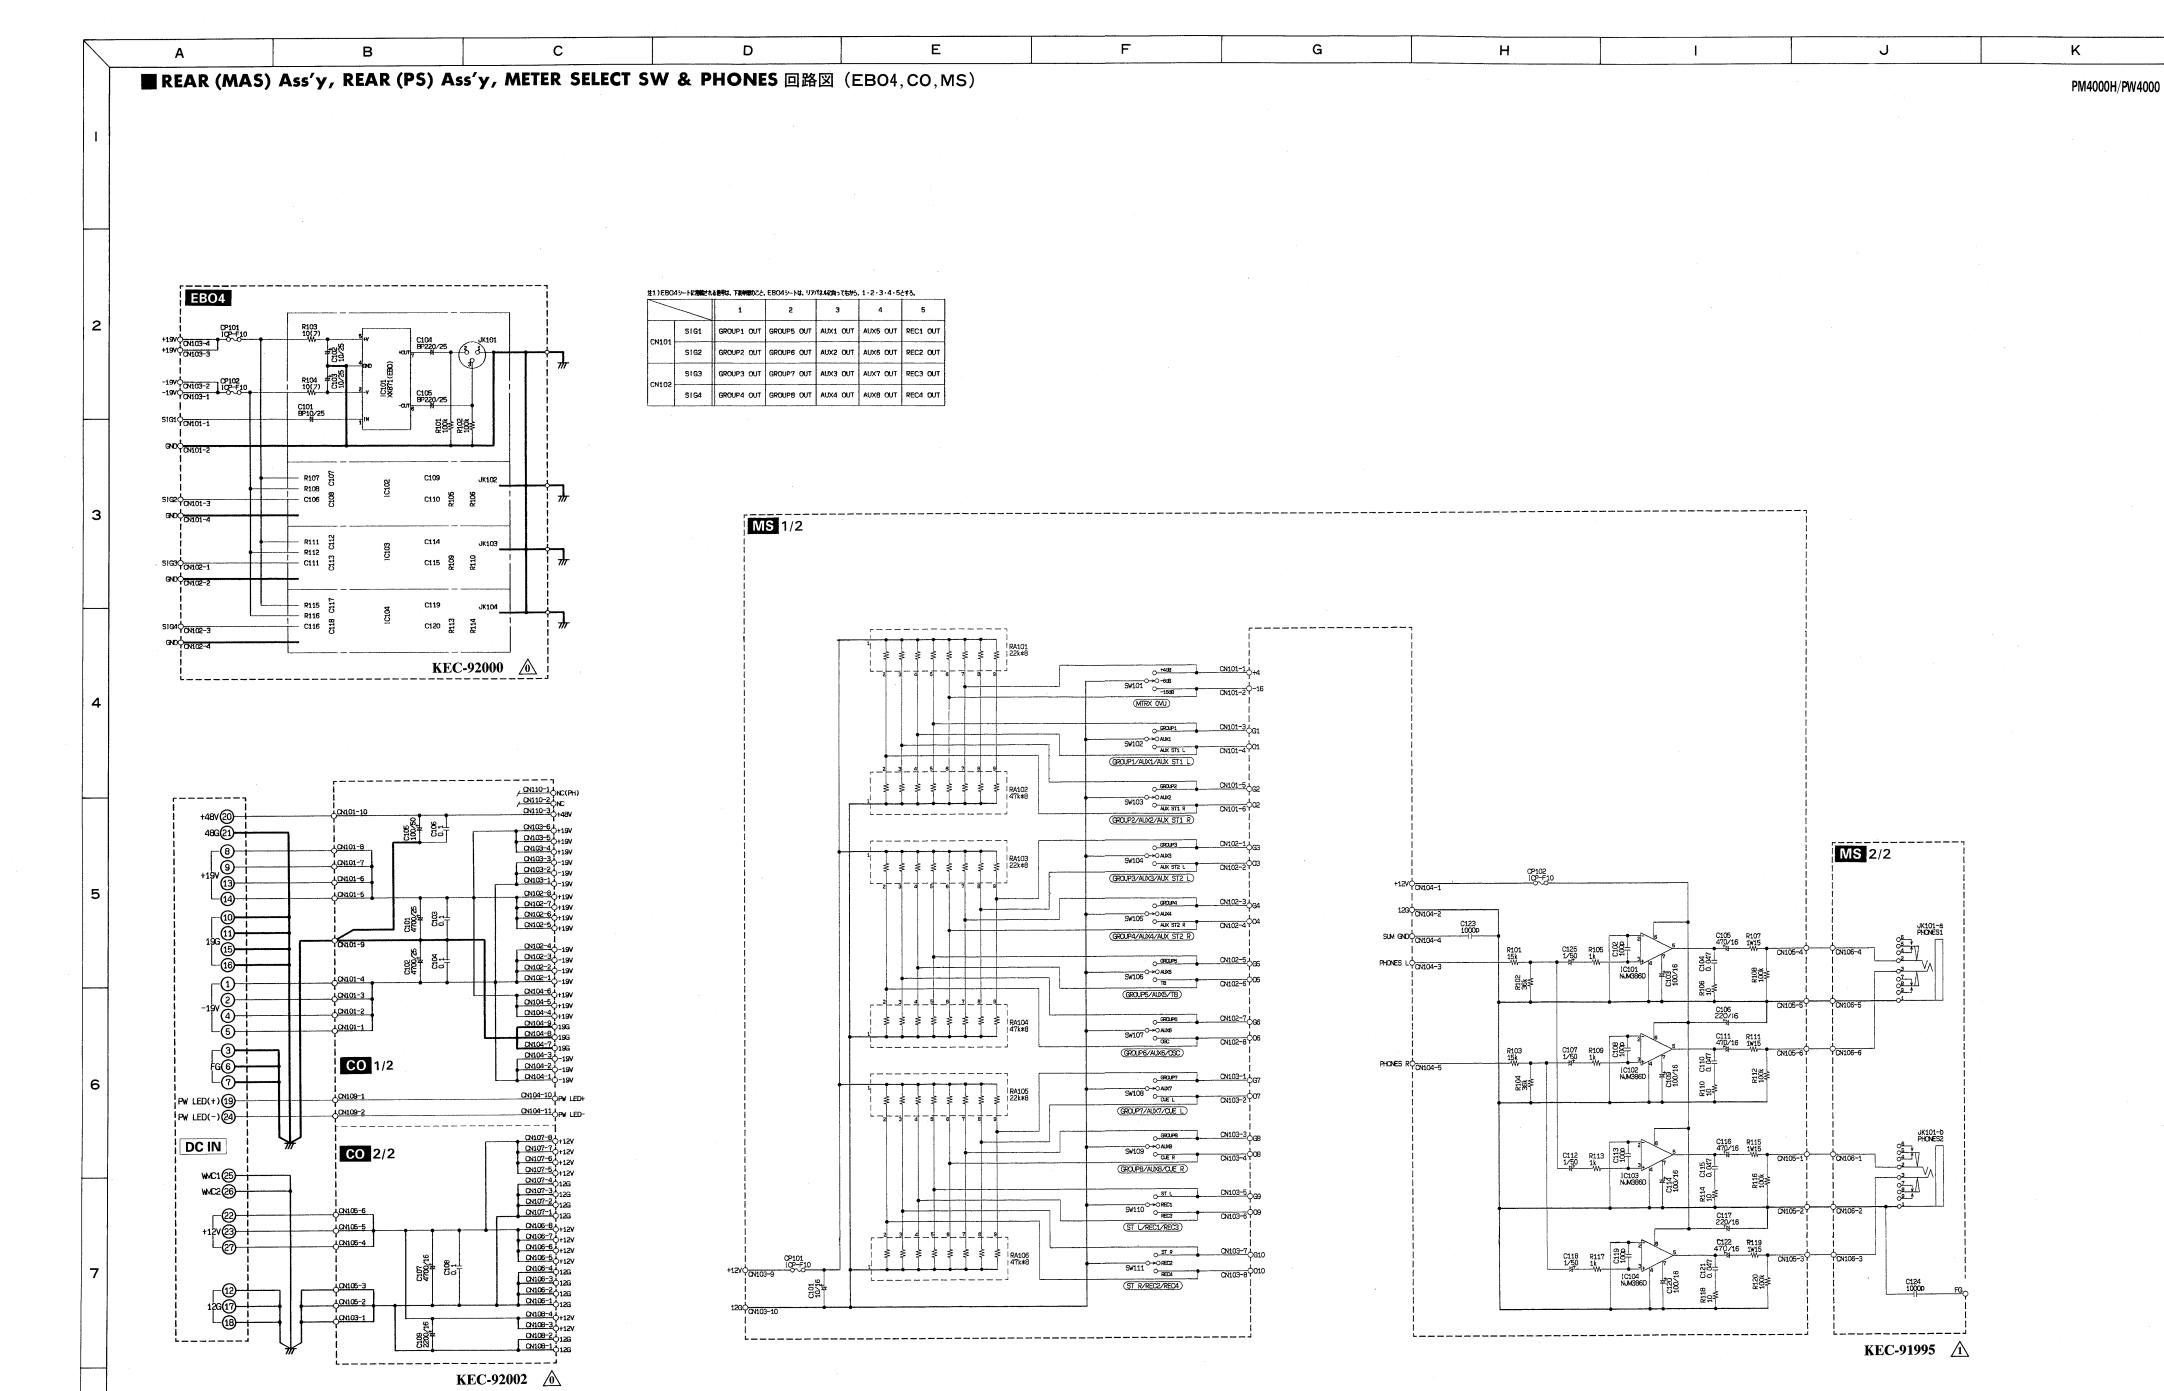


METER ASSEMBLY (MT1, MT2, MT3, MTC, LED, PI)

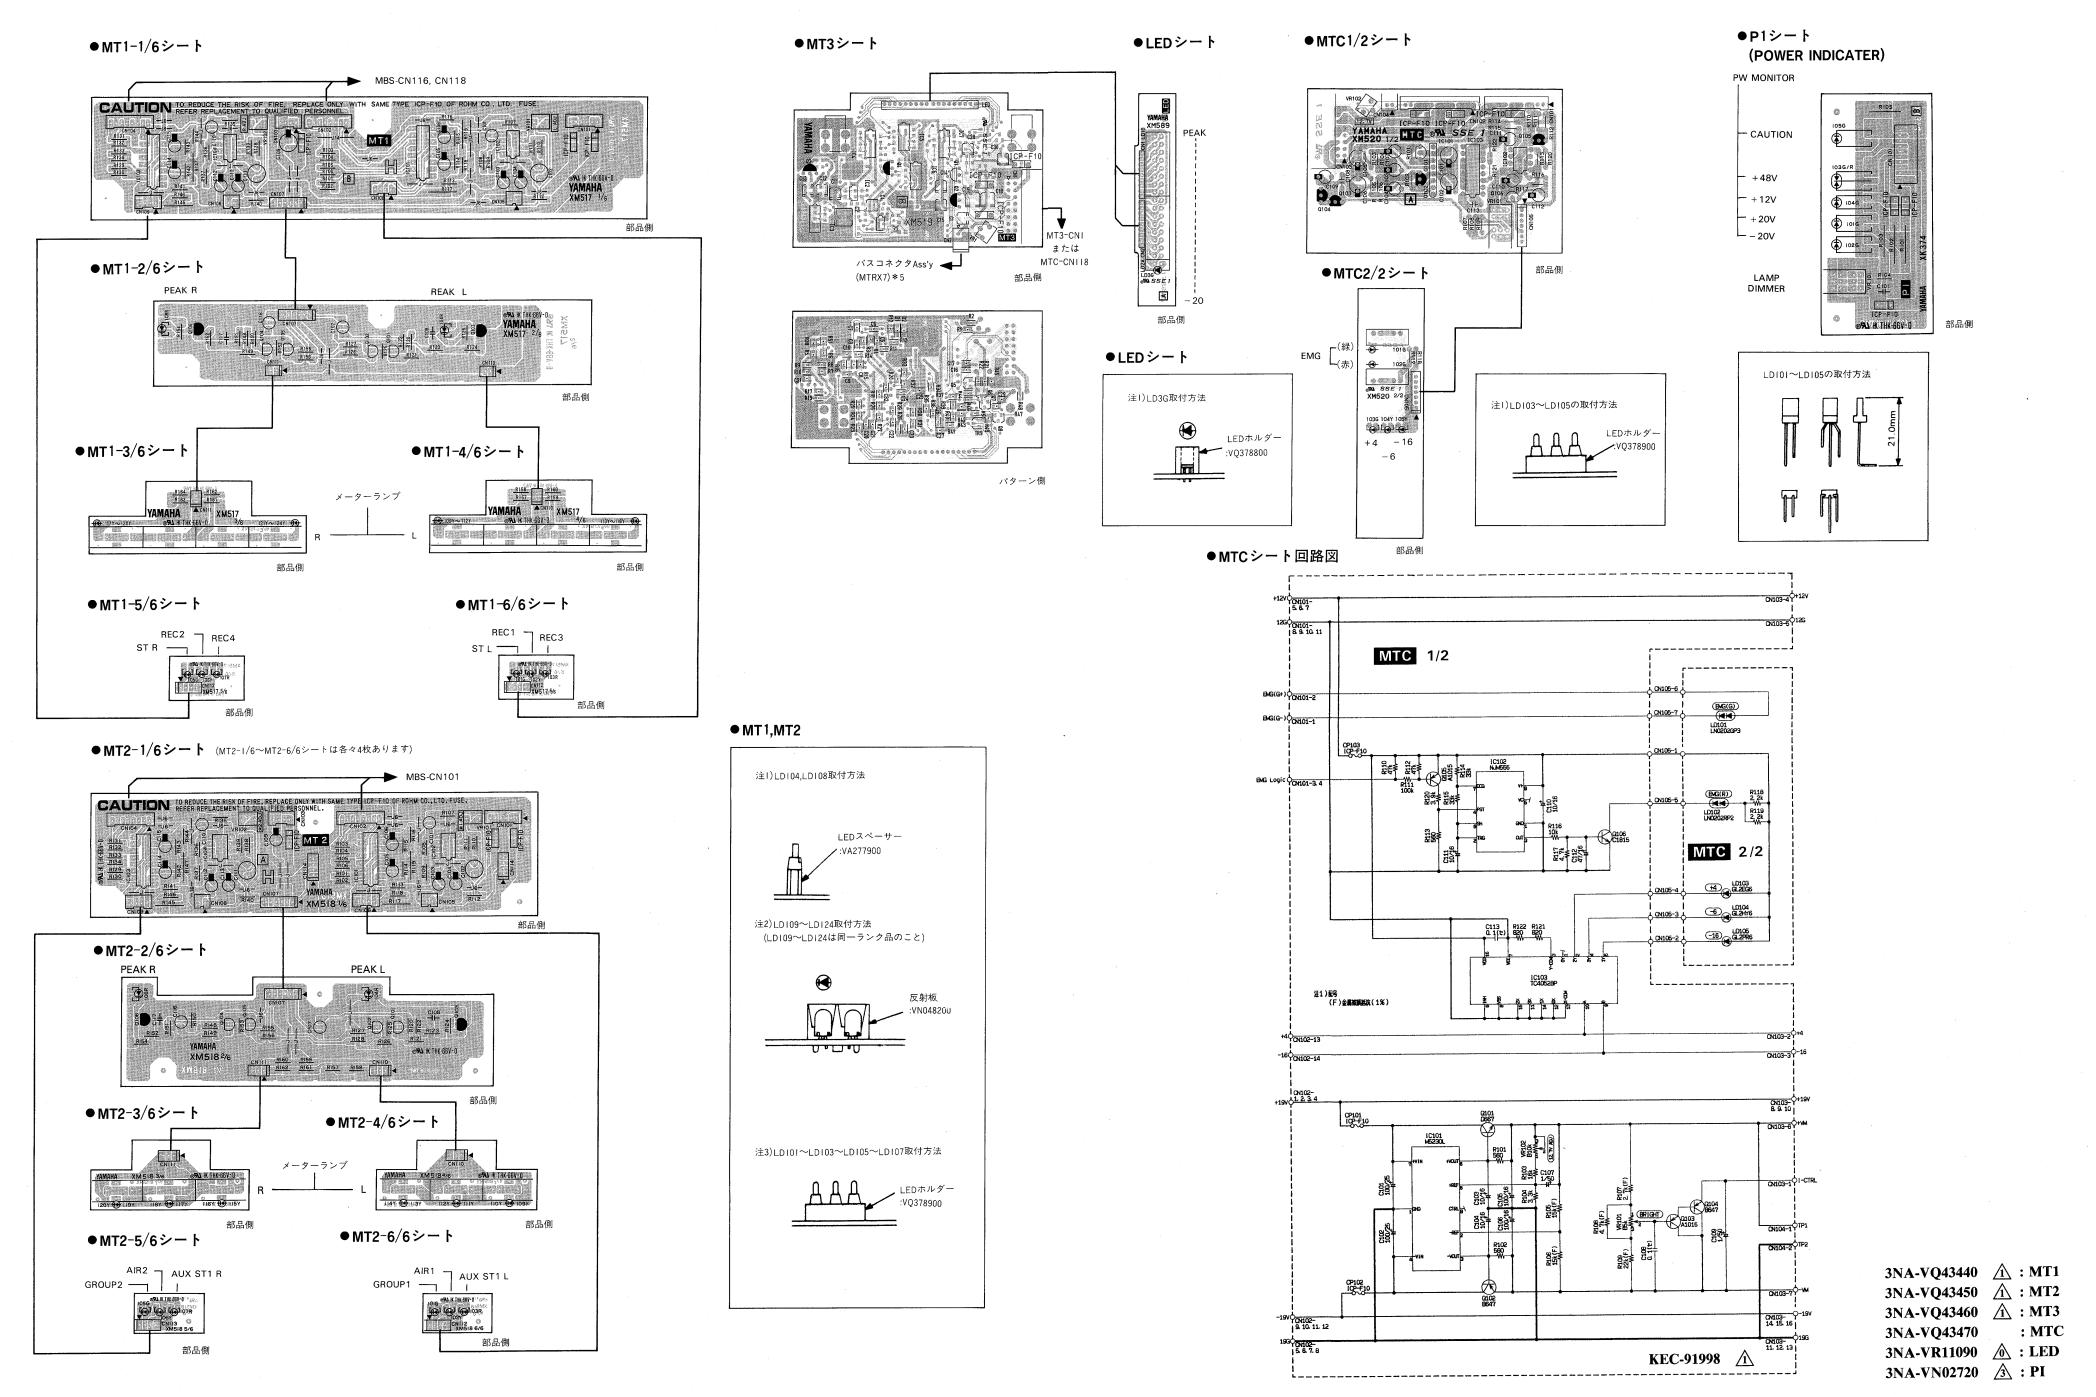


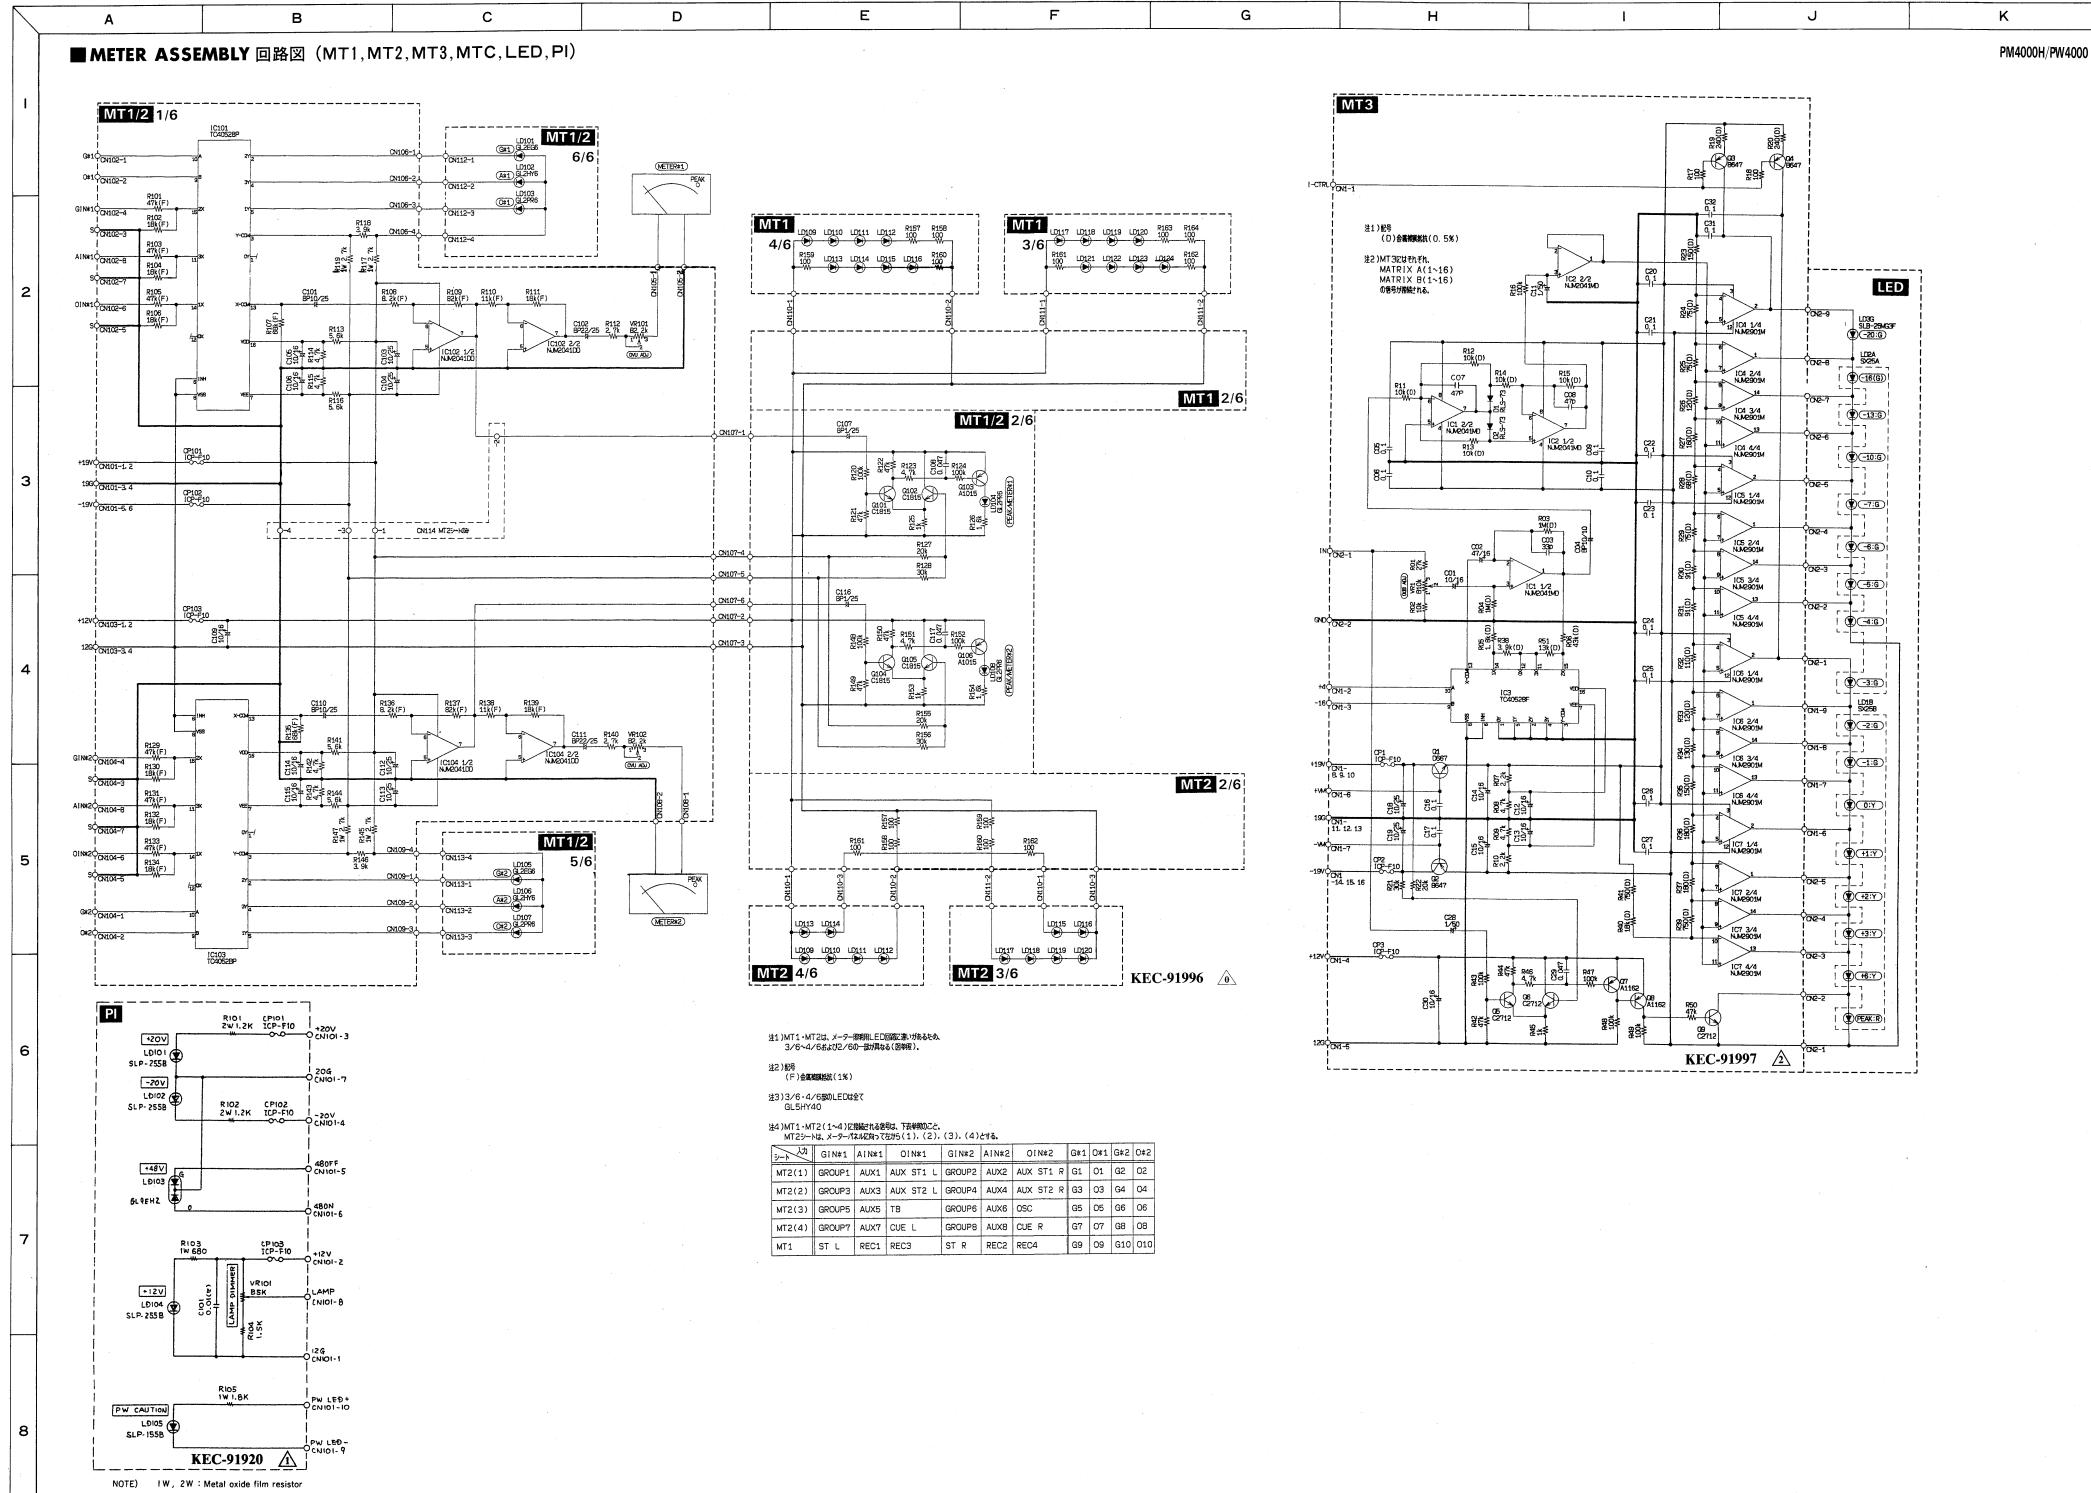


■ CONNECTORS (MBB, MBS)

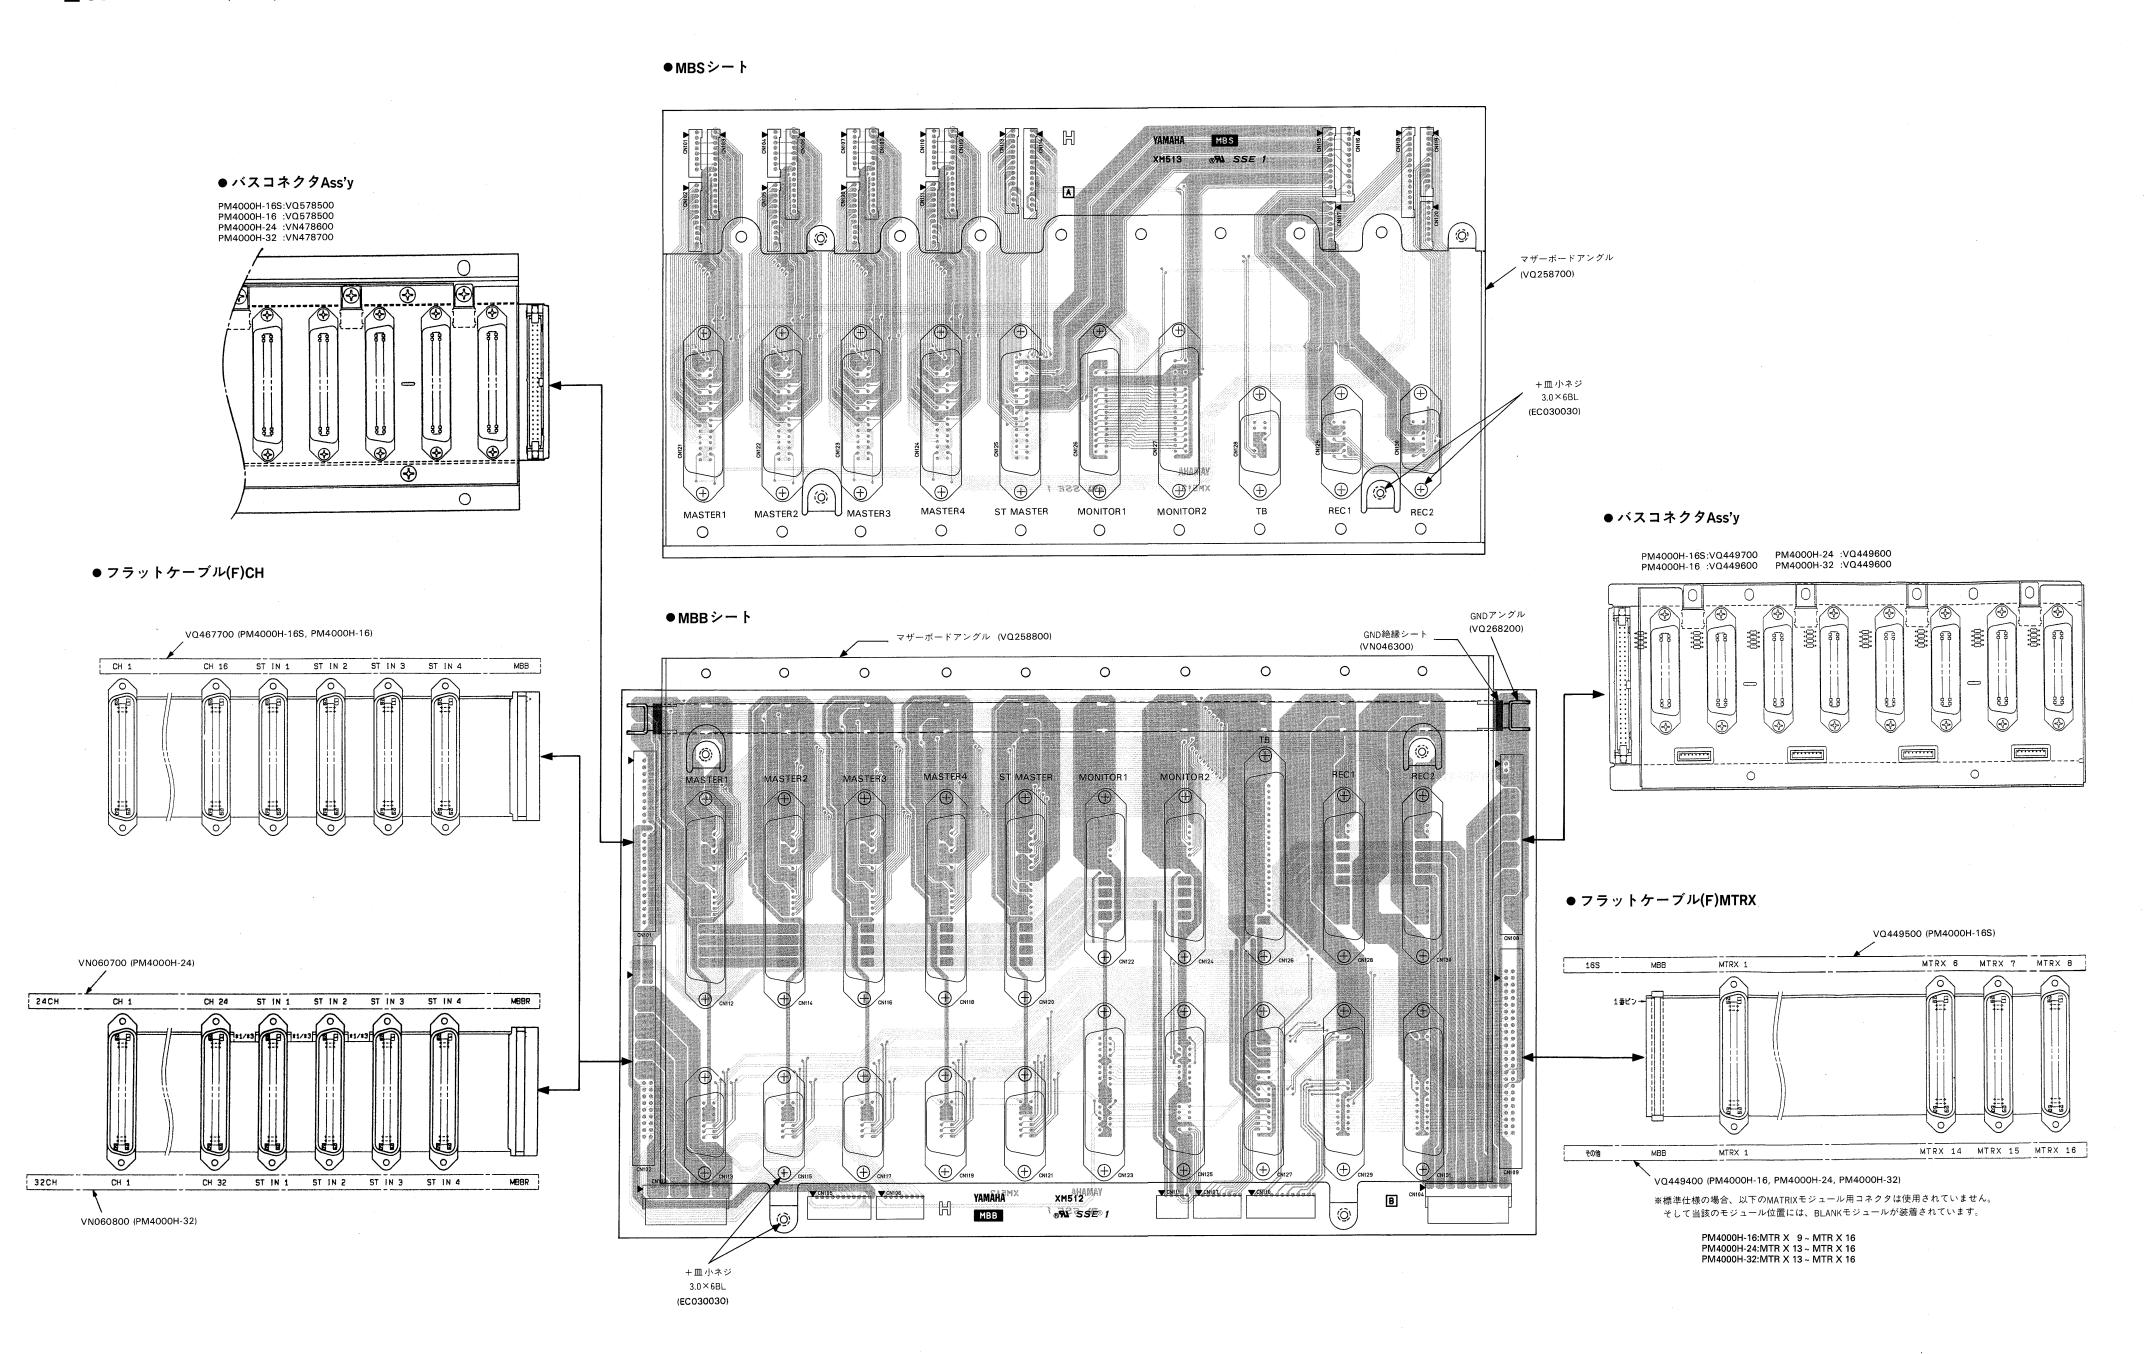



3NA-VQ43390 : MBB 3NA-VQ43400 : MBS

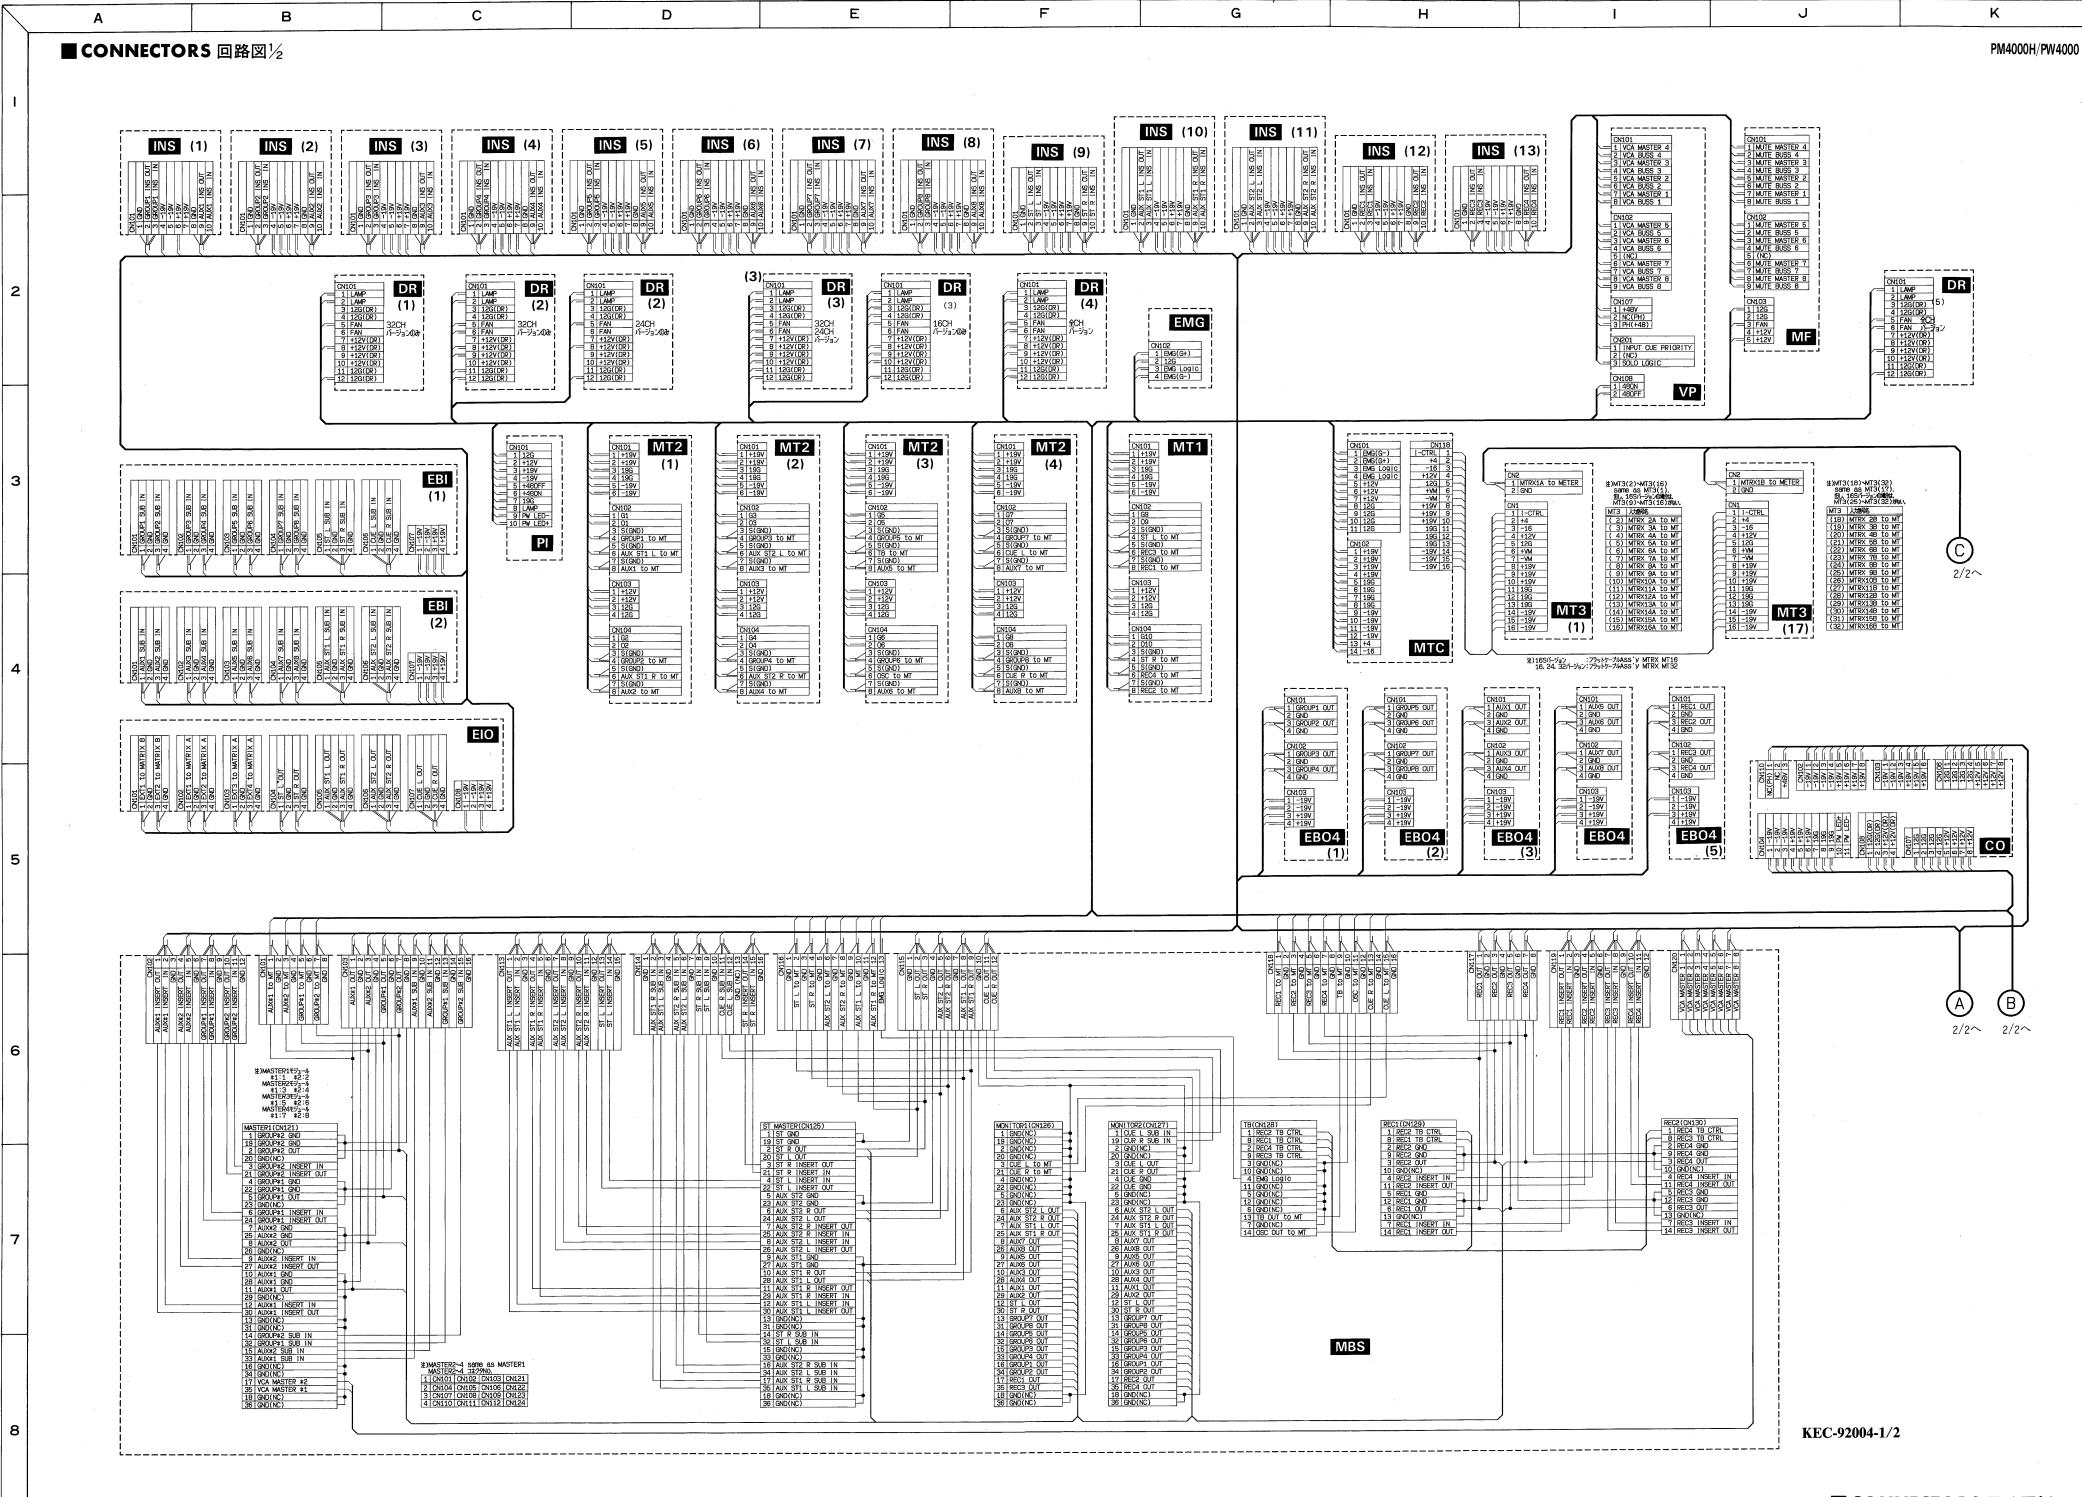


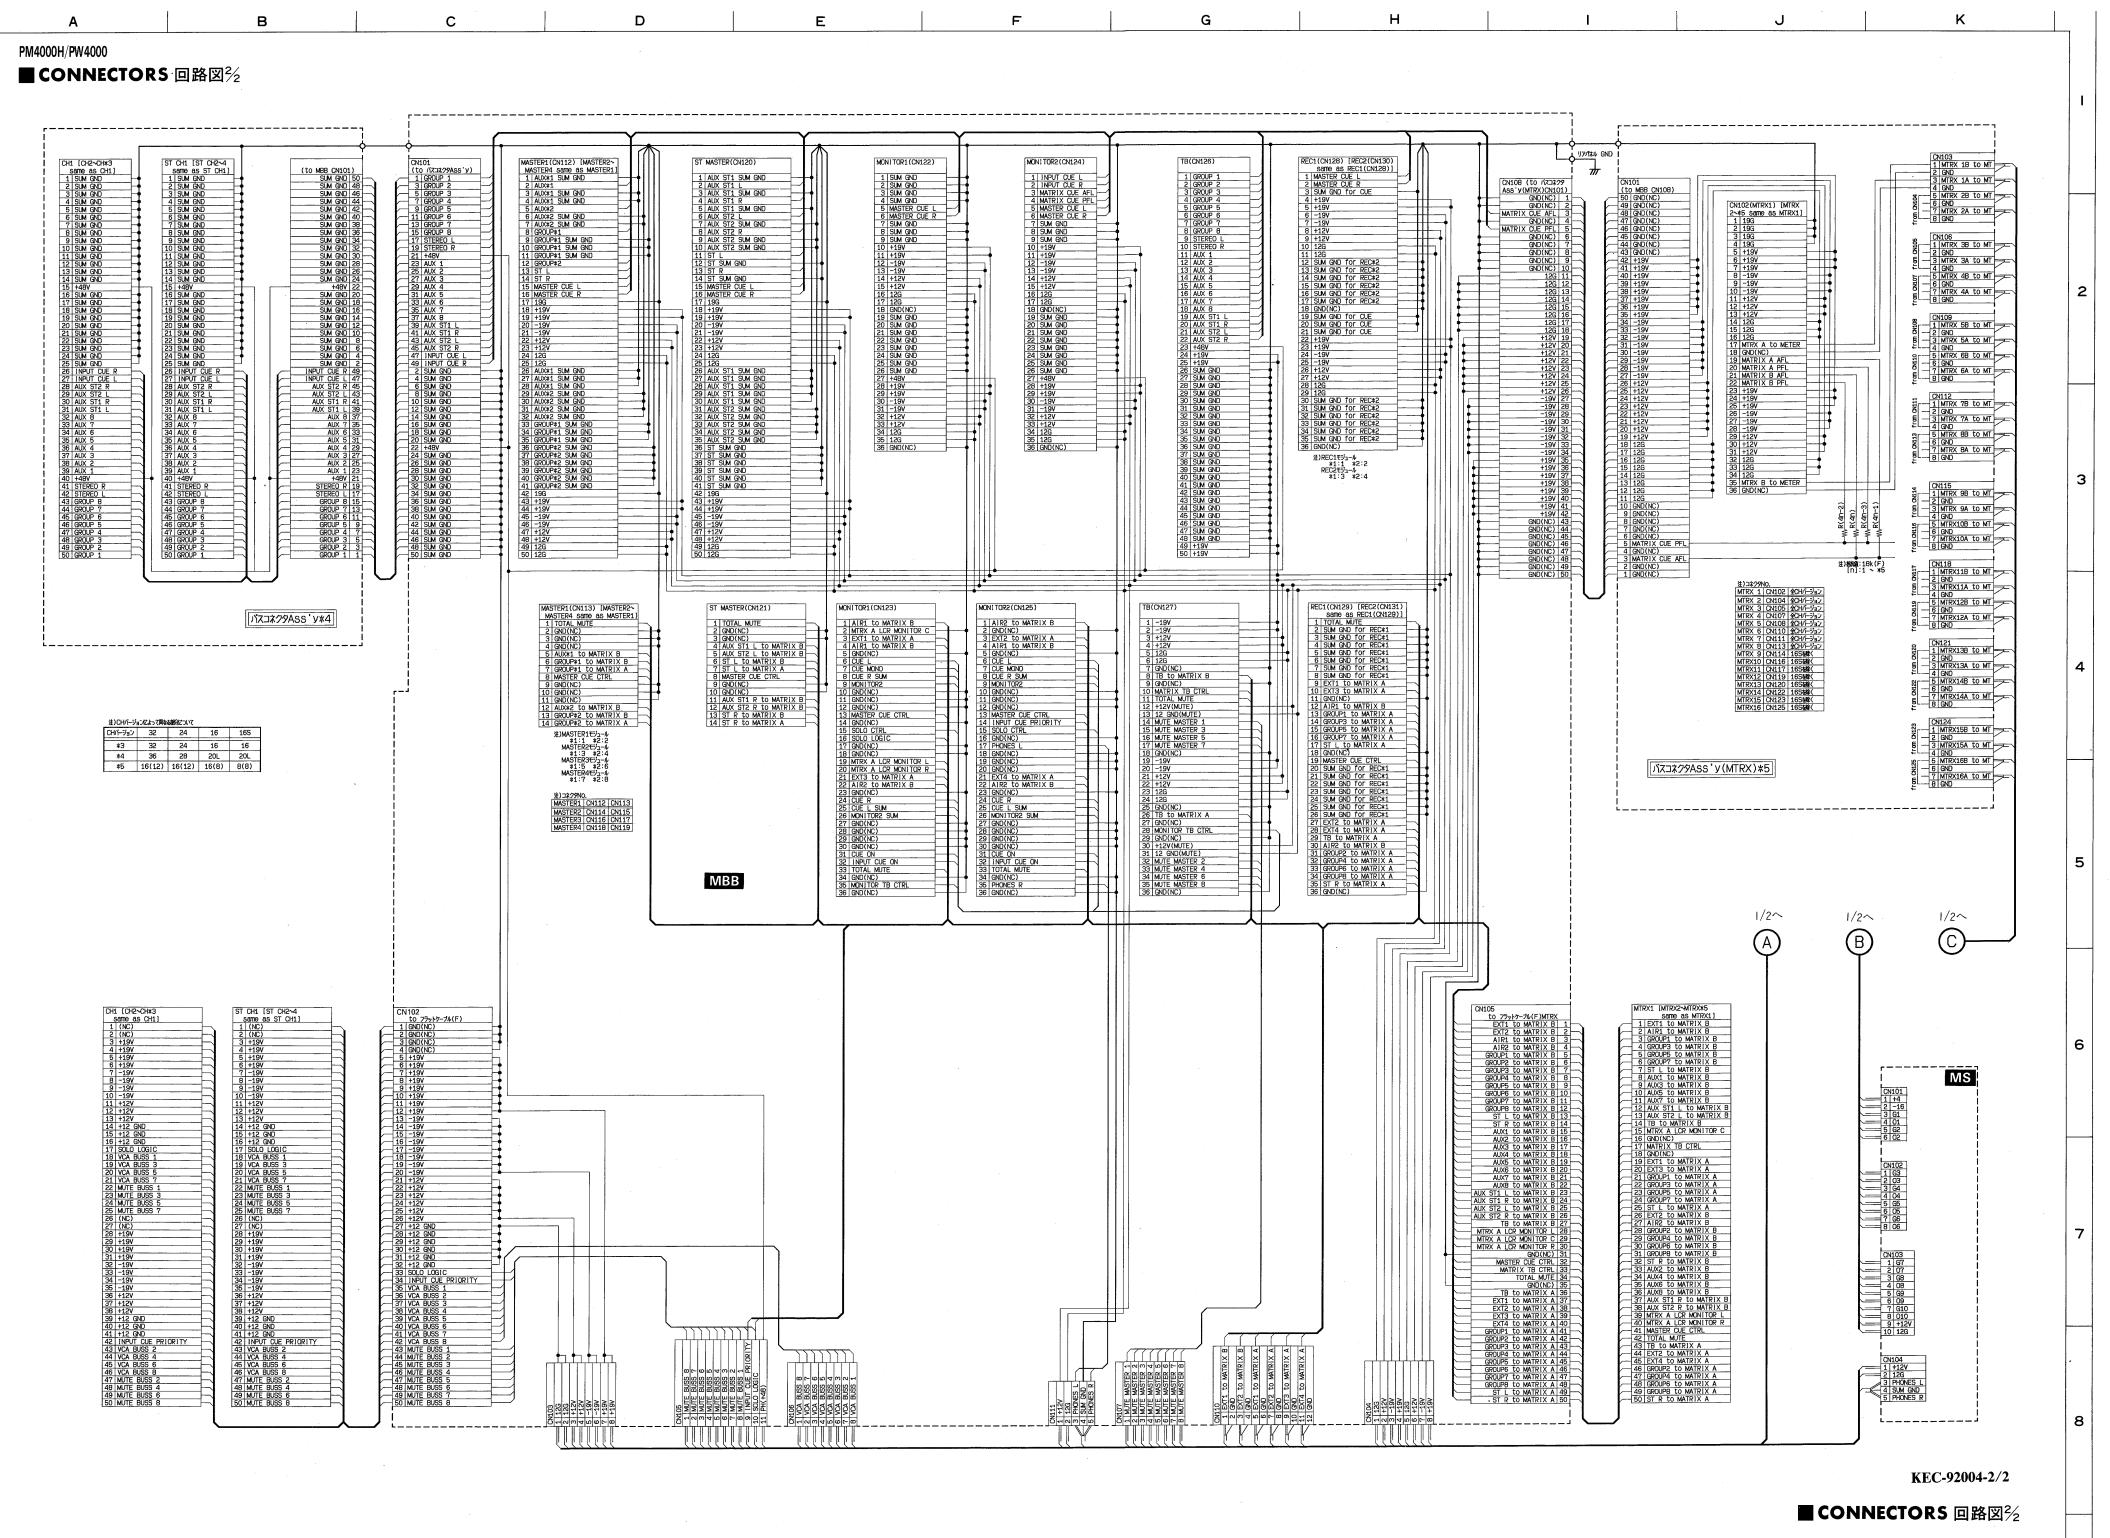



POWER SUPPLY PW4000 (AC, DC1, DC2, MON)

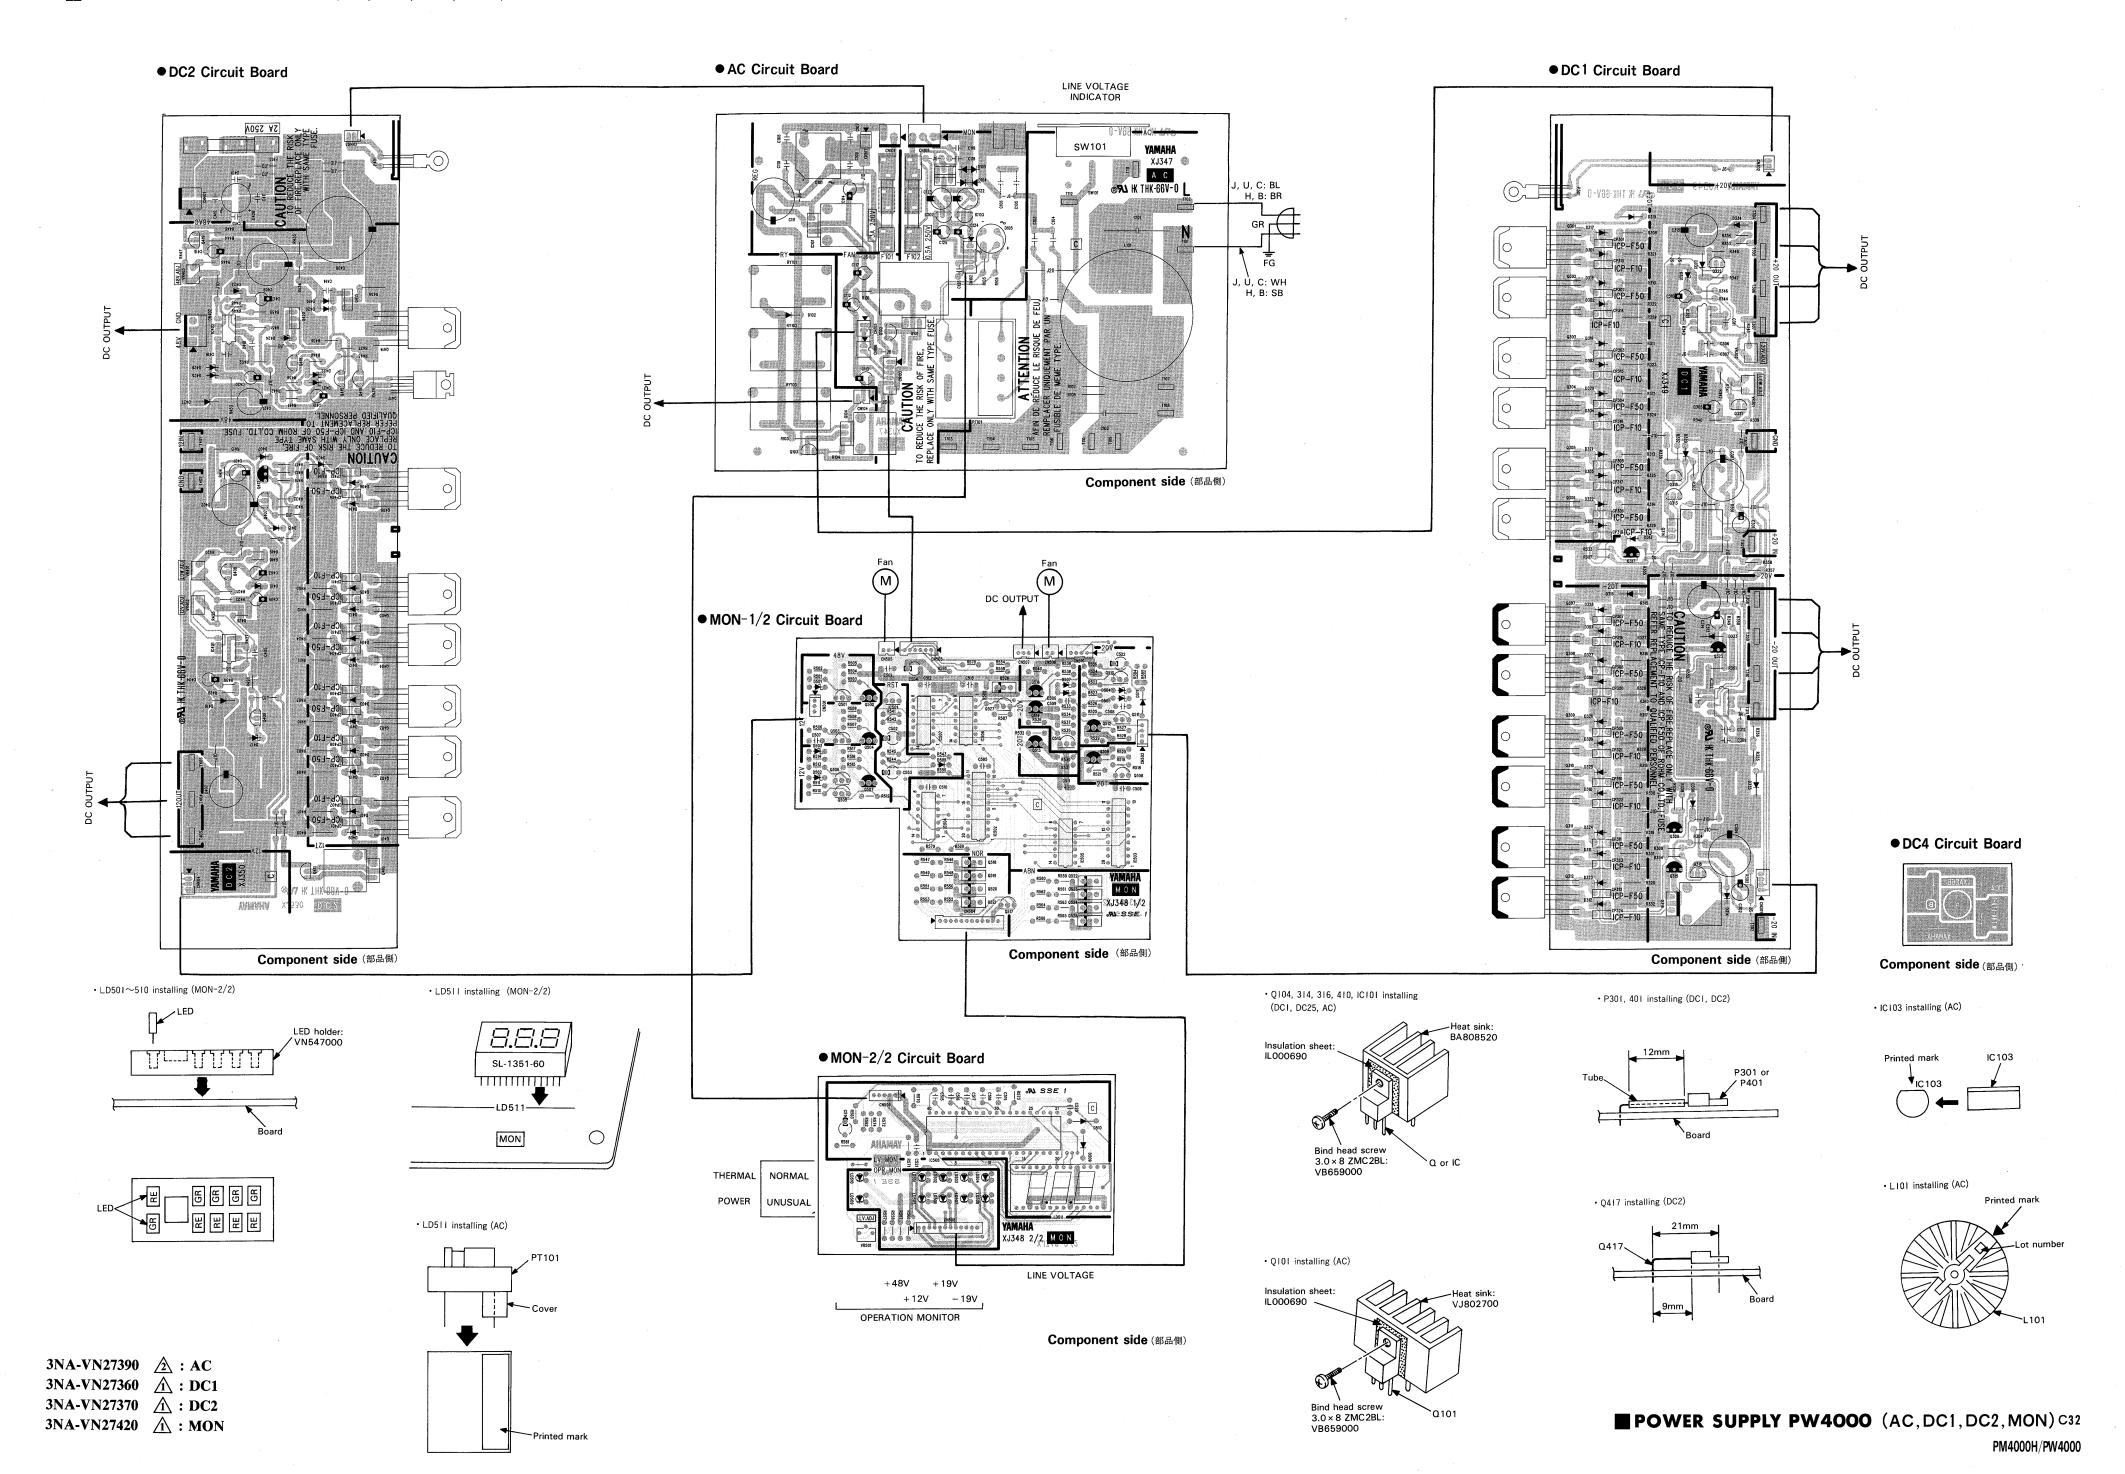

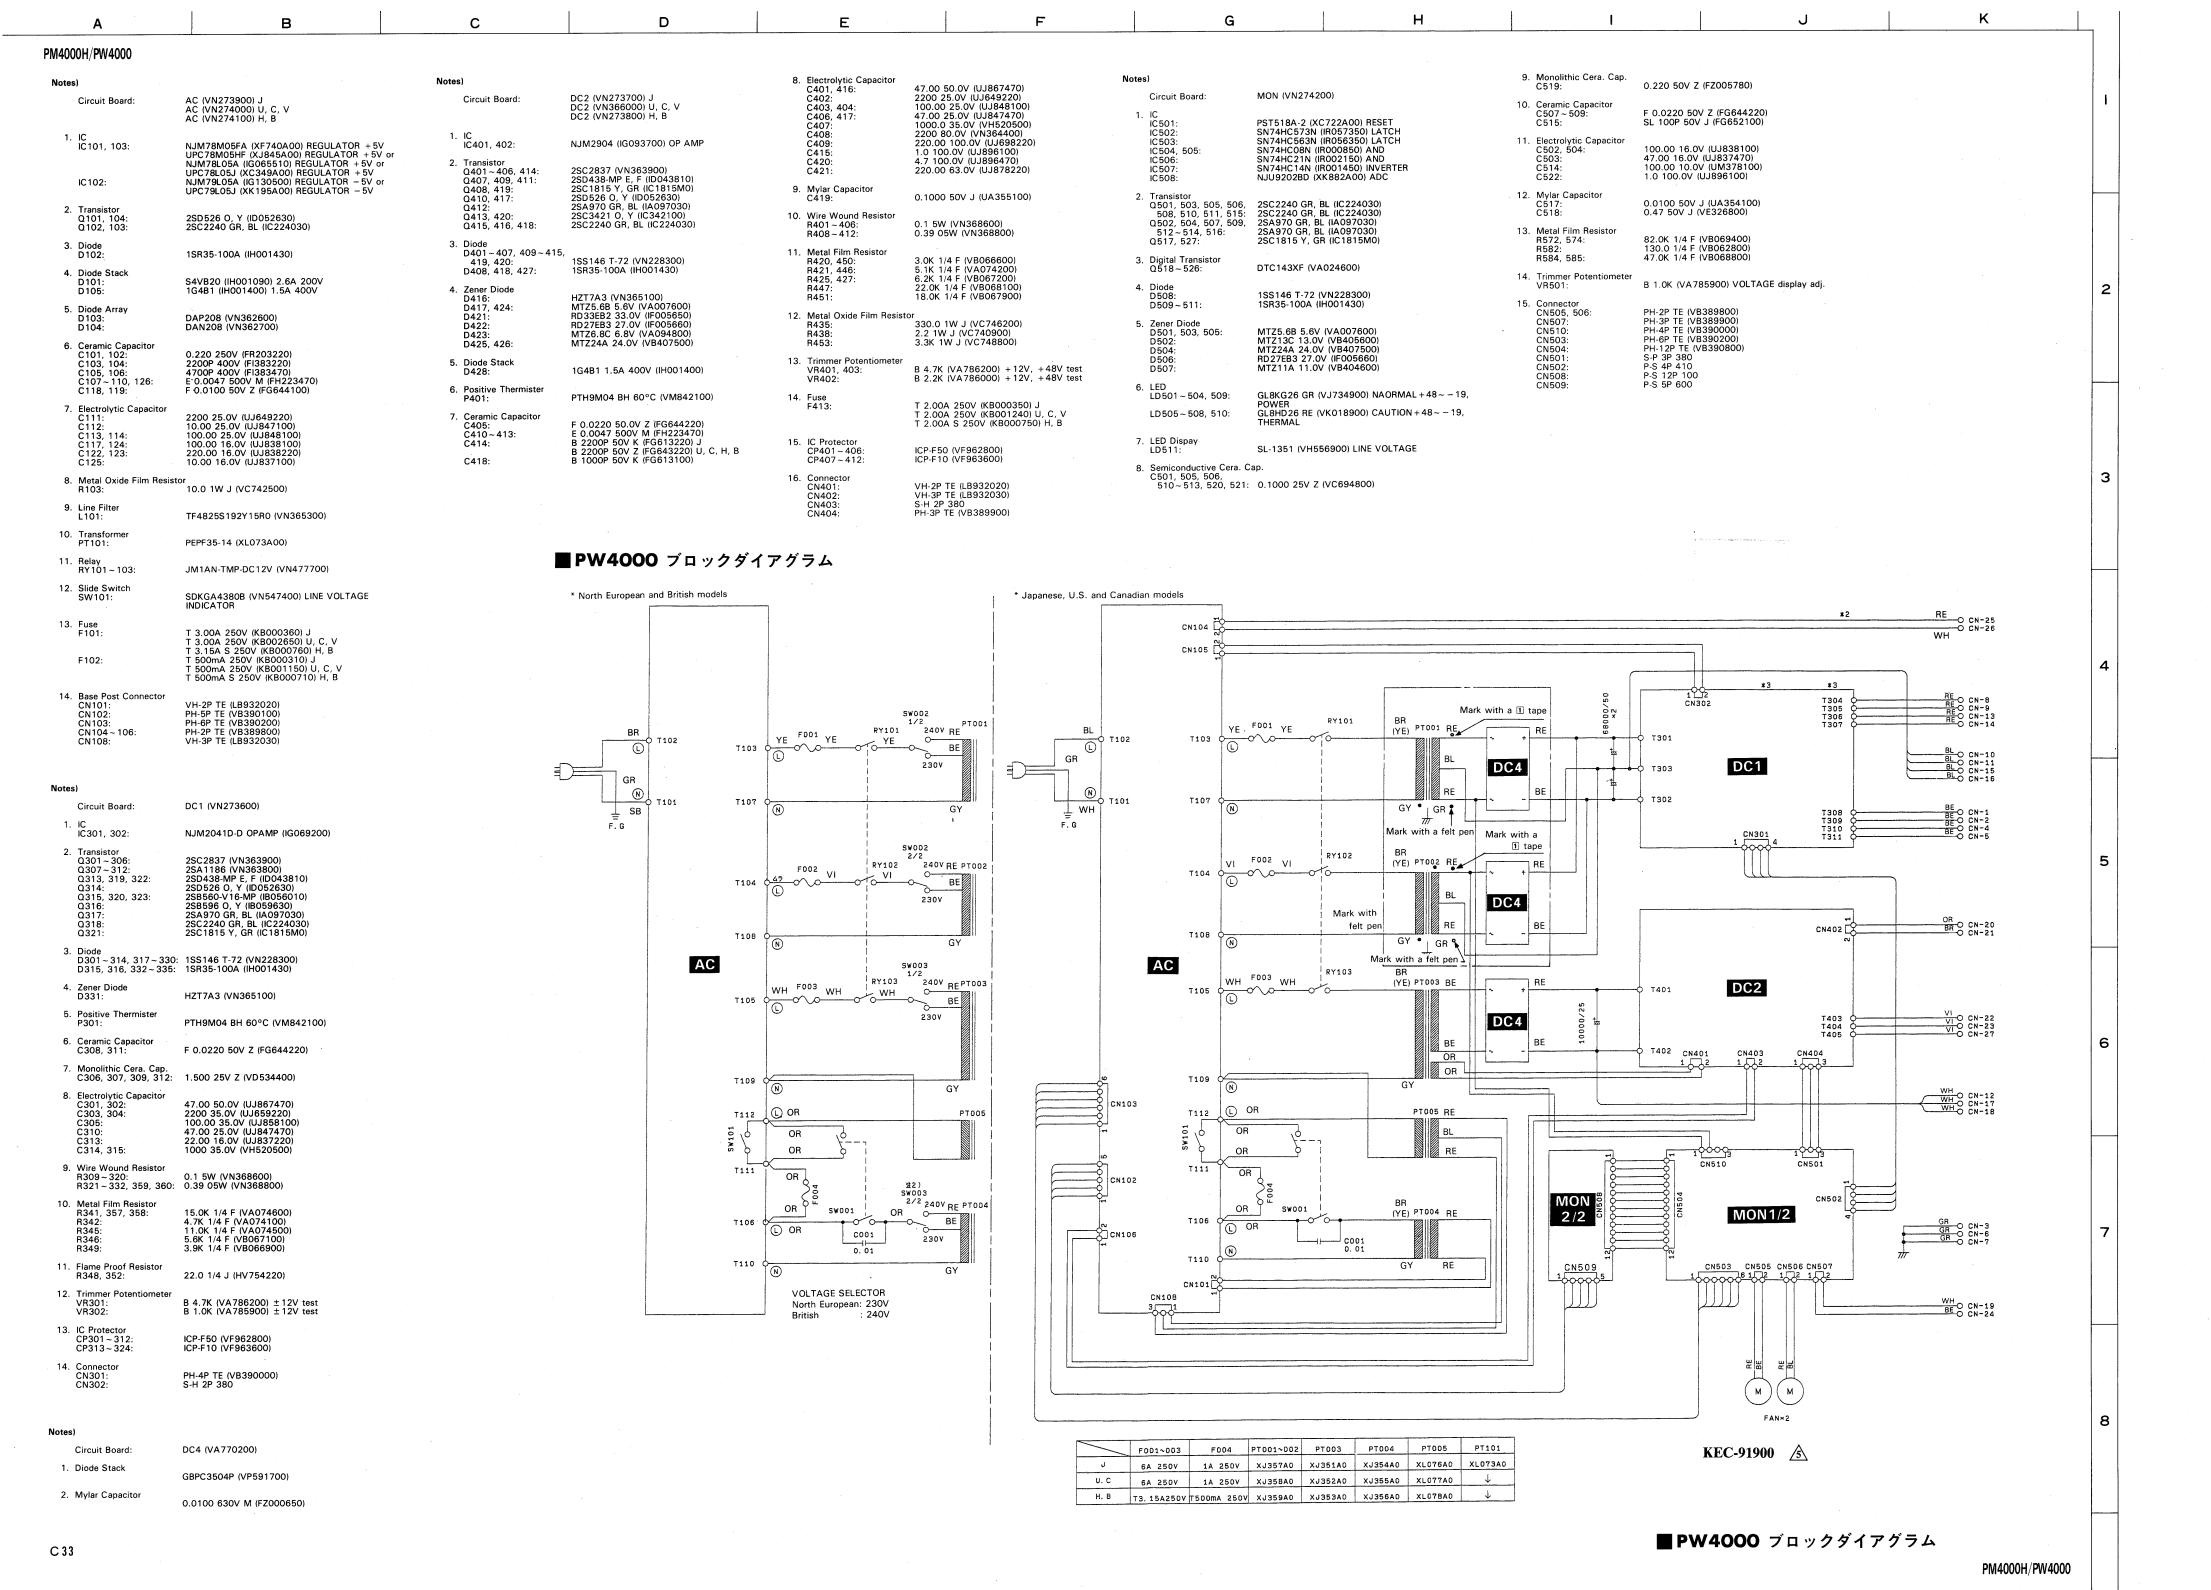


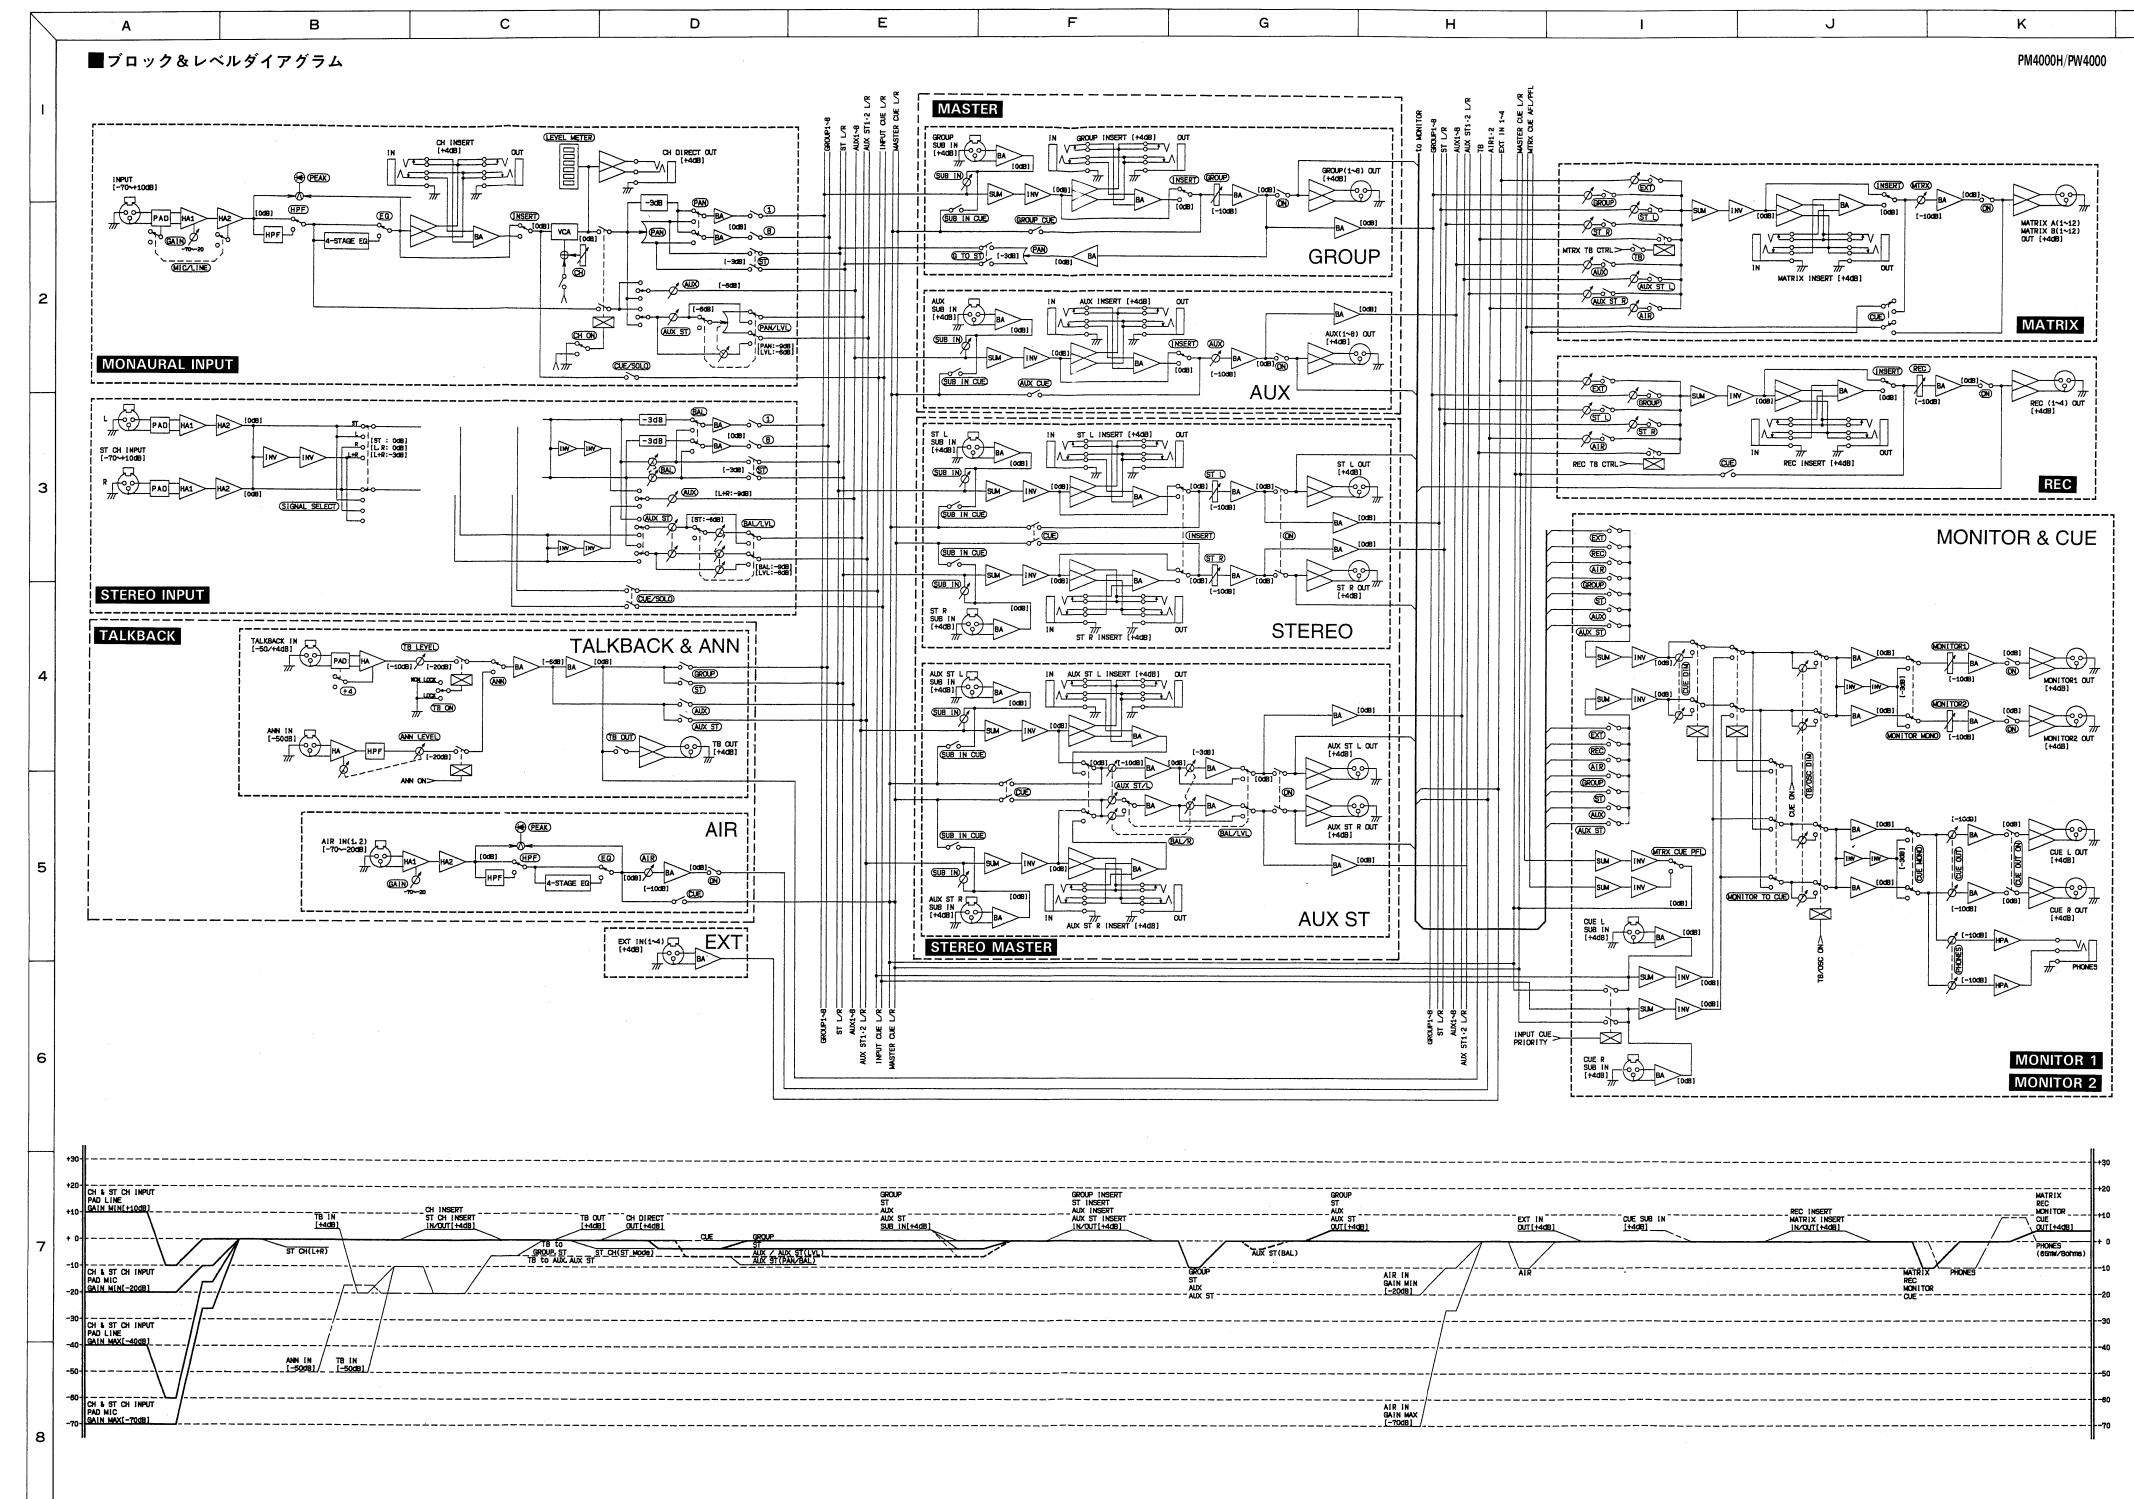


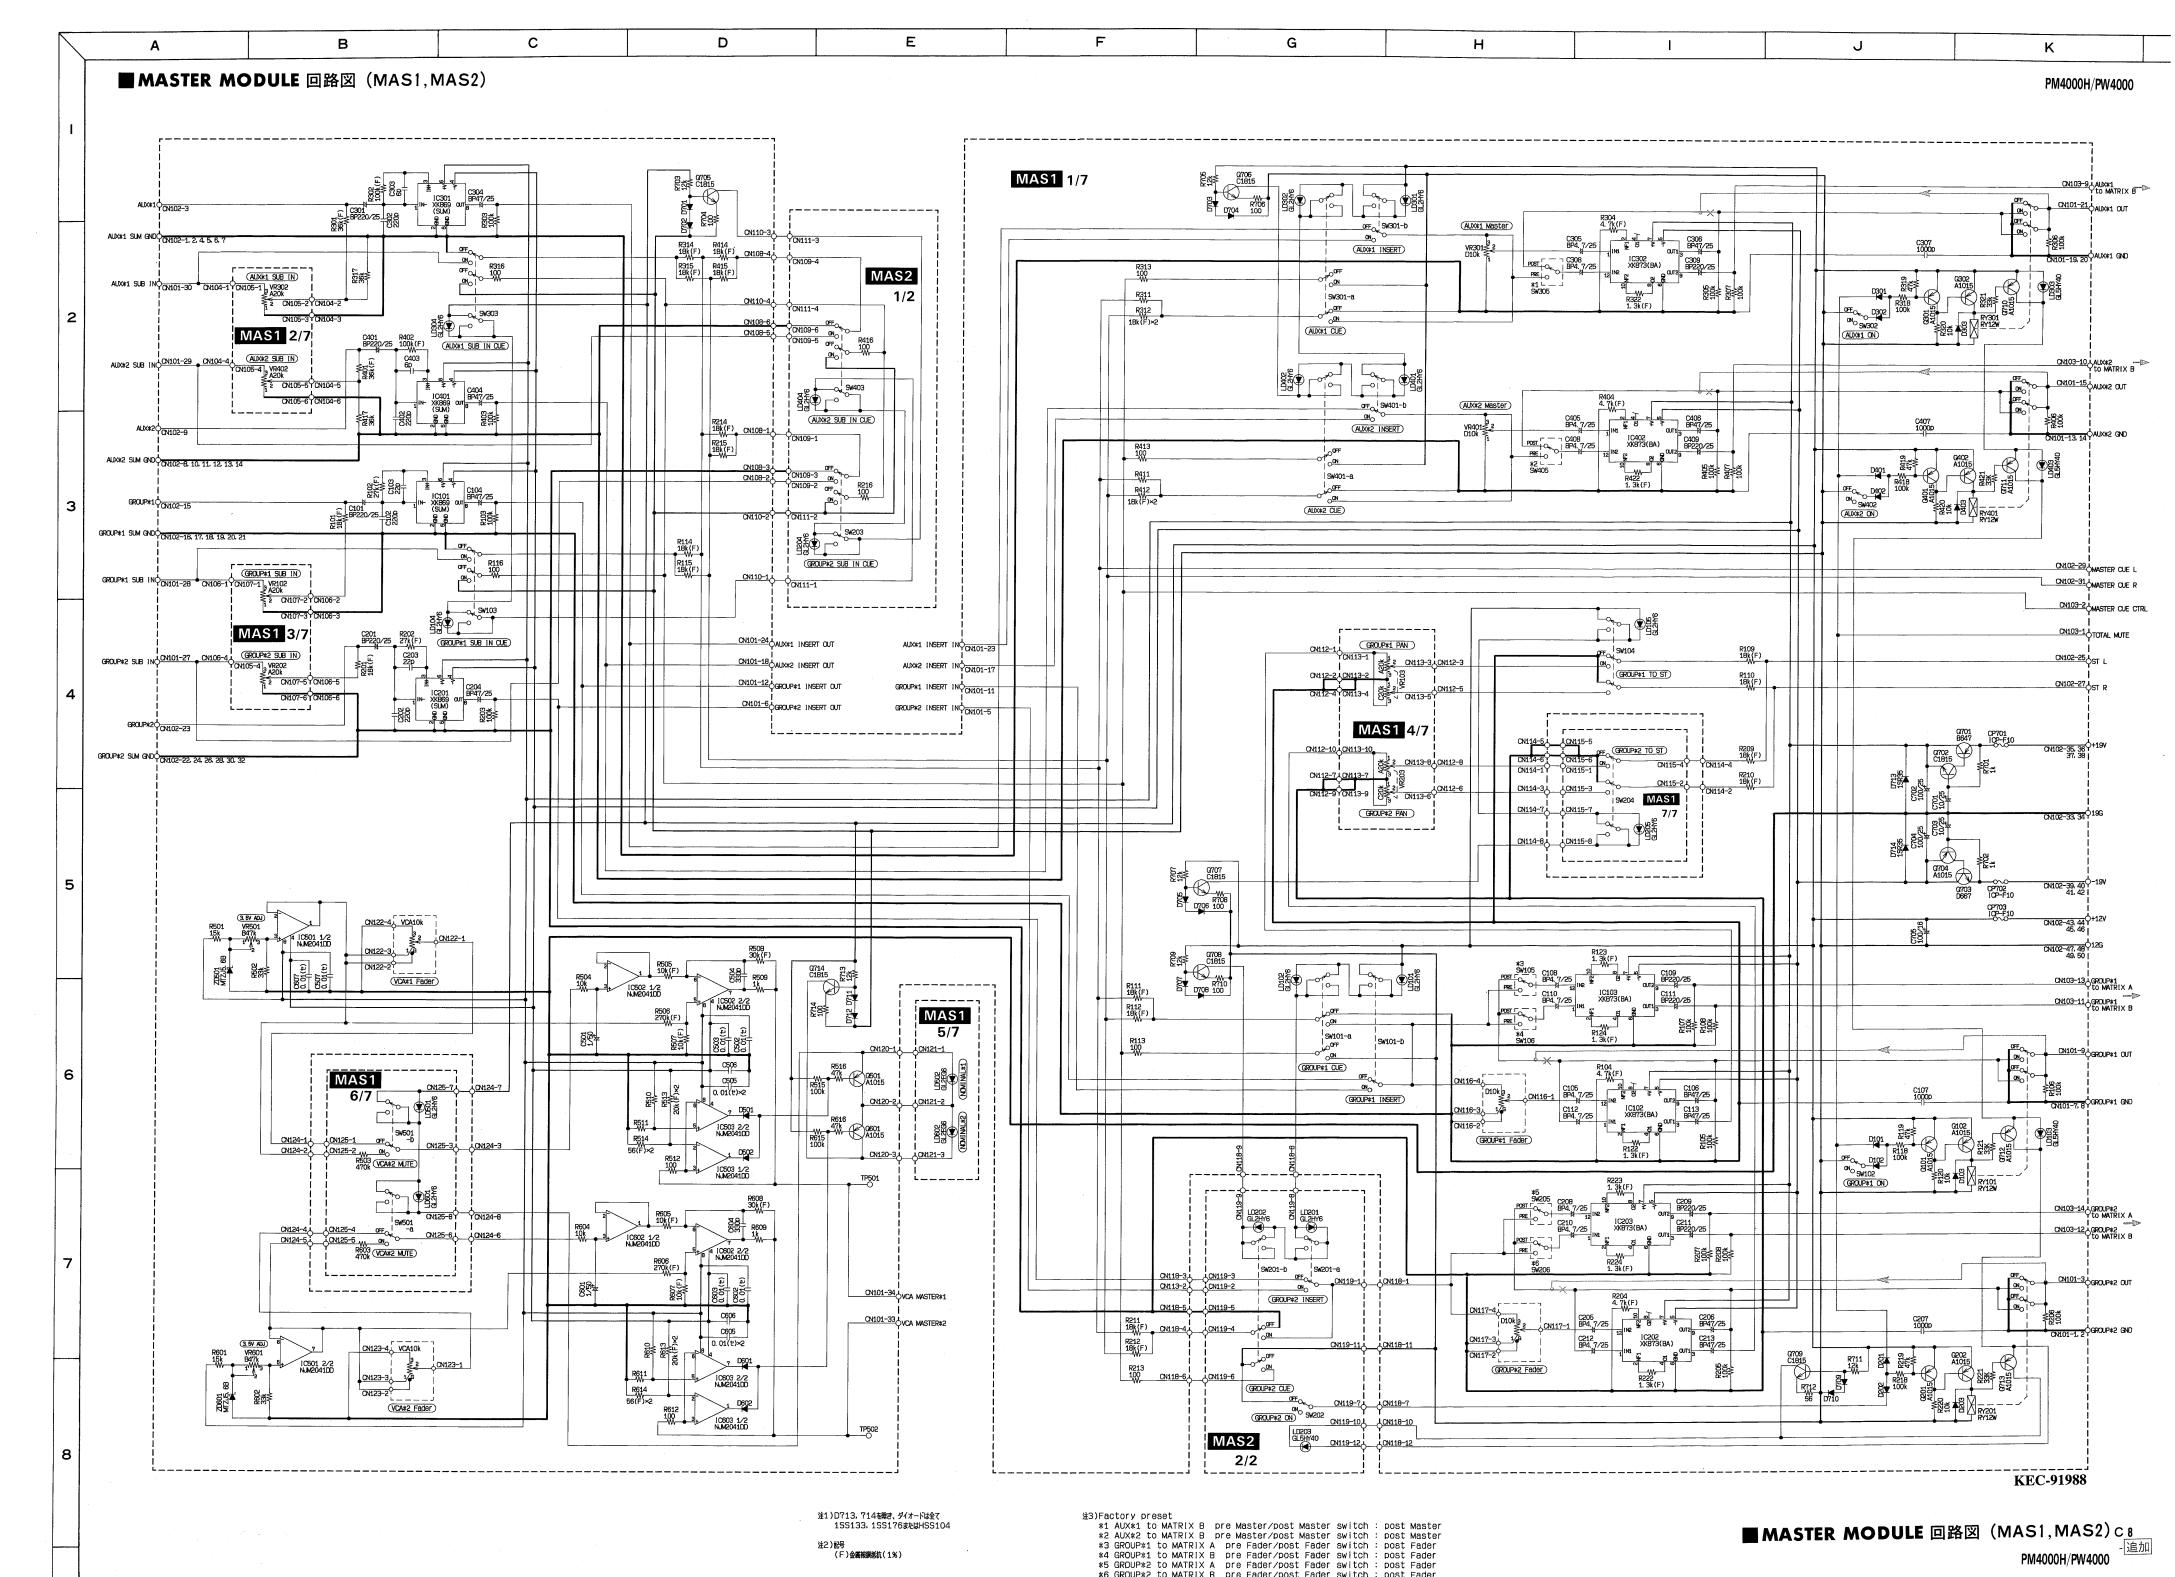


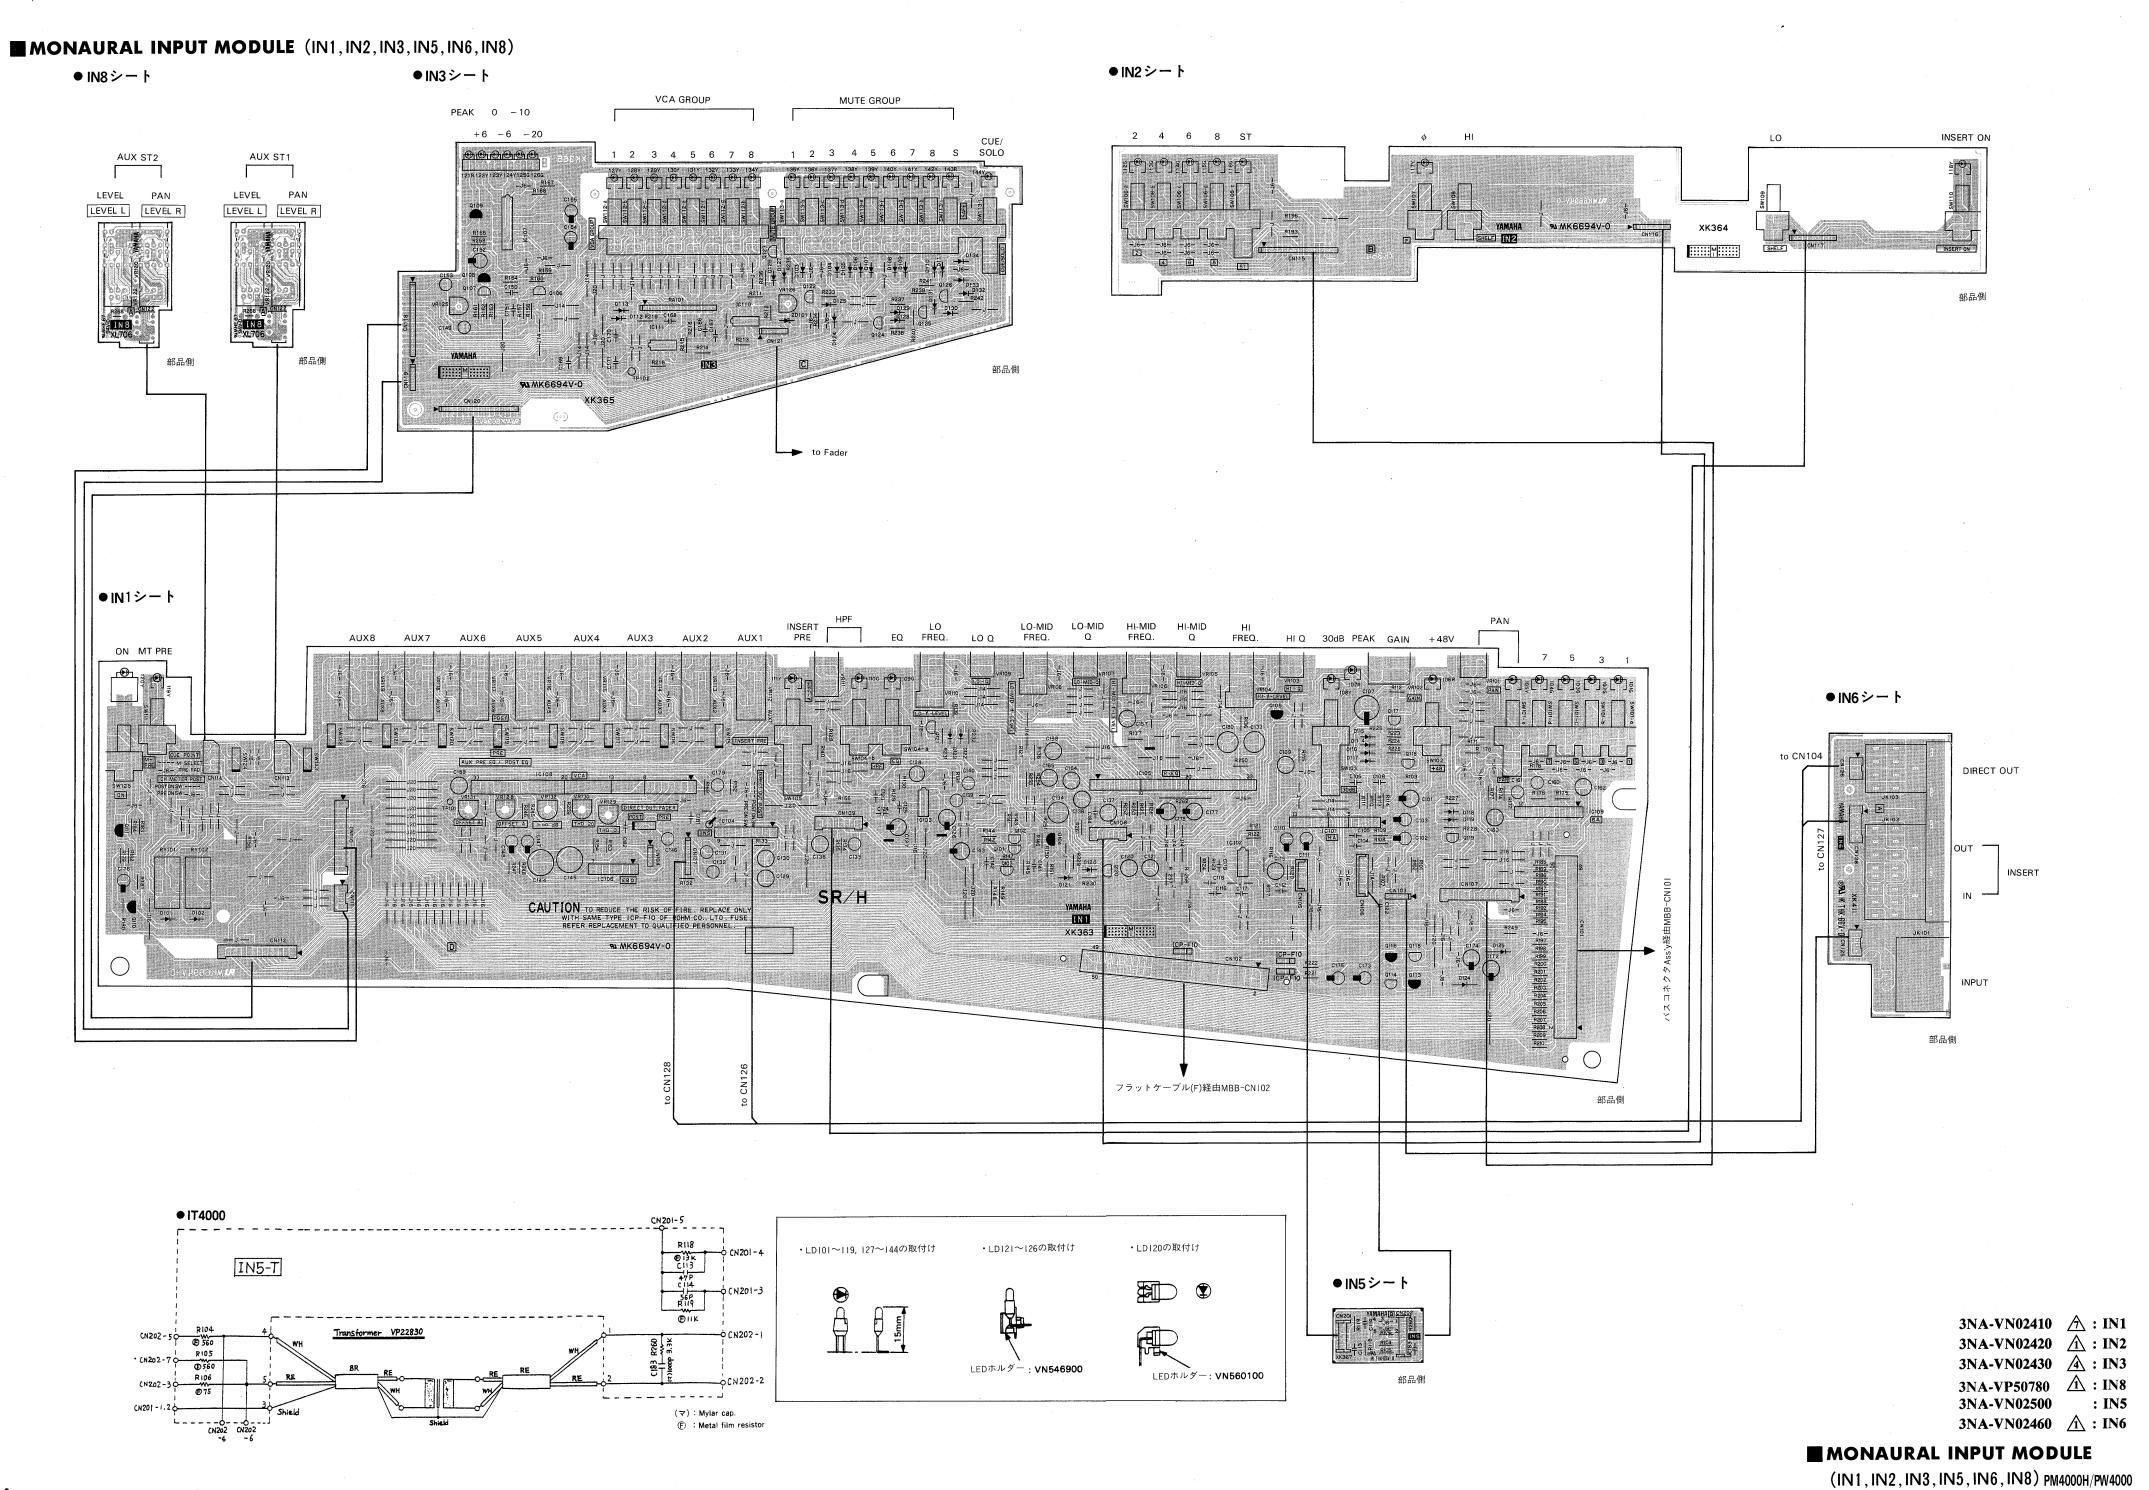


■ STEREO MASTER MODULE (ST1,ST2)

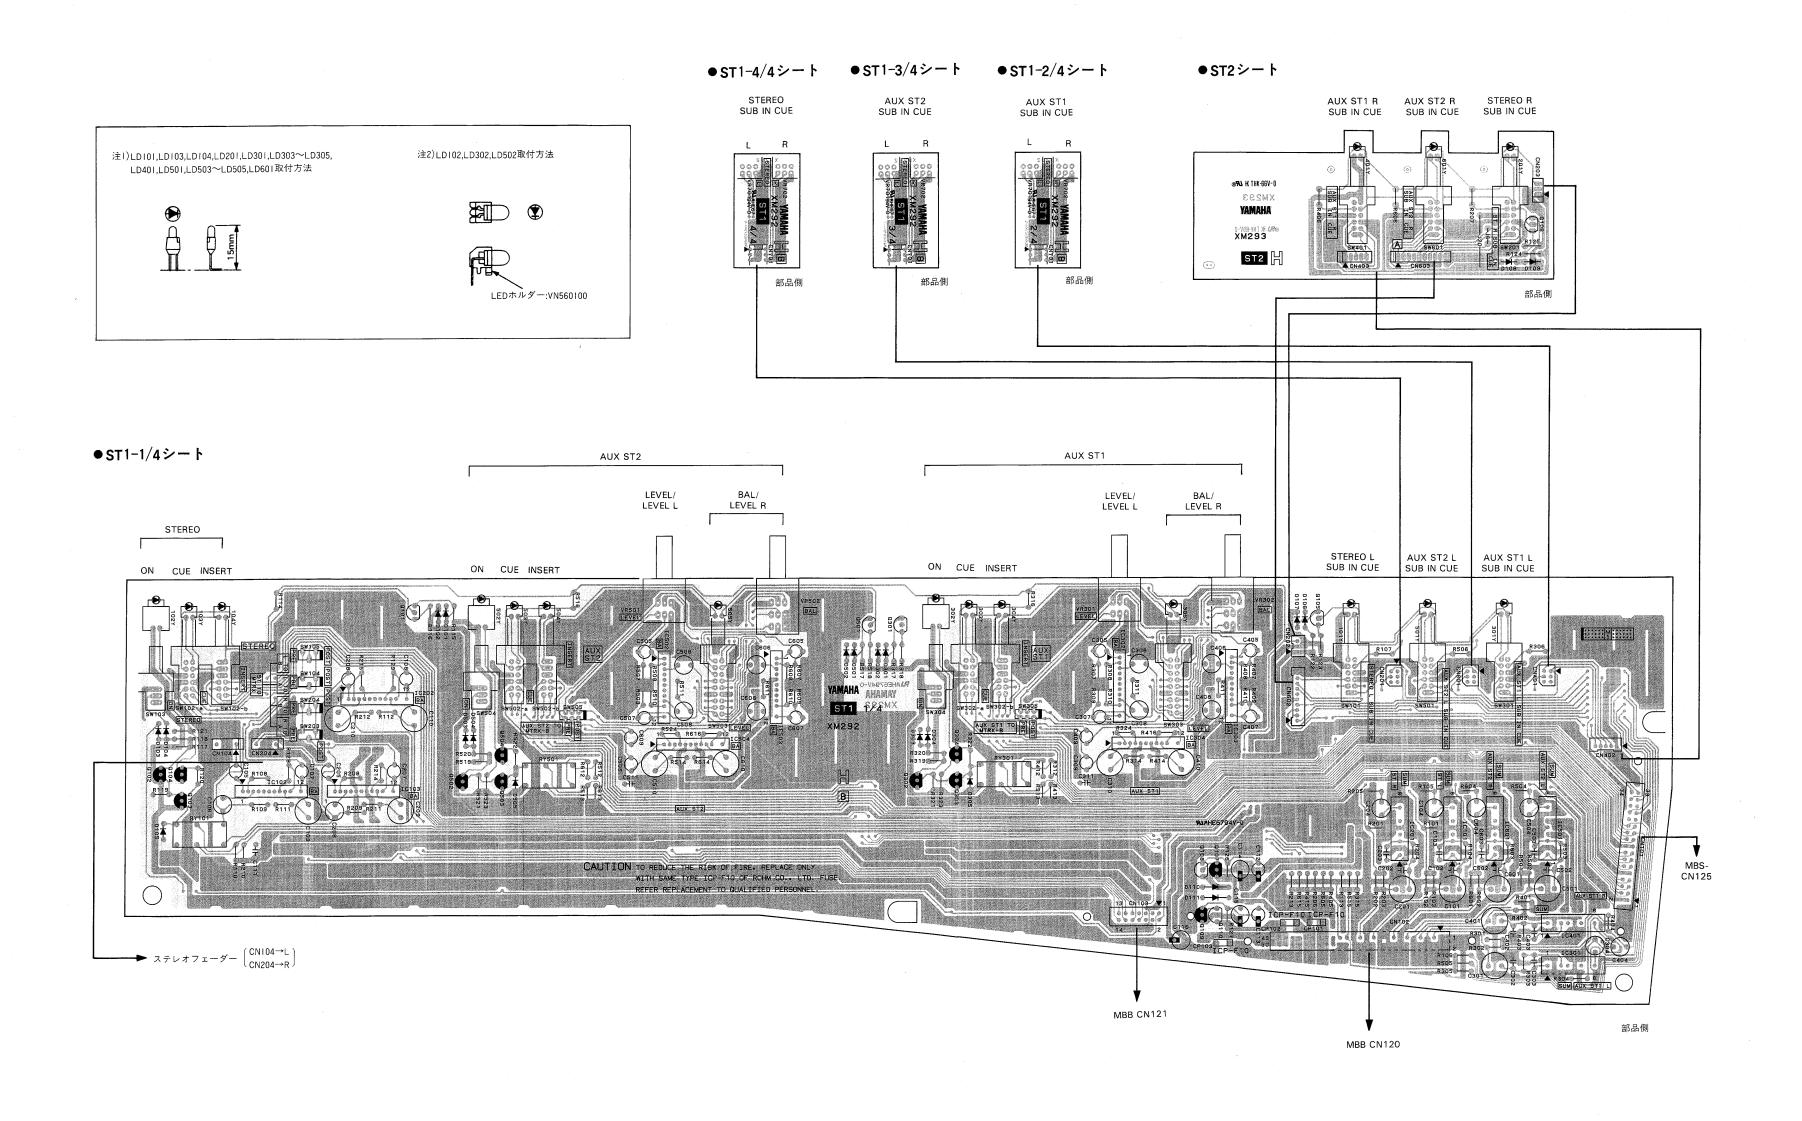

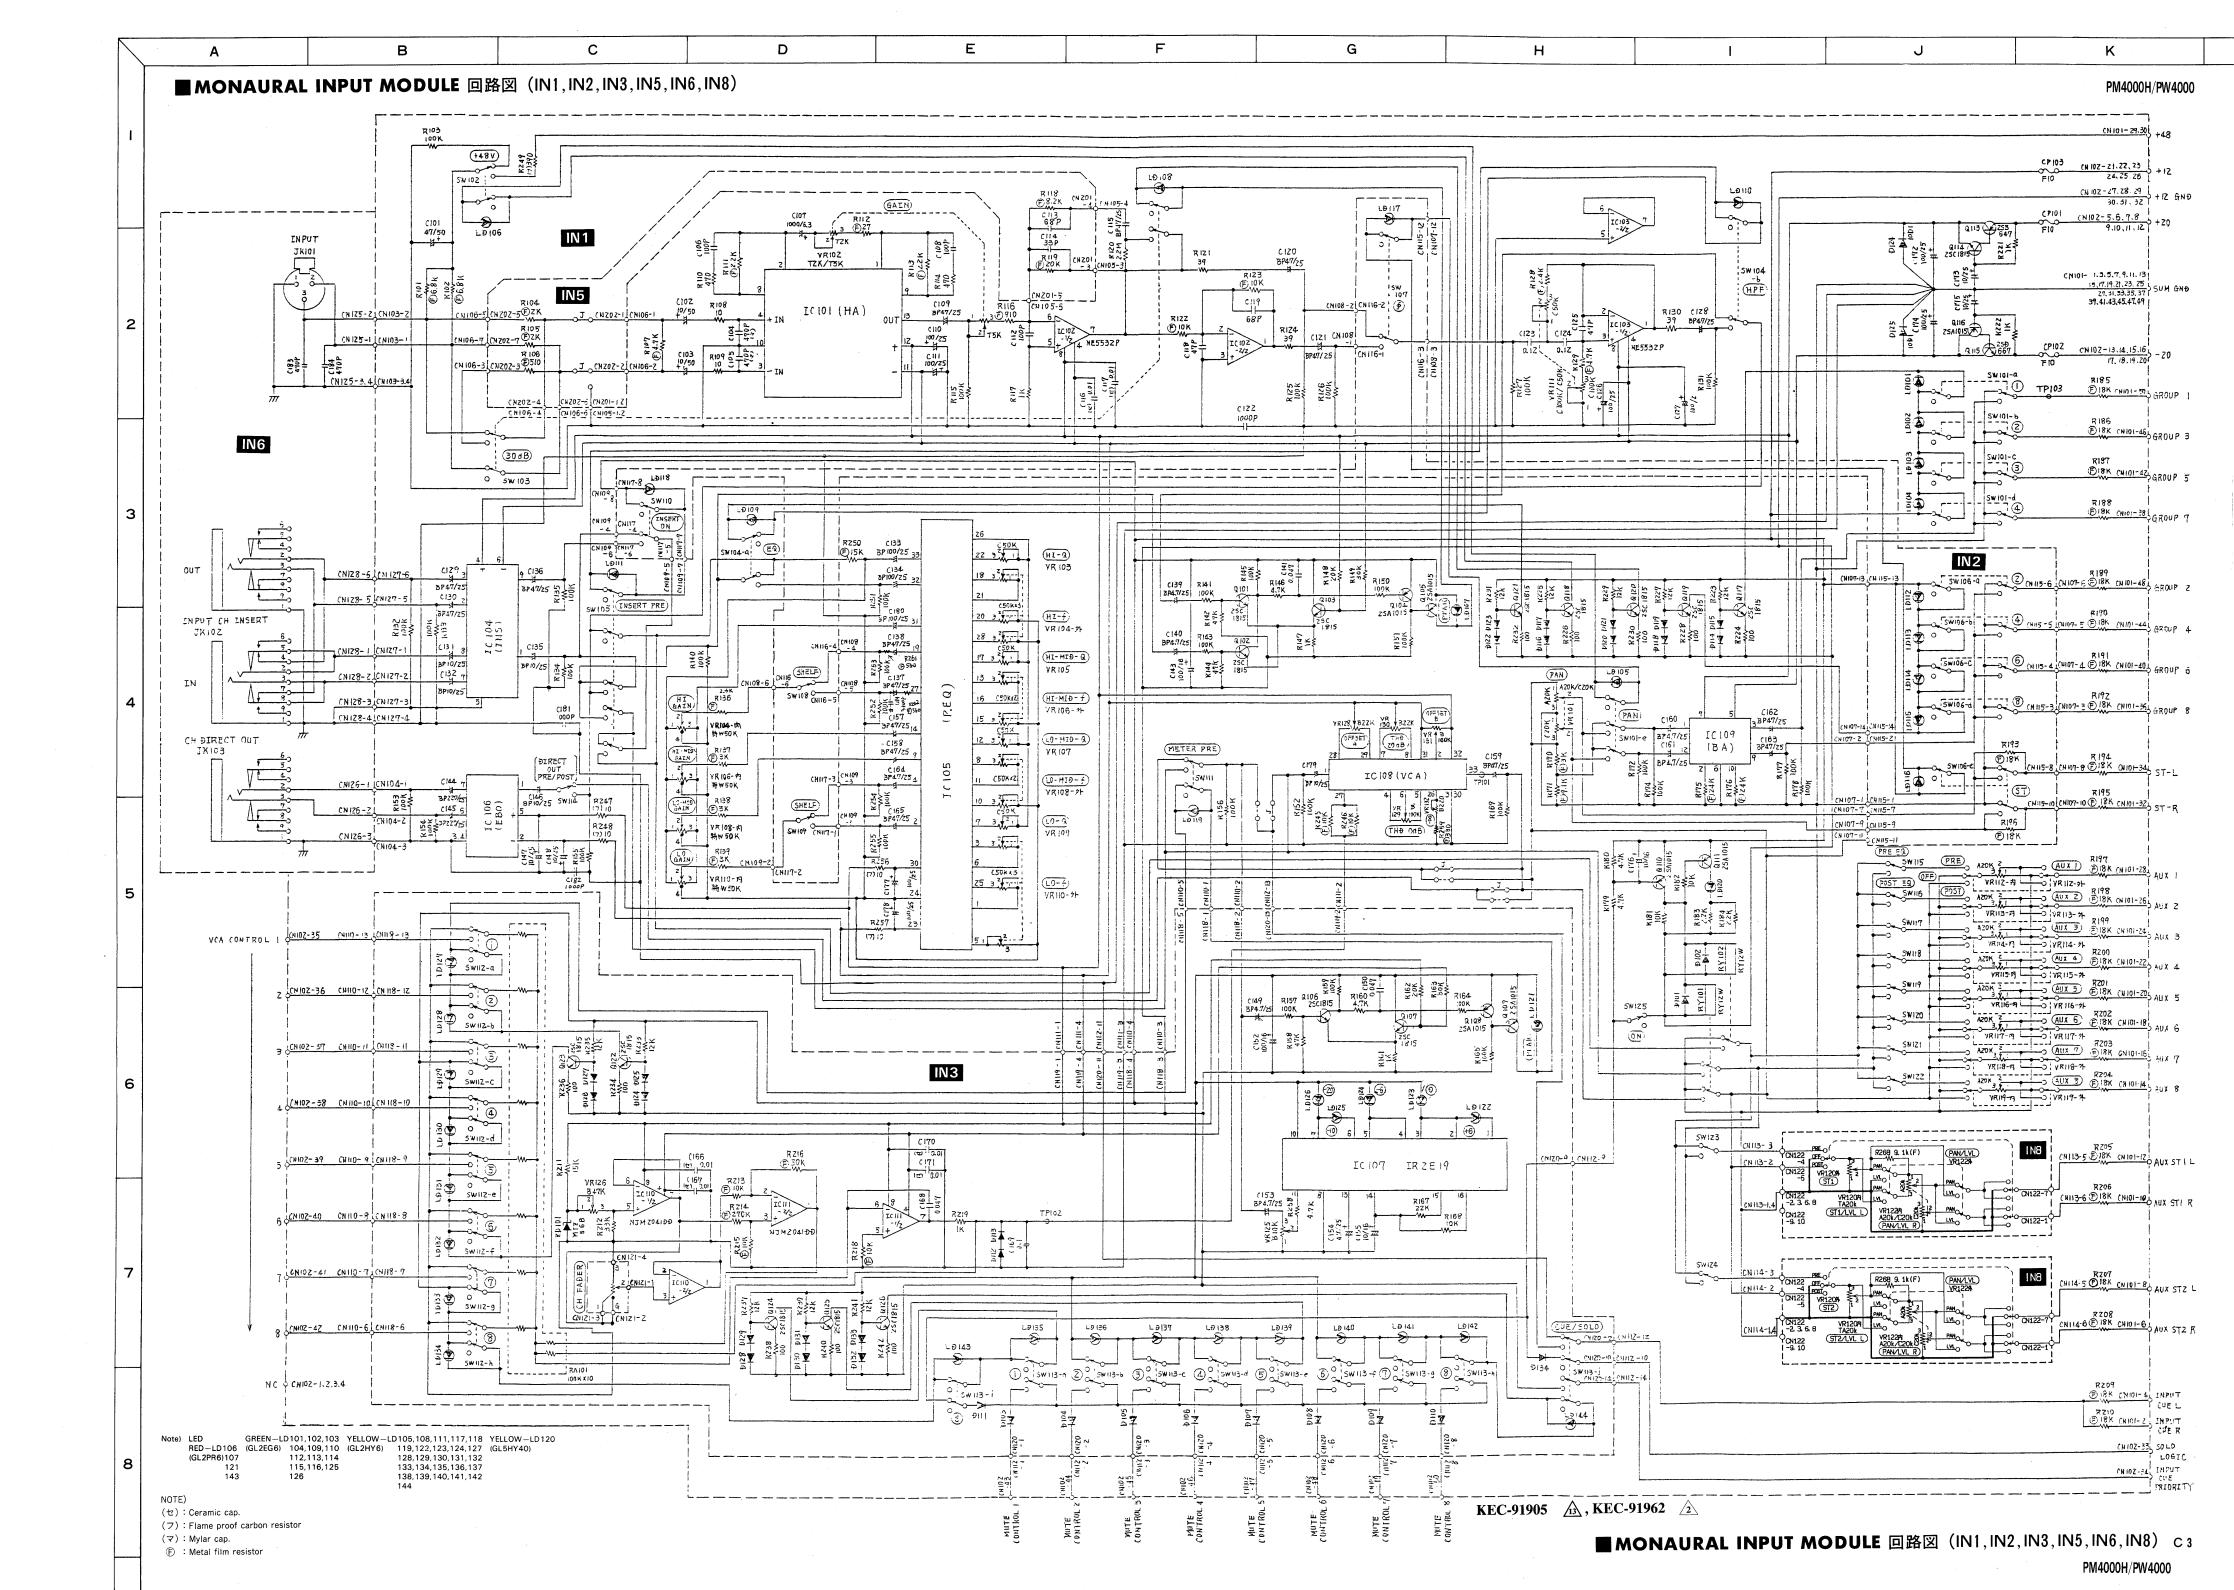


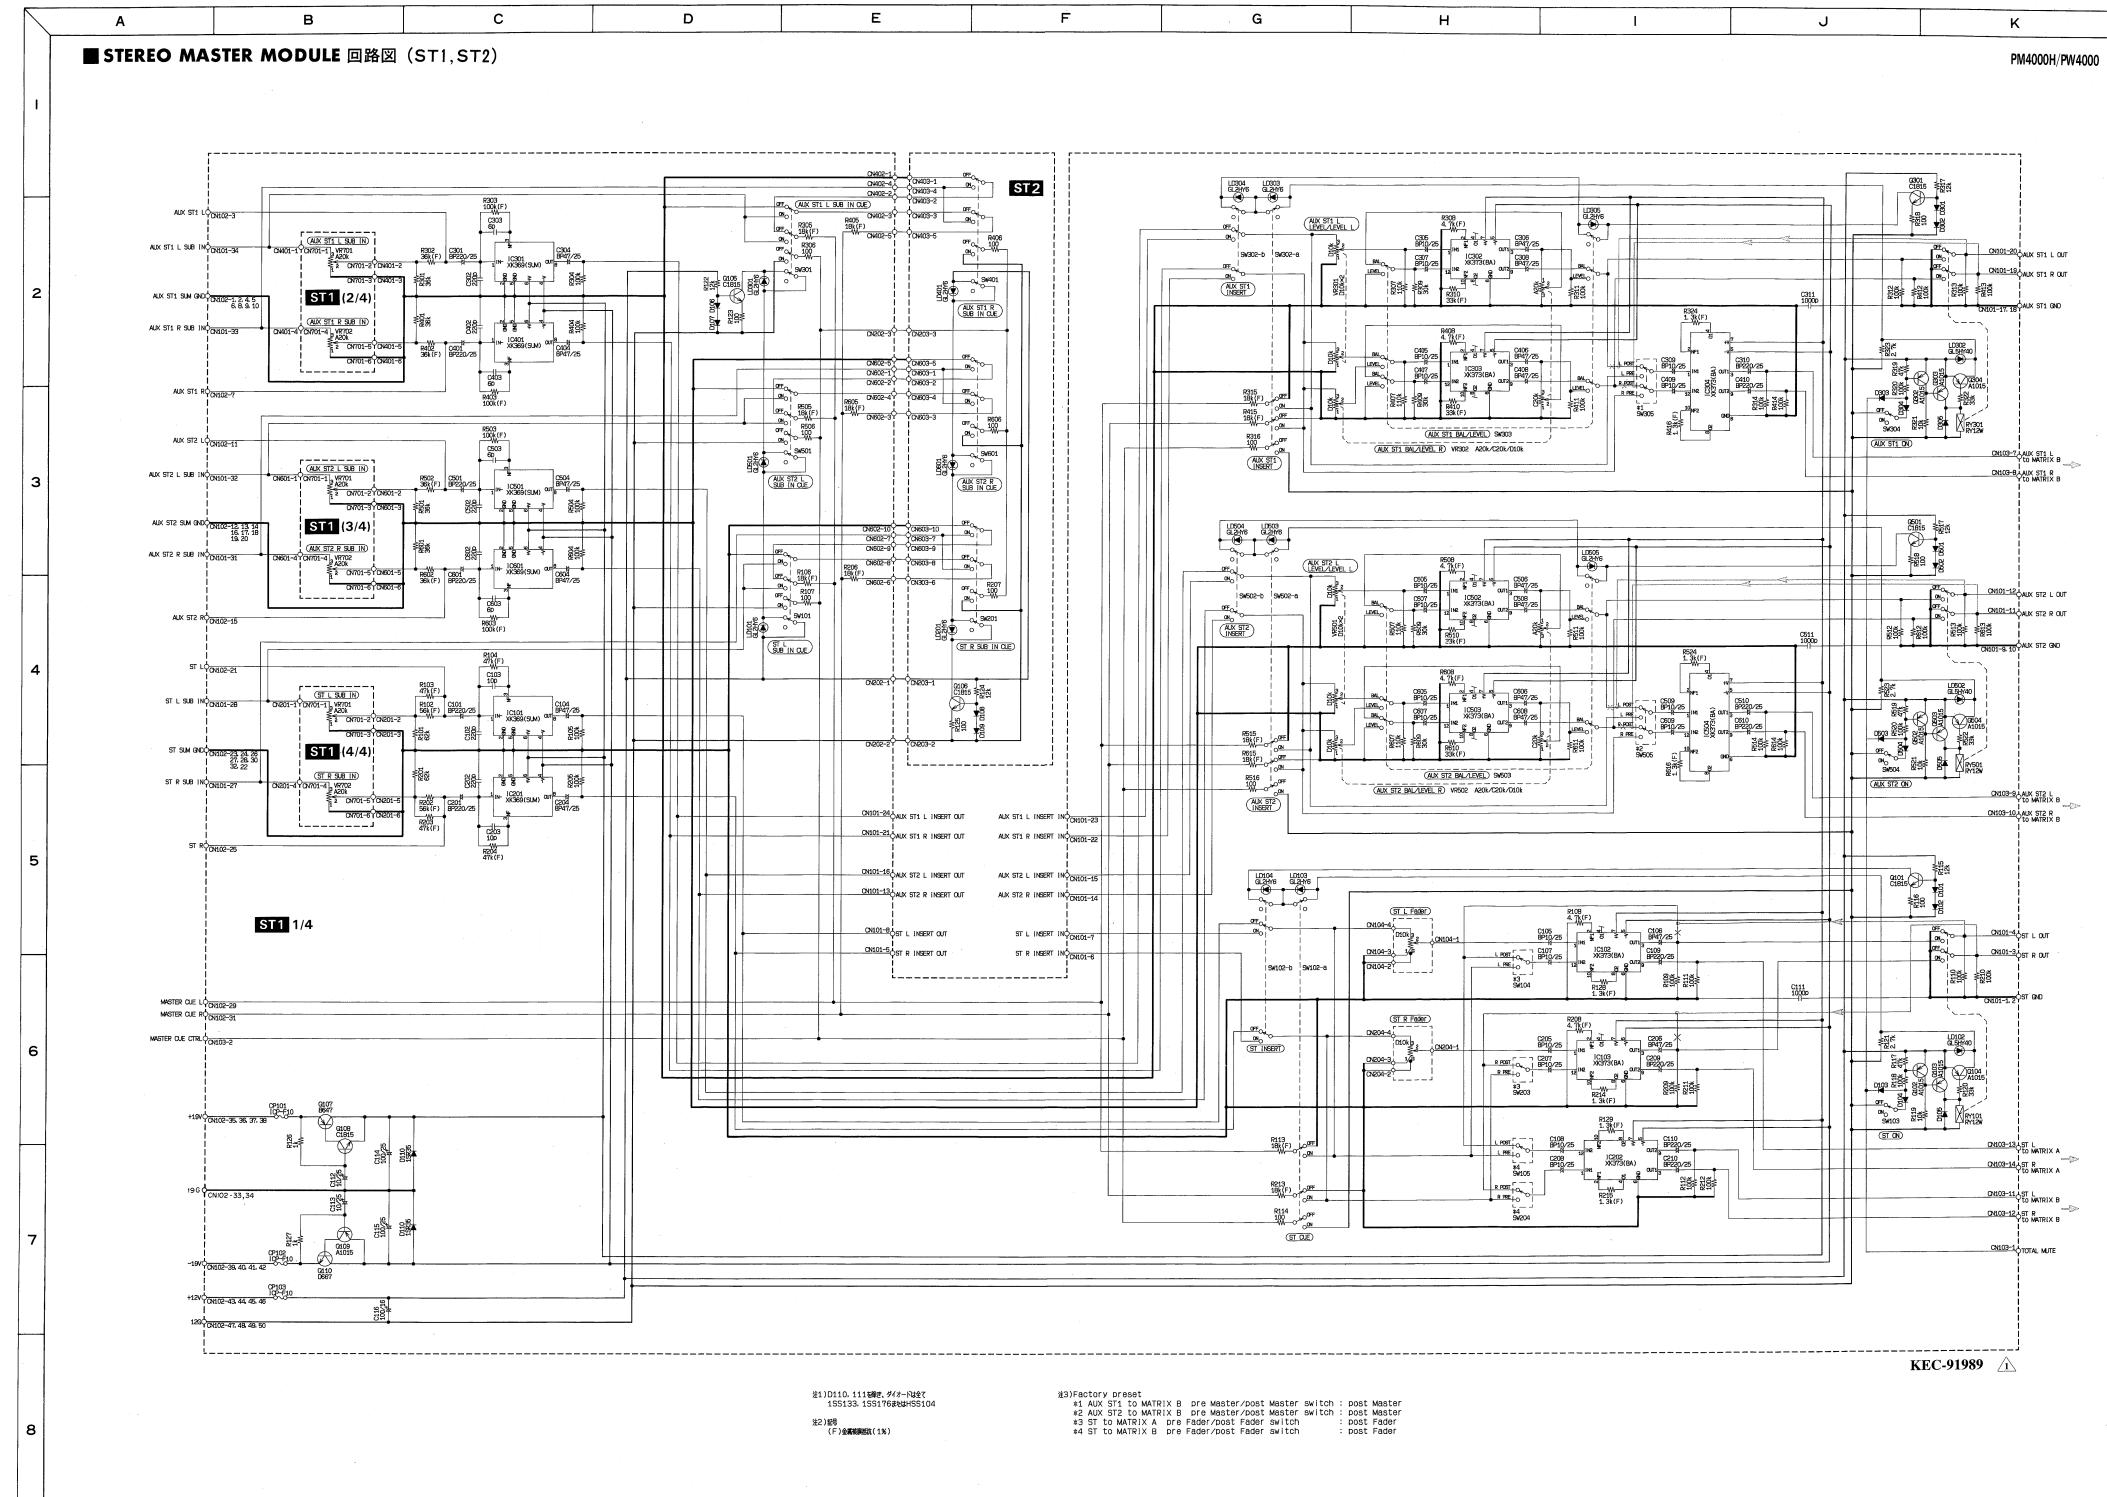



STEREO INPUT MODULE (SI1, SI2, SI3, SI5, IN5)

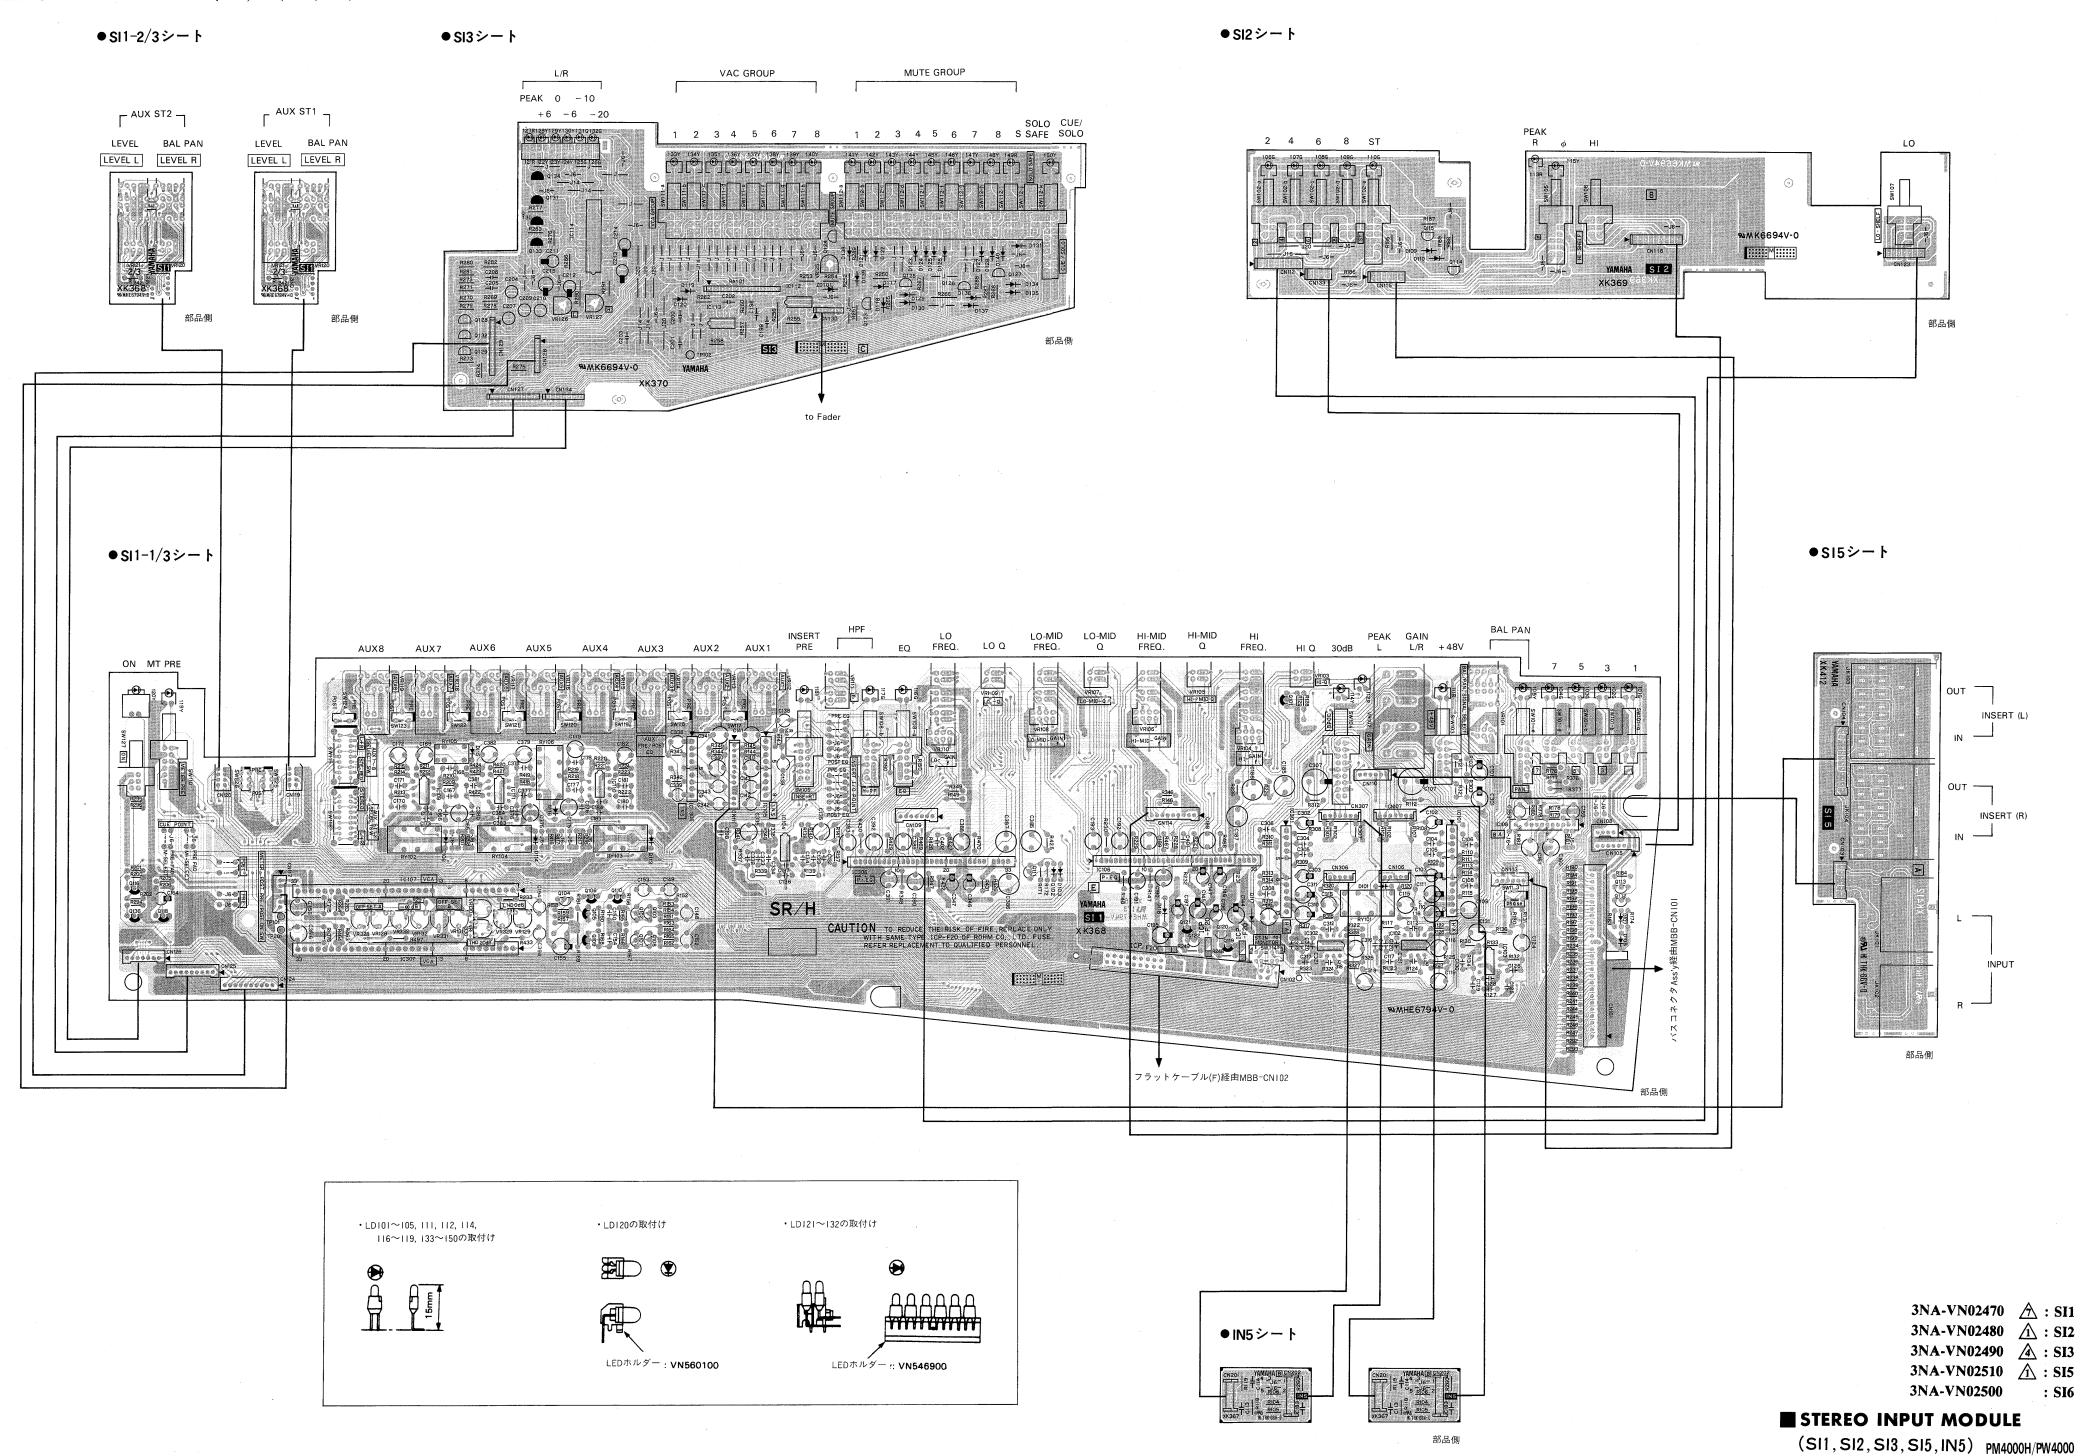



■ MONITOR 1 MODULE (MON1, MON3, MON4)

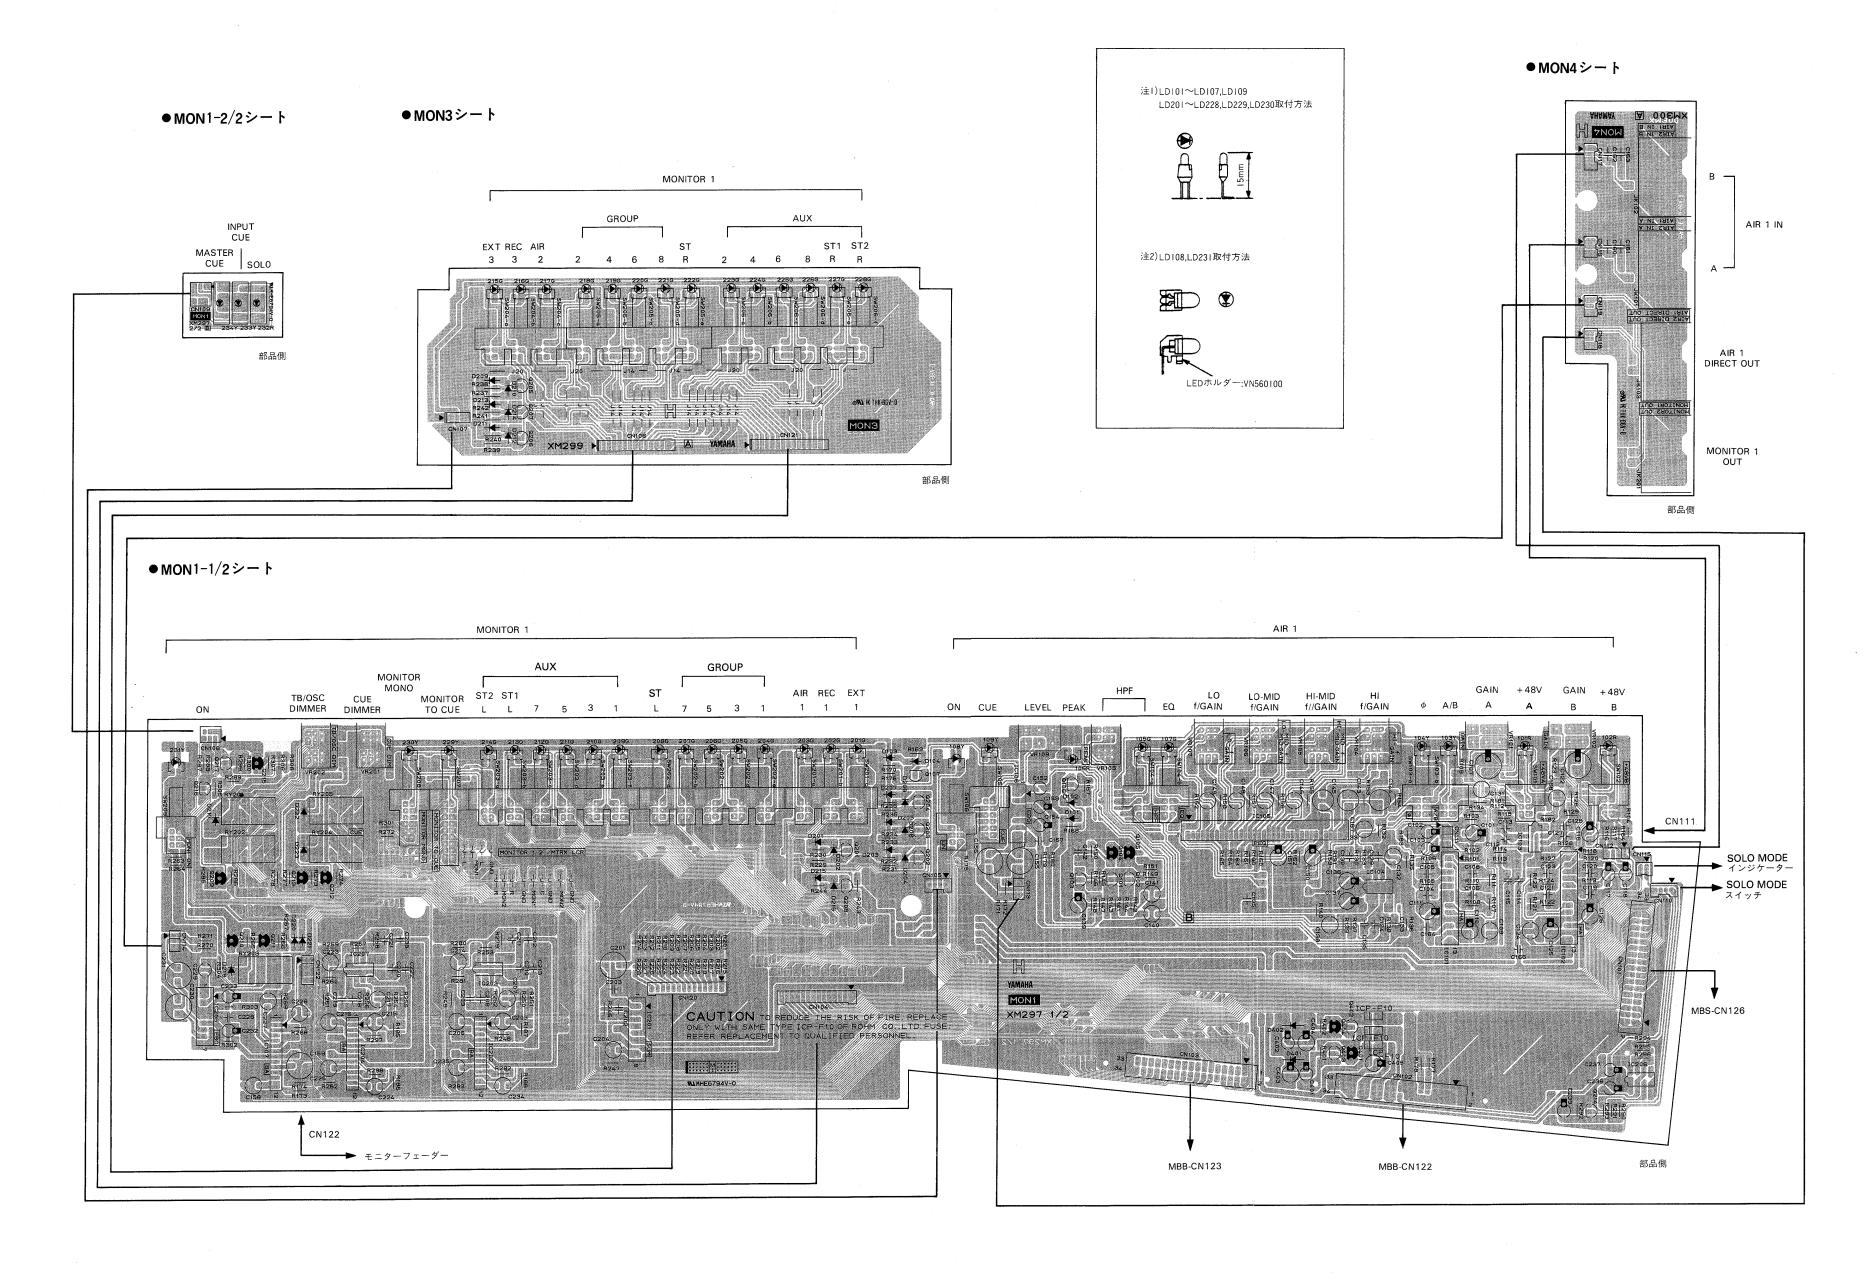

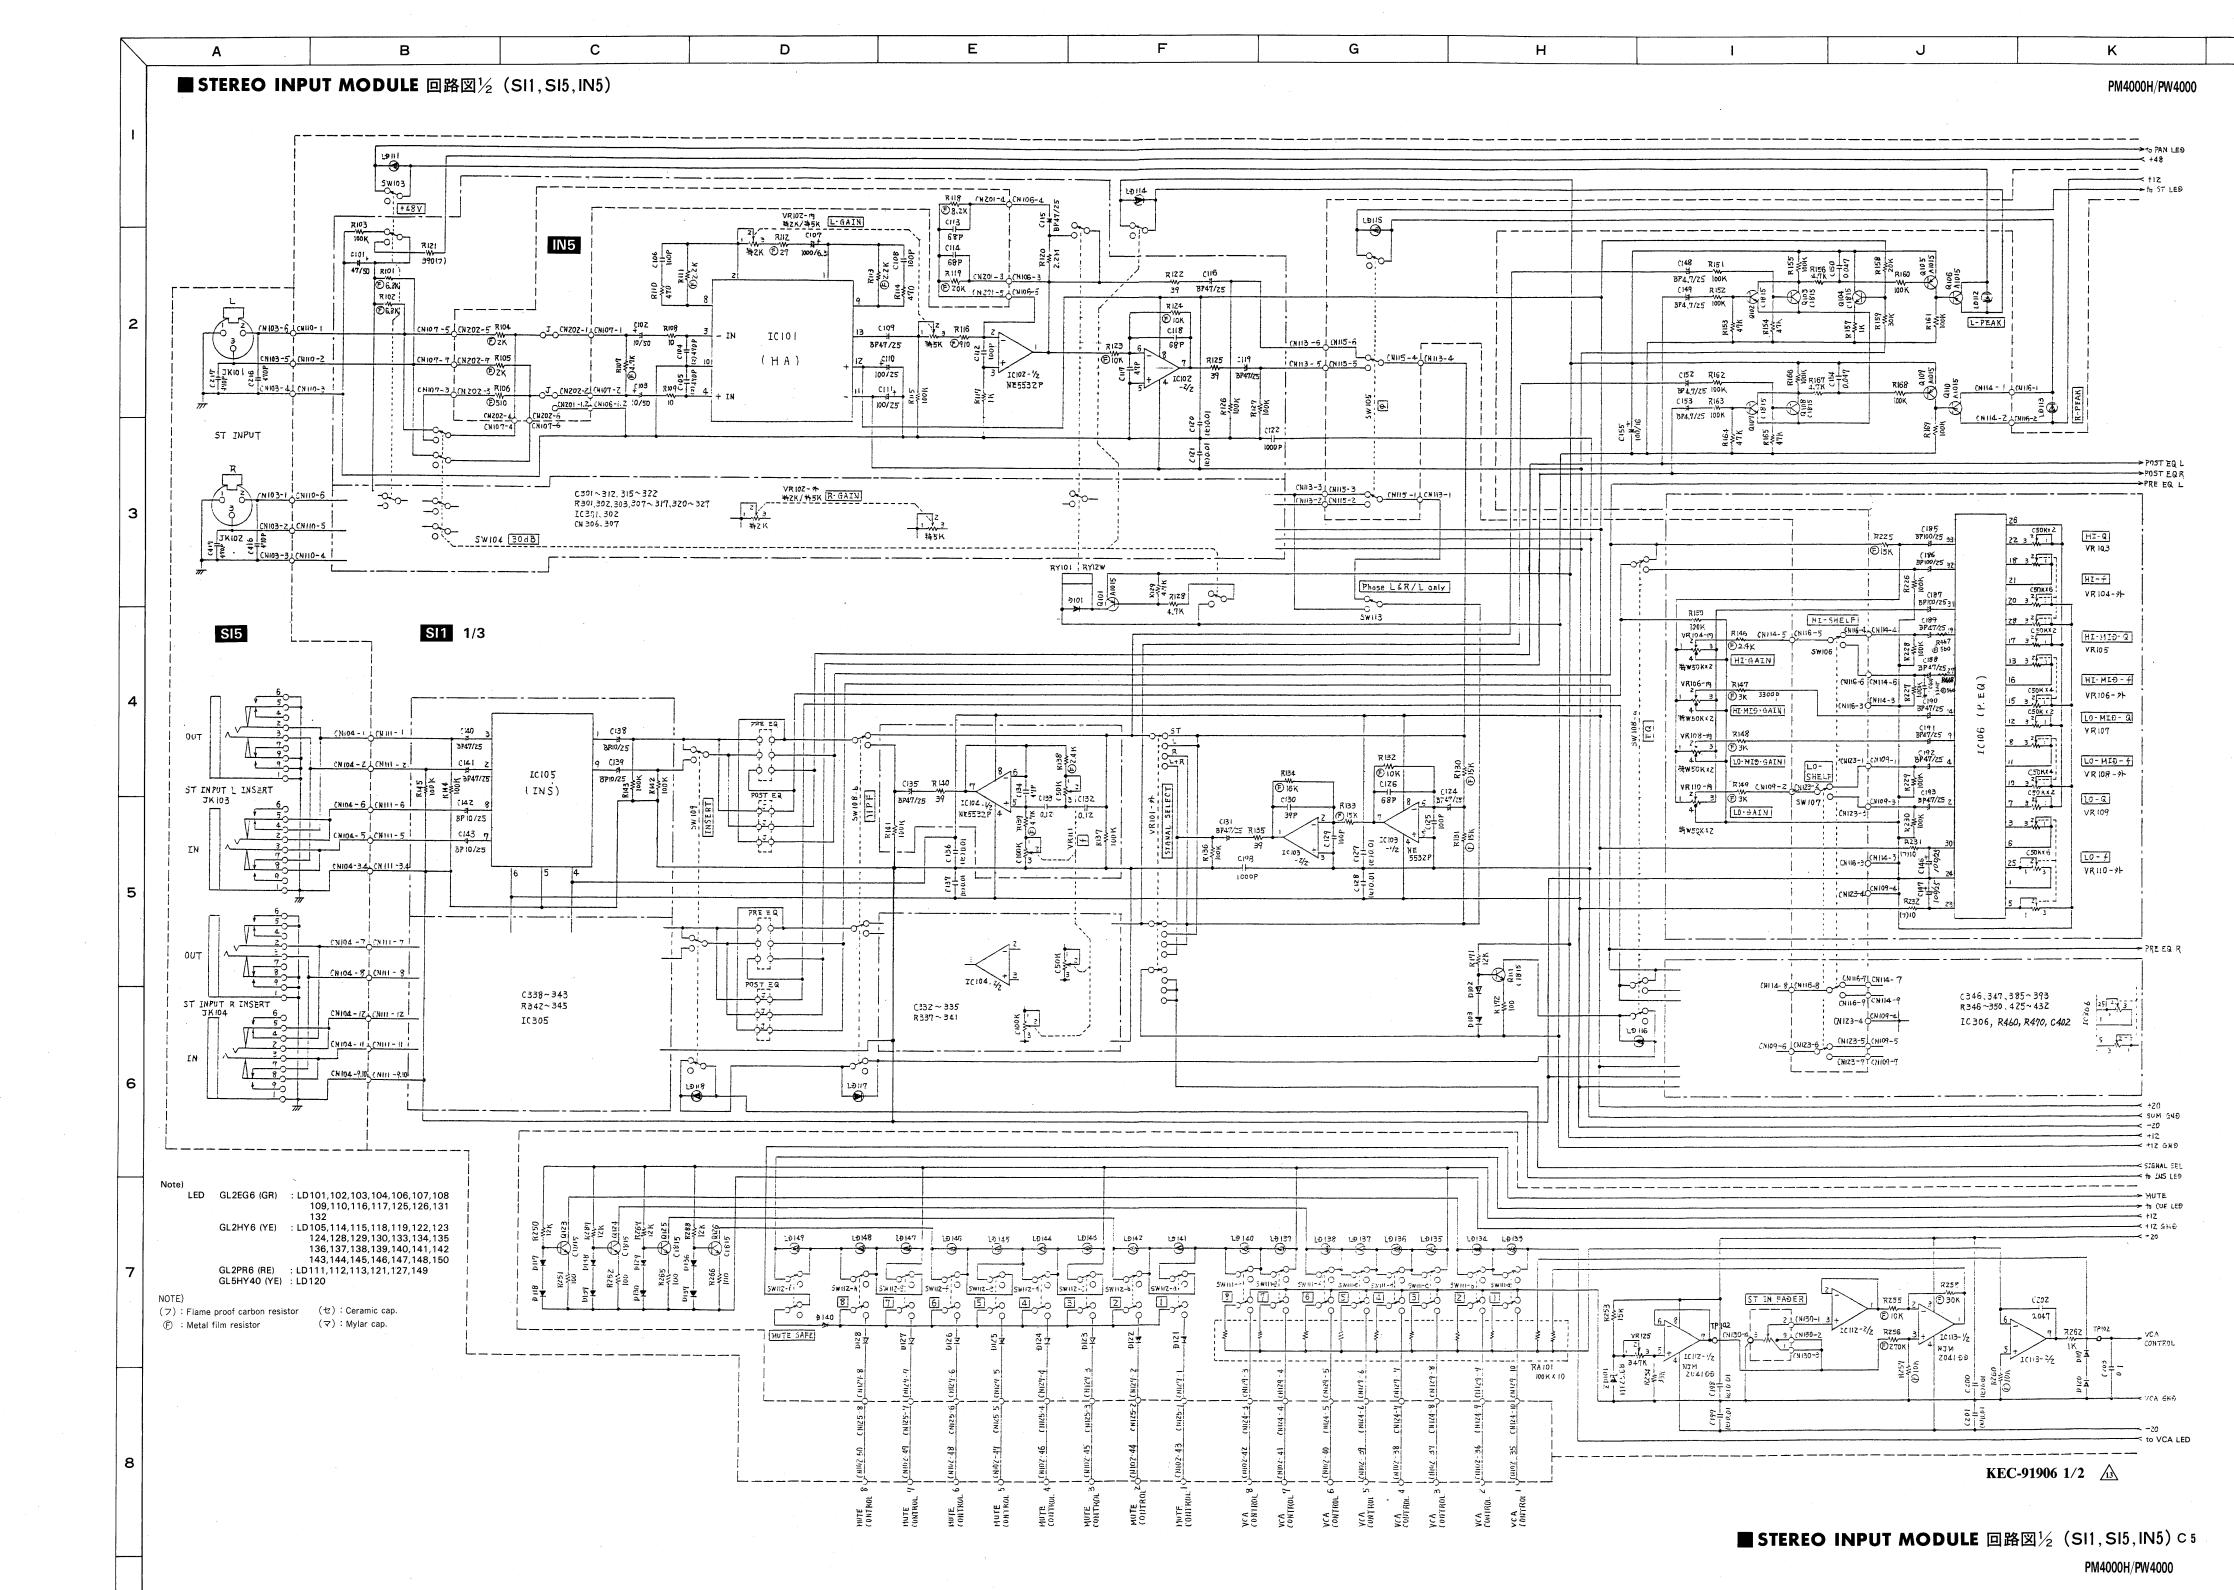

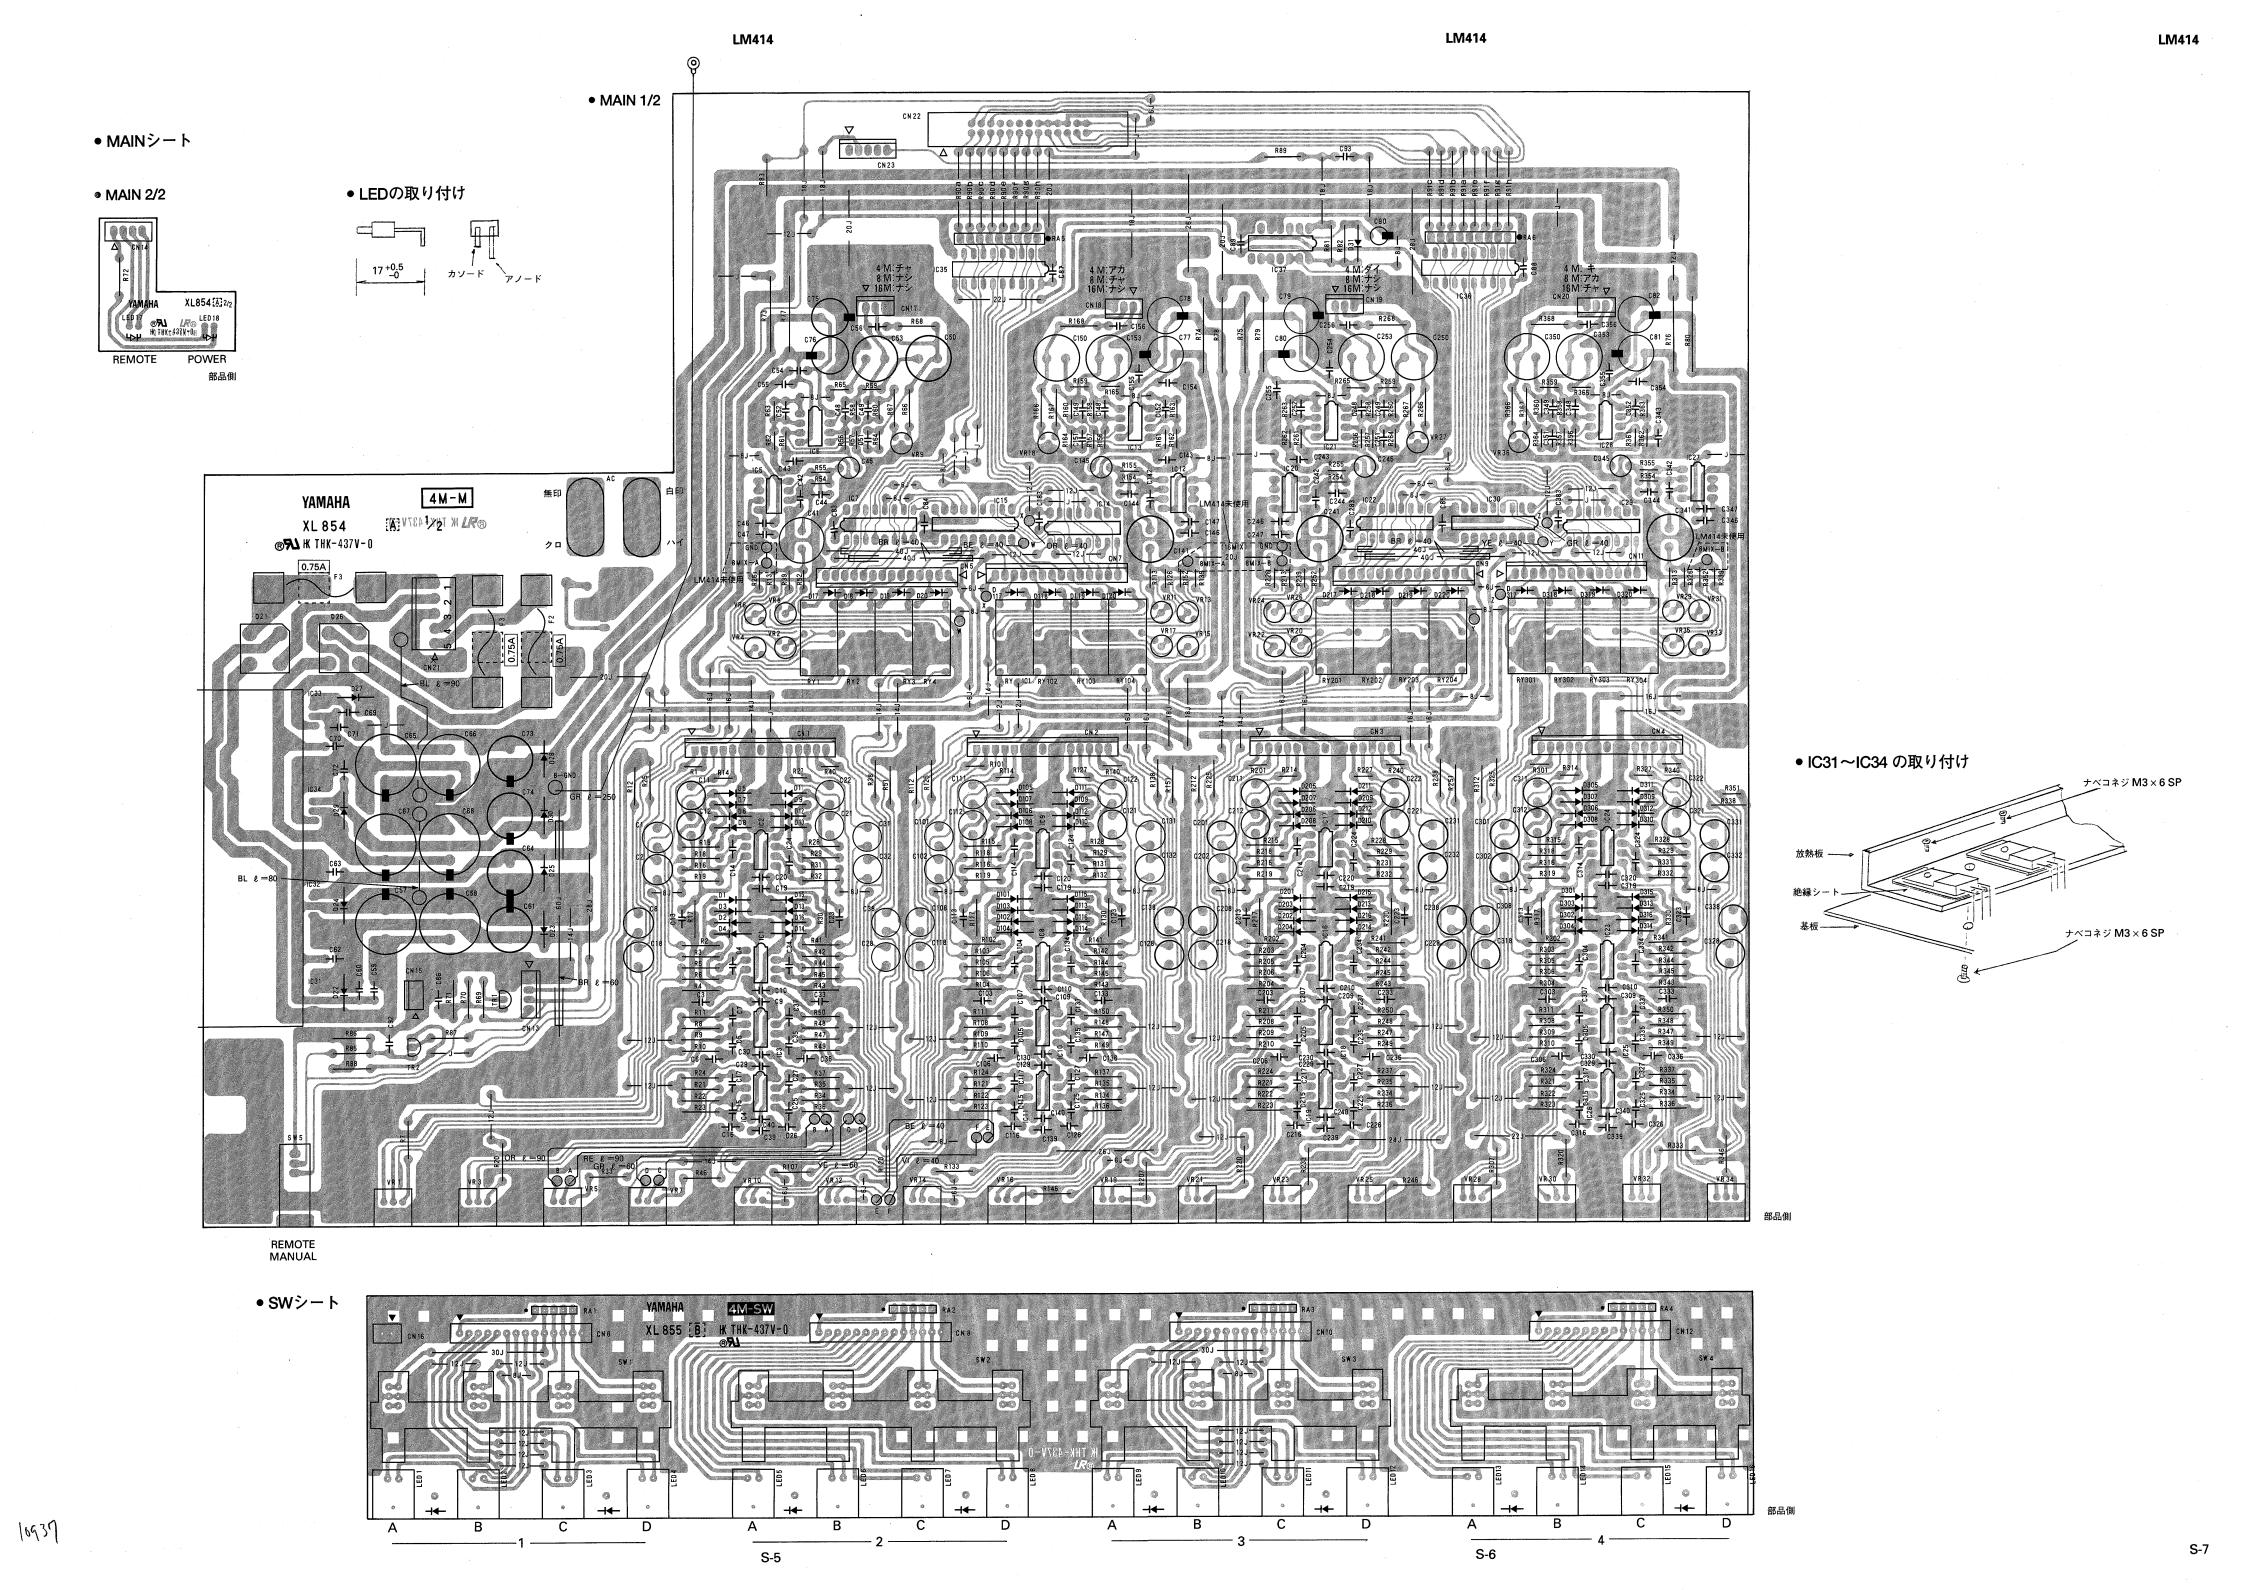


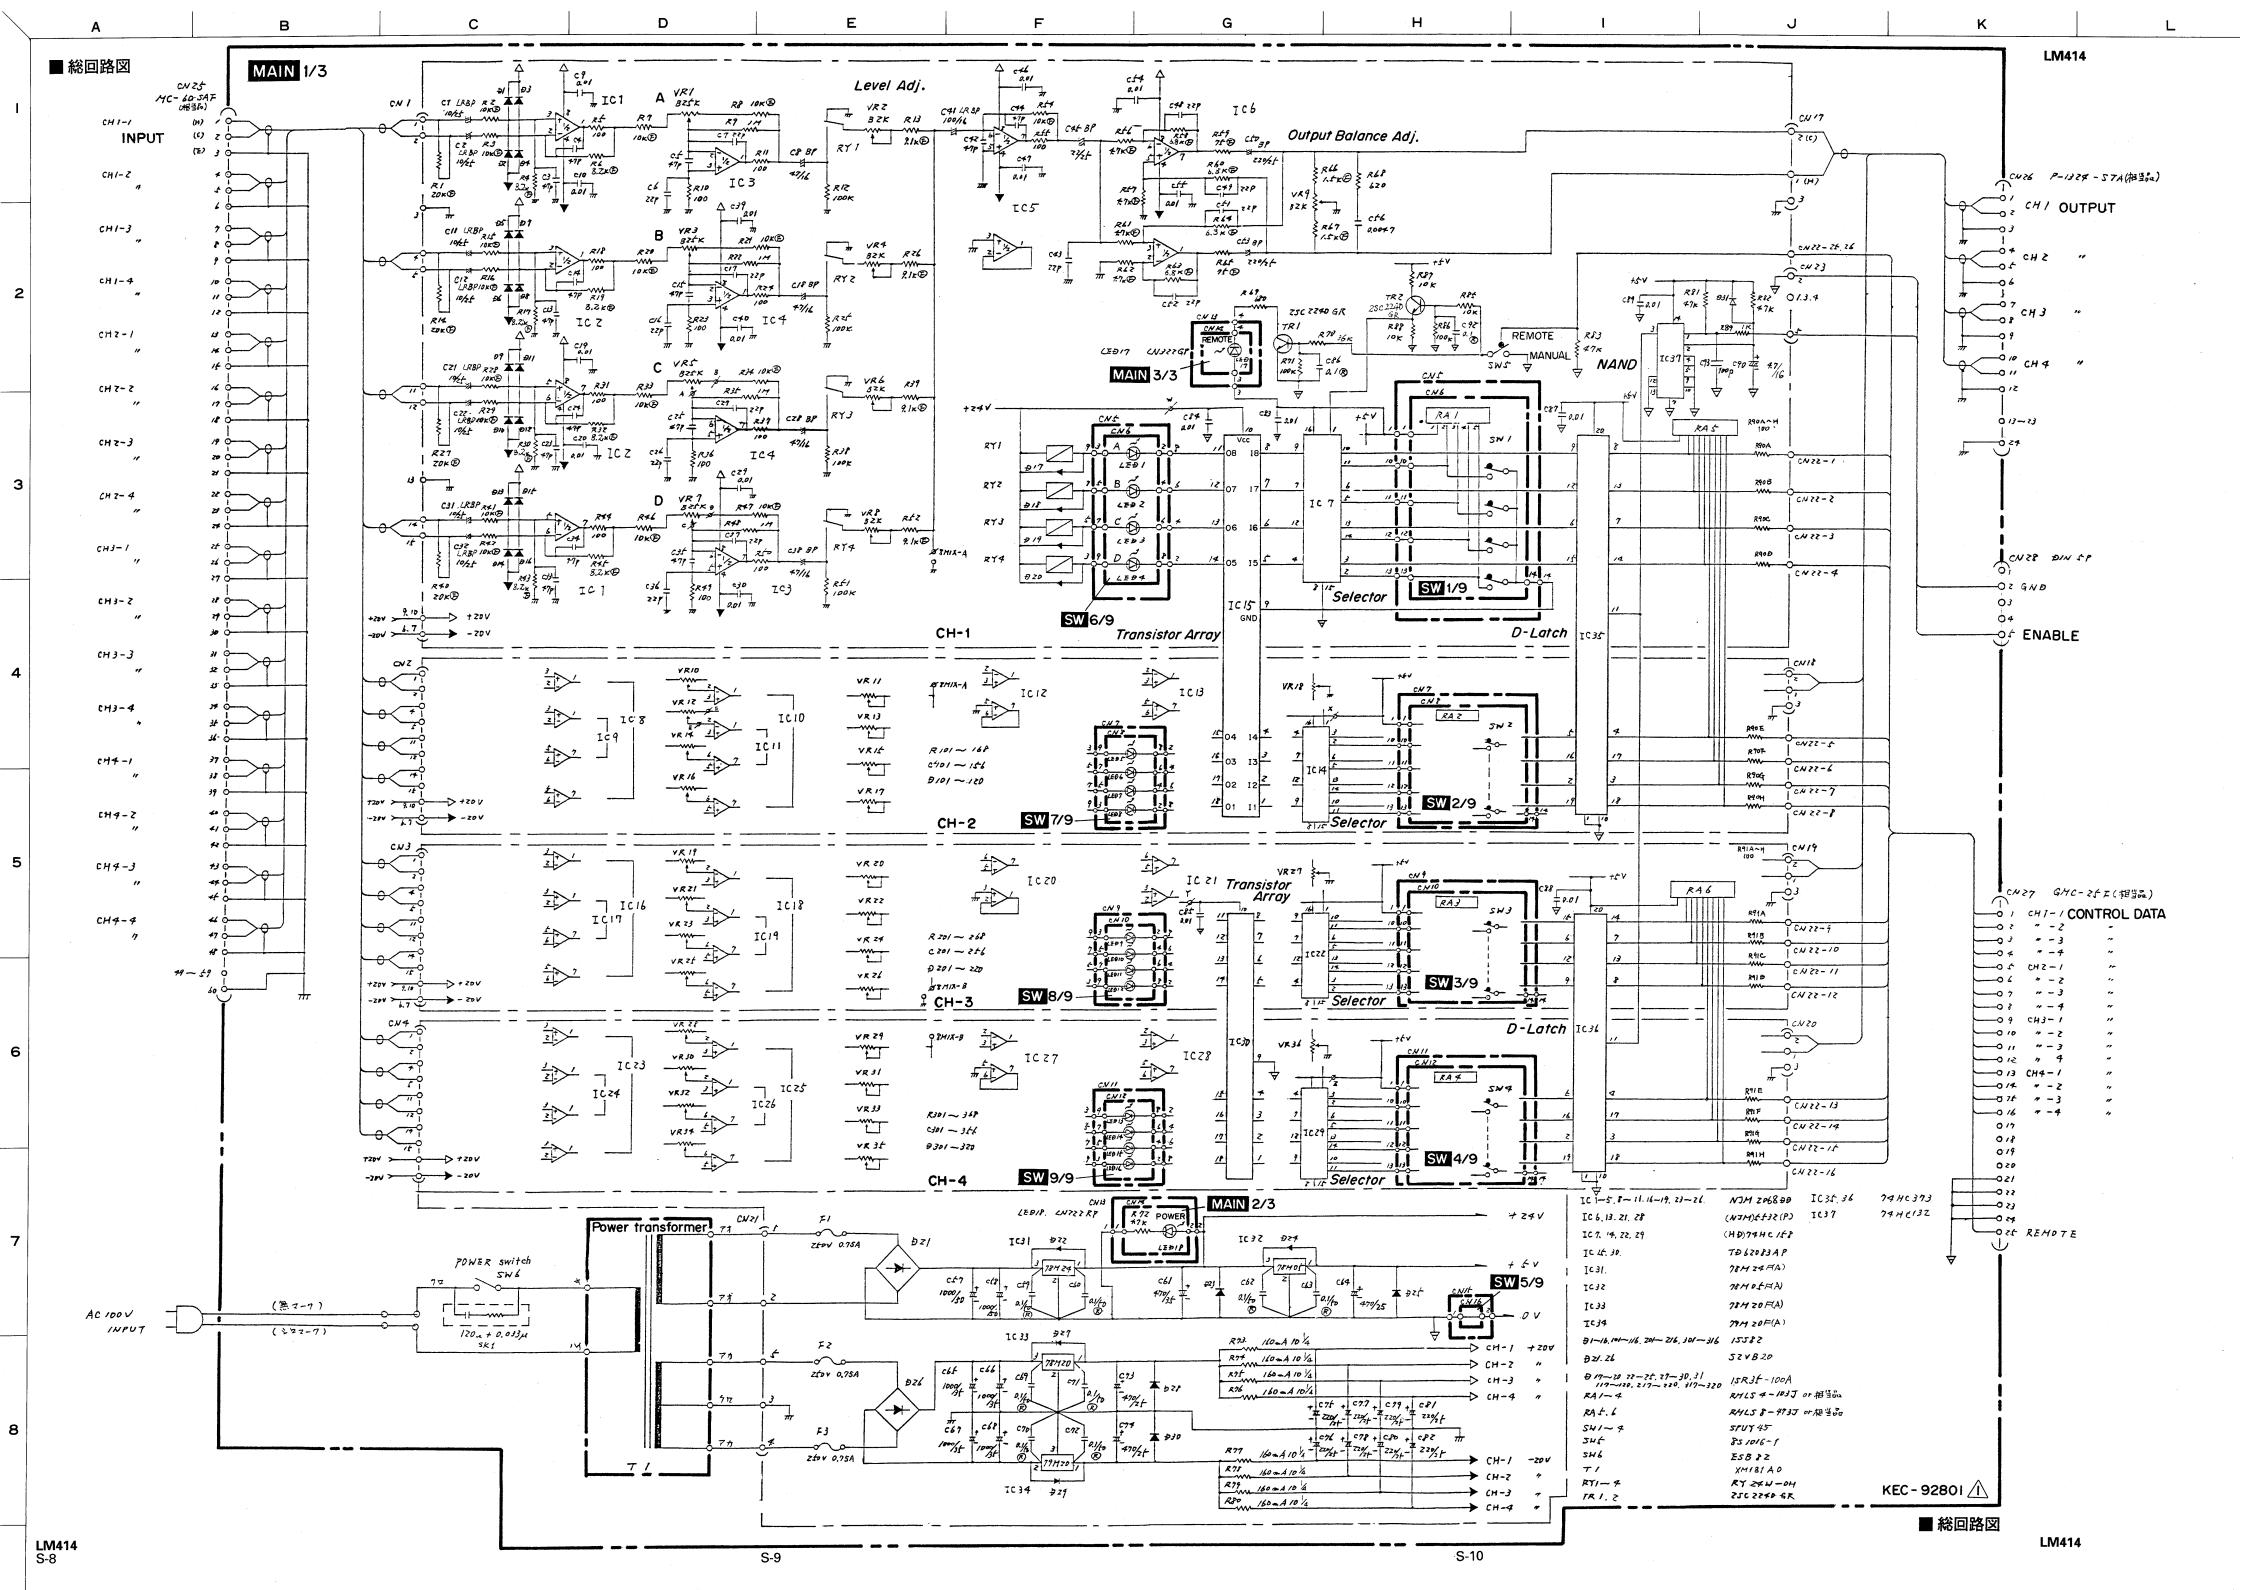


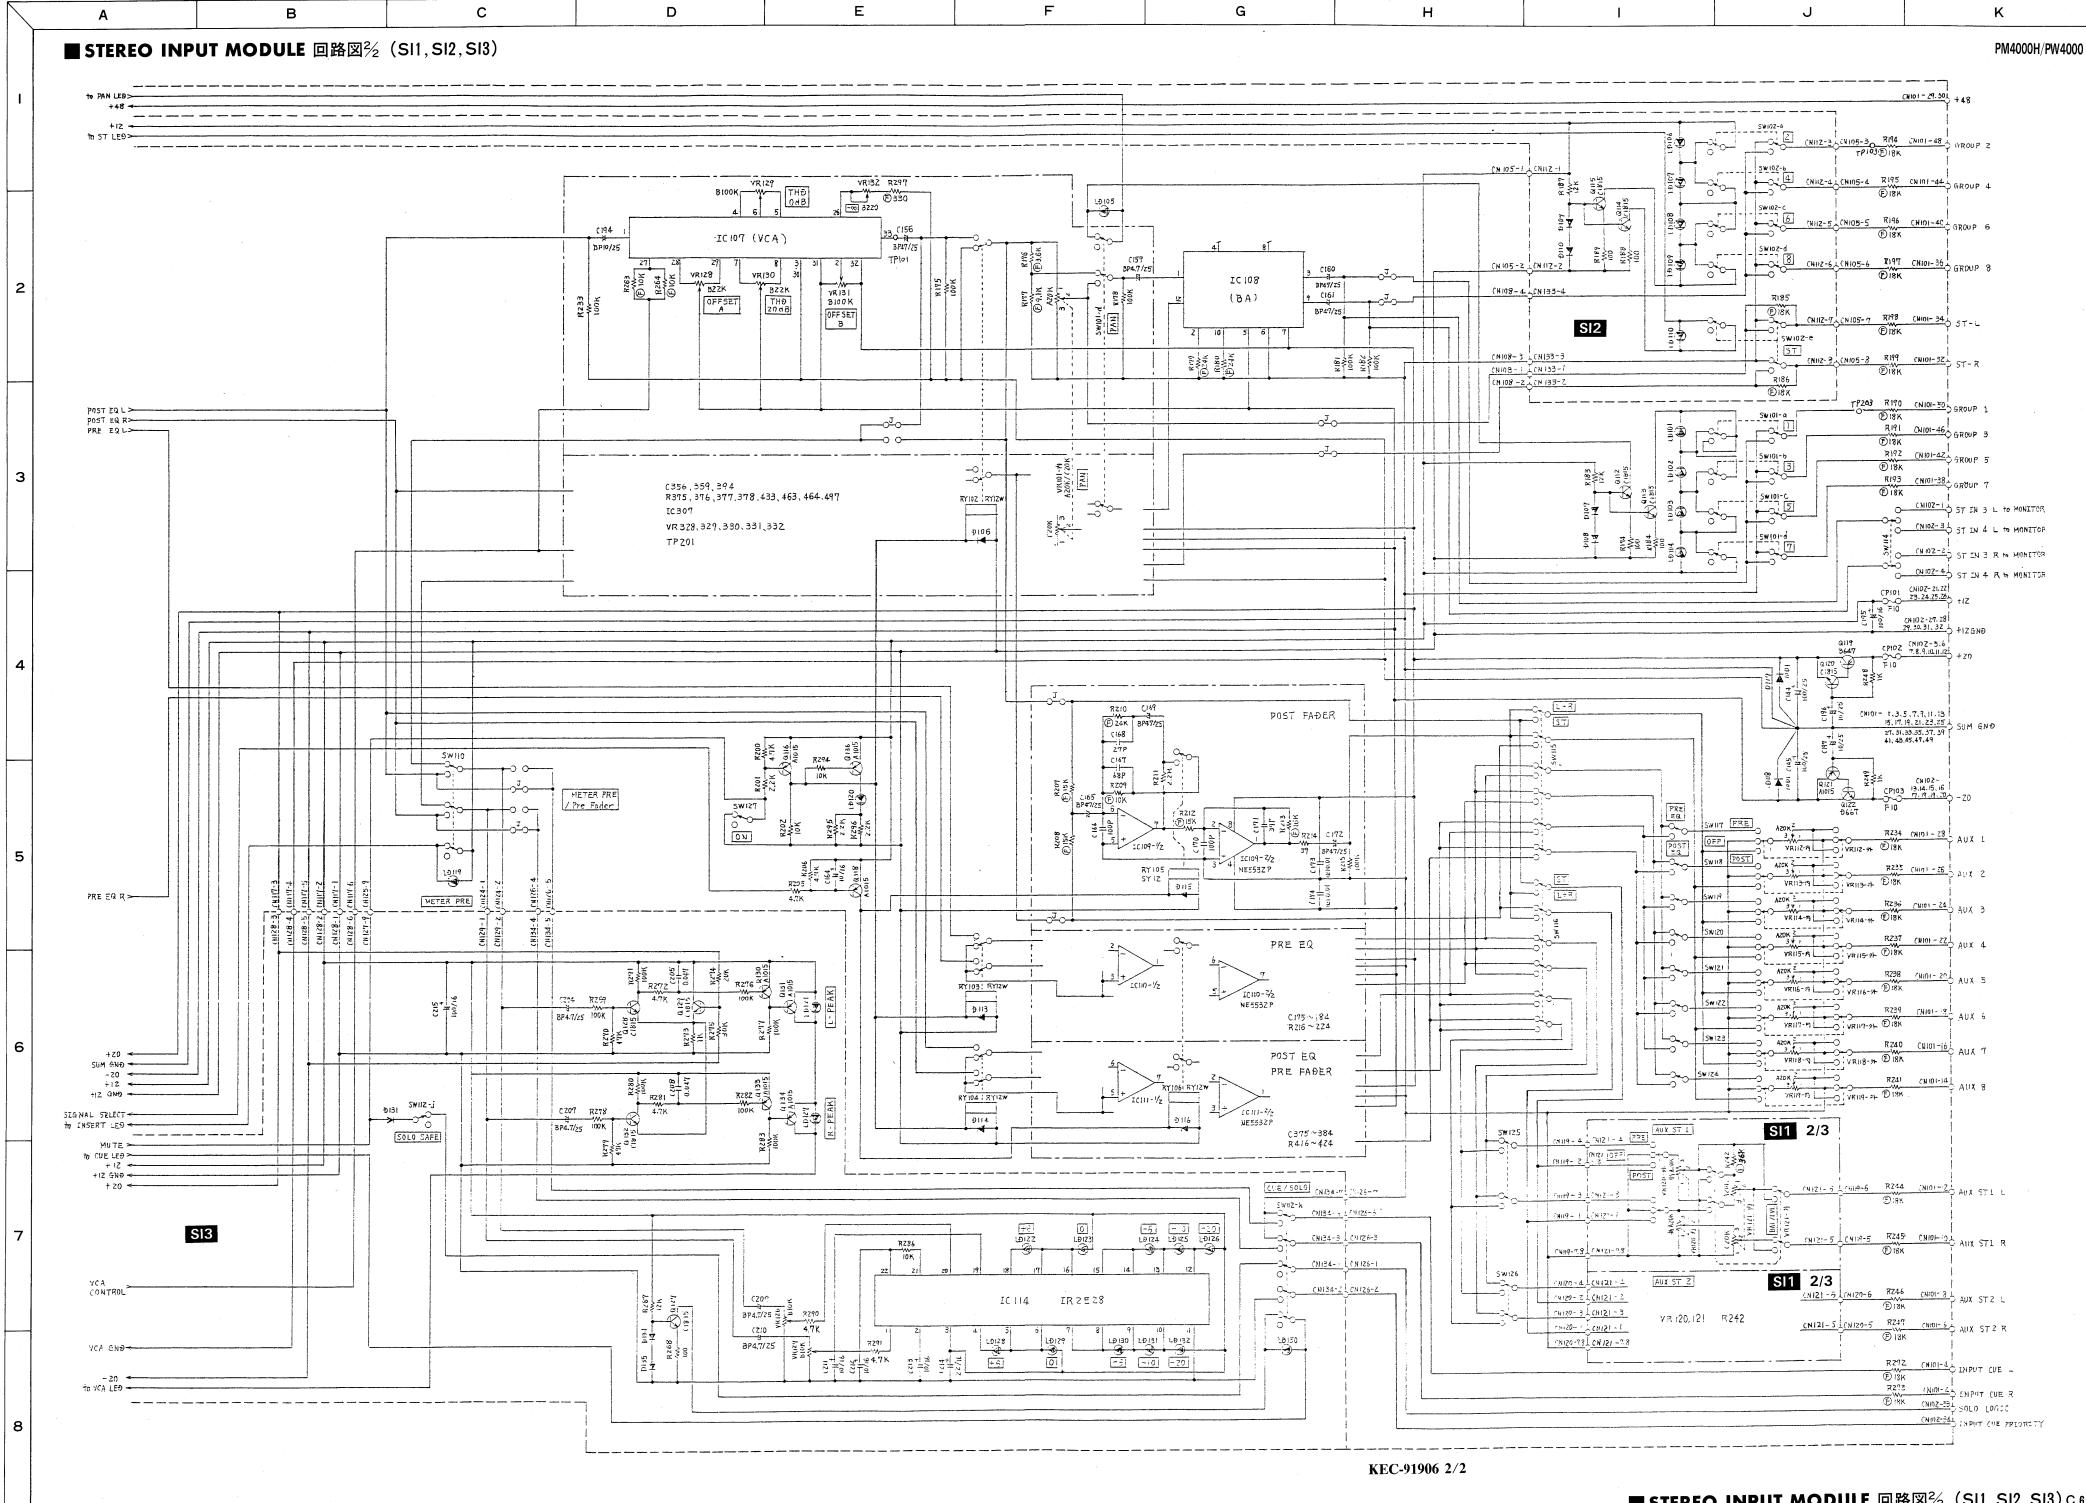


PM4000H/PW4000


■ MASTER MODULE (MAS1, MAS2)

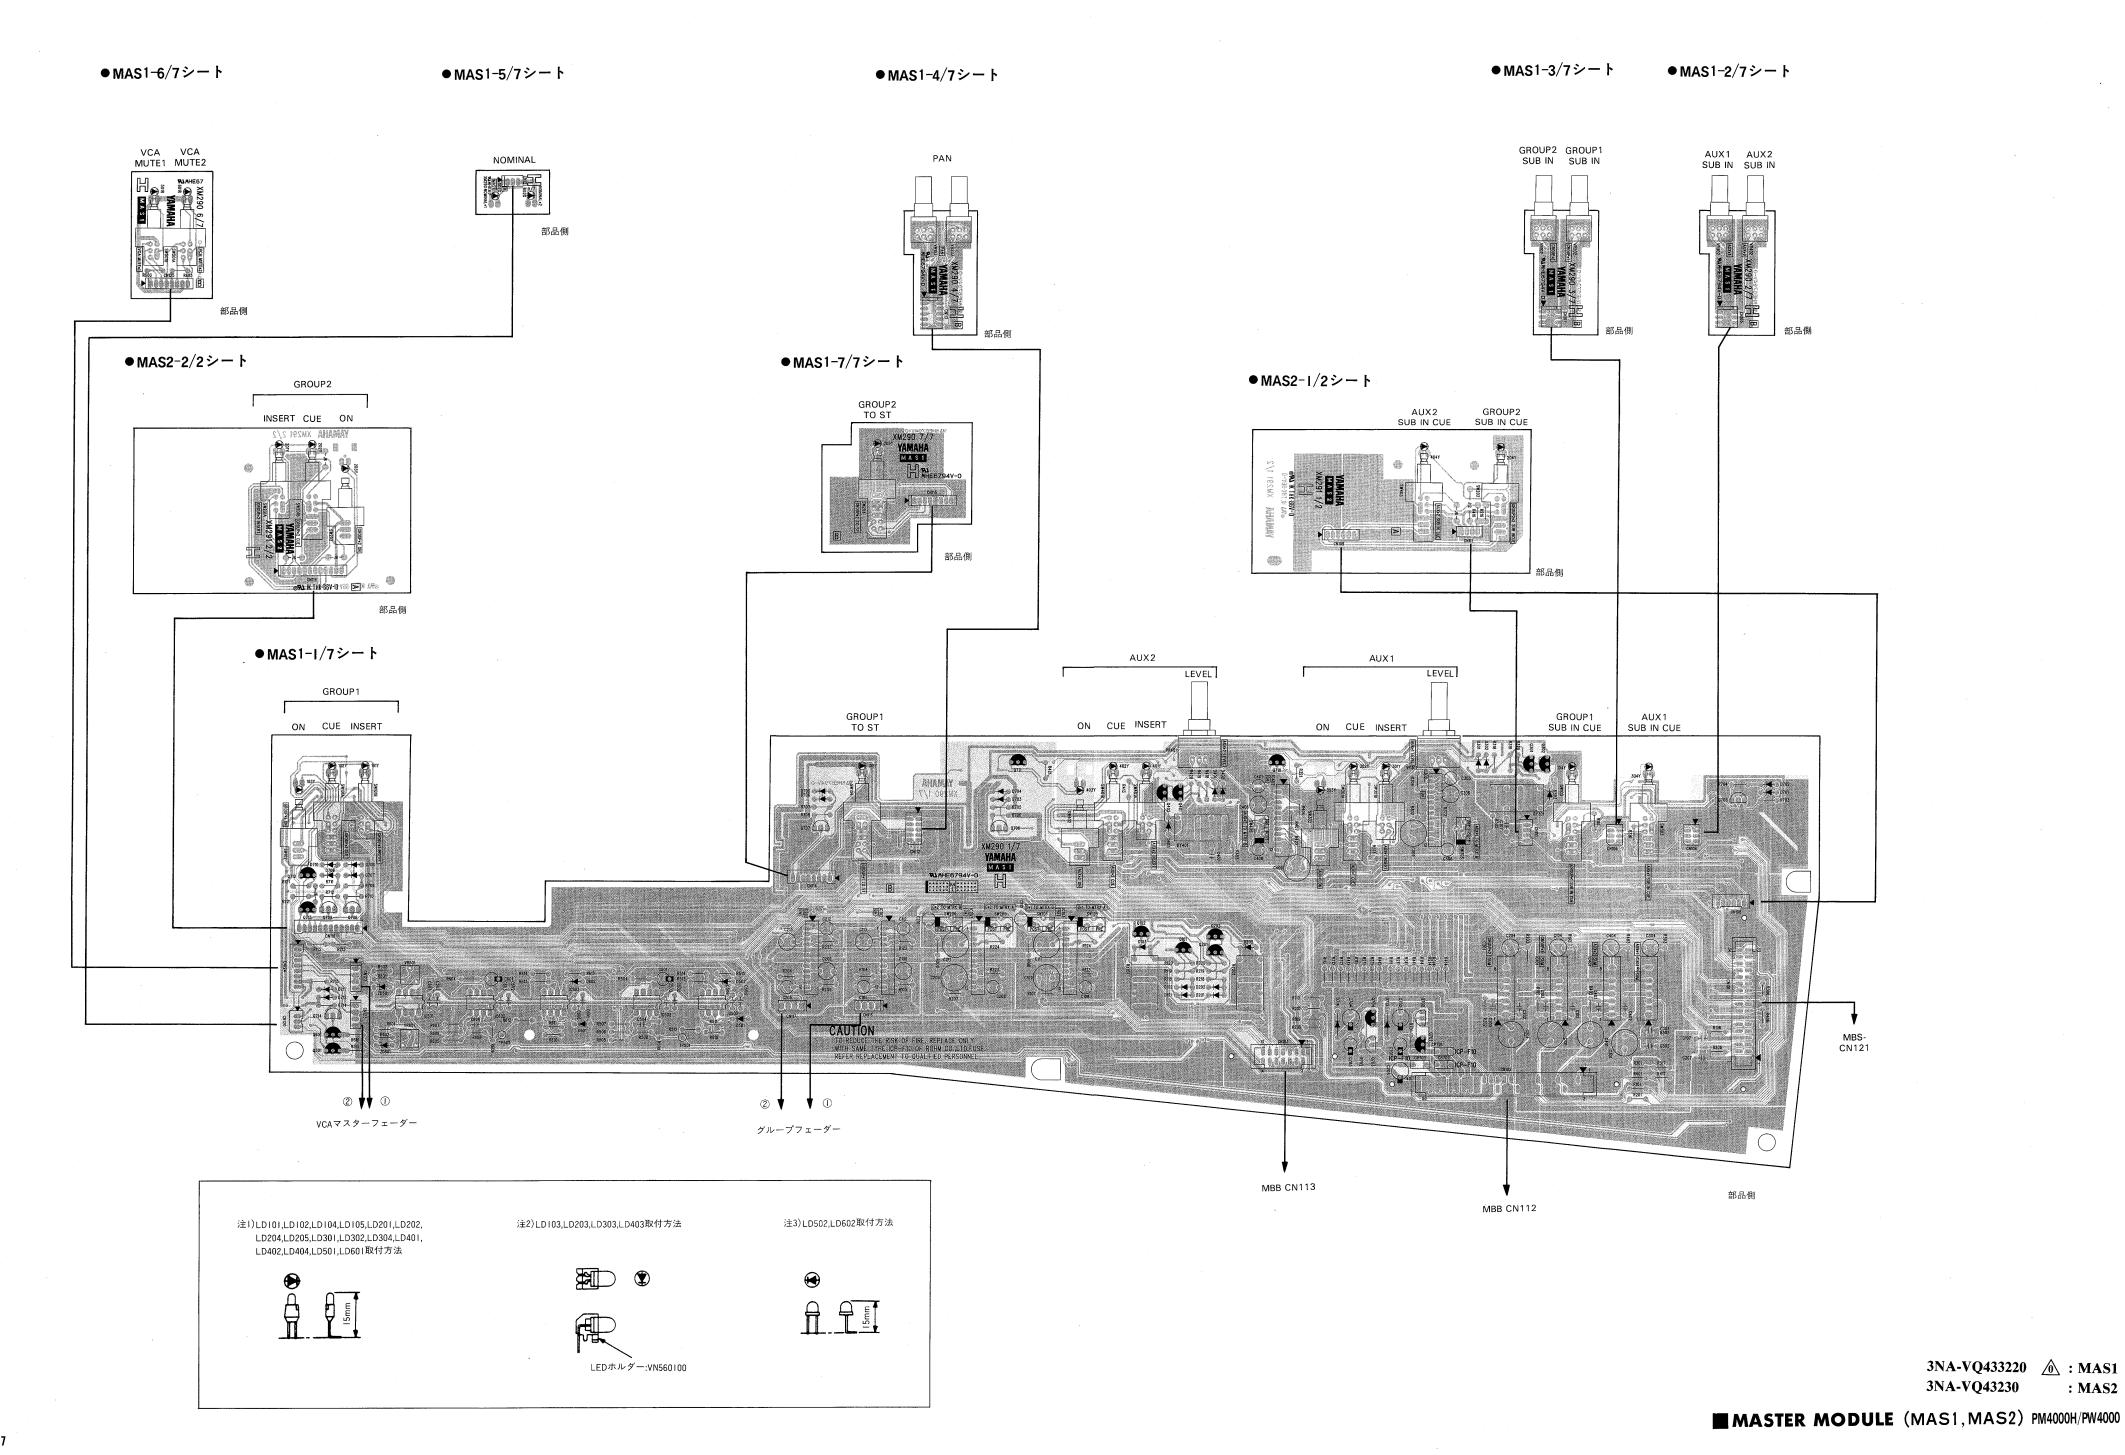

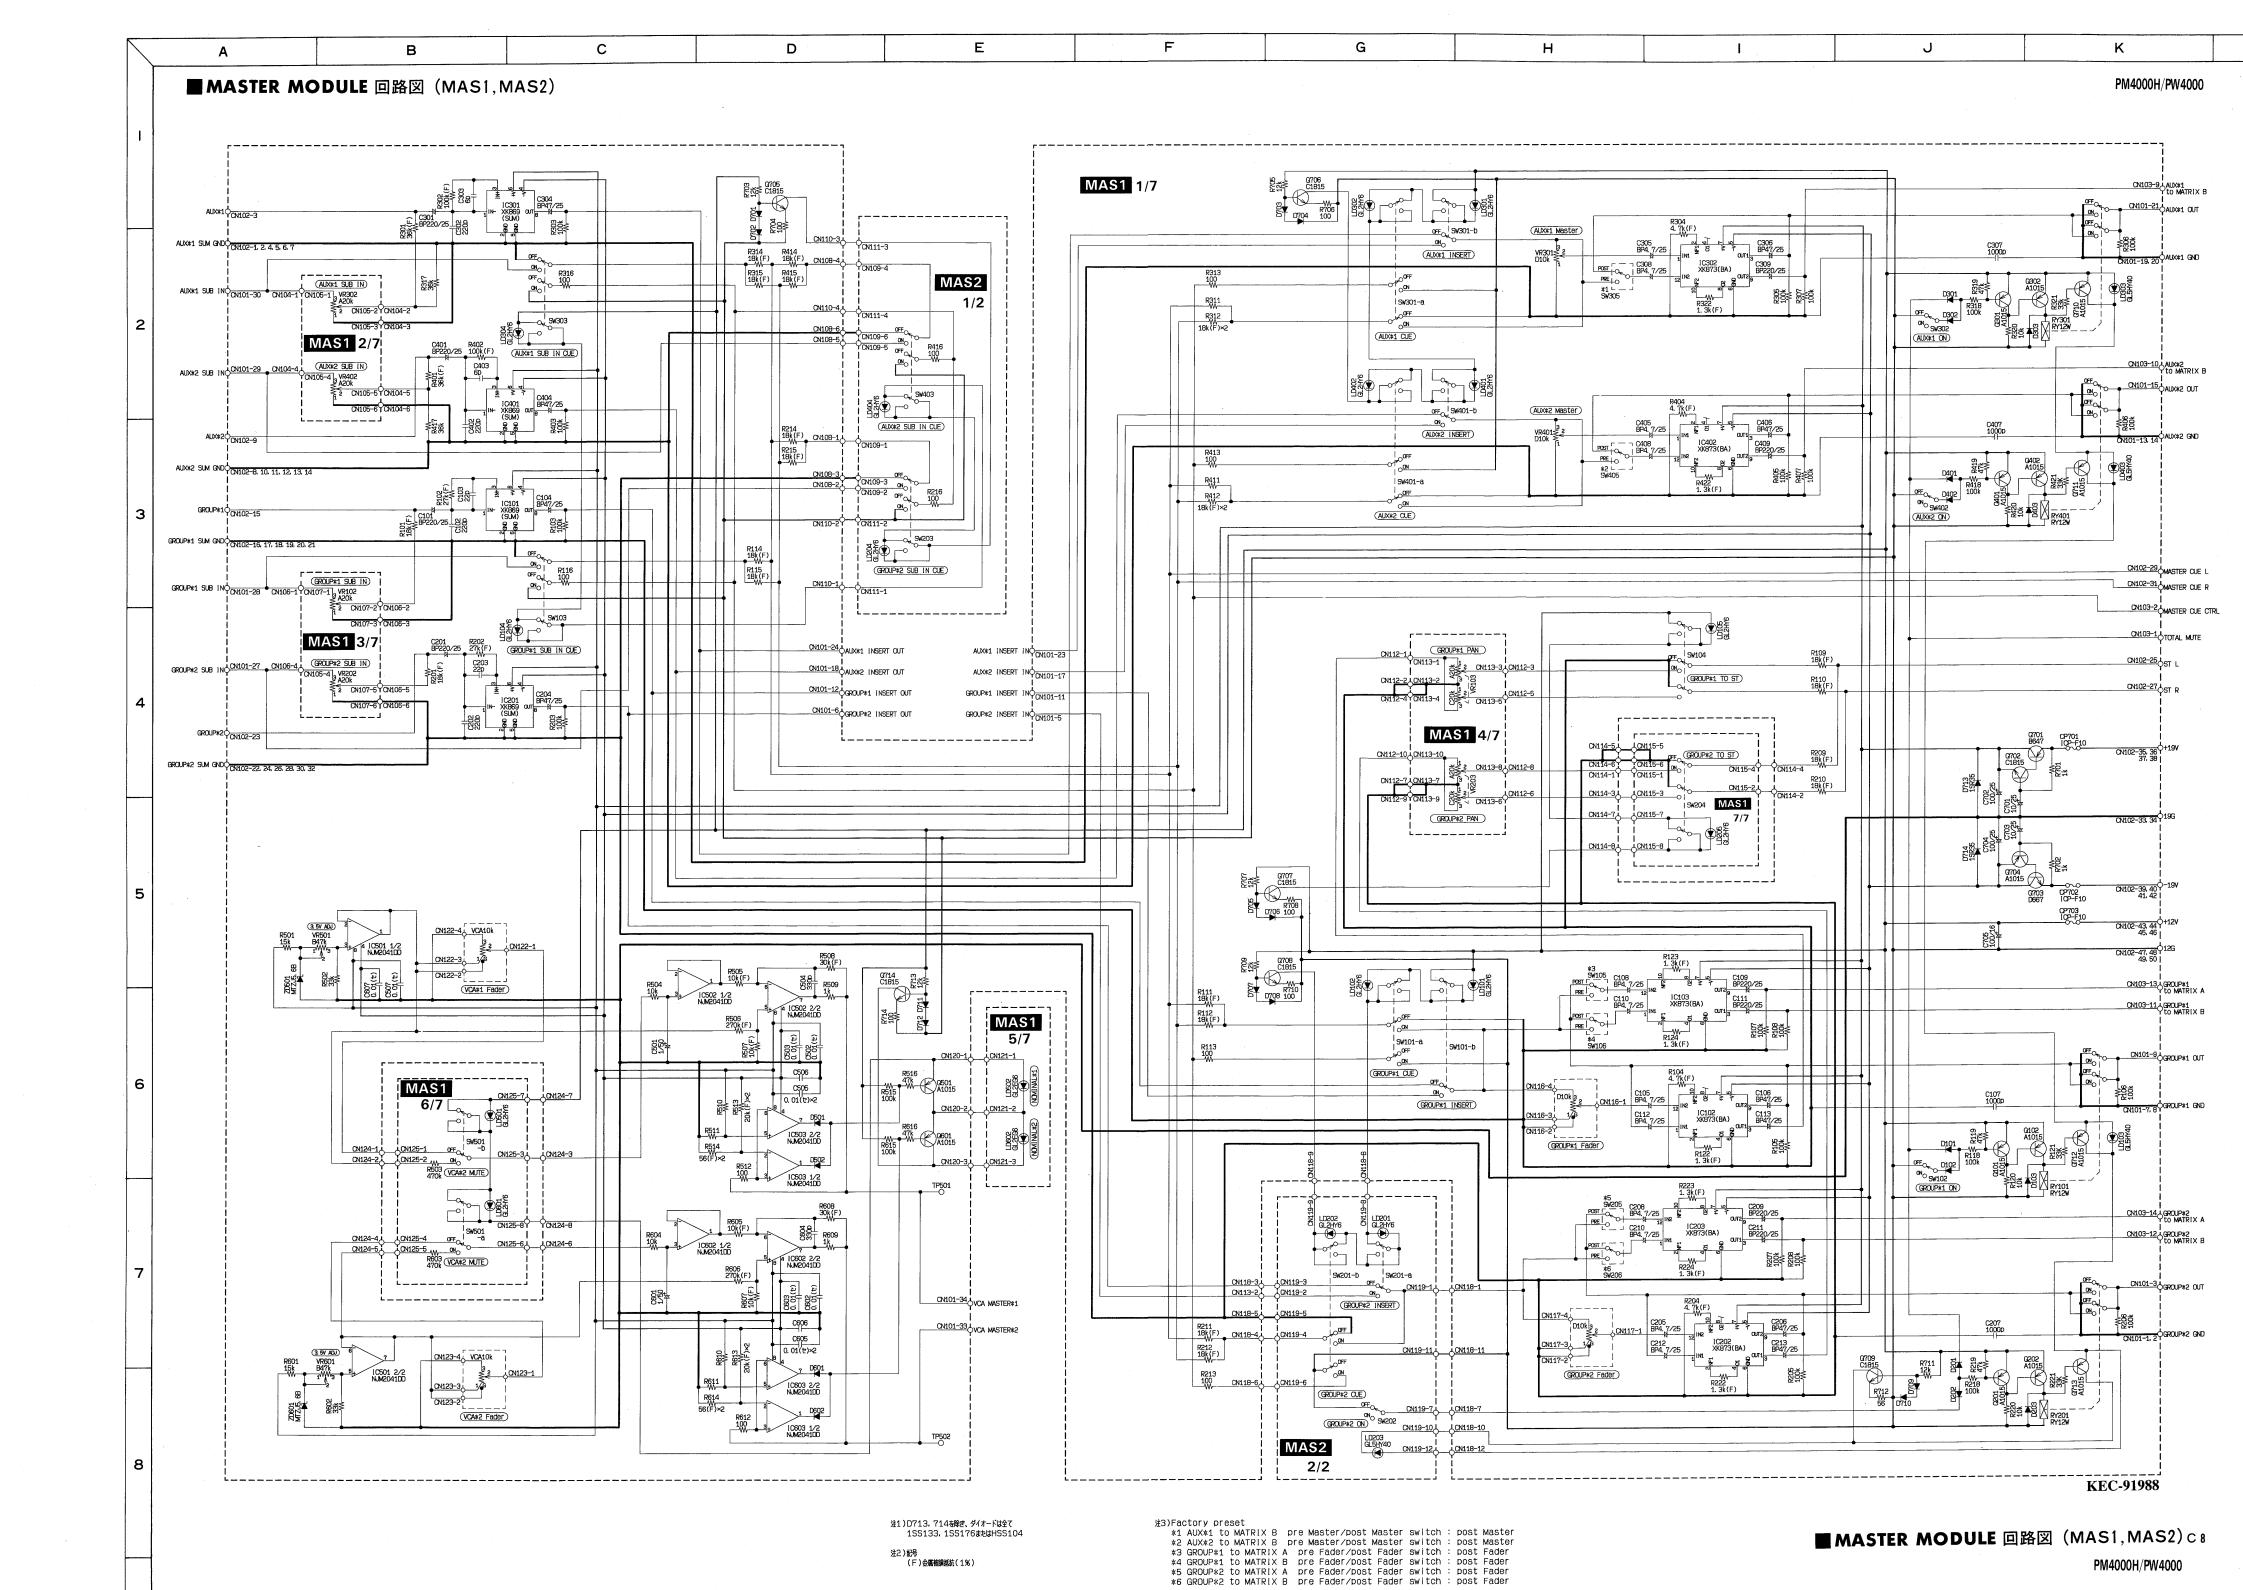



■ STEREO MASTER MODULE (ST1,ST2)

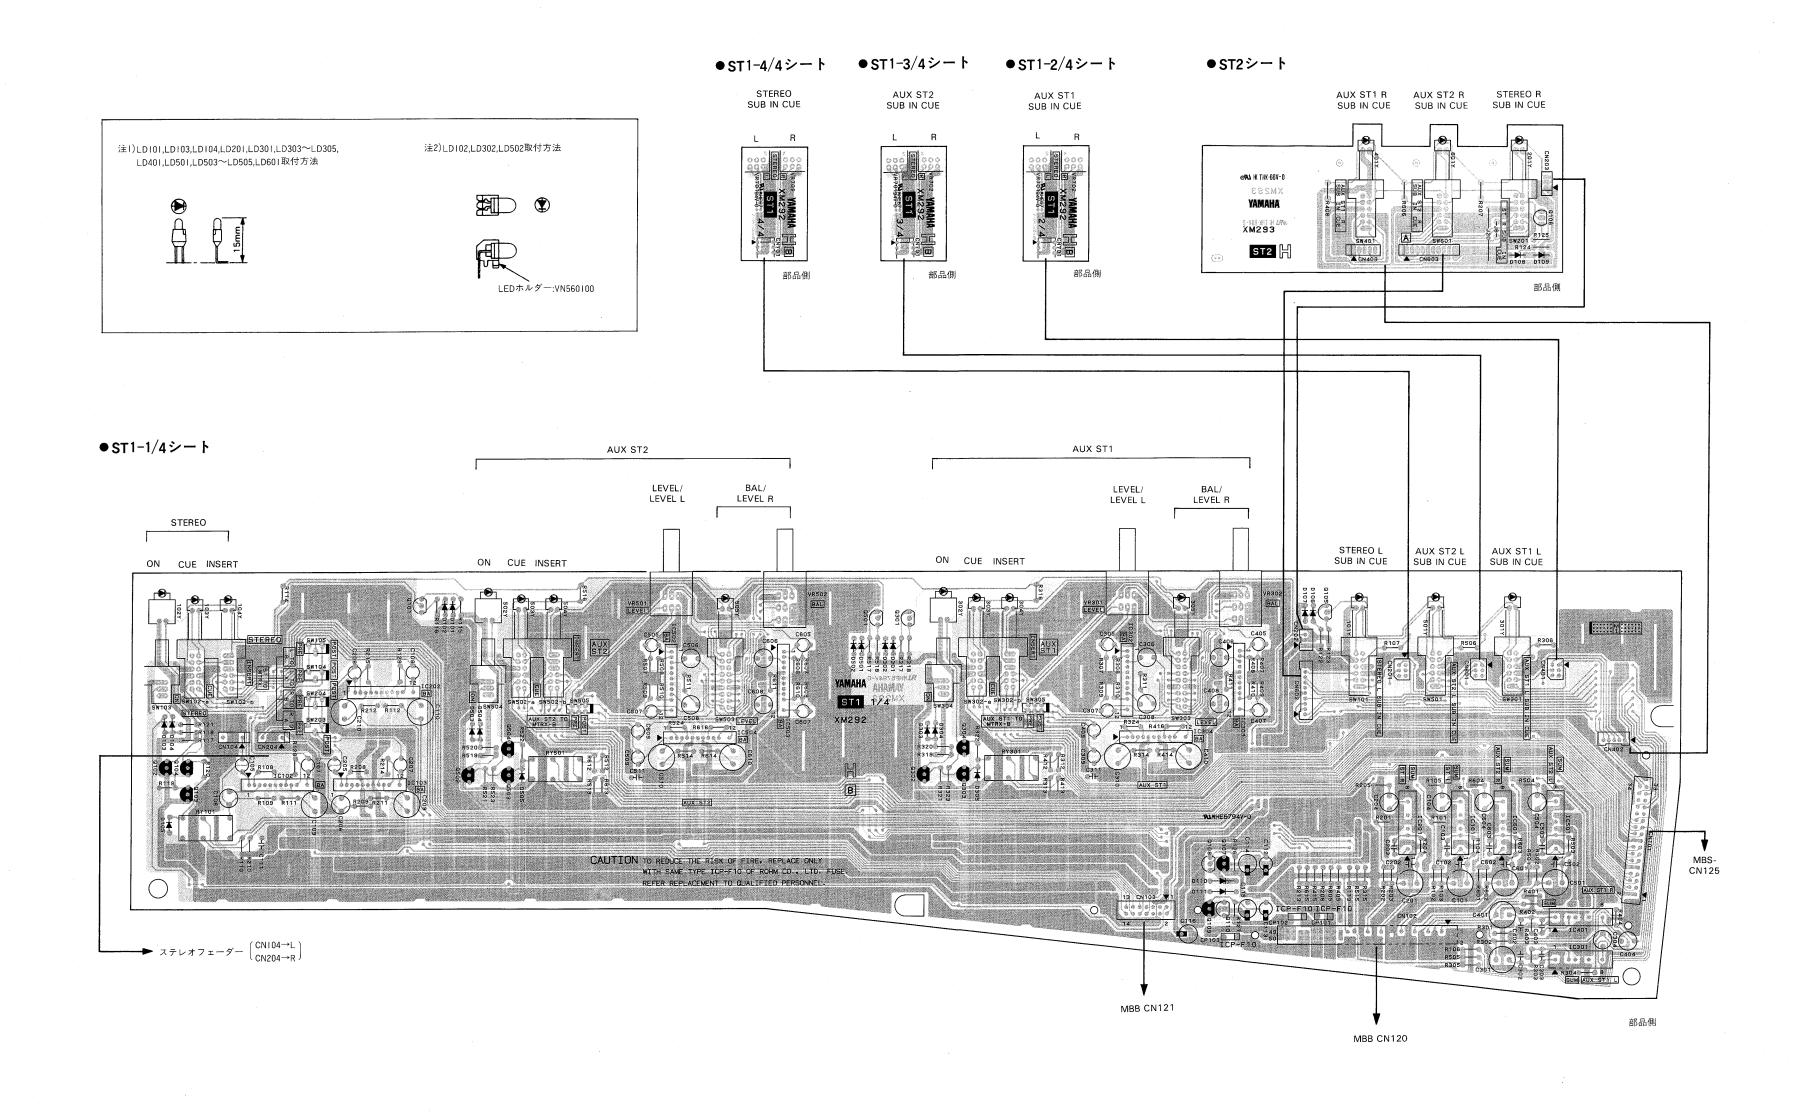

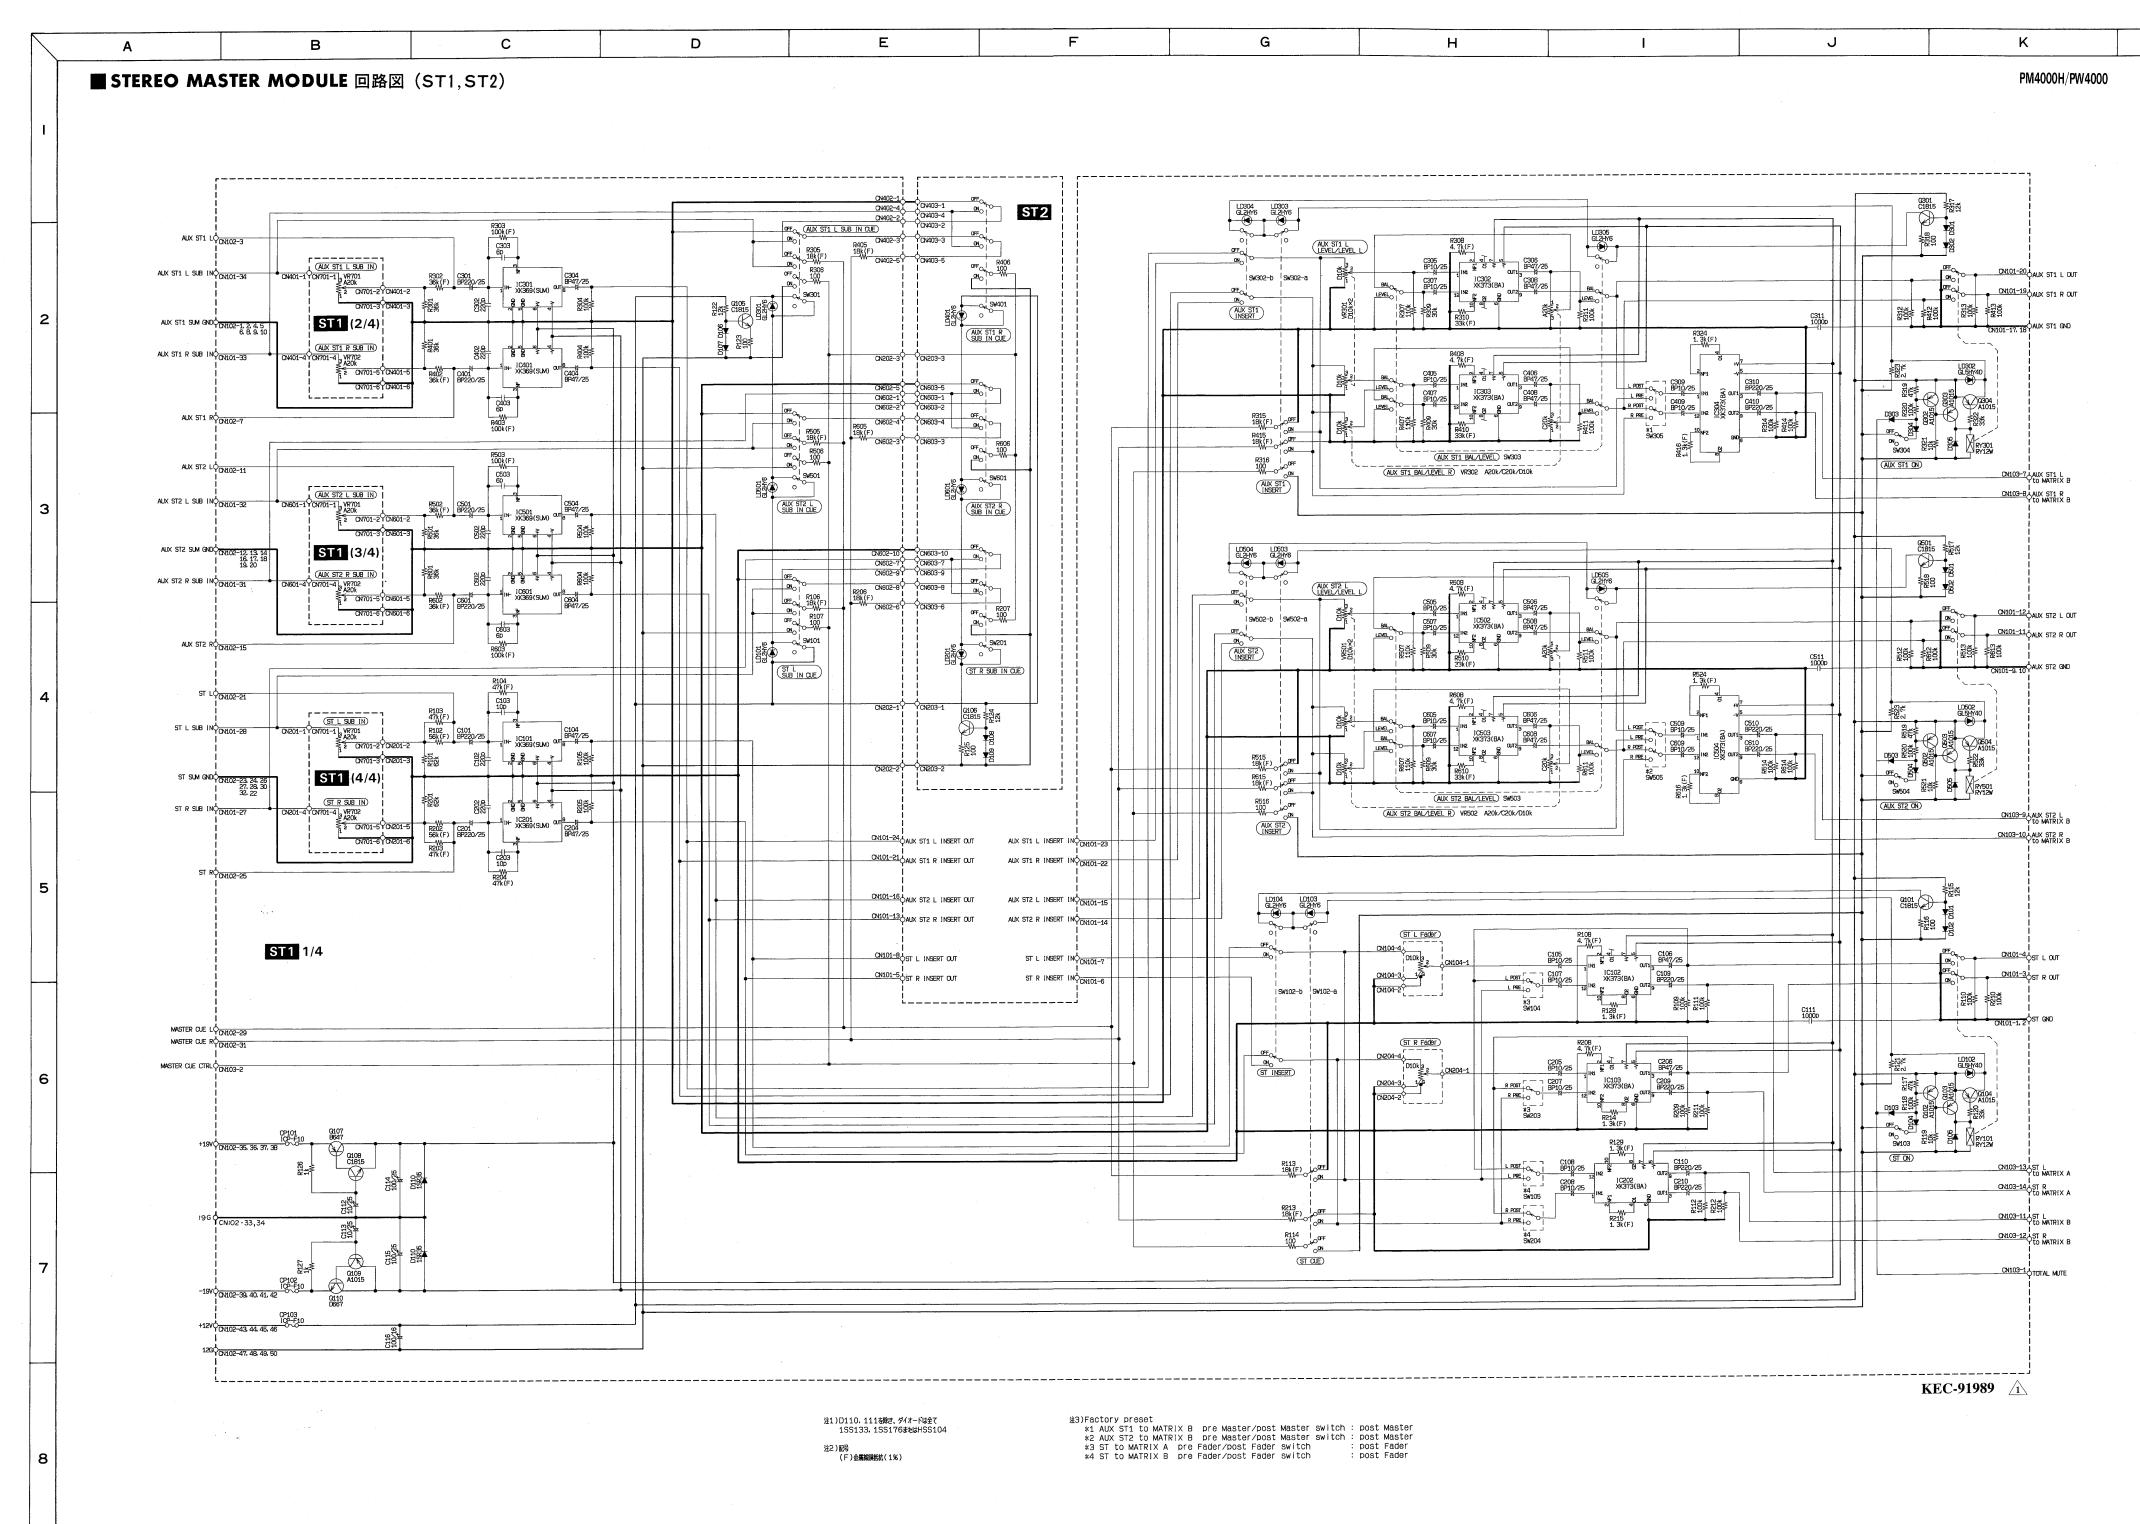



■ MONITOR 1 MODULE (MON1, MON3, MON4)

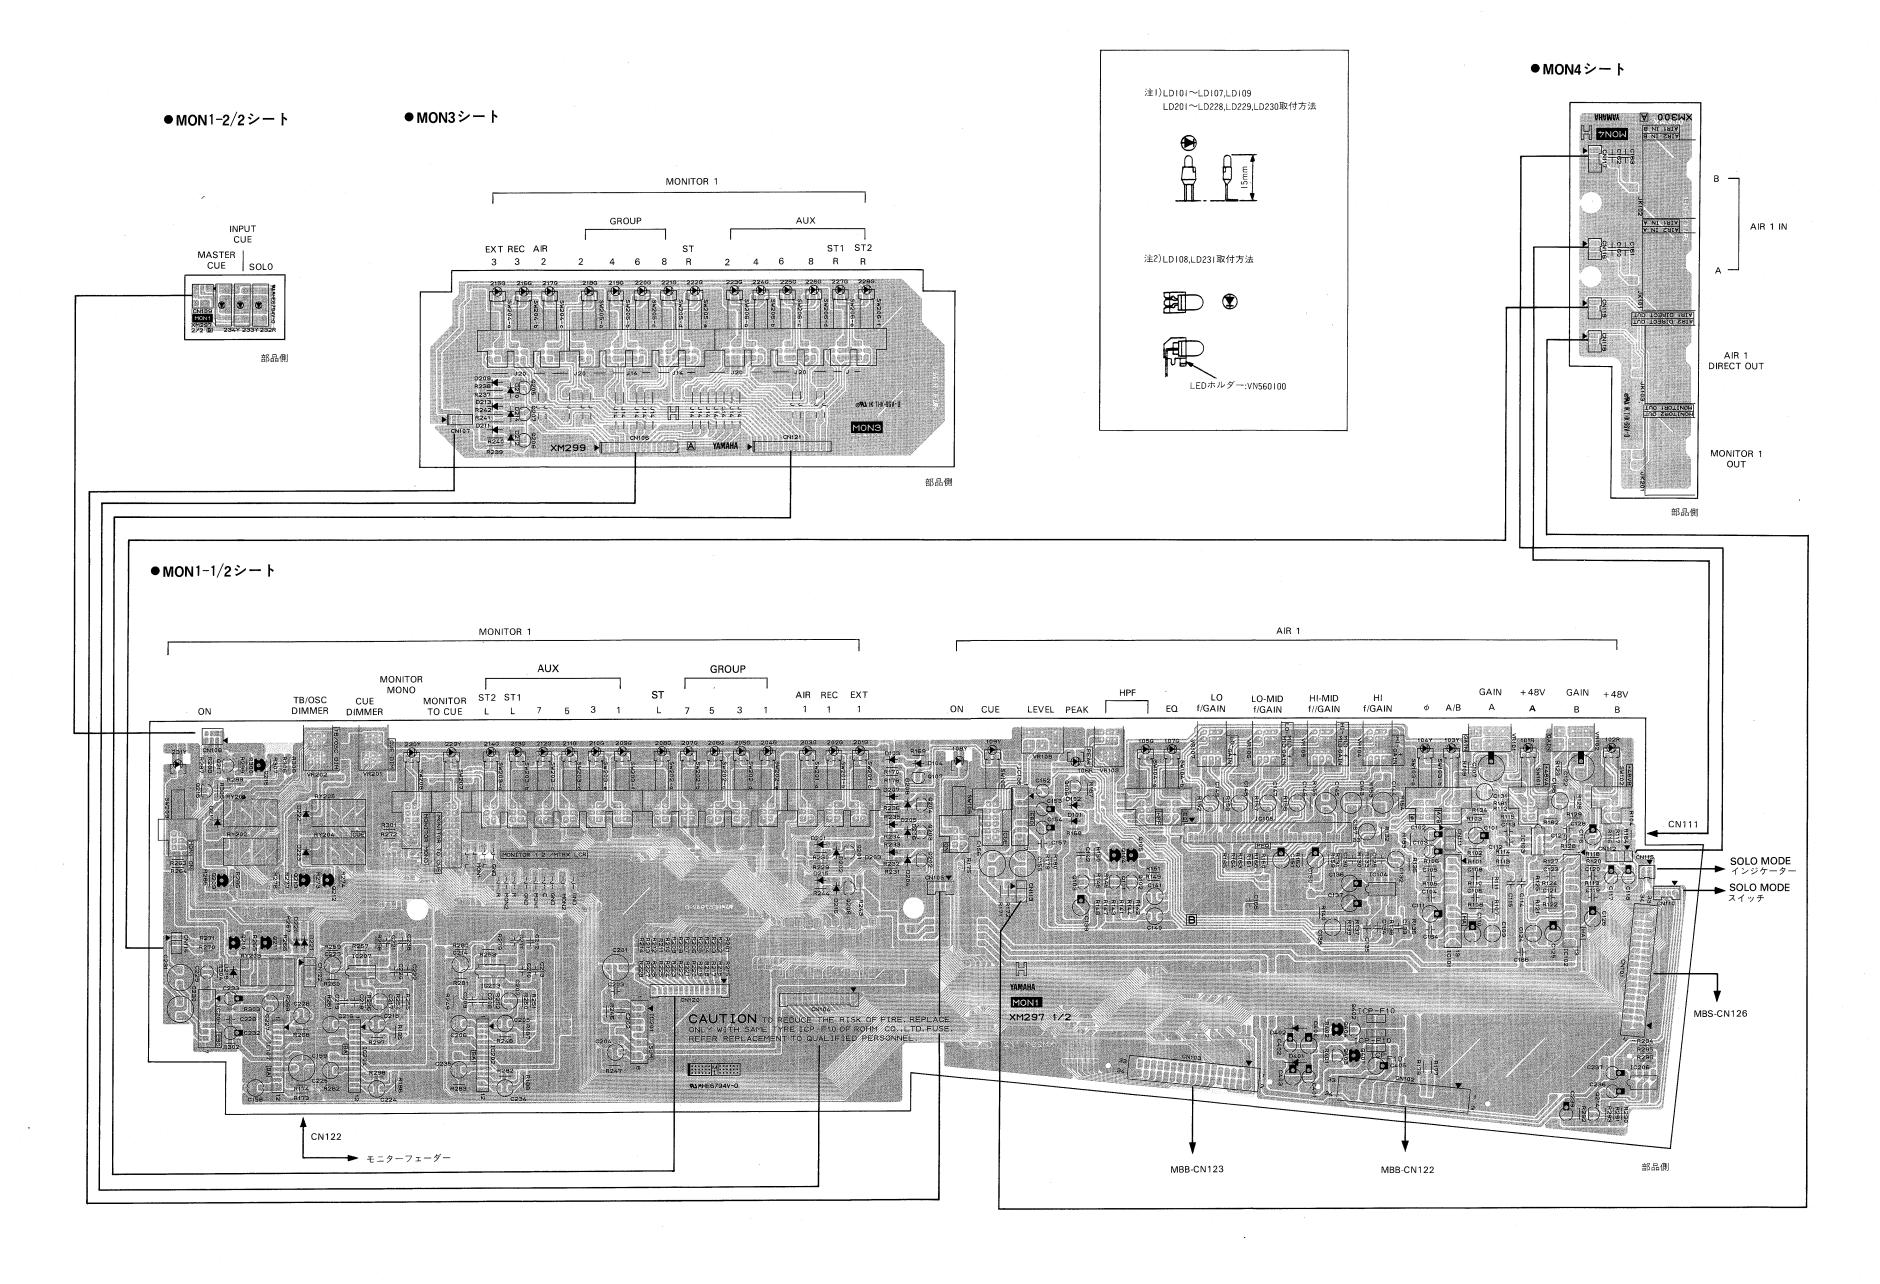

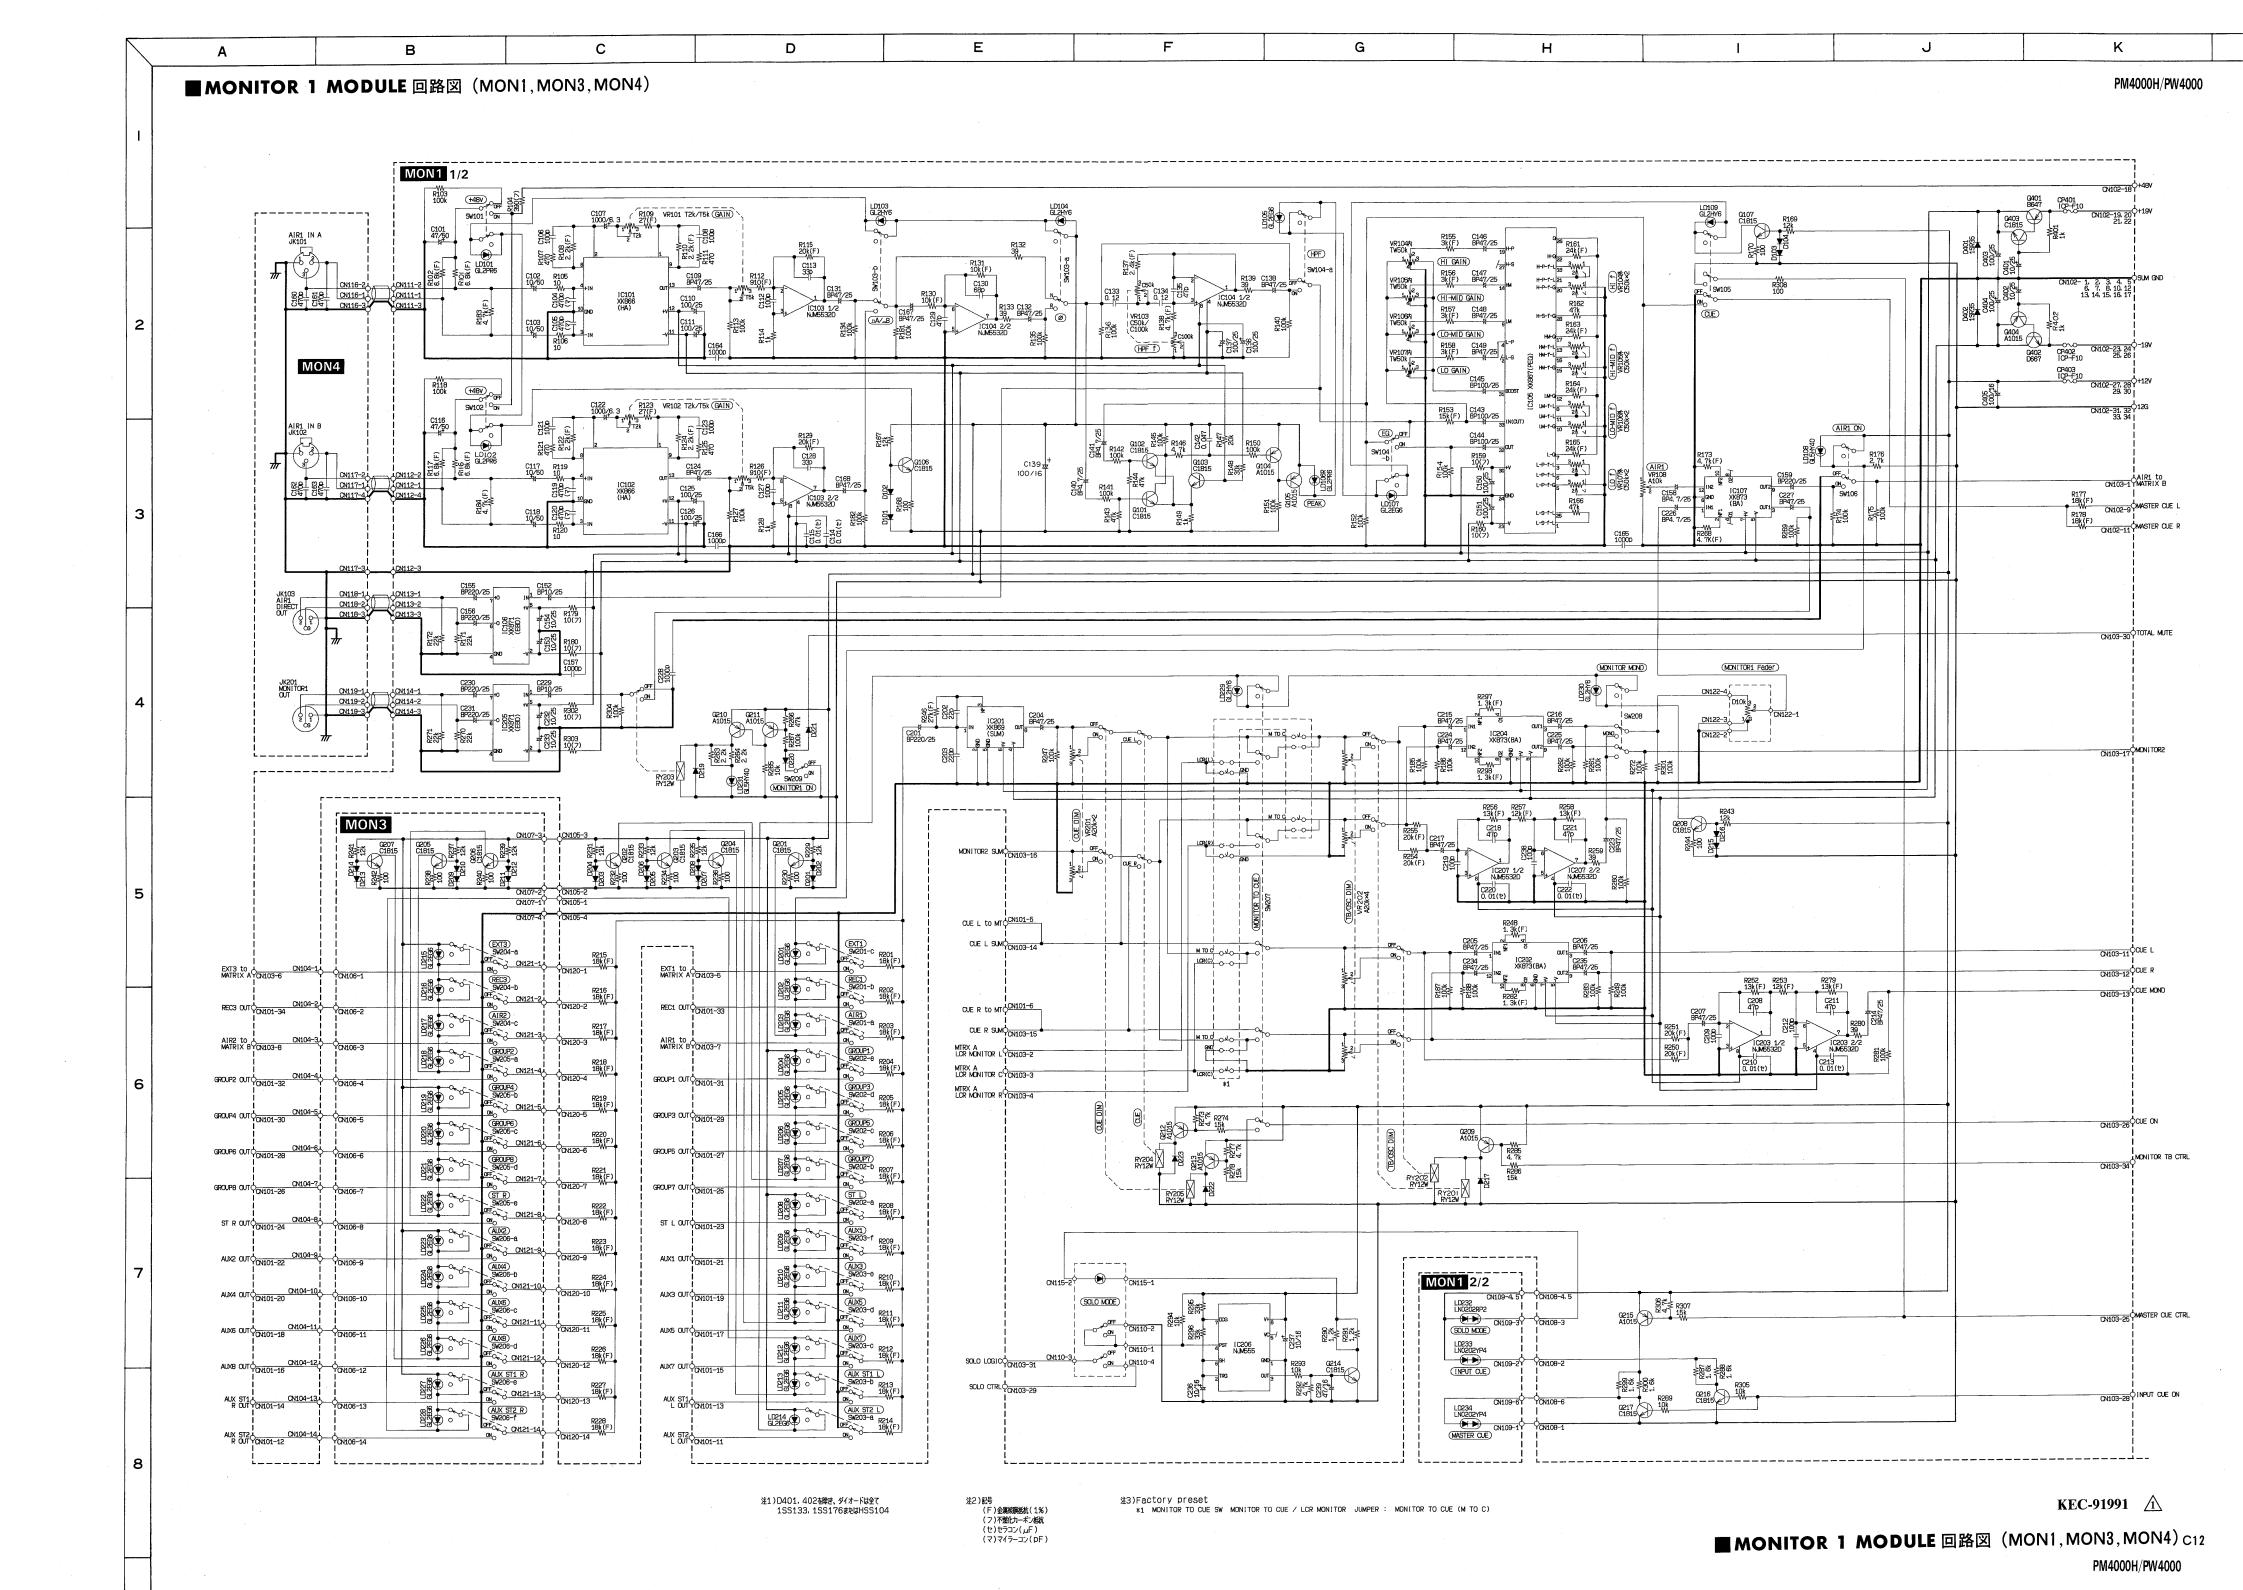

■ MONITOR 2 MODULE (MON2, MON3, MON4)

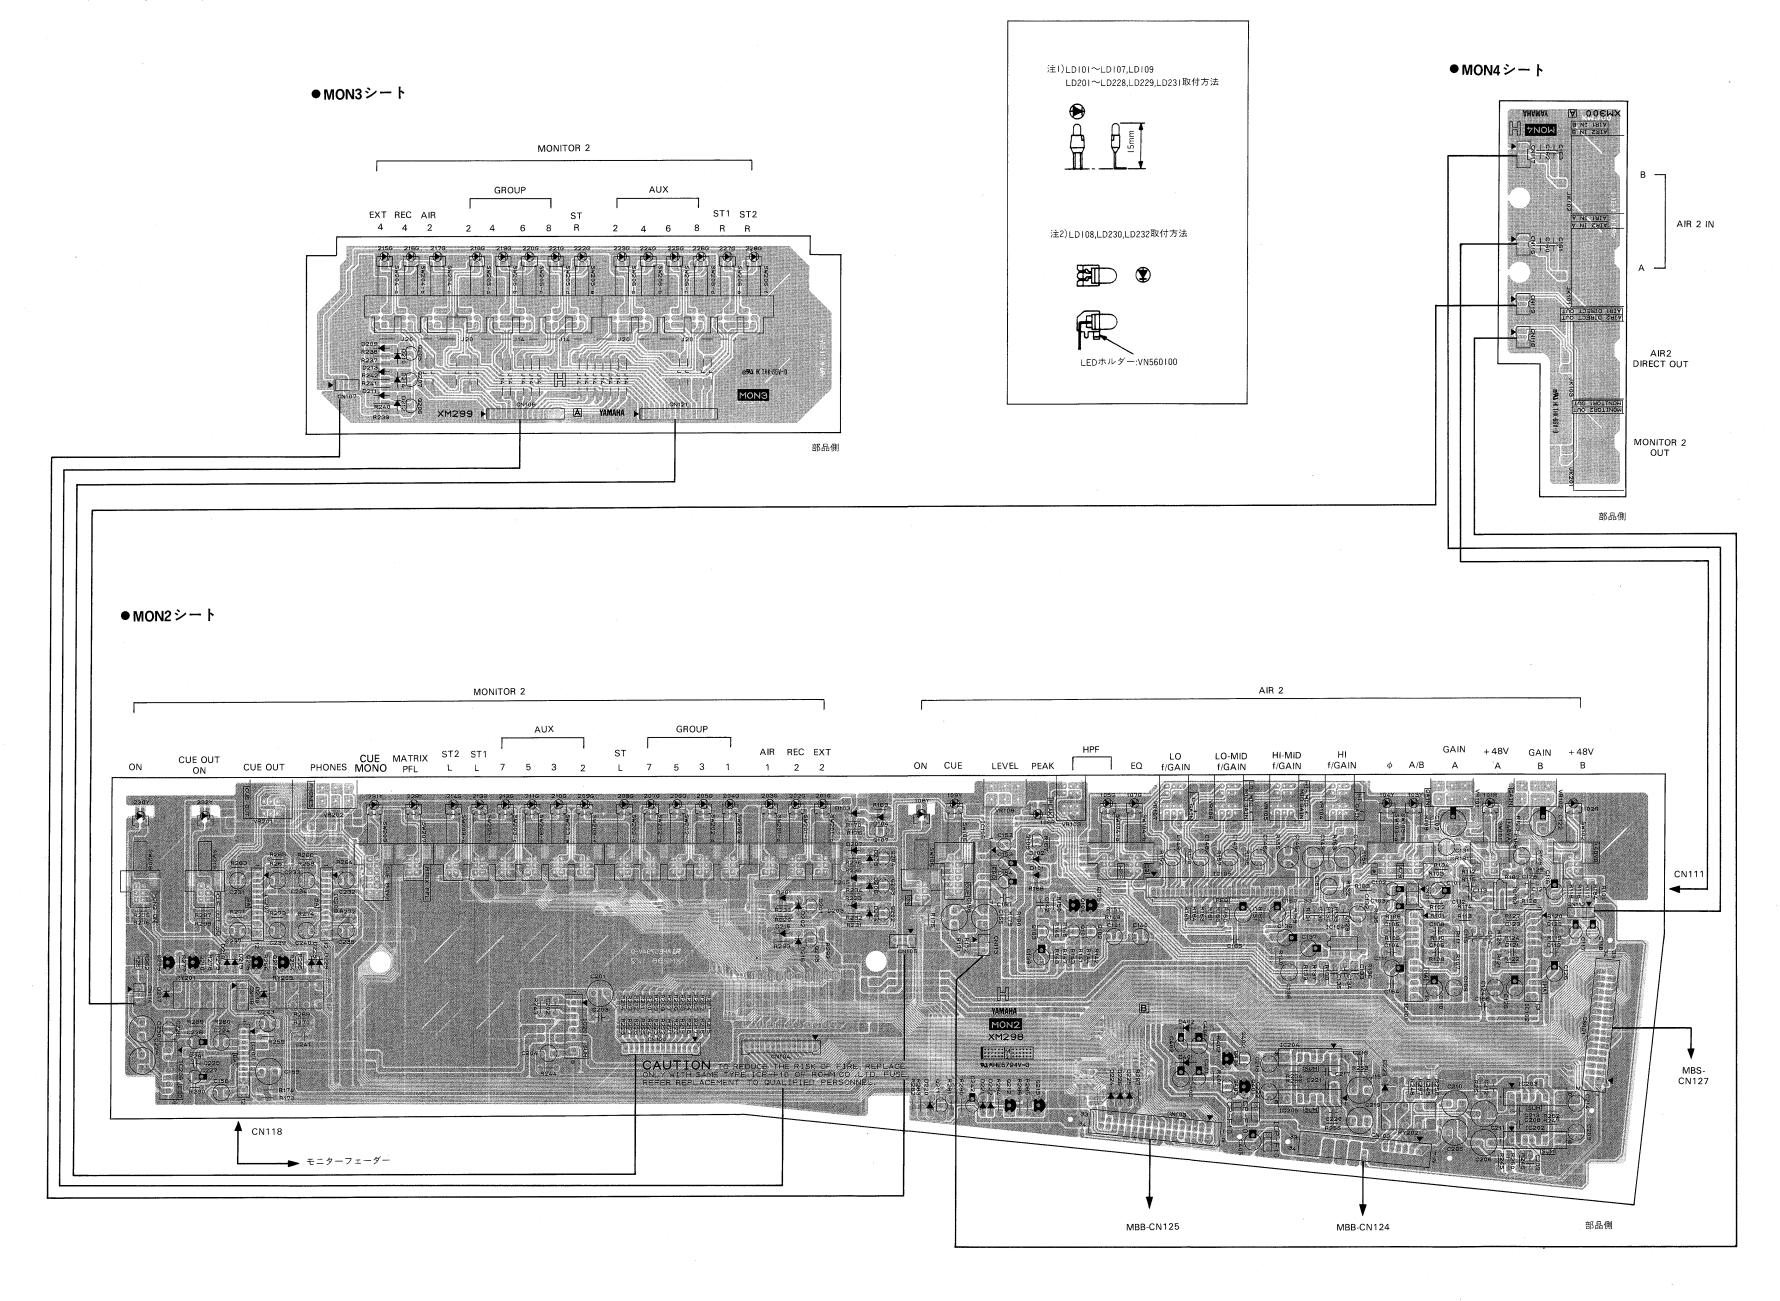

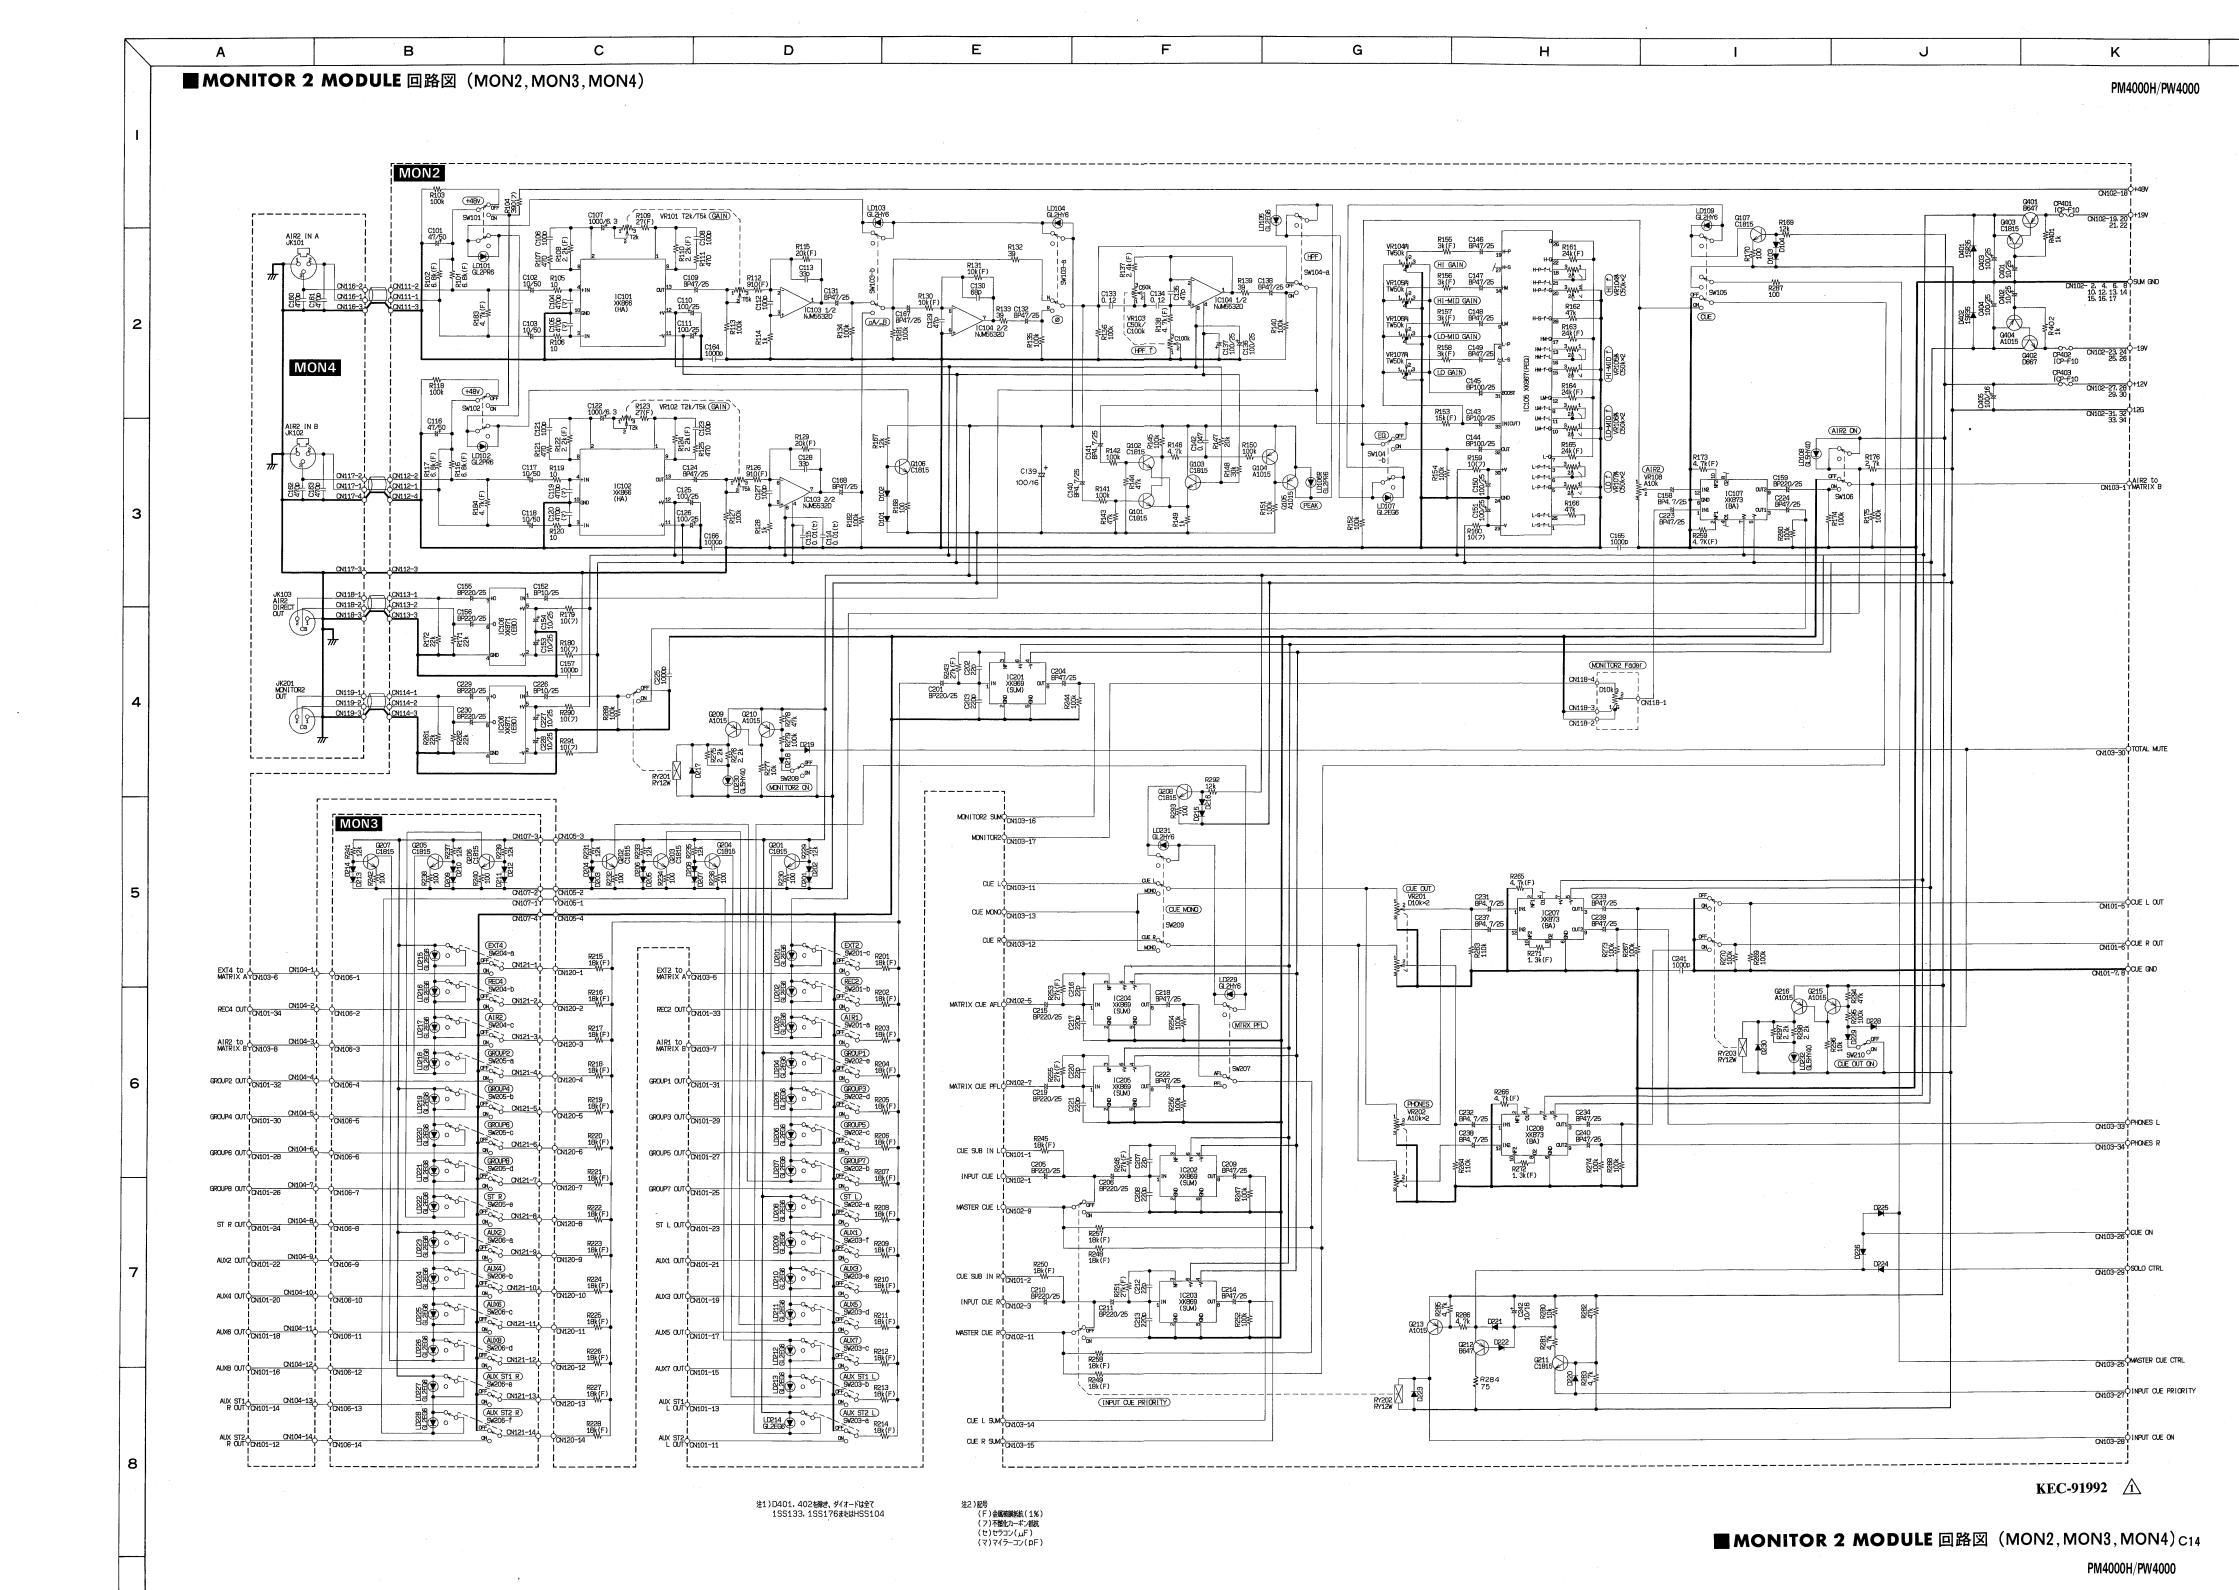

■ TALKBACK MODULE (TB1,TB2)

