



HAZARD WARNING & TURN SIGNAL LAMP (LHD)

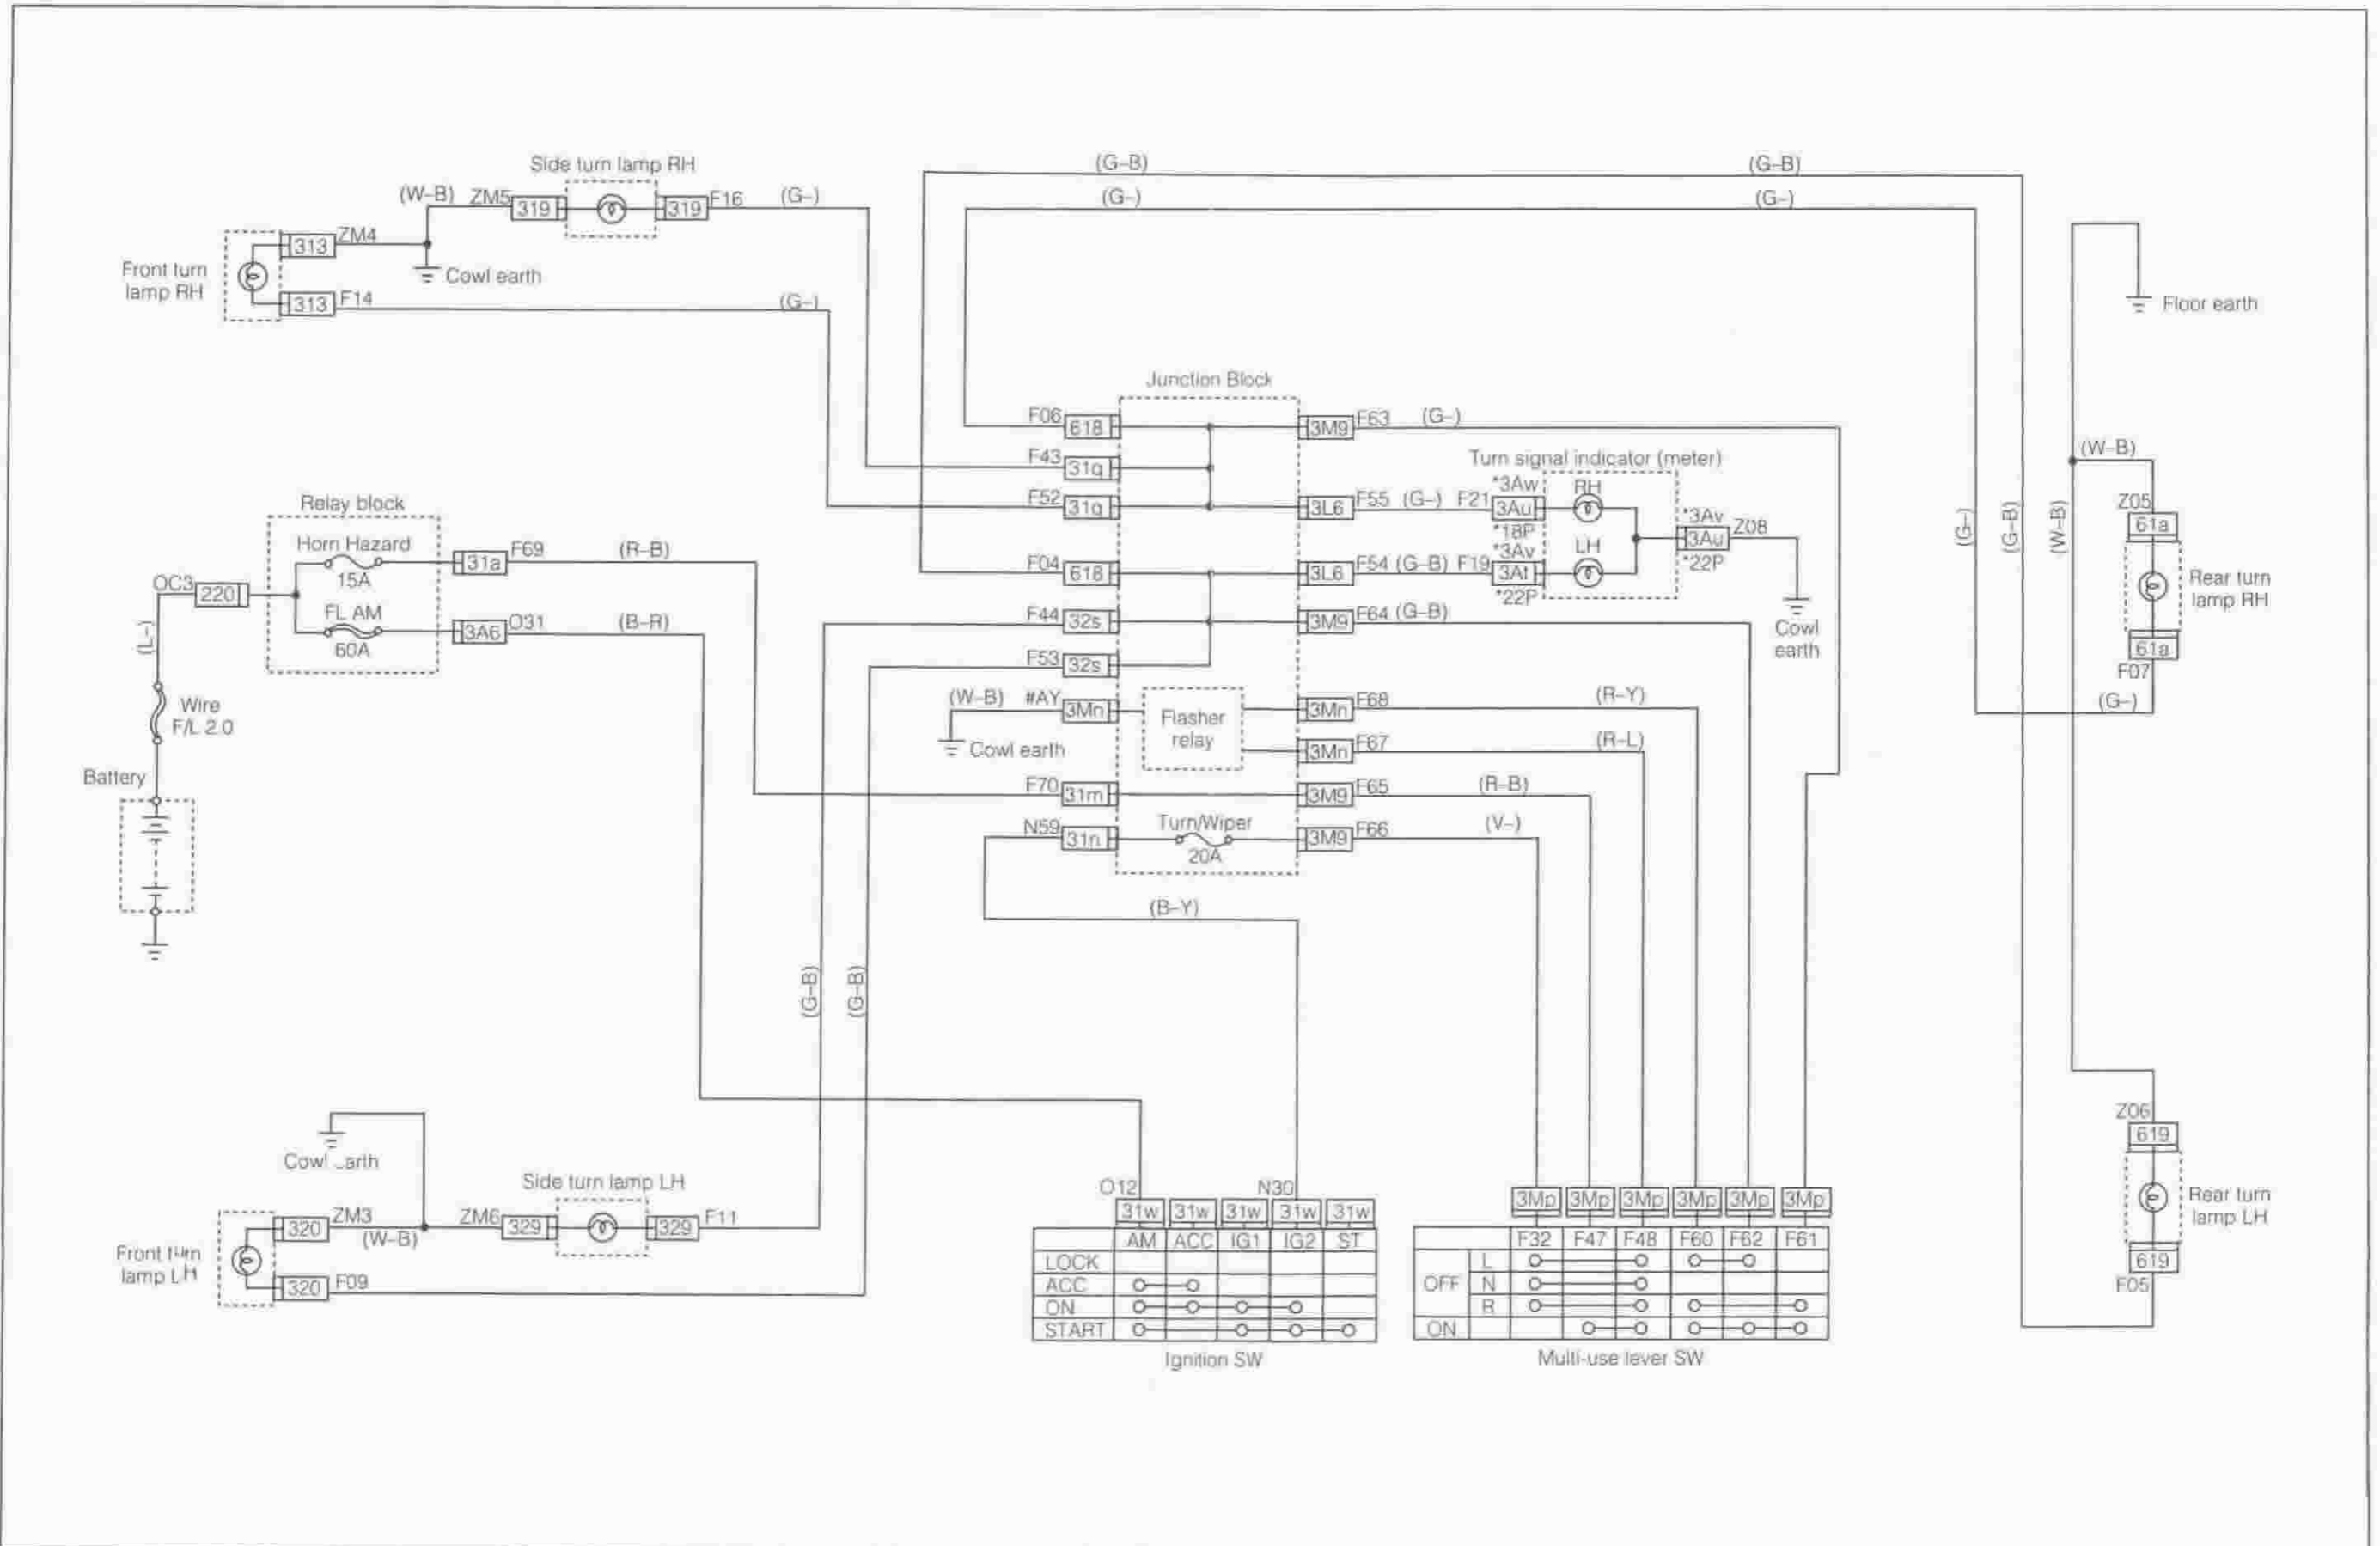

HAZARD WARNING & TURN SIGNAL LAMP (RHD)

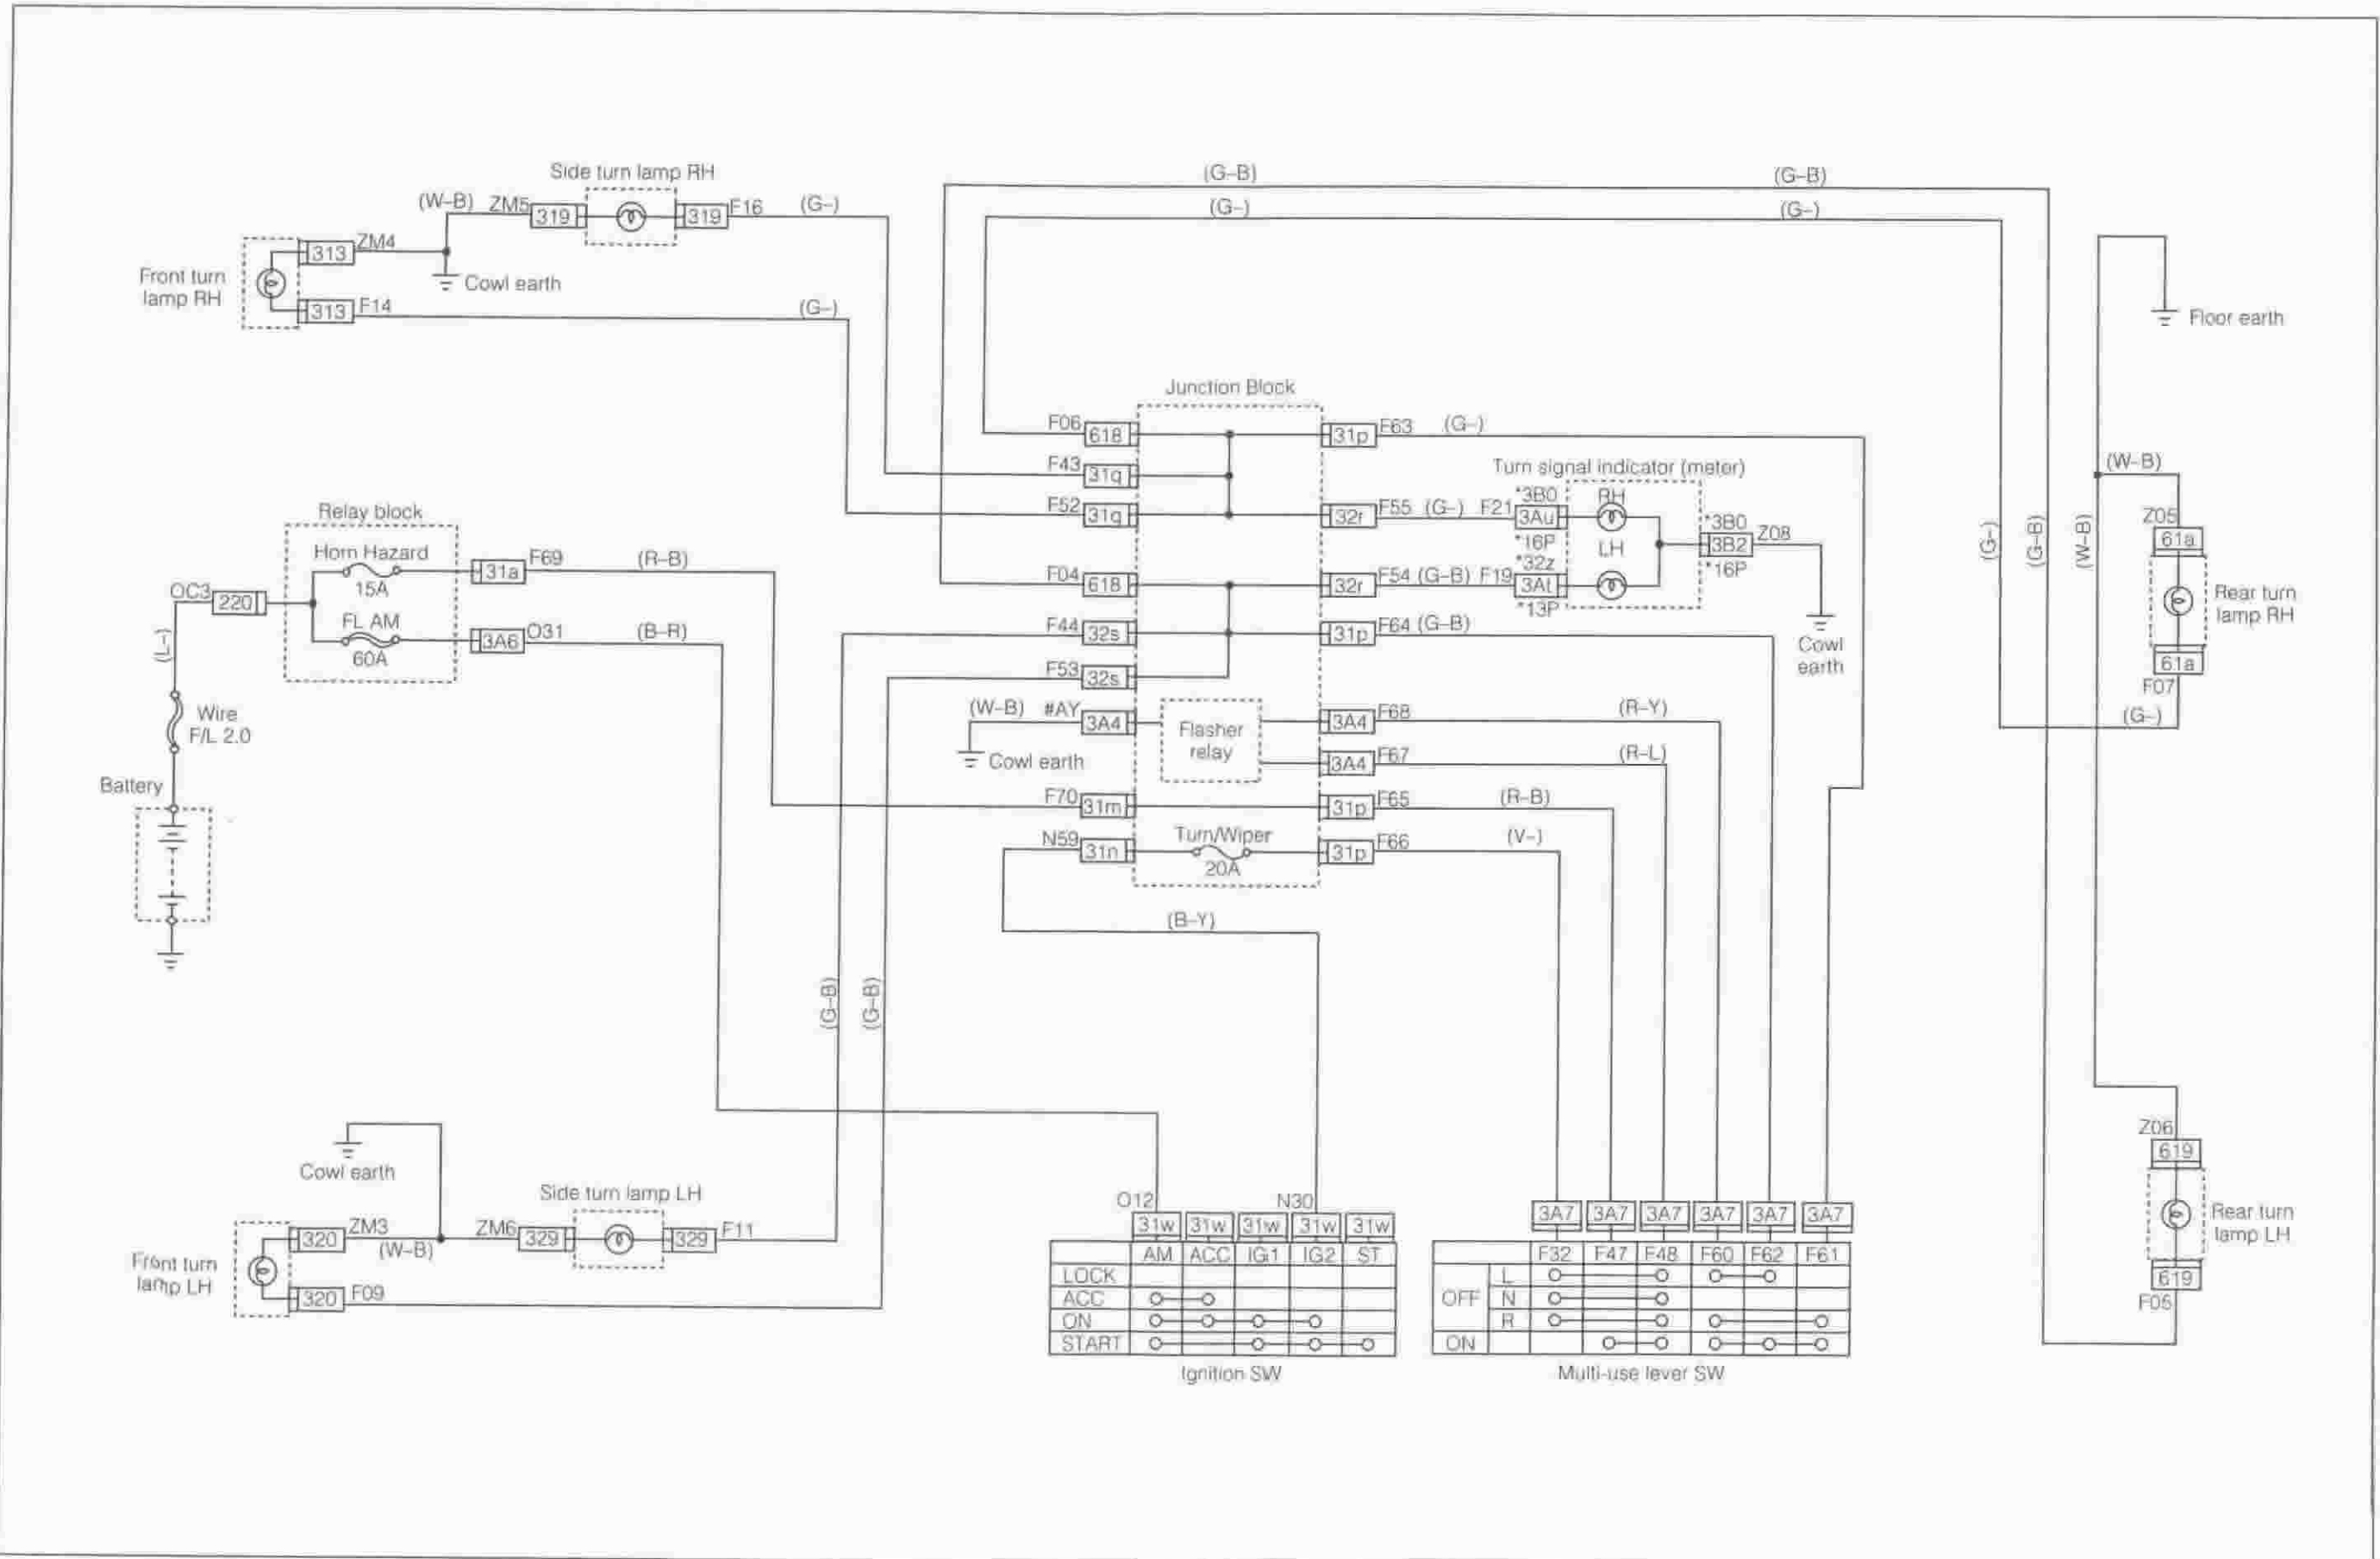


HAZARD WARNING & TURN SIGNAL LAMP (CONNECTORS)


313 : Cowl wire RH  
(To front turn lamp RH)




31q : Cowl wire RH  
(To junction block D)

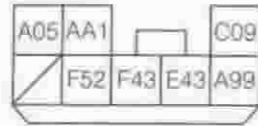


619 : Floor wire No. 1  
(To rear combination lamp LH)

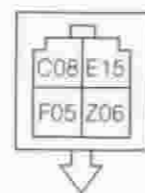


32r : Cowl wire LH  
(To junction block F)

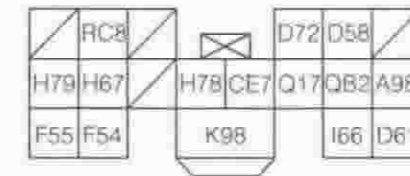


3Aw : Cowl wire RH  
(To meter 18P)

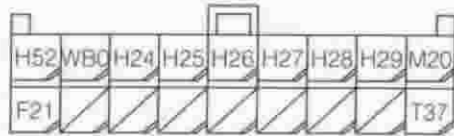


31a : Cowl wire RH  
(To relay block A)

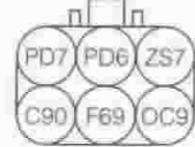

61a : Floor wire No. 1  
(To rear combination lamp RH)

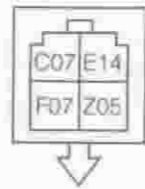

3Au : Cowl wire RH  
(To meter 16P)

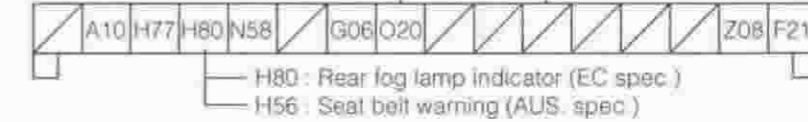


319 : Cowl wire RH  
(To side turn lamp RH)




32s : Cowl wire LH  
(To junction block H)



3M9 : Cowl wire LH  
(To junction block C)

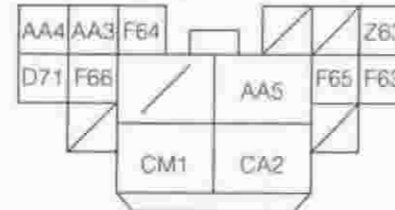

3B0 : Cowl wire LH  
(To meter 16P)

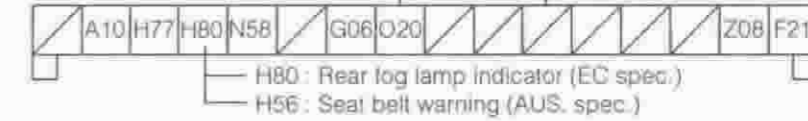


320 : Cowl wire LH  
(To front turn lamp LH)




3Mn : Cowl wire LH  
(To flasher relay)




3Mp : Cowl wire LH  
(To turn SW)

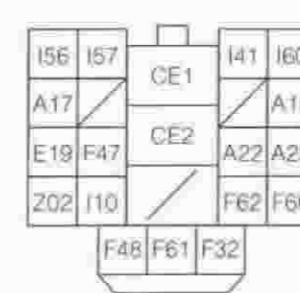

220 : Engine wire No. 2  
(To relay block F)

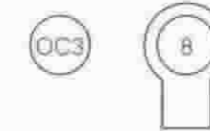

31p : Cowl wire RH  
(To junction block C)

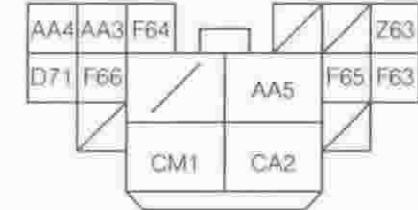

329 : Cowl wire LH  
(To side turn lamp LH)



31m : Cowl wire RH  
(To junction block A)




3A4 : Cowl wire RH  
(To flasher relay)



31w : Cowl wire RH  
(To ignition SW)



3Mb : Cowl wire LH  
(To turn SW B)

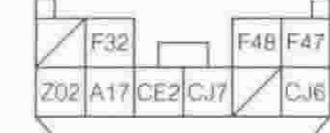

3A6 : Cowl wire RH  
(To relay block E)




31n : Cowl wire RH  
(To junction block B)



3A4 : Cowl wire RH  
(To flasher relay)



3A7 : Cowl wire RH  
(To turn SW)

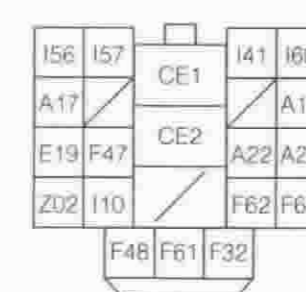

61g : Floor wire No. 1  
(To junction block I)




3Av : Cowl wire RH  
(To meter 22P)




3B2 : Cowl wire LH  
(To meter 22P)



3A1 : Cowl wire RH  
(To turn SW B)

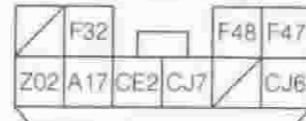


DAYLIGHT

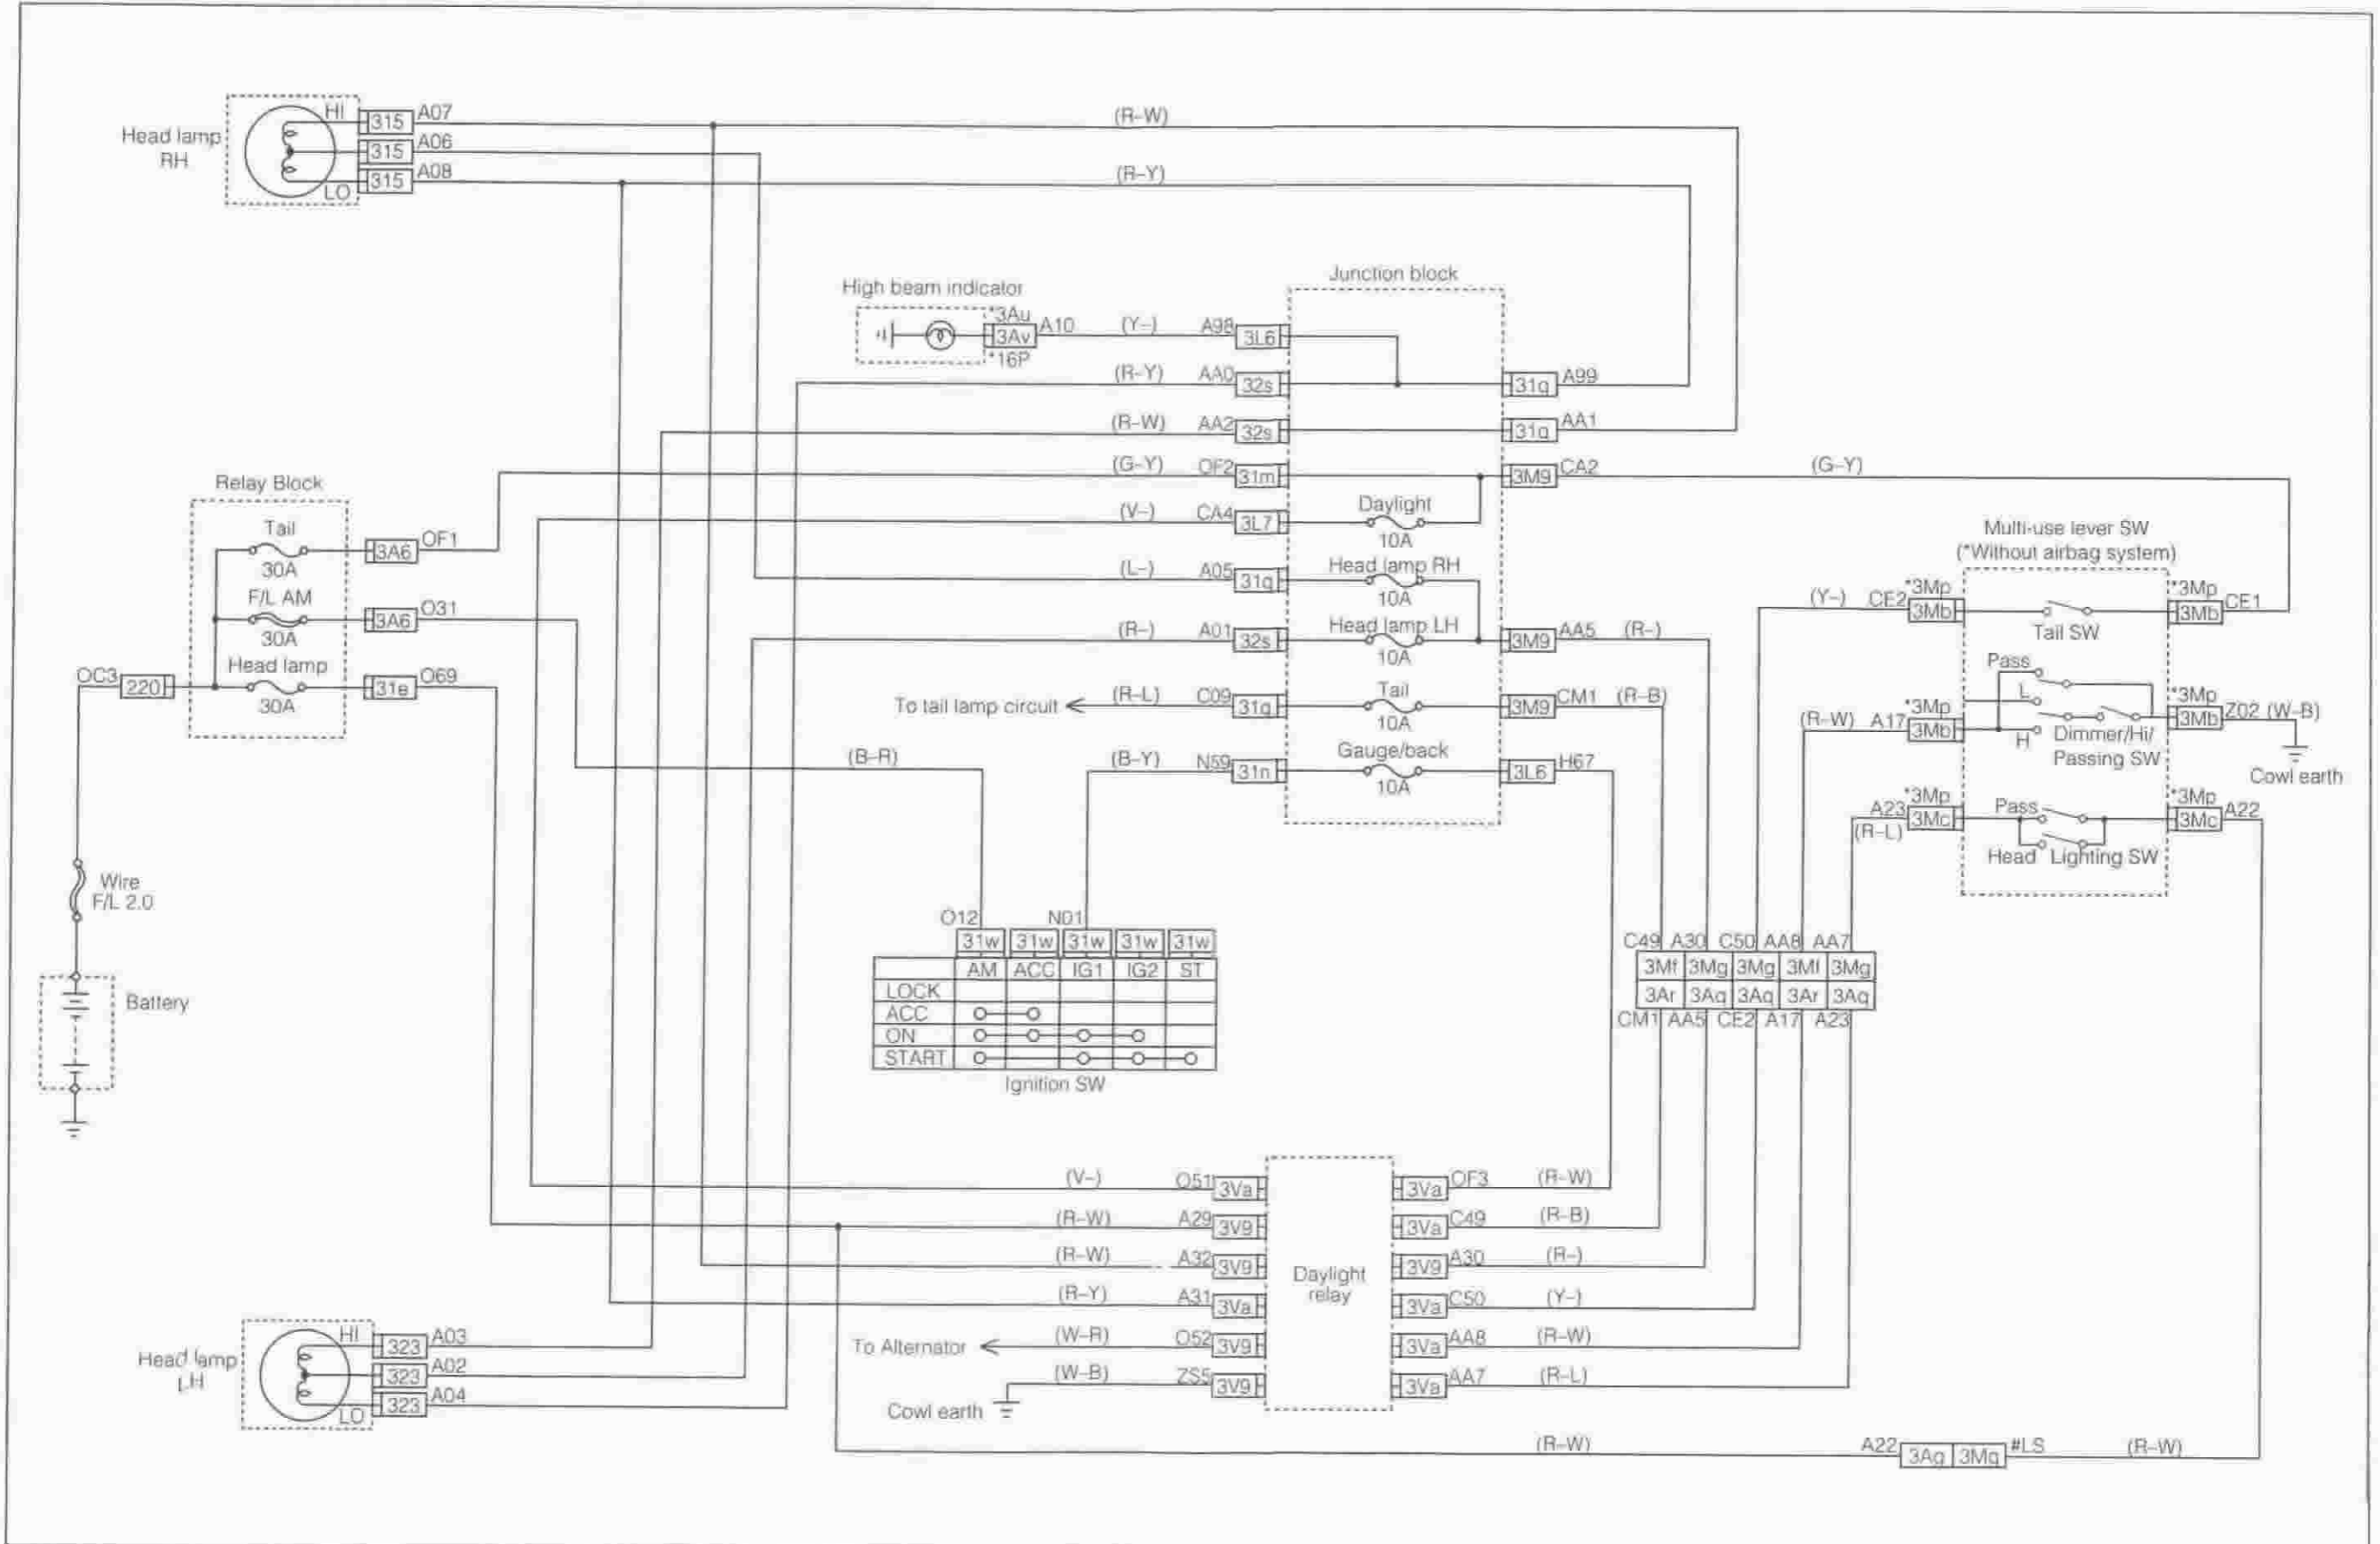


DAYLIGHT (CONNECTORS)

220 : Engine wire No. 2  
(To relay block F)

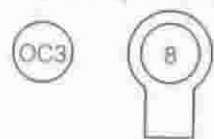

31e : Cowl wire RH  
(To relay block D)

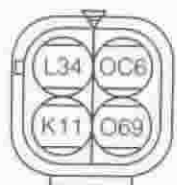

3A6 : Cowl wire RH  
(To relay block E)



31m : Cowl wire RH  
(To junction block A)



31n : Cowl wire RH  
(To junction block B)




31q : Cowl wire RH  
(To junction block D)




32s : Cowl wire LH  
(To junction block H)




3M9 : Cowl wire LH  
(To junction block C)

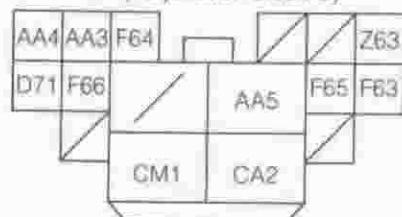


3L6 : Cowl wire RH  
(To junction block F)

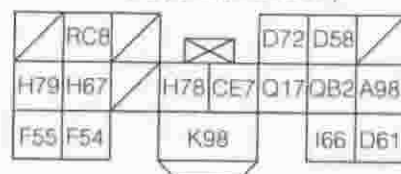


3L7 : Cowl wire RH  
(To junction block G)

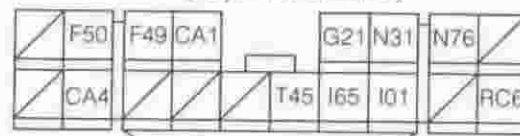

3Mp : Cowl wire LH  
(To turn SW)

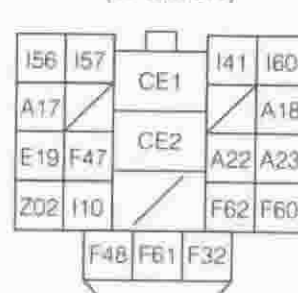


3Mb : Cowl wire LH  
(To turn SW B)

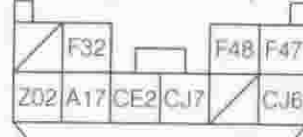


3Mc : Cowl wire LH  
(To turn SW C)




3Aq : Cowl wire RH  
(To cowl wire LH [3Mg])

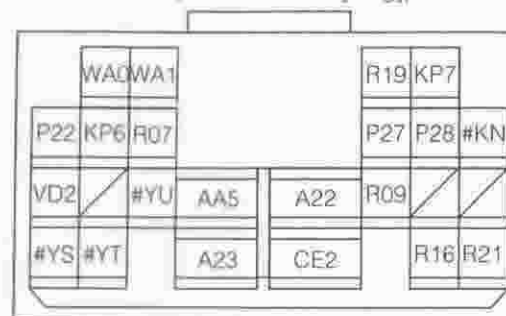


3Mg : Cowl wire LH  
(To cowl wire RH [3Aq])

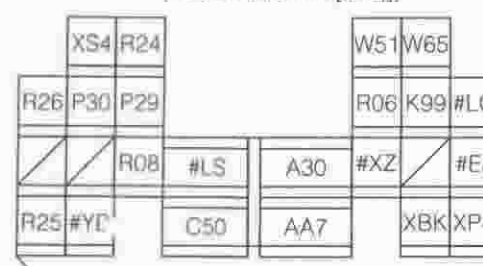


3Ar : Cowl wire RH  
(To cowl wire LH [3Ml])

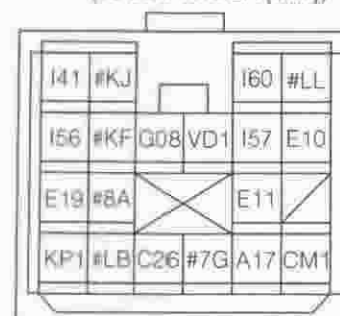

3Ml : Cowl wire LH  
(To cowl wire RH [3Ar])

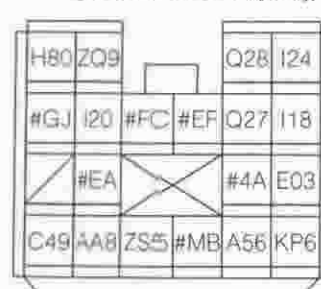


3Au : Cowl wire RH  
(To meter 16P)

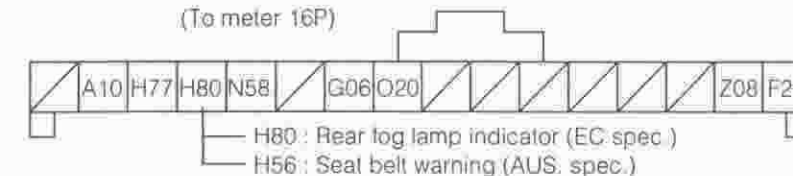


3Av : Cowl wire RH  
(To meter 22P)



 315 : Cowl wire RH  
(To headlamp RH)



323 : Cowl wire LH  
(To headlamp LH)

 


31w : Cowl wire RH  
(To Ignition SW)




3V9 : Cowl wire RH  
(To daylight relay A)



3Va : Cowl wire RH  
(To daylight relay B)

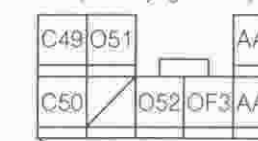

HEATER & VENTILATION (LHD)

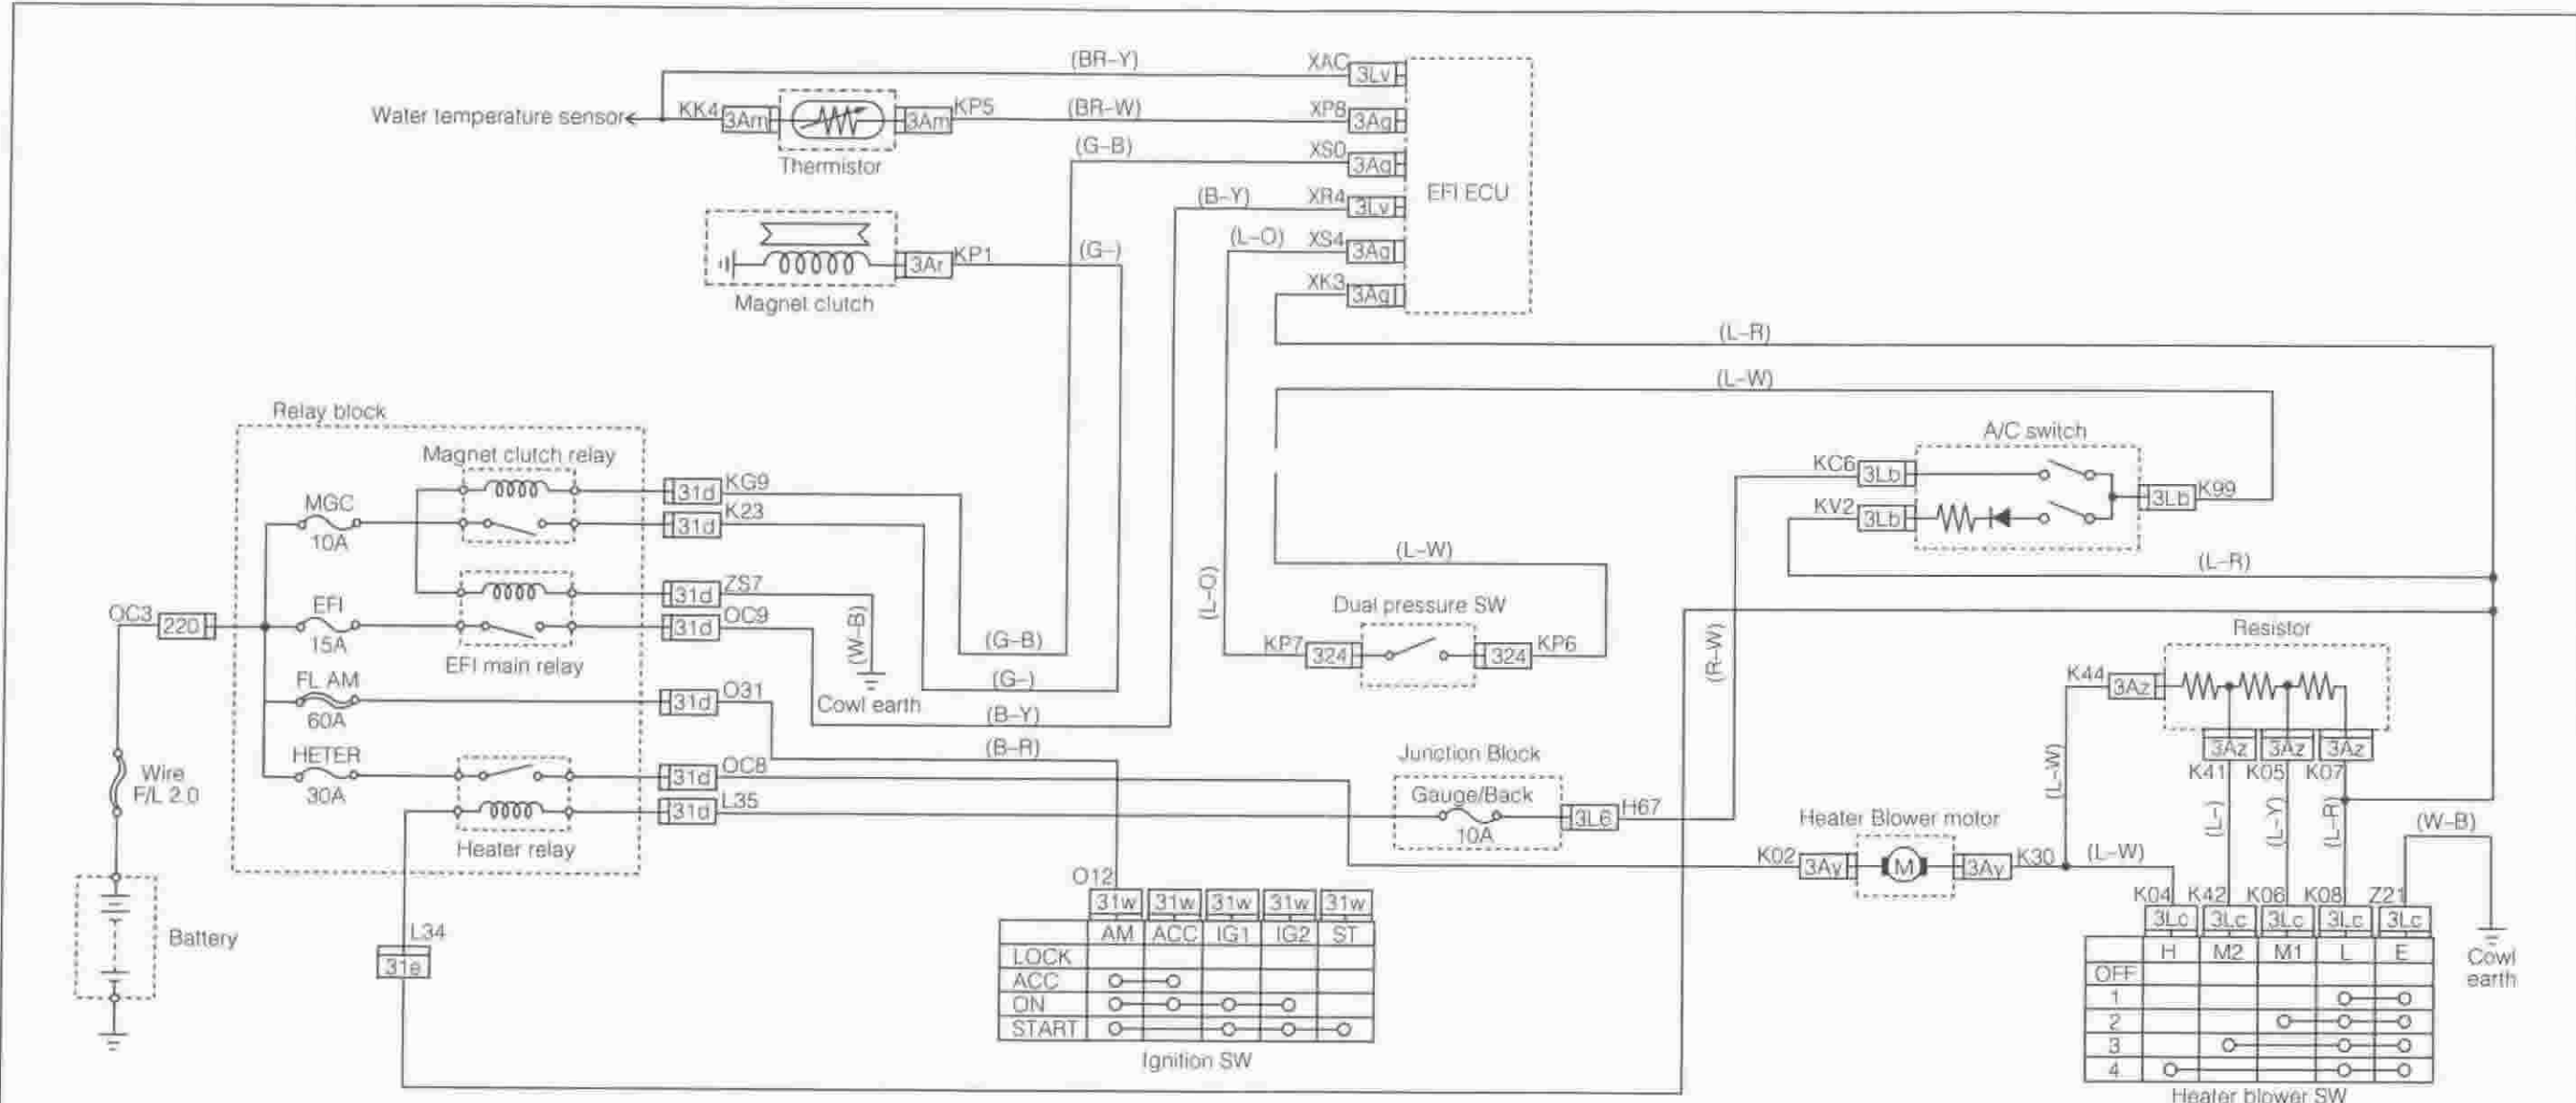


O12	31w	31w	31w	31w	31w
	AM	ACC	IG1	IG2	ST
LOCK					
ACC	○	○			
ON	○	○	○	○	
START	○	○	○	○	○


Ignition SW

	3Lo	3Lc	3Lc	3Lc	3Lc
	H	M2	M1	L	E
OFF				○	○
1				○	○
2		○		○	○
3		○	○	○	○
4	○			○	○

Heater blower SW

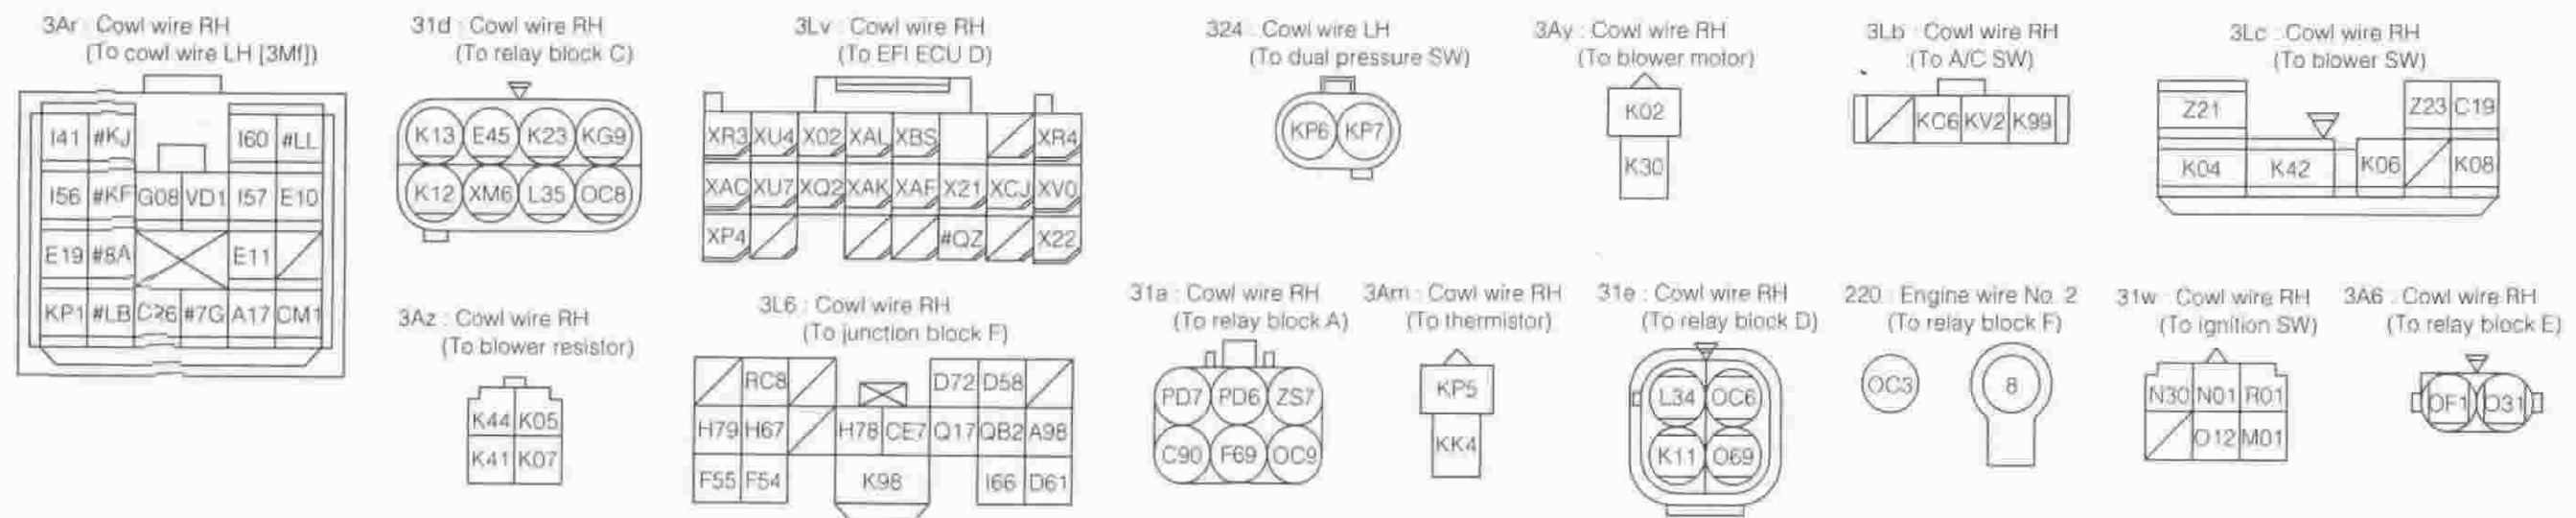


HEATER & VENTILATION (RHD)

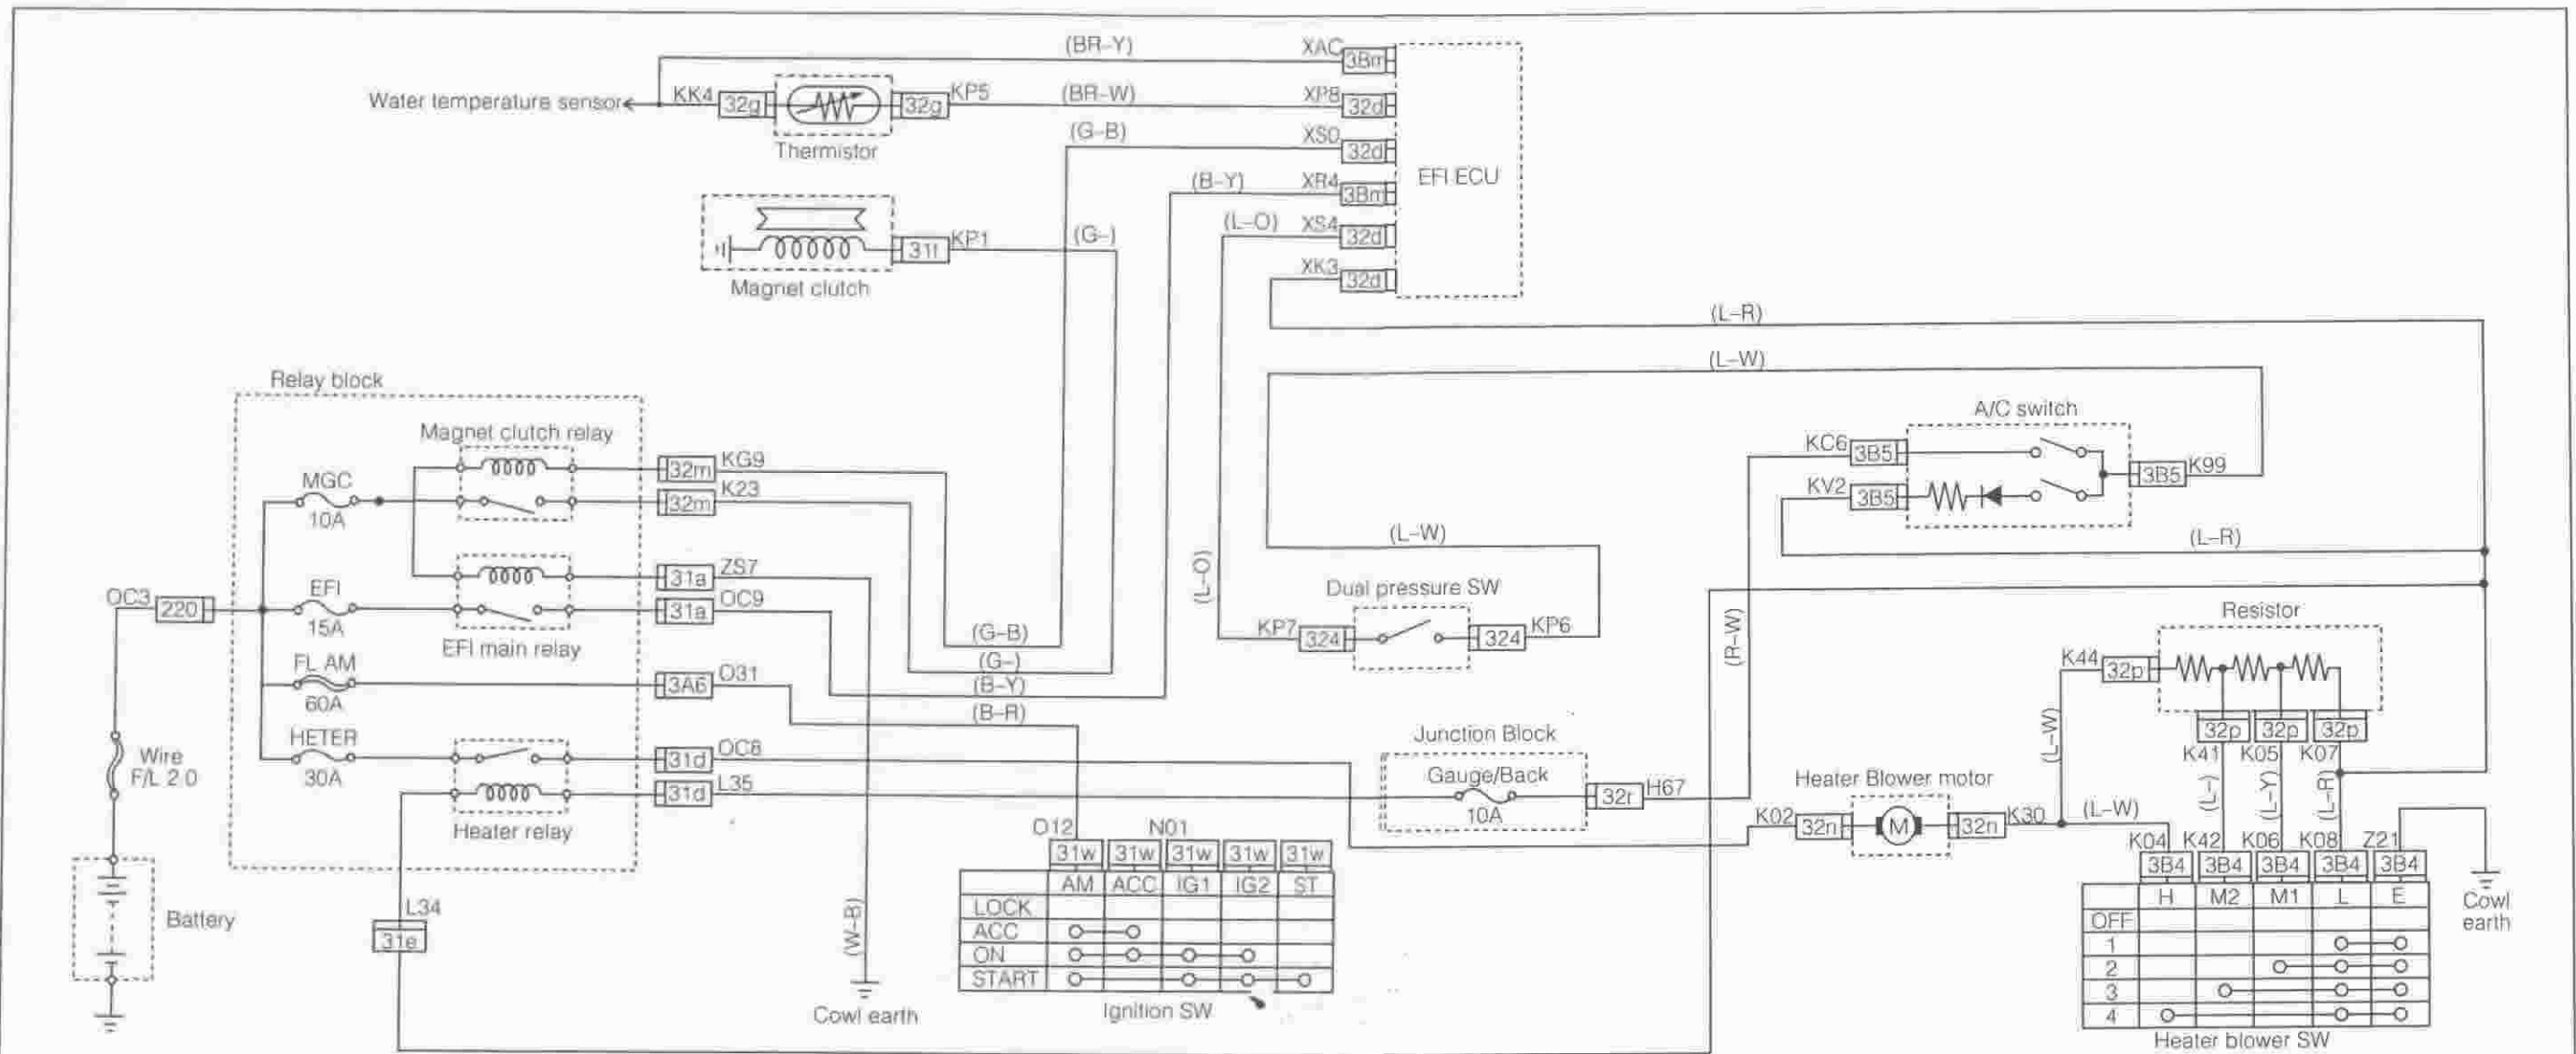

3A6 : Cowl wire RH  
(To relay block E)



 31w : Cowl wire RH  
(To Ignition SW)




32g : Cowl wire LH  
(To thermistor)




32p : Cowl wire LH  
(To blower resistor)




31e : Cowl wire RH  
(To relay block D)

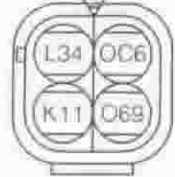


3Bm : Cowl wire LH  
(To EFI ECU D)

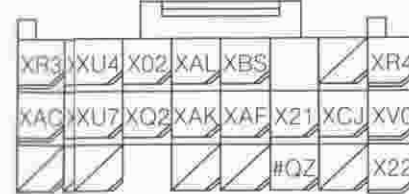


32d : Cowl wire LH  
(To EFI ECU C)

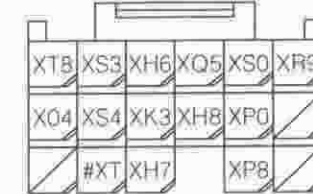


31t : Cowl wire RH  
(To cowl wire LH [32m])

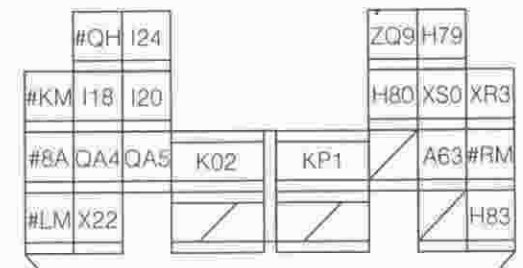

32m : Cowl wire LH  
(To cowl wire RH [31t])

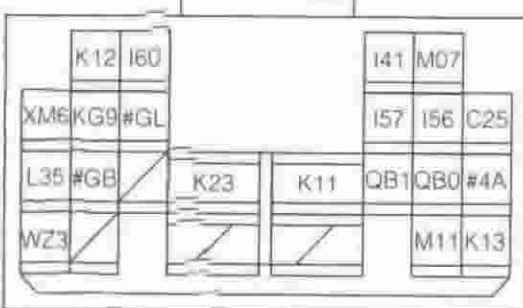


31a : Cowl wire RH  
(To relay block A)

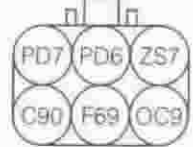


324 : Cowl wire LH  
(To dual pressure SW)




31d : Cowl wire RH  
(To relay block C)

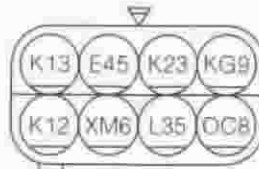

32r : Cowl wire LH  
(To junction block F)

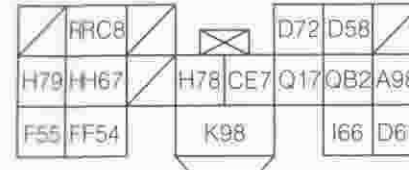


3B4 : Cowl wire LH  
(To blower SW)

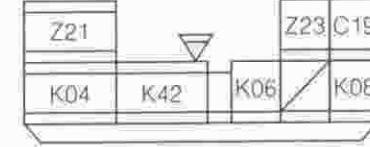


32n : Cowl wire LH  
(To blower motor)




220 : Engine wire No. 2  
(To relay block F)

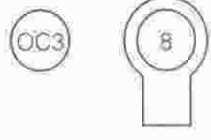

POWER WINDOW (LHD)

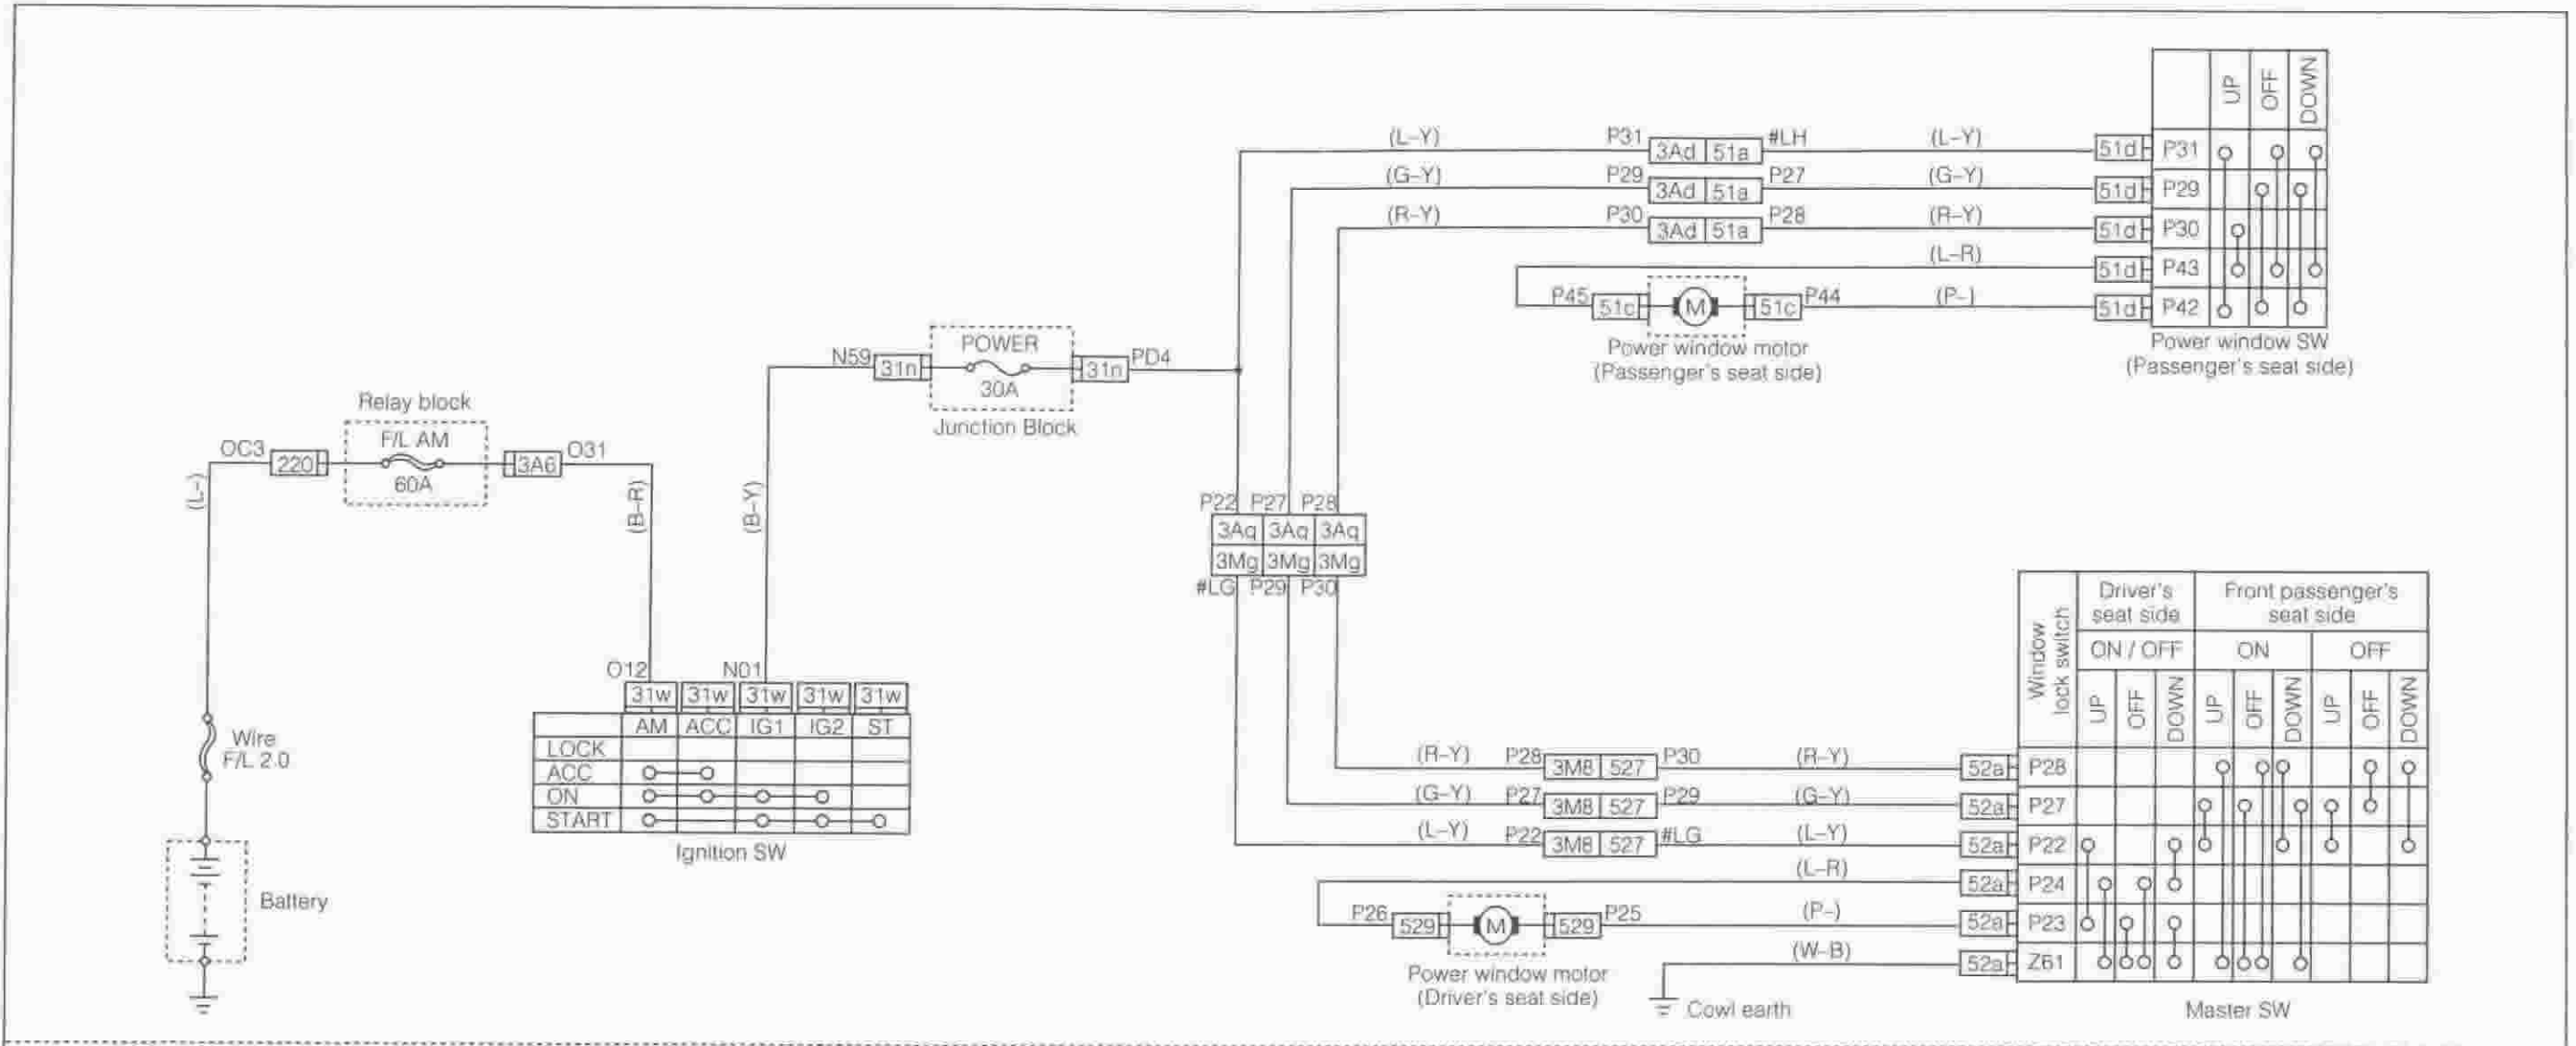

220 : Engine wire No. 2  
(To relay block F)

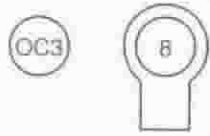


3A6 : Cowl wire RH  
(To relay block E)




31w : Cowl wire RH  
(To ignition SW)




3Aq : Cowl wire RH  
(To cowl wire LH [3Mg])

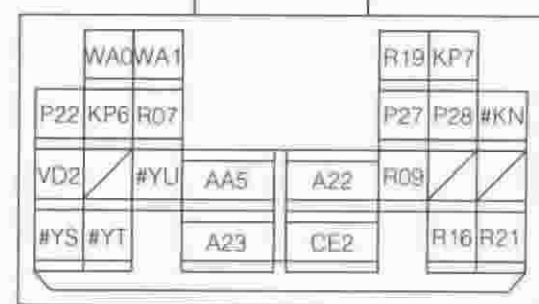

 
31n : Cowl wire RH  
(To junction block B)



 51d : Front door wire RH  
(To front power window SW RH)




3Mg : Cowl wire LH  
(To cowl wire RH [3Aq])

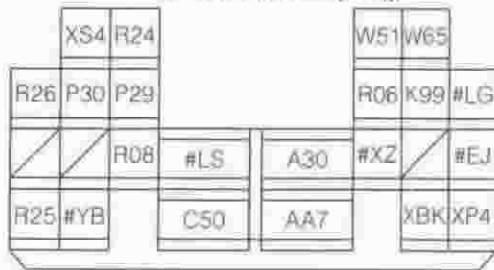


52a : Front door wire LH  
(To power window SW)




3Ad : Cowl wire RH  
(To front door wire RH [51a])

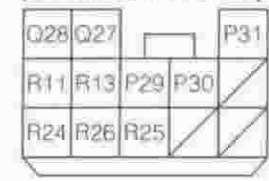


3M8 : Cowl wire LH  
(To front door wire LH [527])

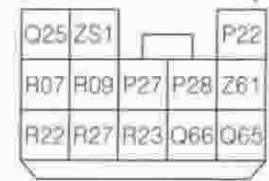

51a : Front door wire RH  
(To cowl wire RH [3Ad])

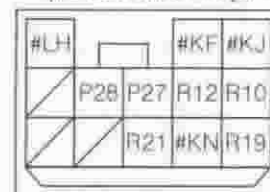


527 : Front door wire LH  
(To cowl wire LH [3M8])

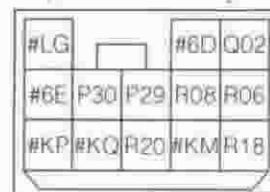

529 : Front door wire LH  
(To power window motor LH)




 51c : Front door wire RH  
(To power window motor RH)





POWER WINDOW (RHD)

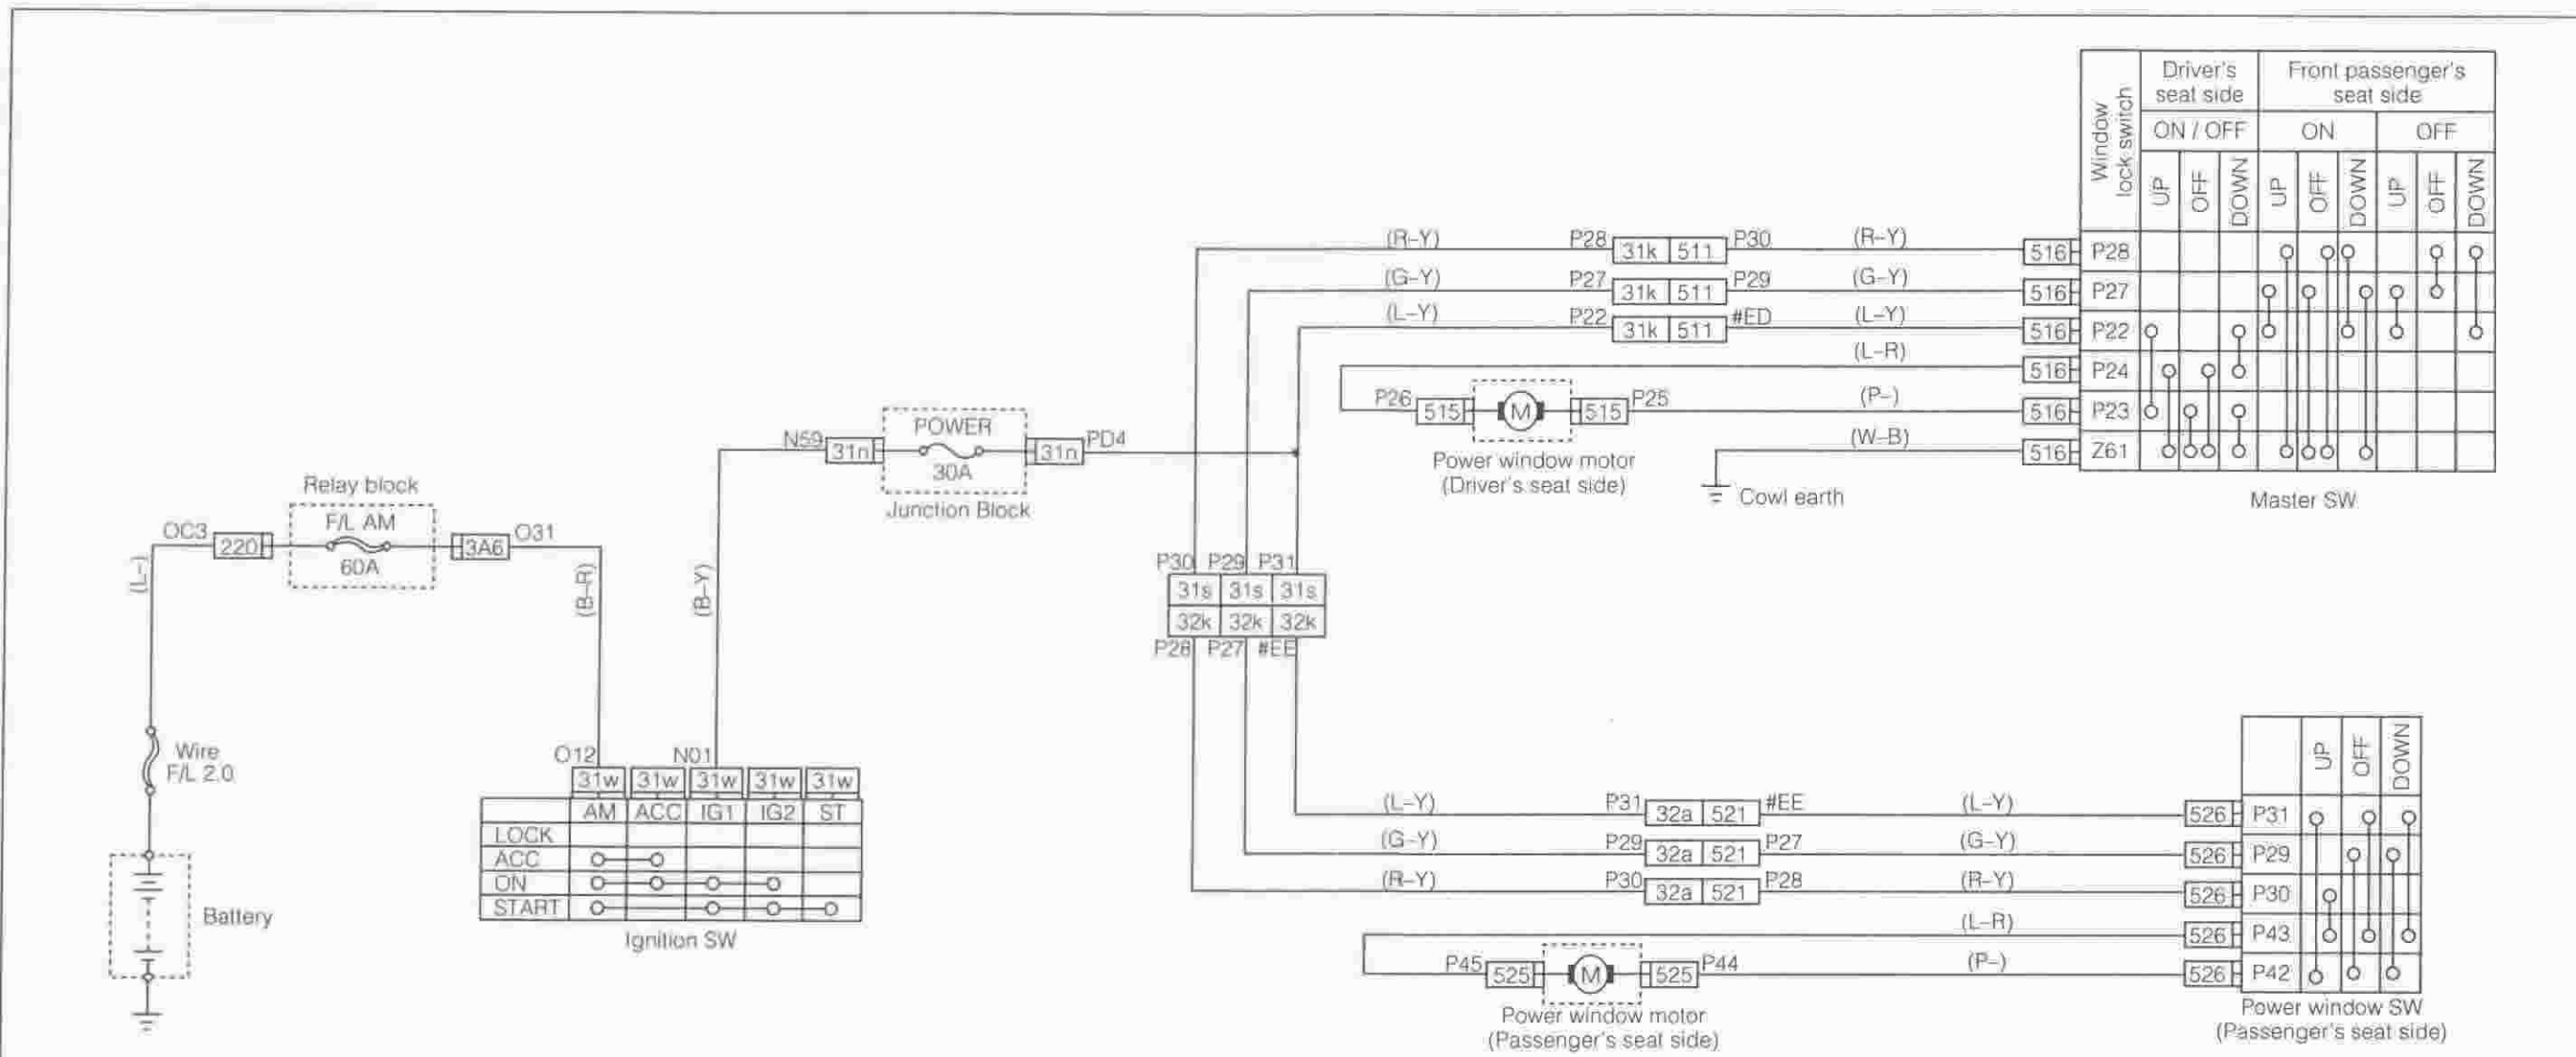


220 : Engine wire No. 2  
(To relay block F)




3A6 : Cowl wire RH  
(To relay block E)



 31w : Cowl wire RH  
(To ignition SW)




31s : Cowl wire RH  
(To cowl wire LH [32k])

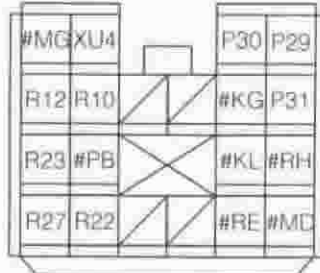


31n : Cowl wire RH  
(To junction block B)



32k : Cowl wire LH  
(To cowl wire RH [31s])

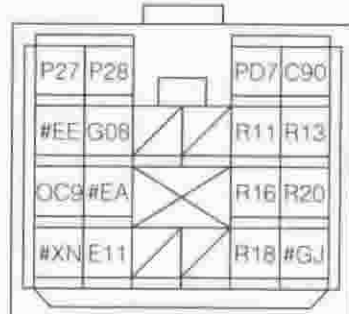

31k : Cowl wire RH  
(To front door wire RH [511])

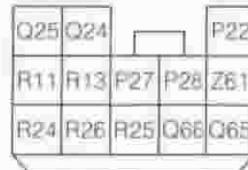


32a : Cowl wire LH  
(To front door wire LH [521])



511 : Front door wire RH  
(To cowl wire RH [31k])



521 : Front door wire LH  
(To cowl wire LH [32a])

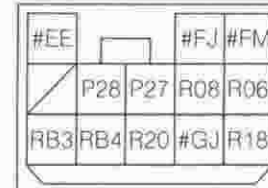


515 : Front door wire RH  
(To power window motor LH)




525 : Front door wire LH  
(To power window motor LH)




516 : Front door wire RH  
(To master SW)

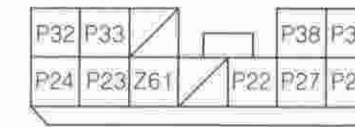

 
526 : Front door wire LH  
(To front power window SW LH)



WIPER & WASHER (LHD)

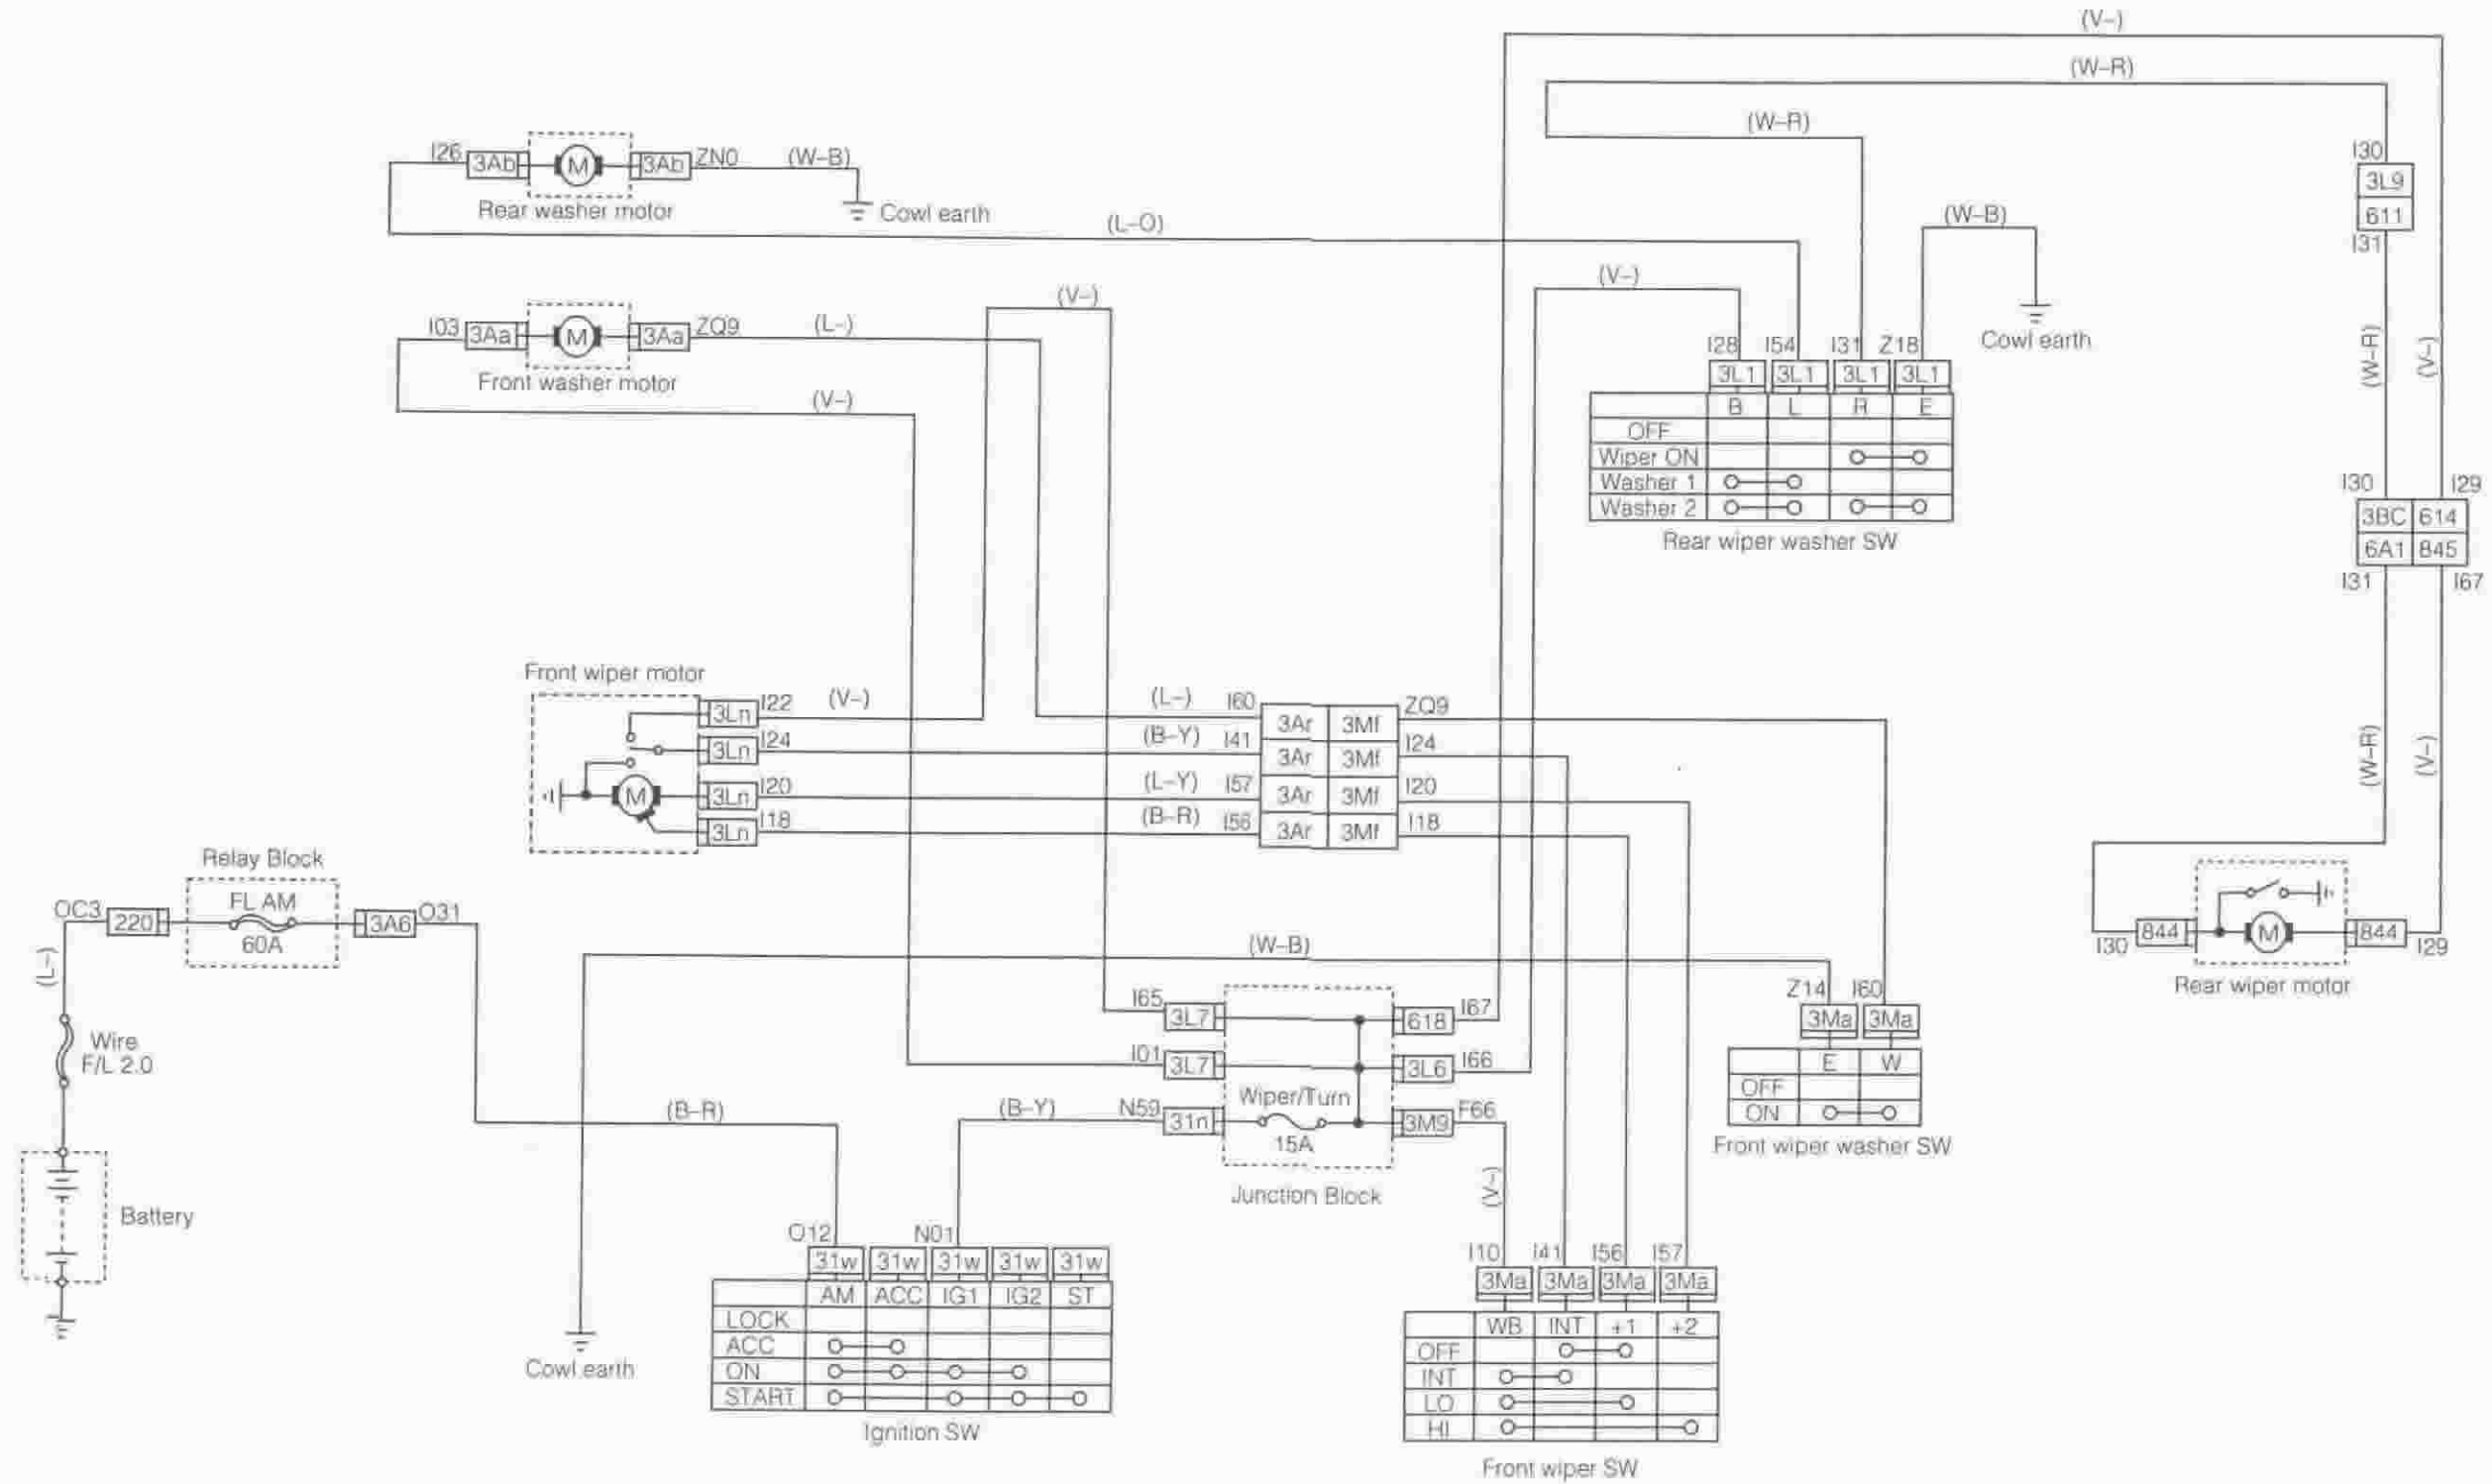


WIPER & WASHER (RHD)

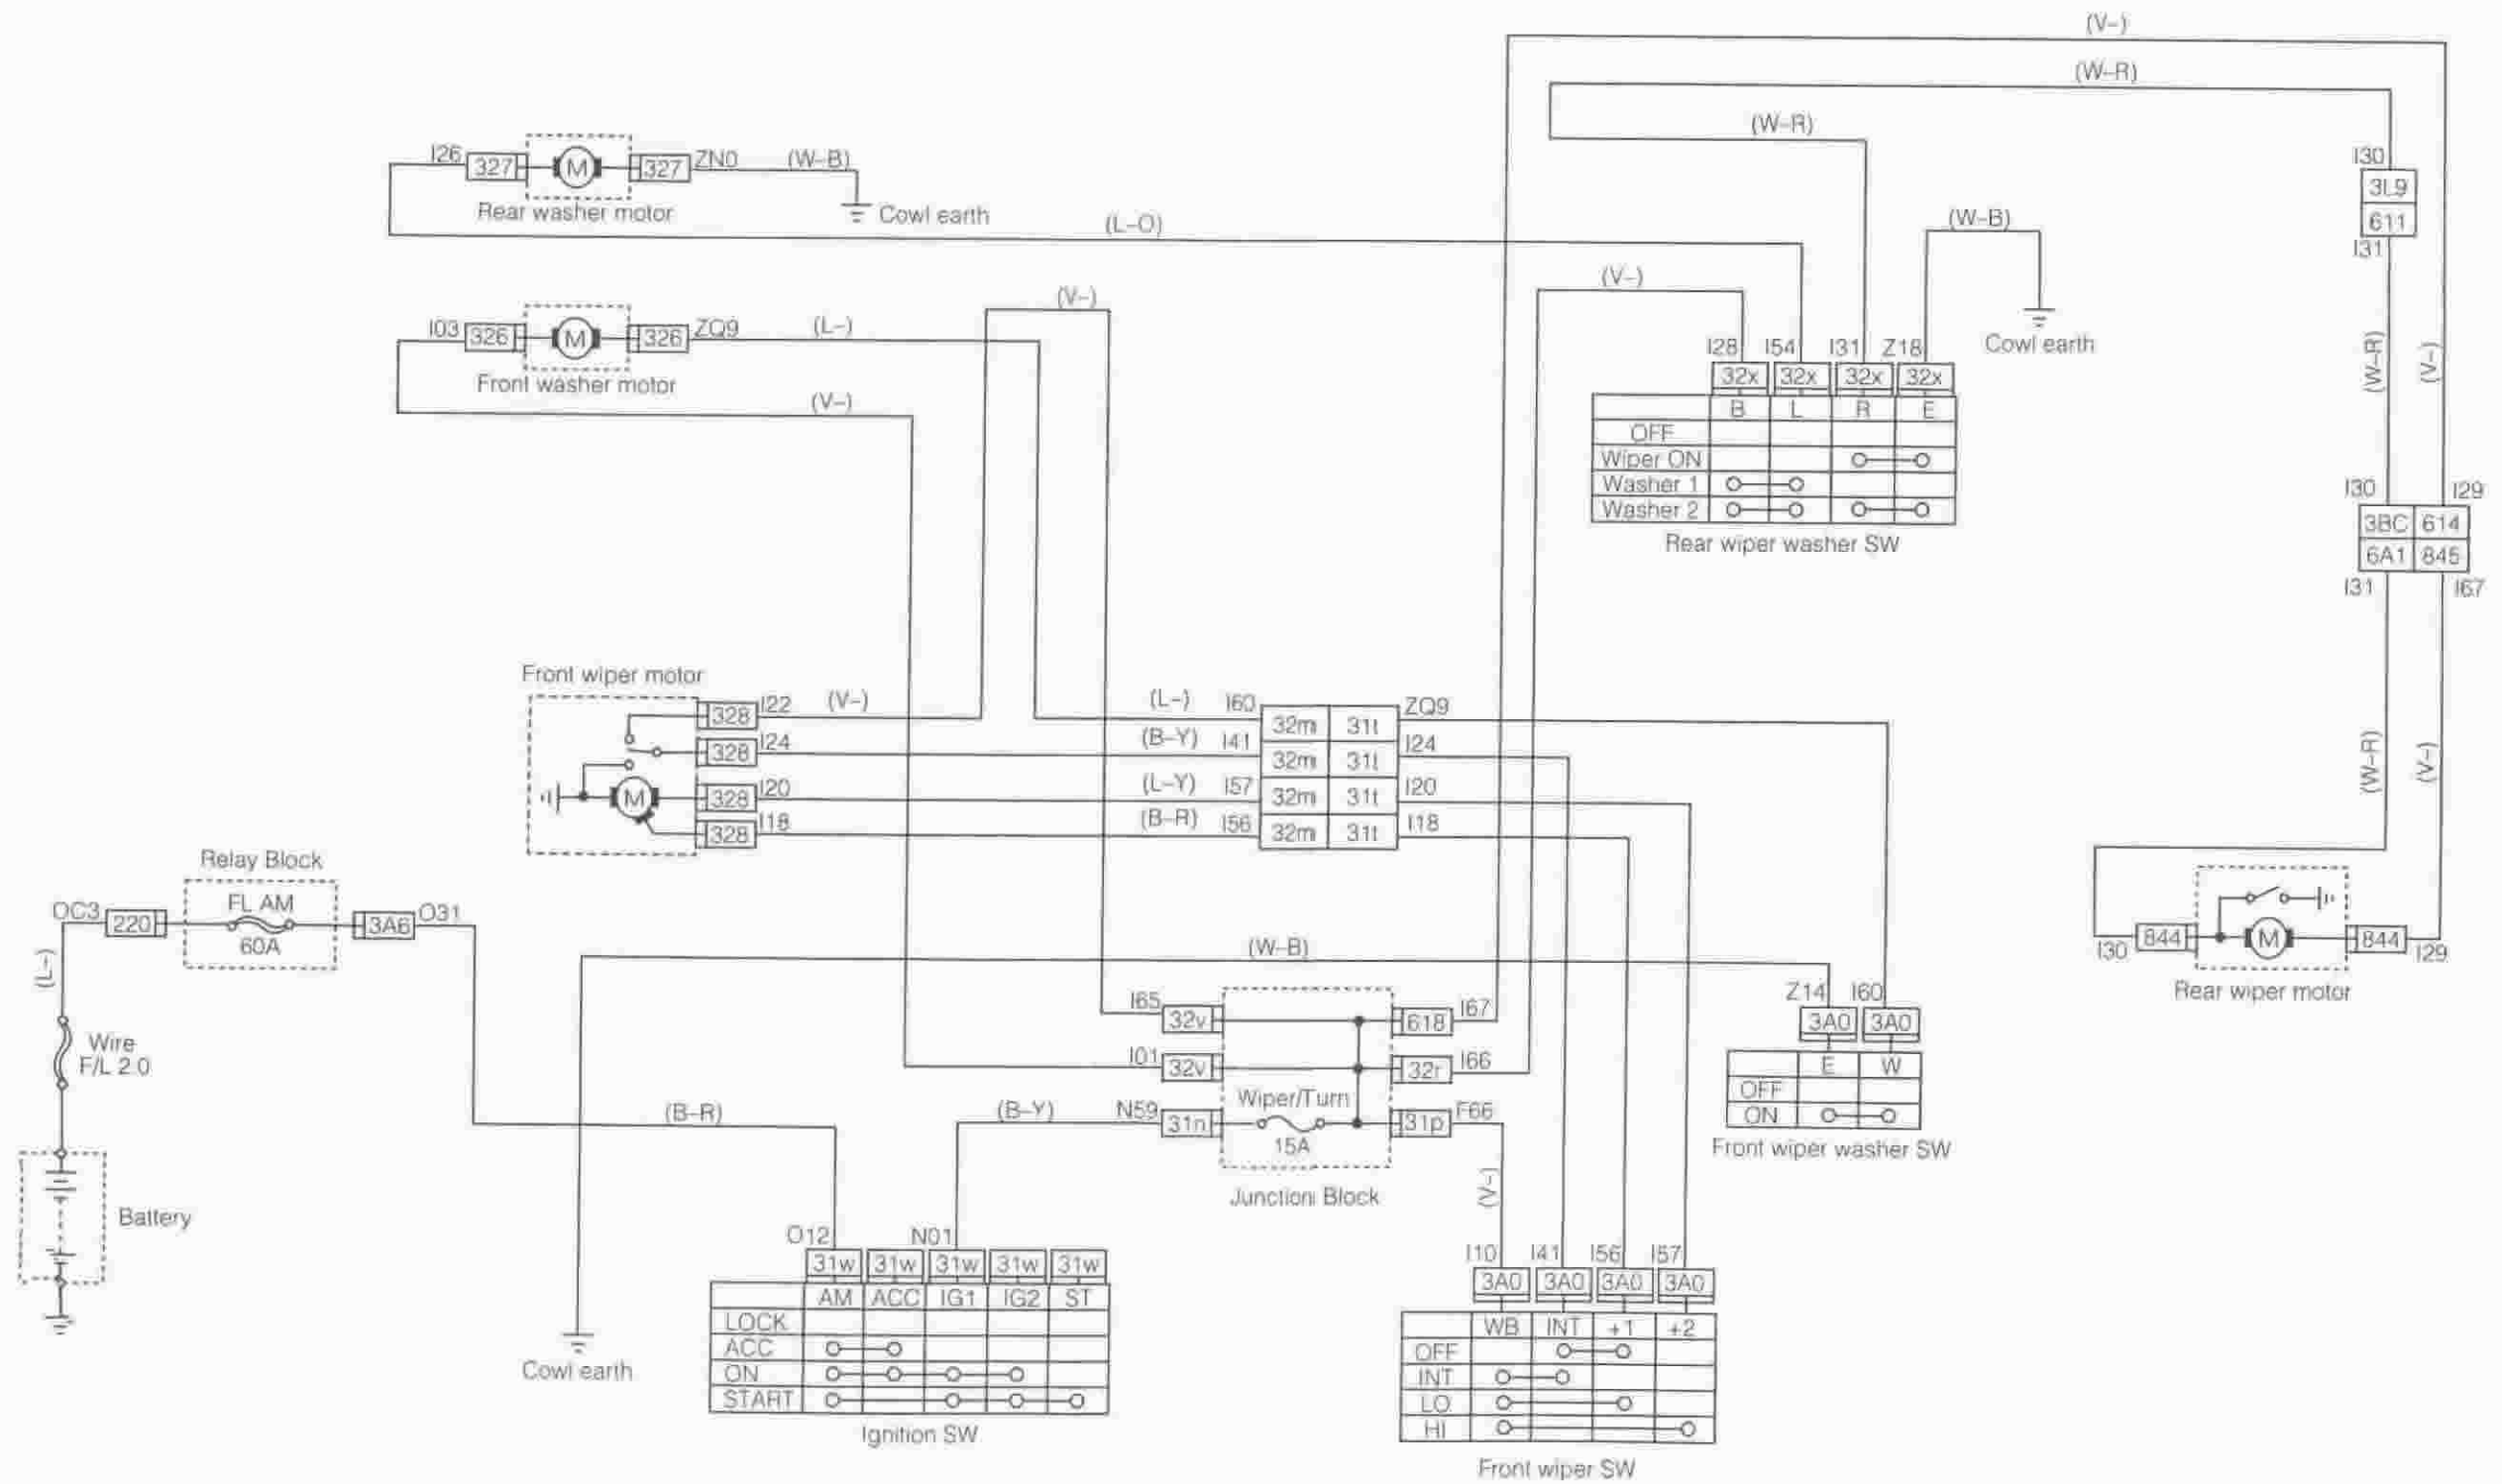


WIPER & WASHER (CONNECTORS)

220 : Engine wire No.2  
(To relay block F)

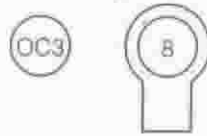


32v : Cowl wire LH  
(To junction block G)

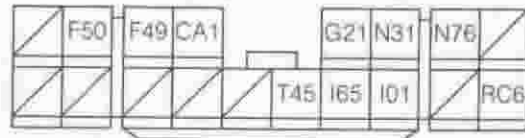


3A0 : Cowl wire RH  
(To turn SW A)




32x : Cowl wire LH  
(To rear wiper SW)

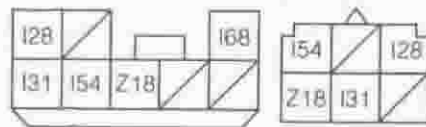


32r : Cowl wire LH  
(To junction block F)

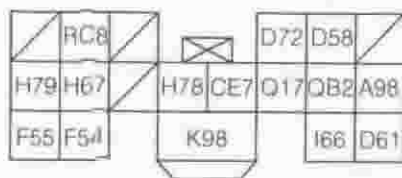


3M<sup>a</sup> : Cowl wire LH  
(To junction block C)

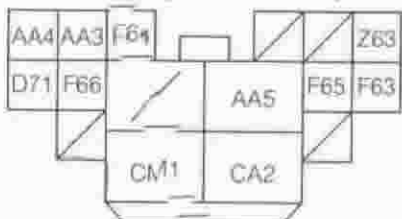


3Ar : Cowl wire RH  
(To cowl wire LH [3M])

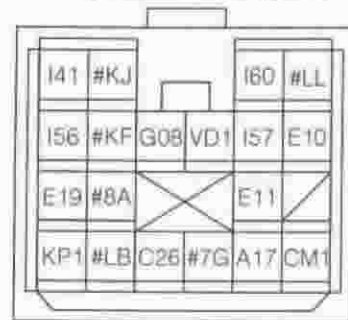


3M1 : Cowl wire LH  
(To cowl wire RH [3Ar])

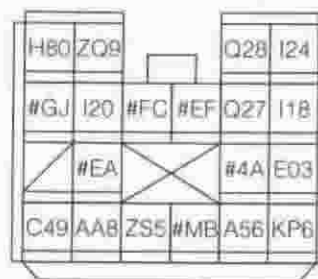


31p : Cowl wire RH  
(To junction block C)

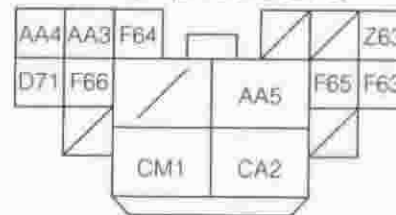


3L9 : Cowl wire RH  
(To floor wire No. 1 [611])

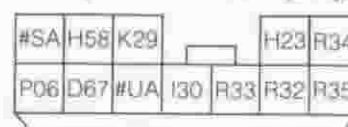


3Ma : Cowl wire LH  
(To turn SW A)

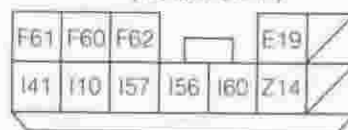


32m : Cowl wire LH  
(To cowl wire RH [31])

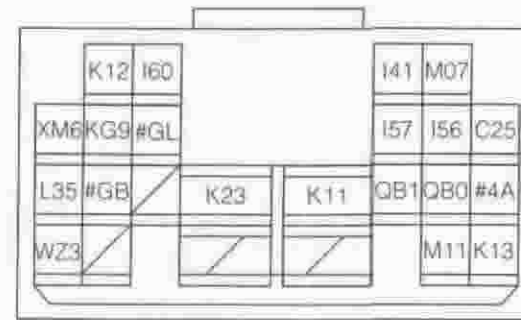

311 : Cowl wire RH  
(To cowl wire LH [32m])

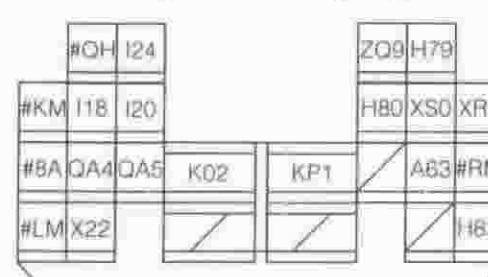


6A1 : Floor wire No. 1  
(To cowl wire LH [3Bc])

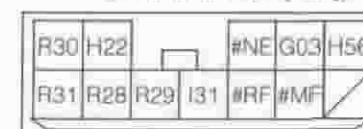

611 : Floor wire No. 1  
(To cowl wire RH [3L9])




3L7 : Cowl wire RH  
(To junction block G)

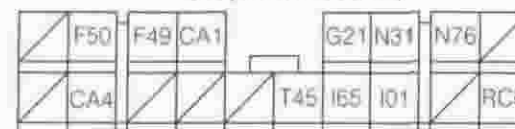


31n : Cowl wire RH  
(To junction block B)




3L1 : Cowl wire RH  
(To rear wiper SW)

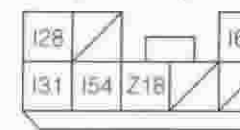


618 : Floor wire No. 1  
(To junction block I)

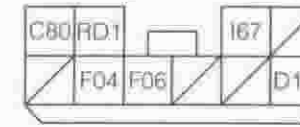

31w : Cowl wire RH  
(To ignition SW)

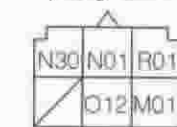


845 : Front door wire RH  
(To floor wire No. 1 [614])

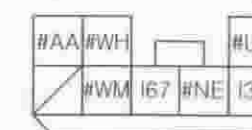


844 : Front door wire LH  
(To rear wiper motor)



3Bc : Cowl wire LH  
(To floor wire No. 1 [6A1])

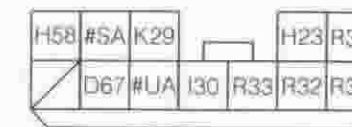

3L6 : Cowl wire RH  
(To junction block F)

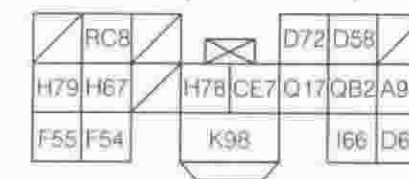

614 : Floor wire No. 1  
(To back door wire No. 1 [845])



3Ab : Cowl wire RH  
(To rear washer motor)



327 : Cowl wire LH  
(To rear washer motor)



3Aa : Cowl wire RH  
(To front washer motor)



326 : Cowl wire LH  
(To front washer motor)




3A6 : Cowl wire RH  
(To relay block E)




328 : Cowl wire RH  
(To front wiper motor)




3Lh : Cowl wire RH  
(To front wiper motor)

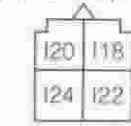


DEFOGGER (LHD)

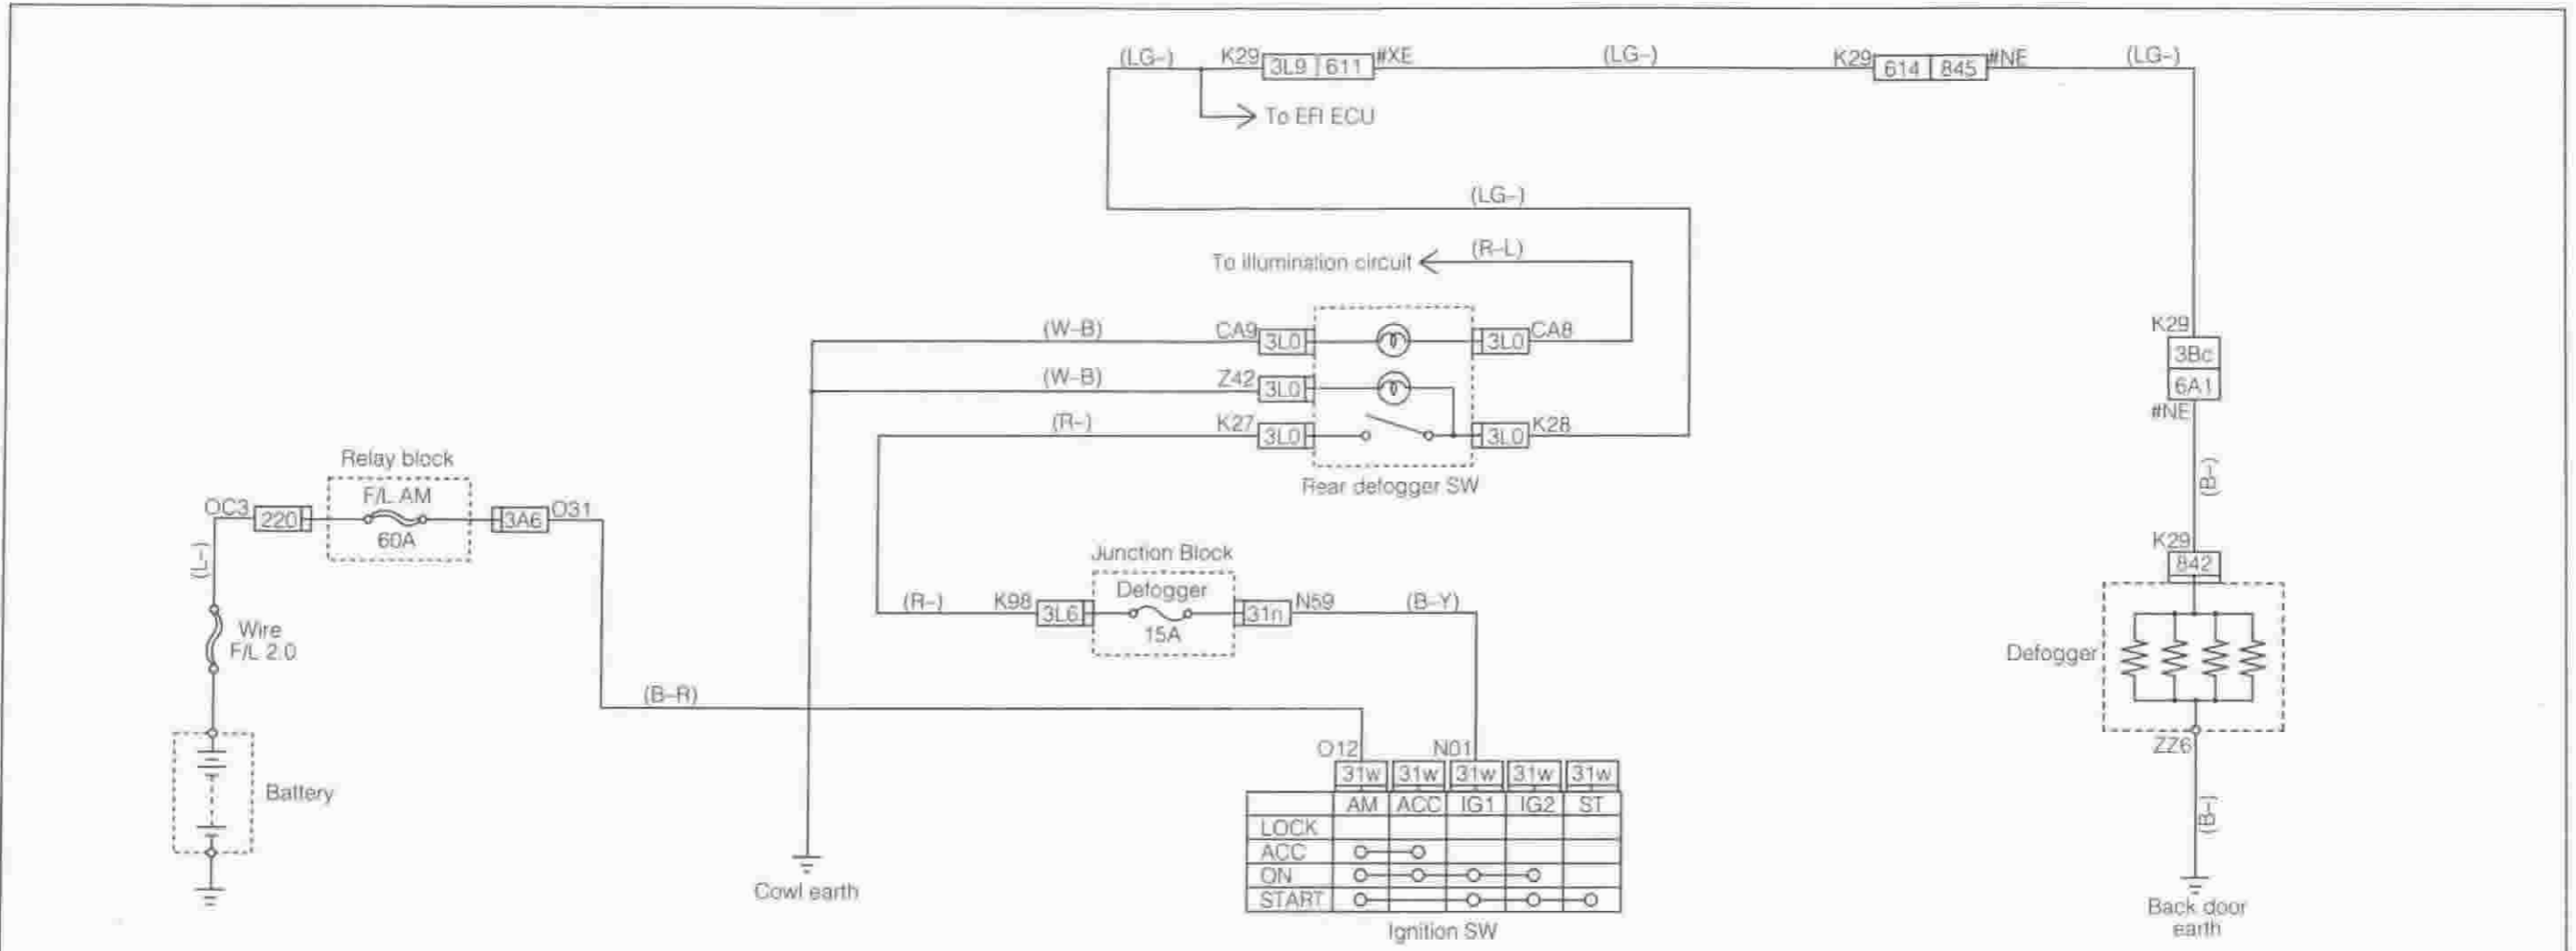

220 : Engine wire No. 2  
(To relay block F)

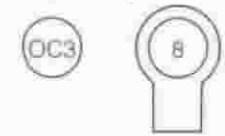

 
31n : Cowl wire RH  
(To junction block B)




611 : Floor wire No. 1  
(To cowl wire RH [3L9])



845 : Front door wire RH  
(To floor wire No. 1 [614])

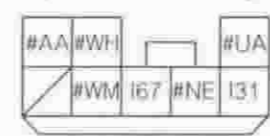

6A1 : Floor wire No. 1  
(To cowl wire LH [3Bc])

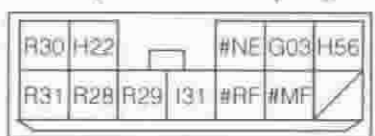


3A6 : Cowl wire RH  
(To relay block E)




31w : Cowl wire RH  
(To ignition SW)




614 : Floor wire No. 1  
(To back door wire No. 1 [845])

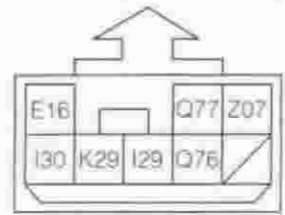


3Bc : Cowl wire LH  
(To floor wire No. 1 [6A1])

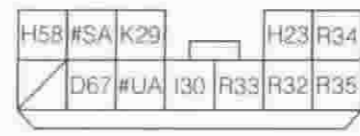


842 : Floor wire No. 1  
(To rear window wire No. 1)

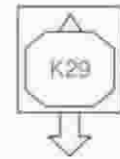


3L0 : Cowl Wire RH  
(To rear defogger SW)








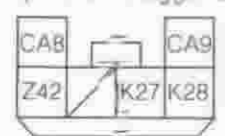


3L9 : Cowl wire RH  
(To floor wire No. 1 [611])

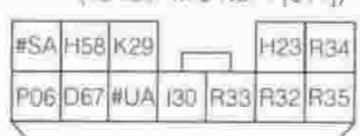


3L6 : Cowl wire RH  
(To junction block F)

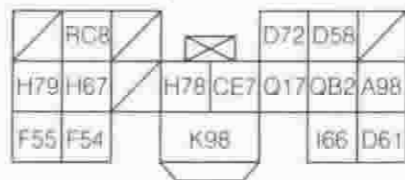


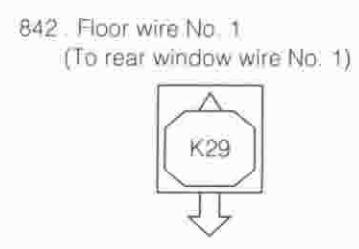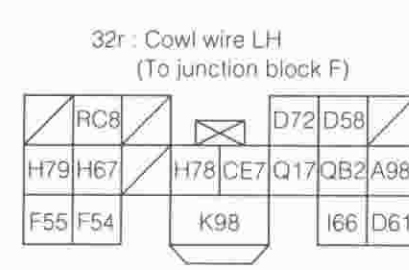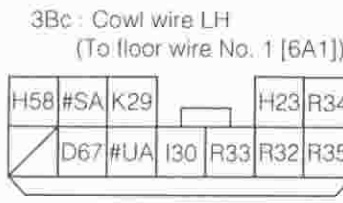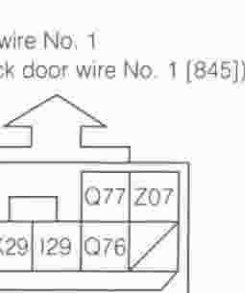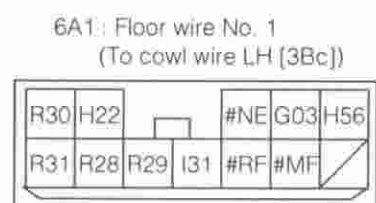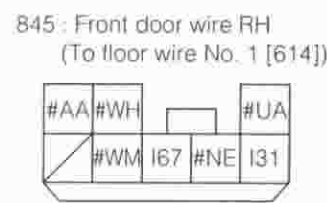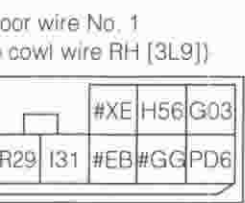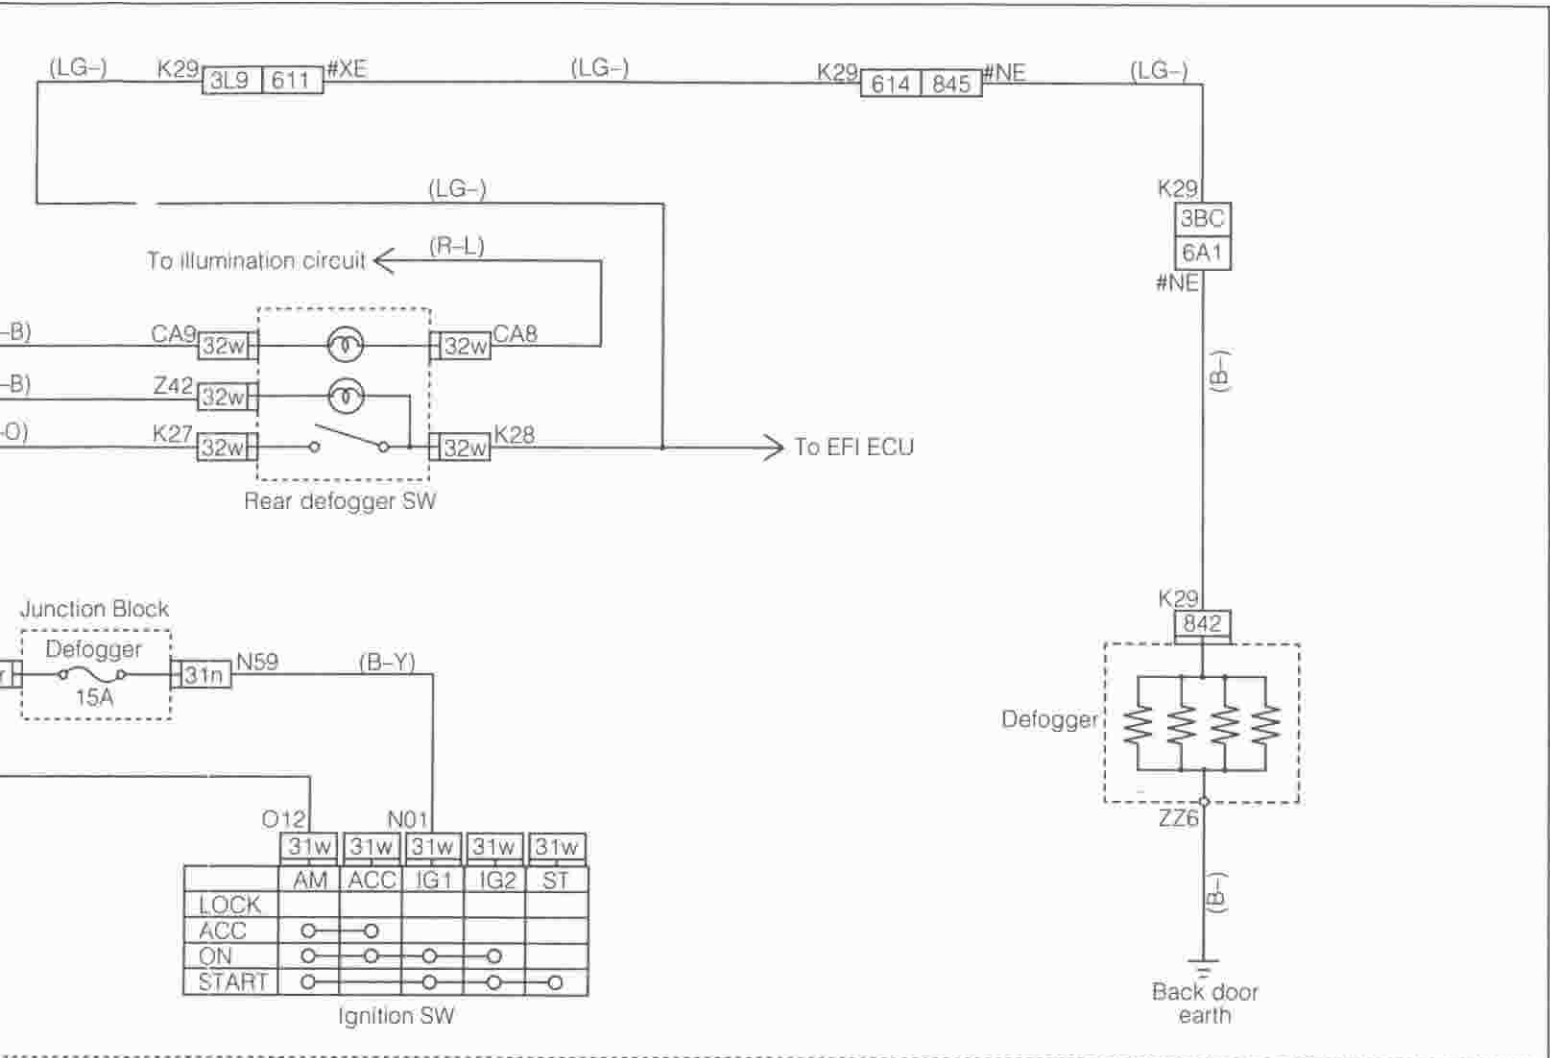

CIGARETTE LIGHTER, HORN, RADIO (LHD)

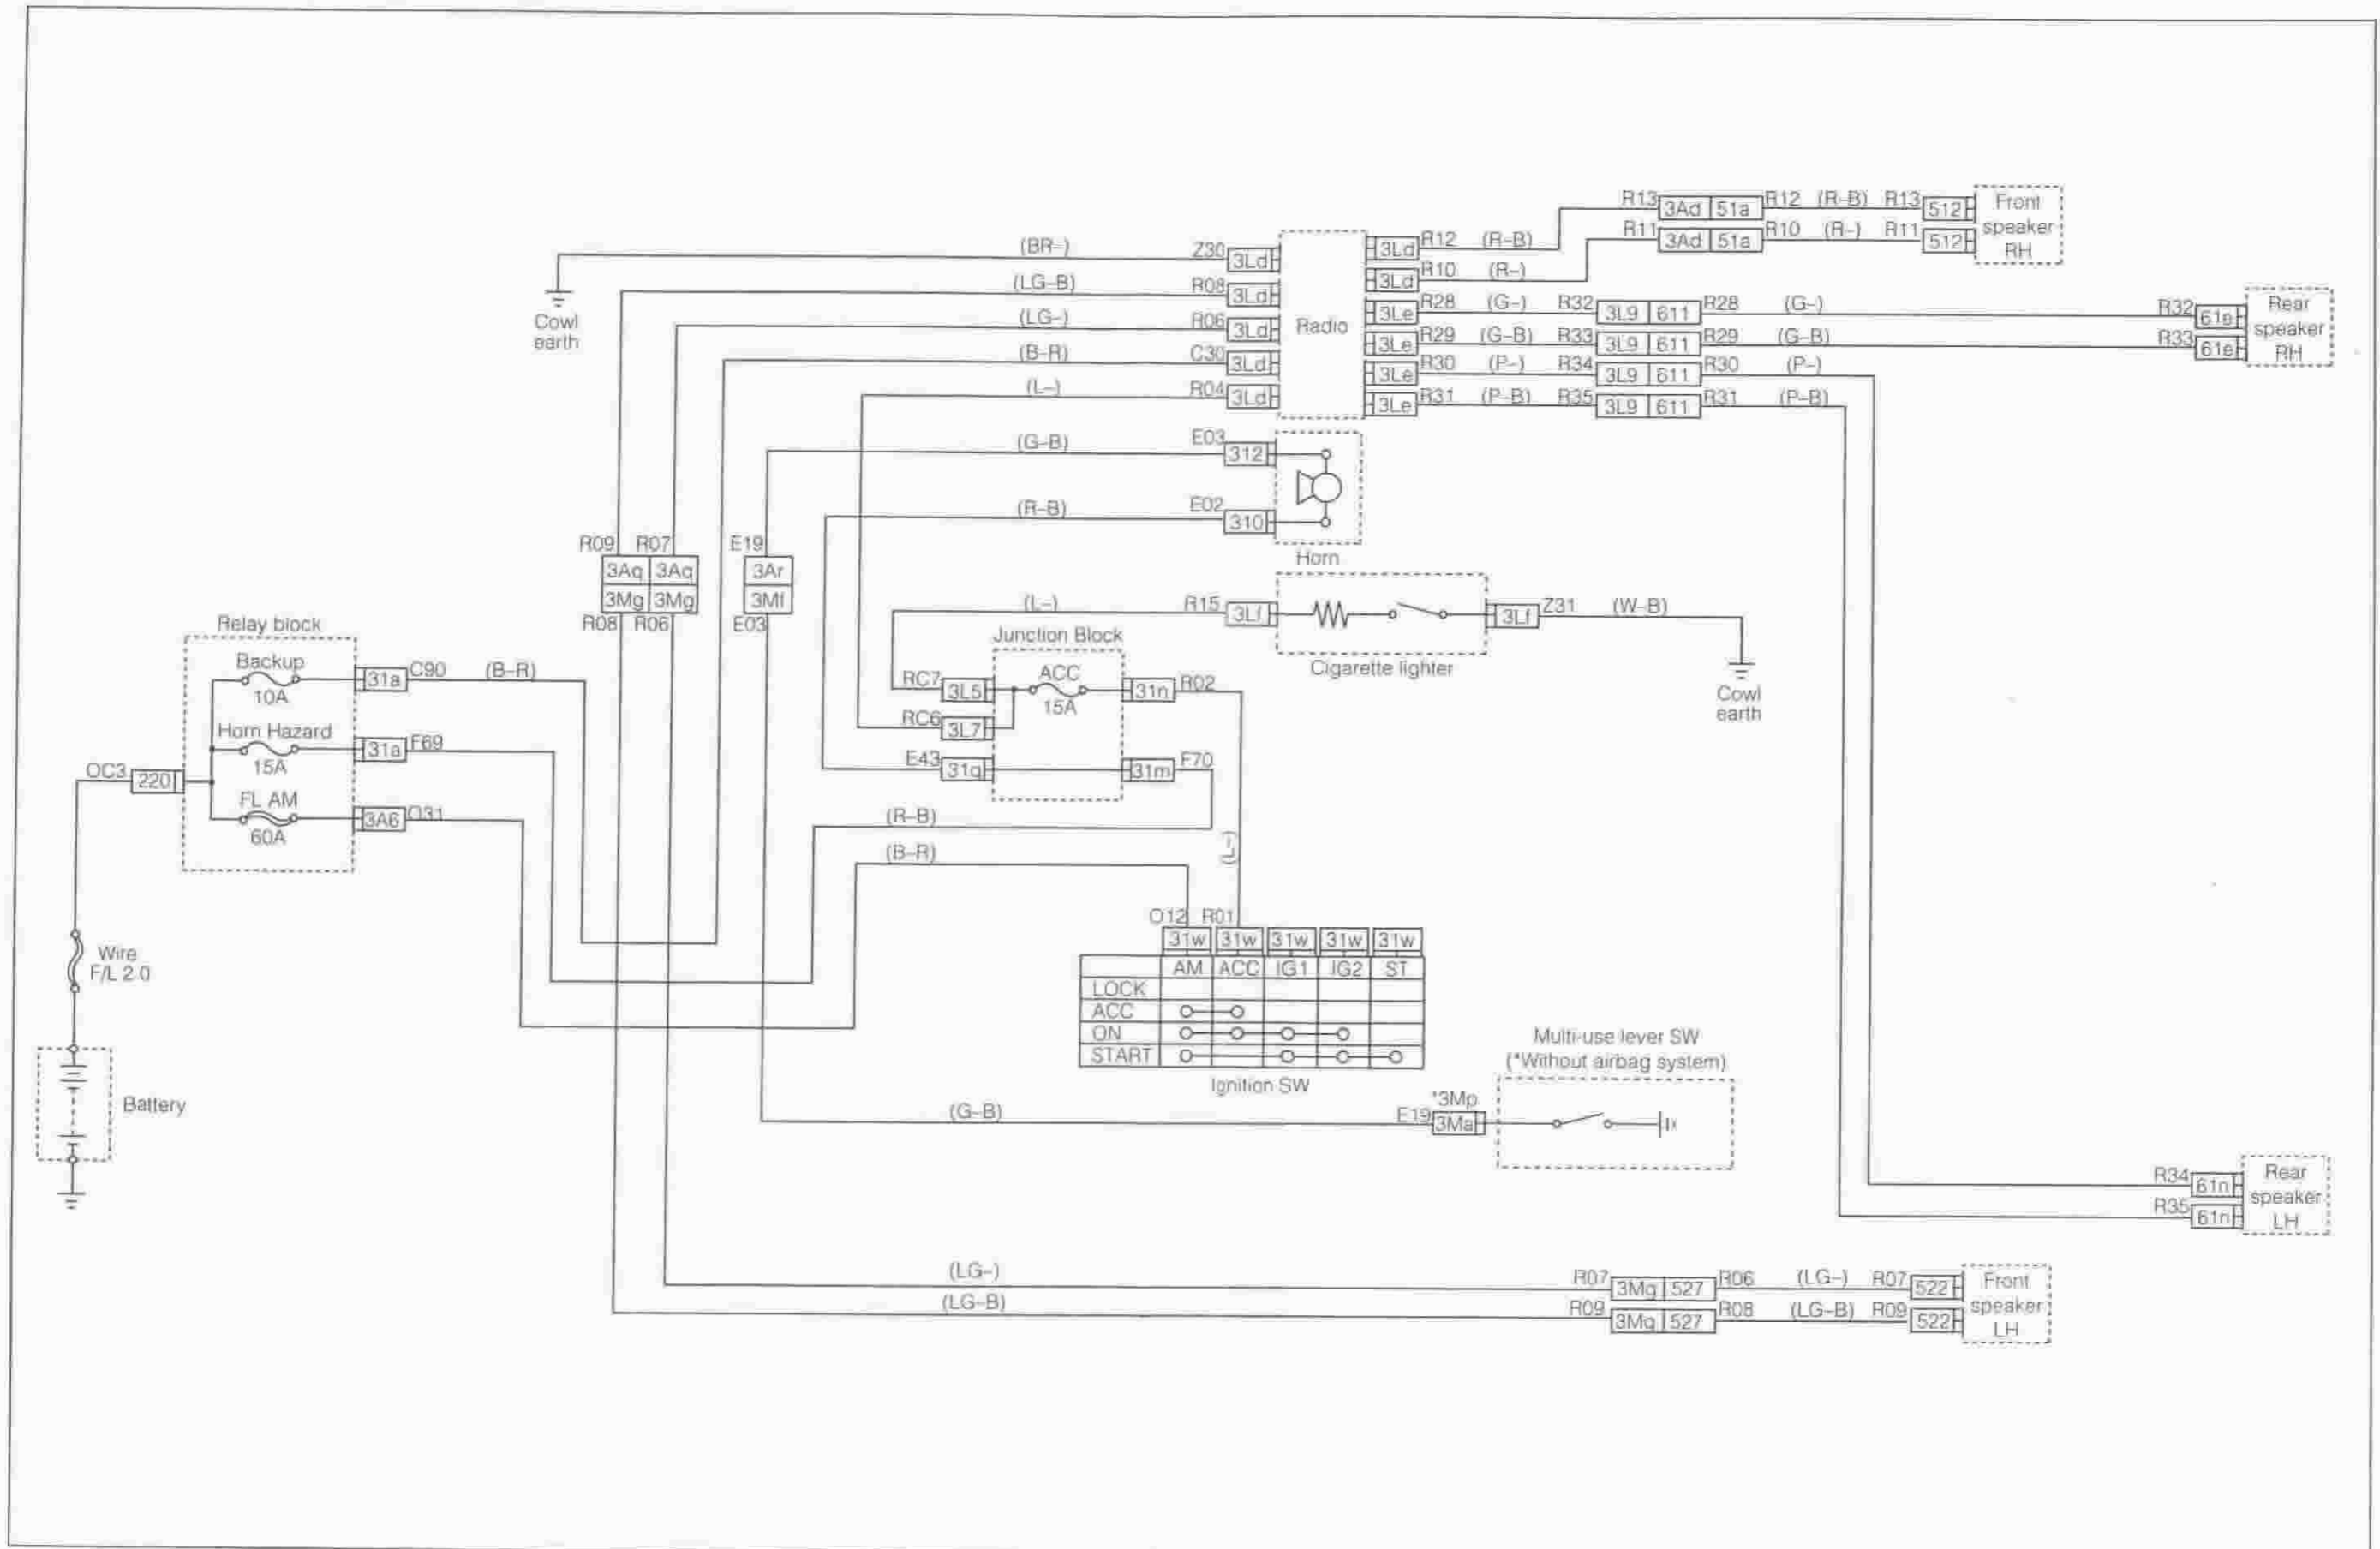


CIGARETTE LIGHTER, HORN, RADIO (RHD)


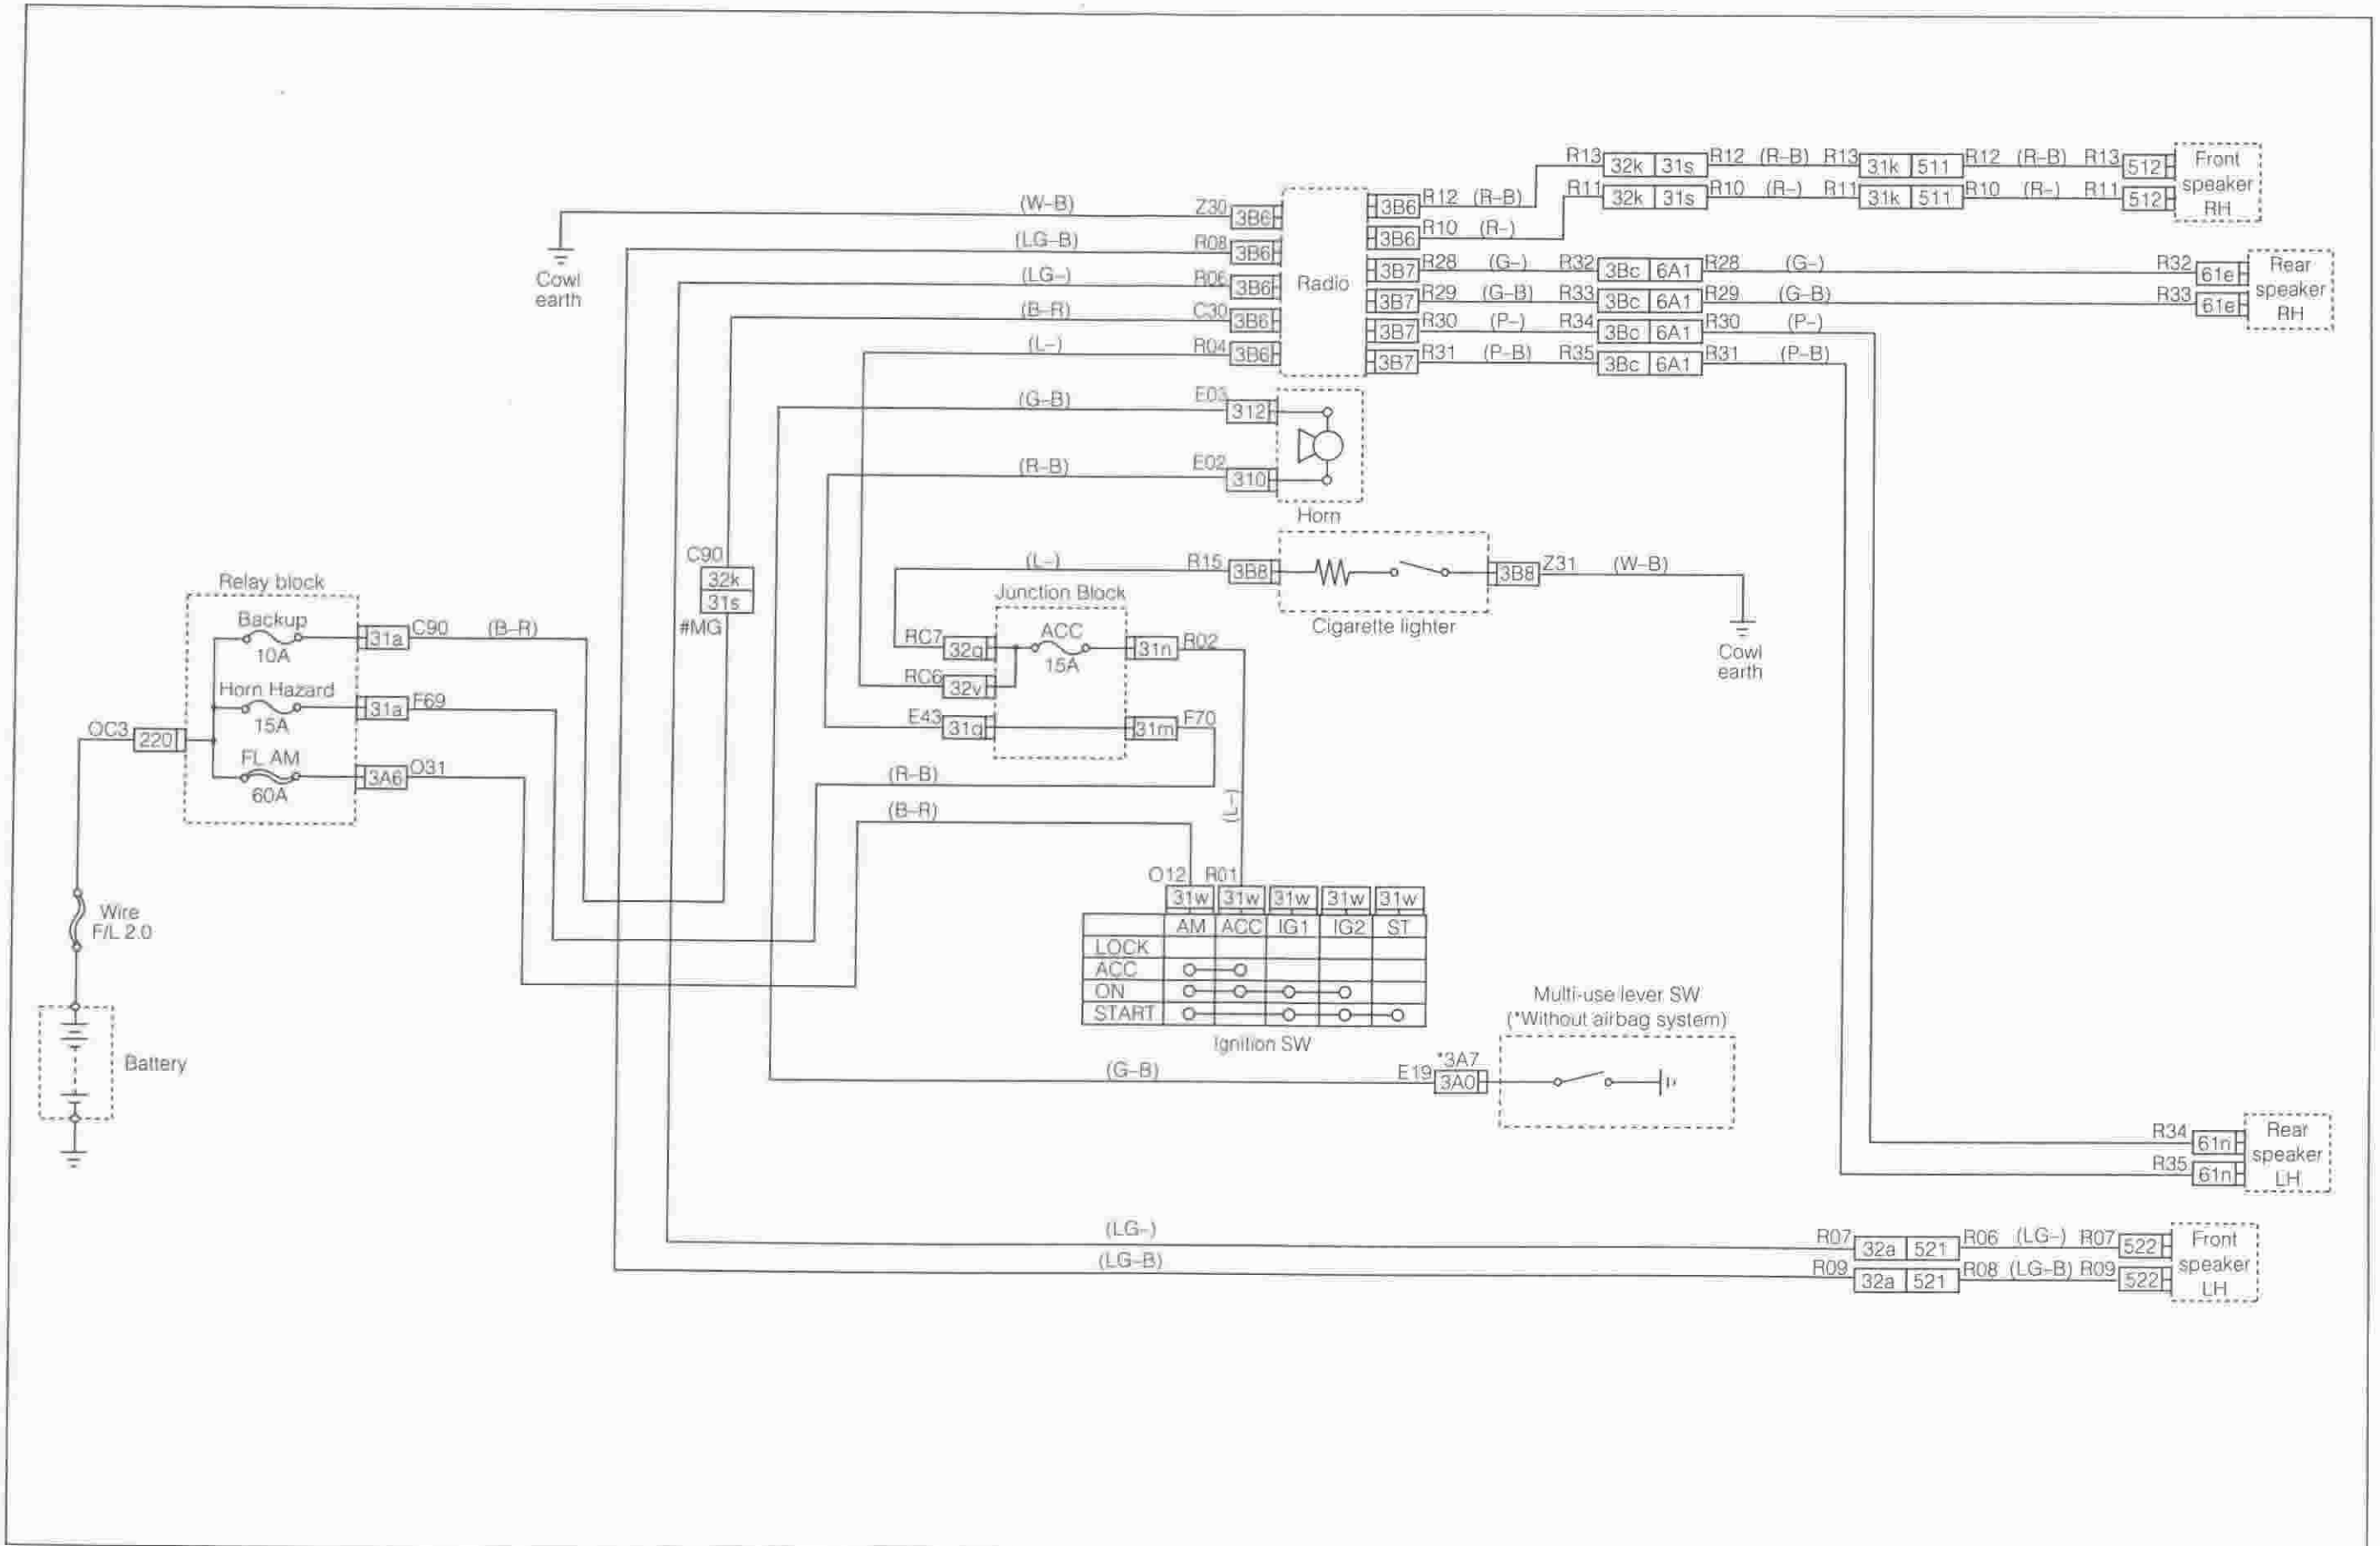





CIGARETTE LIGHTER, HORN, RADIO (CONNECTORS)

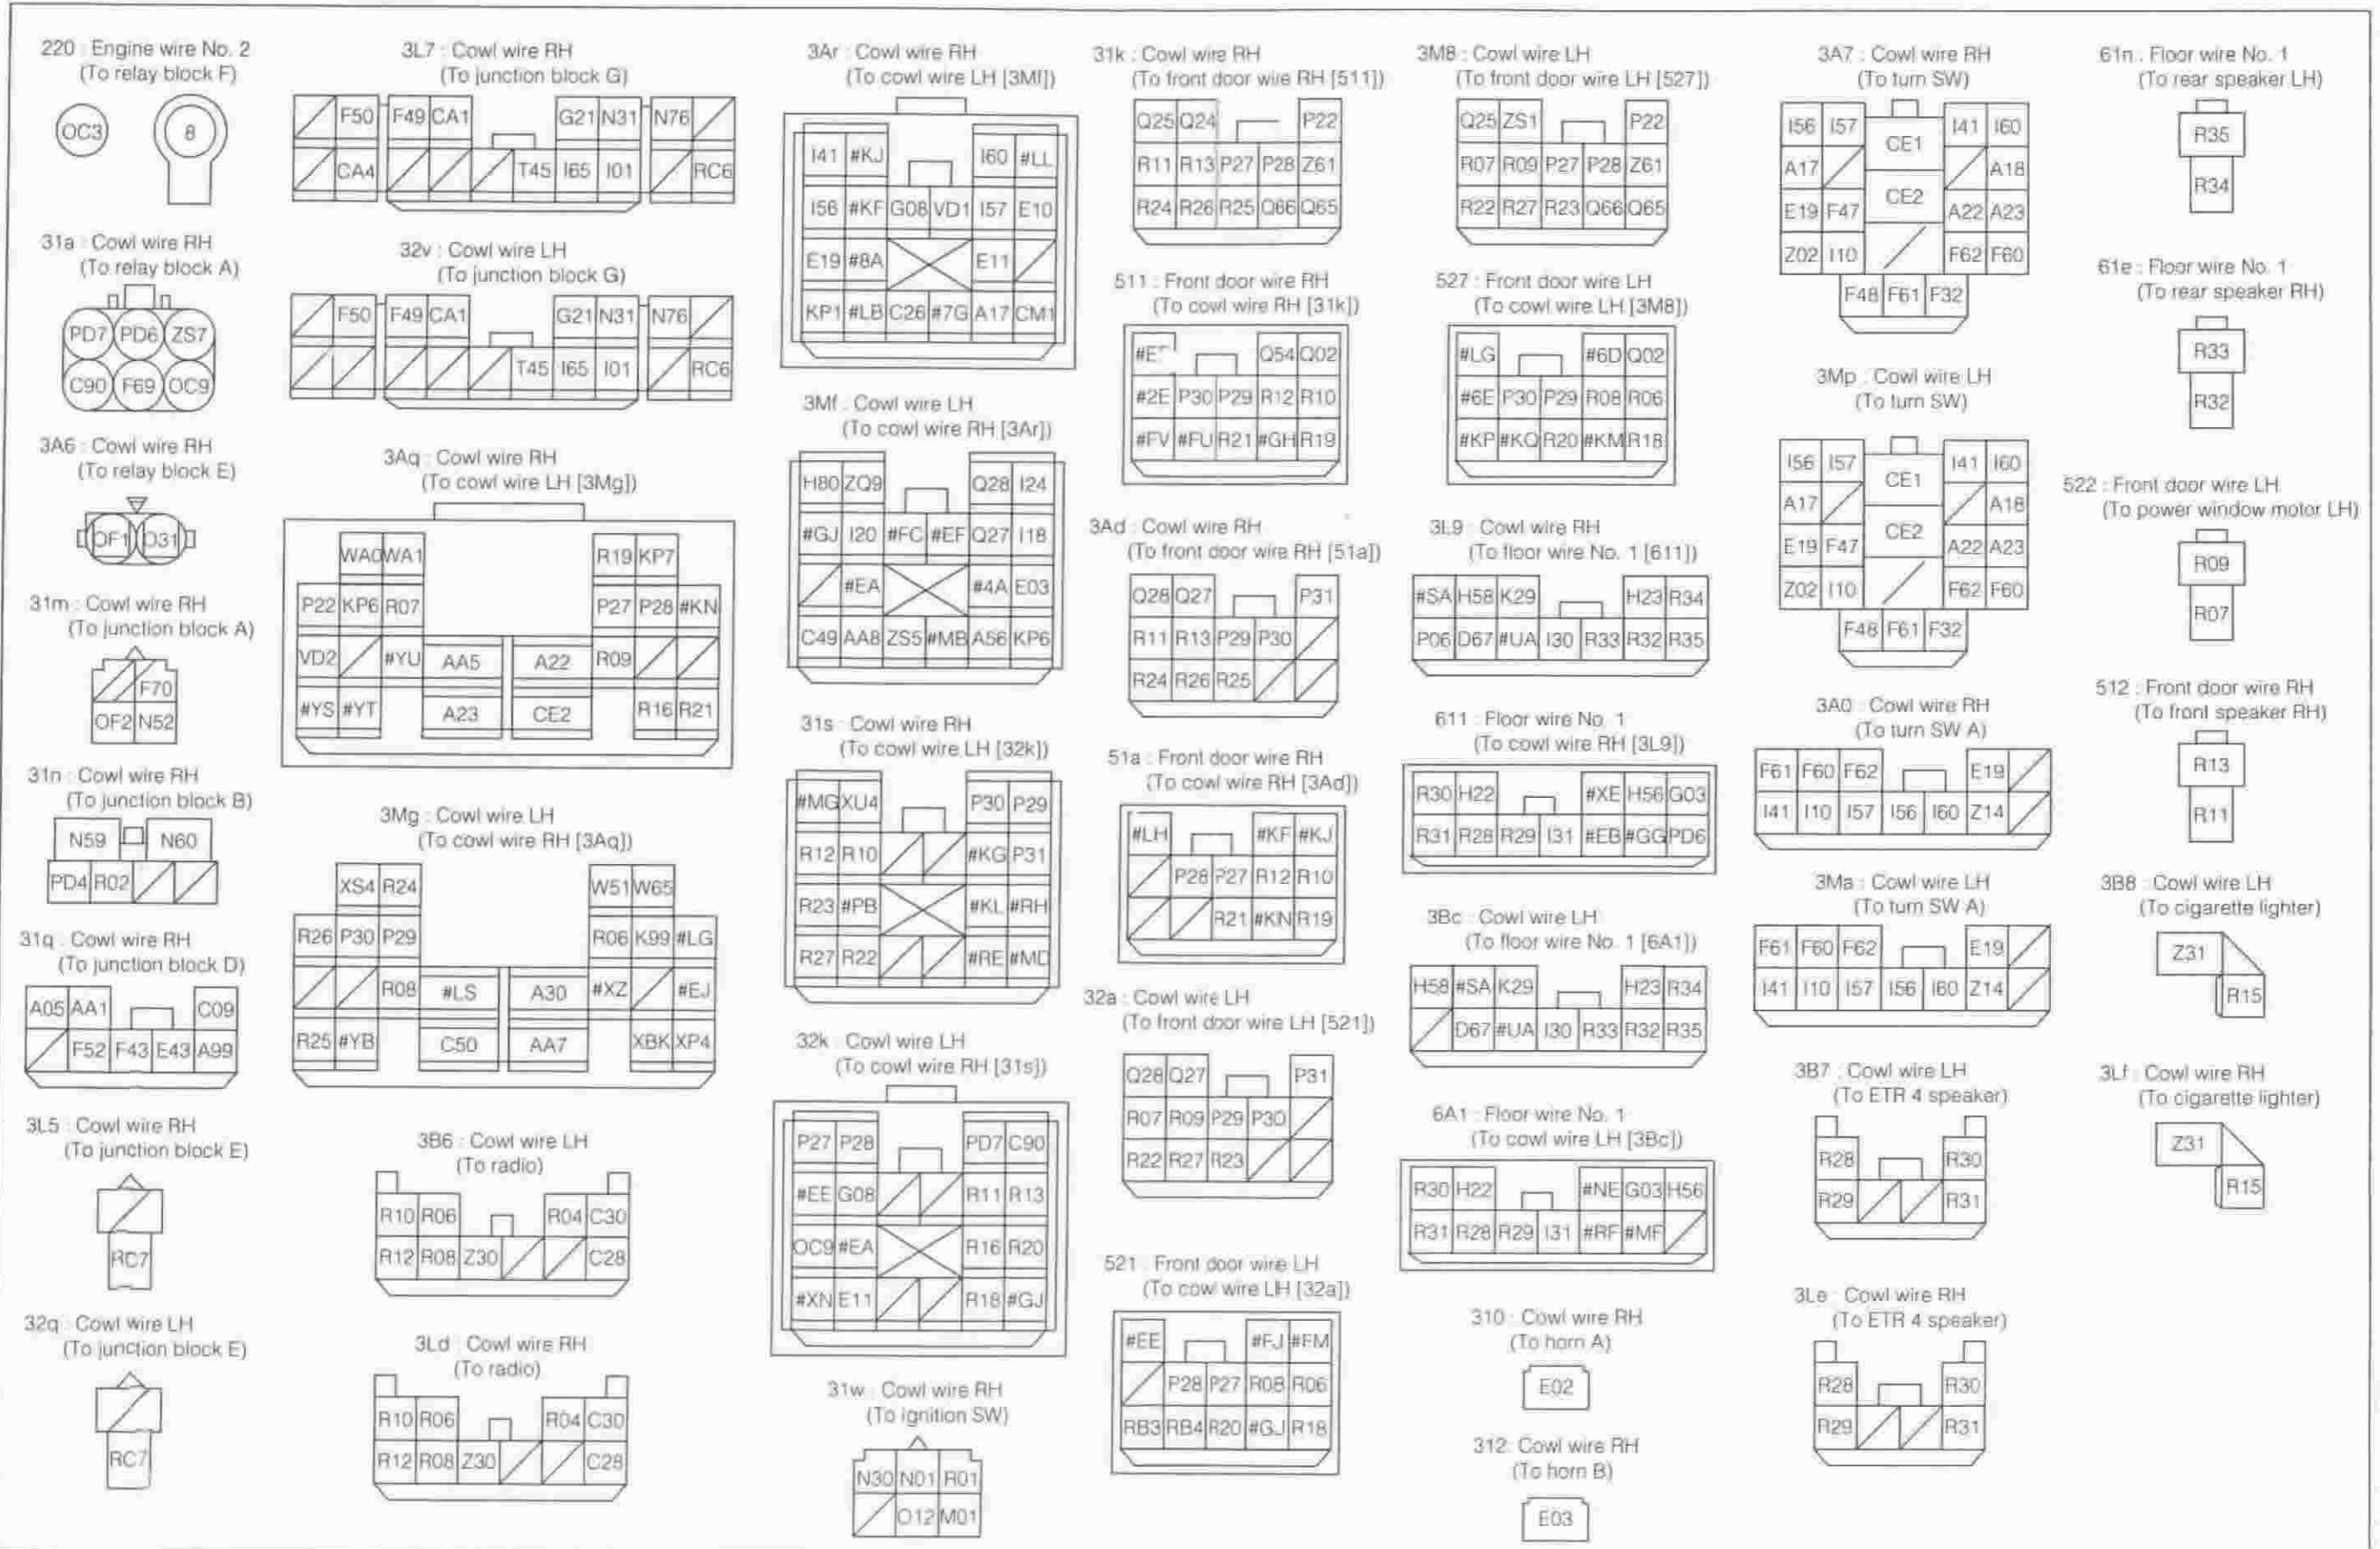


REAR VIEW MIRROR

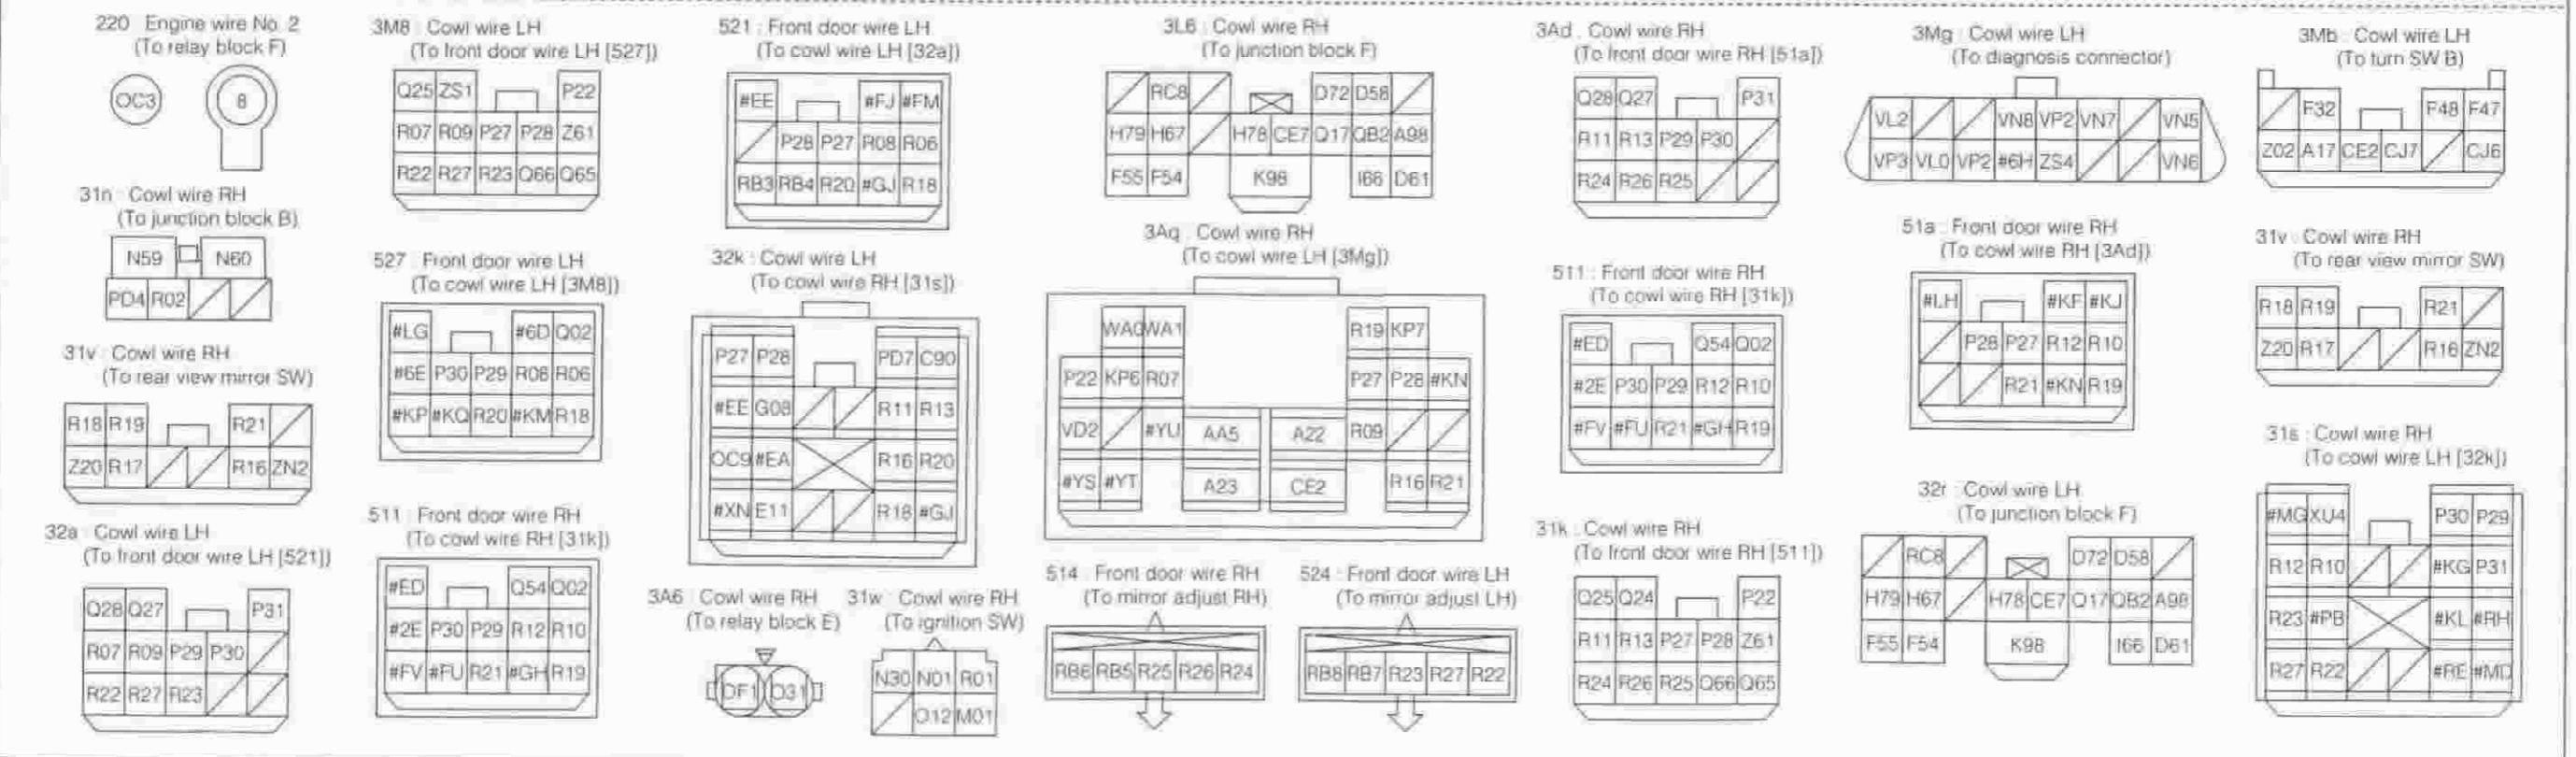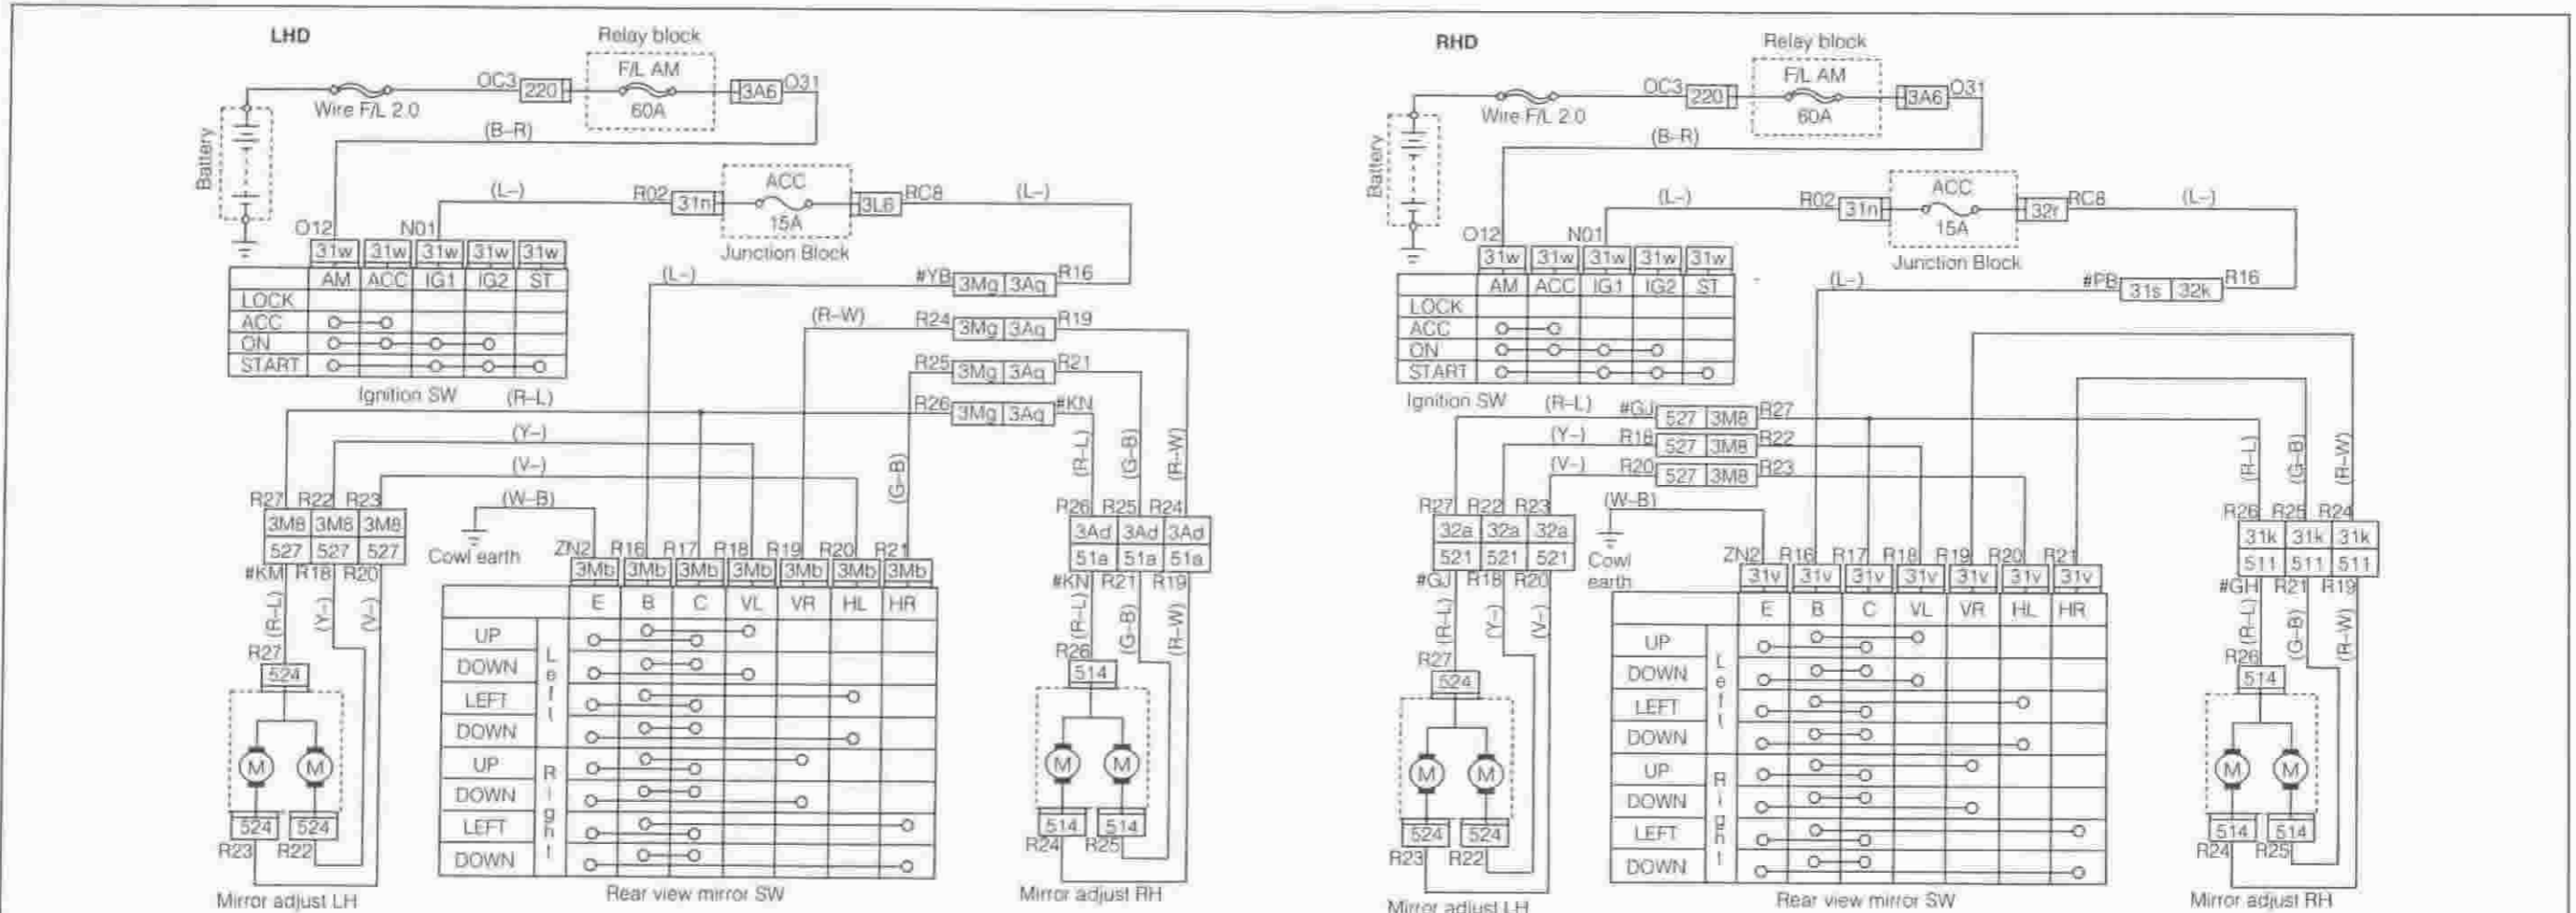


CLOCK

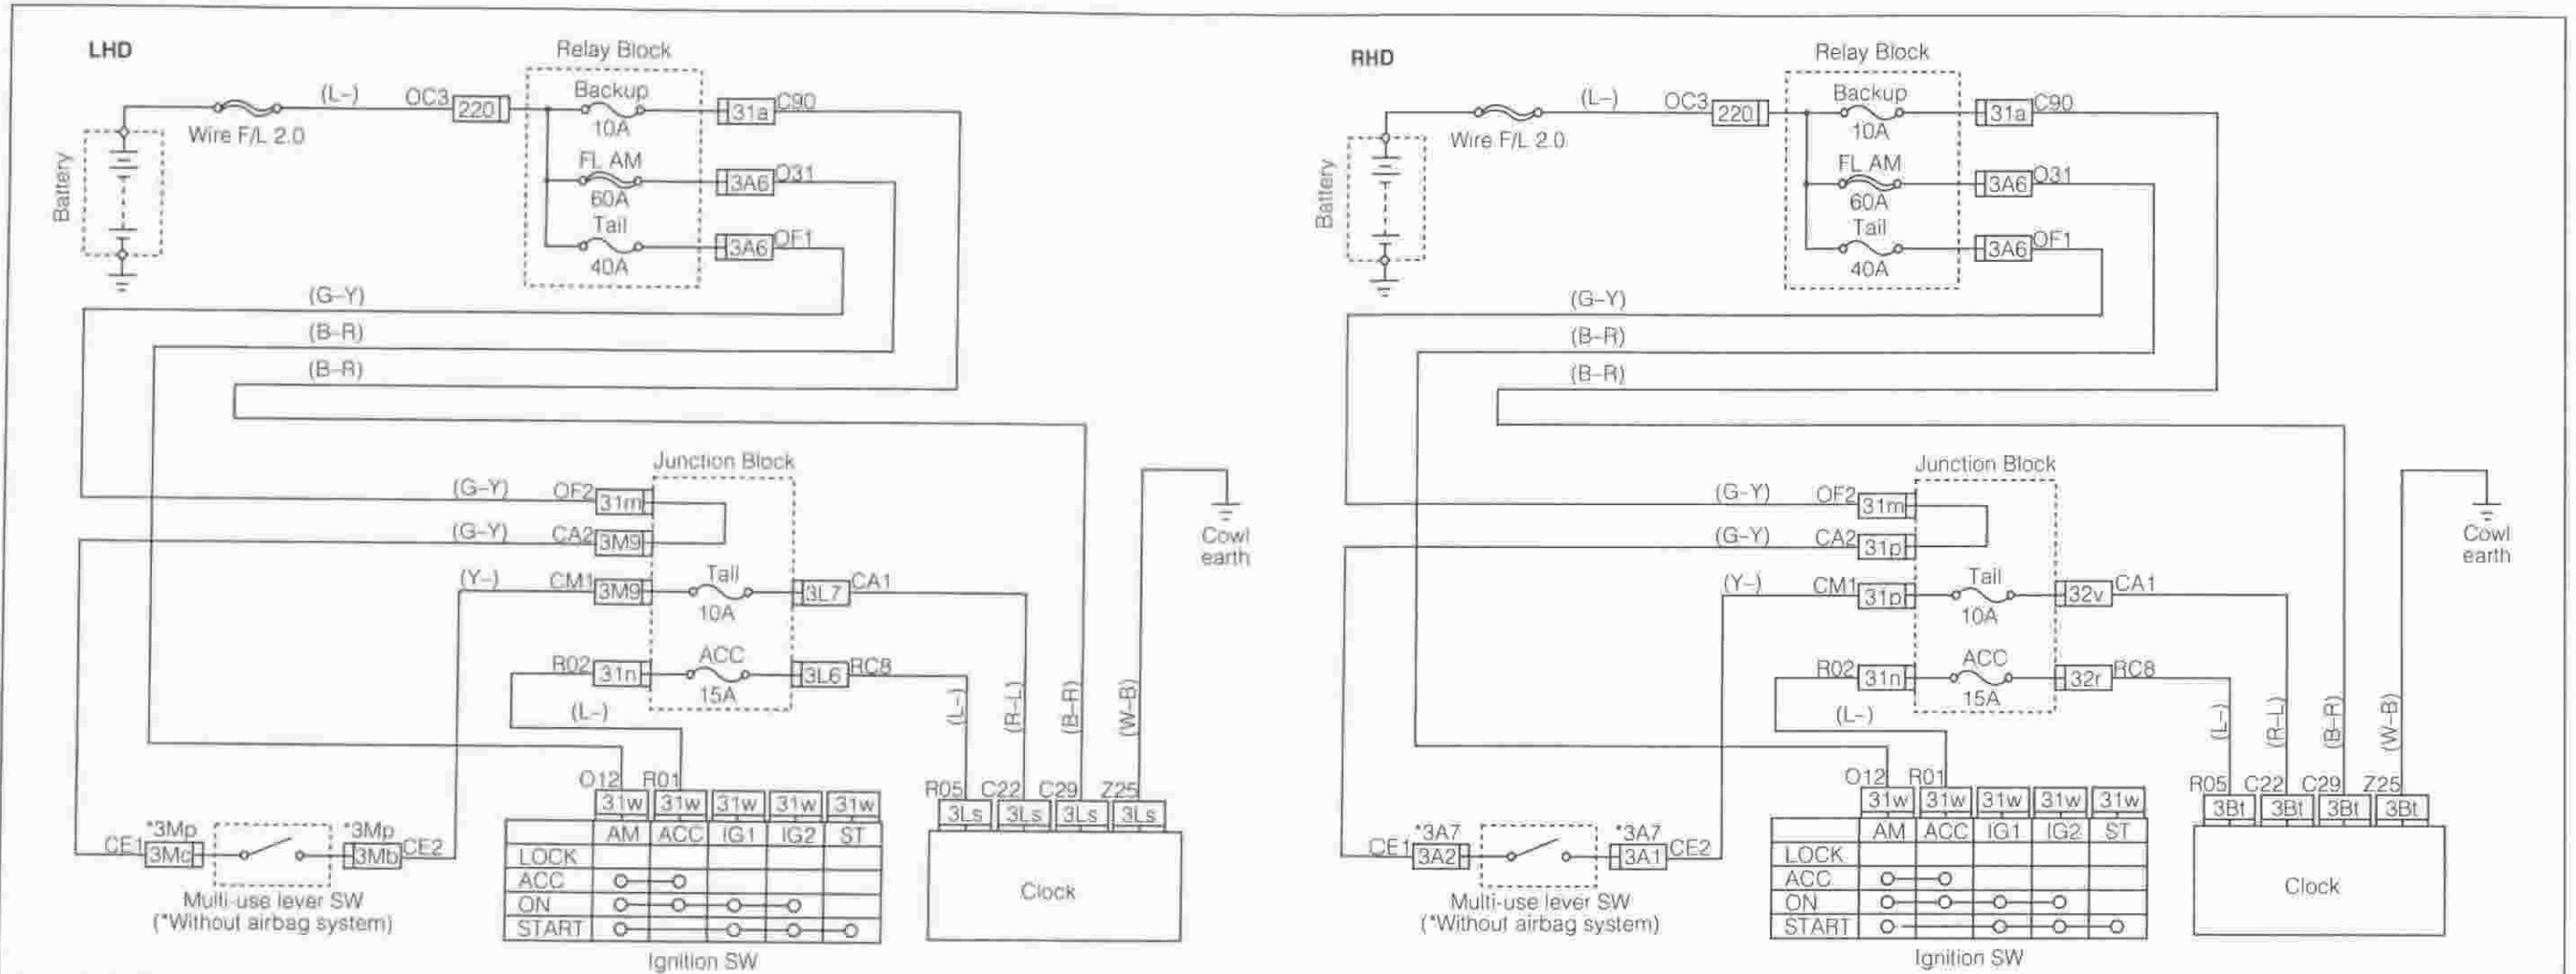


220 : Engine wire No. 2 (To relay block F)

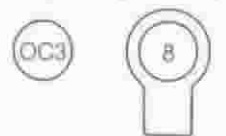


3L7 : Cowl wire RH (To junction block G)

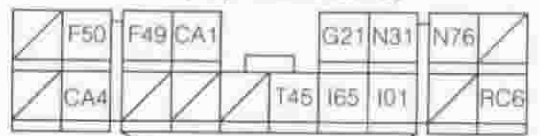

32v : Cowl wire LH (To junction block G)

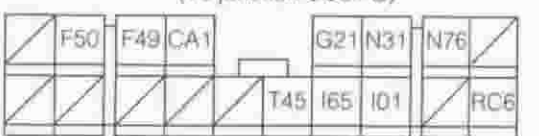

3L6 : Cowl wire RH (To junction block F)

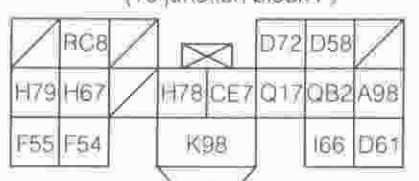

3A7 : Cowl wire RH (To turn SW)




3Mp : Cowl wire LH (To turn SW)




3A6 : Cowl wire RH (To relay block E)




31p : Cowl wire RH (To junction block C)

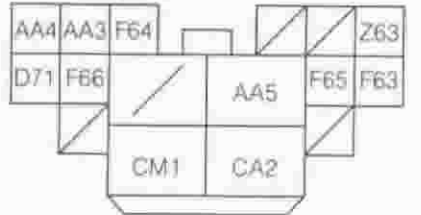

3M9 : Cowl wire LH (To junction block C)

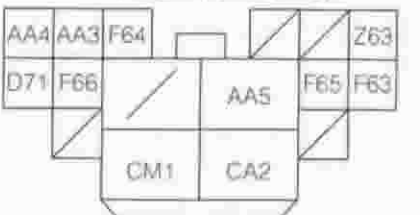


32r : Cowl wire LH (To junction block F)

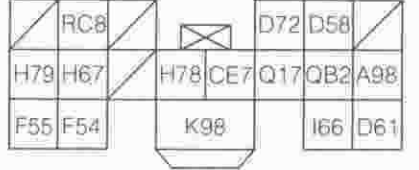


3A2 : Cowl wire RH (To turn SW C)



 
3Mc : Cowl wire LH (To turn SW C)



31a : Cowl wire RH (To relay block A)

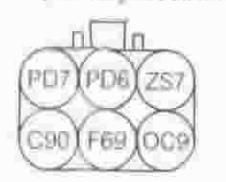

 
31n : Cowl wire RH (To junction block B)



31m : Cowl wire RH (To junction block A)




31w : Cowl wire RH (To ignition SW)

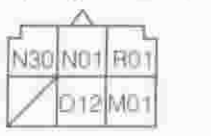

3Ls : Cowl wire RH (To clock)




3Lt : Cowl wire LH (To clock)

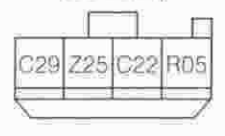


3A1 : Cowl wire RH (To turn SW B)




3Mb : Cowl wire LH (To turn SW B)

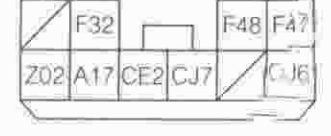


ITC 1/2 (LHD)

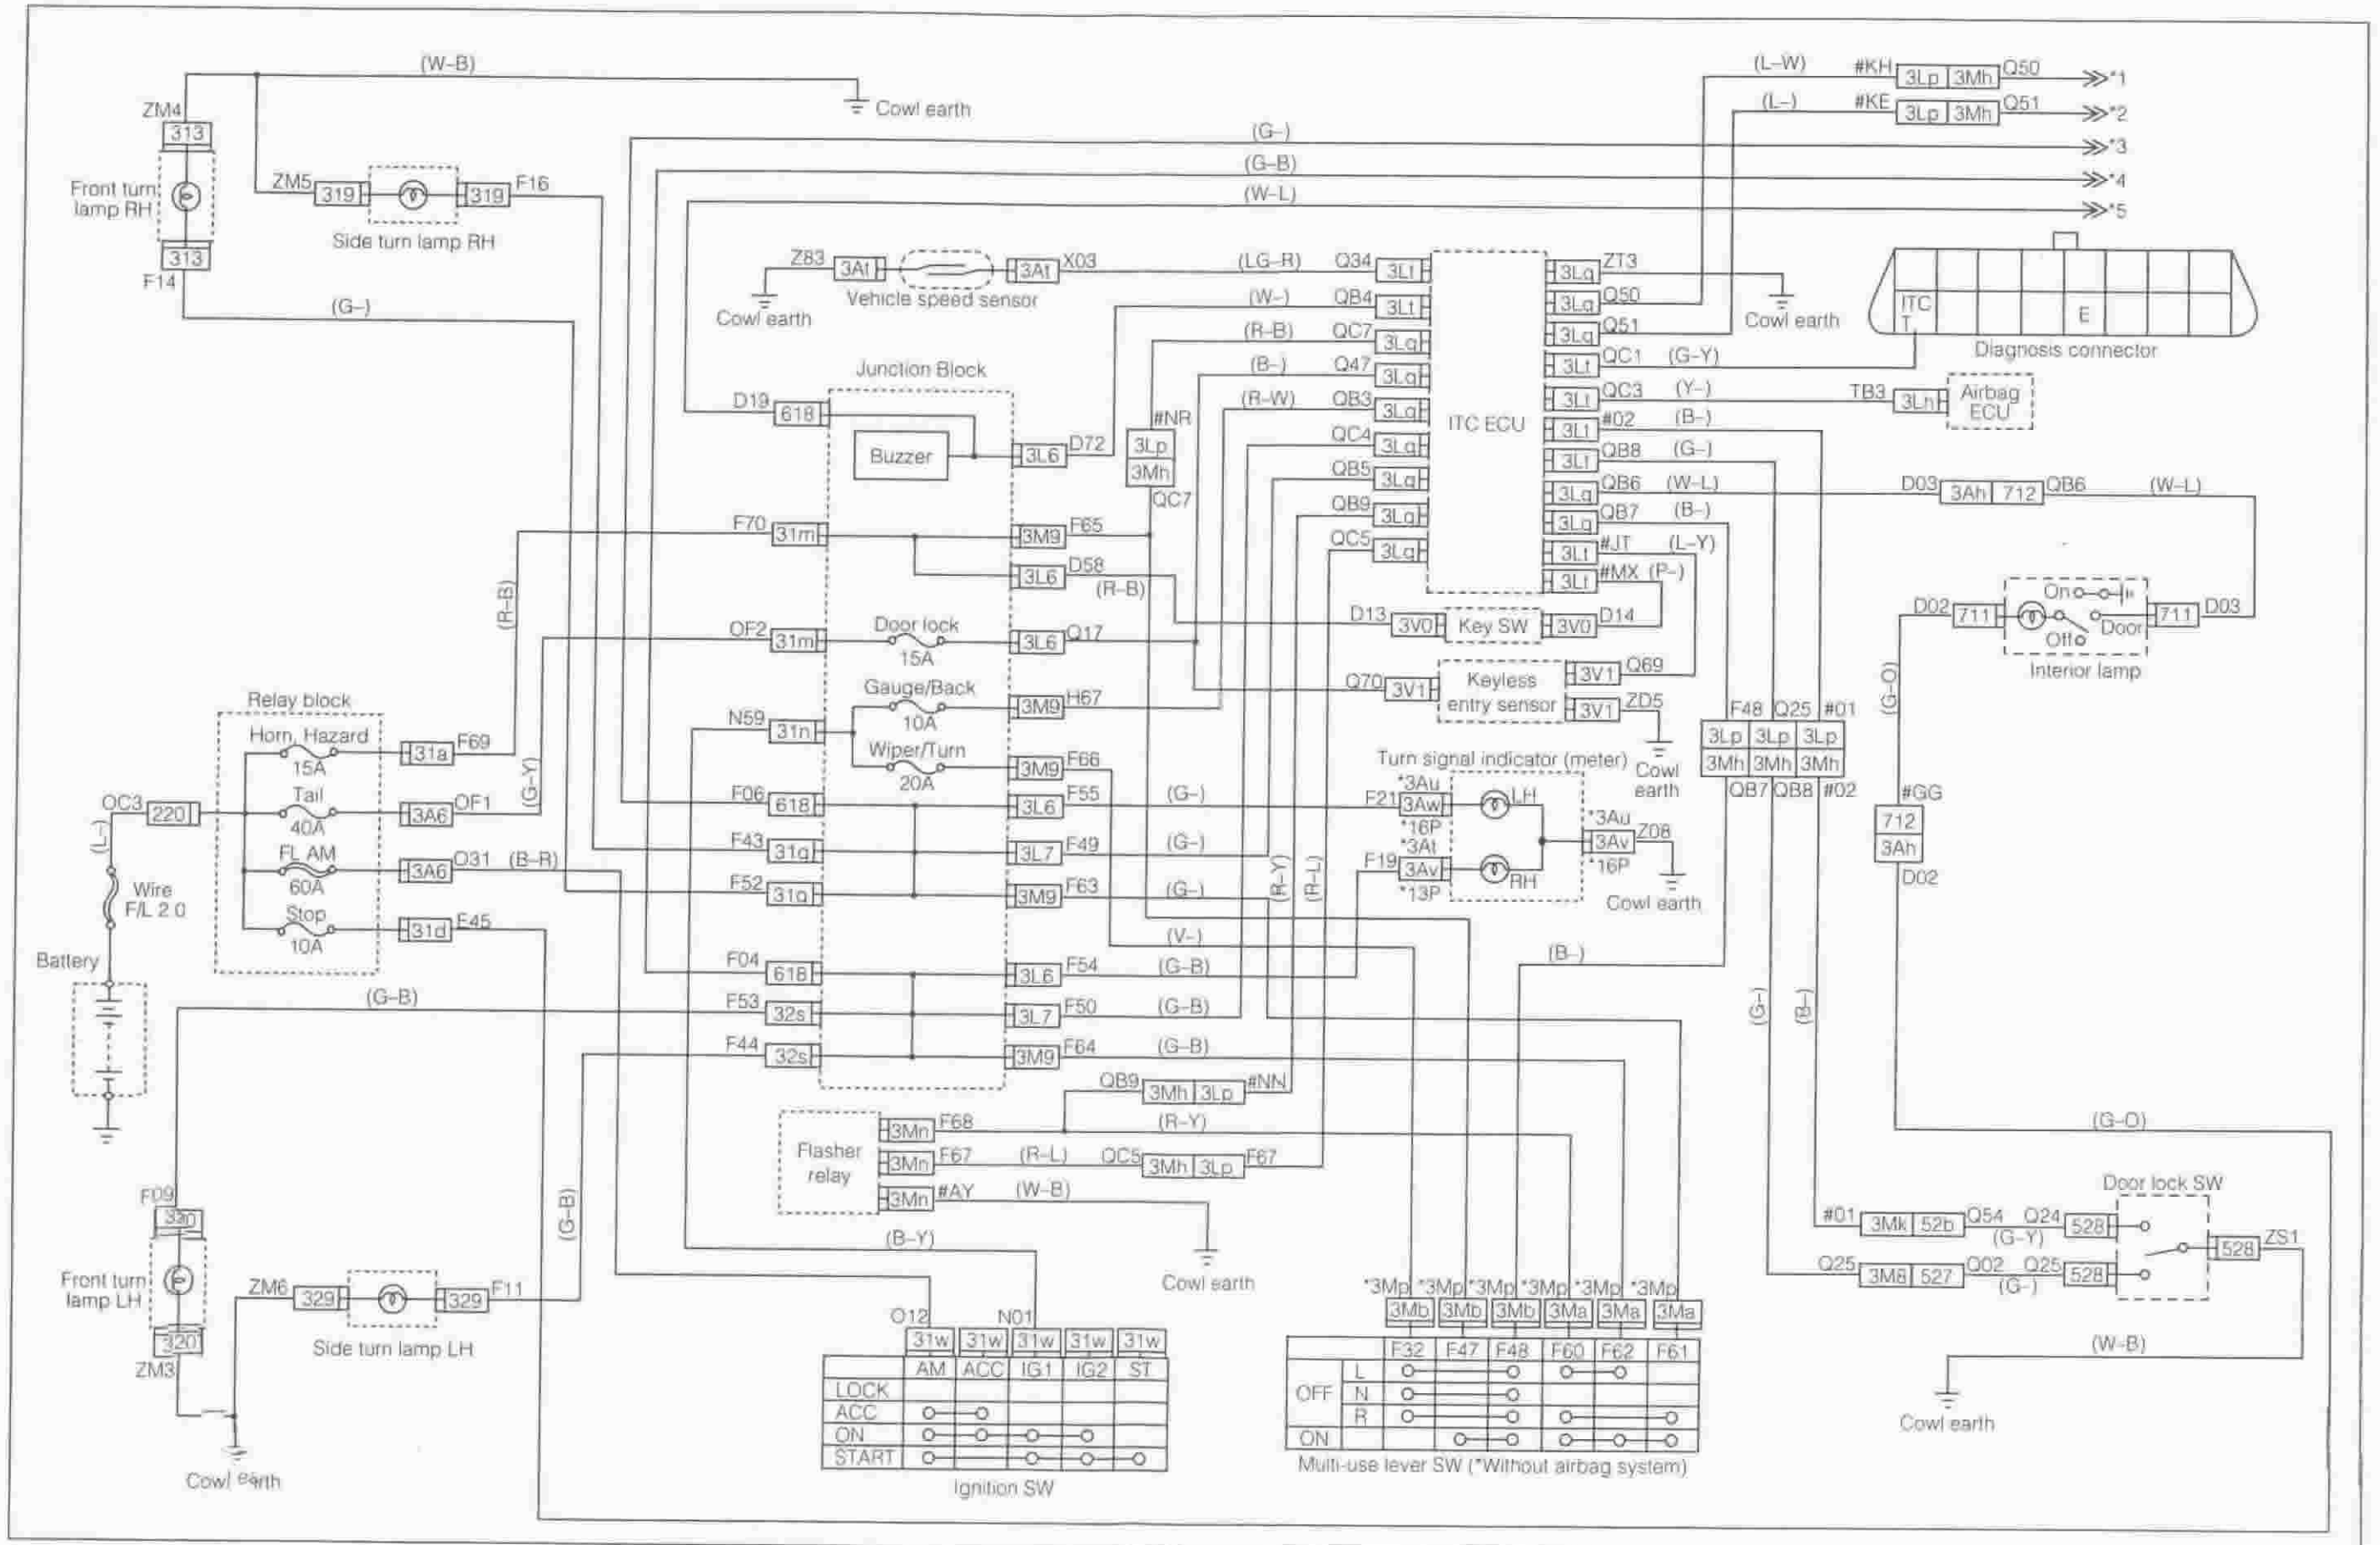



ITC 2/2 (LHD)

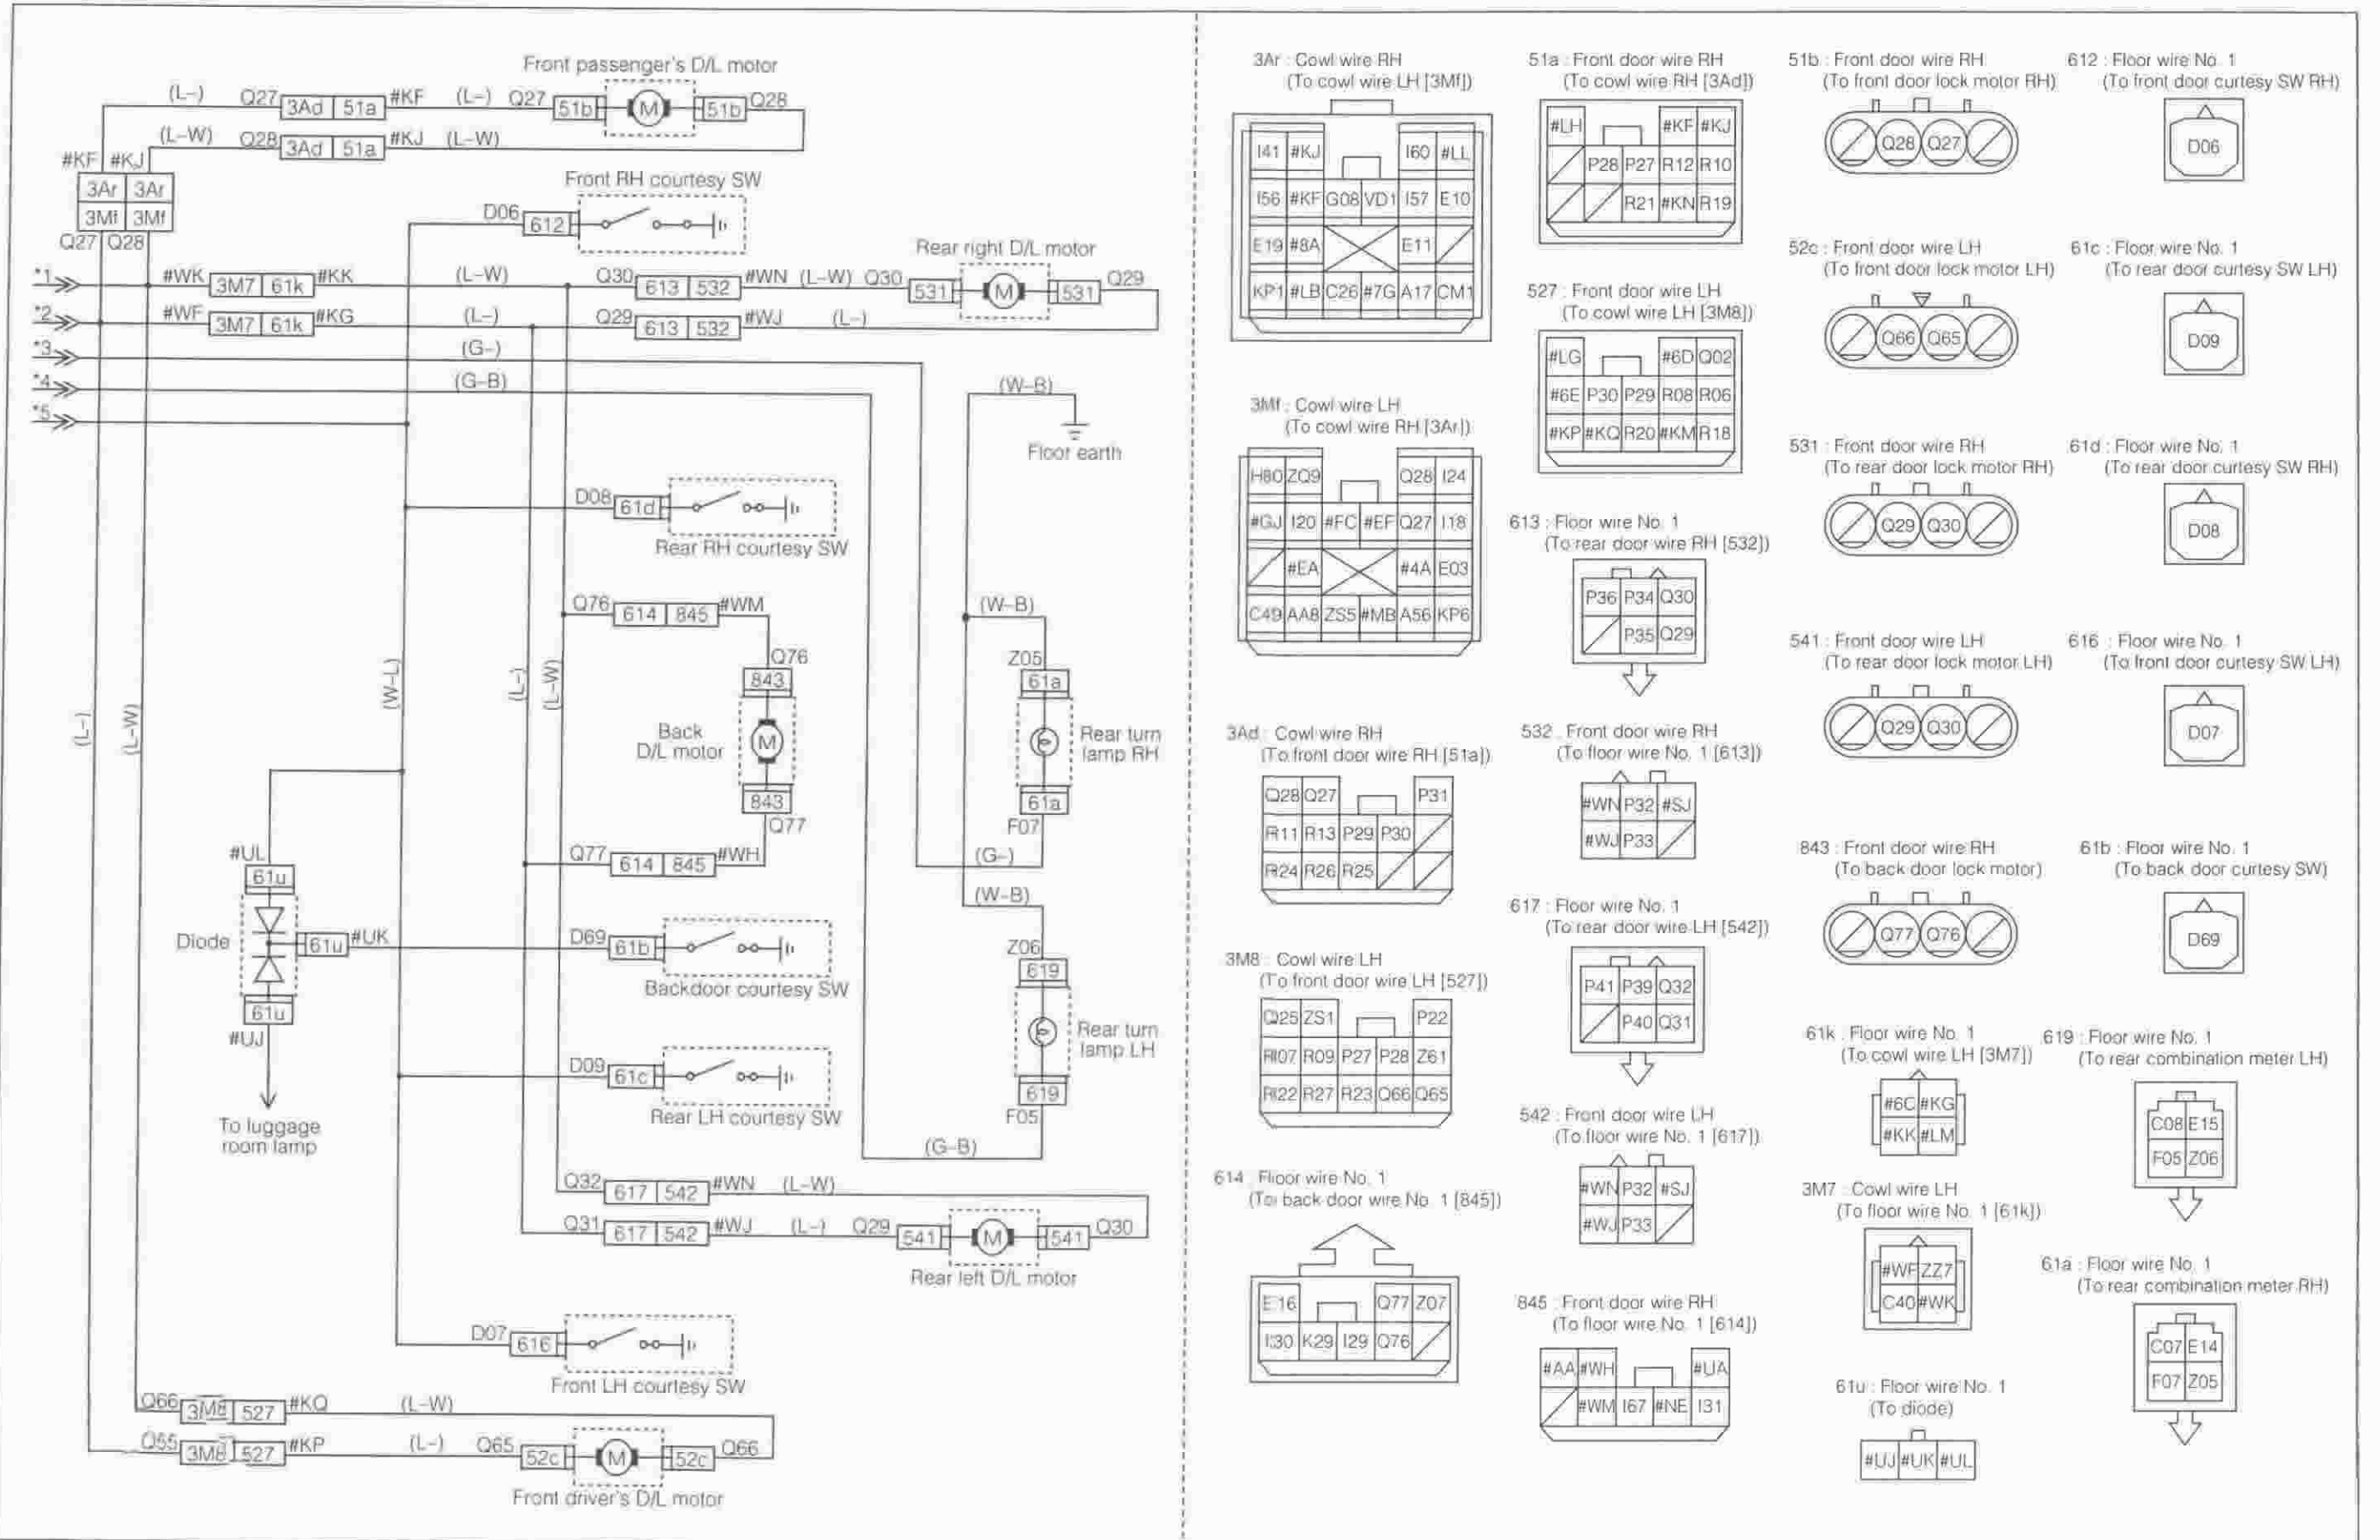


ITC 1/2 (RHD)

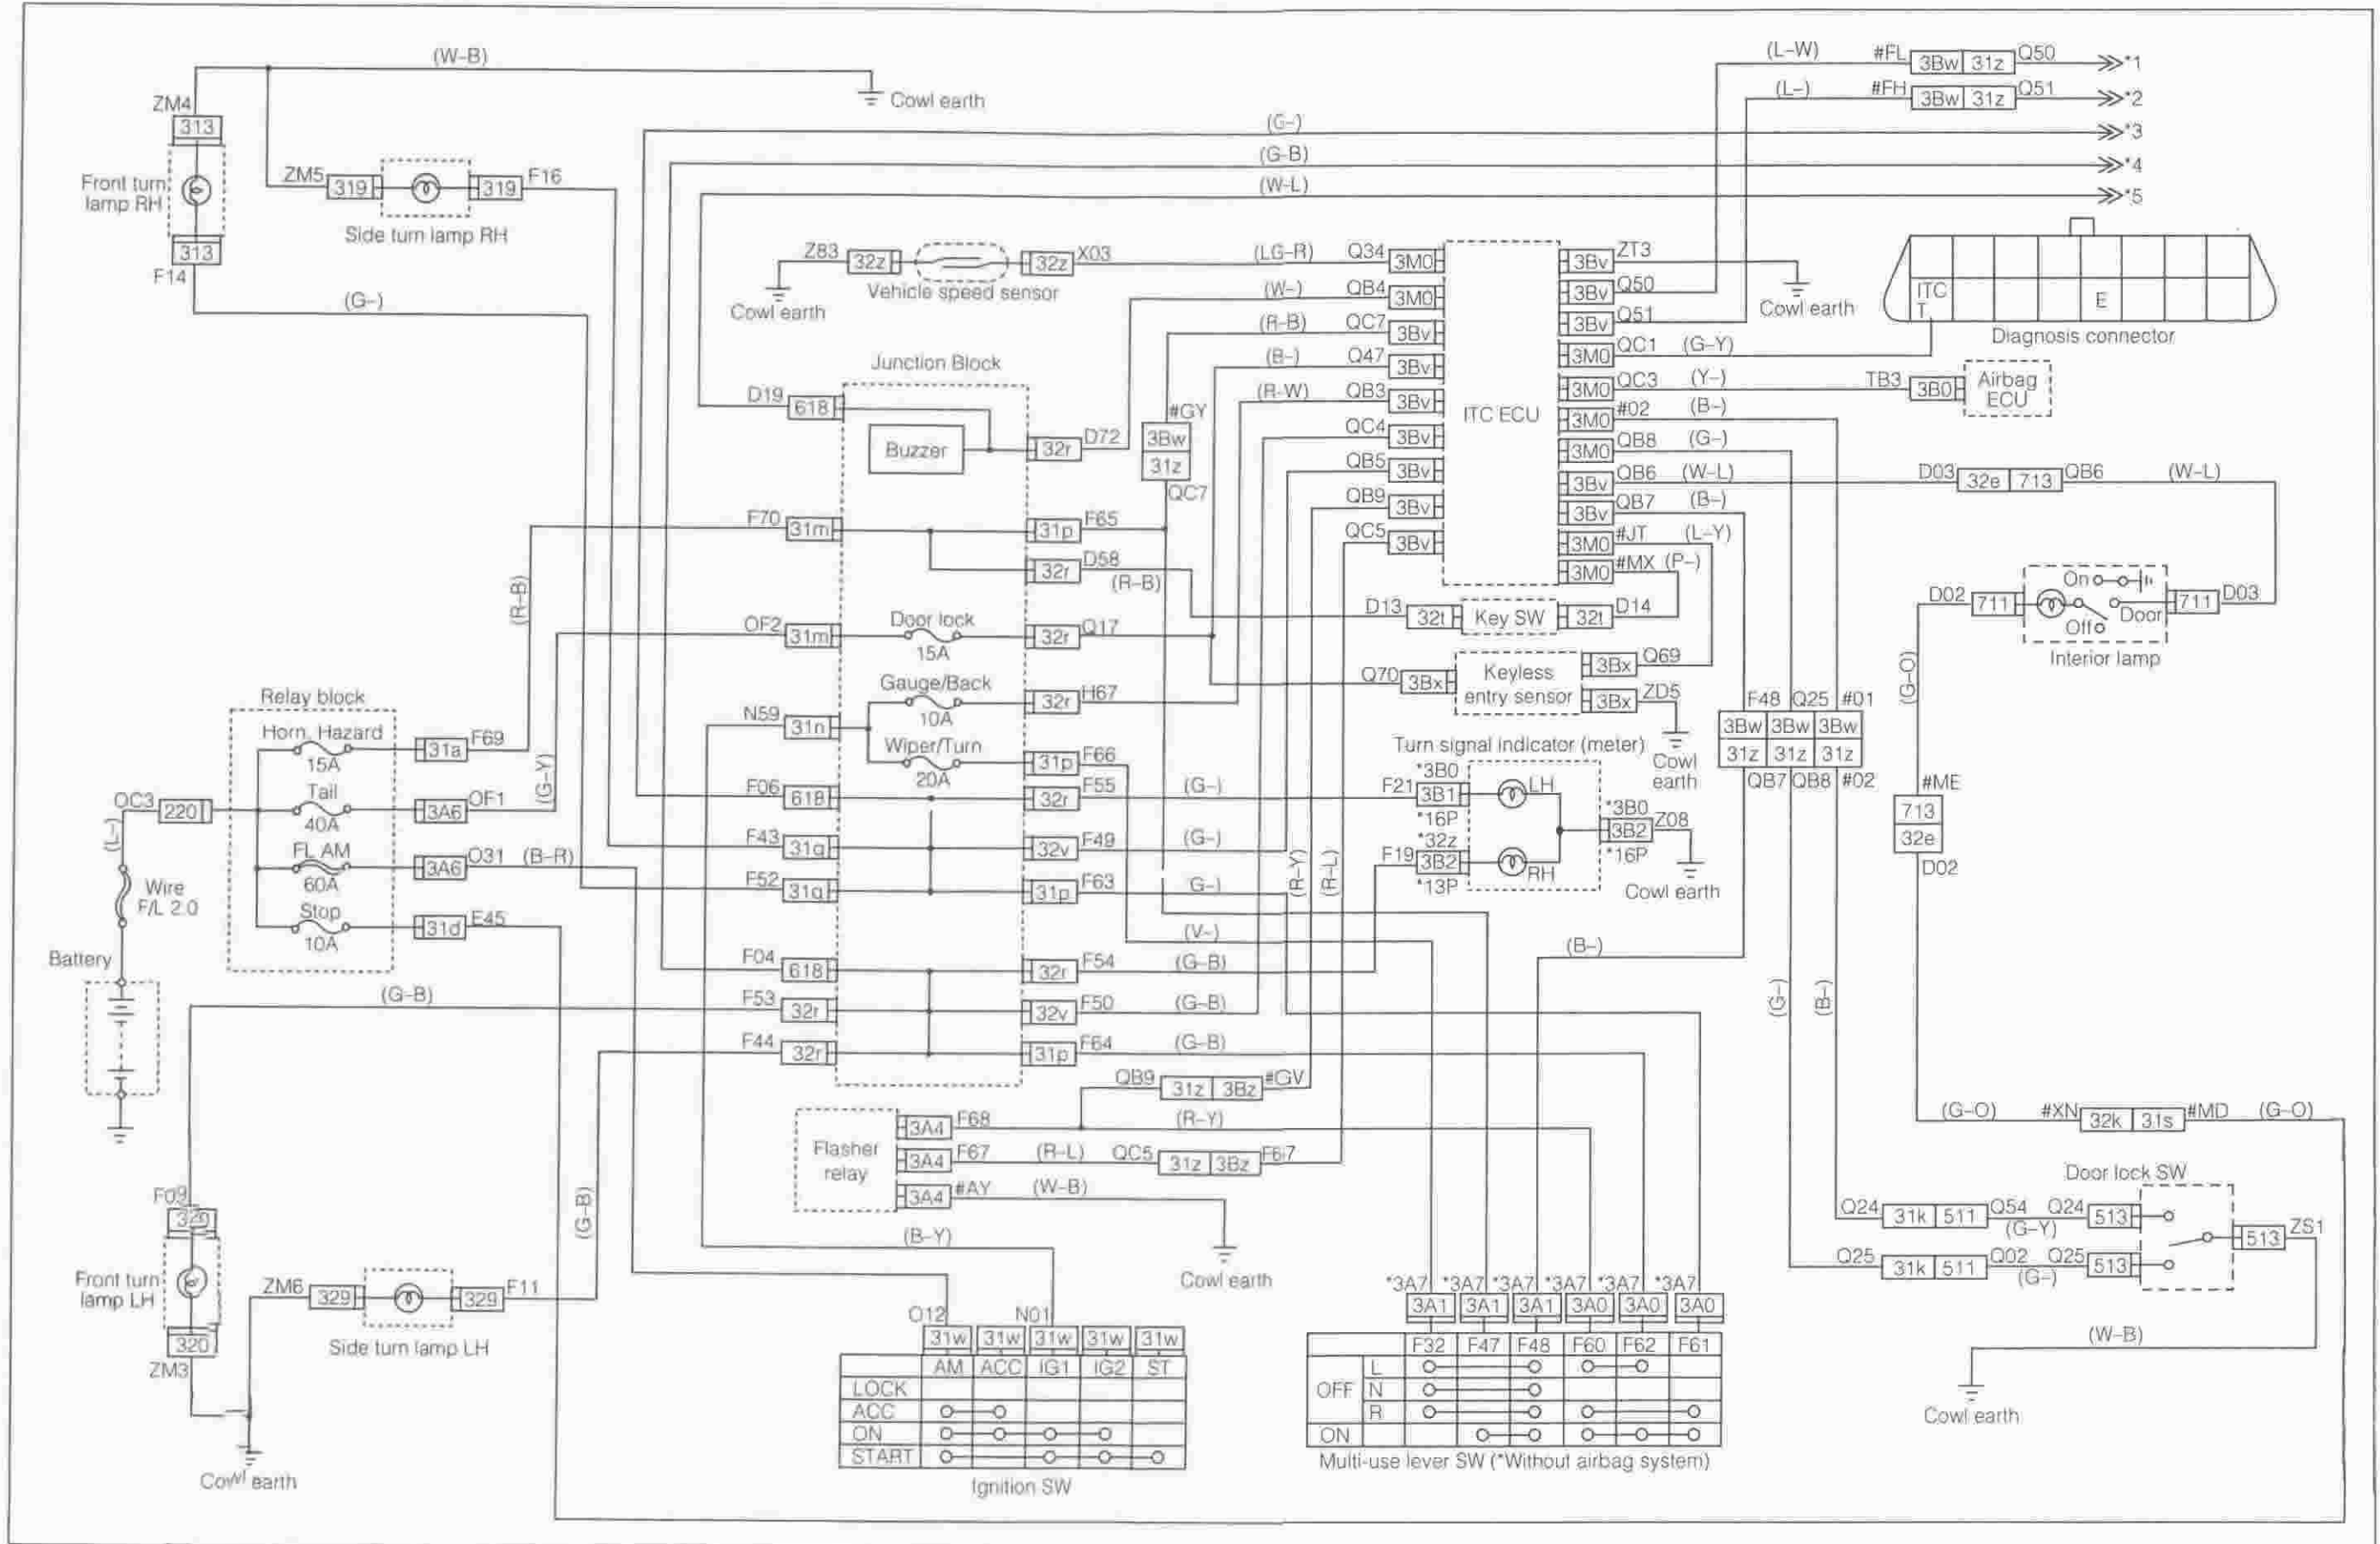


ITC 2/2 (RHD)

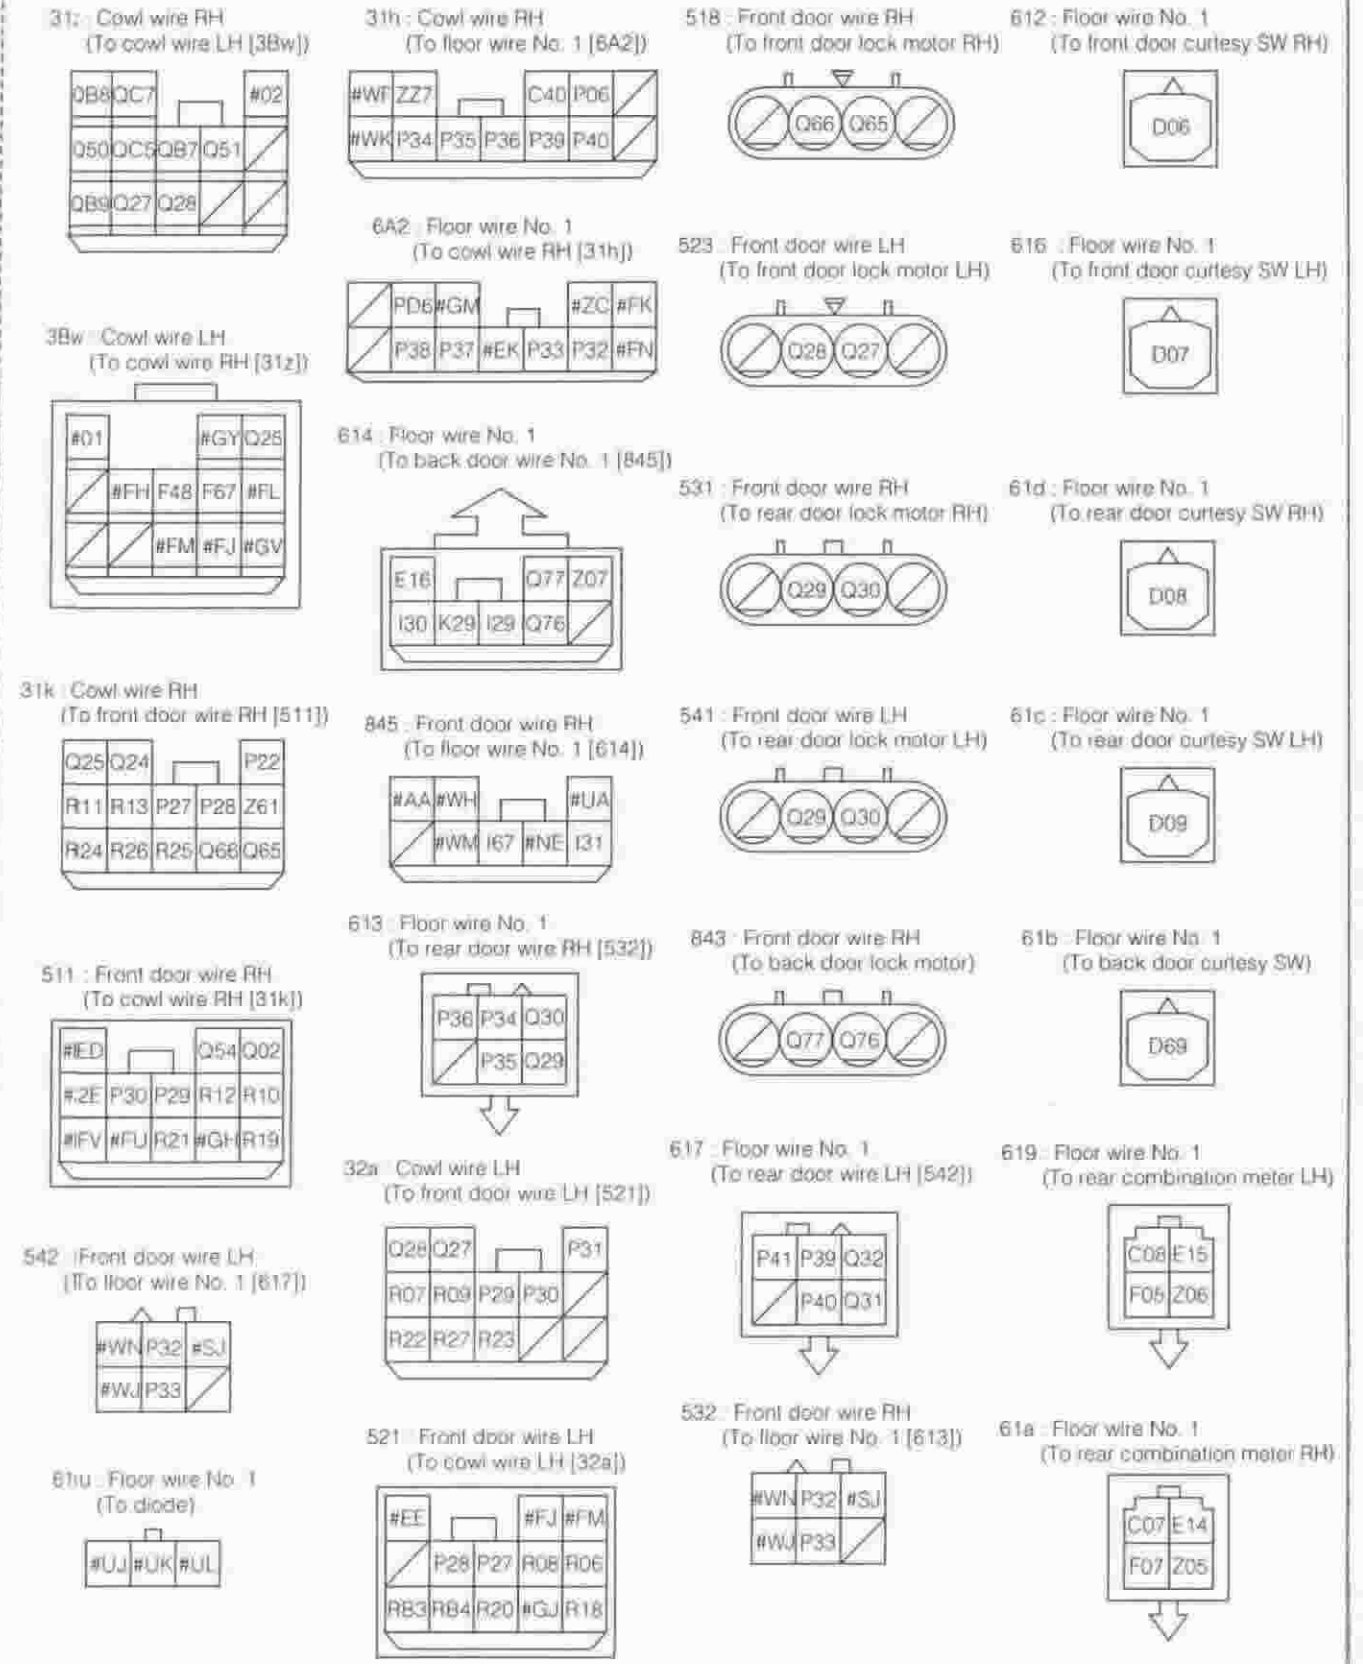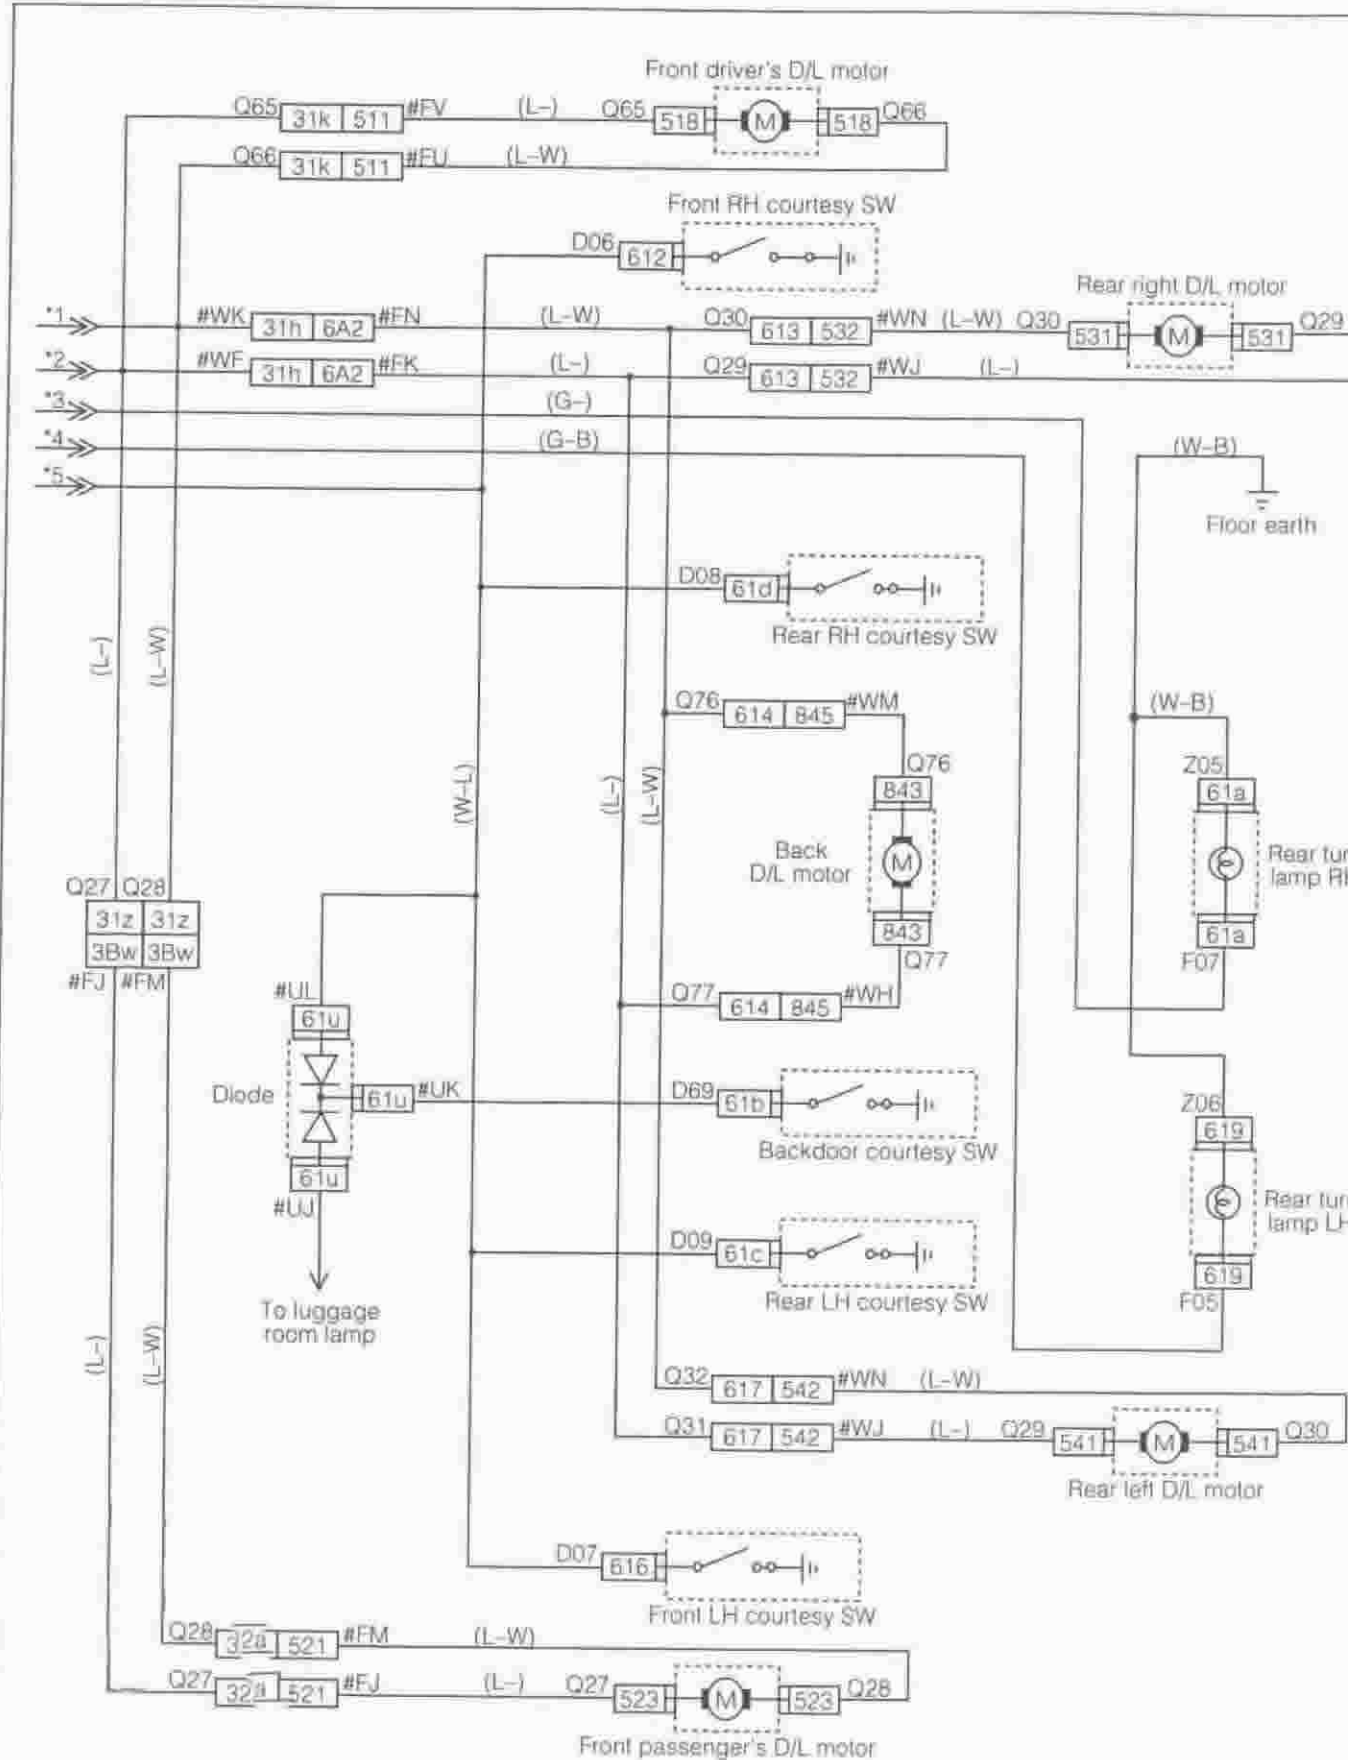

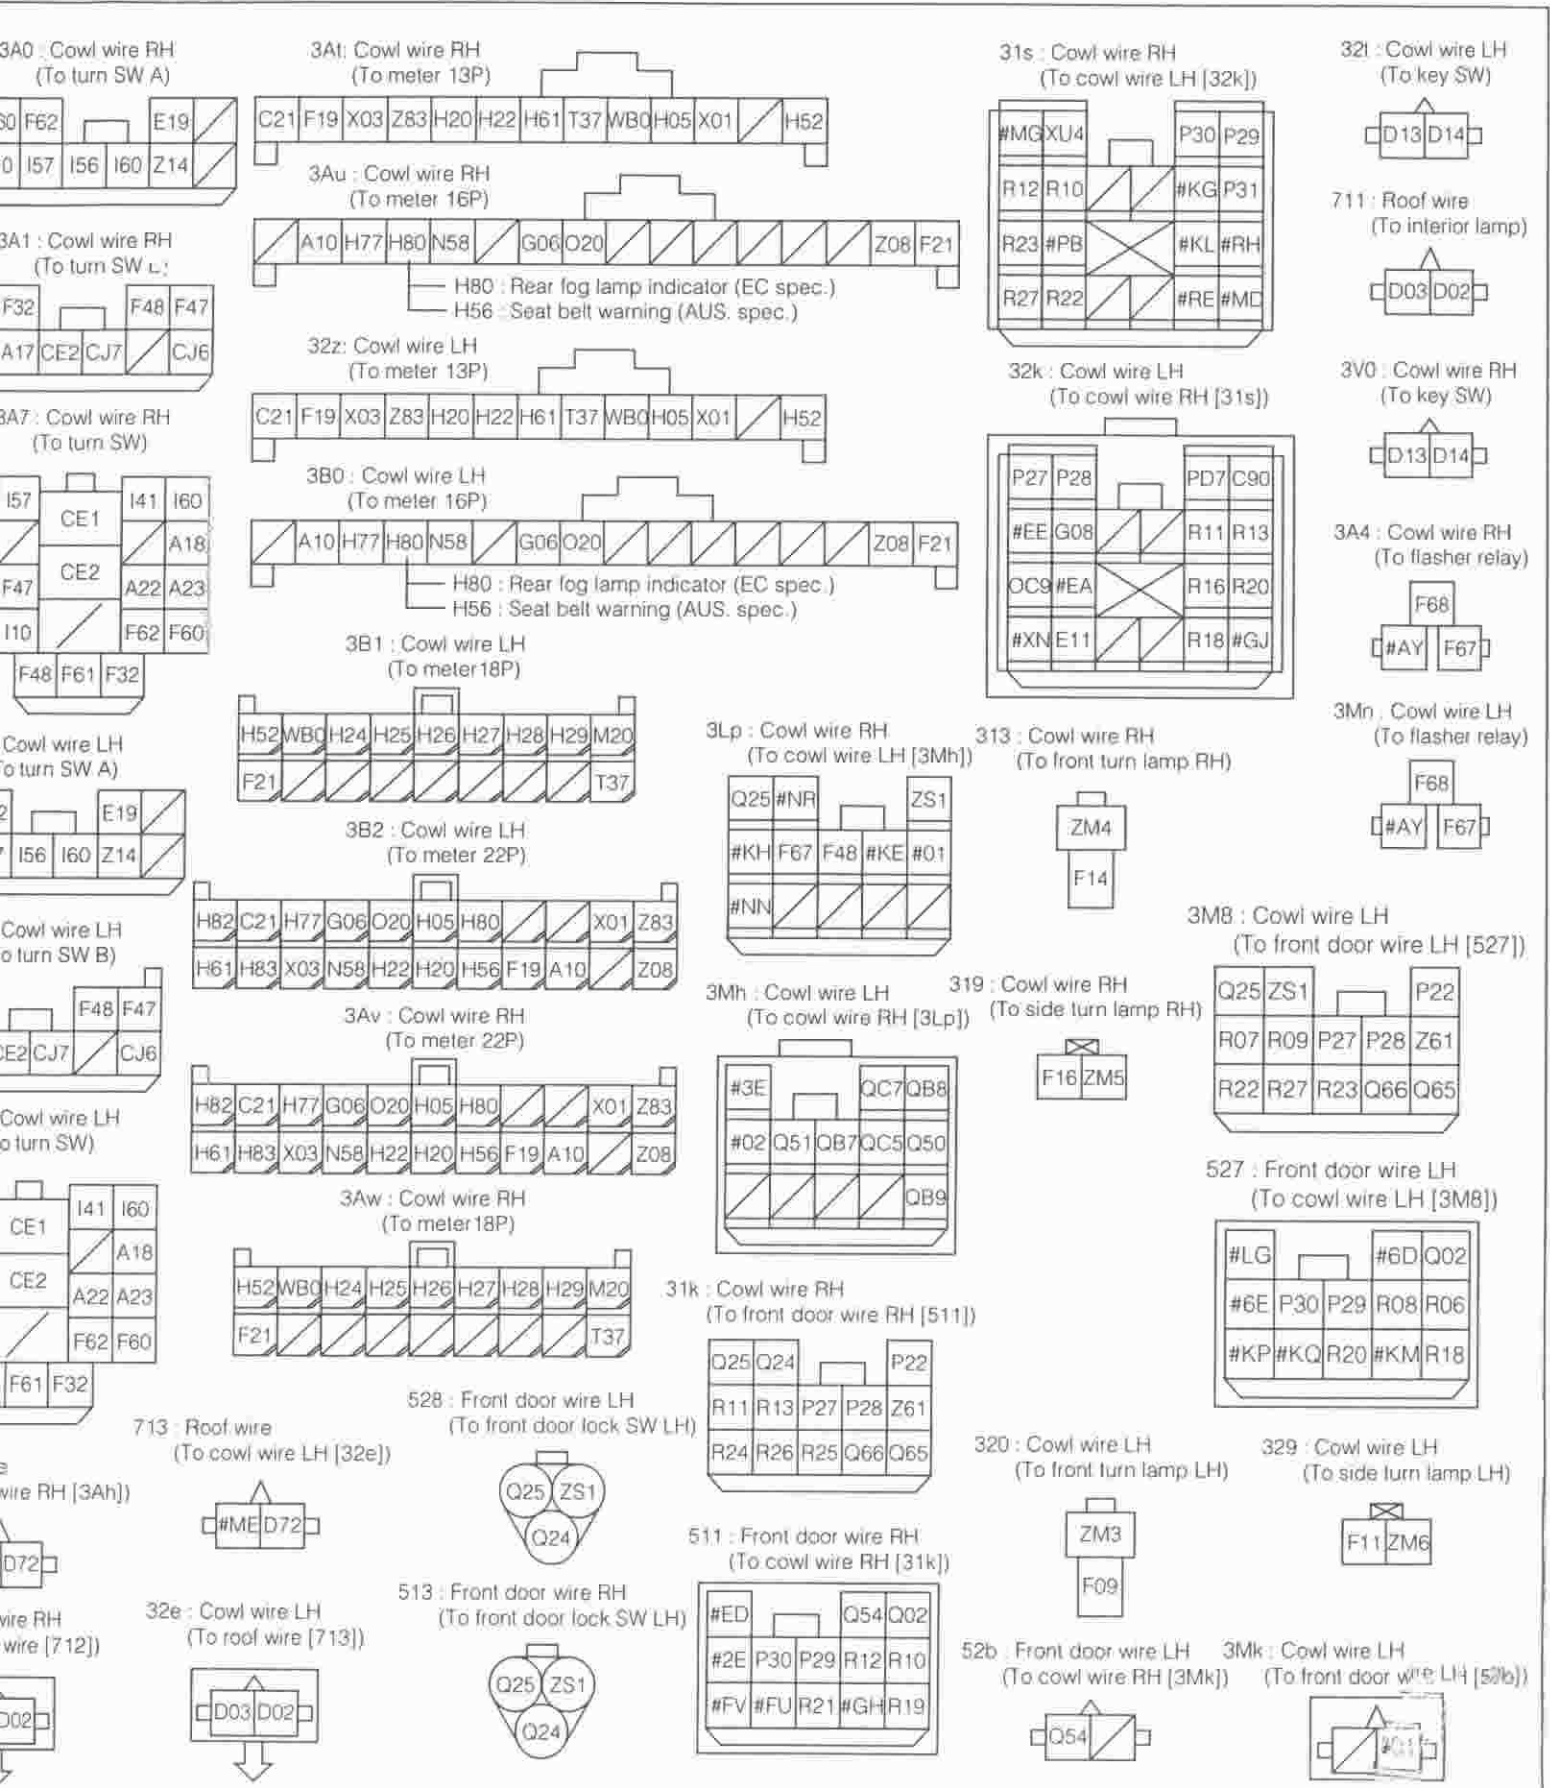




IMMOBILIZER SYSTEM

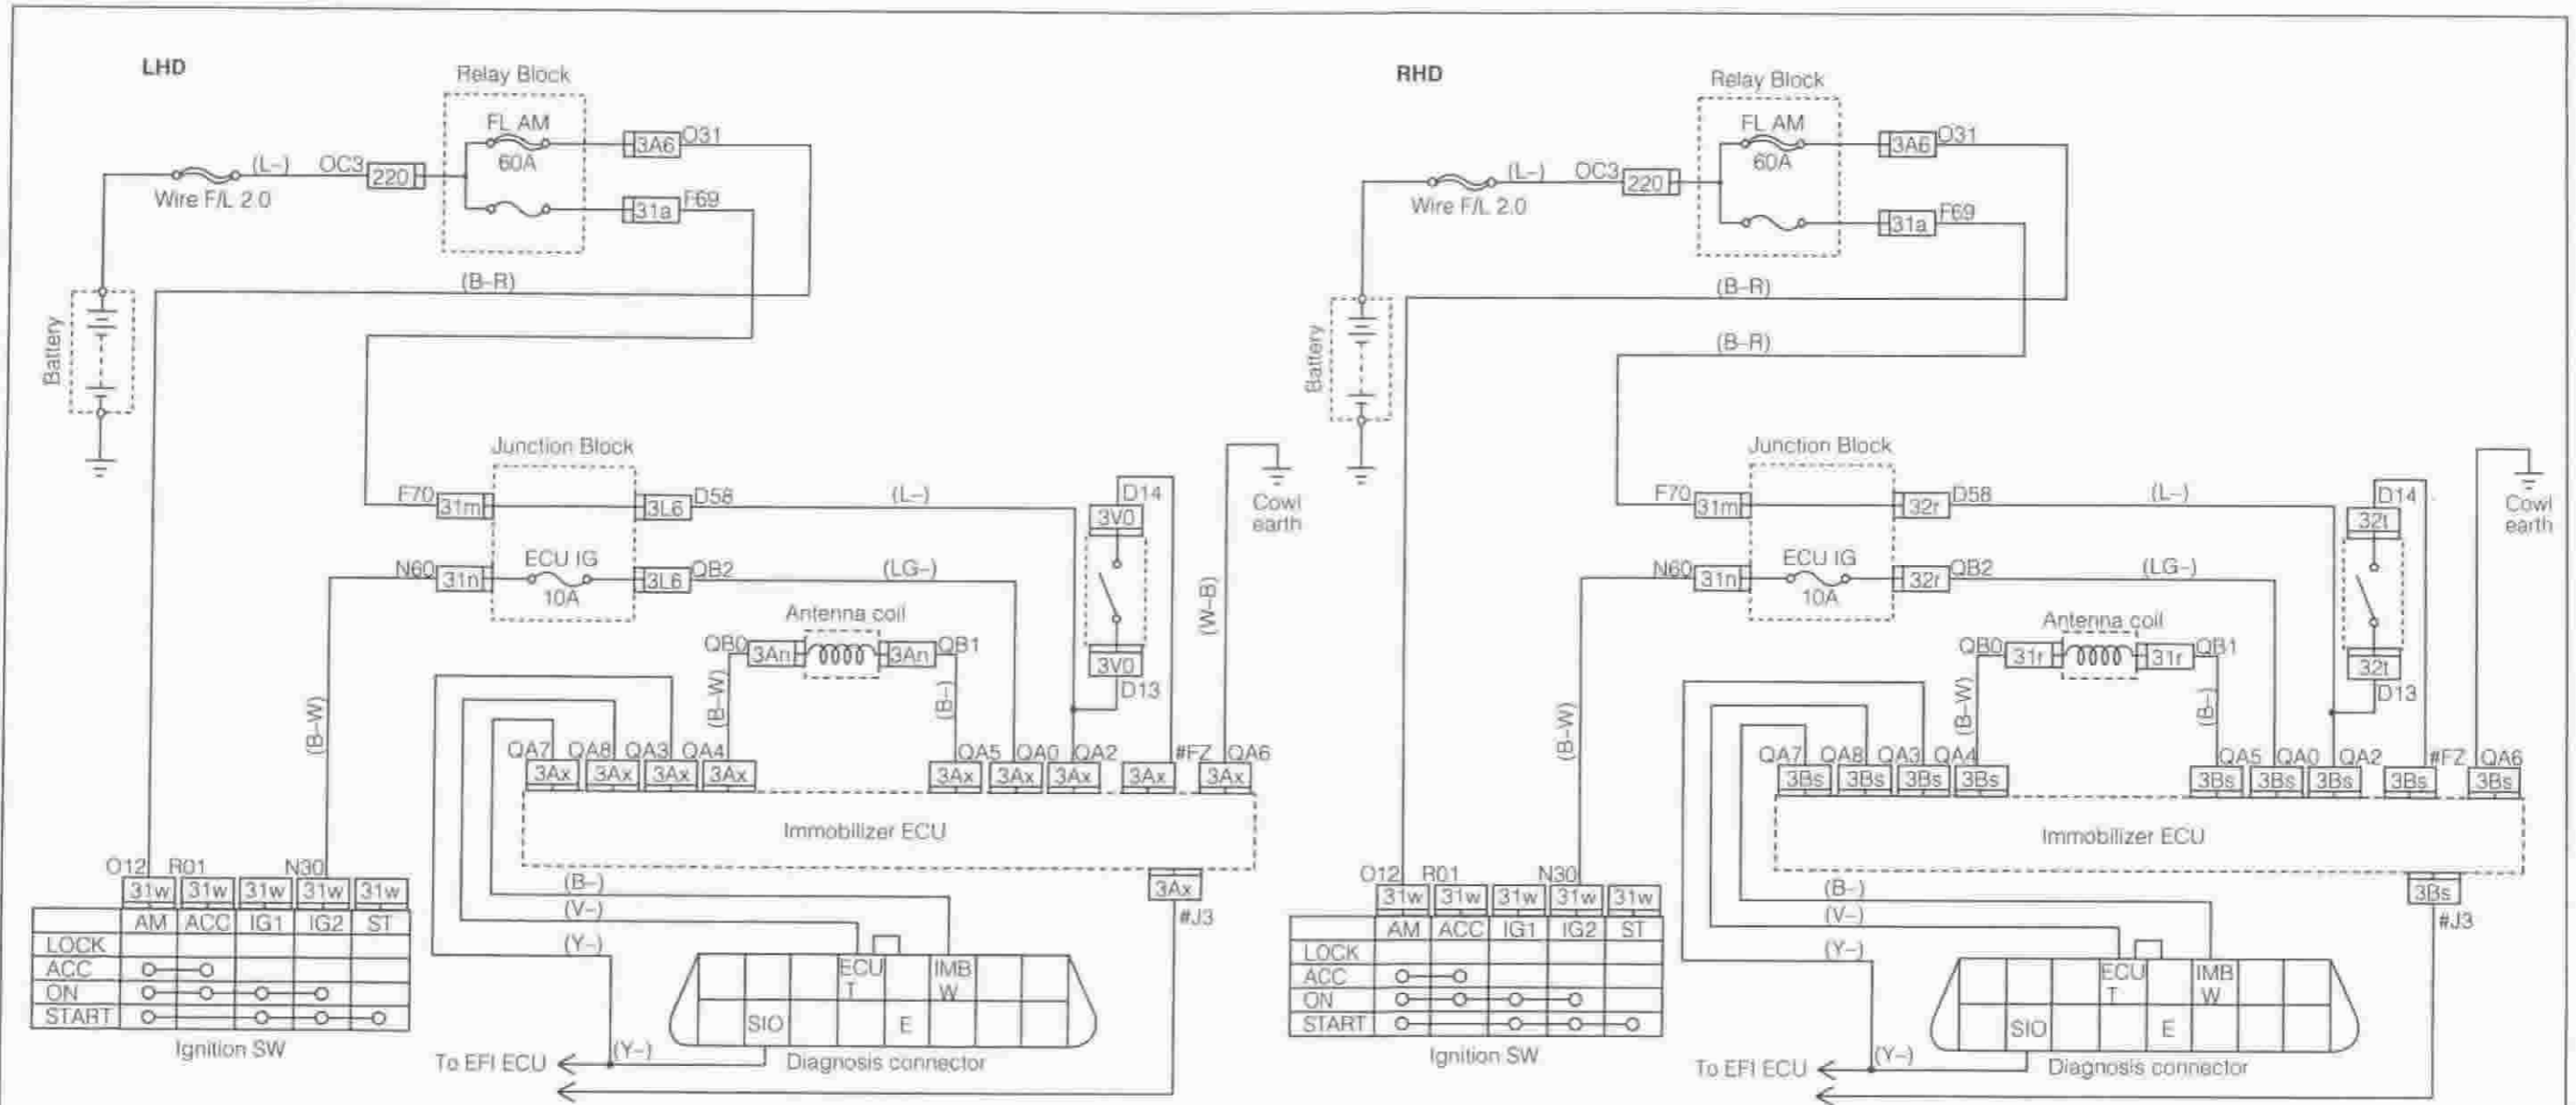


220 : Engine wire No. 2  
(To relay block F)

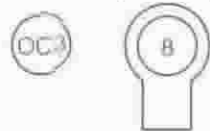


3A6 : Cowl wire RH  
(To relay block E)



 31n : Cowl wire RH  
(To junction block B)




3L6 : Cowl wire RH  
(To junction block F)

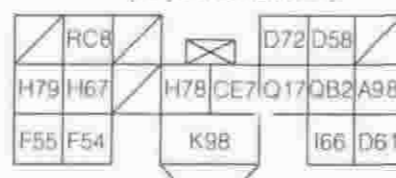

31w : Cowl wire RH  
(To ignition SW)



32r : Cowl wire LH  
(To junction block F)

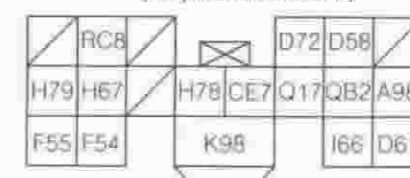

31r : Cowl wire RH  
(To antenna coil)



 
31a : Cowl wire RH  
(To relay block A)




31m : Cowl wire RH  
(To junction block A)



3An : Cowl wire RH  
(To antenna coil)



3Ax : Cowl wire RH  
(To immobilizer ECU)

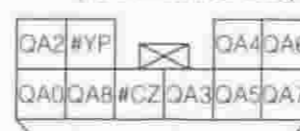


3Bs : Cowl wire LH  
(To immobilizer ECU)





3V0 : Cowl wire RH  
(To key SW)




 
32t : Cowl wire LH  
(To key SW)




SRS AIR BAG SYSTEM (LHD)

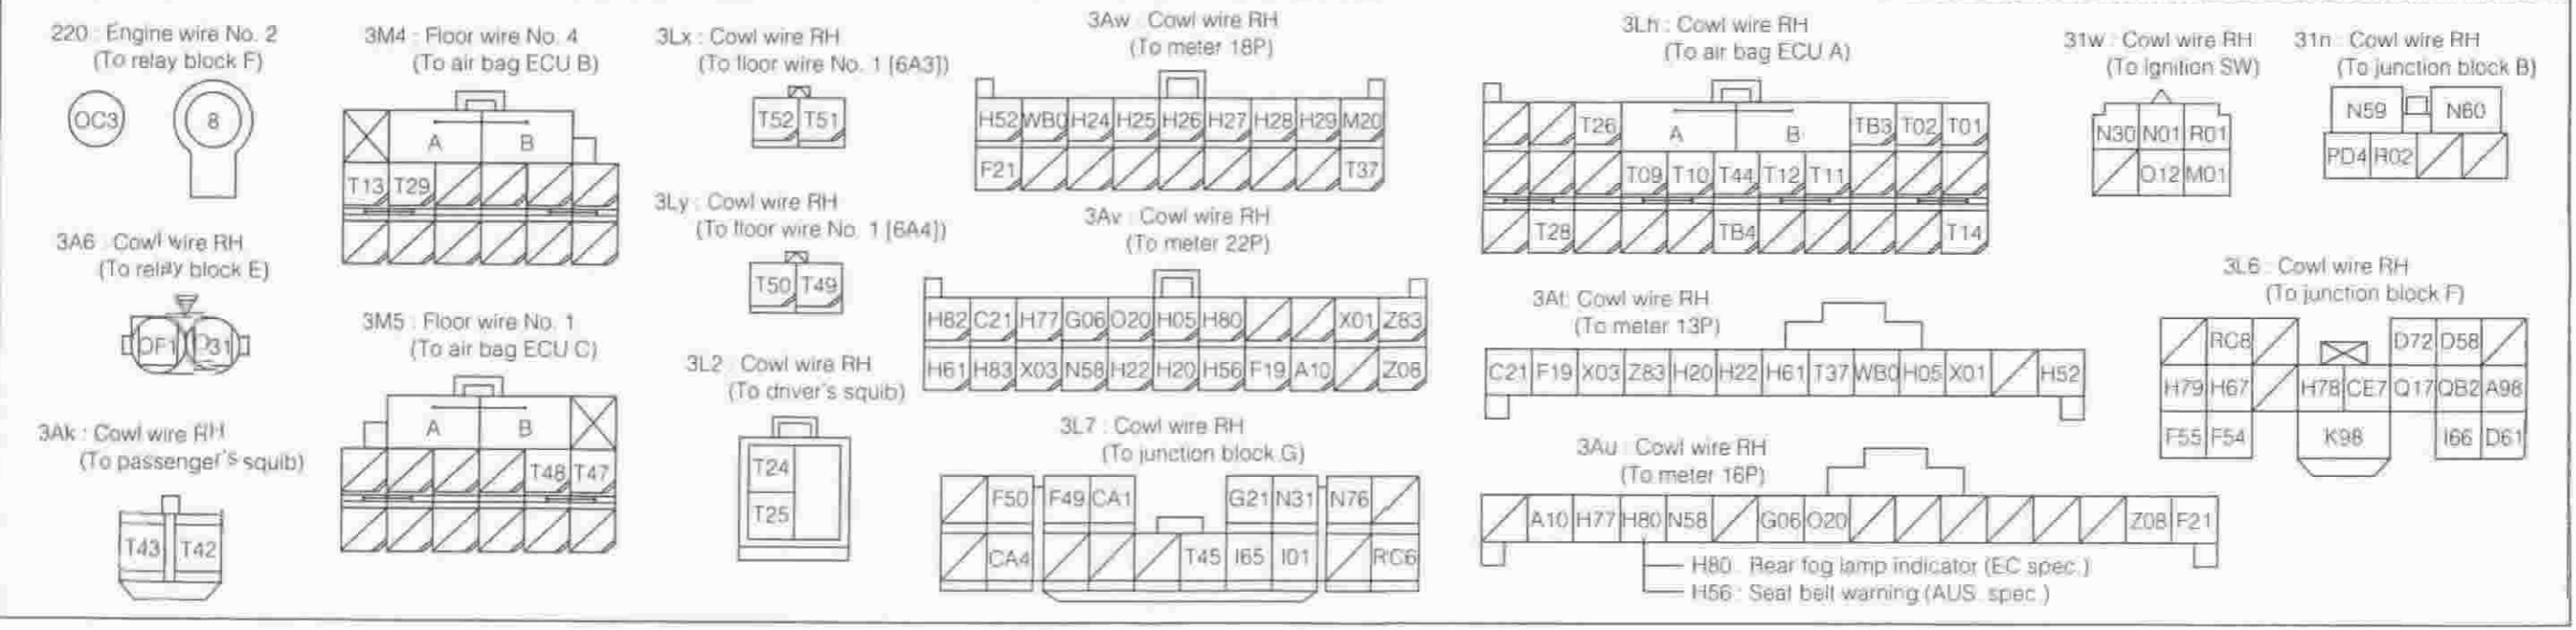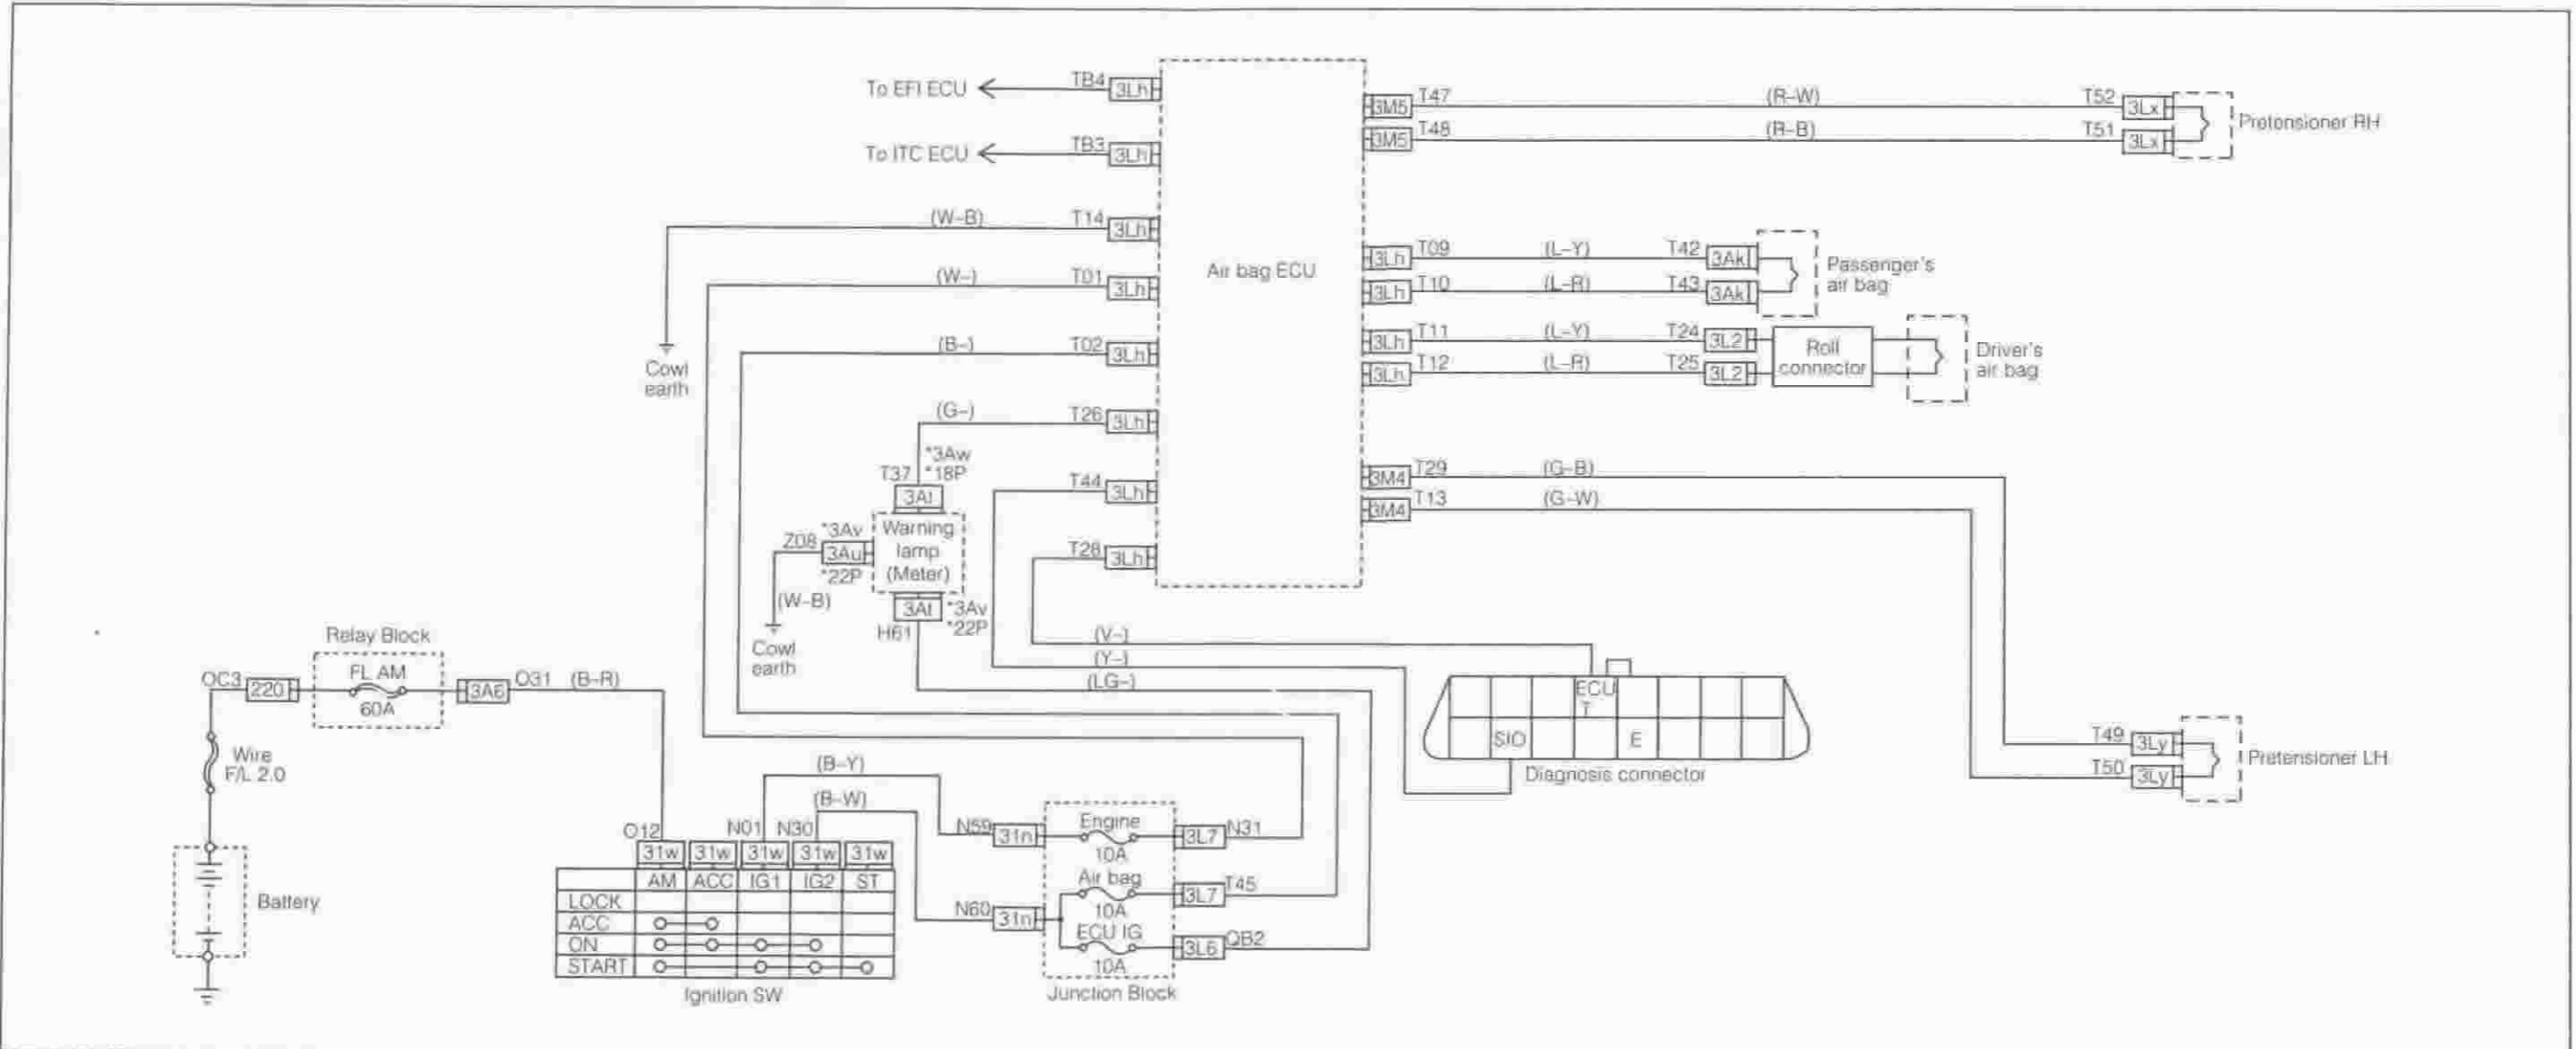


SRS AIR BAG SYSTEM (RHD)

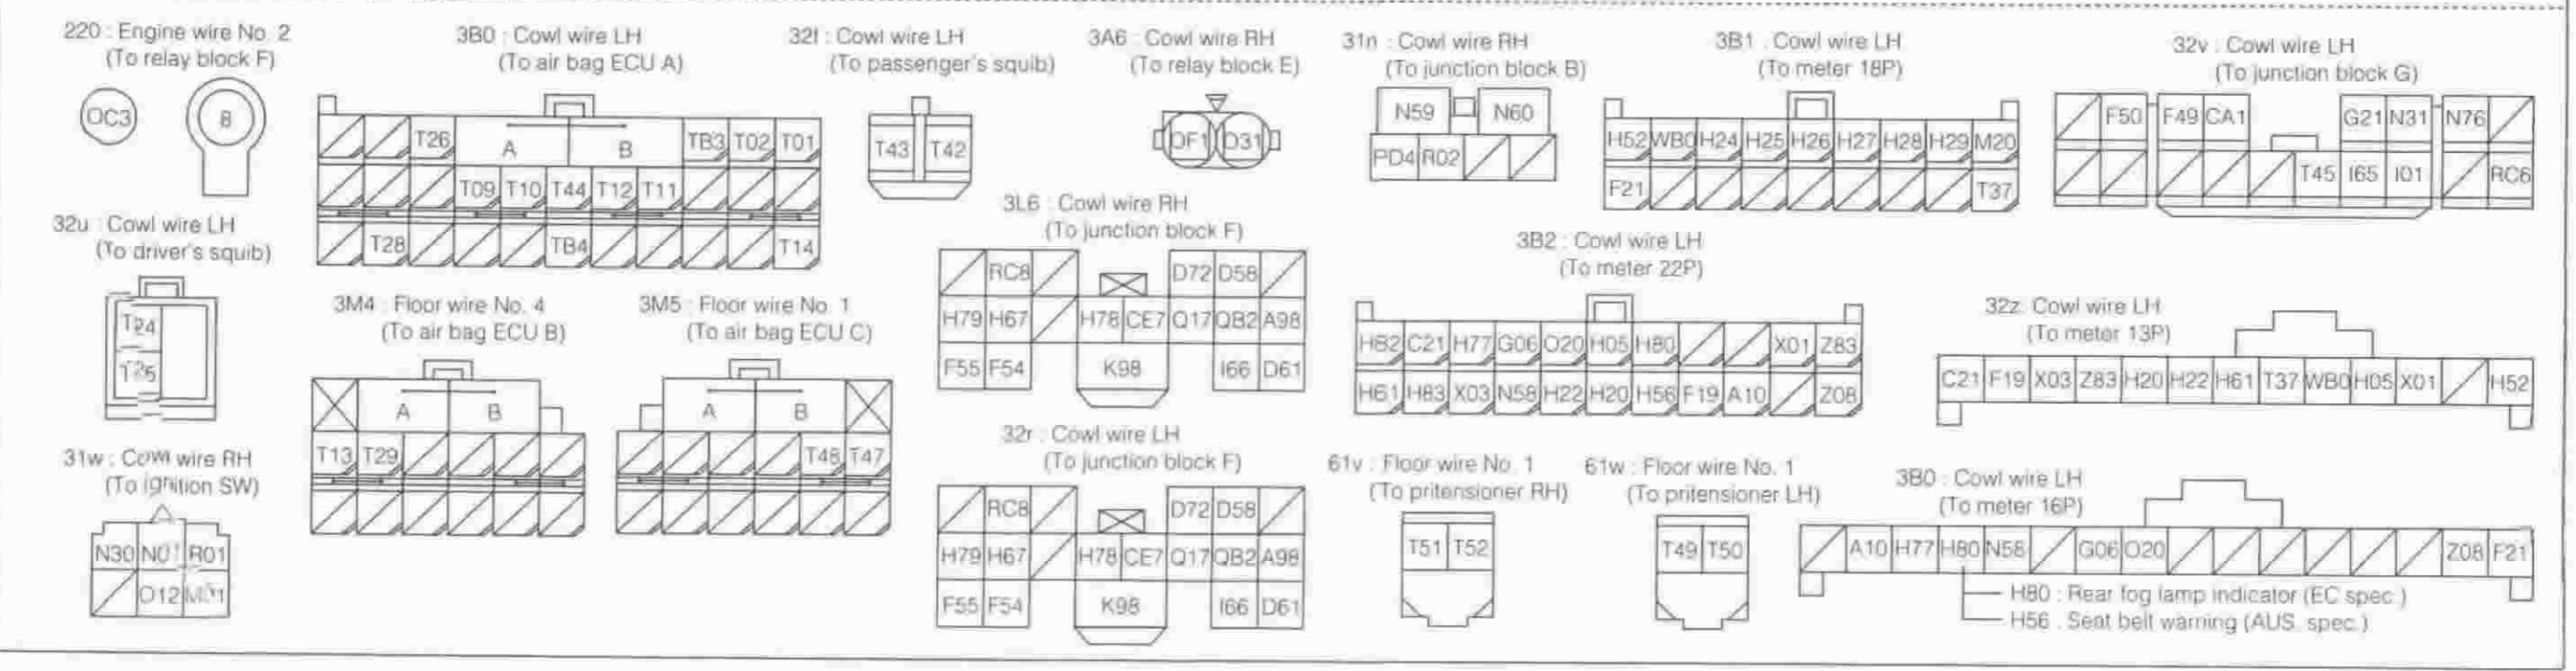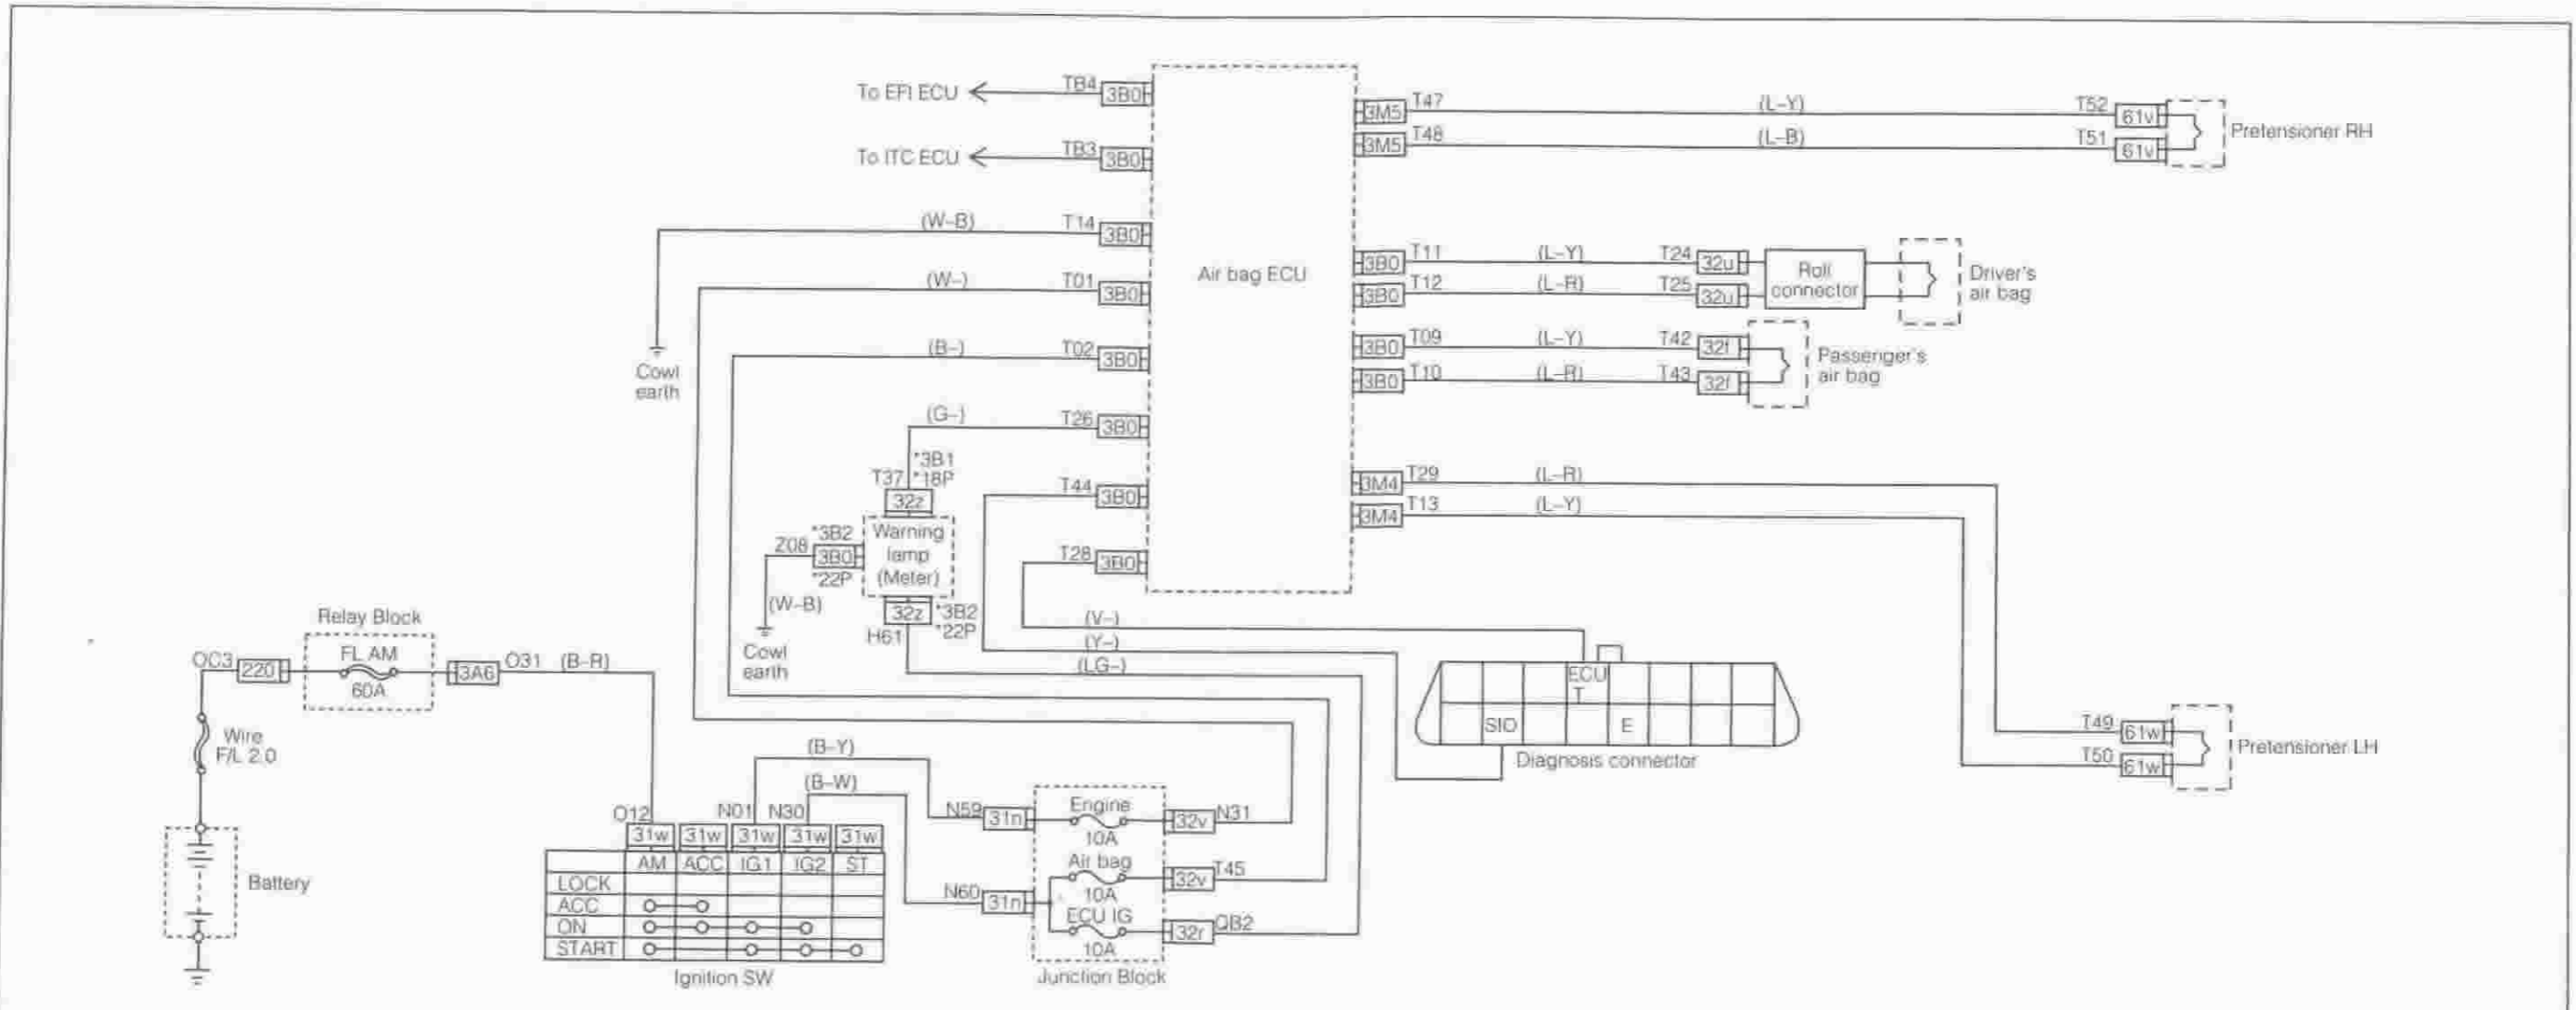

LOCATION OF CONNECTOR  
LHD vehicle

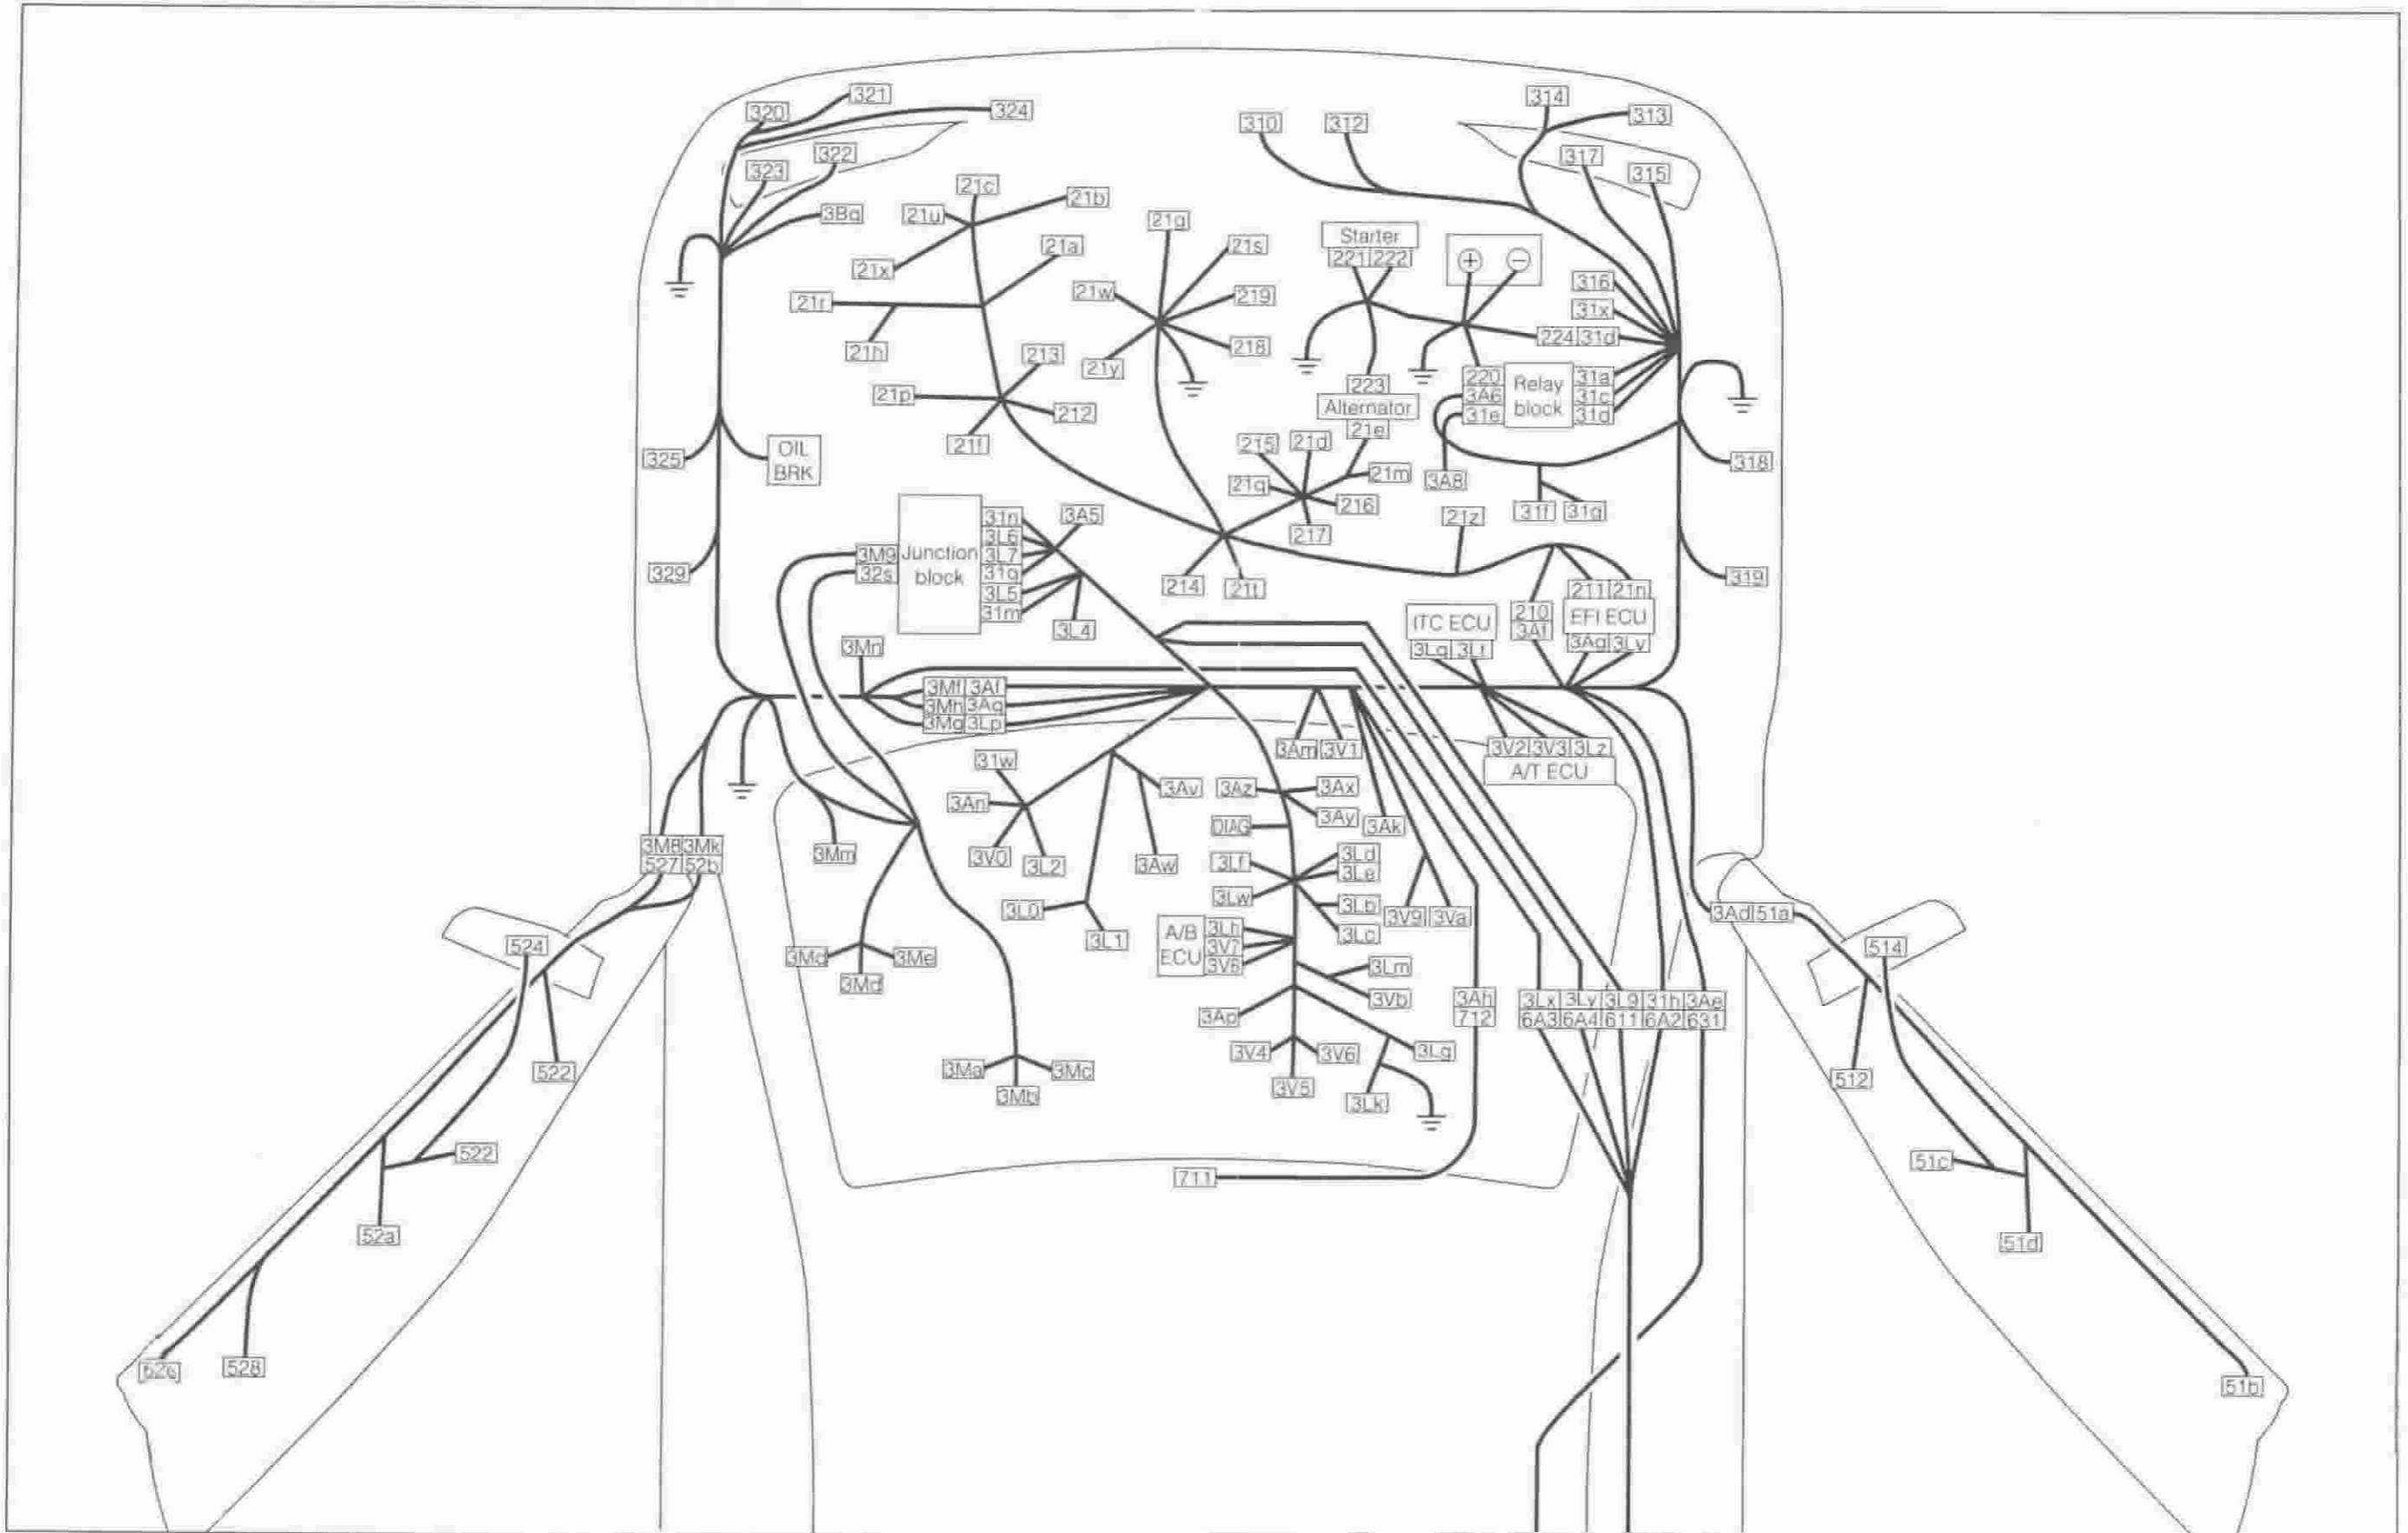

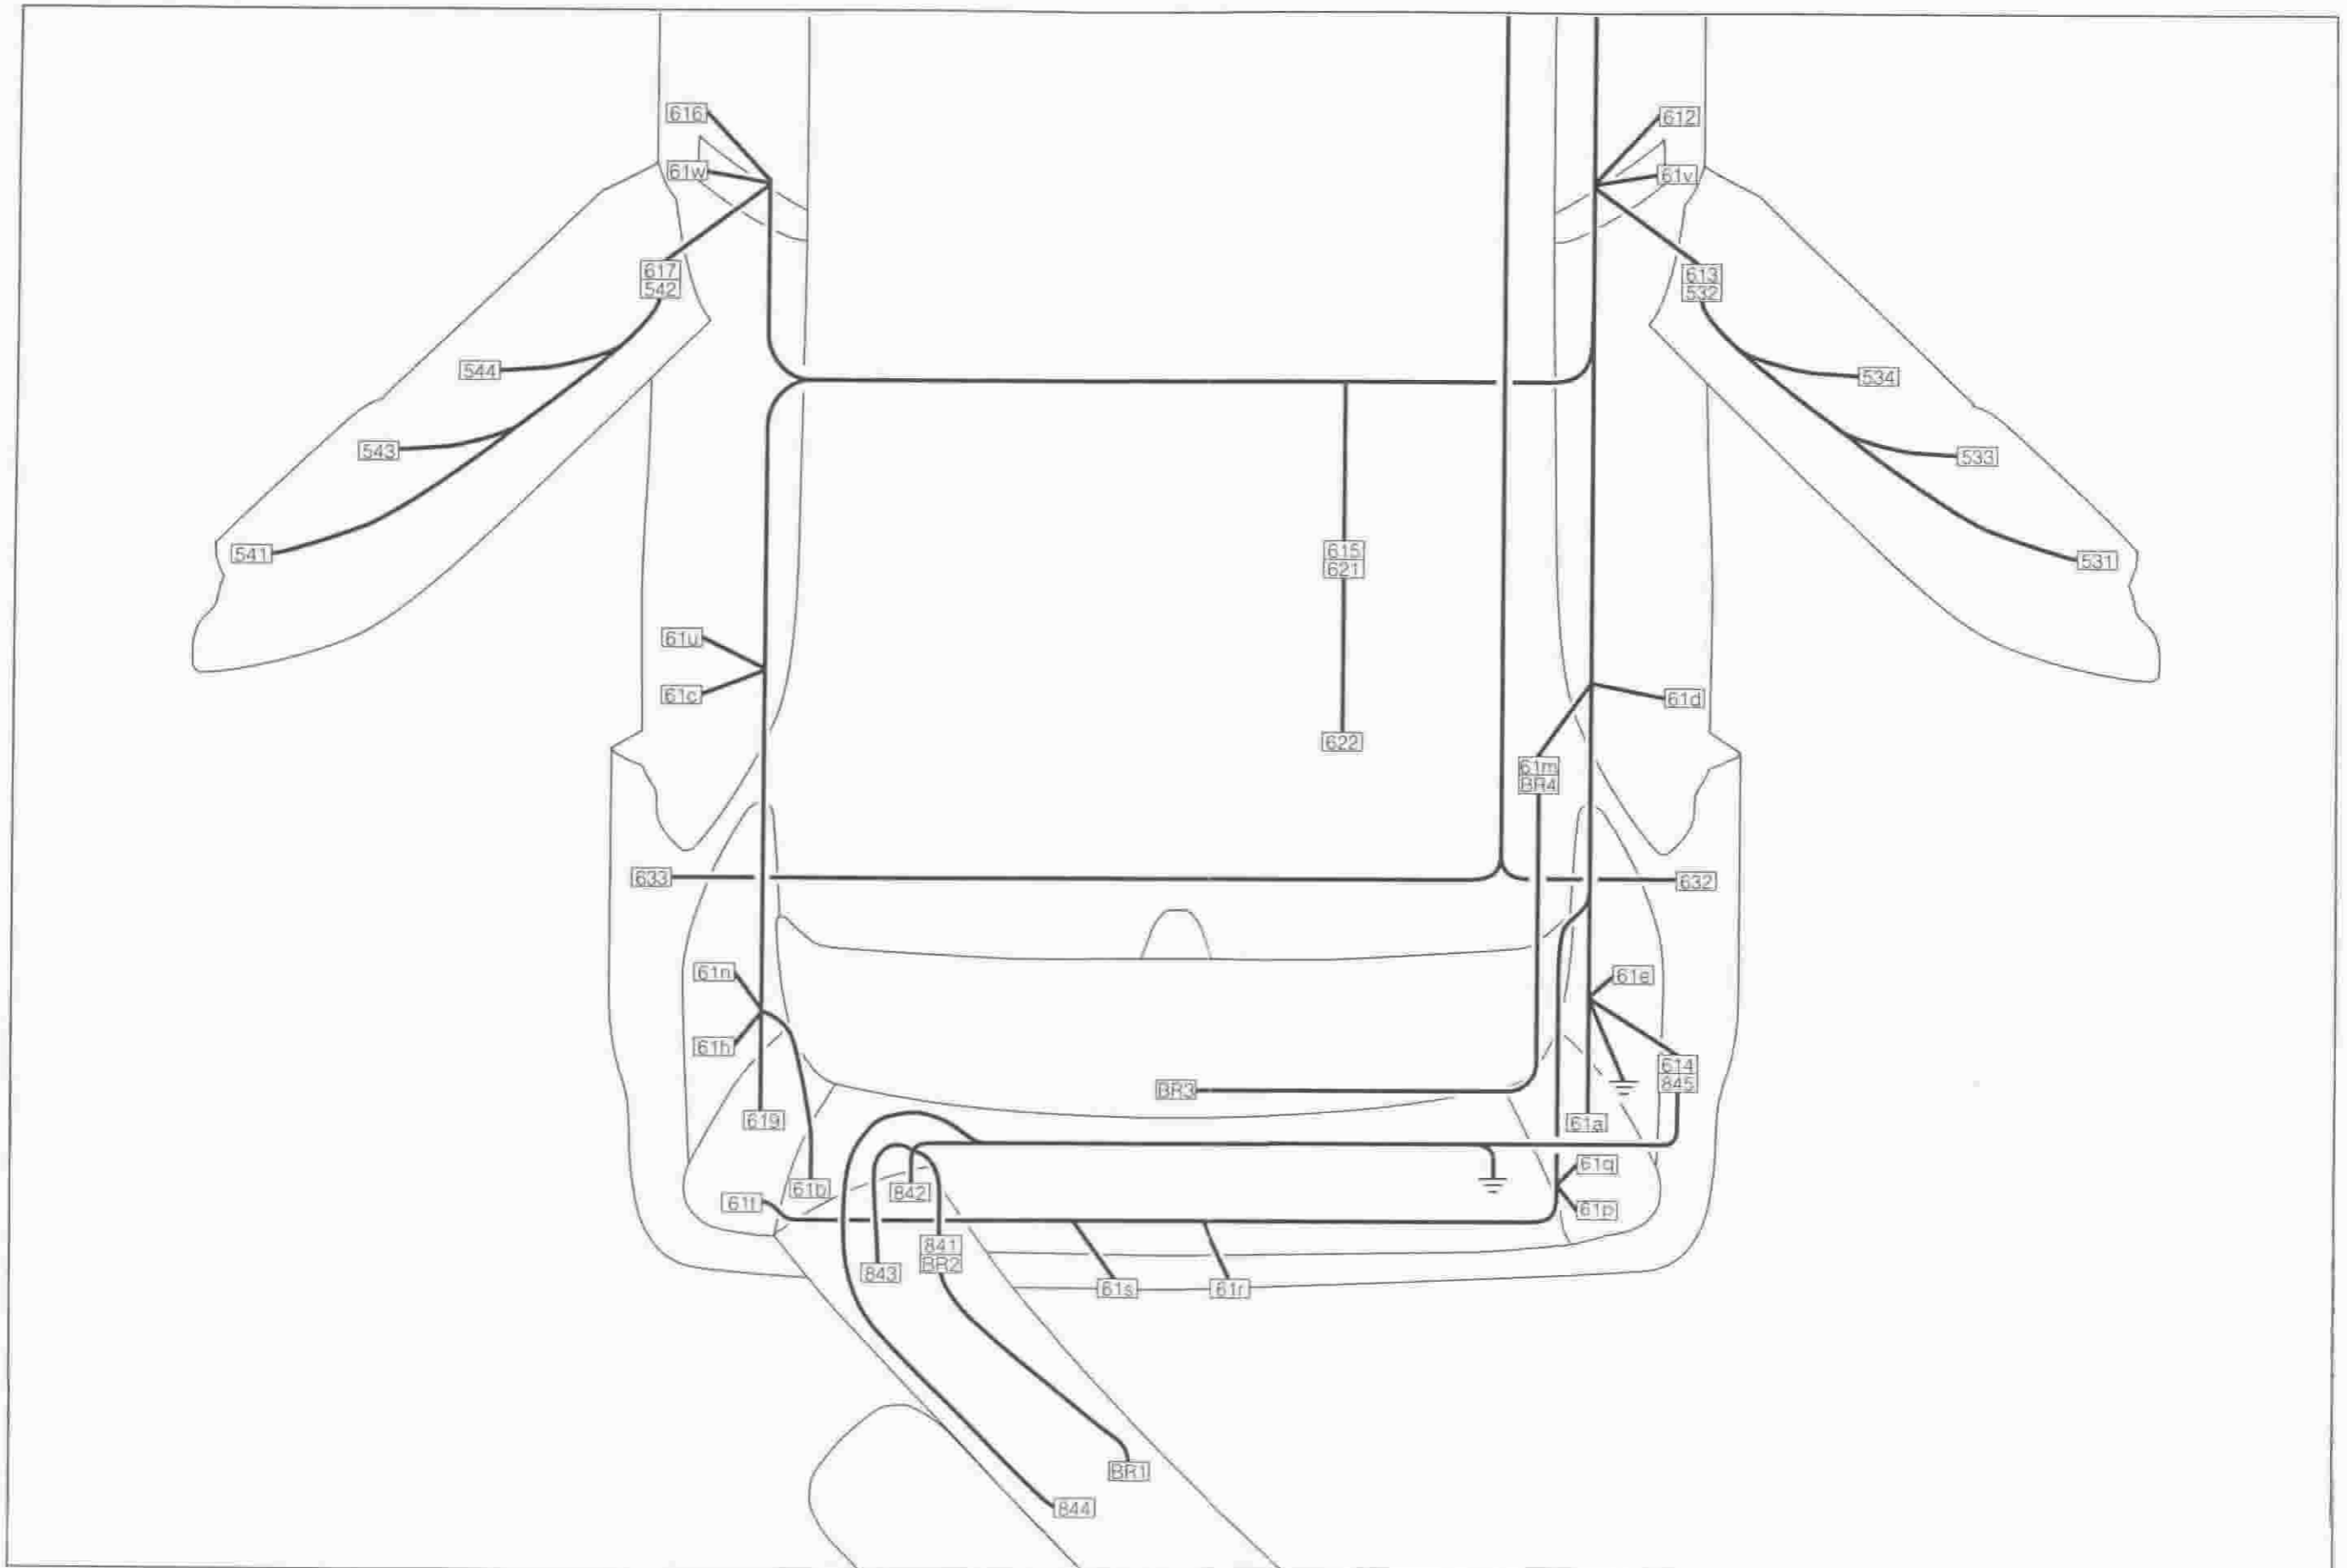

RHD vehicle

