



Electrical Wiring Diagrams



RANGE ROVER SPORT (LHD)

(1a) VIN: 717166 >



BY APPOINTMENT TO
HER MAJESTY QUEEN ELIZABETH II
MANUFACTURERS OF LAND ROVER VEHICLES
LAND ROVER, WARWICK



BY APPOINTMENT TO
HIS ROYAL HIGHNESS THE DUKE OF EDINBURGH
MANUFACTURERS OF LAND ROVER VEHICLES
LAND ROVER, WARWICK



BY APPOINTMENT TO
HIS ROYAL HIGHNESS THE PRINCE OF WALES
MANUFACTURERS OF LAND ROVER VEHICLES
LAND ROVER, WARWICK

Electrical Wiring Diagrams

RANGE ROVER SPORT (LHD) **(1a) VIN: 717166 >**

Published by Technical Communications, Land Rover
Publication Part No. JLR 16 24 21_1E

PREFACE

While every effort is made to ensure accuracy, design changes to the vehicle may be made in the period between the completion of this publication and the introduction of vehicles.

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted in any form, electronic, mechanical, recording or other means without prior written permission from Land Rover.

Paper copies of this document are uncontrolled, always refer to the electronic source material for the latest information.

© 2011 Land Rover

ABBREVIATIONS

..... viii

USING THIS PUBLICATION

Health and safety x
Using this publication x
Section numbering xi
Circuit sheet numbering xi
Understanding the circuit diagrams xi

204-04 - WHEELS AND TIRES

Tire pressure monitoring system 1

204-05 - VEHICLE DYNAMIC SUSPENSION

6-speed transmission 2
8-speed transmission 4
Continuously variable damping (CVD) 6

204-06 - RIDE AND HANDLING OPTIMIZATION

Dynamic Response 7

205-02 - REAR DRIVE AXLE AND DIFFERENTIAL

..... 8

206-05 - PARKING BRAKE AND ACTUATION

6-speed transmission 10
8-speed transmission 11

206-09 - ANTI-LOCK CONTROL

..... 12

211-04 - STEERING COLUMN

Adjustable 14
Clock spring 15

303-06 - STARTING SYSTEM

Ignition 17

303-14B - ELECTRONIC ENGINE CONTROLS - DV6 (3.0L)

6-speed transmission 18
8-speed transmission 23

303-14E - ELECTRONIC ENGINE CONTROLS - PV8 (5.0L)

..... 28

307-01 - AUTOMATIC TRANSMISSION

6-speed 33
8-speed 35

308-07 - FOUR WHEEL DRIVE SYSTEMS

Transfer box 36

310-01 - FUEL TANK AND FUEL LINES

..... 38

310-03 - SPEED CONTROL

..... 40

412-01 - CLIMATE CONTROL

..... 41

412-02 - AUXILIARY CLIMATE CONTROL

Heated windshield and washer jets 44
Fuel fired booster heater 45

413-00 - INSTRUMENT CLUSTER AND PANEL ILLUMINATION

..... 46

413-06 - HORN	49
413-07 - CLOCK	50
413-08 - INFORMATION AND MESSAGE CENTER	51
413-13 - PARKING AID	53
Multiple cameras	55
Rear view camera	56
414-01 - BATTERY, MOUNTING AND CABLES	57
Engine junction box	64
Central junction box	64
Ground distribution	75
414-02 - GENERATOR AND REGULATOR	82
Charging - Petrol	82
Charging - Diesel	83
415-00 - INFORMATION AND ENTERTAINMENT SYSTEM	84
417-01 - EXTERIOR LIGHTING	91
Head, side, tail and number plate lamps	91
Headlamps - adaptive front lighting system	96
Lighting control switch	98
Trailer socket - NAS	99
Trailer socket - 13 PIN	100
417-02 - INTERIOR LIGHTING	101
Ambient lighting	104
418-00 - MODULE COMMUNICATIONS NETWORK	105
CAN bus - Medium speed	105
CAN bus - High speed	107
MOST	110
Diagnostic socket	112
419-01 - ANTI-THEFT SYSTEM	113
Keyless Entry	113
Passive start	117
Active	119
501-09 - REAR VIEW MIRRORS	121
Interior	121
Door	122
501-10 - SEATING	123
Memory	123
Non memory	126
Heated - front	128
Heated - rear	129
501-11 - GLASS, FRAMES AND MECHANISMS	130
Window lift	130
501-12 - INSTRUMENT PANEL AND CONSOLE	132
Accessory socket(s)	132
Cool box	133
501-14 - HANDLES, LOCKS, LATCHES AND ENTRY SYSTEMS	134
Central locking system	134
Tailgate power striker	138

501-16 - WIPERS AND WASHERS	139
501-17 - ROOF OPENING PANEL	141
501-20B - SUPPLEMENTAL RESTRAINT SYSTEM	142

ABBREVIATIONS

Abbreviation	Description
ABS	Anti-lock braking system
ADRC	Adaptive damping
AFS	Adaptive front lighting system
AMP	Audio amplifier
AUTO	Automatic transmission
AUU	Portable audio interface
BSM	Blind spot monitoring
CAN	Controller area network
CVD	Continuously variable damping
CDL	Central door locking
DAB	Digital audio broadcasting
DSC	Dynamic stability control
D4	Diesel engine - Straight-four
DPF	Diesel particulate filter
DV6	Diesel engine - V6
DV8	Diesel engine - V8
EGR	Exhaust gas recirculation
EJB	Engine junction box
EMS	Engine management system
ETS	Electronic transmission shift
FET	Field effect transistor
GPS	Global positioning system
HID	High intensity discharge
HS CAN	High speed controller area network bus
IBOC	In-band on-channel
IC	Instrument cluster
IHU	Integrated head unit
IMT	Intake manifold tuning
IP	Instrument panel
LED	Light emitting diode
LH	Left-hand
LIN	Local interconnect network
MAF/IAT	Mass air flow / intake air temperature
MS CAN	Medium speed controller area network bus
MMM	Navigation system module
MOST	Media Orientated System Transport
N/A	Normally aspirated
NAS	North American specification
PDC	Park distance control
PV6	Petrol engine - V6
PV8	Petrol engine - V8
PV8NA	Naturally aspirated engine - V8
PV8SC	Super charged engine - V8
PWM	Pulse width modulation
RF	Radio frequency
RH	Right-hand
RSE	Rear seat entertainment
SAI	Secondary air injection
SCL	Steering column locking
SCR	Screen
SDARS	Satellite digital audio receiver system
TCM	Transmission control module
TMC	Traffic message channel
TPMS	Tire pressure monitoring system

ABBREVIATIONS

Abbreviation	Description
TSD	Touch screen display
TV	Television
ULEV	Ultra low emission vehicle
USB	Universal serial bus
VICS	Vehicle information control system

USING THIS PUBLICATION

Health and safety

Always follow health and safety guidelines, specifically those detailed in the Workshop Manual.

Using this publication

The information provided in this publication is for use only by competent, qualified auto-electricians. Good product knowledge is assumed, as well as the ability to access and use recommended test equipment and other reference material provided.

Test equipment and other reference material

The information in this publication should be used in conjunction with the recommended test equipment; refer to Workshop Manual. Other reference material includes: Technical Service Bulletins (TSB) and the Workshop Manual.

The Electrical Reference Library (ERL) may also prove useful since it provides detailed connector information.

Battery disconnection and reconnection

It is imperative that any information relating to battery disconnection and reconnection is followed; refer to the appropriate sections in the Workshop Manual.

Fault Diagnosis

Always use the recommended test equipment for correct and reliable fault diagnosis, refer to the Workshop Manual.

Harness Repair

Repairs should only be undertaken for connectors where a Service Repair Kit is available; refer to the appropriate Electrical Reference Library (ERL).

Note: Fibre Optic circuits cannot be repaired; refer to the Workshop Manual.

Section numbering

The sections in this publication are ordered to match the Global Outline numbering system as found in the current Workshop Manual. The Power and Ground distribution circuits can be found under section 414-01, BATTERY, MOUNTING AND CABLES.


Note: Where circuit diagrams show more than one sub-system, the circuit will be located in the section that carries the first-named sub-system, for example: Starting and Charging will be located under section 303-06 Starting System, since 'Starting' is the first-named sub-system.

Circuit sheet numbering

The figures in brackets to the left of the page number indicate a circuit sheet number and the total number of sheets per circuit, for example (01 / 05) represents sheet 1 of 5.

Understanding the circuit diagrams

Components

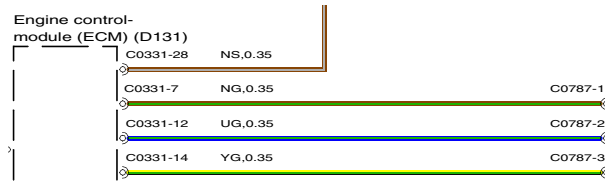

After each component description, a translation code is displayed in brackets, for example: Starter relay (R102), Engine control module (ECM)(D131). The codes can be ignored.

Note: A dotted outline indicates that the component identified is not shown in its entirety.

Connectors

Connectors and header joints are identified by their corresponding connector number with a numbered suffix to indicate the pin-out detail of the wire, i.e. C0292-1 identifies connector 292, pin number 1. Wire insulation colours are listed in a table at the end of this section. Where wires have a predominant colour with a secondary colour tracer, the main colour is identified first, i.e. WH-BK - white with a black tracer.

 
Wire length (Power and Ground Distribution only)

The wire length (in millimetres) is displayed after the colour and cross sectional area; for example, SR,0.35,480. In this example, the figure, 480 indicates the approximate position of the harness splice is 480mm from connector C2335.


Line Types



Crossed wires as illustrated above show an example of how a twisted pair of wires may be represented on the circuits.



The arrows illustrated above show an example of the page break symbols, identifying that the circuit continues at the corresponding letter on the sheet number indicated.

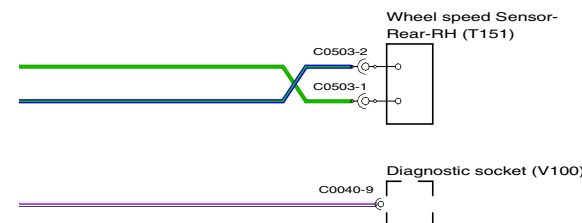

The cup and ball symbol represents the male and female halves of connector. Most connectors plug directly into a component but some are wired directly to the component using a 'flylead' as with C503 above.


USING THIS PUBLICATION


Ground points


Ground points are identified with an eyelet symbol and a connector number, except where components are grounded through its fixings, when only the eyelet is shown.


Colour Codes


CODE	COLOUR
BK or B	BLACK
BN or N	BROWN
BU or U	BLUE
GN or G	GREEN
GY or S	GREY (slate)
OG or O	ORANGE
PK or K	PINK
RD or R	RED
VT or P	PURPLE
WH or W	WHITE
YE or Y	YELLOW

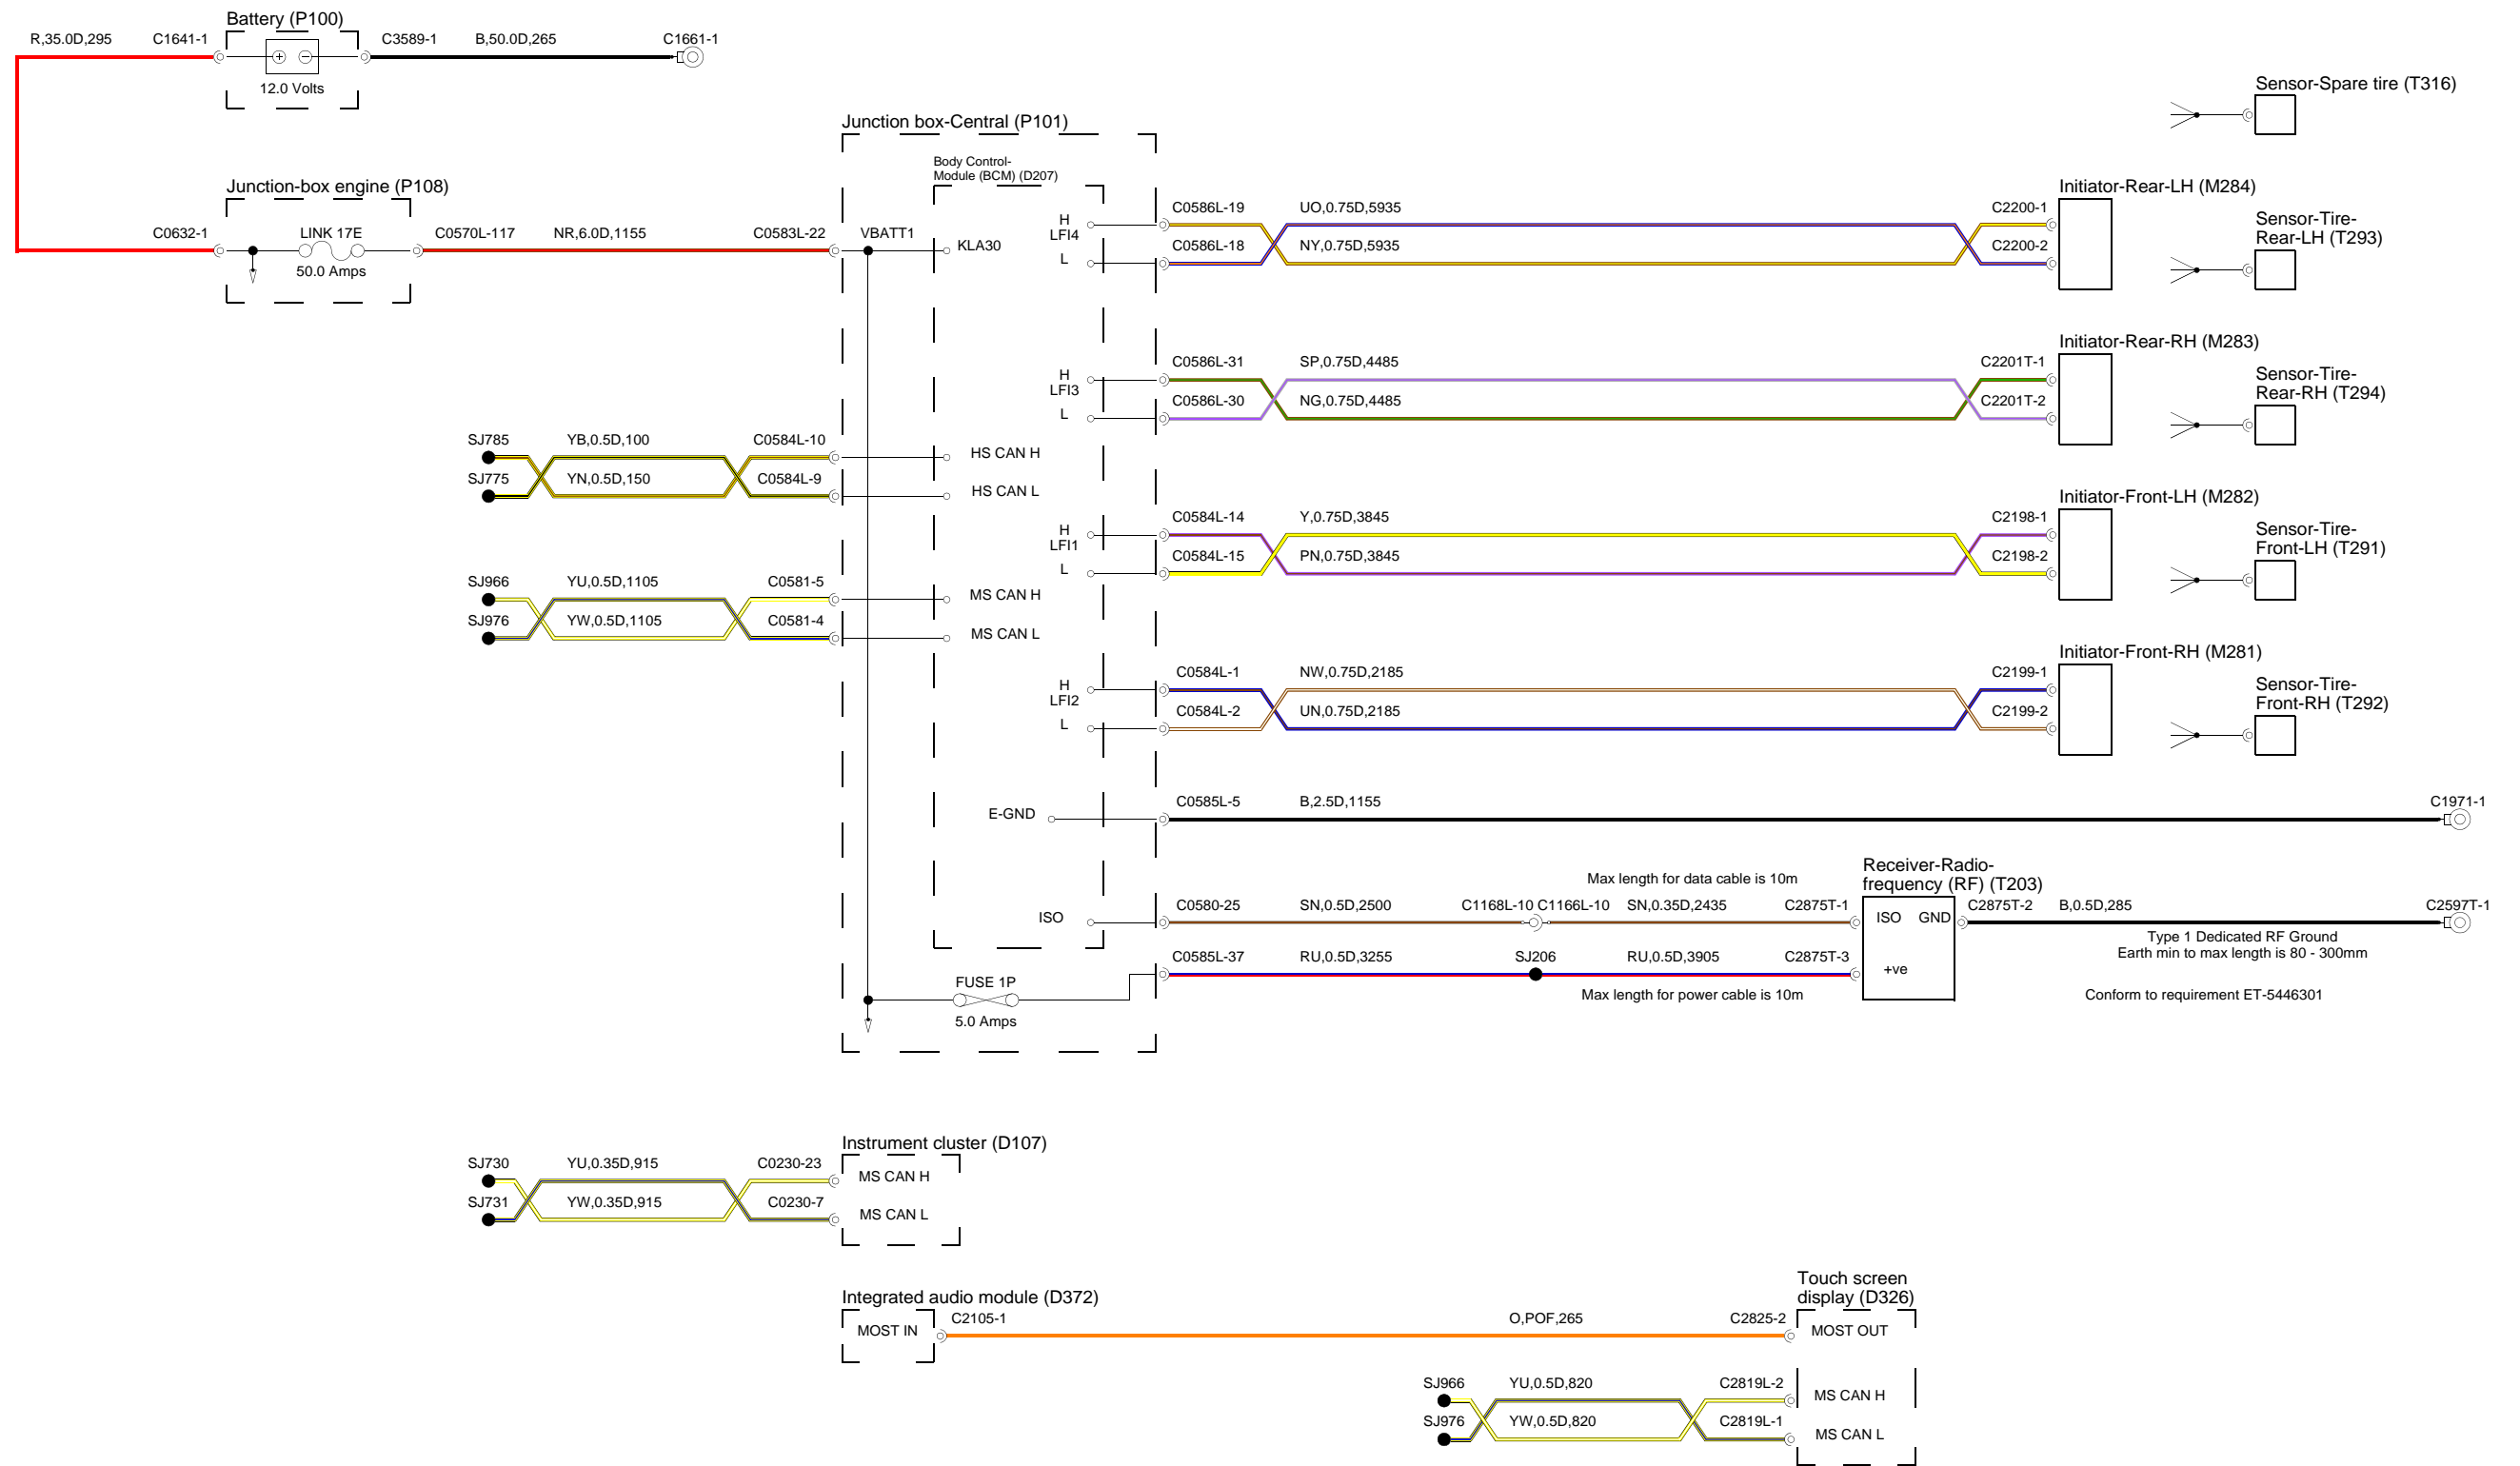


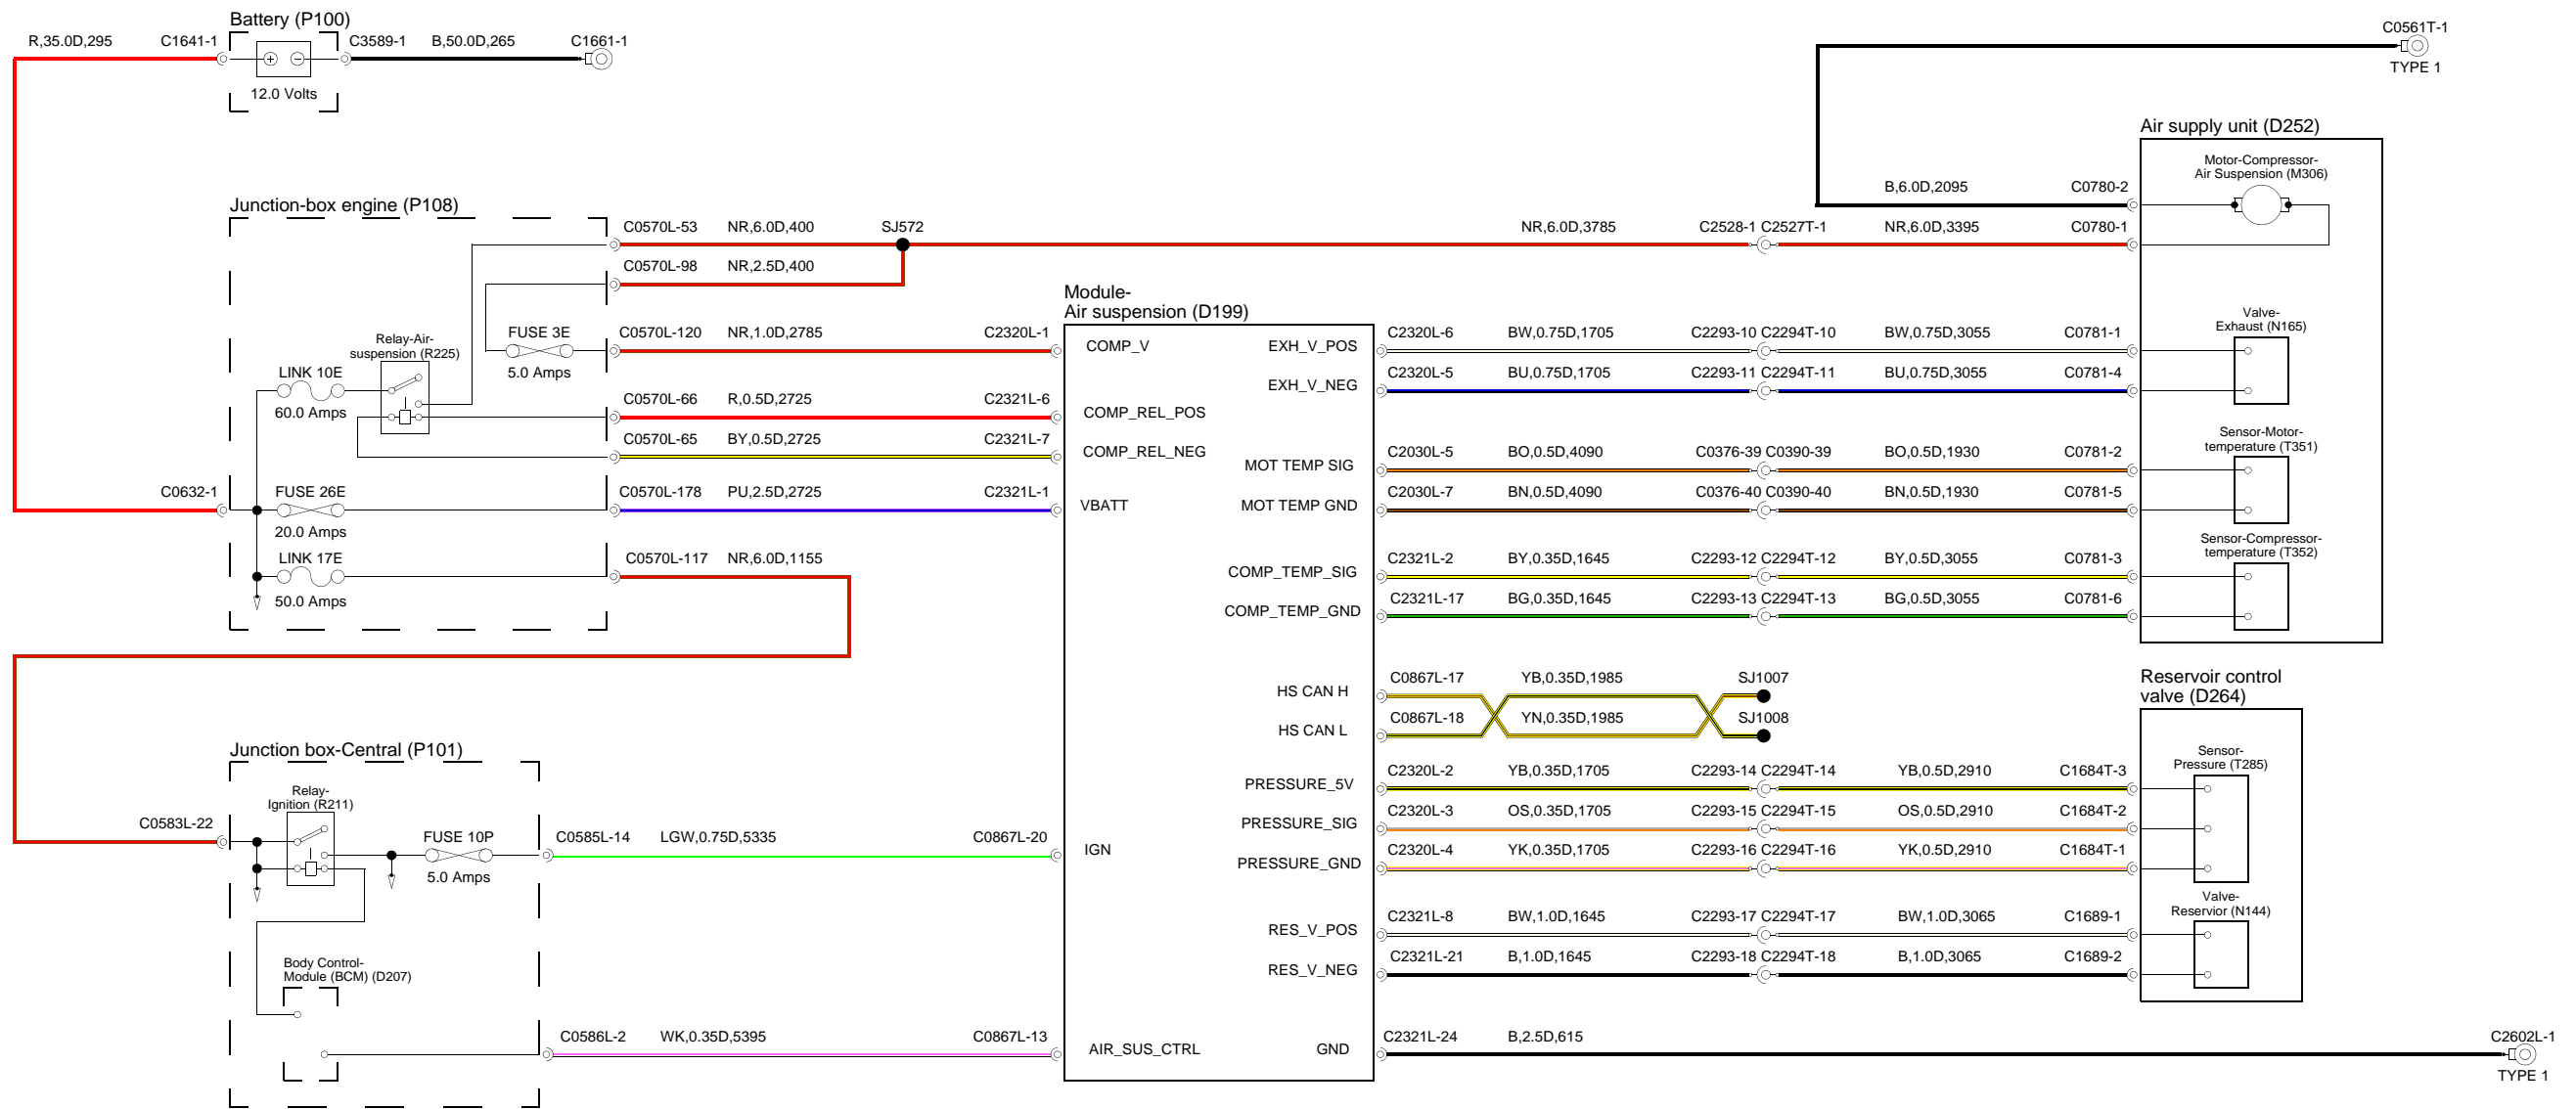


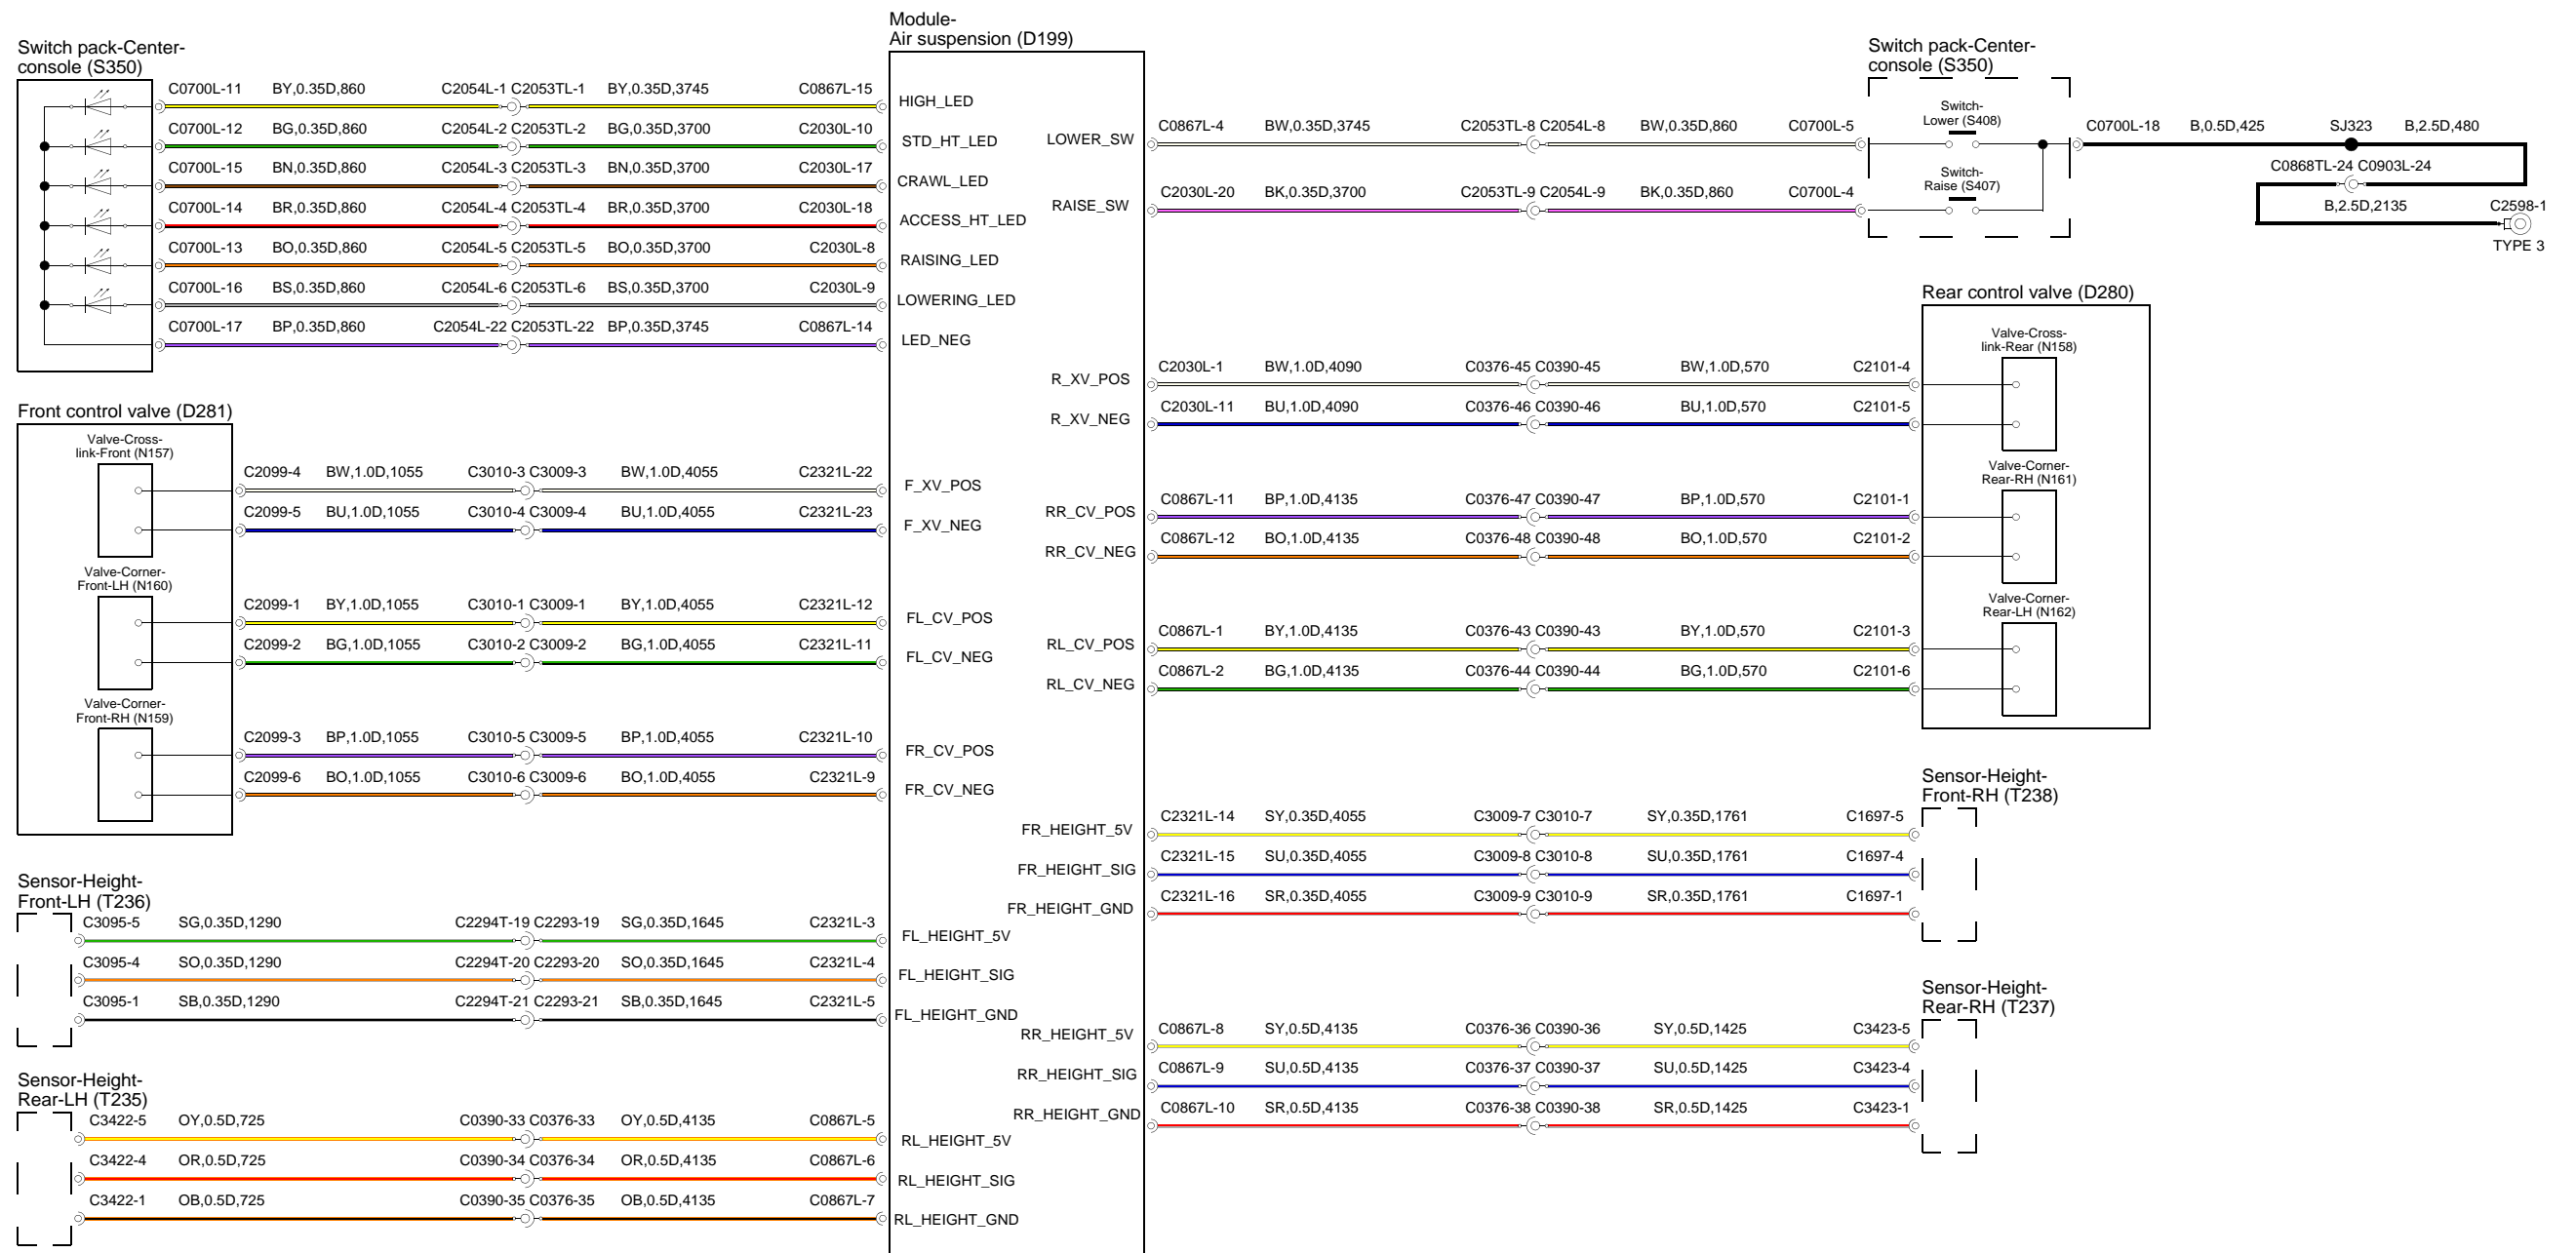


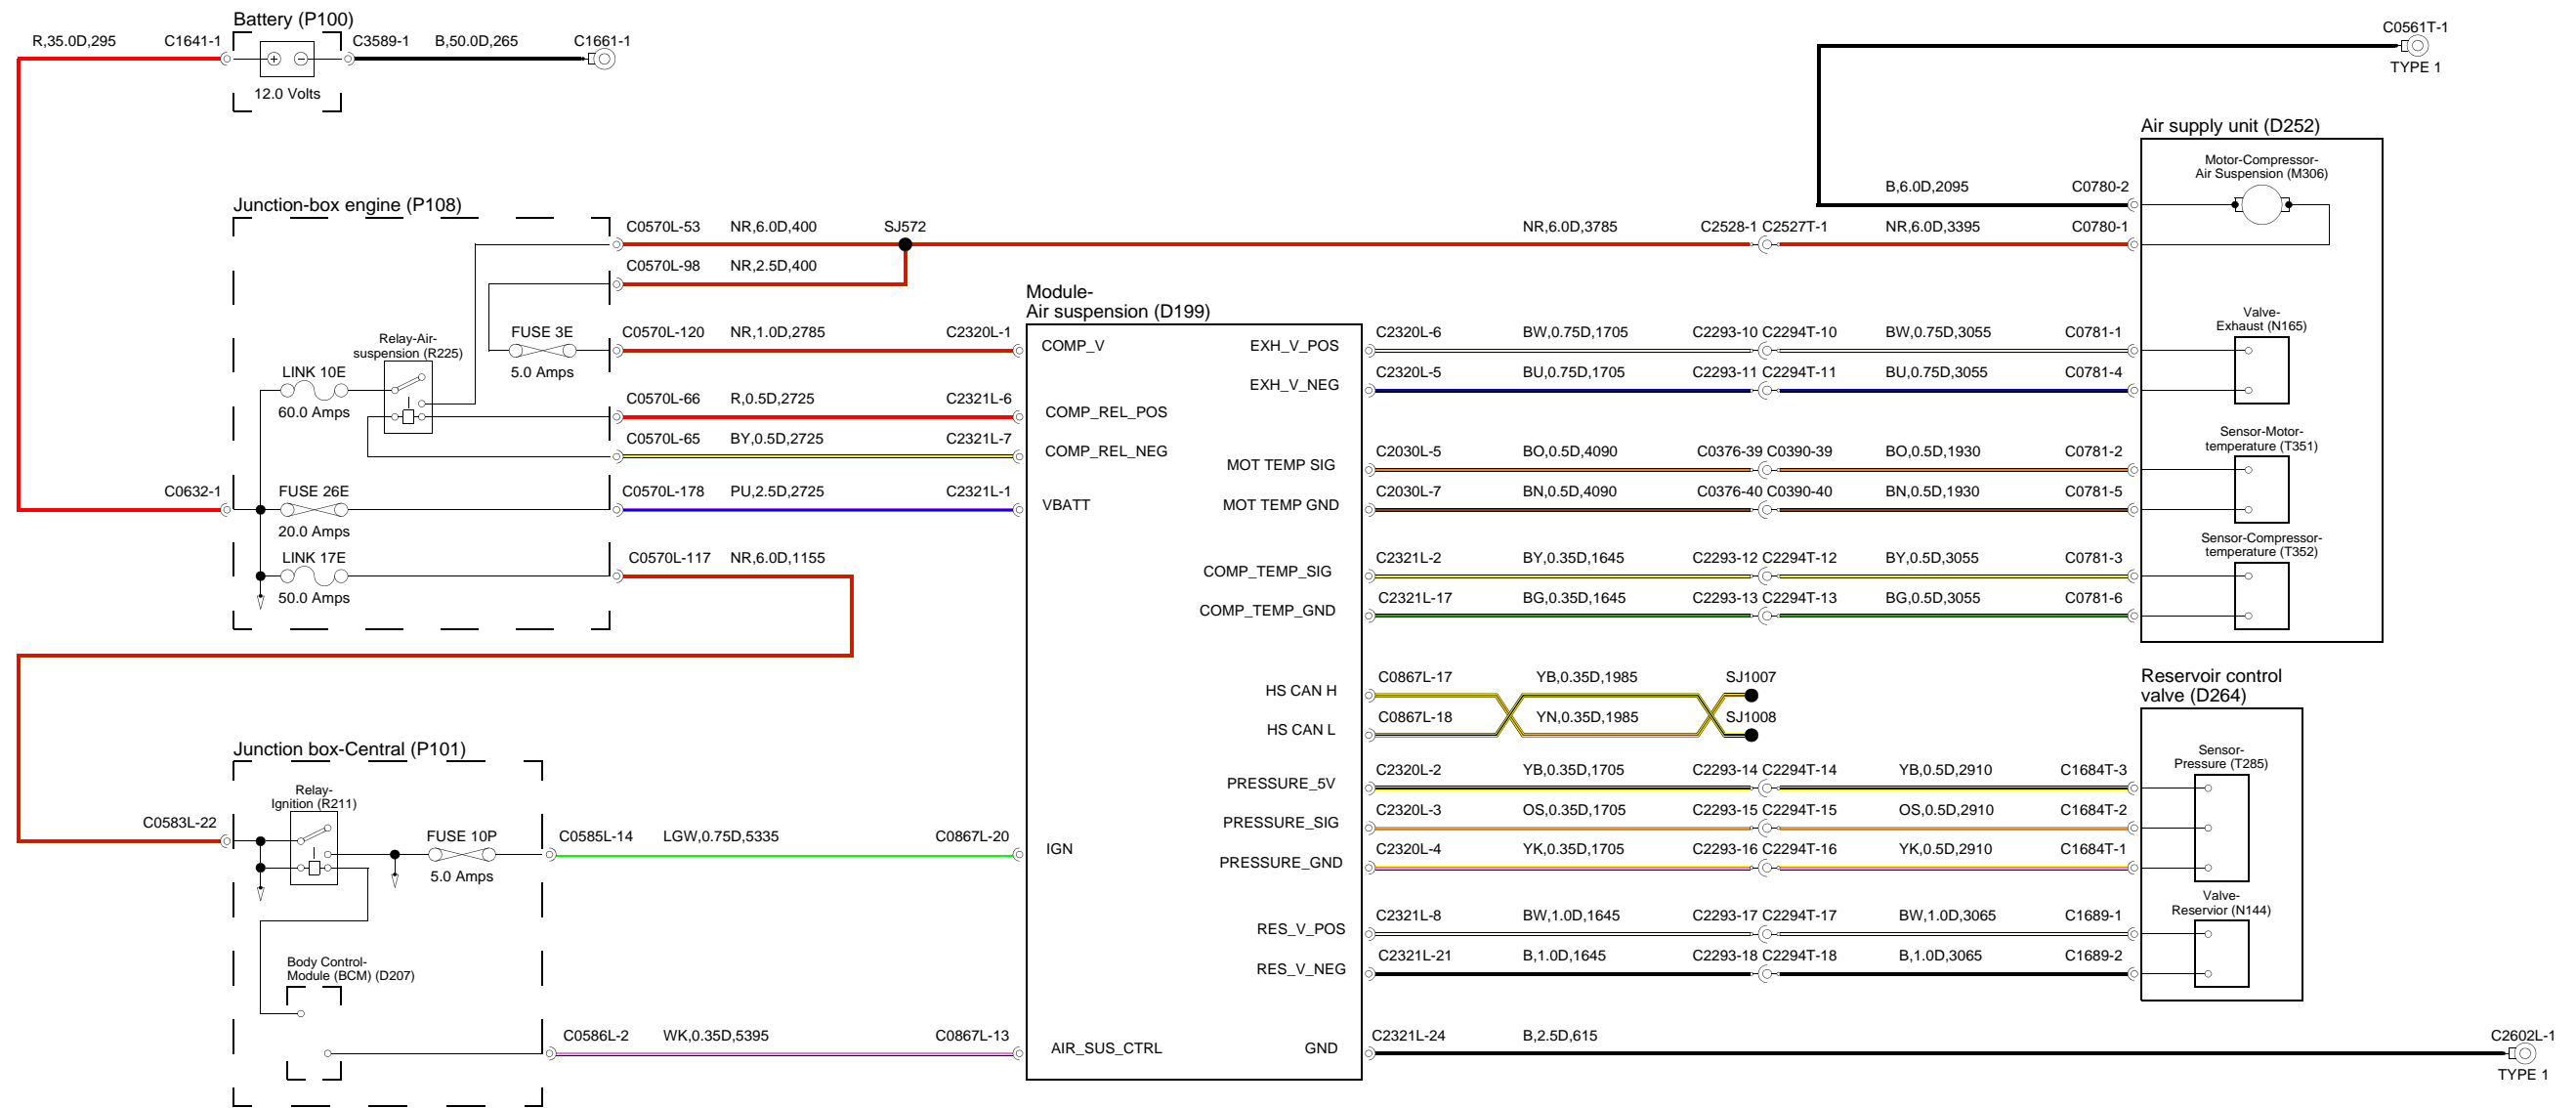

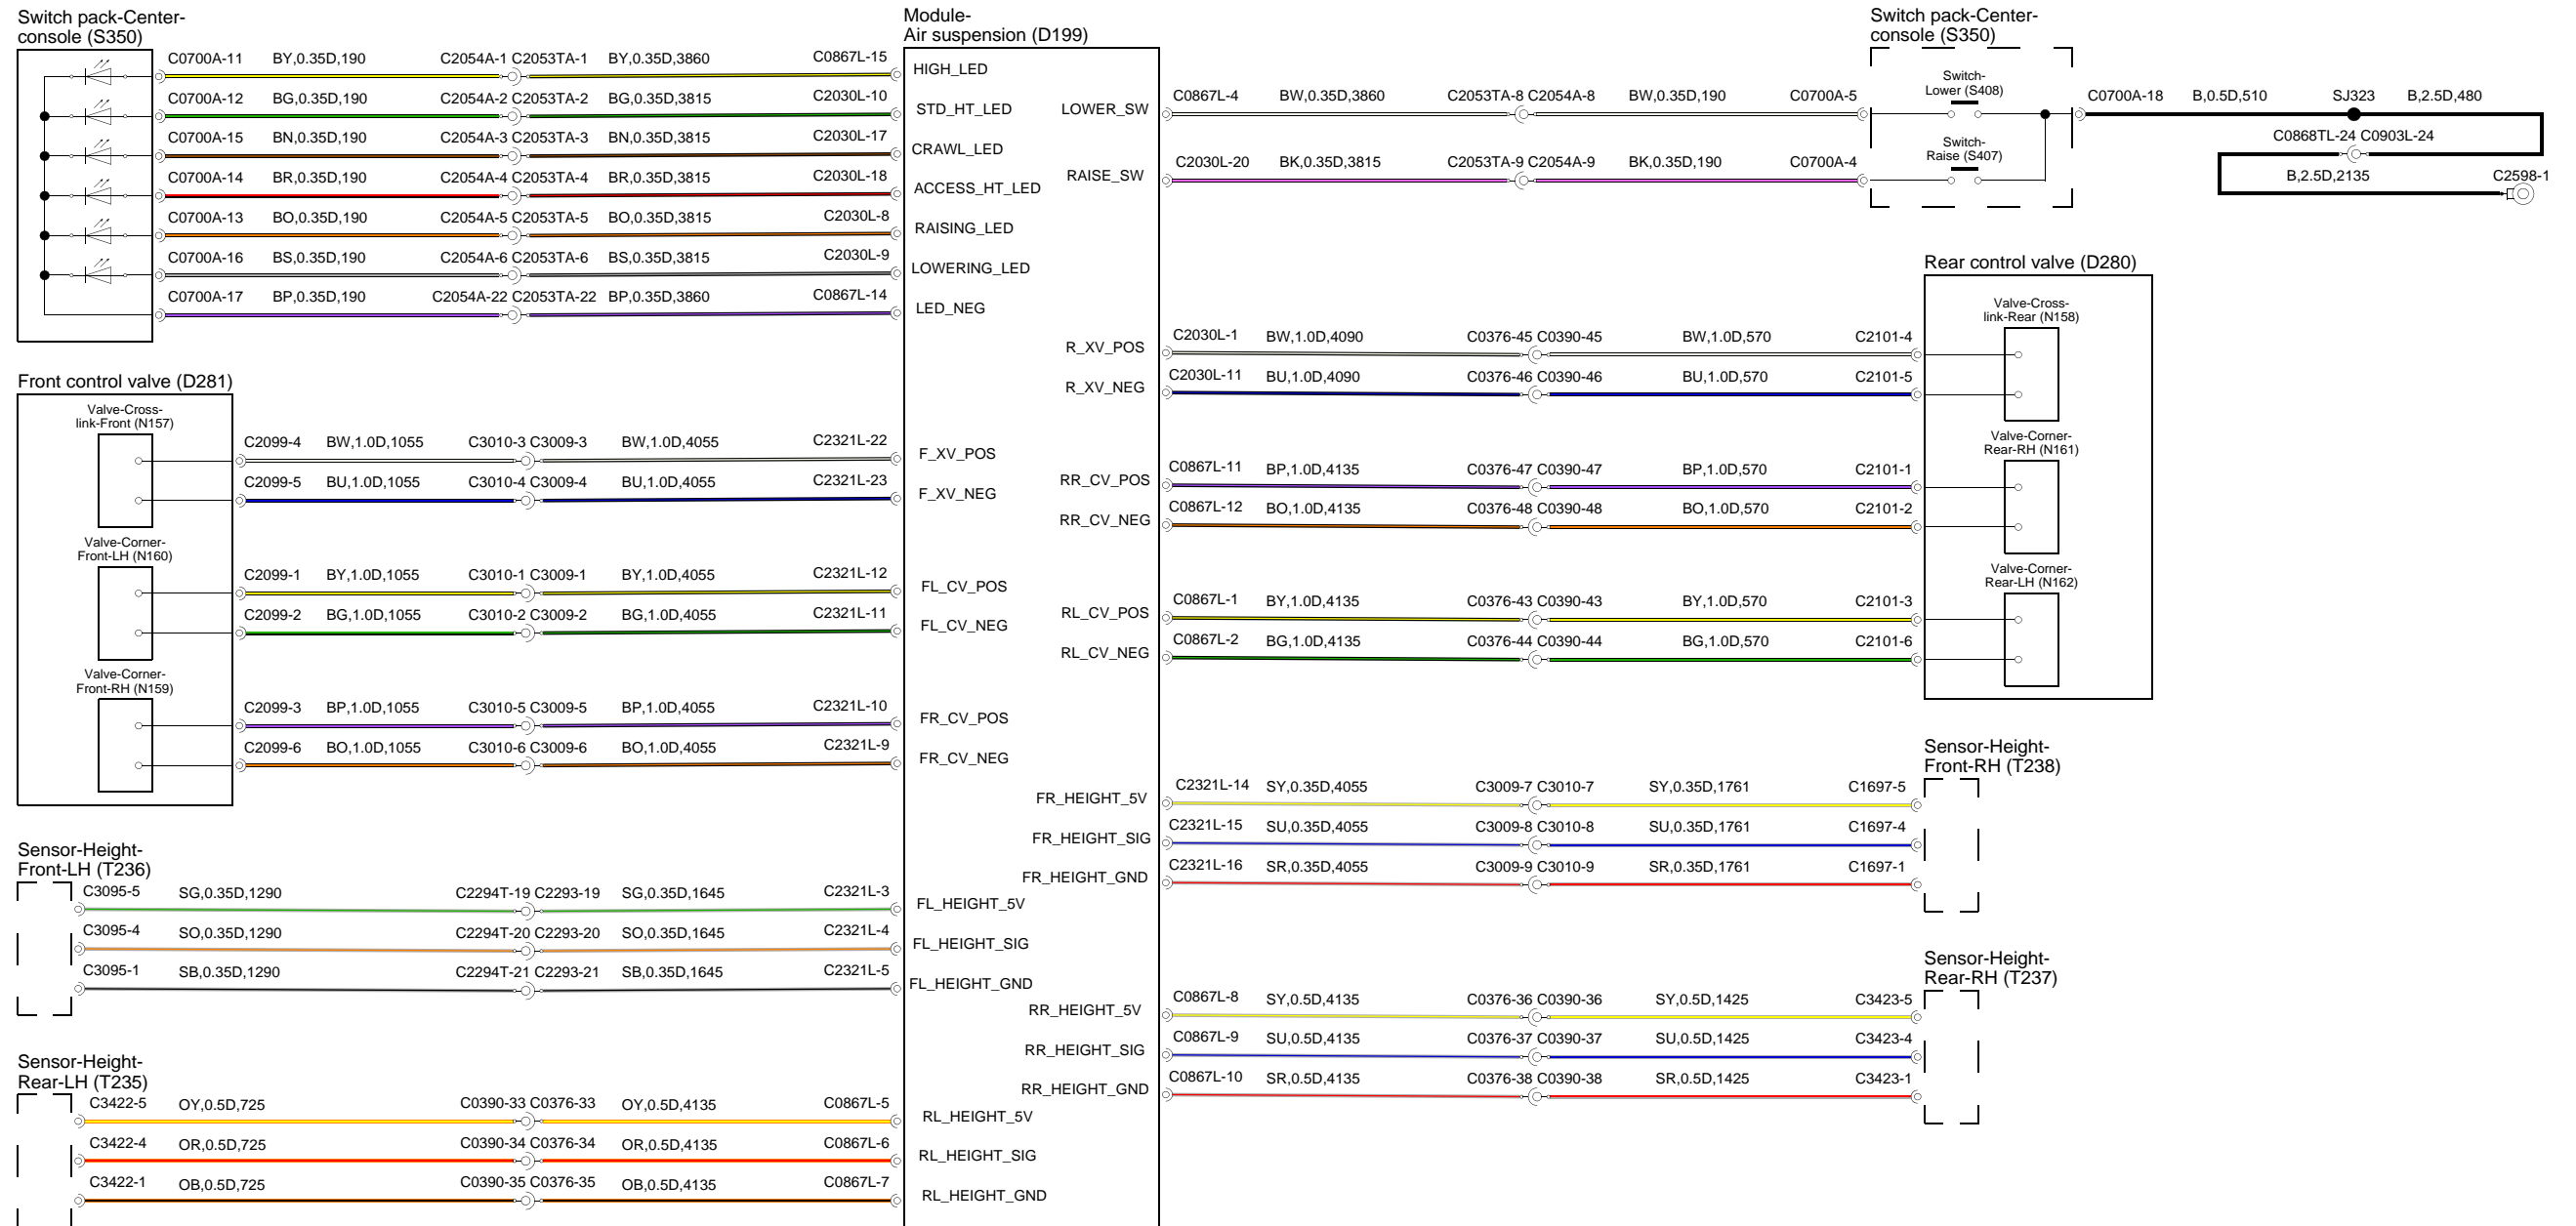

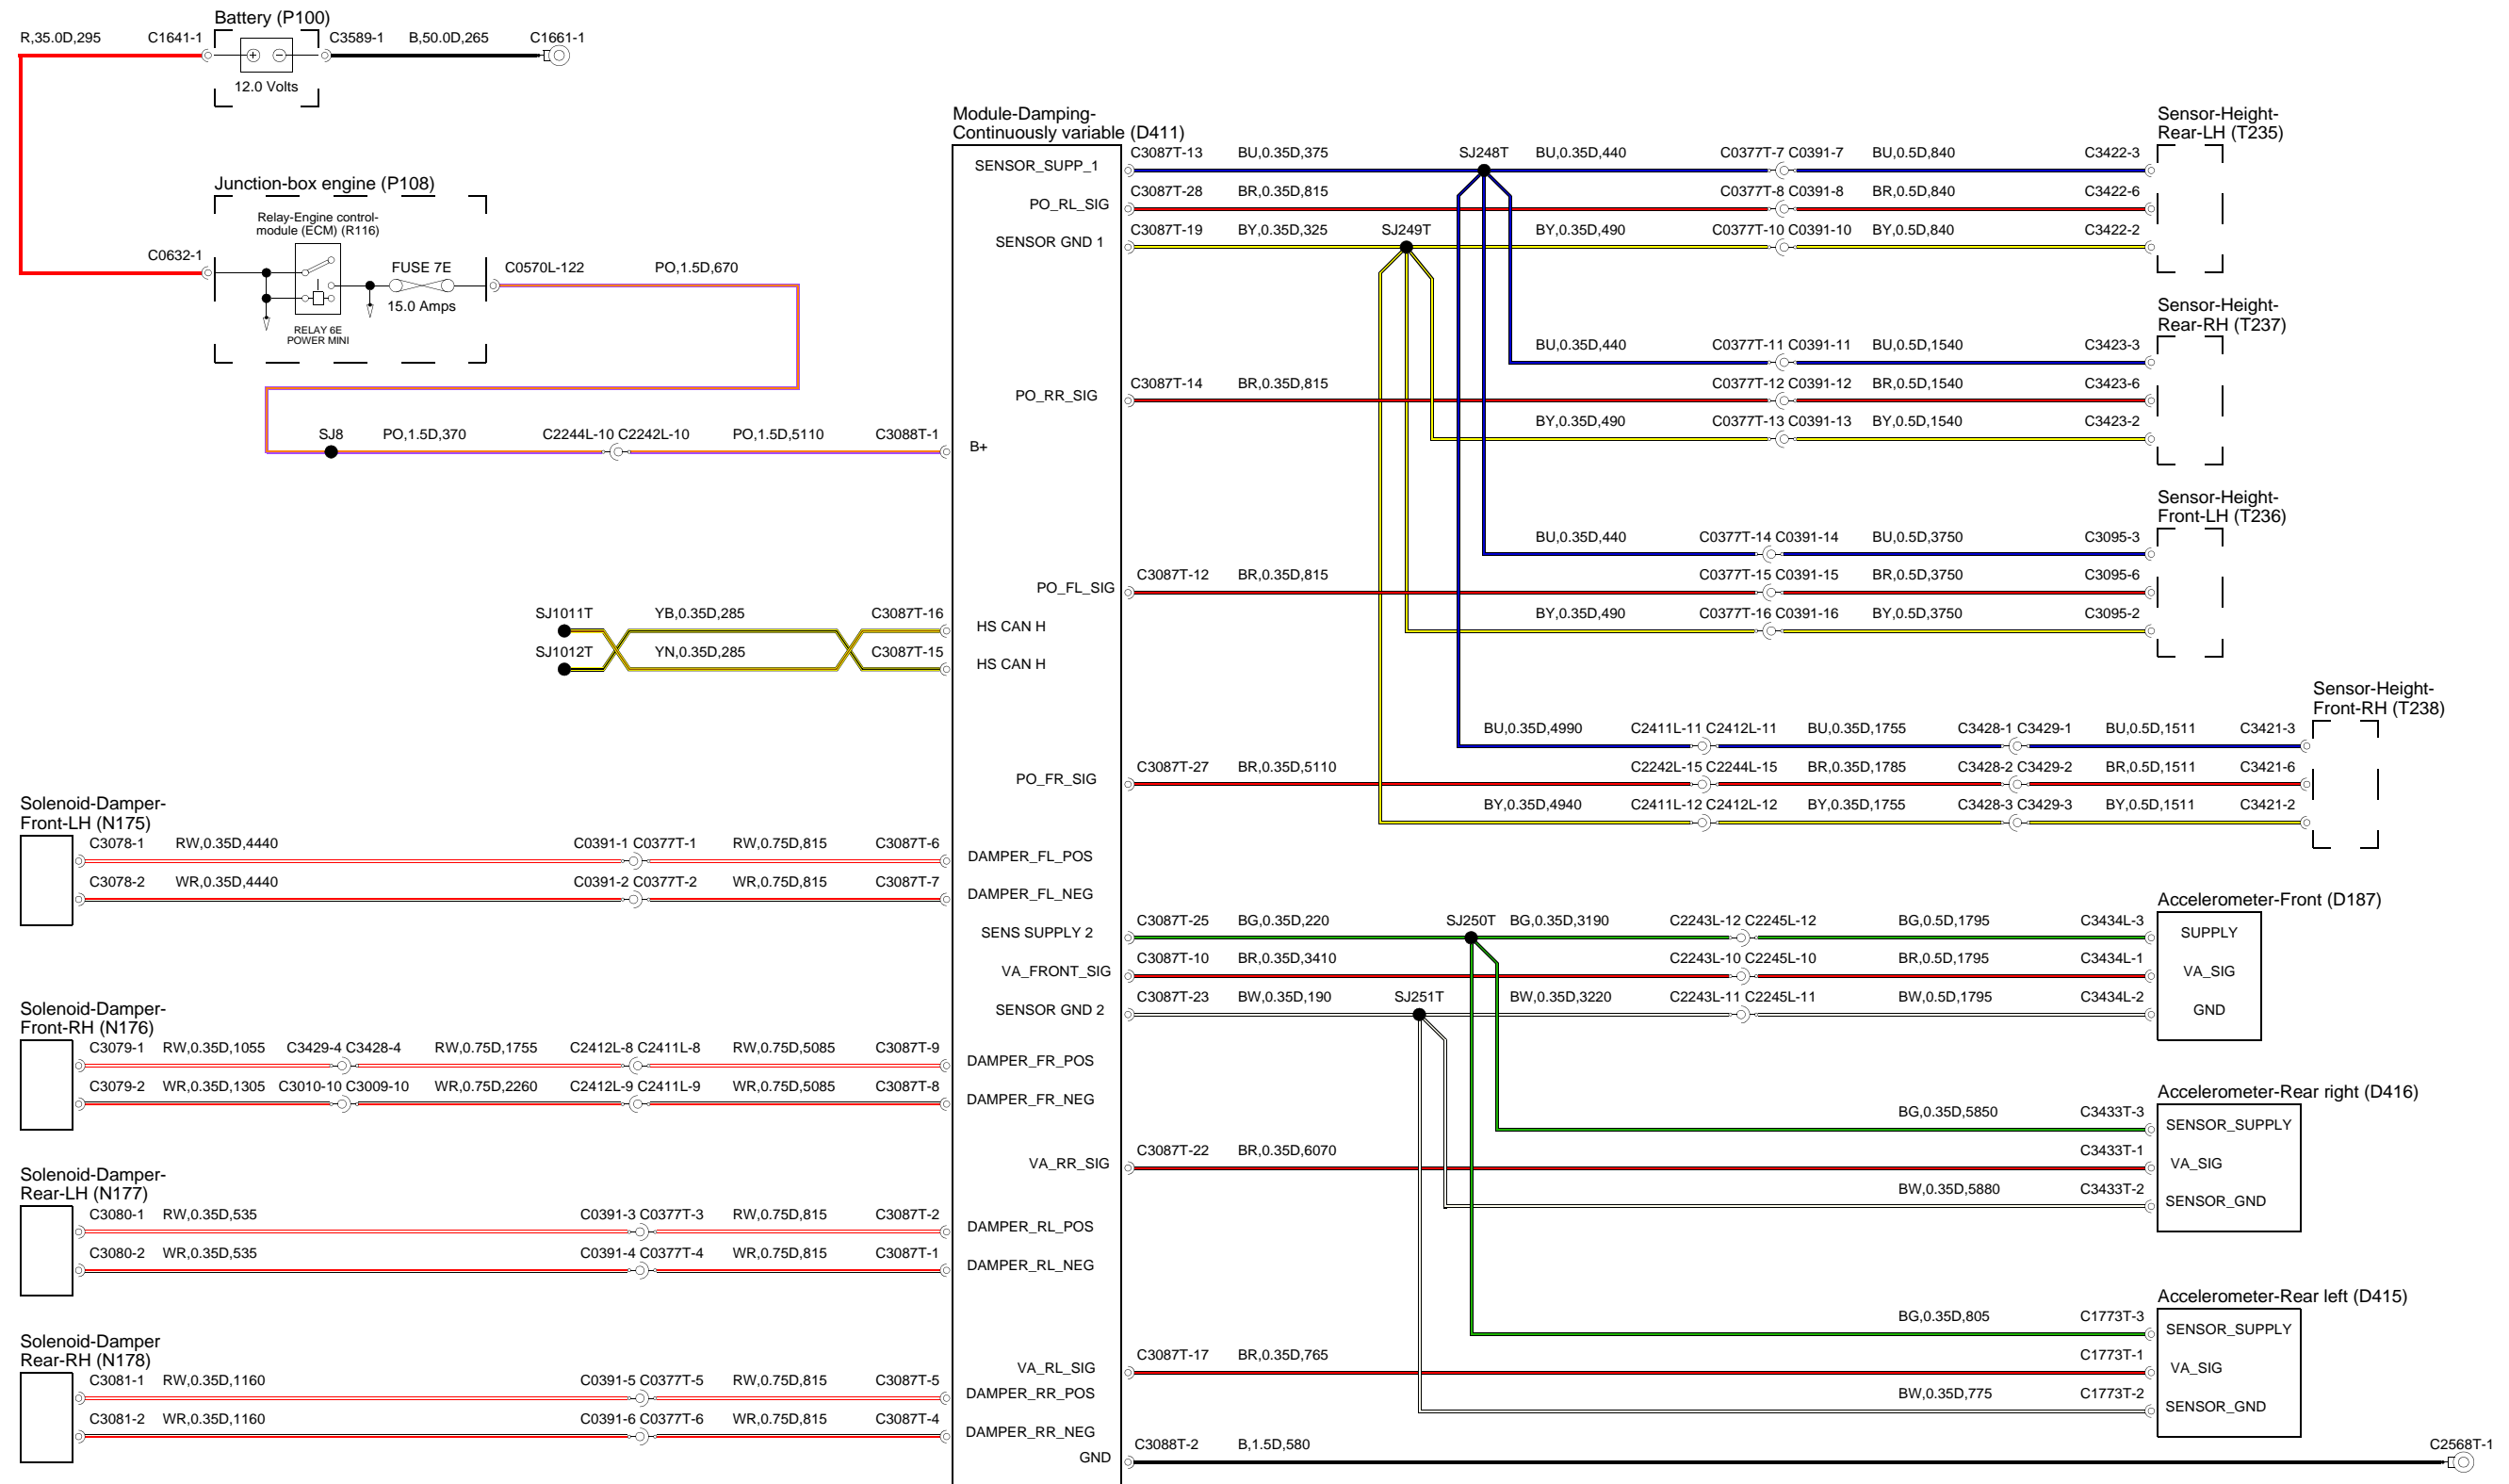

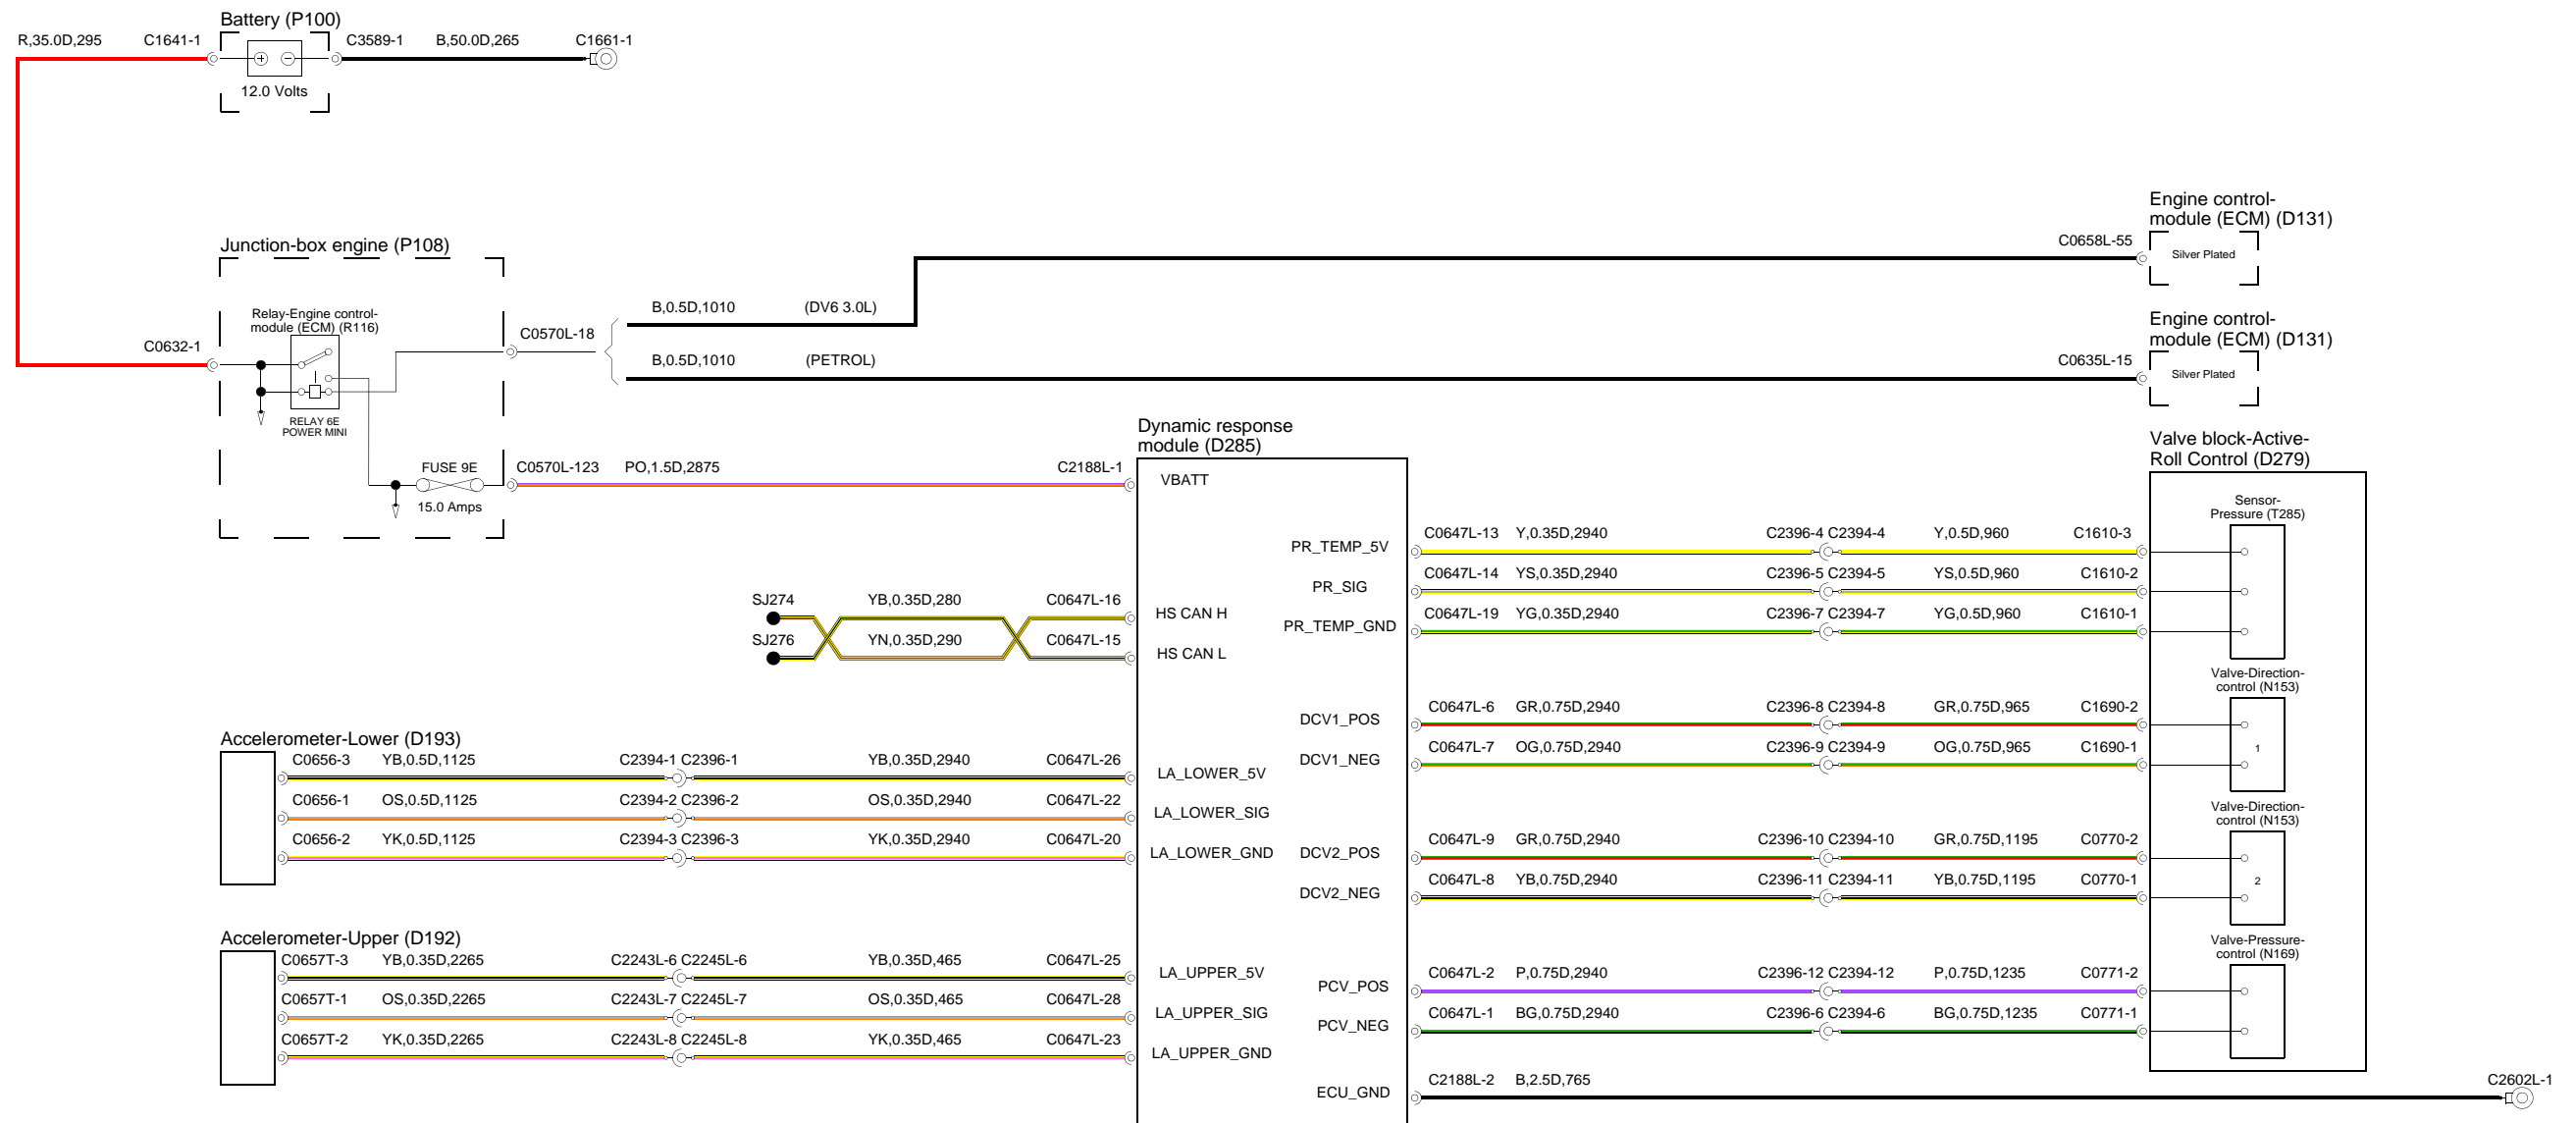

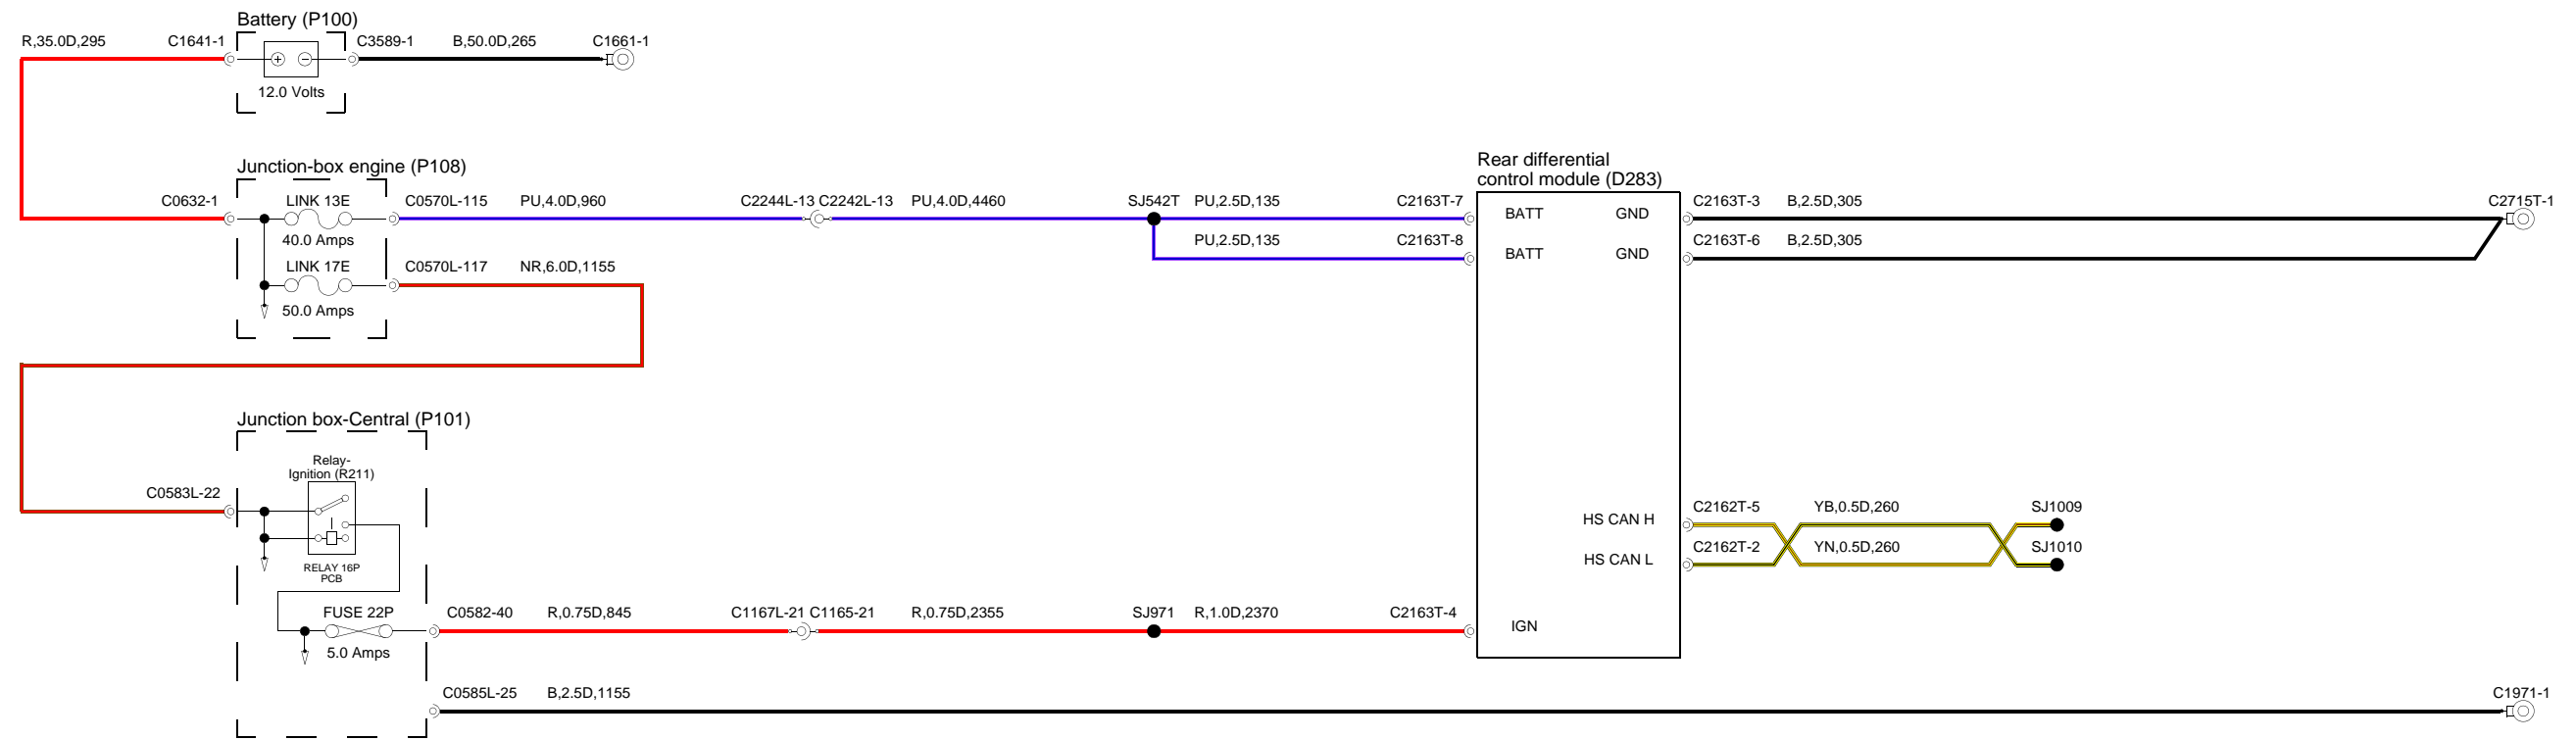



FOR NON REAR DIFFERENTIAL

