

# BOOK TWO CONTENTS

Section Number		Page
<b>04</b>	<b>GENERAL SPECIFICATION DATA</b>	
	—V8 engine data	1
	—Fuel system	3
	—Cooling system	3
	—Clutch	3
<b>06</b>	<b>TORQUE WRENCH SETTINGS</b>	
	—Engines	1
	—Clutch	1
<b>12</b>	<b>V8 CYLINDER ENGINE</b>	
	—Overhaul engine	1
	—Cylinder head	3
	—Flywheel	6
	—Timing gear cover and water pump	7
	—Oil pump	8
	—Timing chain gears and camshaft	9
	—Connecting rods and pistons	10
	—Crankshaft	16
	—Assembling engine	18
	—Fault diagnosis	30
<b>17</b>	<b>EMISSION CONTROL</b>	
	—Description	1
	—Engine breather filter — remove and refit	1
	—Engine flame traps — remove and refit	2
	—Adsorption canister — remove and refit	3
	—Pulsair air injection	3
	—Pulsair manifold — remove and refit	4
	—Pulsair check valve — remove and refit	5
	—Air intake temperature control system — description	6
	—Control valve — check — remove and refit	6
	—Temperature sensor — remove and refit	7
	—Vacuum delay valve	7
	—Air intake temperature control — fault diagnosis	9

*Continued*

**19** FUEL SYSTEM—ELECTRONIC FUEL INJECTION

—Components	1
—Wiring diagram	2
—Description	3
—Engine setting procedure	4
—Continuity tests AVO meter	5
—Fault diagnosis — hot start	12
—Fault diagnosis — general	13
—Engine tuning procedure	14
—Check and adjust ignition timing	14
—Check and adjust idle speed	14
—Check and adjust idle CO level	14
—Air cleaner — remove and refit	14
—Resetting throttle levers	15
—Renew throttle cable	15
—Relays — remove and refit	16
—Electronic control unit	16
—Throttle potentiometer — remove, refit and setting	17
—Thermotime switch — test — remove and refit	18
—Coolant temperature sensor — test — remove and refit	18
—Air temperature sensor — test	19
—Airflow meter — remove and refit	19
—Power resistor — remove and refit	20
—Over-run fuel shut-off valve — remove and refit	20
—Solenoid operated air valve — remove and refit	20
—Depressurise fuel system	21
—Fuel pressure regulator — test — remove and refit	21
—Plenum chamber — remove and refit	22
—Ram housing — remove and refit	22
—Extra air valve — test — remove and refit	23
—Fuel rails — remove and refit	24
—Injectors — test — remove and refit	24
—Intake manifold — remove and refit	26
—Fuel line filter — remove and refit	27
—Fuel pump — remove and refit	27
—Fuel pipes	28

**19** FUEL SYSTEM—CARBURETTER

—Air filter — remove and refit	1
—Carburetter description — tamperproofing	2
—Carburetters — tune and adjust	2
—Slow running — adjust	3
—Fast idle — adjust	4
—Idle mixture — adjust	4
—Carburetter — remove and refit	6
—Carburetter overhaul	8
—Throttle cable — remove and refit	11
—Throttle linkage — remove and refit	12
—Choke cable — remove and refit	13
—Throttle pedal — remove and refit	14
—Fuel filter — remove and refit	14
—Fuel pipes	15
—Fuel tank and pump — remove and refit	15
—Fault diagnosis	16

*Continued*

Section Number	Page
-------------------	------

<b>26</b>	<b>COOLING SYSTEM</b>
-----------	-----------------------

---

—Coolant — drain and refill	1
—Coolant requirements	2
—Expansion tank — remove and refit	2
—Fan belt — check and adjust	3
— remove and refit	3
—Viscous coupling, fan blades, pulley and fan cowl	3
—Radiator — remove and refit	4
—Thermostat — remove and refit	4
— test	5
—Water pump — remove and refit	5
—Fault diagnosis	6

<b>30</b>	<b>MANIFOLD AND EXHAUST SYSTEM</b>
-----------	------------------------------------

---

—Induction manifold — remove and refit	1
—Exhaust system complete — remove and refit	2
—Exhaust manifold — remove and refit	4

<b>33</b>	<b>CLUTCH</b>
-----------	---------------

---

—Clutch assembly — overhaul	1
— remove and refit	1
—Hydraulic system — bleed	1
—Master cylinder — remove and refit	2
— overhaul	2
—Release bearing assembly — remove and refit	3
—Clutch pedal — remove and refit	4
—Slave cylinder — remove and refit	5
— overhaul	5

