

**04** GENERAL SPECIFICATION DATA

—Steering	1
—Suspension	1
—Brakes	2

**06** TORQUE WRENCH SETTINGS

—Steering	1
—Front suspension	1
—Rear suspension	1
—Brakes	1
—Road wheels	2
—Body	2

**57** STEERING

—Power steering box—remove and refit	1
—Power steering box—overhaul	2
—Power steering system—bleed	10
—Power steering system—test	10
—Power steering system—adjust	11
—Power steering fluid reservoir—remove and refit	12
—Power steering pump drive belt—adjust	12
—Power steering pump drive belt—remove and refit	12
—Power steering pump—remove and refit	13
—Power steering pump—overhaul	14
—Power steering—fault diagnosis	16
—Coupling shaft and universal joints—remove and refit	17
—Steering column—remove and refit	17
—Steering column assembly—overhaul	18
—Steering column lock and ignition/starter switch—remove and refit	19
—Steering wheel—remove and refit	19
—Drop arm—remove and refit	20
—Drop arm ball joint—overhaul	20
—Track rod and linkage—remove and refit	23
—Steering damper—remove and refit	23
—Drag link and drag link ends—remove and refit	24
—Front wheel alignment—check and adjust	25
—Steering lock stop—check and adjust	25

*Continued*

**60** FRONT SUSPENSION

—Panhard rod—remove and refit	1
—Radius arm—remove and refit	1
—Front road spring—remove and refit	2
—Front shock absorber—remove and refit	2
—Bump stop—remove and refit	3

**64** REAR SUSPENSION

—Rear road spring—remove and refit	1
—Rear shock absorber—remove and refit	1
—Levelling unit—functional check	2
—Levelling unit—remove and refit	2
—Levelling unit ball joints—remove and refit	3
—Bump stop—remove and refit	4
—Upper suspension link—remove and refit	4
—Lower suspension link—remove and refit	5

**70** BRAKES

—Description—brake system	1
—Layout of brake pipe system	2
—Bleed the brakes	4
—Brake pressure reducing valve—remove and refit	5
—Master cylinder—overhaul	6
—Pedal assembly—overhaul	10
—Brake servo—overhaul	11
—Front brake caliper—overhaul	17
—Rear brake caliper—overhaul	19
—Transmission brake lever—remove and refit	21
—Transmission brake—overhaul	22
—Transmission brake cable—remove and refit	24

**76** BODY

—Body repairs—general information	1
—Paintwork—general information	3
—Chassis frame—alignment check	4
—Body—introduction	6
—Welding	6
—Inner body shell—welding charts	7
—Headlining, front and rear—remove and refit	12
—Roof panel—remove and refit	12
—Bonnet—remove and refit	12
—Decker panel—remove and refit	12
—Front wing—remove and refit	12
—Rear corner panel—remove and refit	13
—Rear wing—remove and refit	13
—Rear quarter panel—interior—remove and refit	13
—Rear quarter panel—exterior—remove and refit	14

**76** BODY (Continued)

—Front door—remove and refit	14
—Rear passenger door—remove and refit	15
—Upper tailgate—remove and refit	16
—Upper tailgate lock—remove and refit	16
—Lower tailgate—remove and refit	17
—Lower tailgate lock—remove and refit	17
—Front door glass and regulator—four-door—remove and refit	18
—Rear door glass and regulator—remove and refit	19
—Front door lock, outside and inside door handles—four door—remove and refit	20
—Front door lock and handle—adjustment	20
—Rear door lock, outside and inside door handles—remove and refit	20
—Front door glass and regulator—two door—remove and refit	21
—Front quarter vent—two door—remove and refit	22
—Front door lock—two door—remove and refit	23
—Private lock—two door—remove and refit	23
—Body side glass—two door—remove and refit	23
—Windscreen glass—remove and refit	23
—Tailgate glass—remove and refit	24
—Front seat—two door—remove and refit	24
—Front seat—four door—remove and refit	25
—Front seat base—two and four door—remove and refit	25
—Cubby box—remove and refit	25
—Floor mounted console—remove and refit	25
—Lower fascia panel—remove and refit	26
—Radio housing	26
—Centre fascia panel—remove and refit	27
—Louvre fascia panel—remove and refit	27
—Fascia top rail—remove and refit	28
—Front spoiler—remove and refit	28

