

BOOK FIVE CONTENTS

Section Number		Page
04	GENERAL SPECIFICATION DATA	
	—Air conditioning	1
	—Electrical	1
	—Wipers and washers	2
06	TORQUE WRENCH SETTINGS	
	—Air conditioning	1
	—Electrical	1
80	HEATING AND VENTILATION	
	—Heater controls	1
	—Heater unit	1
	—Heater fan motor	2
	—Fan motor resistance unit	2
	—Heater radiator	2
82	AIR CONDITIONING	
	—Description	1
	—General service information	1
	—Periodic maintenance	3
	—Service valves	3
	—Electrical supply—switches and fuses	5
	—Circuit diagram	6
	—Fault diagnosis	7
	—Charging and testing equipment	10
	—Depressurising	10
	—Evacuating	10
	—Sweeping	11
	—Charging	11
	—Leak test	11
	—Pressure test	12
	—System test	12
	—Compressor—remove and refit	13
	—Compressor—drive belt adjustment	13
	—Compressor—oil level check	13
	—Condenser—remove and refit	13

Continued

82 AIR CONDITIONING (continued)

—Condenser—fans and motors—remove and refit	15
—Receiver drier—remove and refit	16
—Evaporator—remove and refit	17
—Evaporator expansion valve—remove and refit	17
—Evaporator—blower assembly—remove and refit	17
—Thermostat—remove and refit	19
—Fan control switch—remove and refit	20

84 WIPERS AND WASHERS

—Description	1
—Washer reservoir—remove and refit	1
—Headlamp power wash pump—remove and refit	1
—Windscreen washer pump—remove and refit	1
—Tailgate glass washer pump—remove and refit	1
—Windscreen washer jets—remove and refit	2
—Windscreen washer tubes—remove and refit	2
—Wiper arms—remove and refit	2
—Wiper blades—remove and refit	3
—Windscreen wiper motor—remove and refit	3
—Wiper motor—check	4
—Tailgate glass washer jet—remove and refit	4
—Tailgate glass tube—remove and refit	5
—Tailgate glass wiper motor—remove and refit	5
—overhaul	6
—Headlamp power wash jets—remove and refit	8
—Headlamp power wash hose—remove and refit	8

86 ELECTRICAL

—Location of electrical equipment	1
—Fault diagnosis	2
—Description	4
—Alternator—remove and refit	4
—overhaul	6
—Battery—remove and refit	9
—Horns—remove and refit	9
—Spark plugs—clean and adjust	10
—Electronic ignition—description	11
—Distributor—remove and refit	12
—overhaul electrical components	13
—Coil—remove and refit	14
—Amplifier—remove and refit	14
—Ignition timing	14
—Constant energy ignition system—checks	15
—Headlamp assembly—remove and refit	18
—Headlamp bulb—remove and refit	18
—Auxiliary driving lamps—remove and refit	18
—bulb replacement	18

Continued

86

ELECTRICAL (continued)

—Side light and flasher lamp assembly—remove and refit	19
—bulb replacement	19
—Reflectors—remove and refit	19
—Rear light assembly—remove and refit	20
—Under-bonnet lamp assembly—remove and refit	20
—Side repeater lamps—remove and refit	20
—Heater ventilation control panel—bulb replacement	21
—Door edge lamps/puddle lamps—remove and refit	21
—bulb replacement	21
—Automatic gear selector panel illumination—bulb replacement	22
—Air conditioning control panel illumination—bulb replacement	22
—Number-plate lamp assembly—remove and refit	22
—bulb replacement	22
—Interior roof lamps—remove and refit	23
—Interior roof lamps circuit delay—remove and refit	23
—Starter motor—remove and refit	24
—Starter solenoid—remove and refit	24
—Starter motor—overhaul	25
—Fuses	28
—Fuse box—main and auxiliary	28
—Relays—identification	29
—remove and refit	30
—Auxiliary switch panel—description	30
—remove and refit	30
—bulb replacement	31
—illumination	31
—Ignition starter switch—remove and refit	31
—Main lighting switch—remove and refit	32
—Windscreen programmed wash wipe switch—remove and refit	32
—Main and dipped beam, direction indicators and horn switch—remove and refit	32
—Rear screen programmed wash wipe switch—remove and refit	33
—Door pillar switch—remove and refit	33
—Under bonnet illumination switch—remove and refit	33
—Cigar lighter—radio housing (front)—remove and refit	34
—Cigar lighter—cubby mounted (rear)—remove and refit	34
—Reverse light switch manual gearbox—remove and refit	35
—Reverse light switch/start inhibitor switch—remove and refit	35
—Oil pressure warning switch—remove and refit	35
—Coolant temperature transmitter—remove and refit	36
—Stop light switch—remove and refit	36
—Handbrake warning switch—remove and refit	36
—Choke warning light switch—remove and refit	37
—Exterior driving mirrors—description	37
—renew mirror glass	37
—renew motor assembly	37
—Exterior driving mirrors control switches—remove and refit	38
—Exterior driving mirrors complete assembly—remove and refit	38
—Instrument illumination dimming control—remove and refit	39
—Instrument binnacle—warning light symbols	39
—bulb replacement	40
—remove and refit	40
—Binnacle instrument pack—remove and refit	40
—Instrument binnacle printed circuit—remove and refit	42
—Instrument binnacle—printed circuit harness connections	43
—Multi-function unit connections	43

Continued

86

ELECTRICAL continued

—Tachometer—remove and refit	44
—Fuel and temperature gauge unit—remove and refit	44
—Speedometer and drive unit—remove and refit	44
—Clock—remove and refit	44
—Speedometer cable assembly—remove and refit	45
—Window lift switches—remove and refit	45
—Window lift motors (rear doors)—remove and refit	45
—Window lift motors (front doors)—remove and refit	46
—Central door locking—description	47
—Front door actuator units—remove and refit	47
—Rear door actuator units—remove and refit	48
—Fuel tank gauge unit—remove and refit	48
—Split charge facility—option	48
—Trailer socket—option	49
—Split charge circuit diagram	51
—Electric mirrors circuit diagram	52
—Window lifts and door locks circuit diagram	53
—Main circuit diagram	55