


Door mirrors

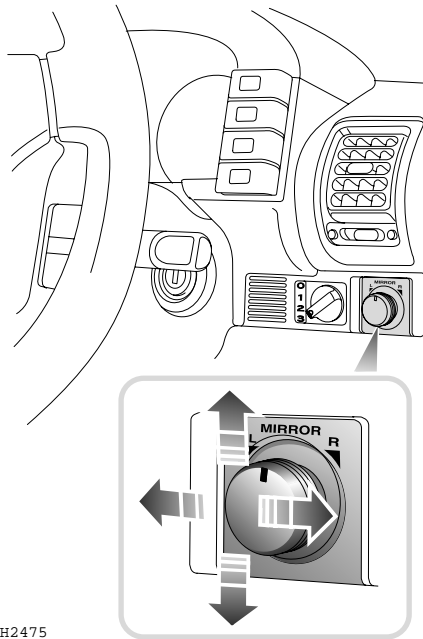

H2475

MIRROR ADJUSTMENT

Electric operation:


1. Turn the control to the 'L' or 'R' position to select either the left or right hand mirror.
2. With the starter switch turned to position 'II', push the control in the appropriate direction to tilt the mirror glass up/down/left or right.
3. When adjustment is complete, return the control to the OFF position (midway between 'L' and 'R').

NOTE: Heating elements inside the mirrors operate in conjunction with the heated rear window to disperse ice, mist and rain.

Manual operation:

Some vehicles are equipped with manually controlled mirrors, where the mirror glasses must be adjusted by hand to the required position.

Door mirrors

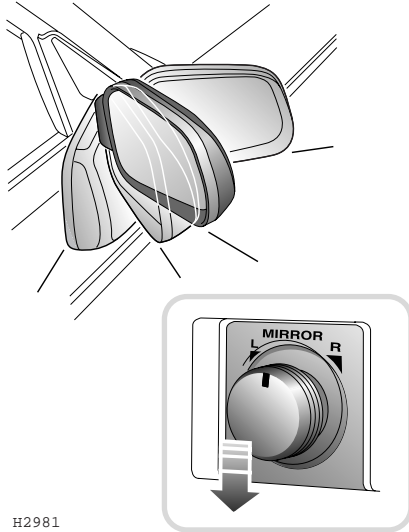

H2981

Folding the mirror body

The door mirrors are designed to fold forwards or rearwards on impact. They can also be folded back towards the side windows into a 'park' position to enable the vehicle to negotiate narrower openings.

Manual operation:

On some vehicles this operation can be carried out manually by physically pushing the mirror bodies back towards the side windows, and then pulling them back into the normal (extended) positions.

Electric operation:

On some vehicles mirror folding can be carried out electrically as follows:

1. Ensure the mirror control is turned to the centre position.
2. With the starter switch turned to position 'II', push the control down once to fold the mirrors back towards the side windows.
3. Before driving, push the control down a second time to return the mirrors to their normal (extended) position.

If the mirrors are accidentally knocked out of position (i.e. with one mirror extended and the other in the 'parked' position), an additional operation of the switch will re-synchronise them.