
LAND ROVER DISCOVERY wiring diagrams

Diagram 1

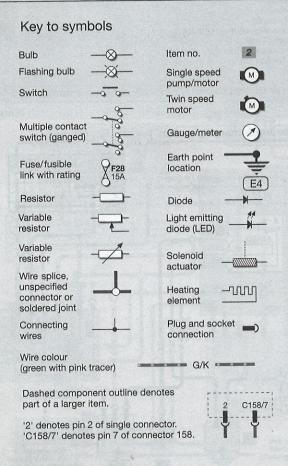

1 400	origo.	
Fuse	Rating	Circuit protected
F1	25A	Central door locking
F2	10A	Fuel flap release
F3	10A	Instrument cluster, switch illumination, LH headlight main beam
F4	10A	Rear fog lights :
F5	10A	LH headlight main beam
F6	25A	Air conditioning rear heater blower
F7	30A	Front heater blower
F8	30A	Heated rear window, heated mirrors
F9	10A	LH headlight dipped beam
F10	10A	RH headlight dipped beam
F11	10A	LH side & tail light, number plate light, headlight levelling,
		switch illumination, trailer socket, sunroof
F12	30A	Sunroof
F13	30A	Rear electric windows
F14	20A	Ignition coils (petrol models)
F15.	20A	Cigar lighter, interior lights, seat heaters, vanity mirror illumination
F16	15A	Clock, radio, parking aid system, rear headphones
F17	15A	Audio system
F18	15A	Rear wiper motor
F19	15A	Front wash/wipe
F20	15A	Interior lights, clock/radio memory, immobiliser, CD player,
		diagnostics, key interlock
F21	15A	Transfer box, alarm, shift interlock
F22	10A	RH headlight main beam
F23	10A	Starter motor
F24	10A	Alternator, automatic transmission, engine management
F25	15A	Brake lights & reversing lights
F26	10A	Auxiliary circuits relay
F27	10A	Instruments, hill descent control
F28	10A	Self levelling suspension, anti-lock braking system (ABS)
F29	10A	Active cornering enhancement (ACE)
F30	20A	Cruise control, electric mirrors, rear screen washer,
		and in a management control unit (Diesel)

engine management control unit (Diesel)

trailer socket, switch illumination

Airbag safety restraint system (SRS)

Front electric windows

Front air conditioning blower, power fold mirrors
Accessory socket
RH side & tail lights, headlight levelling switch, audio,

Passenger compartment fusebox 5

Earth locations

- RH side of engine bay RH 'A' pillar Front LH side of engine bay E2 E3
- Under pedals LH 'A' pillar E4 E5 E6 Behind centre console
- RH 'A' pillar RH side of engine bay
- E9 RH side of engine bayE10 RH side of engine bay
- E11 At RH rear seat belt reel E12 At RH rear seat belt reel
- E13 At LH rear seat belt reel E14 Behind centre console E15 Behind centre console

Fngine fusebox 6

Fuse	Rating	Circuit protected
F1	30A	Engine management
F2	15A	Engine management
F3	15A	Front fog lights
F4	20A	Headlight washers
F5	40A	Engine cooling fan
F6	10A	Air conditioning
F7	40A	LH heated front screen
F8	40A	RH heated front screen
F9	30A	Trailer lights, fuel burning heater
F10	30A	Fuel pump
F11	30A	ABS valve
F12	20A	Automatic gearbox
F13	10A	Body control unit
F14	15A	Direction indicators & hazard warning lights
F15	15A	Active cornering enhancement (ACE)
F16	10A	Horn

Engine fusebox 6

10A

25A 10A

30A

10A

F32 F33

F34


F35




Passenger compartment fusebox 5

	F1 F18
F35	F2 F19 F3 F20
	F4 F21
	F5 F22 F6 F23
	F7 F24 ;
	F9 F26
	F11 F28
	F12 F29 F13 F30
	F14 F31 F32
	F16 F33
	F17 F34


13•22 Wiring diagrams Wire colours Key to items Diagram 2 Battery Ignition switch Starter motor Black BGK Purple Glow plugs Green R Red 8 9 Inertia switch Fuel tank unit a = fuel pump Pink Grey Blue Alternator Passenger compartment fusebox Engine fusebox Light green 10 11 12 13 14 15 16 17 Engine management control unit Body control unit Engine coolant temperature sensor Brown White Orange Yellow glow plug relay main relay Engine cooling fan LH horn cd fuel pump relay starter relay cooling fan relay horn relay RH horn Steering wheel rotary coupler Horn switch H33479 Fuel pump & preheating system Starting & charging system FL8 50A FL12 30A Lock C575/1 6 Aux On Y/B 30 86 30 85 86 C573/7 85 C573/5 87 C570/3 87 W/R 30 C158/29) W/G 85 C658/21 C658/5 C632/1 86 C605/3 87 K W/G = F13 10A C577/3 F10 30A Œ 30 85 86 C573/9 C226/2 C226/1 C662/5 87 Ē See diagram 9 Instrument cluster (alternator warning light) Engine cooling fan Horn 6

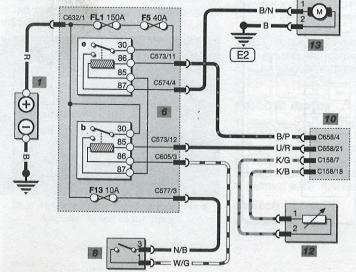


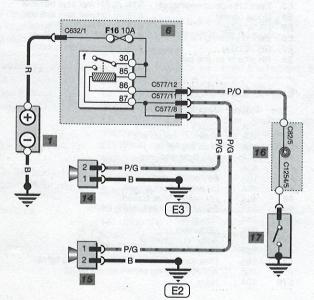

0

Diagram 3 Key to items Wire colours Battery Ignition switch Passenger compartment fusebox Engine fusebox g = auxiliary relay Steering wheel rotary coupler Class lighter. Clock Black Purple Diagnostic connector SRS control unit 21 22 23 24 25 Green Red Grey Pink LH seatbelt pretensioner Light green RH seatbelt pretensioner Passenger''s airbag Driver's airbag White Brown 0 Yellow Orange 18 Cigar lighter 19 Accessory socket H33480 Clock Cigar lighter & accessory socket FL1 150A FL7 30A 30 30 85 C572/1 W/G 85 86 86 C573/16 : 87)= W/G == C572/1 : 87 FL8 50A C575/1 C573/16 FL3 50A C572/2 W/G 19 E2 W/G 6 E2 C89/2 \otimes C232/4 C350/2 C232/3 C350/1 See diagram 7 Interior lighting (switch illumination) See diagram 7 Interior lighting (switch illumination) R/N C351/1 = R/B = SRS system Diagnostic connector C587/6 IN Aux IGN IGN IGN 1 2A 2B 6 Lock C582/1 6 FL8 50A

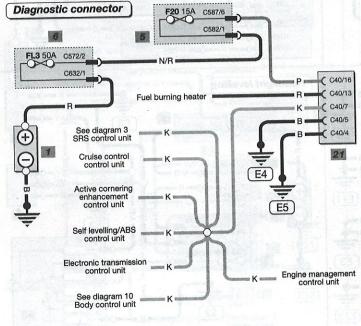

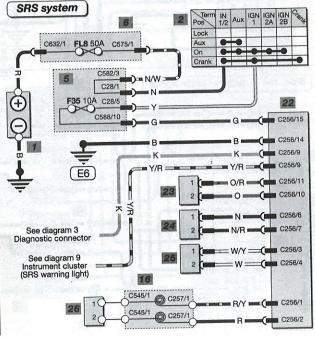

Wire colours Key to items Diagram 4 35 Sunroof control unit 36 Sunroof isolation av Battery Ignition switch 46 LH rear light unit a = tail light 47 RH rear light unit a = tail light 48 Number plate light 49 Light switch B Black Purple Green Red Sunroof isolation switch Front sunroof switch Passenger compartment fusebox Engine fusebox Body control unit Pink Grey Light green Rear sunroof switch 1 Blue Rear sunroof switch 2 Front sunroof motor Brown White 49 Light switch a = side light switch 50 Headlight levelling switch 51 LH headlight levelling motor 52 RH headlight levelling motor 53 Trailer socket Heater blower switch Orange Yellow Heater blower Rear sunroof motor 42 LH front side light 43 RH front side light 44 LH side marker light 45 RH side marker light Fresh/recirculation air switch Heater blower relay Diode Fresh/recirculation air motor Heater blower motor resistors H33481 Heater (models without A/C) Sunroof C632/1 **FL1** 150A IGN IGN IGN 1 2A 2B IGN IGN 2A 2B C632/1 FL1 150A Aux FL6 150A C578/2 FL4 100A C572/3 FL8 50A 10A C581/1 C582/3) N/W C582/3 C28/5 F31 10A C590/)= G/U G/U -(C660/1 = G/K = W/G = C661/9 B/O . C785/10 31 B/O G/W = C945/3 G/B (C945/4 87a C945/1 I 30 G/U _____ C769/3 G/O _____ C769/4 86 C785/8 85, G/R (C363/4 G/K (C363/34 C363/1 C784/2 35 C129/2 C129/1 C785/6 C1259/1 C129/4 C129/3 O/U C126/2 W C126/1 P C126/4 C126/3 See diagram 7 Interior lighting (switch illumination) C785/1 (E7) C785/5 E2 Side, tail & number plate lights Headlight levelling R/R = C632/1 FL13 30A C574/3 E8 R/B (E8) C632/1 FL13 30A C574/3 R/B (E11 E3 F11 10A C587/3 C586/1 E3

(E13)

a fall alle

See Rear

Wire colours

Black Purple Green Red Pink Grey

Light green Brown Blue White Orange Yellow

Key to items

Battery
Ignition switch
Passenger compartment fusebox
a = driver's intelligence unit

Engine fusebox

g = auxiliary relay
h = front foglight relay
Body control unit
LH rear light unit
b = stop light

c = reversing light
RH rear light unit
b = stop light
c = reversing light

49 Light switch

a = side light switch

b = headlight switch

c = dip main beam switch

d = headlight flasher switch Trailer socket

55 LH headlight

a = dipped beam
b = main beam
56 RH headlight
a = dipped beam
b = main beam
57 Charles (Fight)

57 Stop light switch


Diagram 5


58 Reversing light switch (manual transmission)


Starter inhibitor/reversing light switch (automatic transmission)
High level brake light

61 Front foglight switch 62 LH front foglight 63 RH front foglight

H33482

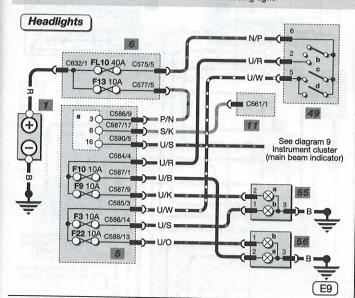

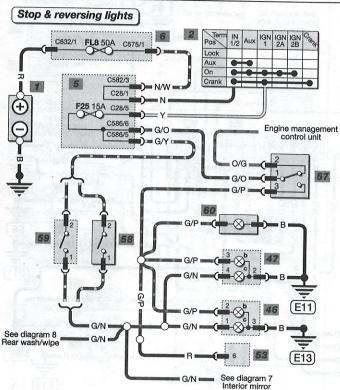

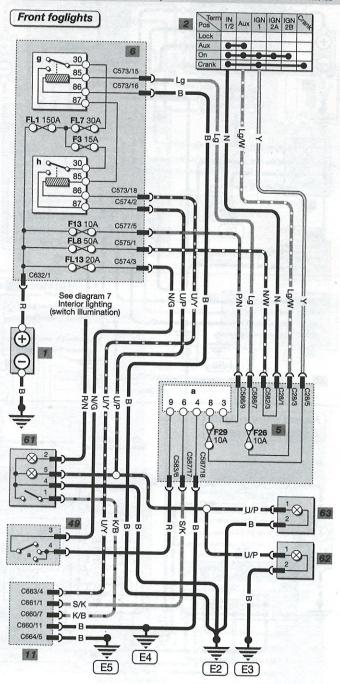



- Purple Red Black Green
- Grey Pink Lg Light green Blue Brown White Orange Yellow

Key to items


- Battery Ignition switch Passenger compartment fusebox
 - driver's intelligence unit fear foglight relay RH indicator relay
- d = LH indicator relay
 6 Engine fusebox
 11 Body control unit
- 49 Light switch a = side light switch a = side ligh Trailer socket
- - LH rear light unit 2
 a = rear fog light
 b = direction indicator
- 66 RH rear light unit 2 a = rear fog light b = direction indicator
- Diagram 6
- 67 Direction indicator switch68 Hazard warning switch69 LH front direction indicator


- LH front indicator side repeater RH front direction indicator
- 72 RH front indicator side repeater 73 Rear foglight switch


H33483

BGKLZO

(

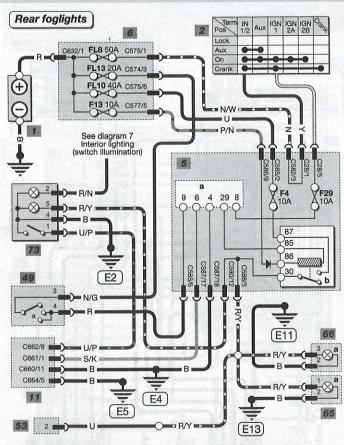

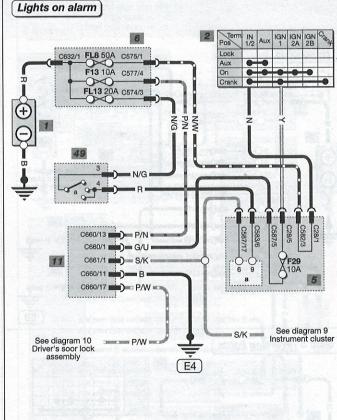

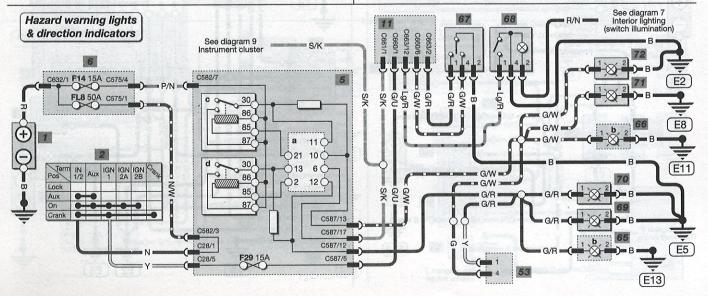

Wire colours Key to items Diagram 7 49 Light switch a = side light switch 76 Front interior light 77 Rear interior light Battery Ignition switch Passenger compartment fusebox 83 Heated rear window switch 84 Heated rear window Purple Black Heated rear window Heated front screen relay Green Red Grey driver's intelligence unit heated rear screen relay LH heated front screen element RH heated front screen element Light green Blue Luggage compartment light Ignition switch illumination White Brown Engine fusebox Glove box light Orange Yellow = auxiliary relay = heated front screen relay 80 Interior mirror 81 LH vanity mirror light 82 RH vanity mirror light 89 Glove box light switch 11 Body control unit H33484 Interior lighting Heated rear screen IGN IGN 2A 2B FL8 50A FL6 50A FL1 150A Lock C575/1 C578/5 FL1 150A FL7 30A $\overleftarrow{\pm}$ C577/5 F13 10A 30, C577/4 8/0 85 C573/15 PN C582/3 C573/16 86 C660/13 P/N C572/1 C587/5 87 = W/G = C660/1 G/U C584/5 85 86 30 C661/1 S/K FL8 50A B FL3 50A C572/2 C663/5 C586/9 LgW C661/15 S/K (C587/17 6 C587/18 4 FL13 20A 11 W/G C574/3 Fg See diagram 7 Interior lighting (switch illumination) N/G E4 See diagram 3 & 11 Switch illumination feed (E11) (E2) See diagram 12 Heated mirrors N/P See diagram 3 to 12 Switch illumination Heated front screen RO Term IN Pos 1/2 Aux IGN IGN IGN 1 2A 2B FL8 50A C632/1 C575/1 F13 10A R/R 30 $\stackrel{\smile}{\oplus}$ 85 C573/15 86 C573/16 - WW See diagram 5 Reversing lights 87 Fa E2 77 Lg/W == PN 30 86 81 85 C573/8 87 (E11) C660/1 C660/13 G/U P/N C661/12 C660/14 K/N = K/O = P/S = C661/13 MU-C660/11 **E13** P/U C663/9 I = P/U E4 P/U E5 C660/17 P/W See diagram 10 Driver's front door M E2 P/K K/0 = See diagram 10 other door lock assemblies (except driver's front) See diagram 7 Interior lighting (switch illumination)

13•28 Wiring diagrams Wire colours Key to items Diagram 8 Battery Ignition switch Passenger compartment fusebox a = driver's intelligence unit Windscreen wiper motor Headlight washer pump Windscreen washer pump Rear wiper switch Rear washer switch Light switch b = headlight switch Purple Red B Black b = headlight switch Windscreen wash/wipe switch a = variable delay washer switch GKLSO Green 93 94 90 Pink Grey Light green Blue f = front wiper relay g = rear wiper relay Engine fusebox washer switch intermittent wipe 1 intermittent wipe 2 Brown White Rear washer pump Rear waiper motor Orange Yellow g = auxiliary relay j = headlight washer relay 11 Body control unit fast wipe flick wipe g H33485 Front wash/wipe Rear wash/wipe 2 0632/1 FL1 150A FL7 30A 30 C573/15 85 86 C573/16 30 87 85 86, F4 20A (E2) C572/1 FL8 50A C575/1 30, 85 C572/1 C573/17 86 C578/7 87 FL10 40A W/G WN 6 Fg See diagram 5 Reversing lights Lg W/Lg G/N 49 11 C661/8 11 C660/20 C660/20 U/R C587/17 S/K C661/1 C662/3 C660/21 86 5 See diagram 7 Interior lighting (switch illumination)

85

30

87a

2 M

-R/N * O/B Lg/S

(E11)

E3

C588/2

C586/11

E5

G/S W/Lg

G/S ... Lg/R ==

Lg/O Lg/G =


85


T N/G

C388/3

C835/2 C835/1

C661/21

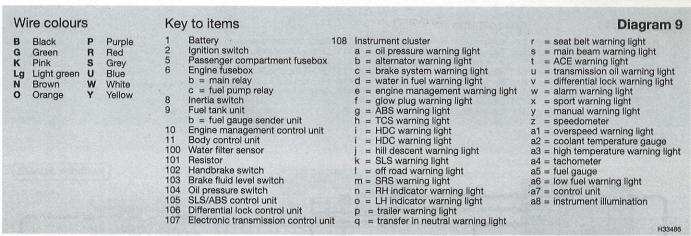

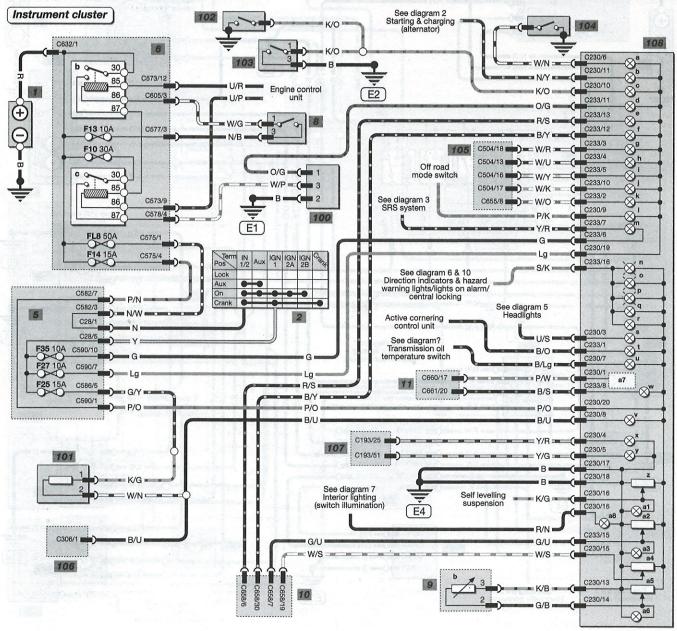

13•30 Wiring diagrams Wire colours Key to items Diagram 10 Battery Passenger compartment fusebox Radio frequency receiver LH front door lock assembly RH front door lock assembly LH rear door lock assembly RH rear door lock assembly 112 113 114 115 116 117 Black BGKLSNO Purple Green Red a = driver's intelligence unit Engine fusebox Inertia switch Pink Grey Light green Brown Blue White Yellow Body control unit Tailgate lock assembly Orange 110 Passive coil 111 Central locking H33487 Central locking C632/1 C577/3 N/R C605/3 C605/4 C577/4 See diagram 7 Interior lighting C572/2 N/R 114 N/S C583/1 22 07 27 🔾 19 0 K/R P/N U/S. U/G KVS 28 8 M (E5) M K/R P/B SK K/P K/S K/R 8 M

P/N

C662/7 C660/16

C661/22 C660/5 C661/6 K/R K/R

(E13)

K/S K/S

See diagram 7 Interior lighting (switch illumination)

C660/13

C661/1

C660/11 C661/4

C674/3

C674/1 P/S = B/N

(E11)

E14

M

P/Lg

See diagram 7 Interior lighting

P/N

K/R

P/N P/0 S/R

S/K

• B •


112

E4

See diagram 3 Diagnostic connector

SK

See diagram 9 Instrument cluster

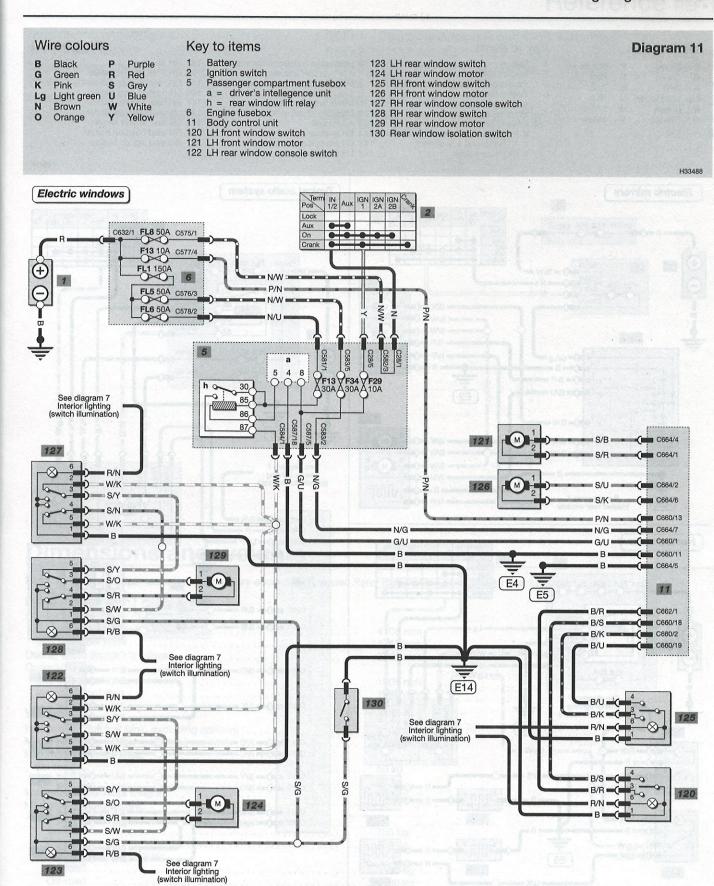

BGKLBNO Blue Light green Brown White Orange Yellow

Key to items

- Battery
 Ignition switch
 Passenger compartment fusebox
 Engine fusebox

- g = auxiliary relay

 16 Steering wheel rotary coupler

 135 Driver's door mirror assembly
 - vertical adjustment
 - b = horizontal adjustment c = mirror heater
- 136 Passenger's door mirror assembly
 - vertical adjustment
 horizontal adjustment
 - mirror heater
- Mirror adjustment switch Steering wheel remote controls Audio unit

- 140 LH tweeter141 LH front door speaker142 LH rear door speaker

Diagram 12

- 143 RH tweeter144 RH front door speaker145 RH rear door speaker
- LH heated seat switch
- 147 RH heated seat switch 148 LH seat cushion heater
- LH seat squab heater
- 150 RH seat cushion heater
- 151 RH seat squab heater

H33489

