

Position of Parts in Engine Compartment <LHD 1GR-FE>



\* 1: Before Aug. 2013 Production  
 \* 2: From Aug. 2013 Production

- A 1 Ambient Temperature Sensor
- A 2 A/C Pressure Sensor
- A 3 No. 1 Pressure Switch
- A 4 Condenser Fan Motor (With Shroud Blower Assembly)
- A 7 Brake Actuator Assembly
- A 8 Brake Actuator Assembly
- A 15 Millimeter Wave Radar Sensor Assembly
- A 16 Air Injection Control Driver
- A 17 Air Injection Control Driver
- A 18 Inlet Air Pump
- A 20 Front Airbag Sensor RH
- A 21 Front Airbag Sensor LH
- A 22 Windshield Wiper Motor Assembly
- A 23 Windshield Washer Motor and Pump Assembly
- A 24 Low Pitched Horn Assembly
- A 25 High Pitched Horn Assembly
- A 26 Security Horn Assembly
- A 27 Engine Hood Courtesy Switch
- A 28 Fog Light Assembly LH
- A 29 Headlight Assembly LH
- A 30 Headlight Assembly LH
- A 31 Headlight Assembly RH
- A 32 Headlight Assembly LH
- A 33 Headlight Assembly RH
- A 34 Headlight Assembly RH
- A 35 Headlight Assembly LH
- A 36 Headlight Assembly RH
- A 37 Headlight Cleaner Motor and Pump Assembly
- A 38 Headlight Cleaner Control Relay
- A 39 Wireless Door Lock Buzzer

Position of Parts in Engine Compartment <LHD 1GR-FE>

A1  
Black



A2  
Black




A3  
Gray




A4  
Black




A7  
Black

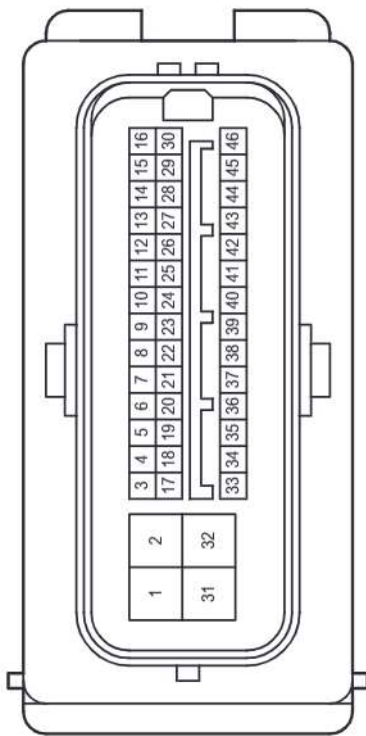


A8  
Black

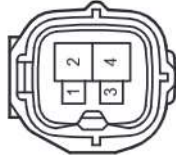


A15  
Black

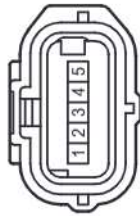


A16  
Black

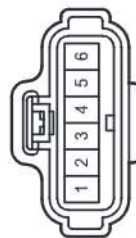


A17  
Black

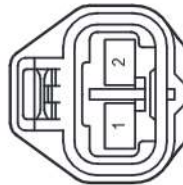


A18  
Black

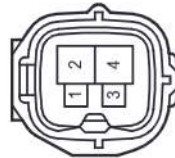

A20  
Yellow

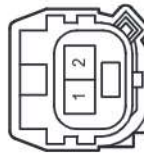

A21  
Yellow

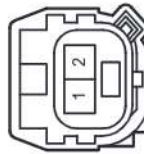

A22  
Black



A23  
Dark Gray



A24  
Black




A25  
Black



A26  
Black



A27  
Black

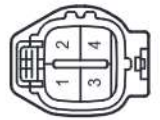

Position of Parts in Engine Compartment <LHD 1GR-FE>


A33  
Black




A34  
Black



A35  
Black

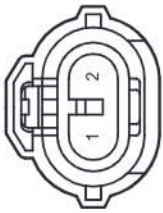


A36  
Black

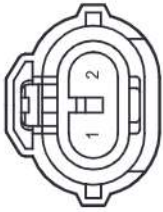


A37  
Black




A38  
Gray

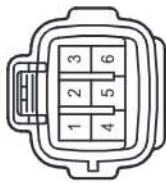

A39  
Gray

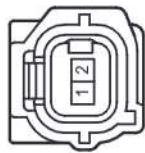

Position of Parts in Engine Compartment <LHD 1GR-FE>

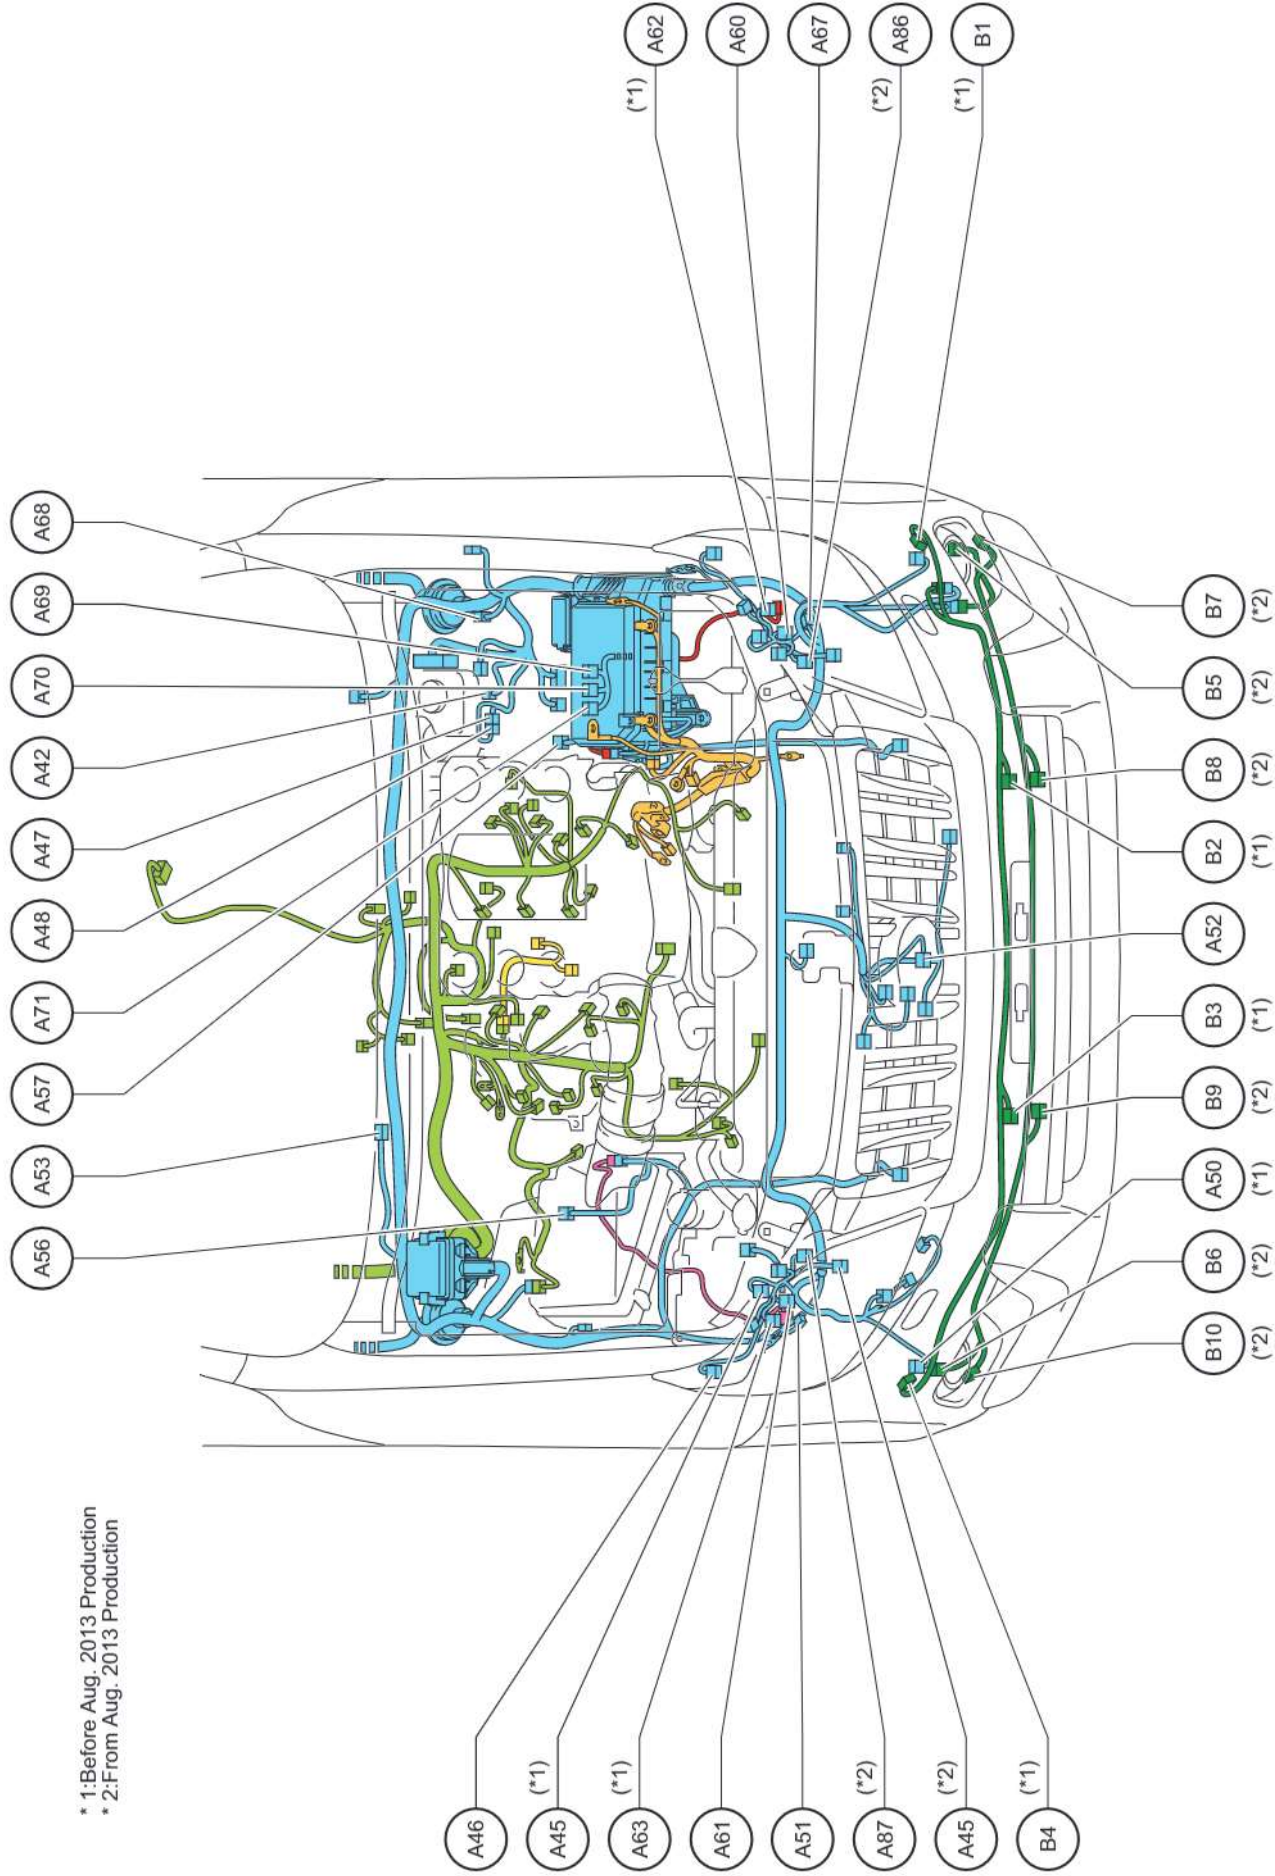

\* 1: Before Aug. 2013 Production  
 \* 2: From Aug. 2013 Production

A 42 Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Assembly)

A 45 Headlight Assembly RH

A 46 Headlight Assembly RH

A 47 Short Connector

A 48 Short Connector

A 50 Fog Light Assembly RH

A 51 Noise Filter (Condenser Fan)

A 52 Front Television Camera Assembly

A 53 Front Wiper Deicer (Windshield Glass)

A 56 Front Absorber Control Actuator RH

A 57 Front Absorber Control Actuator LH

A 60 Headlight Assembly LH

A 61 Headlight Assembly RH

A 62 Headlight Assembly LH

A 63 Headlight Assembly RH

A 67 Junction Connector

A 68 Junction Connector

A 69 Junction Connector

A 70 Junction Connector

A 71 Junction Connector

A 86 Headlight Assembly LH

A 87 Headlight Assembly RH

B 1 Front No. 1 Ultrasonic Sensor LH

B 2 Front No. 1 Ultrasonic Sensor Center LH

B 3 Front No. 1 Ultrasonic Sensor Center RH

B 4 Front No. 1 Ultrasonic Sensor RH

B 5 Fog Light Assembly LH

B 6 Fog Light Assembly RH

B 7 Front No. 1 Ultrasonic Sensor LH


B 8 Front No. 1 Ultrasonic Sensor Center LH

B 9 Front No. 1 Ultrasonic Sensor Center RH


B 10 Front No. 1 Ultrasonic Sensor RH

Position of Parts in Engine Compartment <LHD 1GR-FE>

A42  
Gray

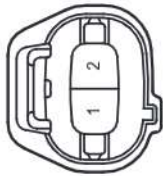

A45  
Black

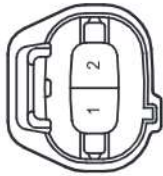

A46  
Gray




A47  
Gray



A48  
Gray




A50  
Black

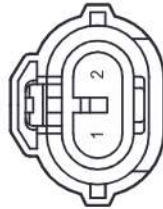


A51  
Gray




A52  
Black

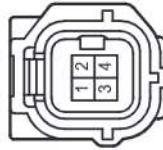


A53  
Gray

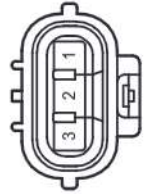


A56  
Black

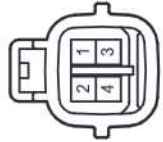


A57  
Black

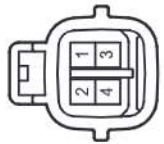


A60  
Black

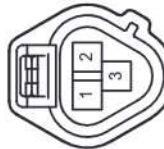


A61  
Black

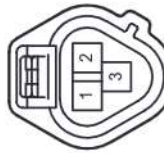


A62  
Gray

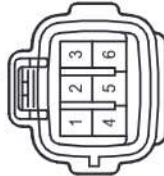


A63  
Gray

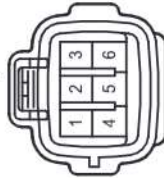

A67  
Dark Gray

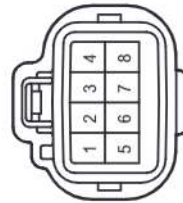

A68  
Dark Gray

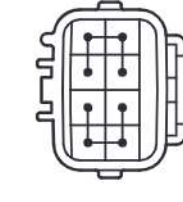

A69  
White




A70  
White




cardiagn.com

Position of Parts in Engine Compartment <LHD 1GR-FE>


A71  
White

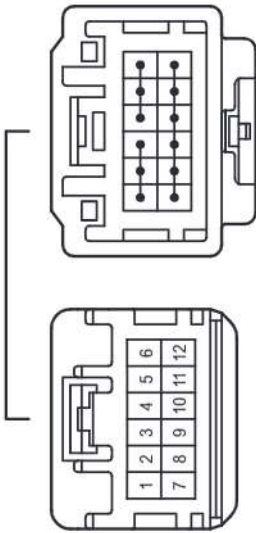


A86  
Black

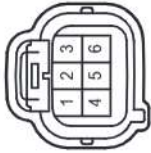


A87  
Black

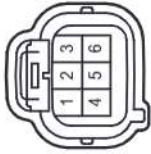


B1  
Black

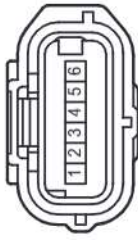


B2  
Black

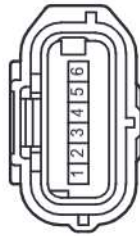


B3  
Black

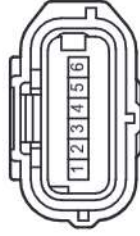


B4  
Black

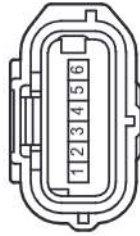


B5  
Black

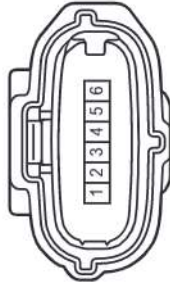


B6  
Black

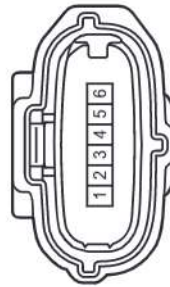


B7  
Black

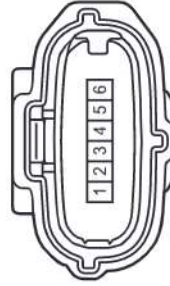


B8  
Black

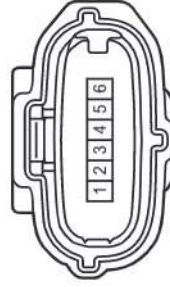

B9  
Black

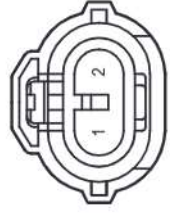


B10  
Black

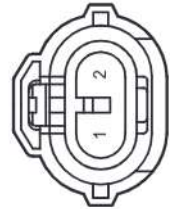


























Position of Parts in Engine Compartment <LHD 1GR-FE>

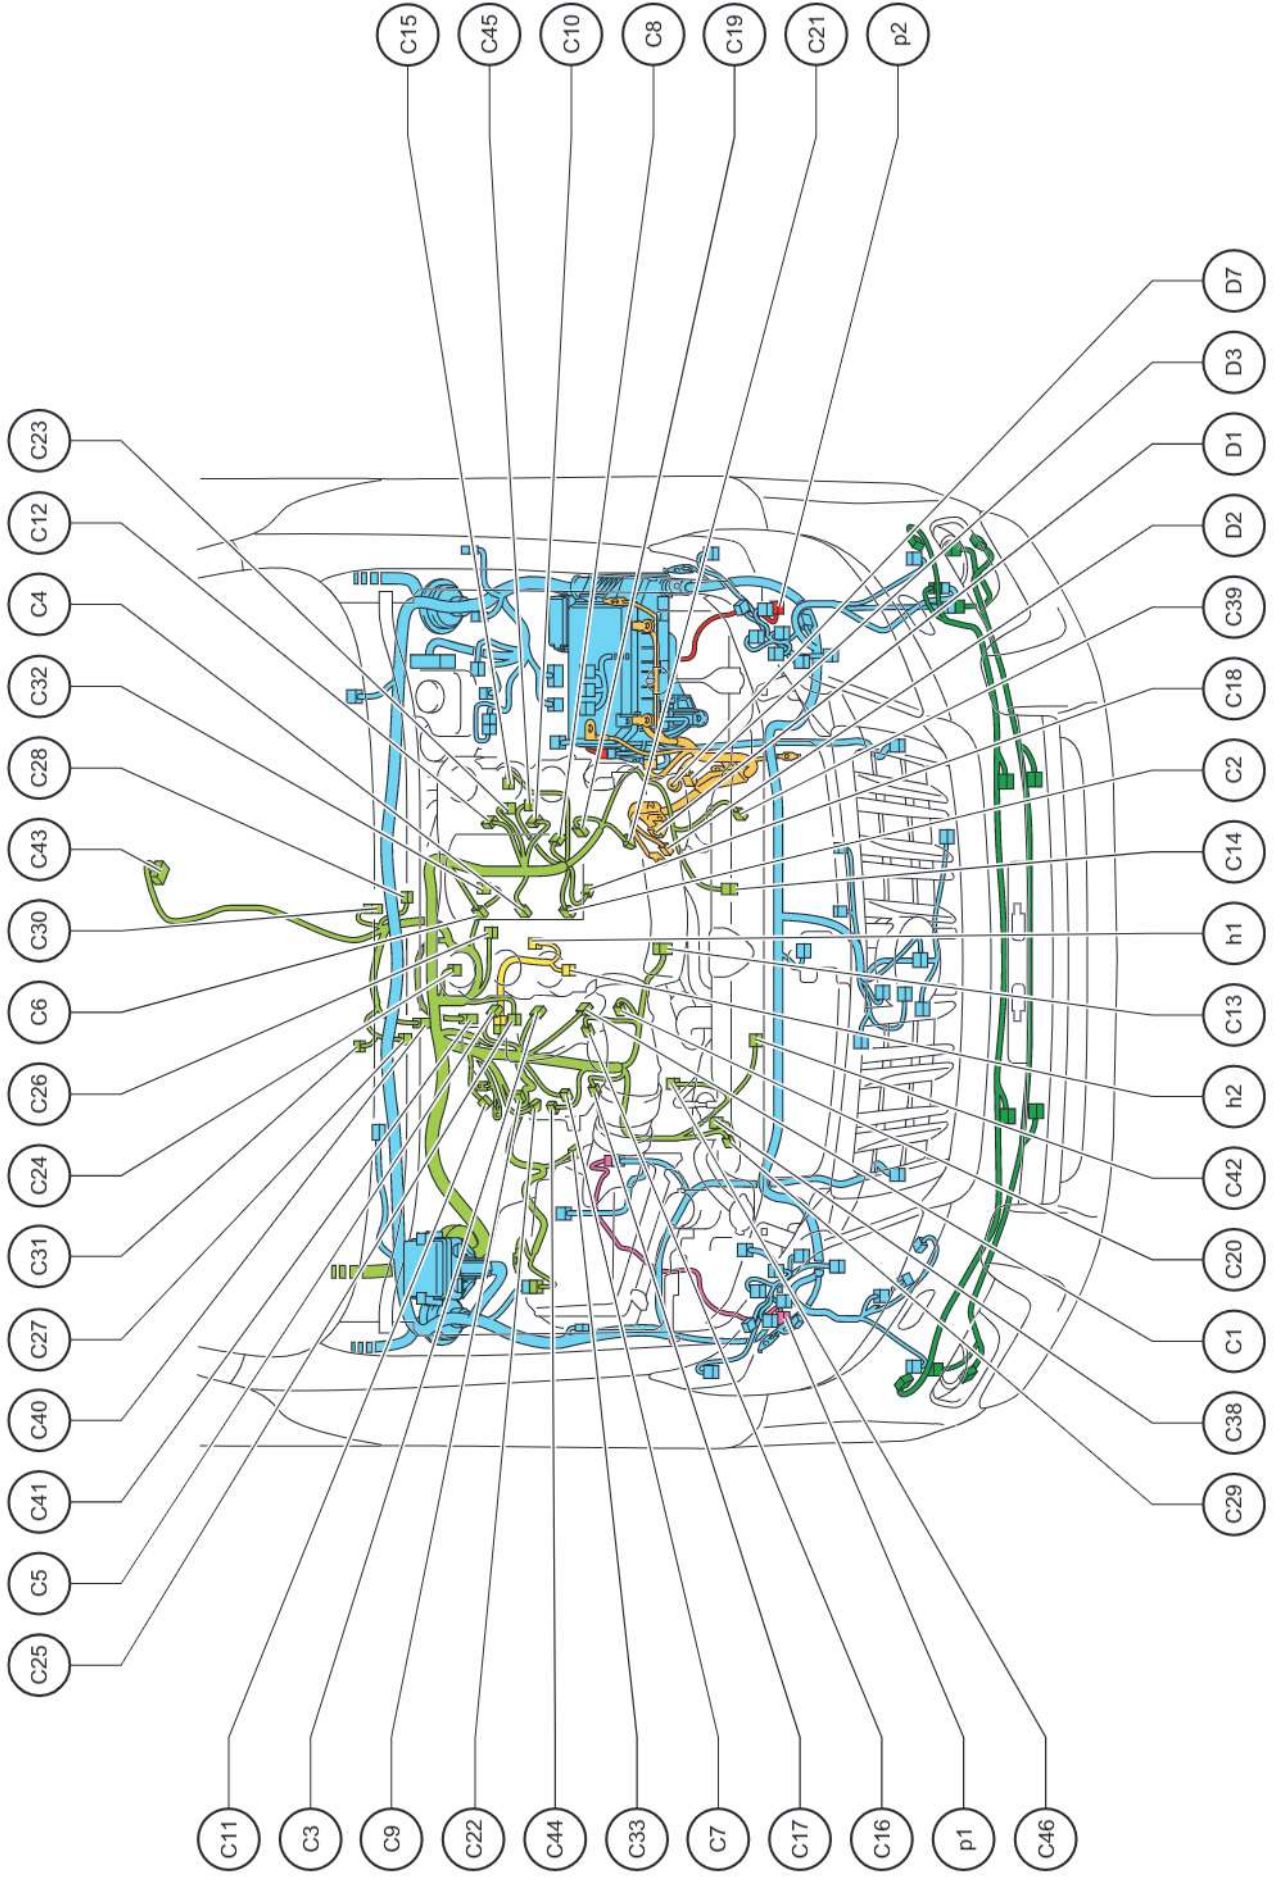

- C 1 Fuel Injector Assembly No. 1
- C 2 Fuel Injector Assembly No. 2
- C 3 Fuel Injector Assembly No. 3
- C 4 Fuel Injector Assembly No. 4
- C 5 Fuel Injector Assembly No. 5
- C 6 Fuel Injector Assembly No. 6
- C 7 Ignition Coil Assembly No. 1
- C 8 Ignition Coil Assembly No. 2
- C 9 Ignition Coil Assembly No. 3
- C 10 Ignition Coil Assembly No. 4
- C 11 Ignition Coil Assembly No. 5
- C 12 Ignition Coil Assembly No. 6
- C 13 Throttle Body Assembly
- C 14 Crank Position Sensor
- C 15 Purge VSV
- C 16 Cam Timing Oil Control Valve (Bank 1 Intake Side)
- C 17 Cam Timing Oil Control Valve (Bank 1 Exhaust Side)
- C 18 Cam Timing Oil Control Valve (Bank 2 Intake Side)
- C 19 Cam Timing Oil Control Valve (Bank 2 Exhaust Side)
- C 20 VVT Sensor (Bank 1 Intake Side)
- C 21 VVT Sensor (Bank 2 Intake Side)
- C 22 VVT Sensor (Bank 1 Exhaust Side)
- C 23 VVT Sensor (Bank 2 Exhaust Side)
- C 24 E.F.I. Engine Coolant Temperature Sensor
- C 25 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- C 26 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
- C 27 Oxygen Sensor (Bank 1 Sensor 2)
- C 28 Oxygen Sensor (Bank 2 Sensor 2)
- C 29 Power Steering Oil Pressure Switch
- C 30 Electronically Controlled Transmission Solenoid
- C 31 Transmission Revolution Sensor (Counter Gear)
- C 32 Transmission Revolution Sensor (Turbine)
- C 33 Intake Mass Air Flow Meter Sub-Assembly
- C 38 Vane Pump Assembly
- C 39 Cooler Compressor Assembly
- C 40 Park/Neutral Position Switch
- C 41 Back-Up Light Switch Assembly
- C 42 Engine Oil Pressure Switch Assembly

Position of Parts in Engine Compartment <LHD 1GR-FE>

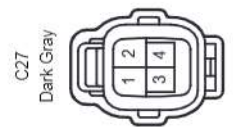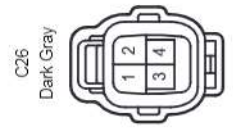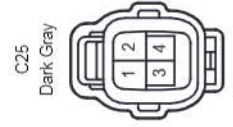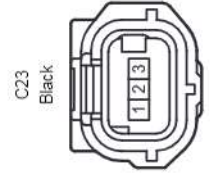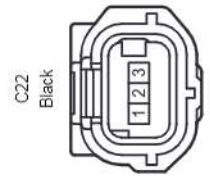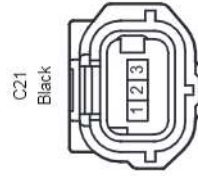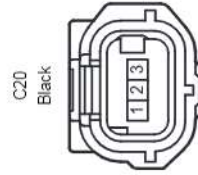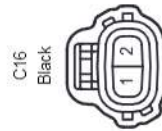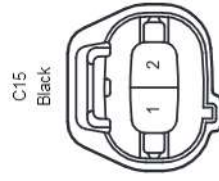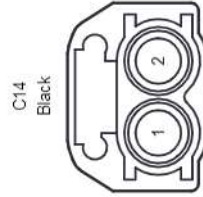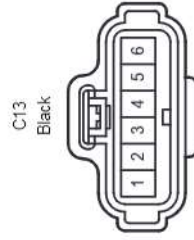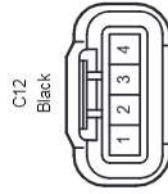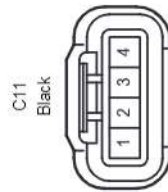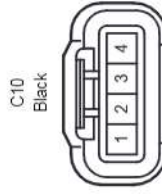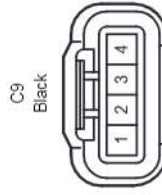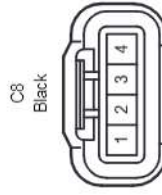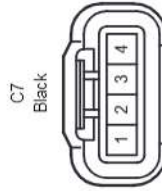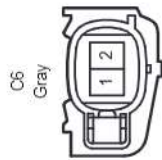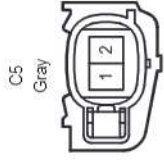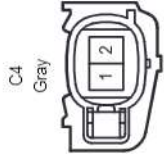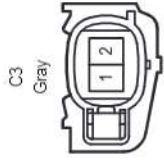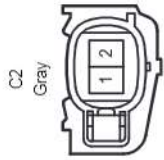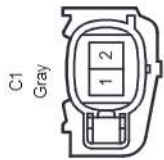

C28  
Dark Gray


C29  
Gray

C30  
Gray


C31  
Black

Position of Parts in Engine Compartment <LHD 1GR-FE>


C32  
Black

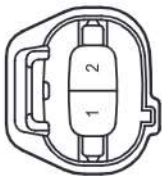

C33  
Black

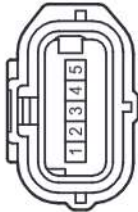


C38  
Black

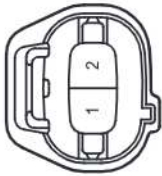

C39  
Gray



C40  
Gray

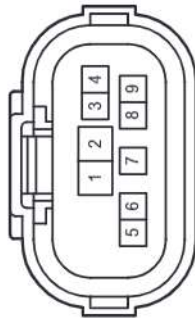


C41  
Gray




C42  
Gray




C43  
Black

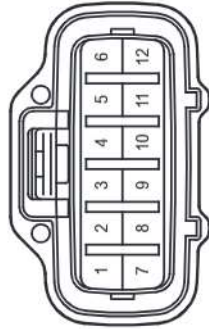

C44  
Black

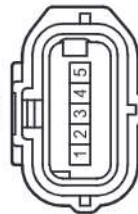

C45  
Black

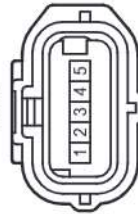


C46  
Gray




D1



 D2  
Black



D3  
Black

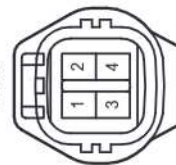

D7



h1  
Black



h2  
Black




p1  
Black



p2  
Black






Wire and Wire , Ground Points in Engine Compartment <LHD 1GR-FE>

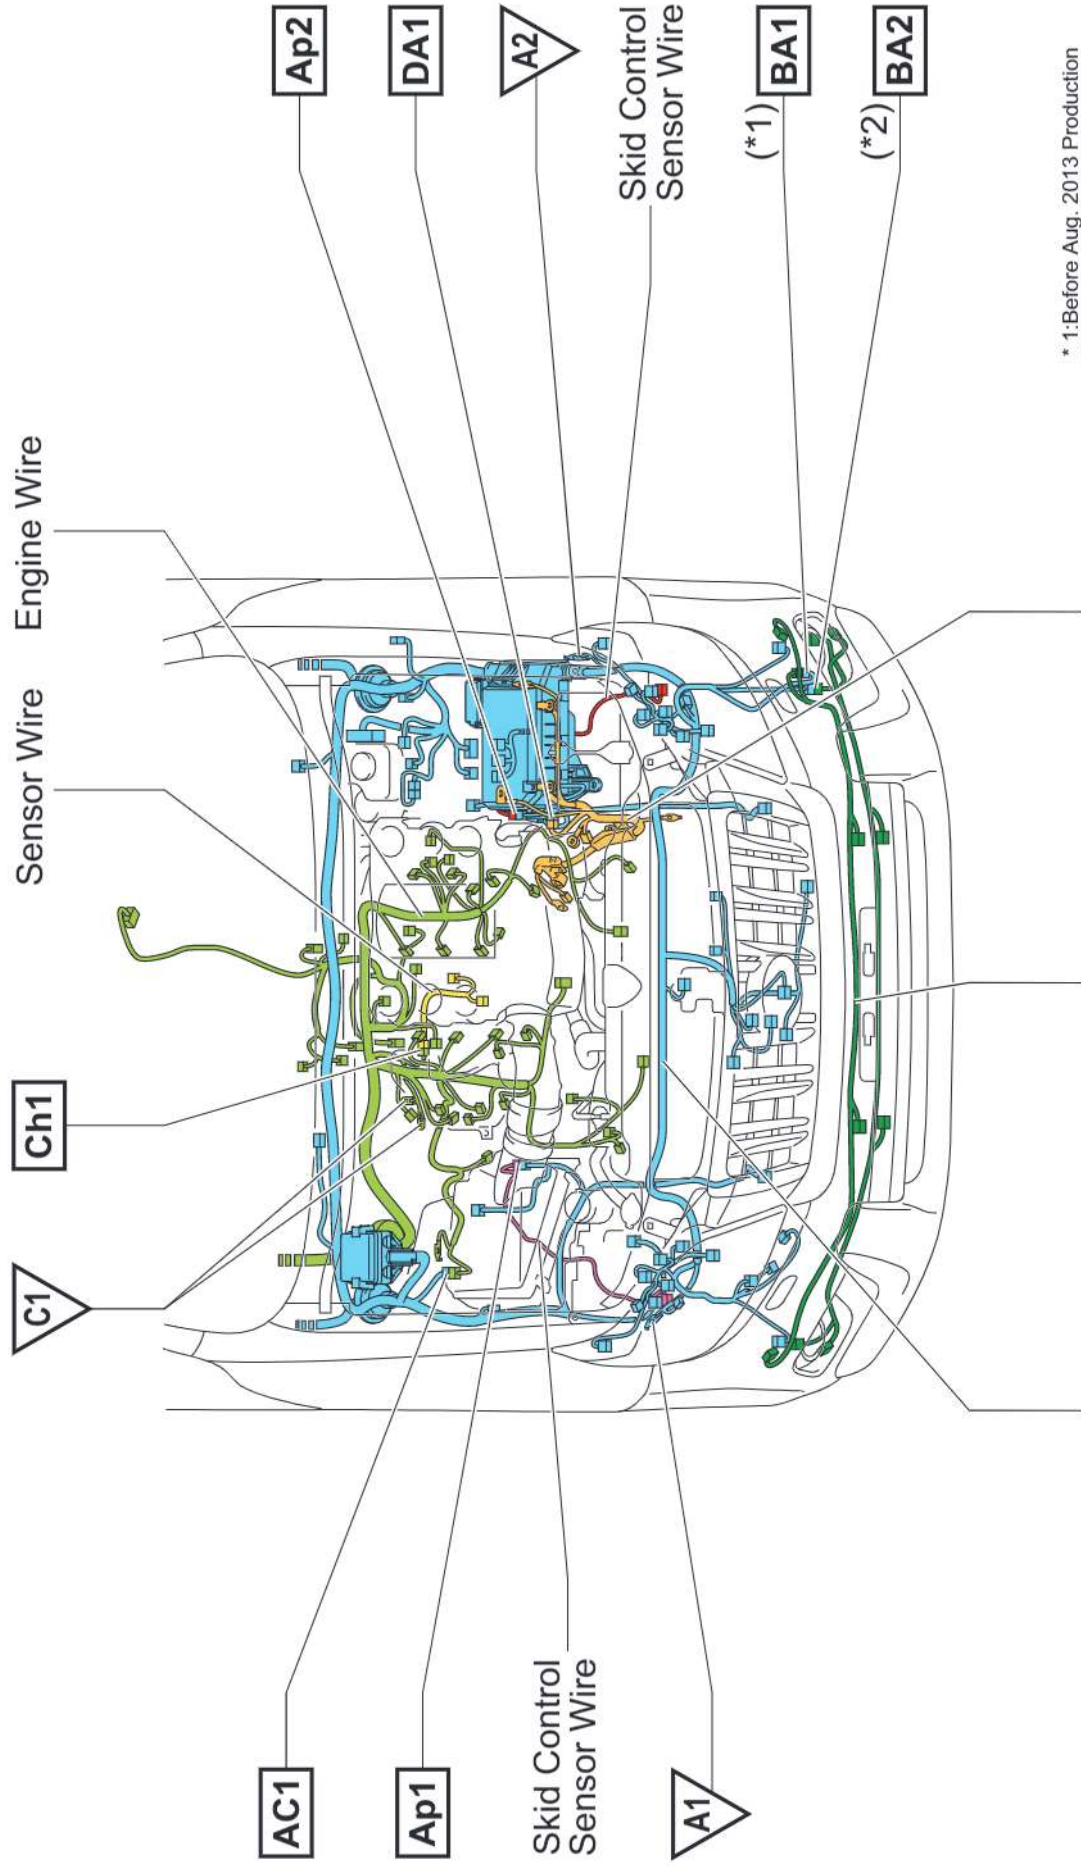

Engine Room Main Wire Engine Room No. 2 Wire Engine No. 2 Wire

\* 1: Before Aug. 2013 Production  
 \* 2: From Aug. 2013 Production

Wire and Wire , Ground Points in Engine Compartment <LHD 1GR-FE>

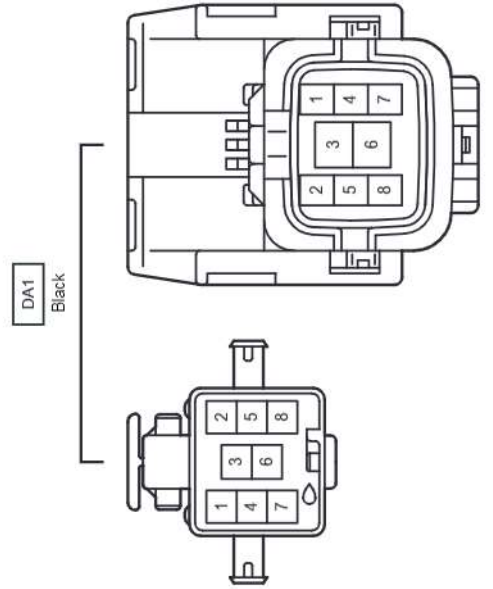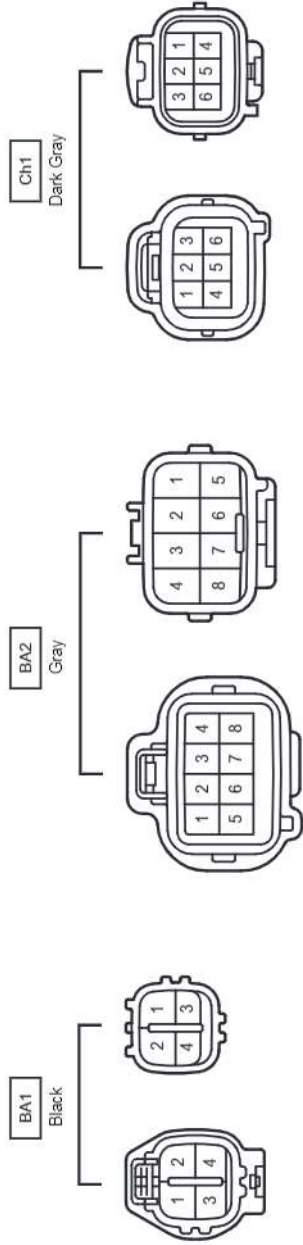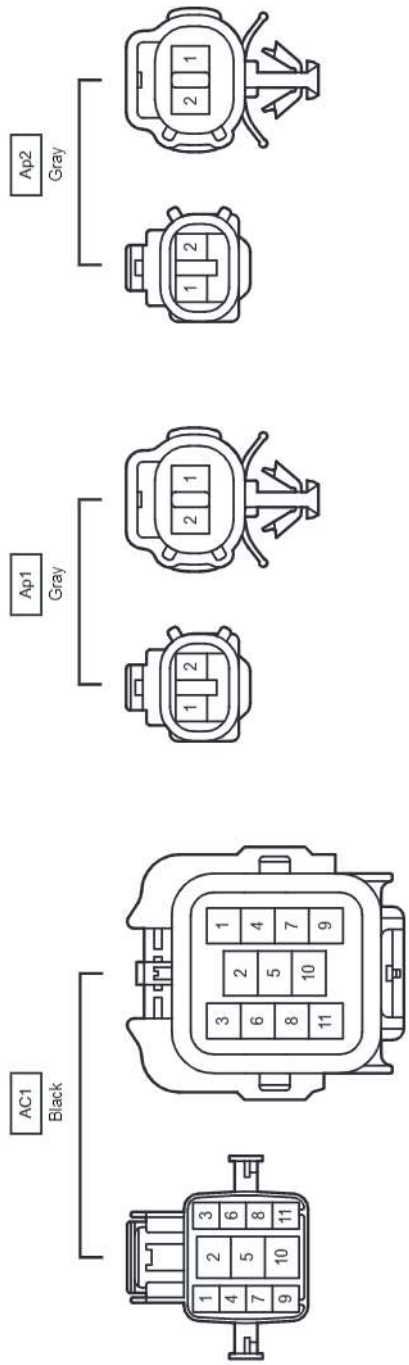

Position of Parts in Engine Compartment <RHD 1GR-FE>



\* 1: Before Aug. 2013 Production  
 \* 2: From Aug. 2013 Production

- A 1 Ambient Temperature Sensor
- A 2 A/C Pressure Sensor
- A 3 No. 1 Pressure Switch
- A 4 Condenser Fan Motor (With Shroud Blower Assembly)
- A 7 Brake Actuator Assembly
- A 8 Brake Actuator Assembly
- A 15 Millimeter Wave Radar Sensor Assembly
- A 16 Air Injection Control Driver
- A 17 Air Injection Control Driver
- A 18 Inlet Air Pump
- A 20 Front Airbag Sensor RH
- A 21 Front Airbag Sensor LH
- A 22 Windshield Wiper Motor Assembly
- A 23 Windshield Washer Motor and Pump Assembly
- A 24 Low Pitched Horn Assembly
- A 25 High Pitched Horn Assembly
- A 26 Security Horn Assembly
- A 27 Engine Hood Courtesy Switch
- A 28 Fog Light Assembly LH
- A 29 Headlight Assembly LH
- A 30 Headlight Assembly LH
- A 31 Headlight Assembly RH
- A 32 Headlight Assembly LH
- A 33 Headlight Assembly RH
- A 34 Headlight Assembly RH
- A 35 Headlight Assembly LH
- A 36 Headlight Assembly RH
- A 37 Headlight Cleaner Motor and Pump Assembly
- A 38 Headlight Cleaner Control Relay
- A 39 Wireless Door Lock Buzzer



Position of Parts in Engine Compartment <RHD 1GR-FE>


A1  
Black



A2  
Black




A3  
Gray

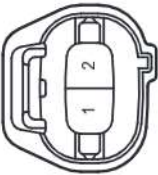


A4  
Black




A7  
Black

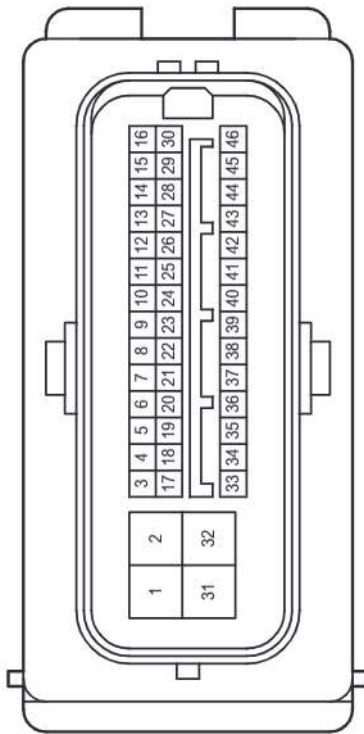


A8  
Black

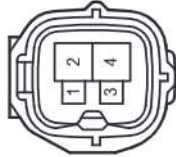


A15  
Black

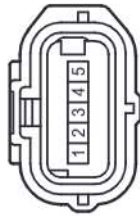


A16  
Black

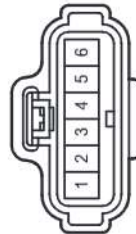


A17  
Black

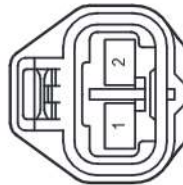


A18  
Black

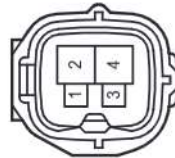


A20  
Yellow

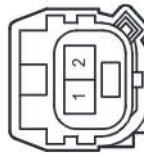


A21  
Yellow

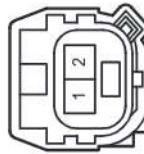

A22  
Black

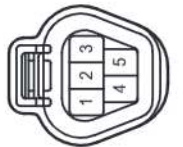

A23  
Dark Gray

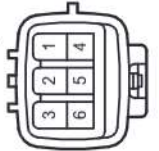

A24  
Black




A25  
Black



A26  
Black



A27  
Black

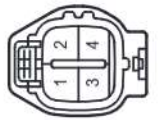

Position of Parts in Engine Compartment <RHD 1GR-FE>


A33  
Black




A34  
Black



A35  
Black

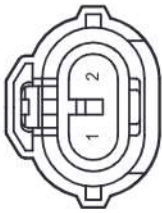


A36  
Black

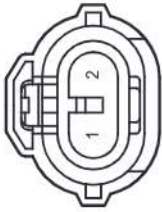


A37  
Black




A38  
Gray

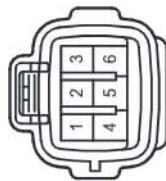

A39  
Gray

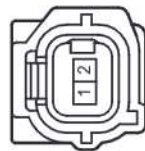

Position of Parts in Engine Compartment <RHD 1GR-FE>

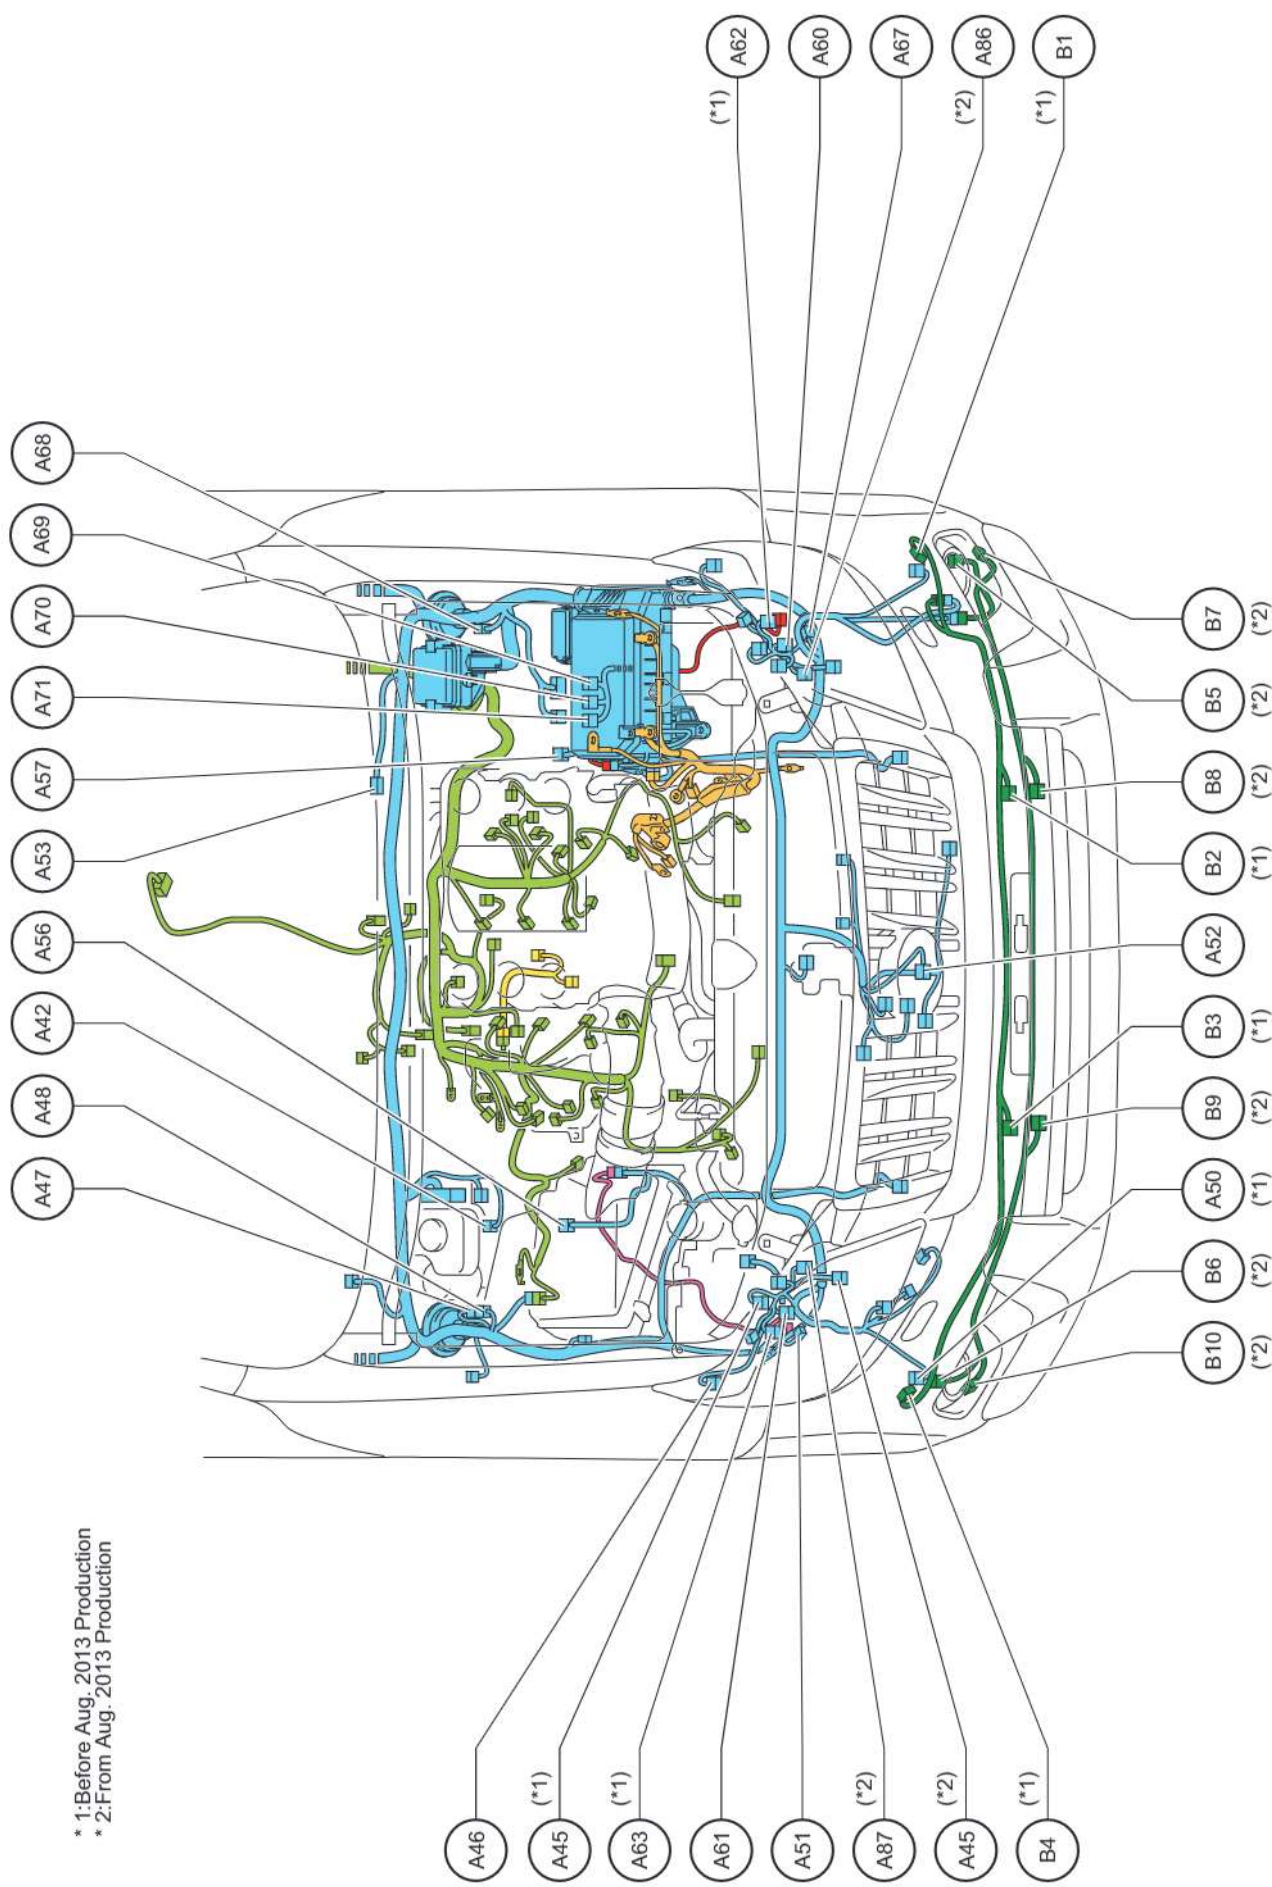

\* 1: Before Aug. 2013 Production  
 \* 2: From Aug. 2013 Production

A 42 Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Assembly)

A 45 Headlight Assembly RH

A 46 Headlight Assembly RH

A 47 Short Connector

A 48 Short Connector

A 50 Fog Light Assembly RH

A 51 Noise Filter (Condenser Fan)

A 52 Front Television Camera Assembly

A 53 Front Wiper Deicer (Windshield Glass)

A 56 Front Absorber Control Actuator RH

A 57 Front Absorber Control Actuator LH

A 60 Headlight Assembly LH

A 61 Headlight Assembly RH

A 62 Headlight Assembly LH

A 63 Headlight Assembly RH

A 67 Junction Connector

A 68 Junction Connector

A 69 Junction Connector

A 70 Junction Connector

A 71 Junction Connector

A 86 Headlight Assembly LH

A 87 Headlight Assembly RH

B 1 Front No. 1 Ultrasonic Sensor LH

B 2 Front No. 1 Ultrasonic Sensor Center LH

B 3 Front No. 1 Ultrasonic Sensor Center RH

B 4 Front No. 1 Ultrasonic Sensor RH

B 5 Fog Light Assembly LH

B 6 Fog Light Assembly RH

B 7 Front No. 1 Ultrasonic Sensor LH

B 8 Front No. 1 Ultrasonic Sensor Center LH

B 9 Front No. 1 Ultrasonic Sensor Center RH


B 10 Front No. 1 Ultrasonic Sensor RH

Position of Parts in Engine Compartment <RHD 1GR-FE>

A42  
Gray



A45  
Black

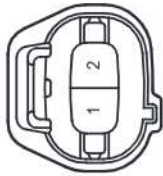


A46  
Gray




A47  
Gray



A48  
Gray

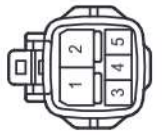


A50  
Black

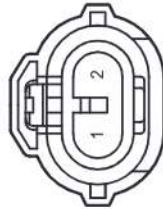


A51  
Gray




A52  
Black

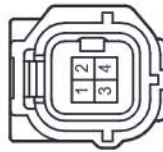


A53  
Gray

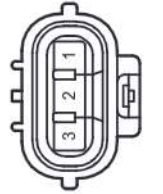


A56  
Black

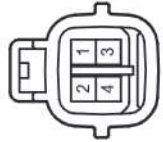


A57  
Black

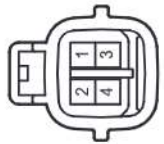


A60  
Black

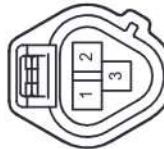


A61  
Black

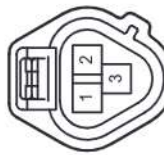


A62  
Gray

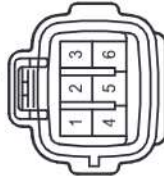


A63  
Gray

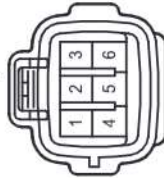

A67  
Dark Gray

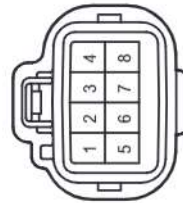

A68  
Dark Gray

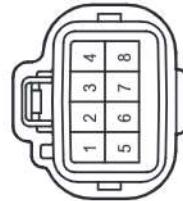

A69  
White




A70  
White




cardiagn.com

Position of Parts in Engine Compartment <RHD 1GR-FE>


A71  
White

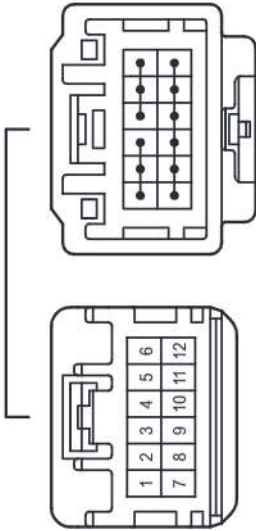


A86  
Black

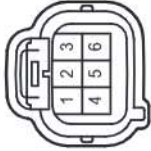


A87  
Black

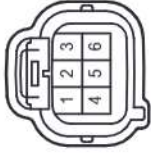


B1  
Black

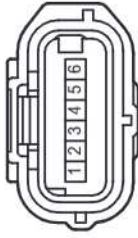


B2  
Black

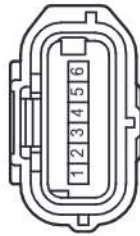


B3  
Black

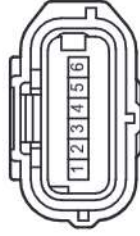


B4  
Black

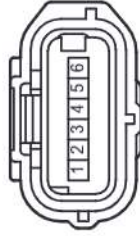


B5  
Black

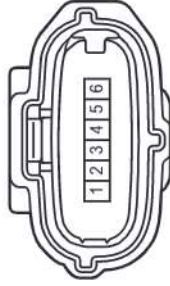


B6  
Black

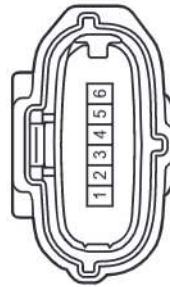


B7  
Black

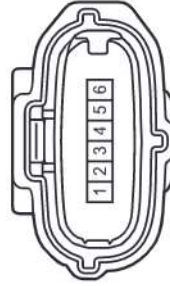


B8  
Black

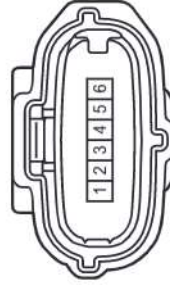


B9  
Black

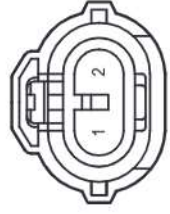

B10  
Black

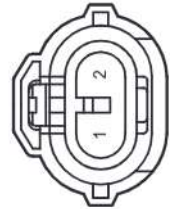
























Position of Parts in Engine Compartment <RHD 1GR-FE>

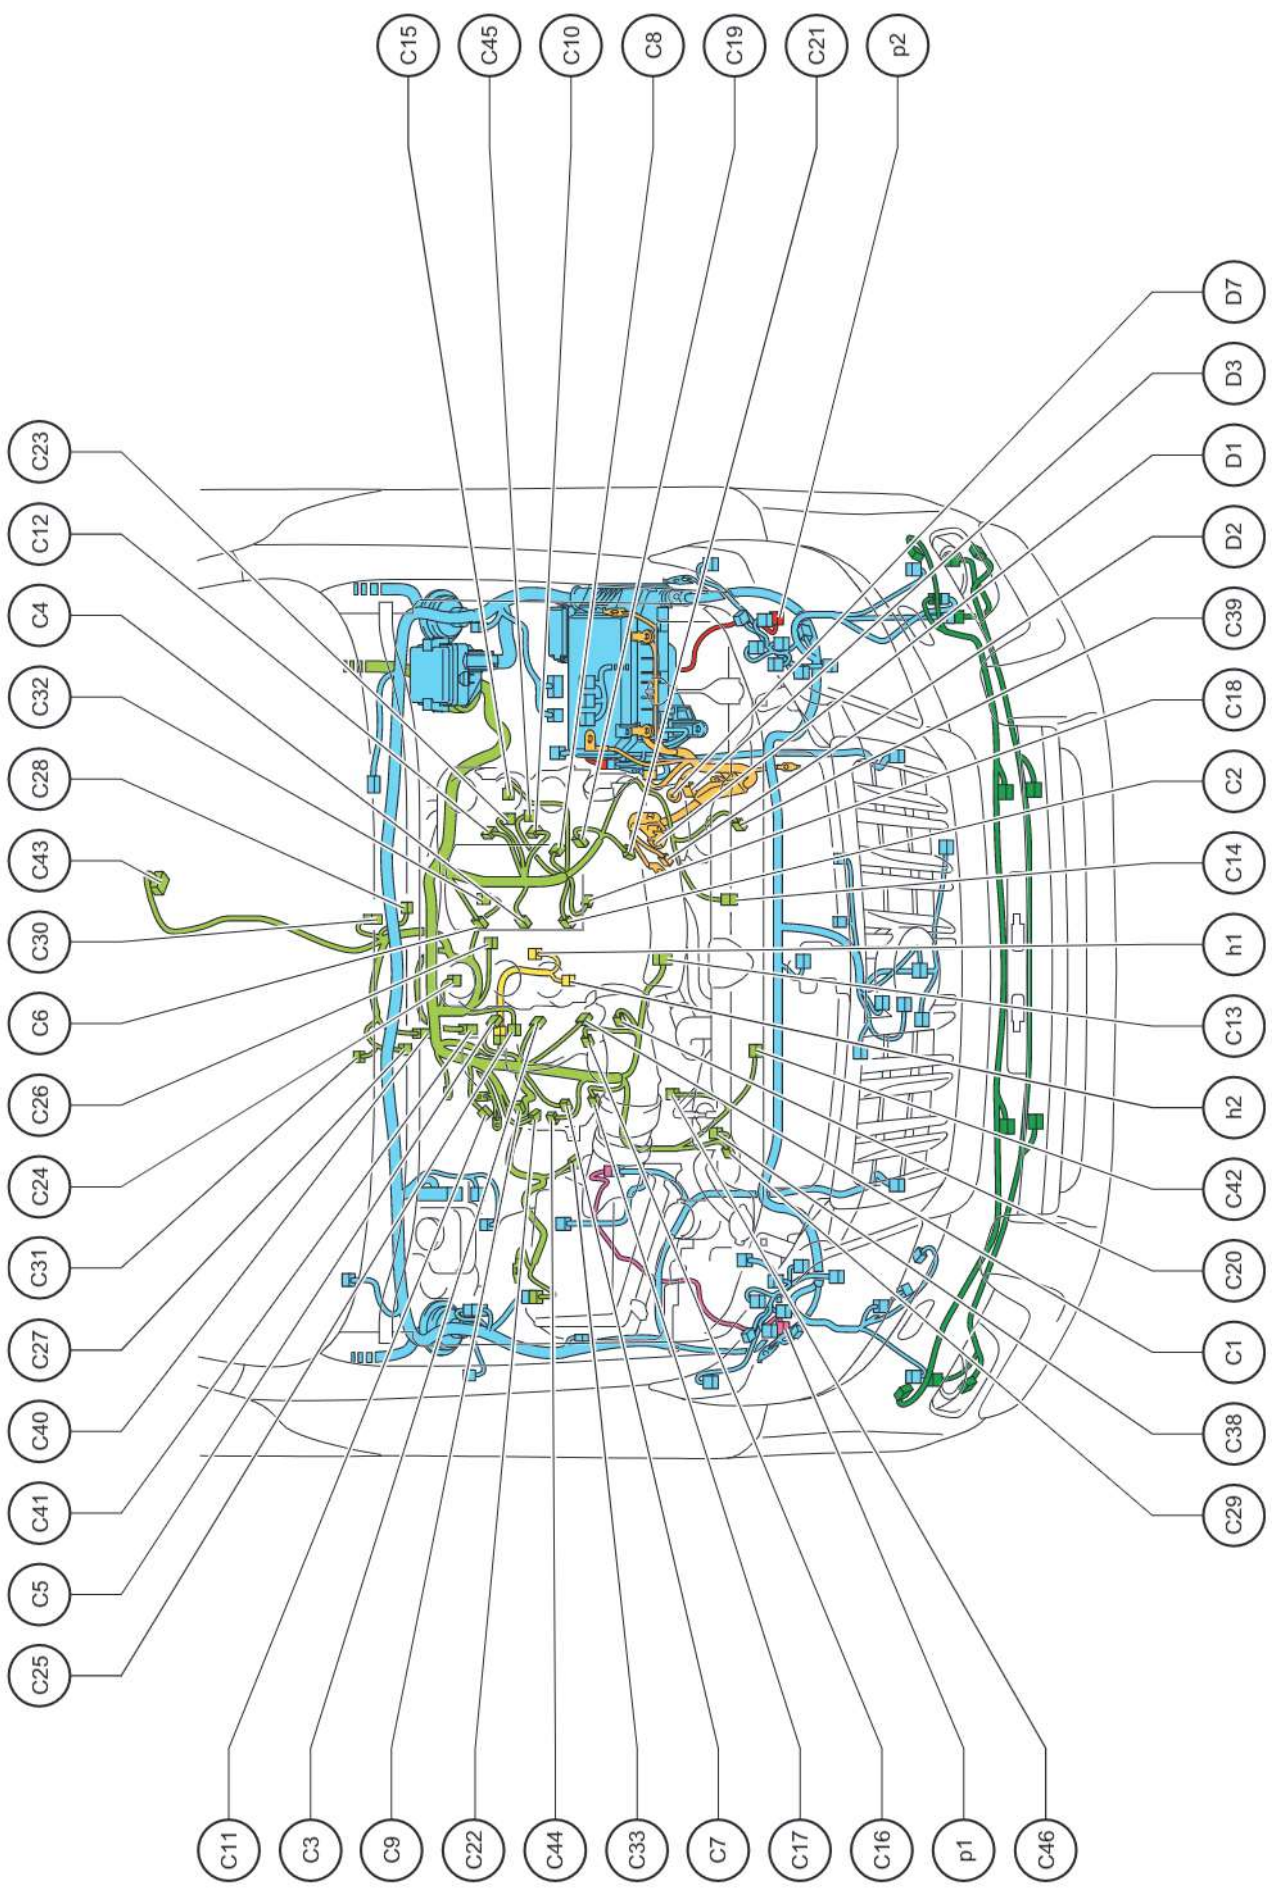

- C 1 Fuel Injector Assembly No. 1
- C 2 Fuel Injector Assembly No. 2
- C 3 Fuel Injector Assembly No. 3
- C 4 Fuel Injector Assembly No. 4
- C 5 Fuel Injector Assembly No. 5
- C 6 Fuel Injector Assembly No. 6
- C 7 Ignition Coil Assembly No. 1
- C 8 Ignition Coil Assembly No. 2
- C 9 Ignition Coil Assembly No. 3
- C 10 Ignition Coil Assembly No. 4
- C 11 Ignition Coil Assembly No. 5
- C 12 Ignition Coil Assembly No. 6
- C 13 Throttle Body Assembly
- C 14 Crank Position Sensor
- C 15 Purge VSV
- C 16 Cam Timing Oil Control Valve (Bank 1 Intake Side)
- C 17 Cam Timing Oil Control Valve (Bank 1 Exhaust Side)
- C 18 Cam Timing Oil Control Valve (Bank 2 Intake Side)
- C 19 Cam Timing Oil Control Valve (Bank 2 Exhaust Side)
- C 20 VVT Sensor (Bank 1 Intake Side)
- C 21 VVT Sensor (Bank 2 Intake Side)
- C 22 VVT Sensor (Bank 1 Exhaust Side)
- C 23 VVT Sensor (Bank 2 Exhaust Side)
- C 24 E.F.I. Engine Coolant Temperature Sensor
- C 25 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- C 26 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
- C 27 Oxygen Sensor (Bank 1 Sensor 2)
- C 28 Oxygen Sensor (Bank 2 Sensor 2)
- C 29 Power Steering Oil Pressure Switch
- C 30 Electronically Controlled Transmission Solenoid
- C 31 Transmission Revolution Sensor (Counter Gear)
- C 32 Transmission Revolution Sensor (Turbine)
- C 33 Intake Mass Air Flow Meter Sub-Assembly
- C 38 Vane Pump Assembly
- C 39 Cooler Compressor Assembly
- C 40 Park/Neutral Position Switch
- C 41 Back-Up Light Switch Assembly
- C 42 Engine Oil Pressure Switch Assembly




Position of Parts in Engine Compartment <RHD 1GR-FE>

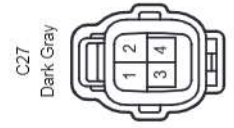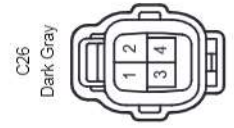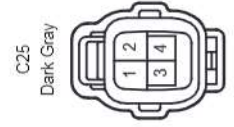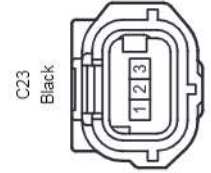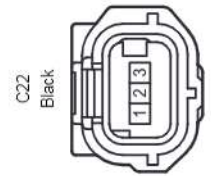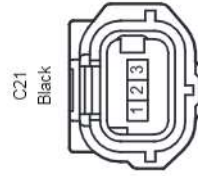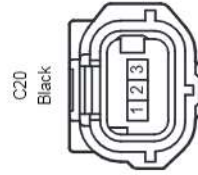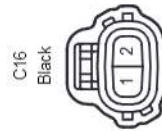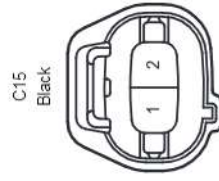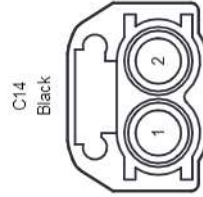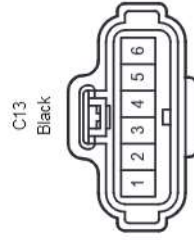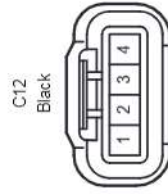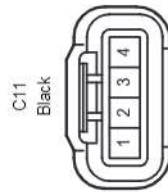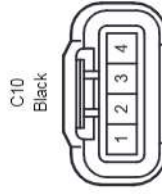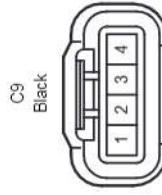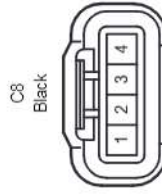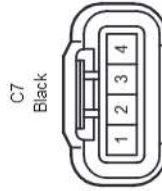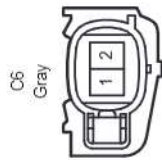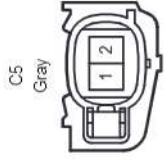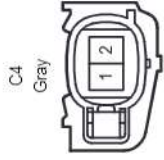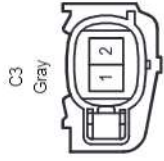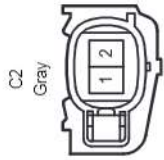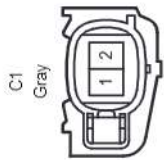


cardiagn.com

Position of Parts in Engine Compartment <RHD 1GR-FE>


C32  
Black

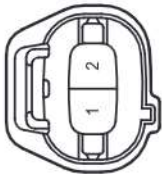

C33  
Black

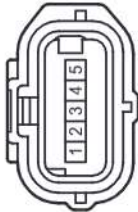


C38  
Black

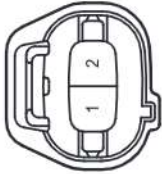

C39  
Gray



C40  
Gray

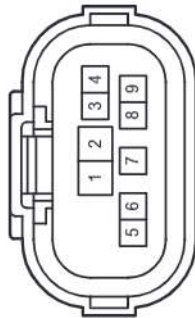


C41  
Gray




C42  
Gray




C43  
Black

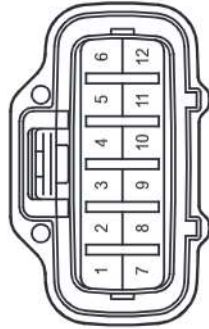

C44  
Black

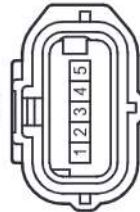

C45  
Black

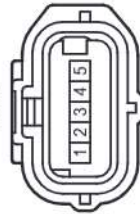


C46  
Gray




D1



 D2  
Black



D3  
Black

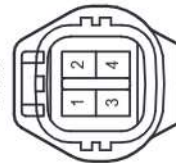

D7



h1  
Black



h2  
Black




p1  
Black



p2  
Black




Wire and Wire , Ground Points in Engine Compartment <RHD 1GR-FE>

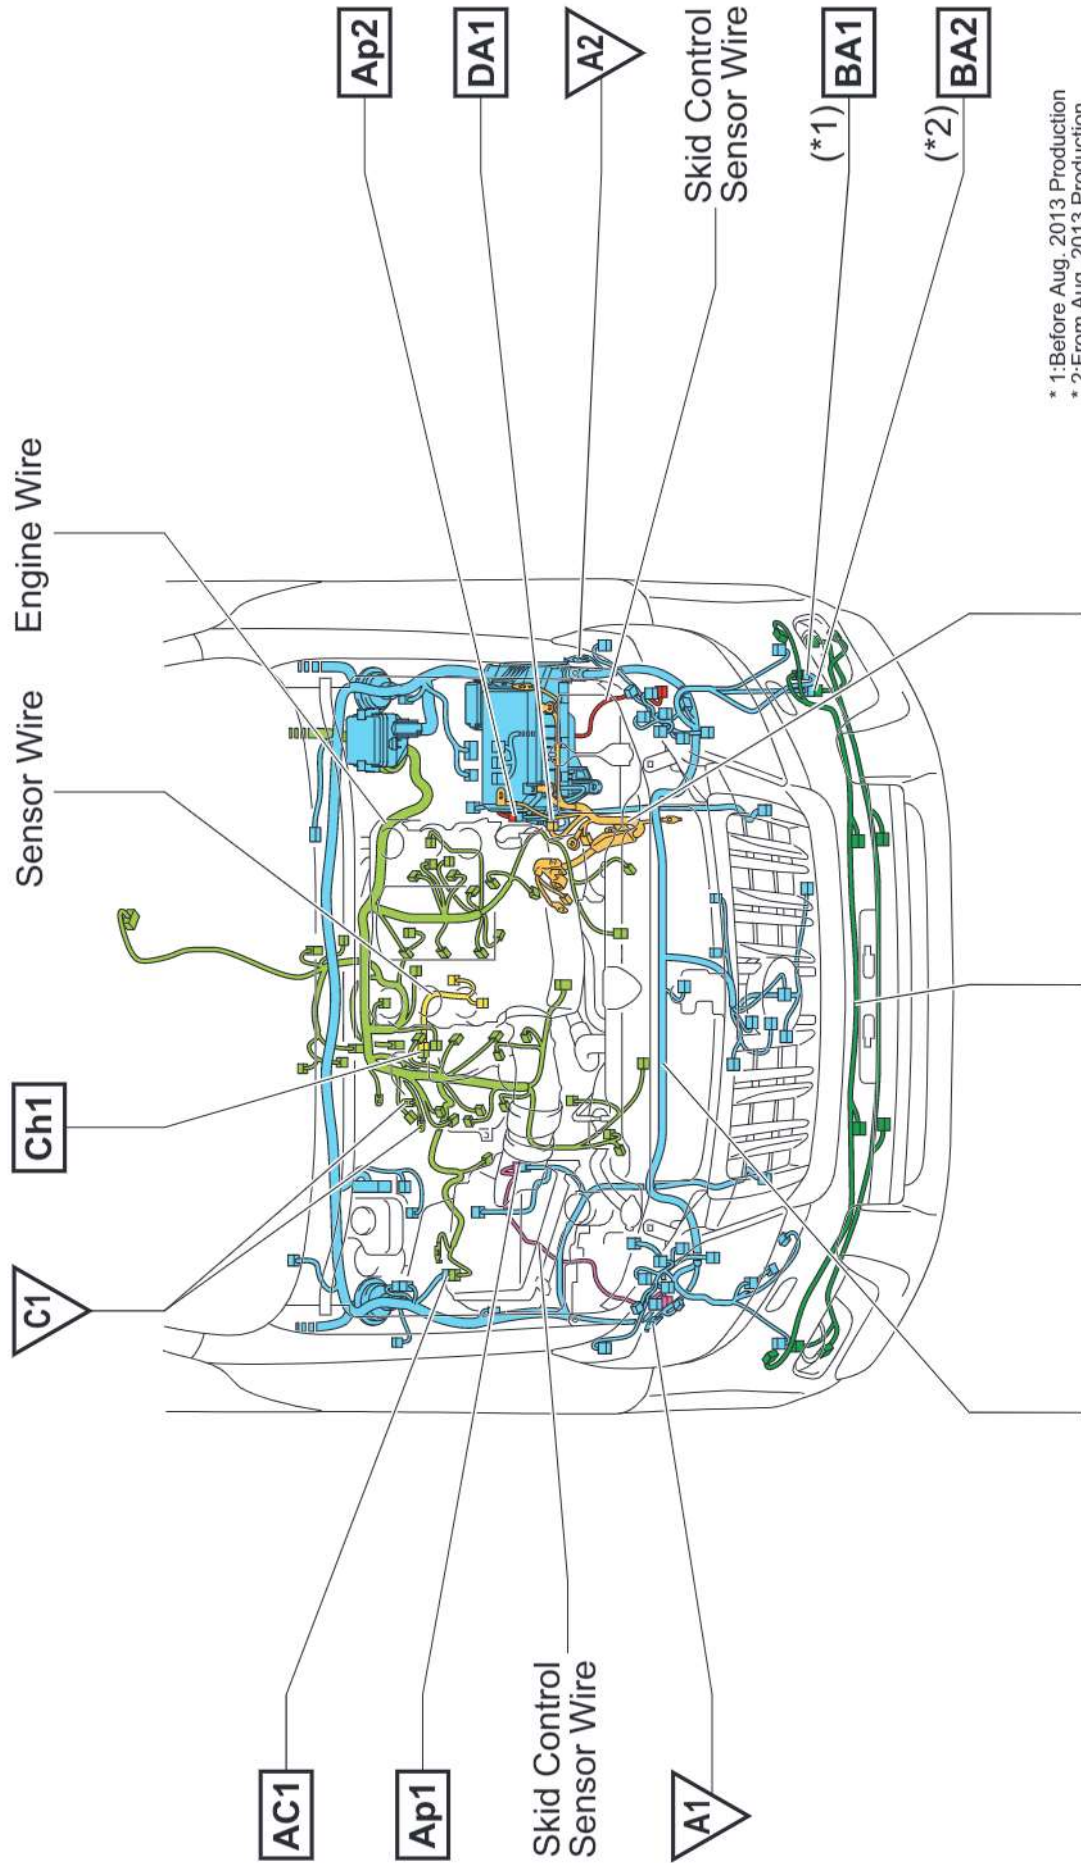


\* 1: Before Aug. 2013 Production  
 \* 2: From Aug. 2013 Production

Engine Room Main Wire Engine Room No. 2 Wire Engine No. 2 Wire

Wire and Wire , Ground Points in Engine Compartment <RHD 1GR-FE>

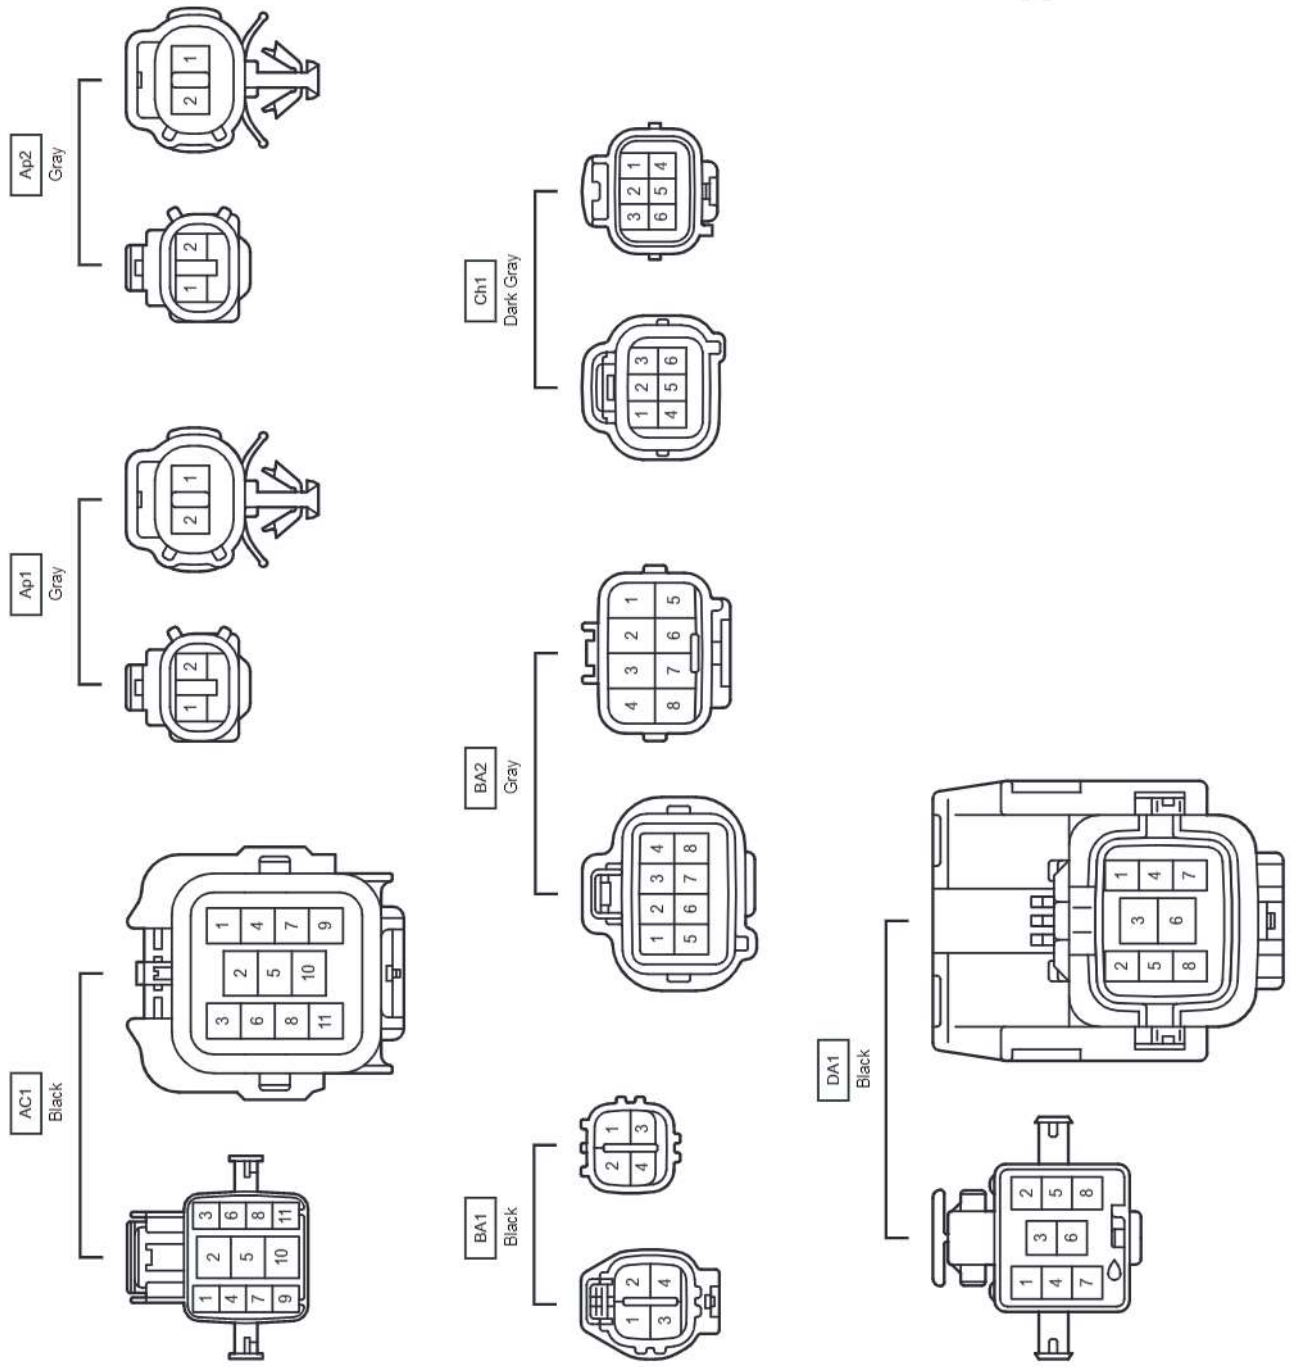


Position of Parts in Engine Compartment <LHD 1KD-FTV>

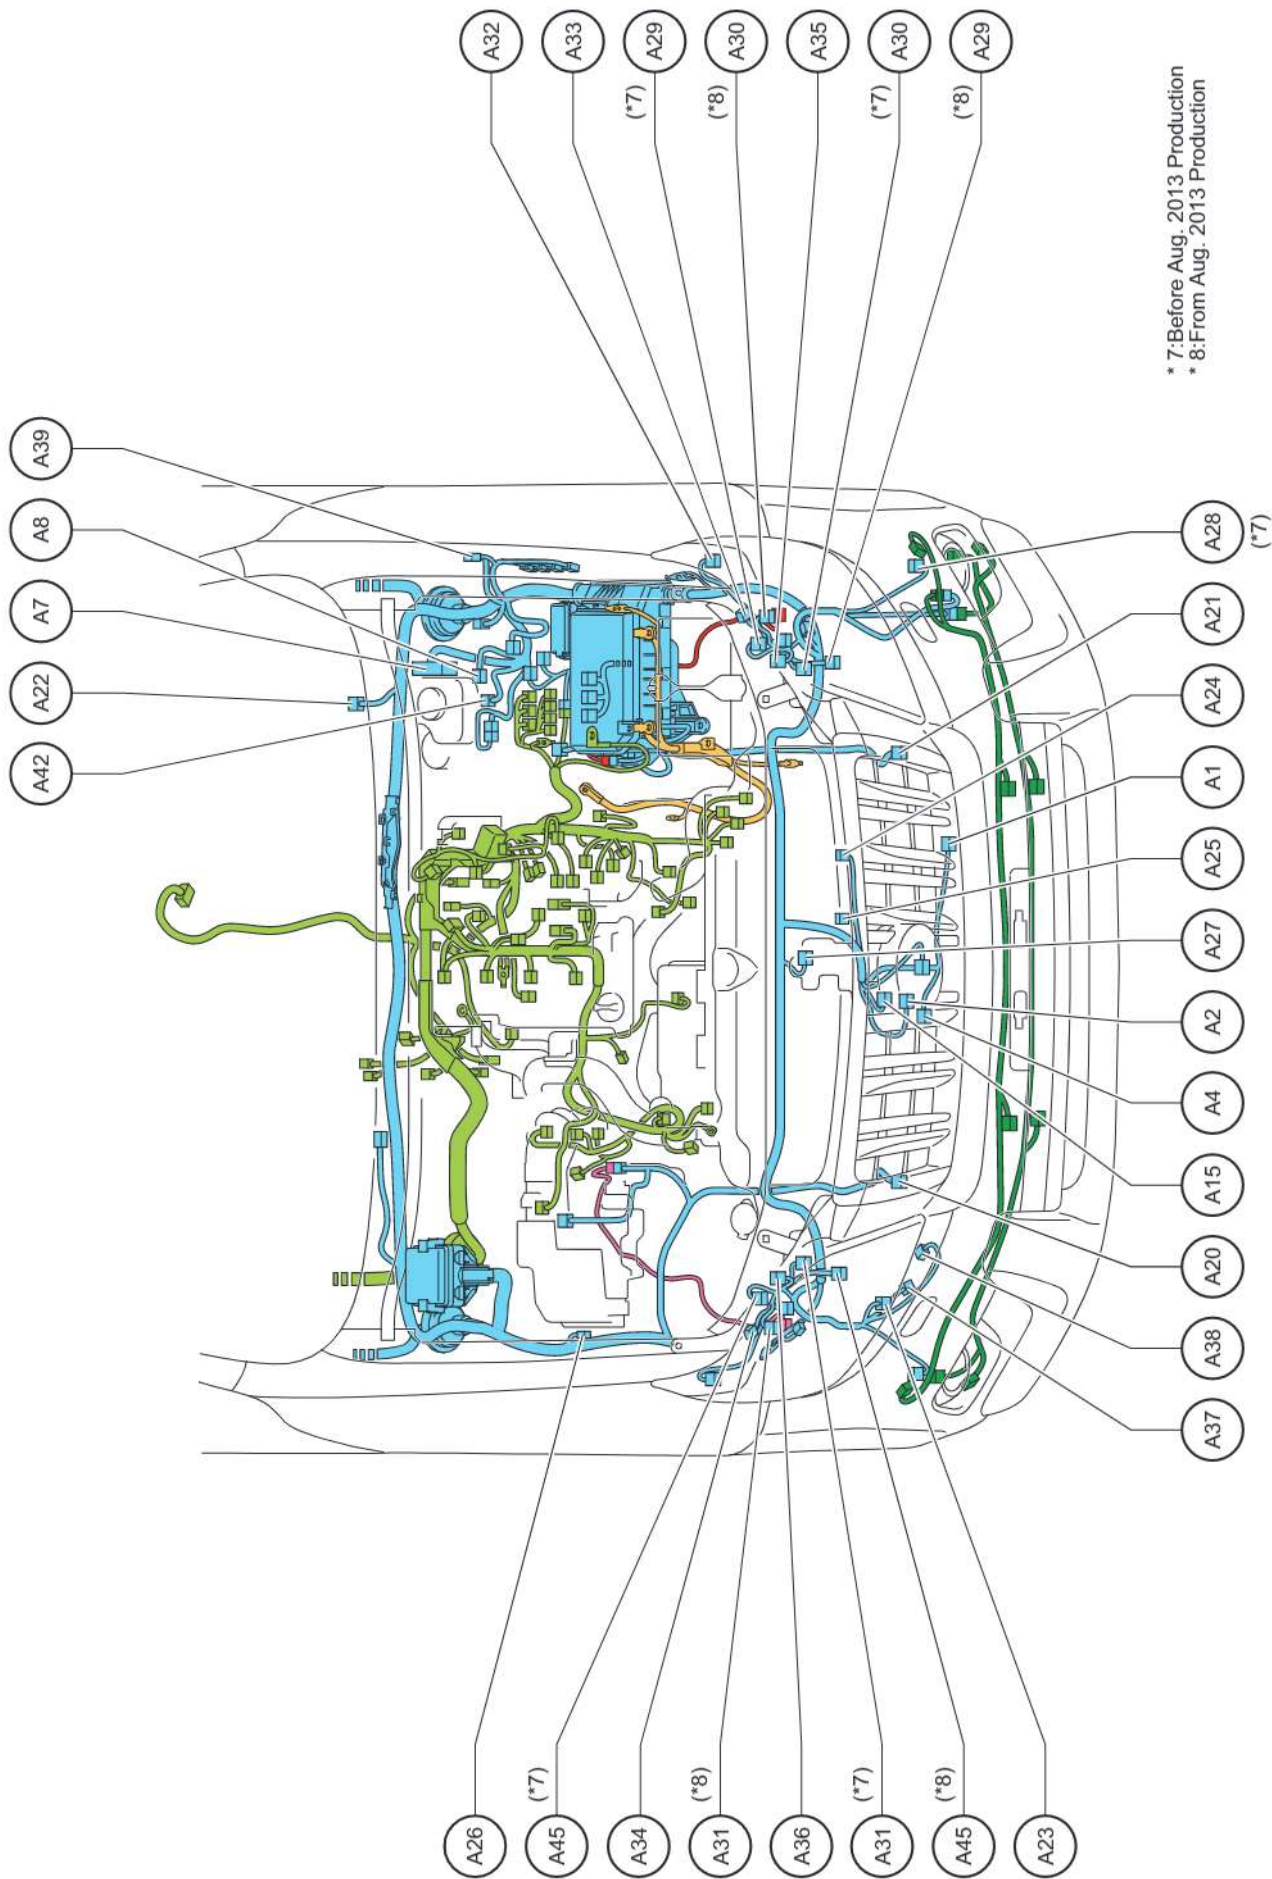














\* 7: Before Aug. 2013 Production  
\* 8: From Aug. 2013 Production

- A 1 Ambient Temperature Sensor
- A 2 A/C Pressure Sensor
- A 4 Condenser Fan Motor (With Shroud Blower Assembly)
- A 7 Brake Actuator Assembly
- A 8 Brake Actuator Assembly
- A 15 Millimeter Wave Radar Sensor Assembly
- A 20 Front Airbag Sensor RH
- A 21 Front Airbag Sensor LH
- A 22 Windshield Wiper Motor Assembly
- A 23 Windshield Washer Motor and Pump Assembly
- A 24 Low Pitched Horn Assembly
- A 25 High Pitched Horn Assembly
- A 26 Security Horn Assembly
- A 27 Engine Hood Courtesy Switch
- A 28 Fog Light Assembly LH
- A 29 Headlight Assembly LH
- A 30 Headlight Assembly LH
- A 31 Headlight Assembly RH
- A 32 Headlight Assembly LH
- A 33 Headlight Assembly RH
- A 34 Headlight Assembly RH
- A 35 Headlight Assembly LH
- A 36 Headlight Assembly RH
- A 37 Headlight Cleaner Motor and Pump Assembly
- A 38 Headlight Cleaner Control Relay
- A 39 Wireless Door Lock Buzzer
- A 42 Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Assembly)
- A 45 Headlight Assembly RH

Position of Parts in Engine Compartment <LHD 1KD-FTV>

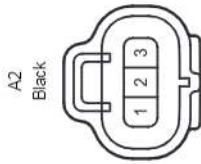


A7  
Black

   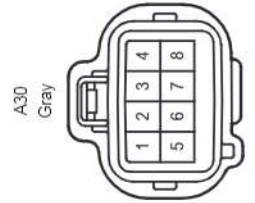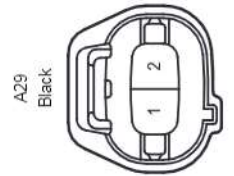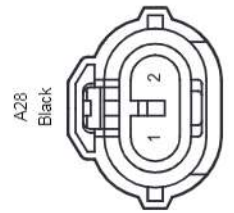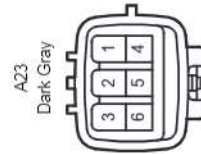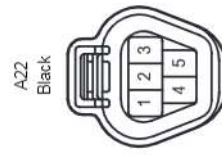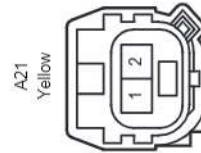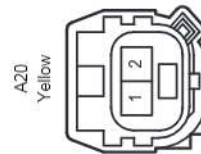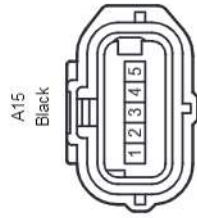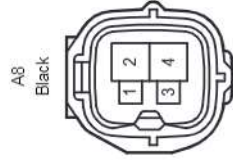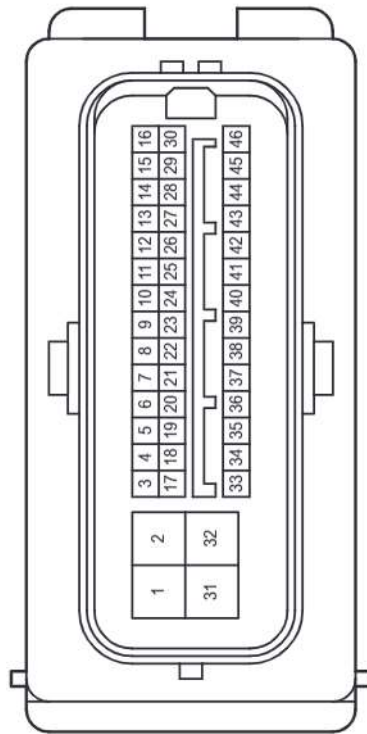

cardiagn.com

Position of Parts in Engine Compartment <LHD 1KD-FTV>


A36  
Black

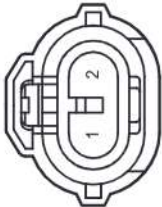

A37  
Black




A38  
Gray

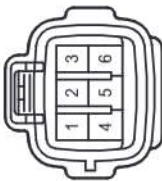

A39  
Gray



A42  
Gray

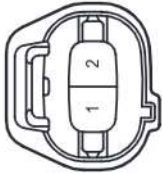


A45  
Black









Position of Parts in Engine Compartment <LHD 1KD-FTV>

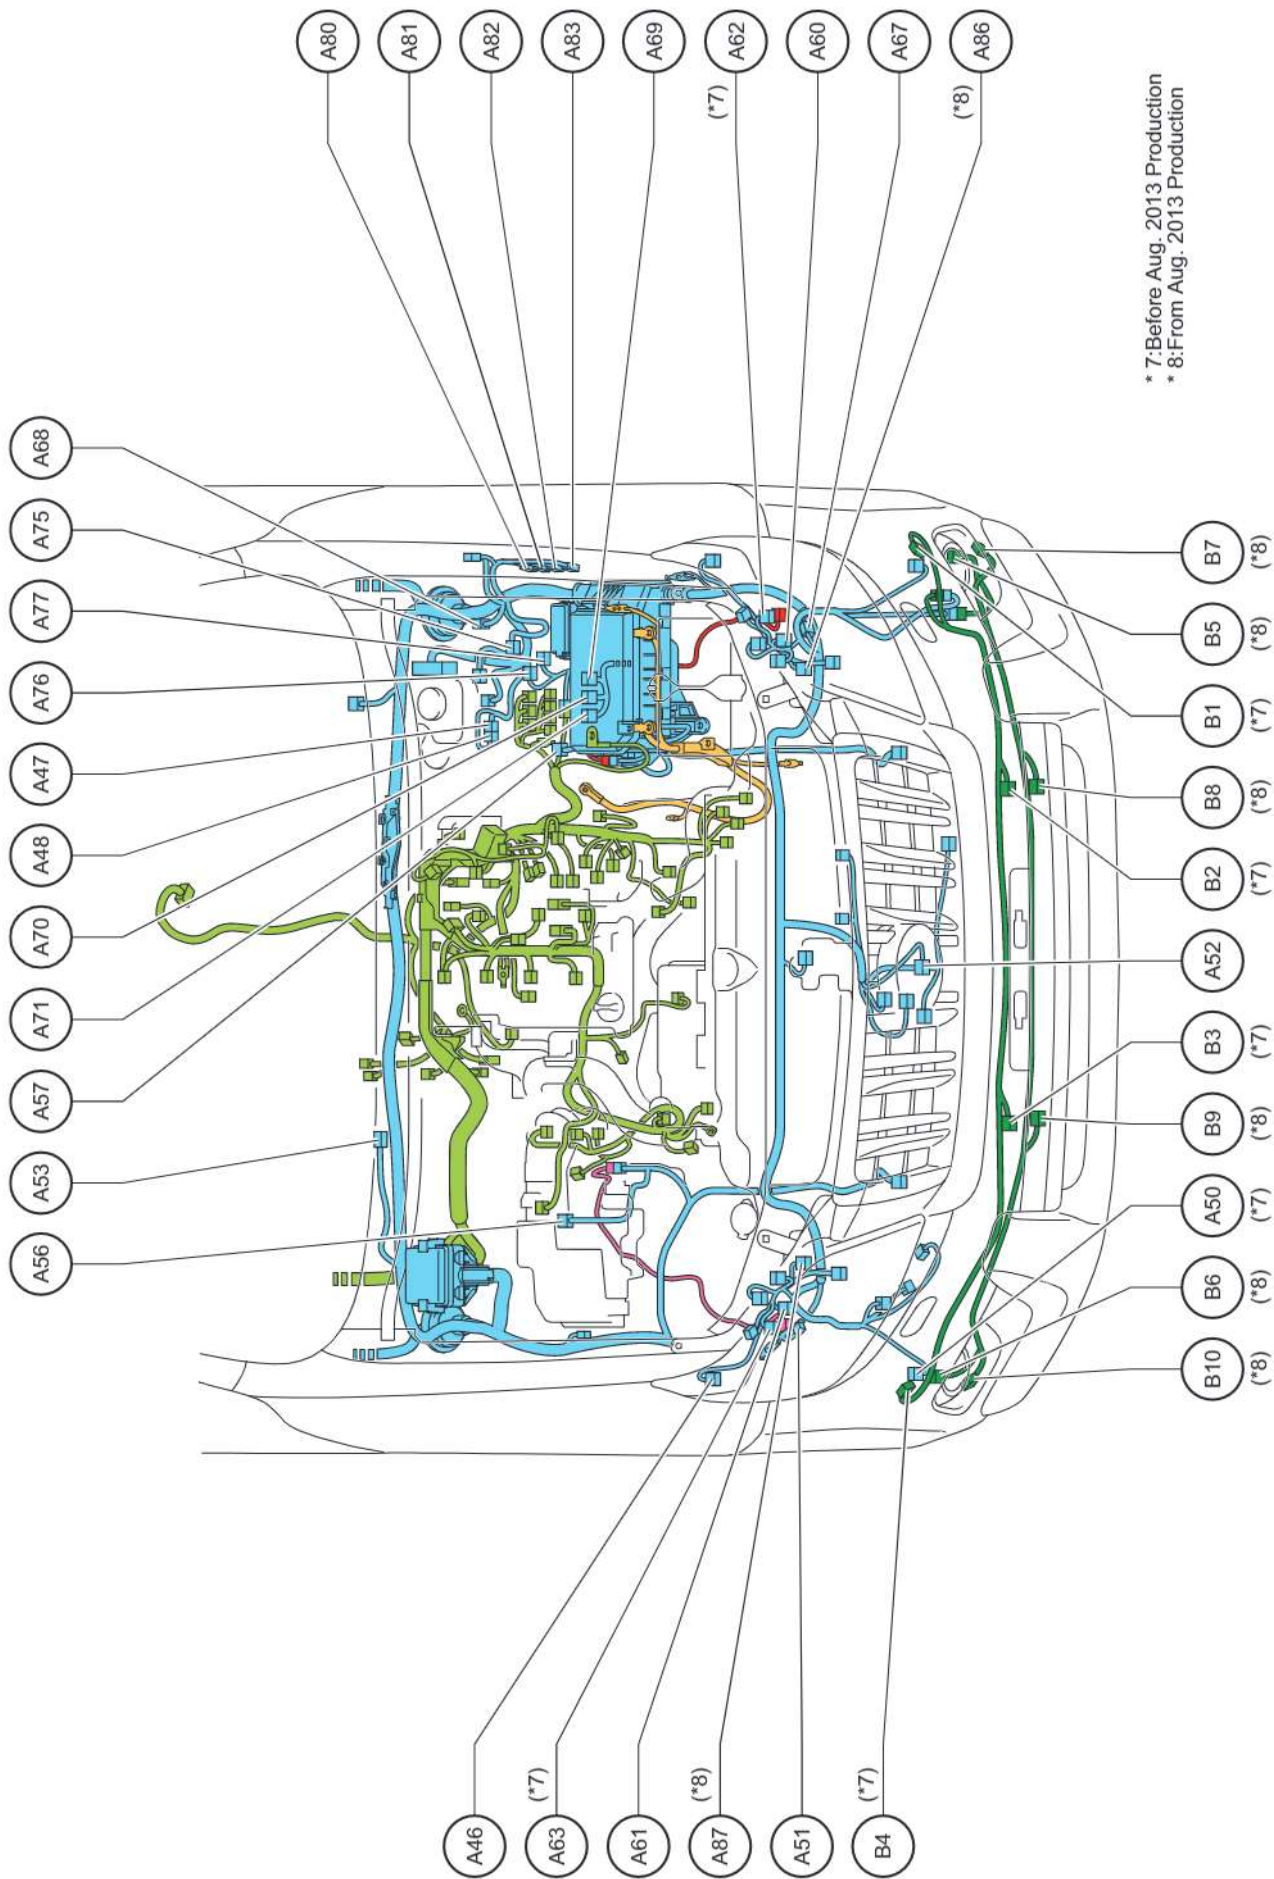

\* 7: Before Aug. 2013 Production  
\* 8: From Aug. 2013 Production

- A 46 Headlight Assembly RH
- A 47 Short Connector
- A 48 Short Connector
- A 50 Fog Light Assembly RH
- A 51 Noise Filter (Condenser Fan)
- A 52 Front Television Camera Assembly
- A 53 Front Wiper Deicer (Windshield Glass)
- A 56 Front Absorber Control Actuator RH
- A 57 Front Absorber Control Actuator LH
- A 60 Headlight Assembly LH
- A 61 Headlight Assembly RH
- A 62 Headlight Assembly LH
- A 63 Headlight Assembly RH
- A 67 Junction Connector
- A 68 Junction Connector
- A 69 Junction Connector
- A 70 Junction Connector
- A 71 Junction Connector
- A 75 Fuel Filter Warning Switch
- A 76 Level Warning Switch (Fuel Filter Assembly)
- A 77 Fuel Heater Assembly
- A 80 Glow Plug Controller
- A 81 Glow Plug Controller
- A 82 Glow Plug Controller
- A 83 Glow Plug Controller
- A 86 Headlight Assembly LH
- A 87 Headlight Assembly RH
- B 1 Front No. 1 Ultrasonic Sensor LH
- B 2 Front No. 1 Ultrasonic Sensor Center LH
- B 3 Front No. 1 Ultrasonic Sensor Center RH
- B 4 Front No. 1 Ultrasonic Sensor RH
- B 5 Fog Light Assembly LH
- B 6 Fog Light Assembly RH
- B 7 Front No. 1 Ultrasonic Sensor LH
- B 8 Front No. 1 Ultrasonic Sensor Center LH
- B 9 Front No. 1 Ultrasonic Sensor Center RH
- B 10 Front No. 1 Ultrasonic Sensor RH

Position of Parts in Engine Compartment <LHD 1KD-FTV>

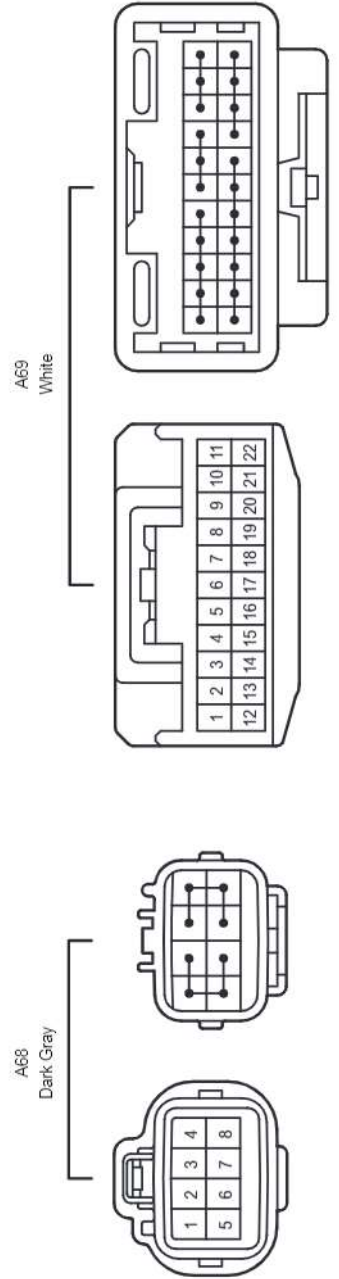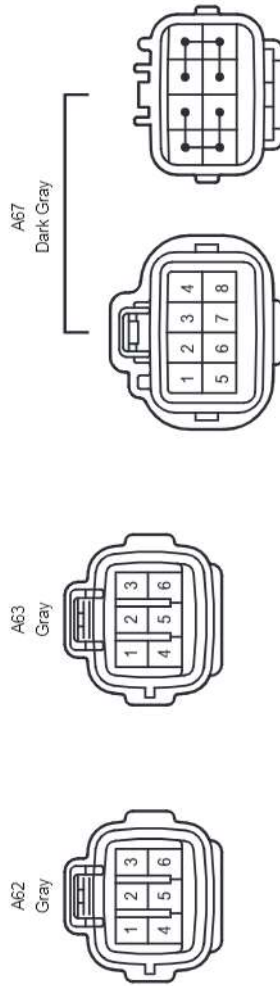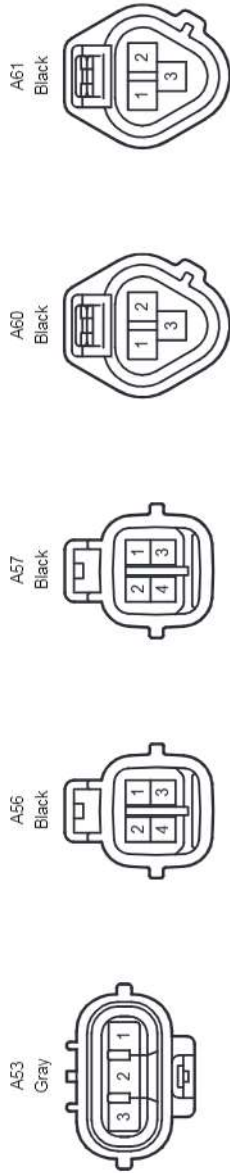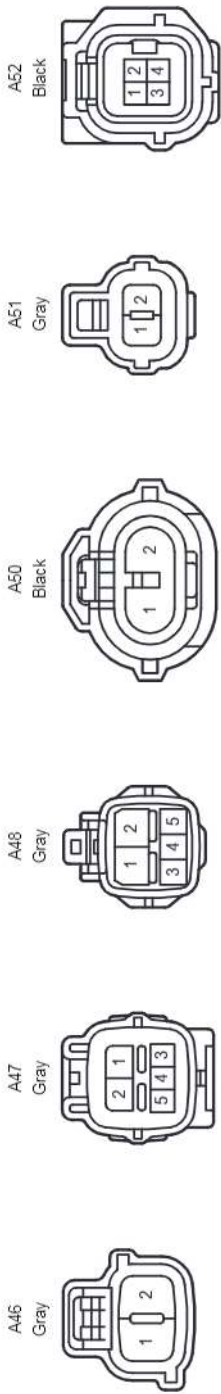

A70 White

A71 White


A75 Gray

Position of Parts in Engine Compartment <LHD 1KD-FTV>

A76  
Black



A77  
Gray

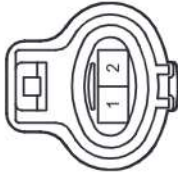

A80  
Gray




A81  
Black




A82  
Gray




A83  
Black

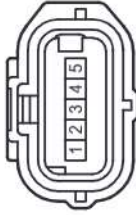


A86  
Black

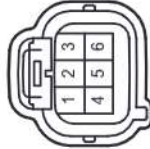


A87  
Black

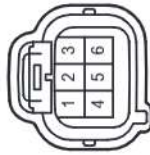


B1  
Black

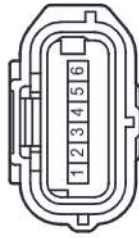


B2  
Black

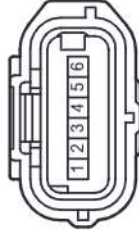


B3  
Black

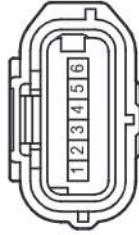


B4  
Black

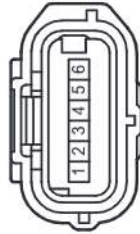


B5  
Black

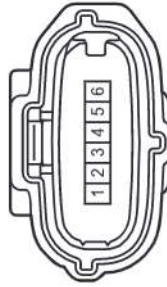


B6  
Black

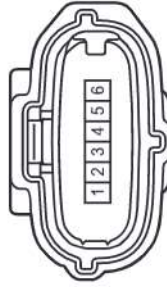


B7  
Black

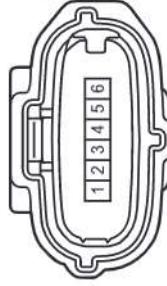


B8  
Black

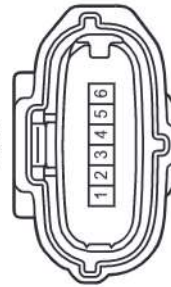


B9  
Black

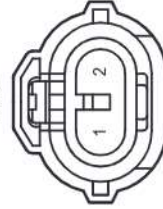

B10  
Black
















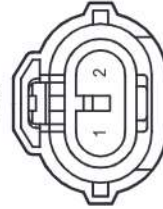


Position of Parts in Engine Compartment <LHD 1KD-FTV>








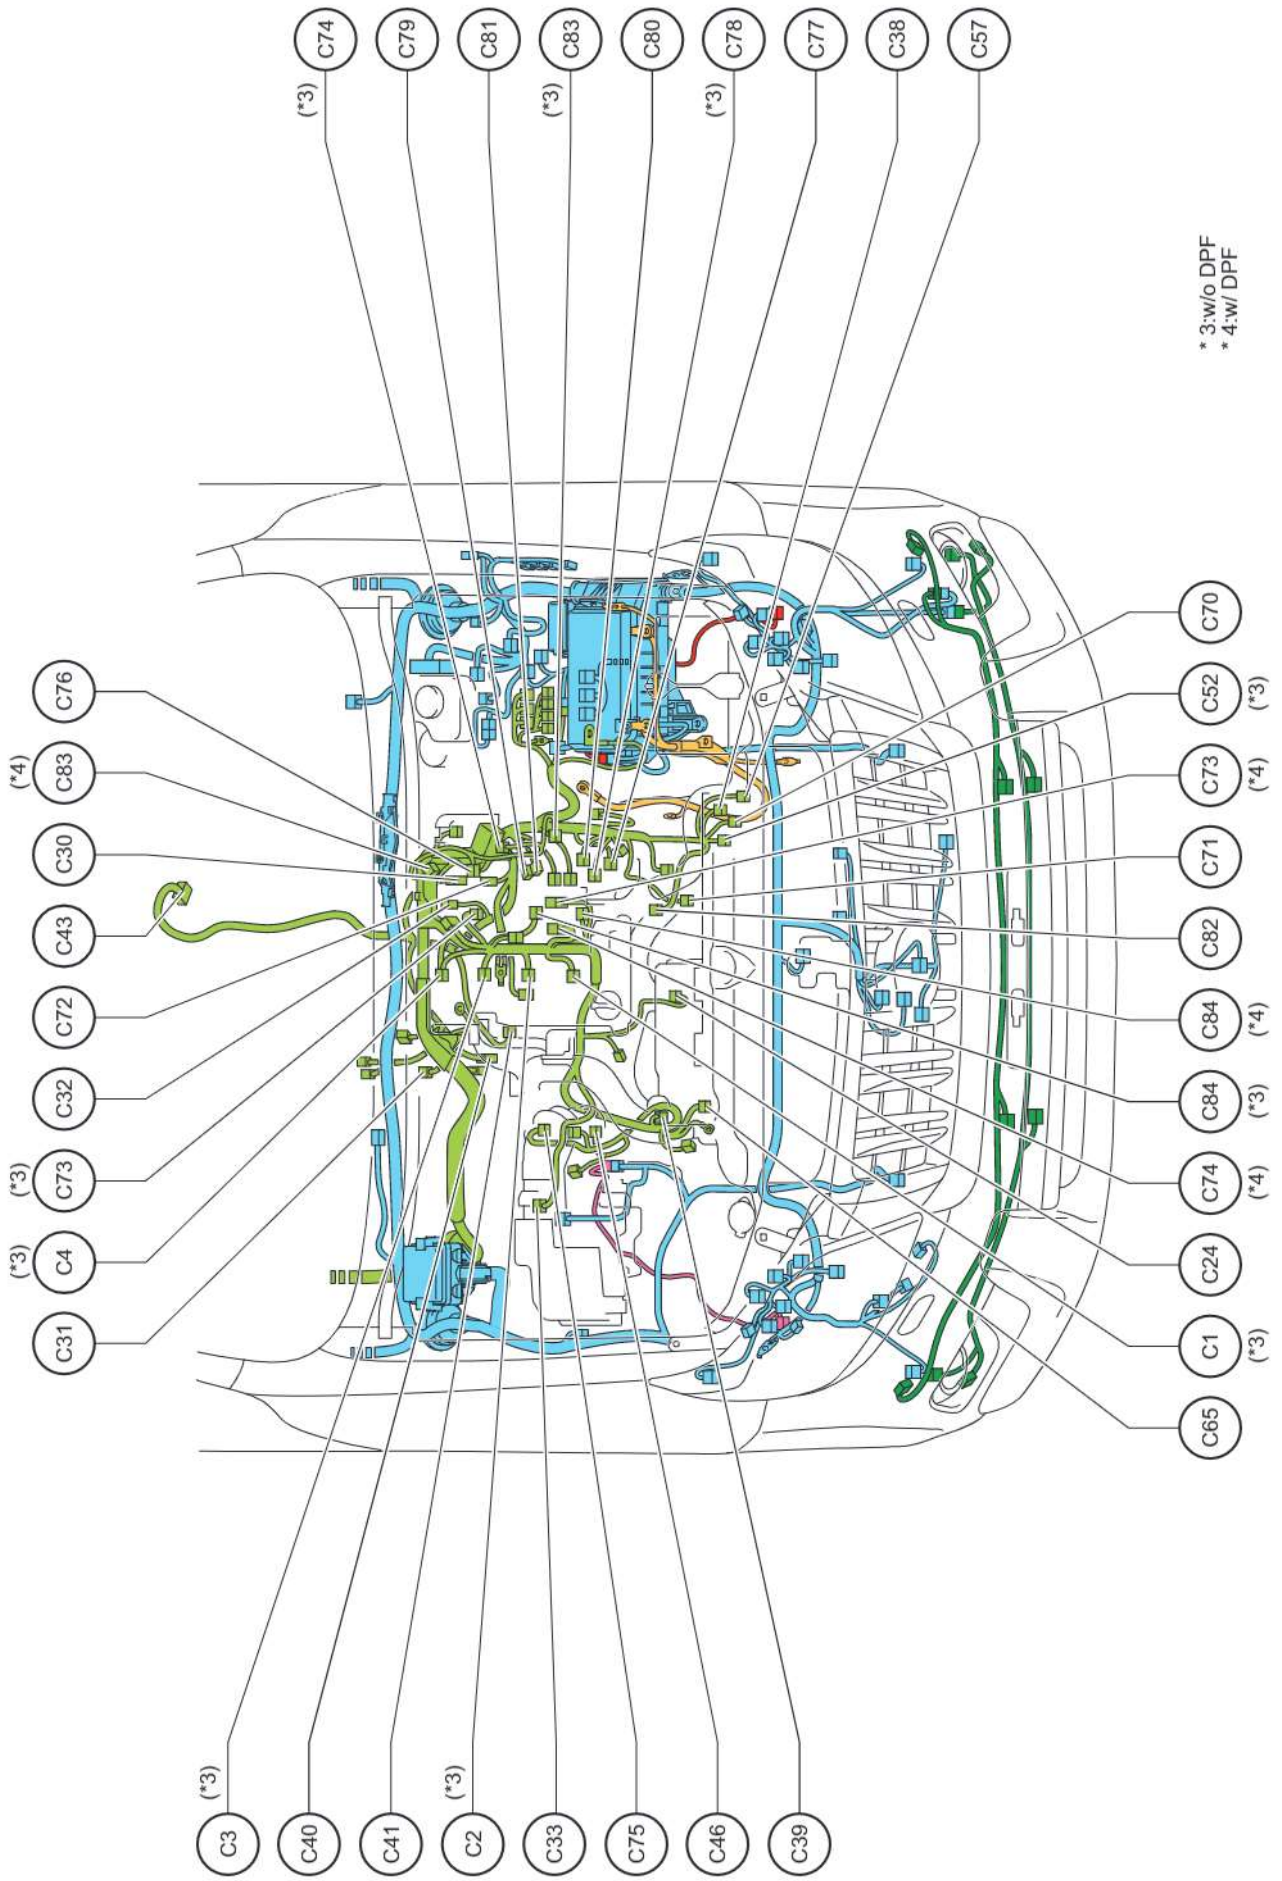


- C 1 Fuel Injector Assembly No. 1
- C 2 Fuel Injector Assembly No. 2
- C 3 Fuel Injector Assembly No. 3
- C 4 Fuel Injector Assembly No. 4
- C 24 E.F.I. Engine Coolant Temperature Sensor
- C 30 Electronically Controlled Transmission Solenoid
- C 31 Transmission Revolution Sensor (Counter Gear)
- C 32 Transmission Revolution Sensor (Turbine)
- C 33 Intake Mass Air Flow Meter Sub-Assembly
- C 38 Vane Pump Assembly
- C 39 Cooler Compressor Assembly
- C 40 Park/Neutral Position Switch
- C 41 Back-Up Light Switch Assembly
- C 43 Transfer Shift Actuator Assembly
- C 46 Engine Oil Level Sensor
- C 52 Cam Position Sensor
- C 57 Power Steering Oil Pressure Switch
- C 65 Generator Assembly
- C 70 Crank Position Sensor
- C 71 Suction Control Valve
- C 72 Pressure Discharge Valve
- C 73 Diesel Throttle Body Assembly
- C 74 Diesel Throttle Body Assembly
- C 75 DC Motor
- C 76 Electric Vacuum Regulating Valve Assembly
- C 77 VSV (for EGR Cut)
- C 78 No. 2 EGR Valve Assembly
- C 79 VSV (for No. 2 Swirl Control Valve)
- C 80 VSV (for Engine Mounting)
- C 81 VSV (for No. 1 Swirl Control Valve)
- C 82 Fuel Pressure Sensor
- C 83 Vacuum Sensor (Diesel Turbo Pressure Sensor)
- C 84 Intake Air Temperature Sensor

Position of Parts in Engine Compartment <LHD 1KD-FTV>

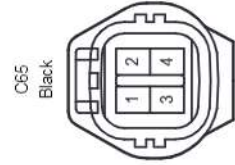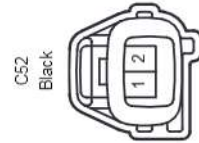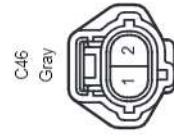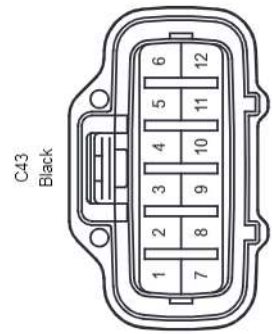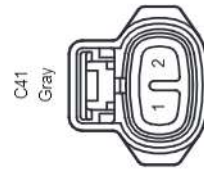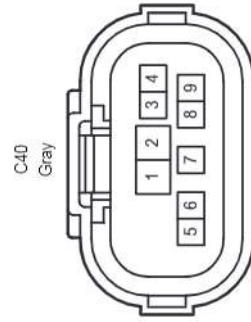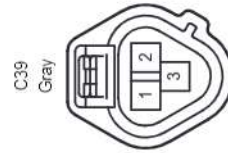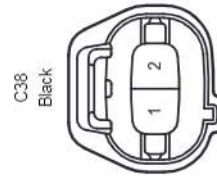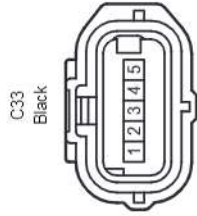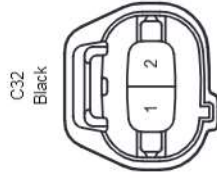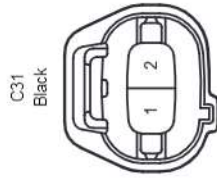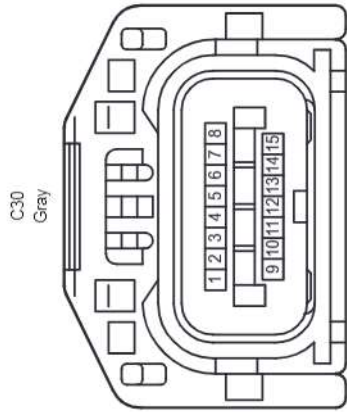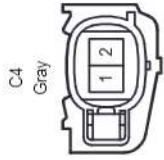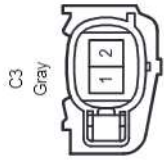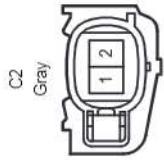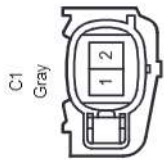


Position of Parts in Engine Compartment <LHD 1KD-FTV>

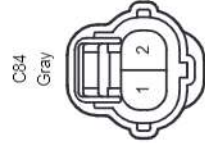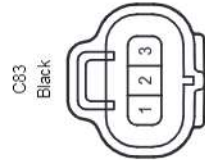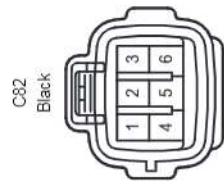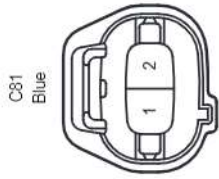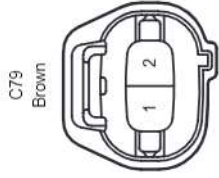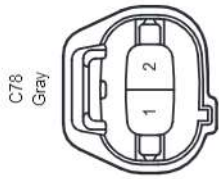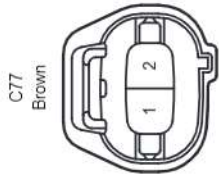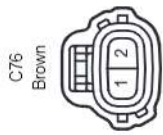



















Position of Parts in Engine Compartment <LHD 1KD-FTV>

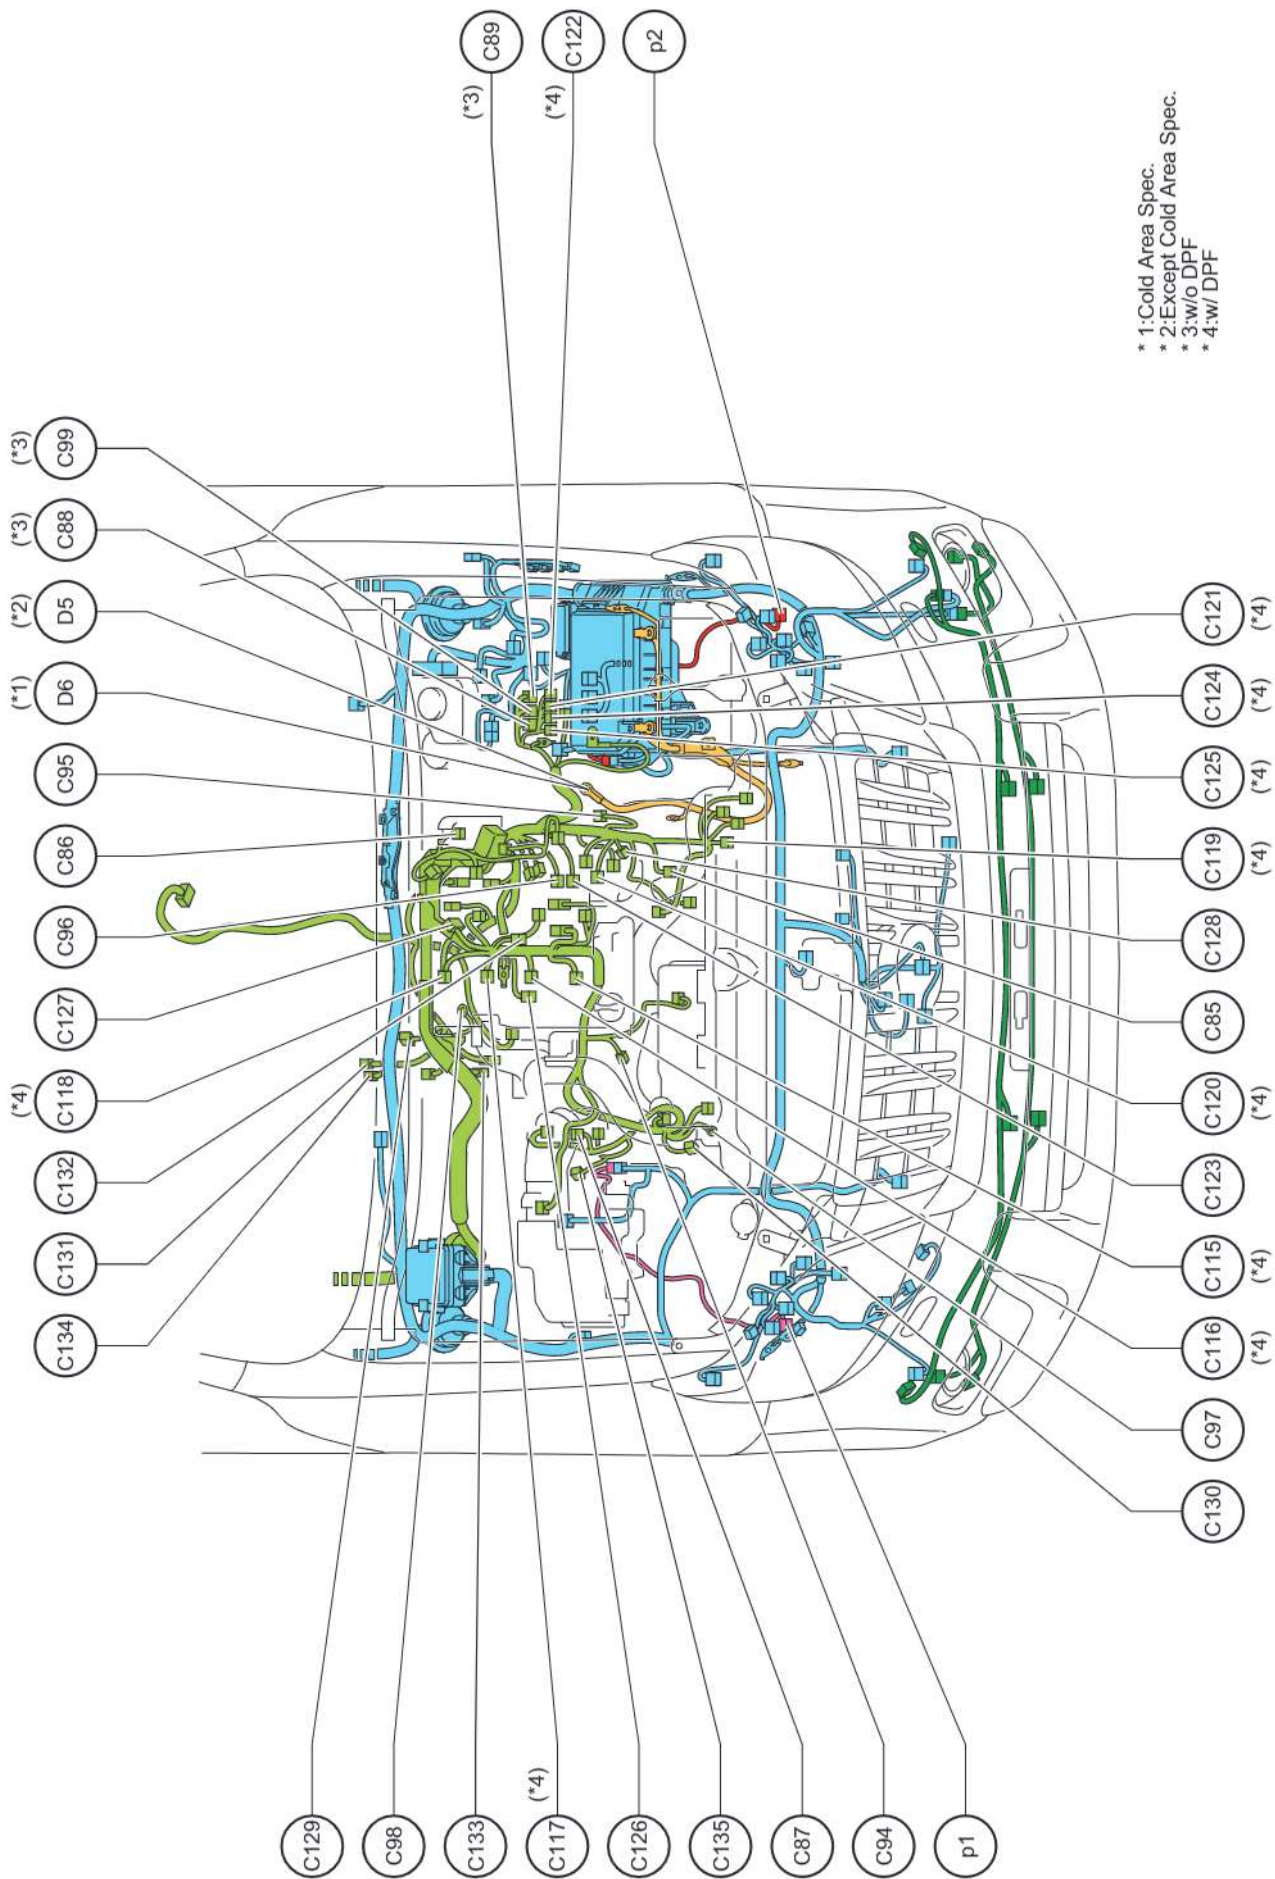

- \* 1: Cold Area Spec.
- \* 2: Except Cold Area Spec.
- \* 3: w/o DPF
- \* 4: w/ DPF



- C 85 Fuel Temperature Sensor
- C 86 Electric EGR Control Valve Sensor
- C 87 Nozzle Vane Position Sensor
- C 88 Injector Driver
- C 89 Injector Driver
- C 94 Viscous with Magnet Clutch Heater Assembly
- C 95 Starter Assembly
- C 96 Engine Oil Pressure Switch Assembly
- C 97 Generator Assembly
- C 98 Glow Plug Assembly
- C 99 Injector Driver
- C115 Fuel Injector Assembly No. 1
- C116 Fuel Injector Assembly No. 2
- C117 Fuel Injector Assembly No. 3
- C118 Fuel Injector Assembly No. 4
- C119 Crank Position Sensor
- C120 No. 2 EGR Valve Assembly
- C121 Injector Driver
- C122 Injector Driver
- C123 Oil Pressure Sender Gage Assembly
- C124 Injector Driver
- C125 Injector Driver
- C126 Exhaust Fuel Addition Injector Assembly
- C127 Electric EGR Control Valve Assembly
- C128 VSV (for EGR Cooler)
- C129 Differential Pressure Sensor Assembly
- C130 Oil Pressure Switching Valve Assembly
- C131 Air Fuel Ratio Sensor
- C132 Glow Plug Assembly
- C133 No. 2 Exhaust Gas Temperature Sensor
- C134 No. 3 Exhaust Gas Temperature Sensor
- C135 No. 1 Exhaust Gas Temperature Sensor
- D 5 Starter Assembly
- D 6 Starter Assembly
- p 1 Front Speed Sensor RH
- p 2 Front Speed Sensor LH

Position of Parts in Engine Compartment <LHD 1KD-FTV>

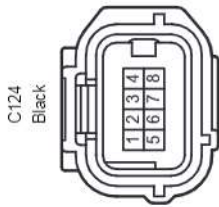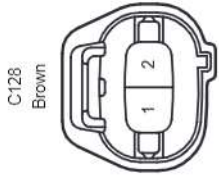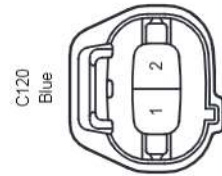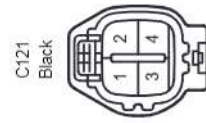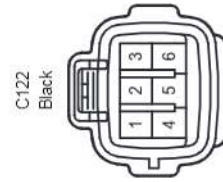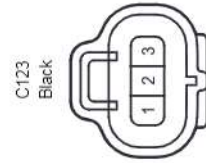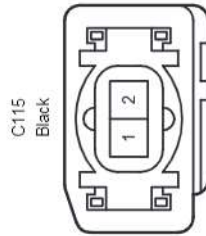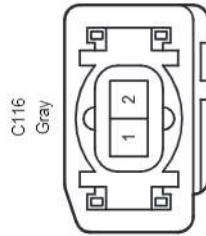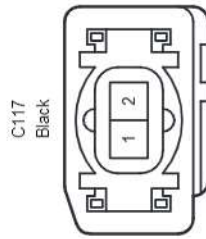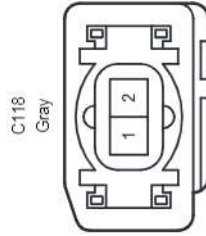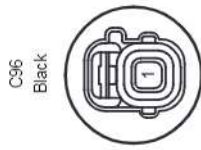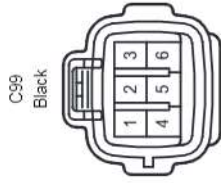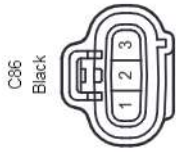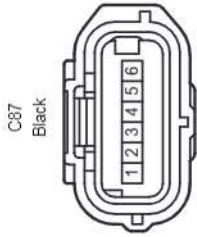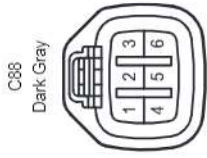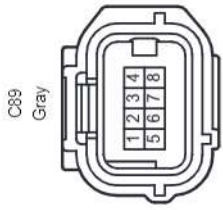


cardiagn.com

Position of Parts in Engine Compartment <LHD 1KD-FTV>

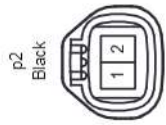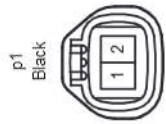


Wire and Wire , Ground Points in Engine Compartment <LHD 1KD-FTV>

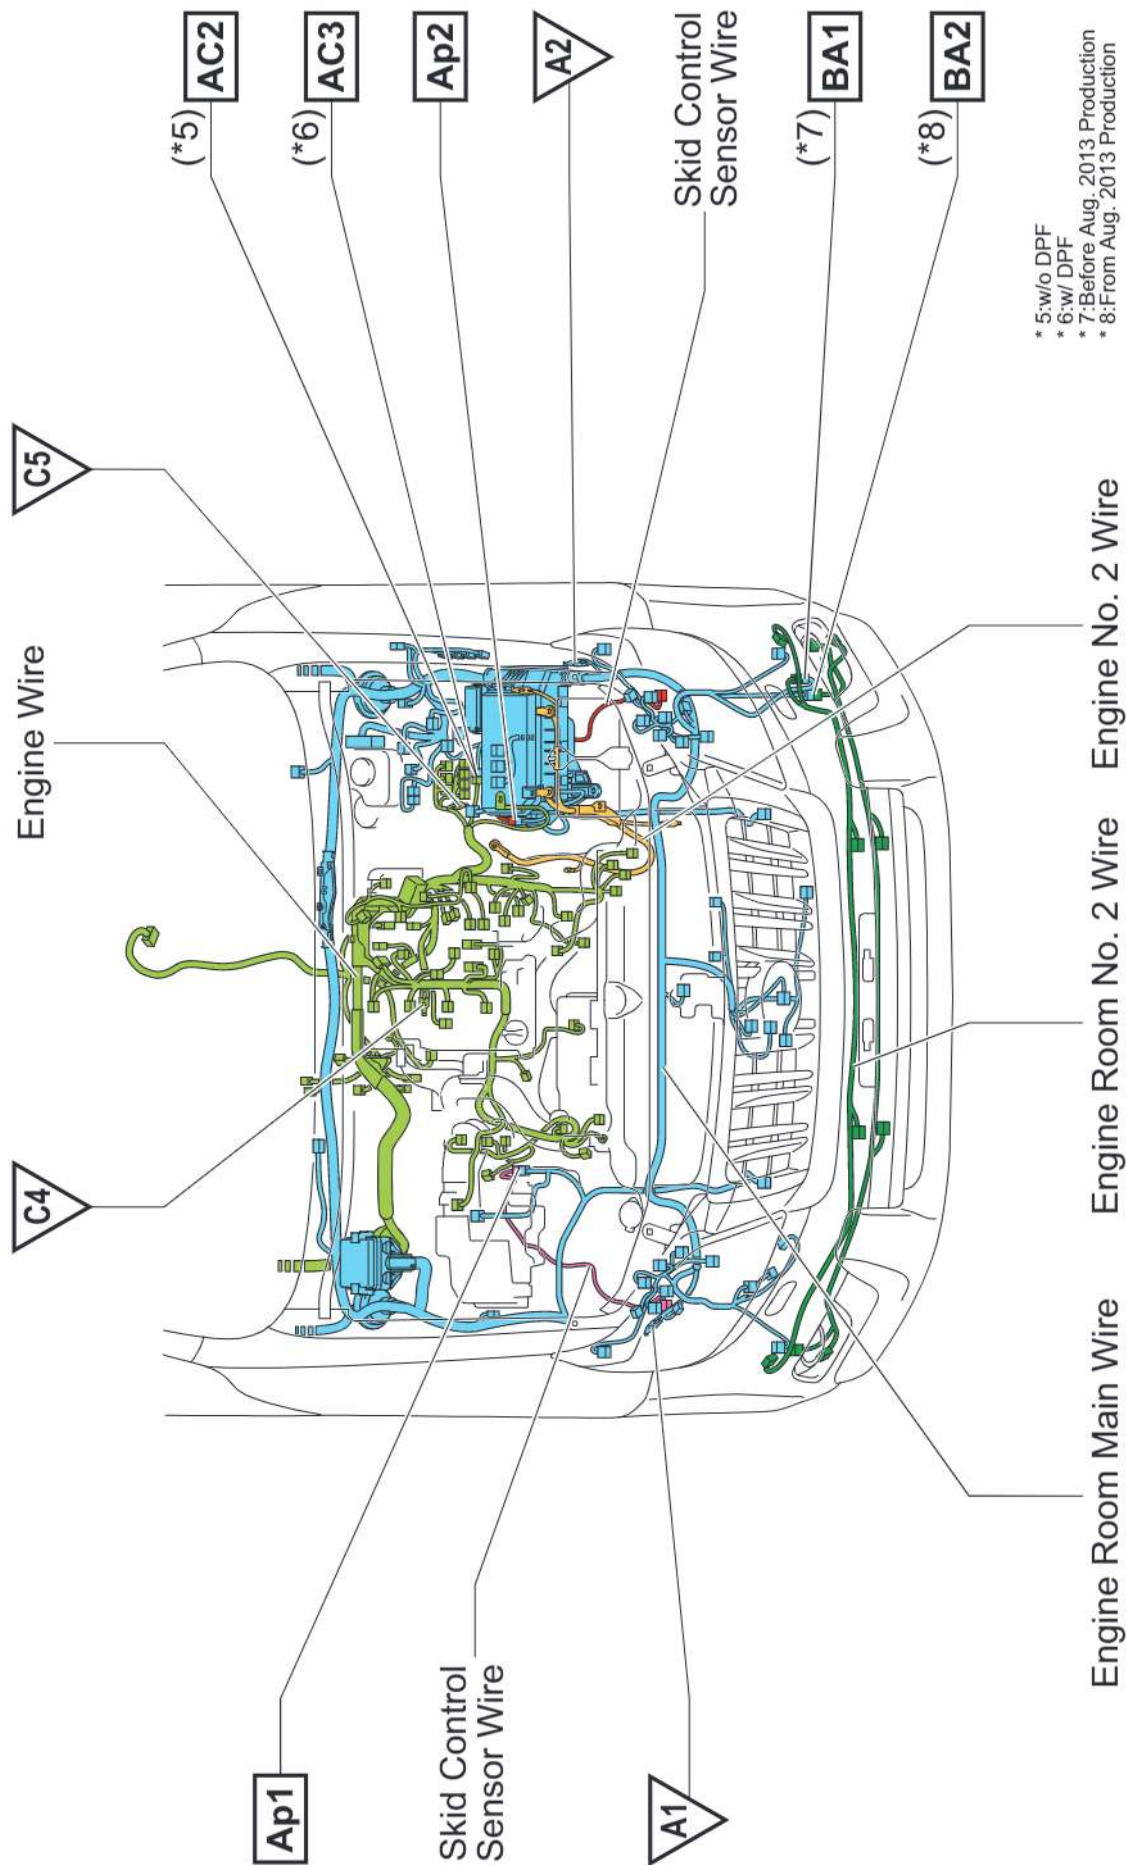


- \* 5:w/o DPF
- \* 6:w/ DPF
- \* 7:Before Aug. 2013 Production
- \* 8:From Aug. 2013 Production

Wire and Wire , Ground Points in Engine Compartment <LHD 1KD-FTV>

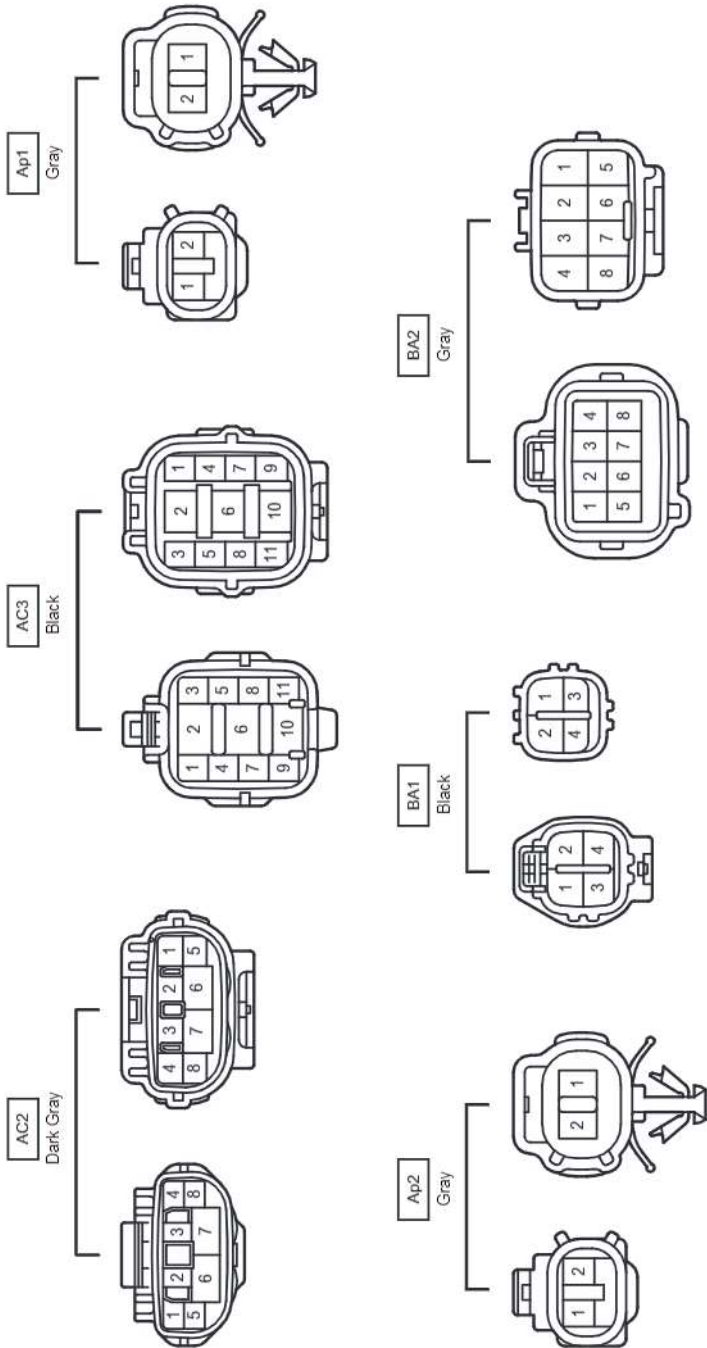

Position of Parts in Engine Compartment <RHD 1KD-F TV>

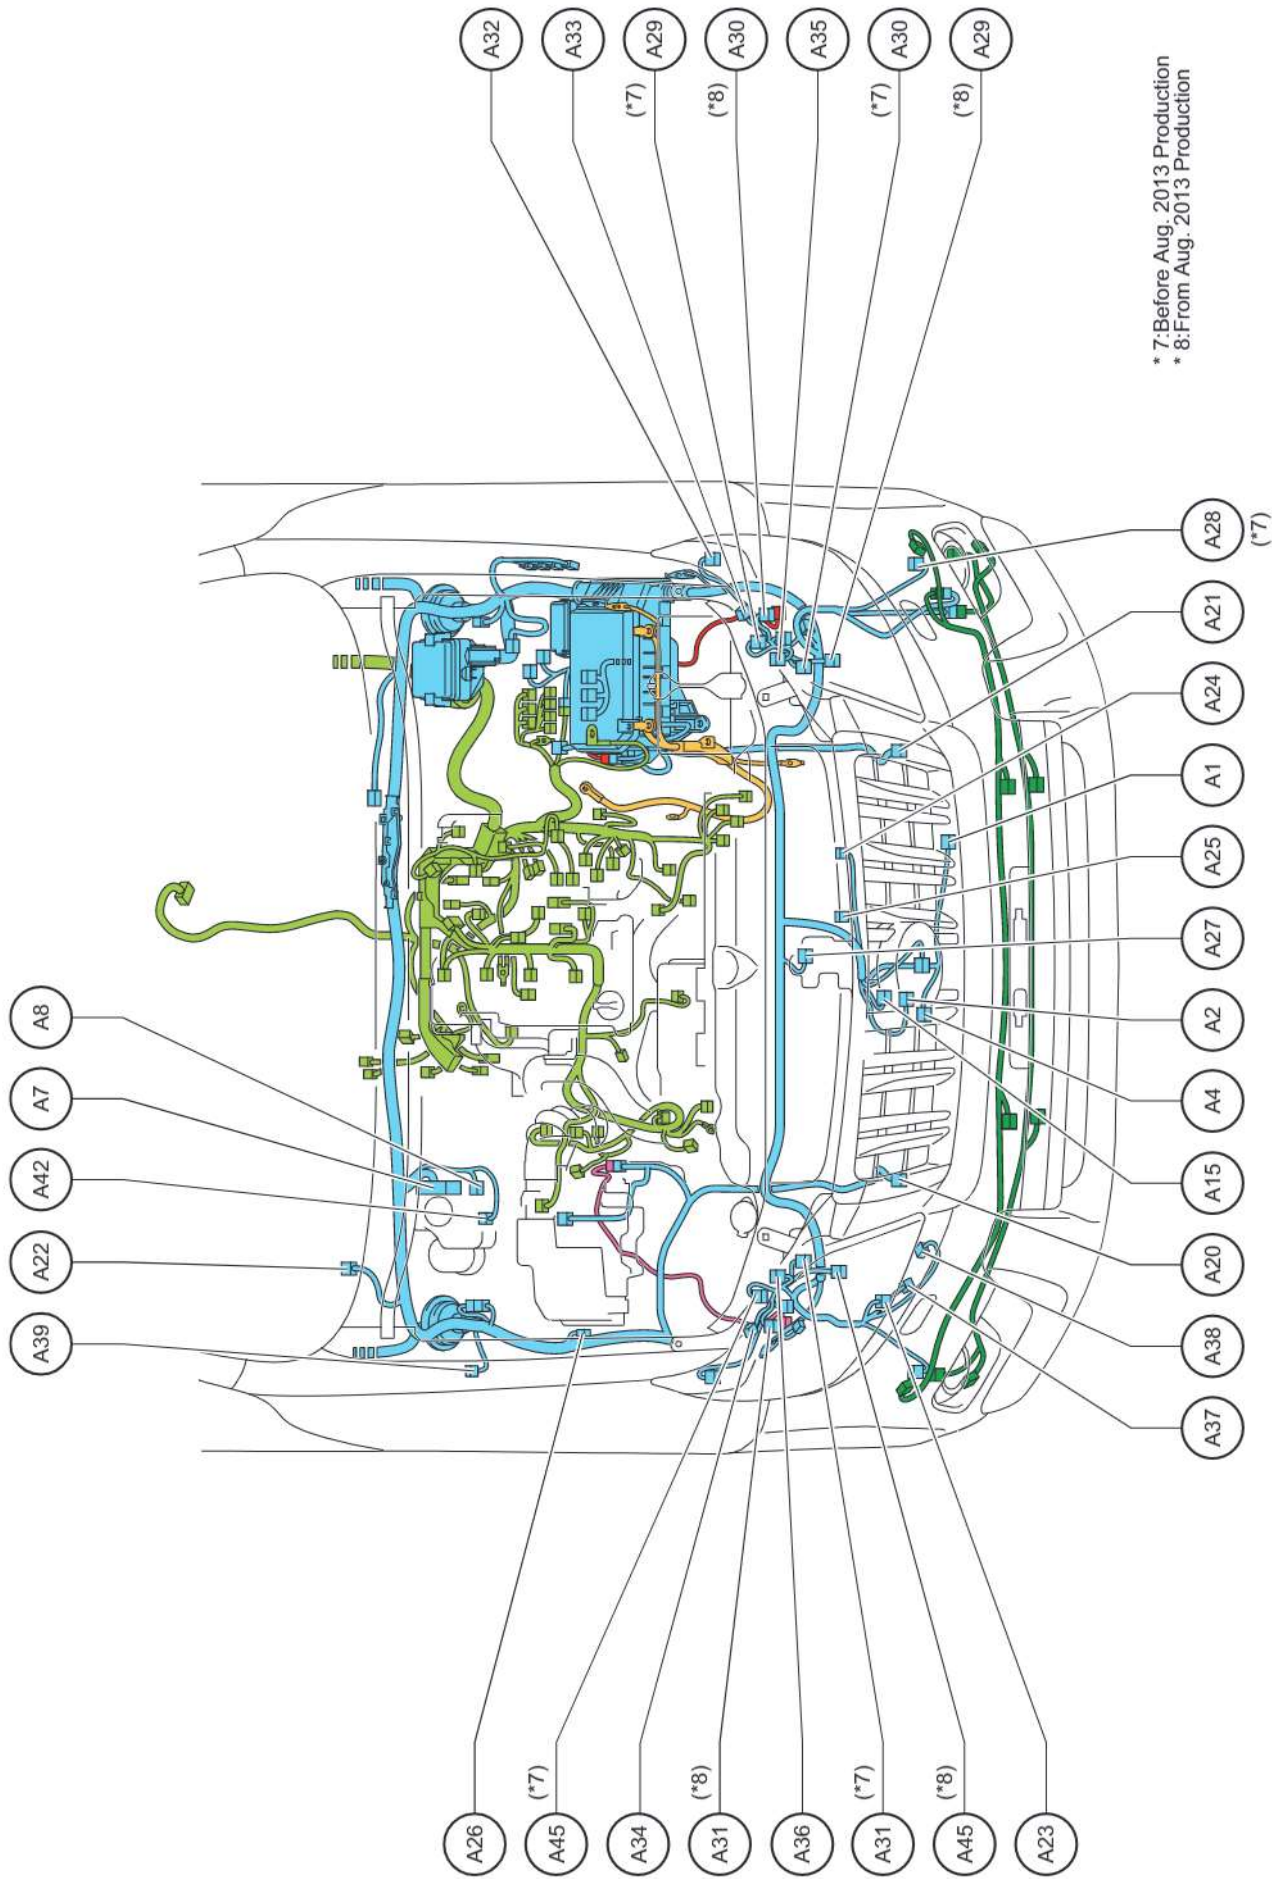

\* 7: Before Aug. 2013 Production  
 \* 8: From Aug. 2013 Production

- A 1 Ambient Temperature Sensor
- A 2 A/C Pressure Sensor
- A 4 Condenser Fan Motor (With Shroud Blower Assembly)
- A 7 Brake Actuator Assembly
- A 8 Brake Actuator Assembly
- A 15 Millimeter Wave Radar Sensor Assembly
- A 20 Front Airbag Sensor RH
- A 21 Front Airbag Sensor LH
- A 22 Windshield Wiper Motor Assembly
- A 23 Windshield Washer Motor and Pump Assembly
- A 24 Low Pitched Horn Assembly
- A 25 High Pitched Horn Assembly
- A 26 Security Horn Assembly
- A 27 Engine Hood Courtesy Switch
- A 28 Fog Light Assembly LH
- A 29 Headlight Assembly LH
- A 30 Headlight Assembly LH
- A 31 Headlight Assembly RH
- A 32 Headlight Assembly LH
- A 33 Headlight Assembly RH
- A 34 Headlight Assembly RH
- A 35 Headlight Assembly LH
- A 36 Headlight Assembly RH
- A 37 Headlight Cleaner Motor and Pump Assembly
- A 38 Headlight Cleaner Control Relay
- A 39 Wireless Door Lock Buzzer
- A 42 Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Assembly)
- A 45 Headlight Assembly RH



Position of Parts in Engine Compartment <RHD 1KD-FTV>



A1  
Black




A2  
Black




A4  
Black


A7  
Black

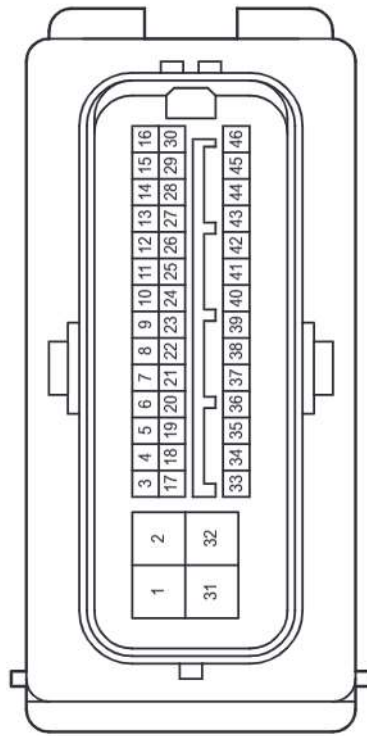


A8  
Black

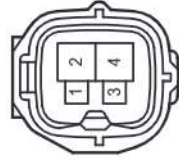


A15  
Black

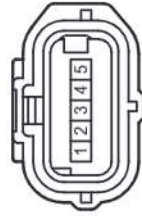


A20  
Yellow

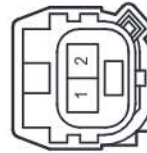


A21  
Yellow

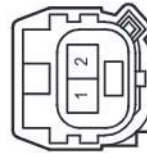

A22  
Black

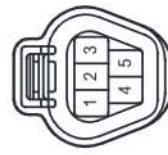

A23  
Dark Gray

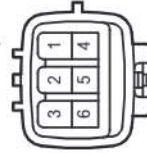

A24  
Black



 
A25  
Black




A26  
Black




A27  
Black



A28  
Black

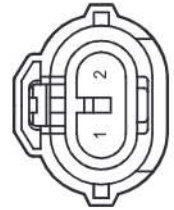

A29  
Black

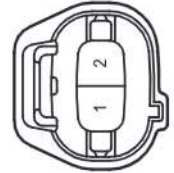

A30  
Gray



A31

A32


A33

A34

A35

Position of Parts in Engine Compartment <RHD 1KD-FTV>


A36  
Black

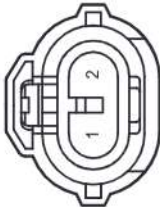

A37  
Black



A38  
Gray

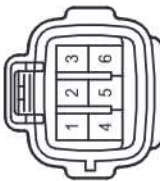

A39  
Gray




A42  
Gray



A45  
Black







Position of Parts in Engine Compartment <RHD 1KD-F TV>

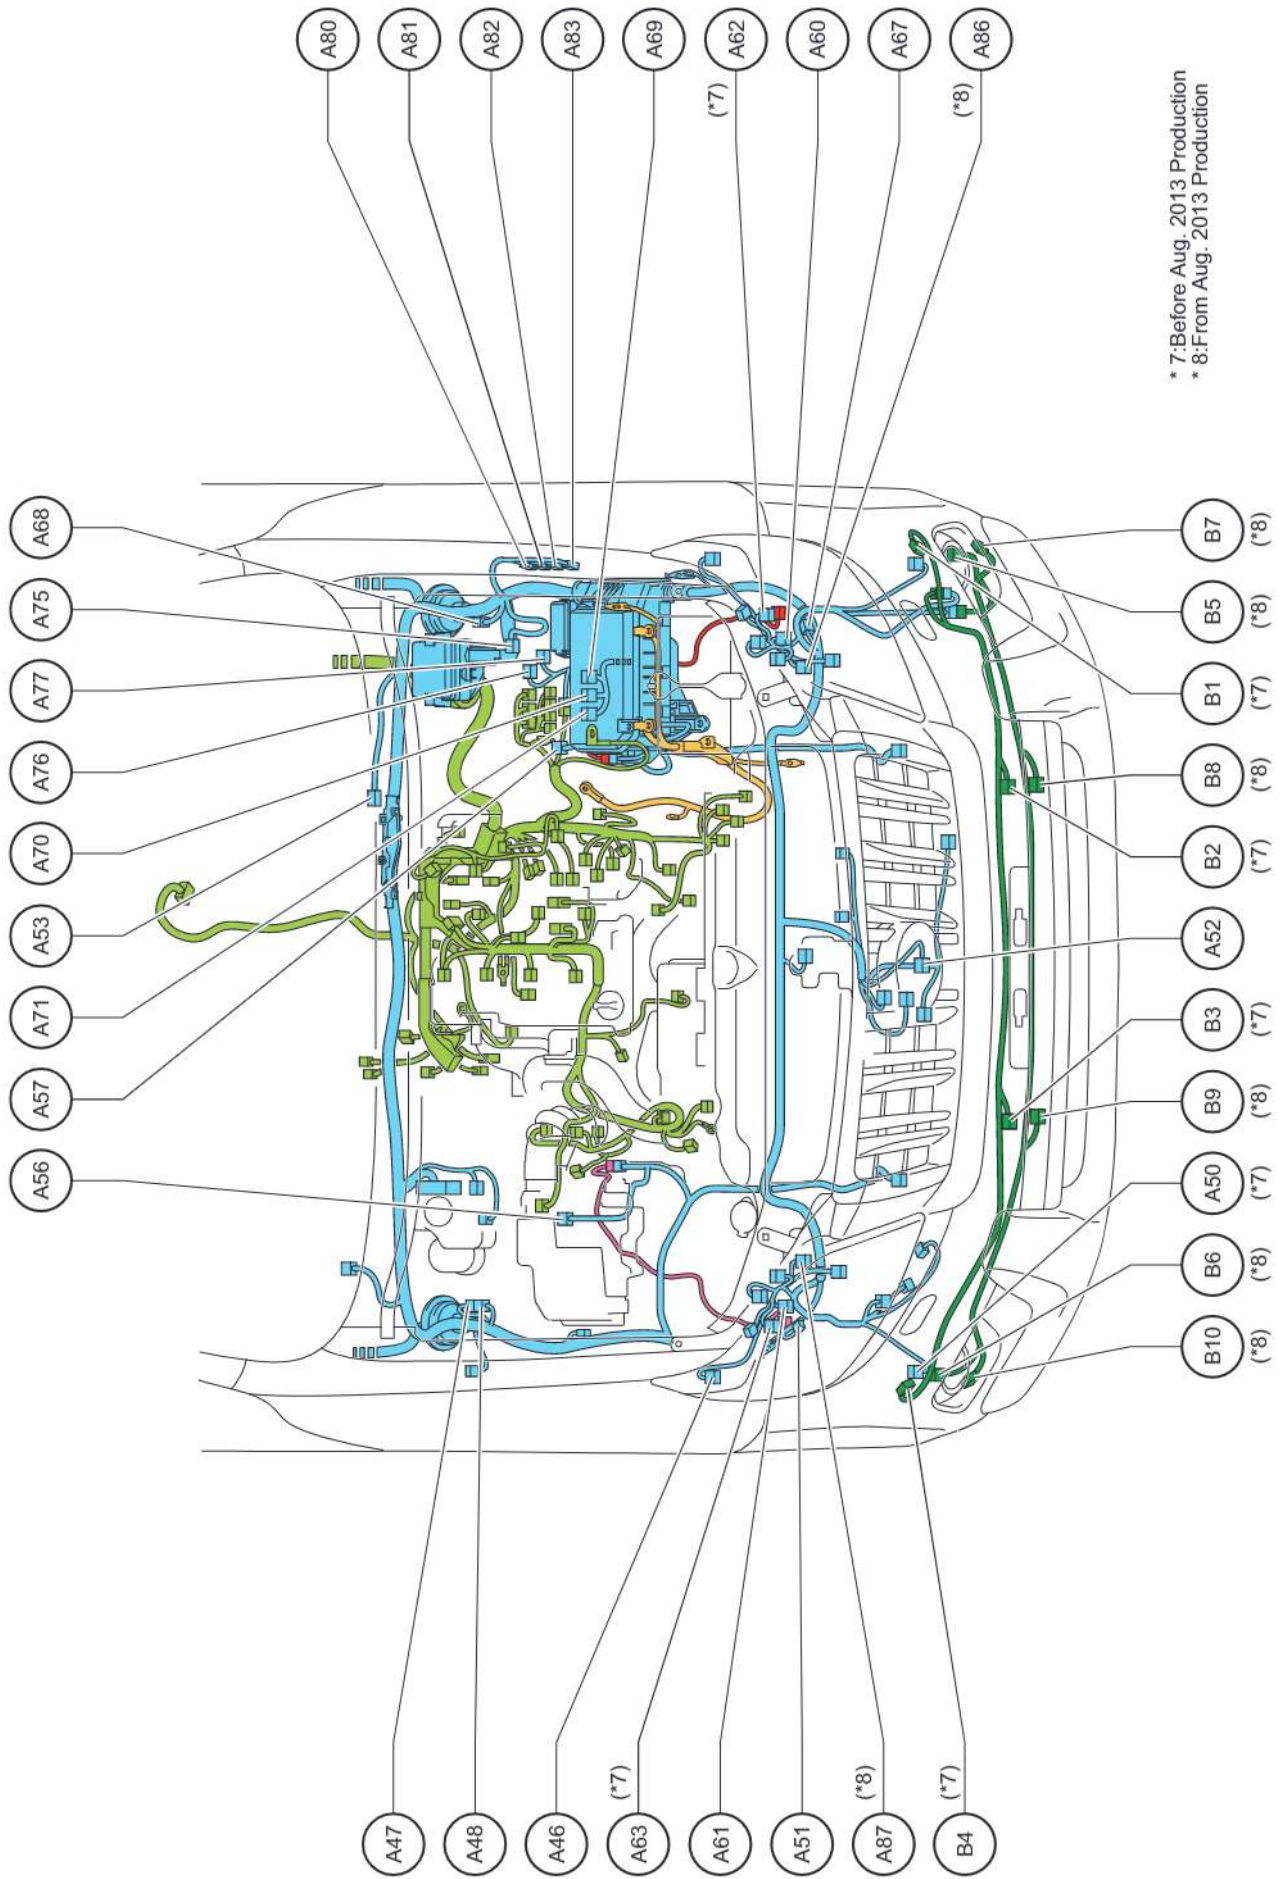

\* 7: Before Aug. 2013 Production  
\* 8: From Aug. 2013 Production

- A 46 Headlight Assembly RH
- A 47 Short Connector
- A 48 Short Connector
- A 50 Fog Light Assembly RH
- A 51 Noise Filter (Condenser Fan)
- A 52 Front Television Camera Assembly
- A 53 Front Wiper Deicer (Windshield Glass)
- A 56 Front Absorber Control Actuator RH
- A 57 Front Absorber Control Actuator LH
- A 60 Headlight Assembly LH
- A 61 Headlight Assembly RH
- A 62 Headlight Assembly LH
- A 63 Headlight Assembly RH
- A 67 Junction Connector
- A 68 Junction Connector
- A 69 Junction Connector
- A 70 Junction Connector
- A 71 Junction Connector
- A 75 Fuel Filter Warning Switch
- A 76 Level Warning Switch (Fuel Filter Assembly)
- A 77 Fuel Heater Assembly
- A 80 Glow Plug Controller
- A 81 Glow Plug Controller
- A 82 Glow Plug Controller
- A 83 Glow Plug Controller
- A 86 Headlight Assembly LH
- A 87 Headlight Assembly RH
- B 1 Front No. 1 Ultrasonic Sensor LH
- B 2 Front No. 1 Ultrasonic Sensor Center LH
- B 3 Front No. 1 Ultrasonic Sensor Center RH
- B 4 Front No. 1 Ultrasonic Sensor RH
- B 5 Fog Light Assembly LH
- B 6 Fog Light Assembly RH
- B 7 Front No. 1 Ultrasonic Sensor LH
- B 8 Front No. 1 Ultrasonic Sensor Center LH
- B 9 Front No. 1 Ultrasonic Sensor Center RH
- B 10 Front No. 1 Ultrasonic Sensor RH

Position of Parts in Engine Compartment <RHD 1KD-FTV>

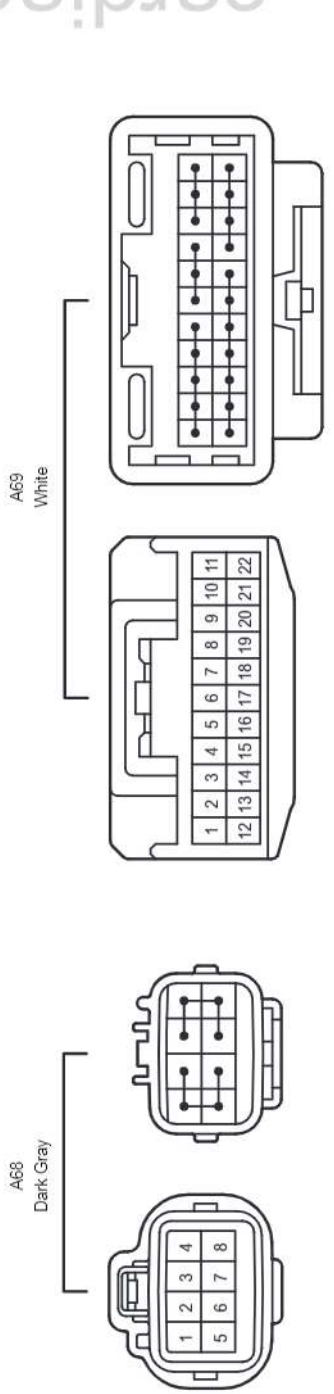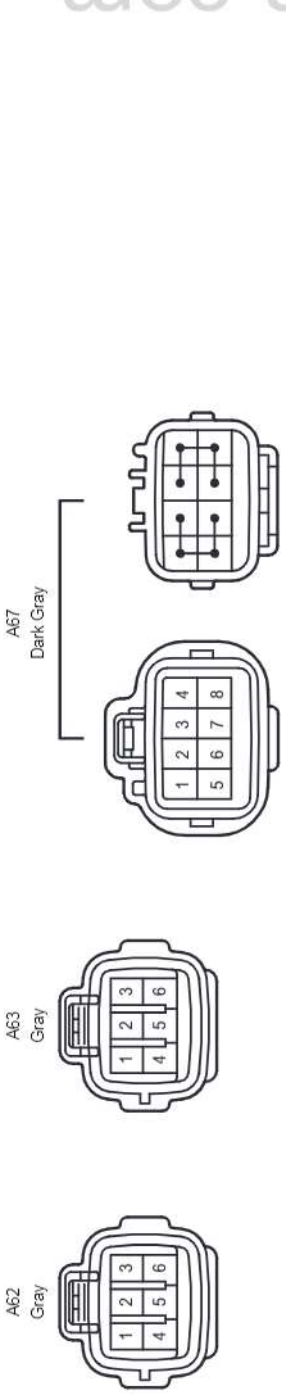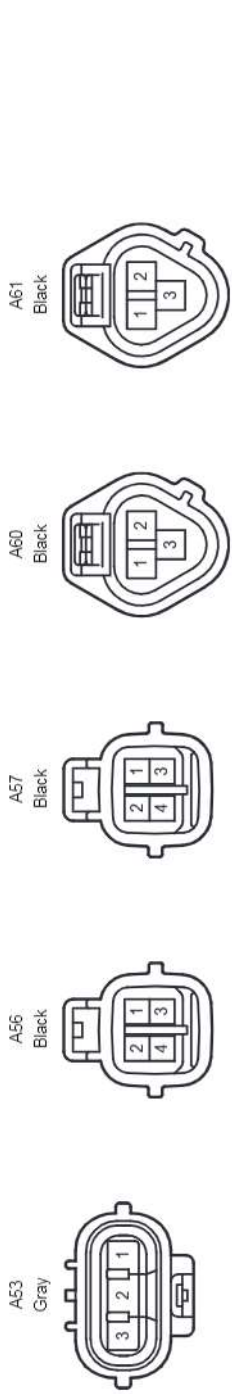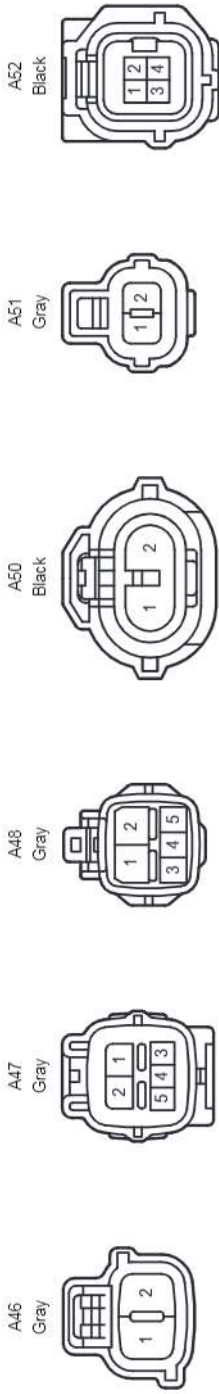


A75 Gray

A71 White


A70 White

cardiagn.com

Position of Parts in Engine Compartment <RHD 1KD-FTV>

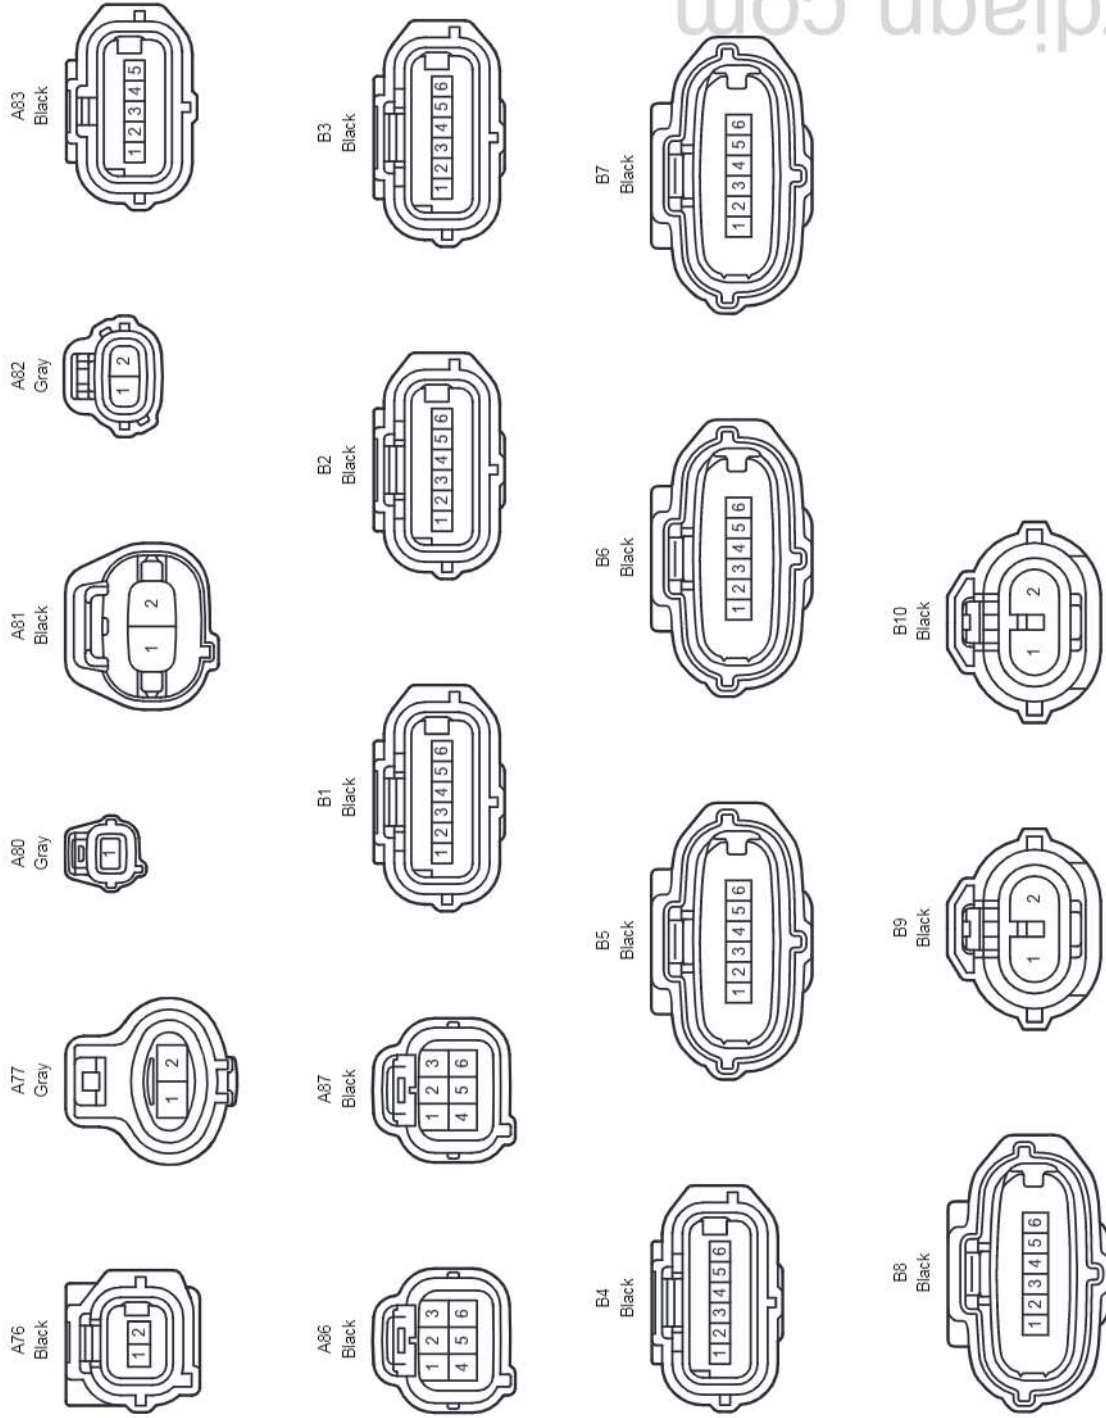

Position of Parts in Engine Compartment <RHD 1KD-FTV>















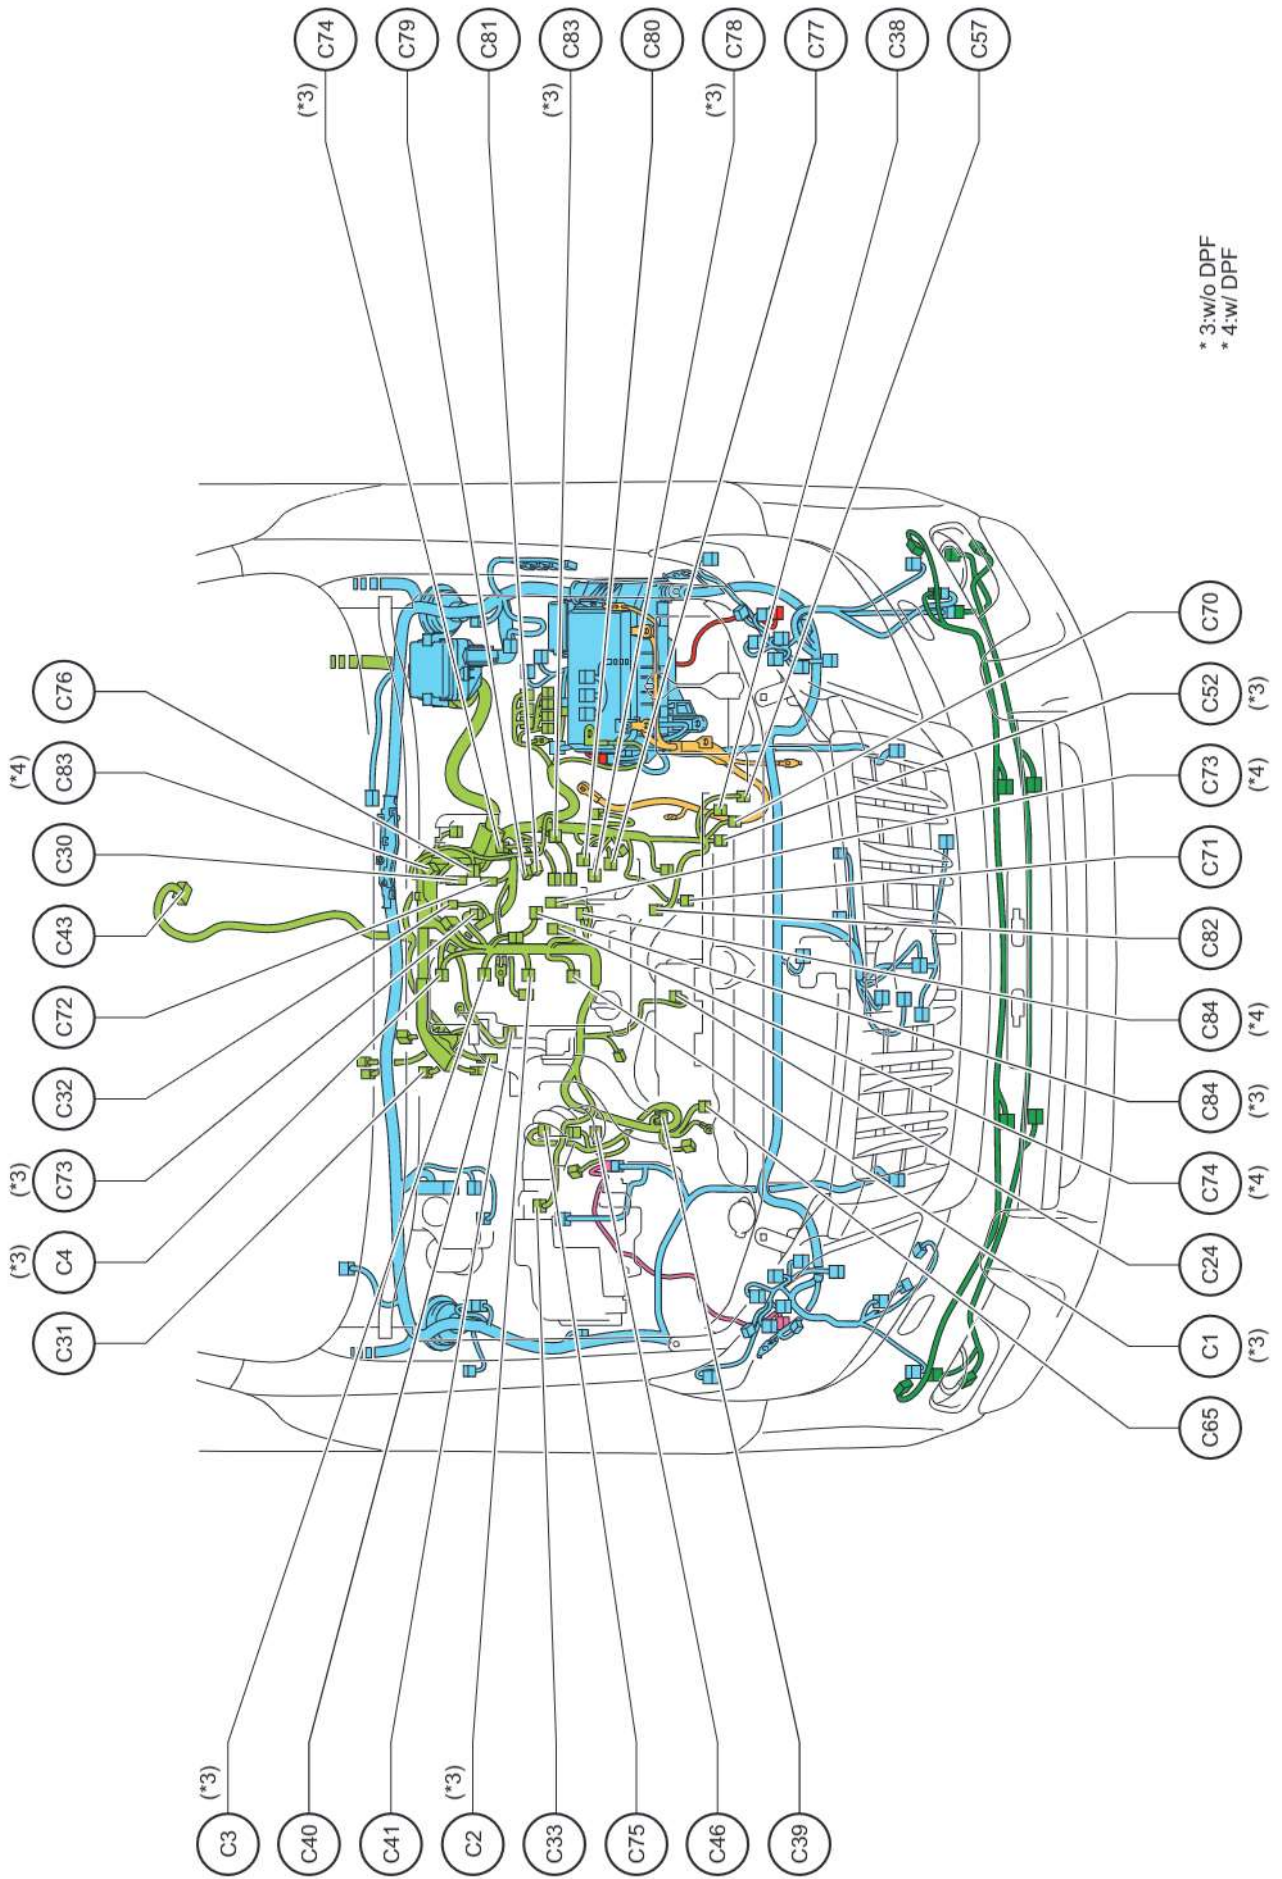


\* 3:w/o DPF  
+ 4:w/ DPF









- C 1 Fuel Injector Assembly No. 1
- C 2 Fuel Injector Assembly No. 2
- C 3 Fuel Injector Assembly No. 3
- C 4 Fuel Injector Assembly No. 4
- C 24 E.F.I. Engine Coolant Temperature Sensor
- C 30 Electronically Controlled Transmission Solenoid
- C 31 Transmission Revolution Sensor (Counter Gear)
- C 32 Transmission Revolution Sensor (Turbine)
- C 33 Intake Mass Air Flow Meter Sub-Assembly
- C 38 Vane Pump Assembly
- C 39 Cooler Compressor Assembly
- C 40 Park/Neutral Position Switch
- C 41 Back-Up Light Switch Assembly
- C 43 Transfer Shift Actuator Assembly
- C 46 Engine Oil Level Sensor
- C 52 Cam Position Sensor
- C 57 Power Steering Oil Pressure Switch
- C 65 Generator Assembly
- C 70 Crank Position Sensor
- C 71 Suction Control Valve
- C 72 Pressure Discharge Valve
- C 73 Diesel Throttle Body Assembly
- C 74 Diesel Throttle Body Assembly
- C 75 DC Motor
- C 76 Electric Vacuum Regulating Valve Assembly
- C 77 VSV (for EGR Cut)
- C 78 No. 2 EGR Valve Assembly
- C 79 VSV (for No. 2 Swirl Control Valve)
- C 80 VSV (for Engine Mounting)
- C 81 VSV (for No. 1 Swirl Control Valve)
- C 82 Fuel Pressure Sensor
- C 83 Vacuum Sensor (Diesel Turbo Pressure Sensor)
- C 84 Intake Air Temperature Sensor



Position of Parts in Engine Compartment <RHD 1KD-FTV>

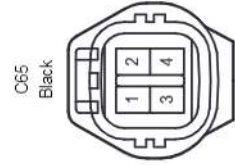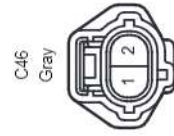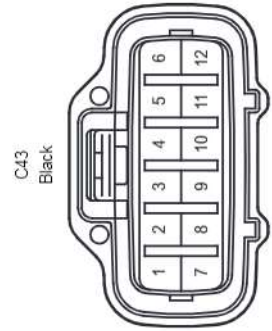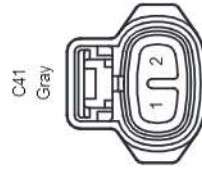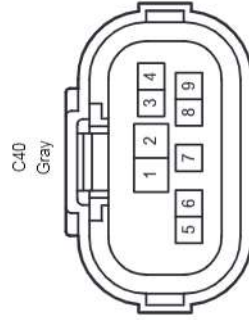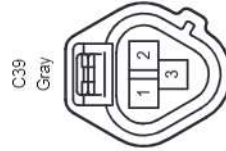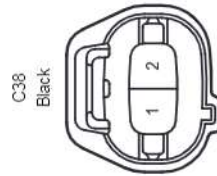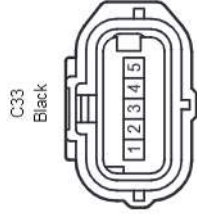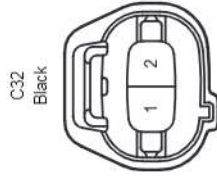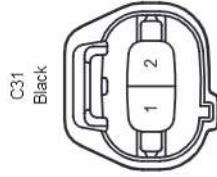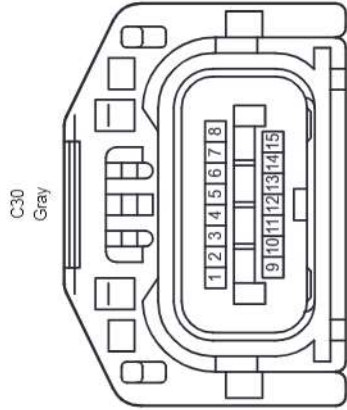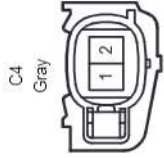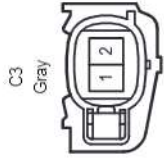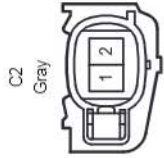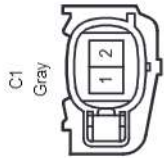

















Position of Parts in Engine Compartment <RHD 1KD-FTV>

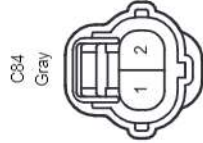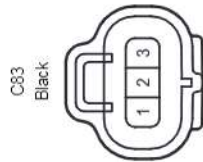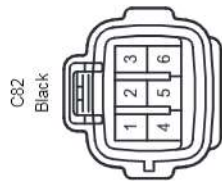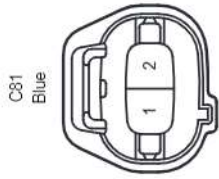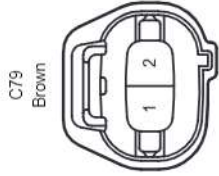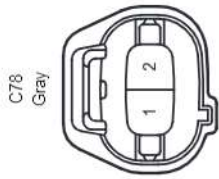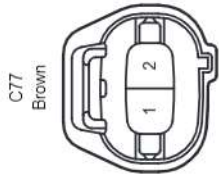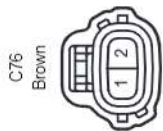





- C 85 Fuel Temperature Sensor
- C 86 Electric EGR Control Valve Sensor
- C 87 Nozzle Vane Position Sensor
- C 88 Injector Driver
- C 89 Injector Driver
- C 94 Viscous with Magnet Clutch Heater Assembly
- C 95 Starter Assembly
- C 96 Engine Oil Pressure Switch Assembly
- C 97 Generator Assembly
- C 98 Glow Plug Assembly
- C 99 Injector Driver
- C115 Fuel Injector Assembly No. 1
- C116 Fuel Injector Assembly No. 2
- C117 Fuel Injector Assembly No. 3
- C118 Fuel Injector Assembly No. 4
- C119 Crank Position Sensor
- C120 No. 2 EGR Valve Assembly
- C121 Injector Driver
- C122 Injector Driver
- C123 Oil Pressure Sender Gage Assembly
- C124 Injector Driver
- C125 Injector Driver
- C126 Exhaust Fuel Addition Injector Assembly
- C127 Electric EGR Control Valve Assembly
- C128 VSV (for EGR Cooler)
- C129 Differential Pressure Sensor Assembly
- C130 Oil Pressure Switching Valve Assembly
- C131 Air Fuel Ratio Sensor
- C132 Glow Plug Assembly
- C133 No. 2 Exhaust Gas Temperature Sensor
- C134 No. 3 Exhaust Gas Temperature Sensor
- C135 No. 1 Exhaust Gas Temperature Sensor
- D 5 Starter Assembly
- D 6 Starter Assembly
- p 1 Front Speed Sensor RH
- p 2 Front Speed Sensor LH

 Position of Parts in Engine Compartment <RHD 1KD-FTV>

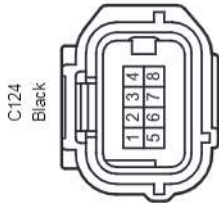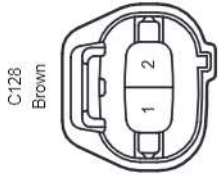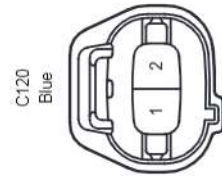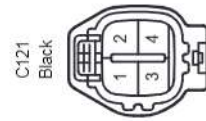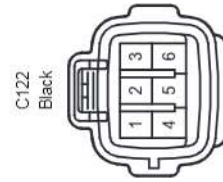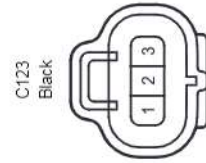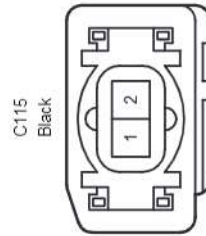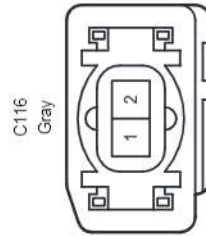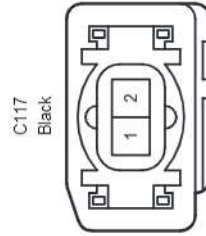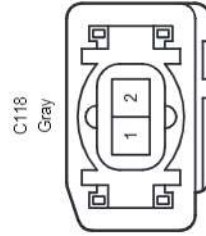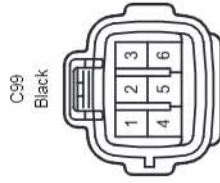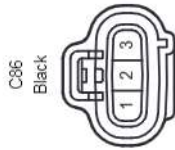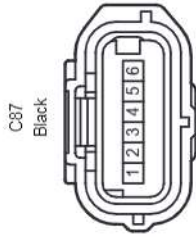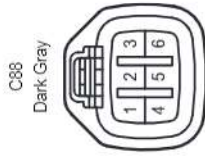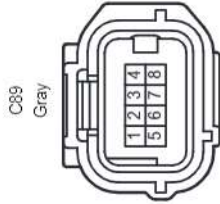


cardiagn.com

Position of Parts in Engine Compartment <RHD 1KD-FTV>

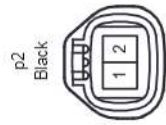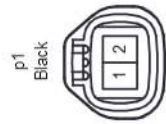


Wire and Wire , Ground Points in Engine Compartment <RHD 1KD-FTV>

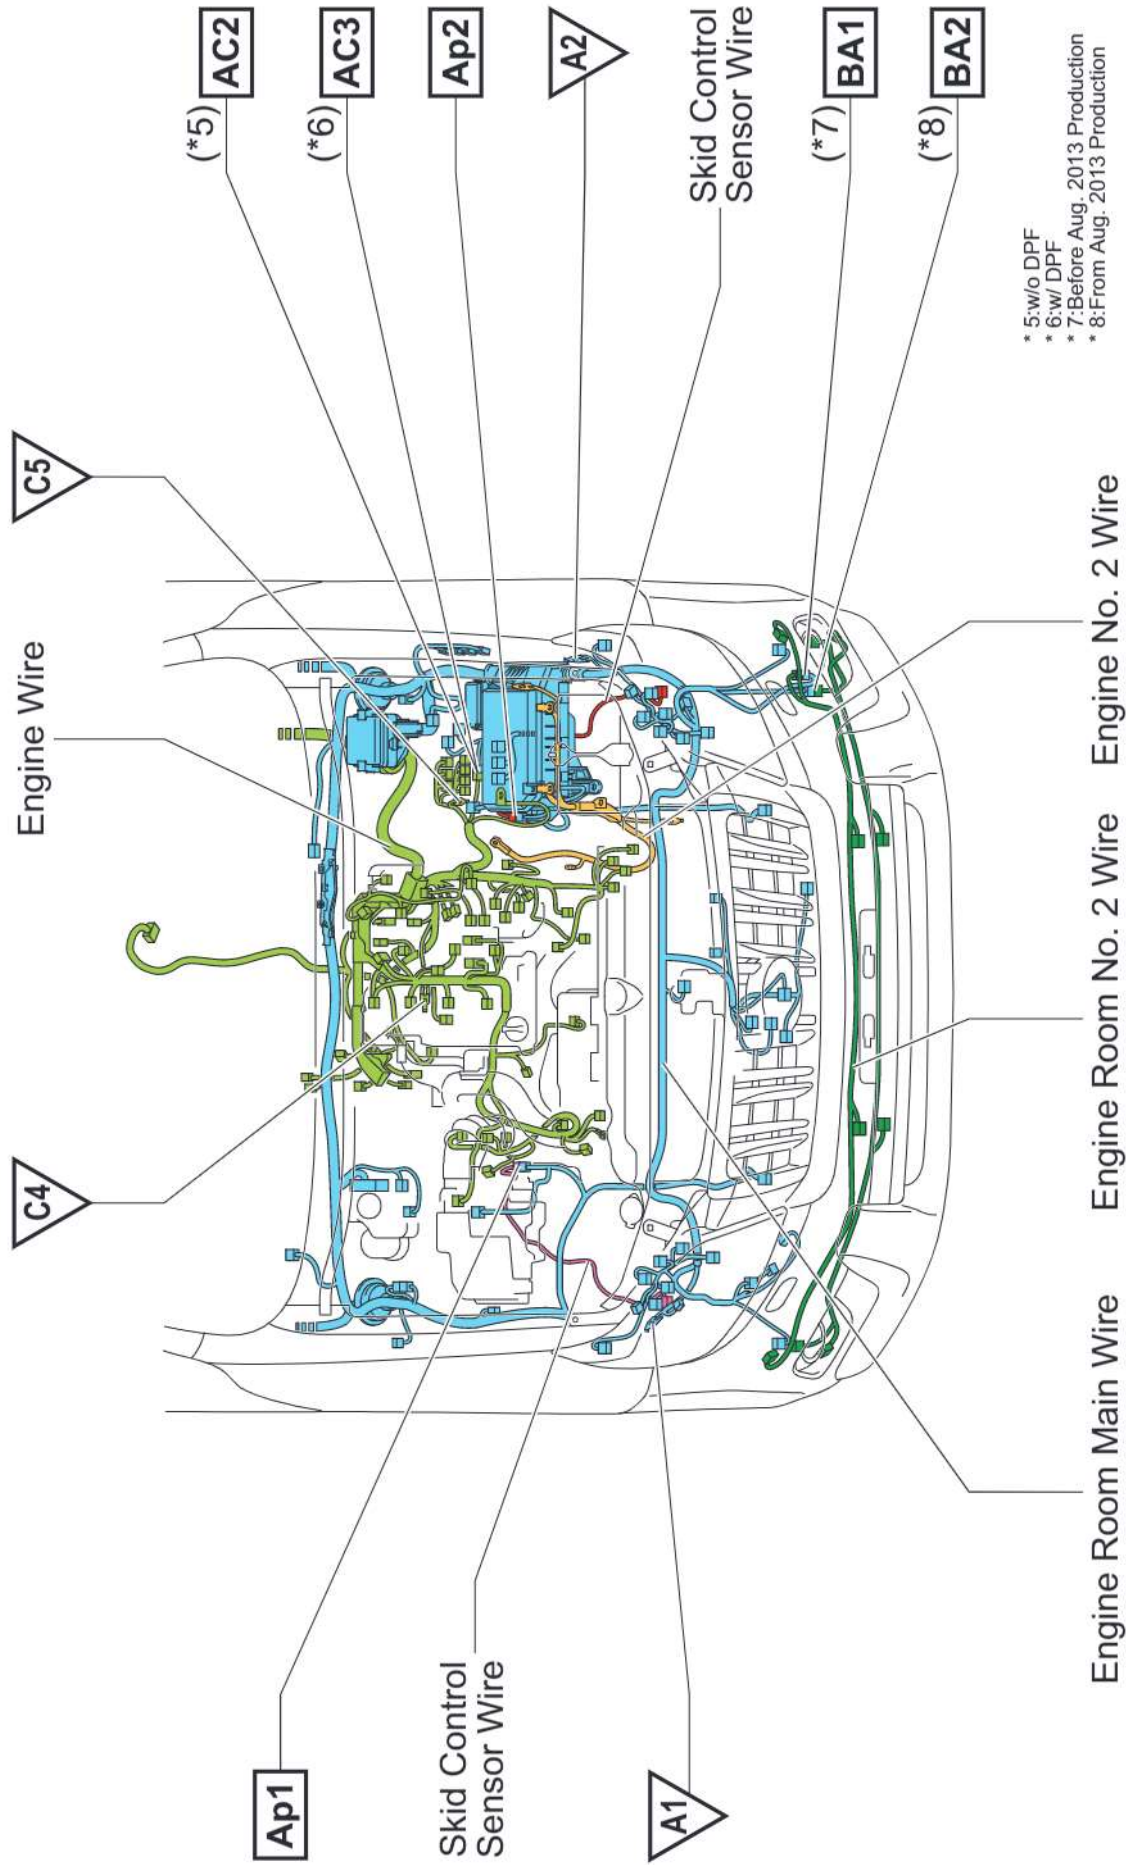


- \* 5:w/o DPF
- \* 6:w/ DPF
- \* 7:Before Aug. 2013 Production
- \* 8:From Aug. 2013 Production

Wire and Wire , Ground Points in Engine Compartment <RHD 1KD-FTV>

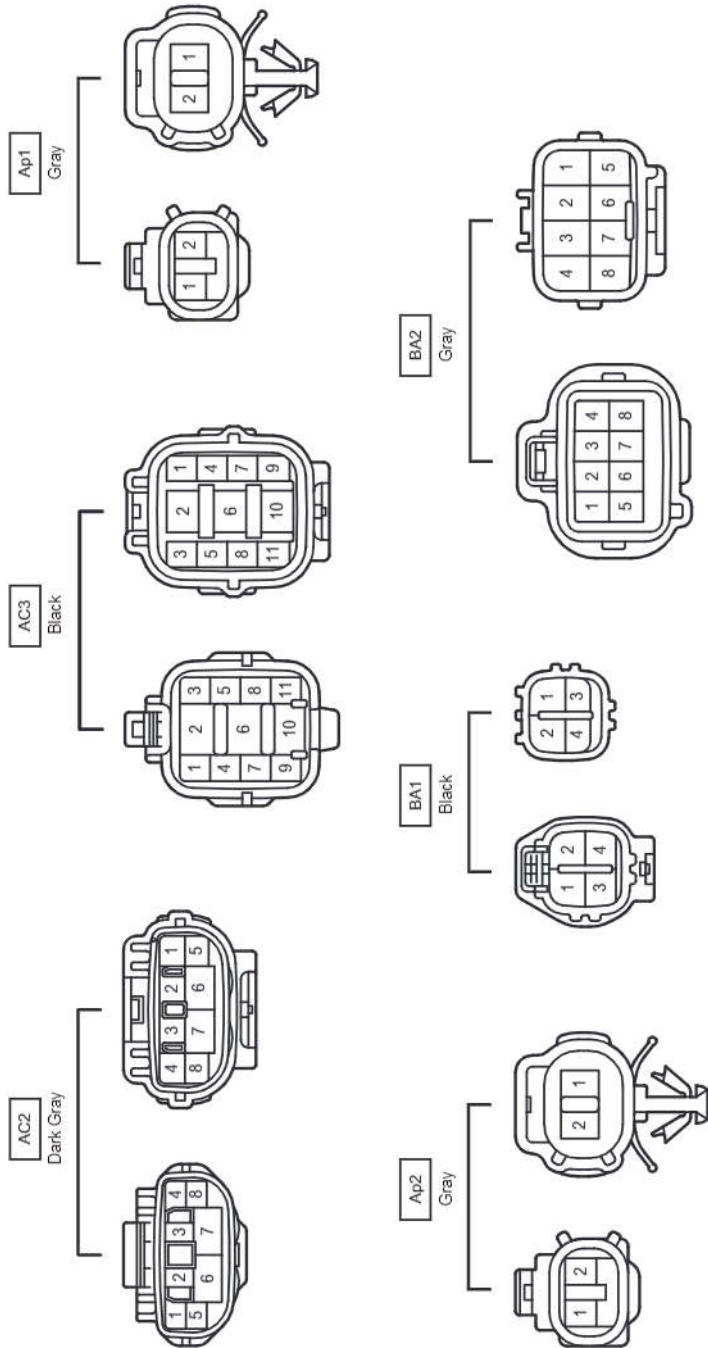



Position of Parts in Engine Compartment <LHD 2TR-FE>

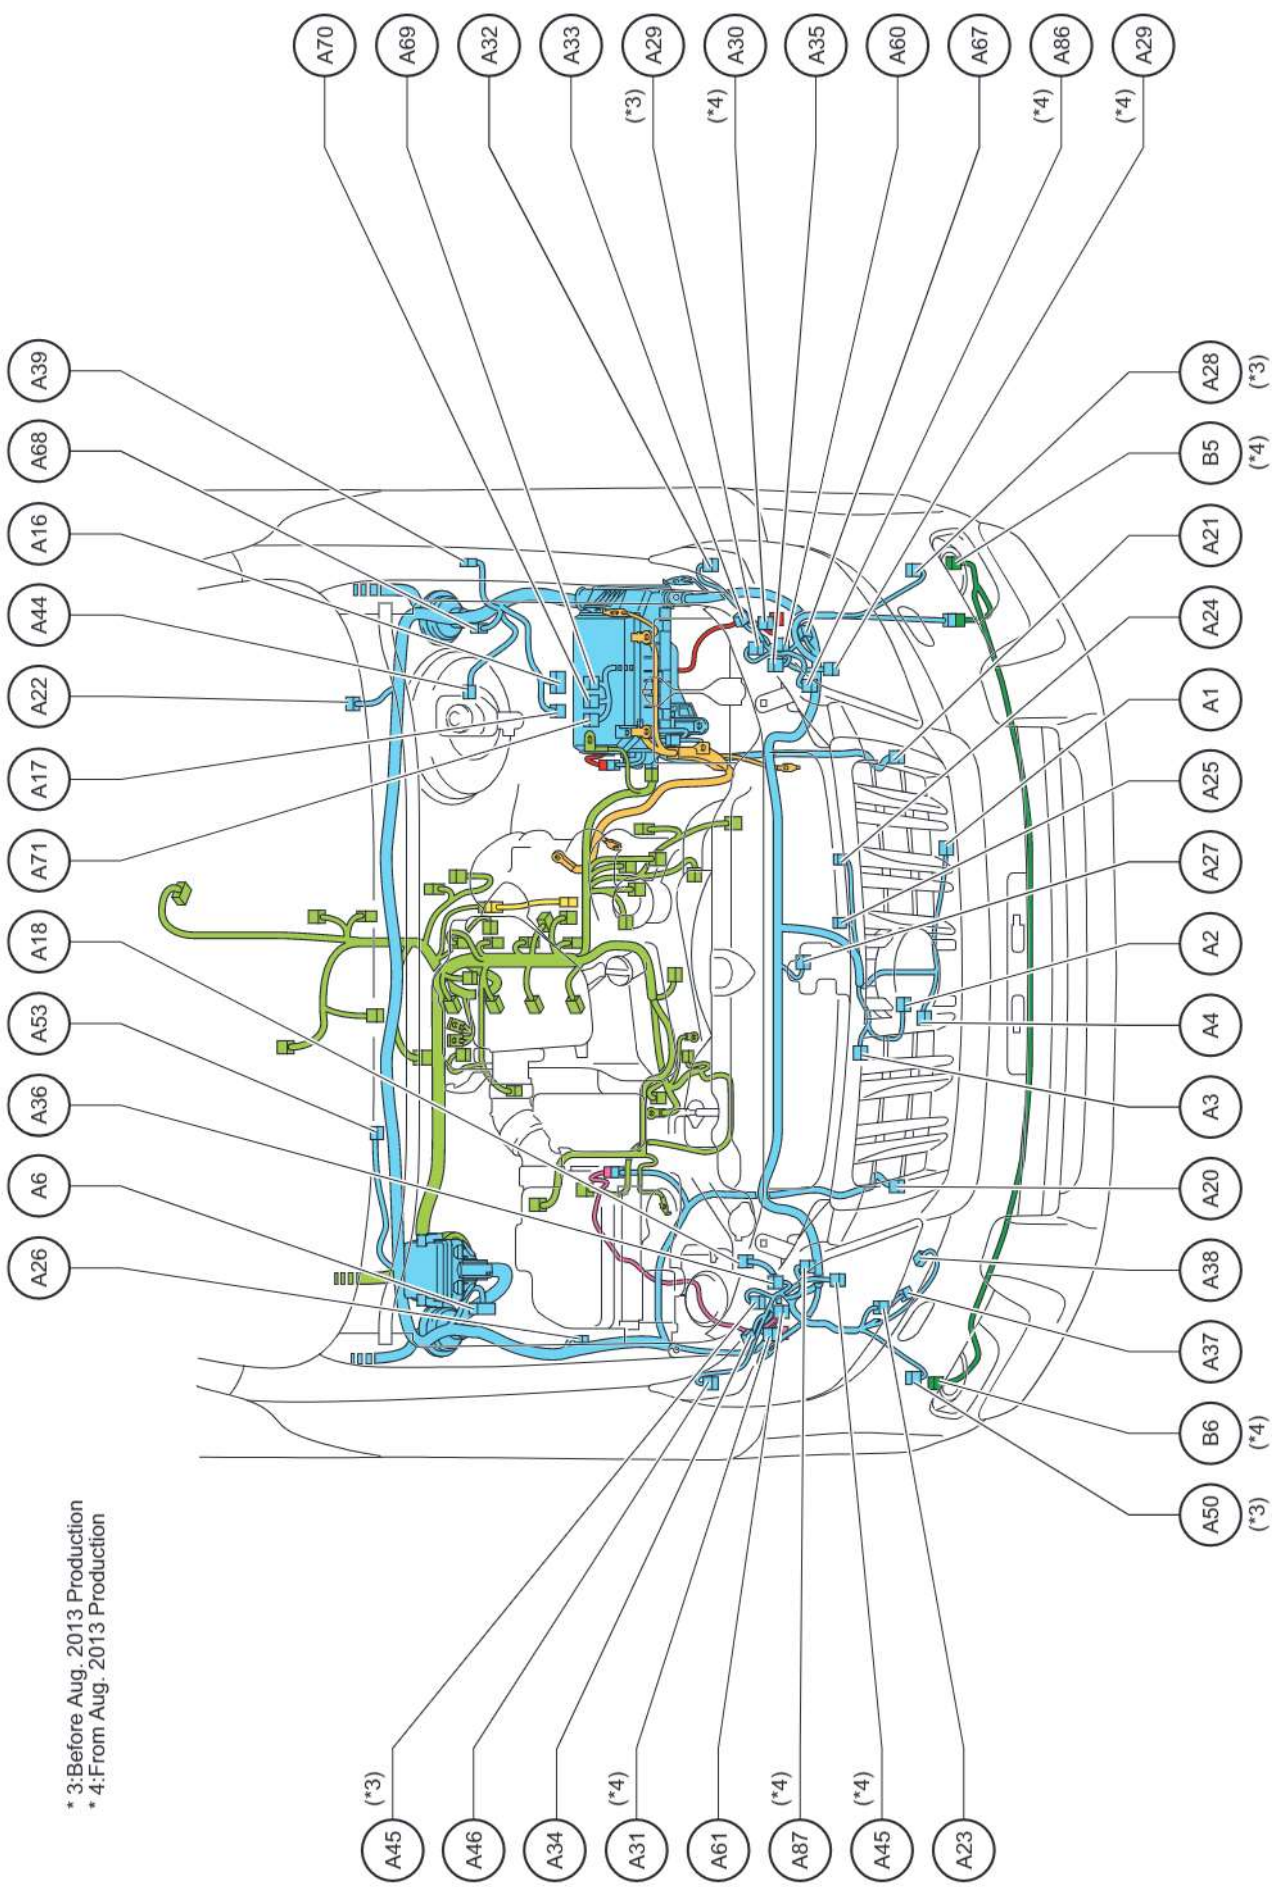

\* 3: Before Aug. 2013 Production  
 \* 4: From Aug. 2013 Production

- A 1 Ambient Temperature Sensor
- A 2 A/C Pressure Sensor
- A 3 No. 1 Pressure Switch
- A 4 Condenser Fan Motor (With Shroud Blower Assembly)
- A 6 Brake Actuator Assembly
- A 16 Air Injection Control Driver
- A 17 Air Injection Control Driver
- A 18 Inlet Air Pump
- A 20 Front Airbag Sensor RH
- A 21 Front Airbag Sensor LH
- A 22 Windshield Wiper Motor Assembly
- A 23 Windshield Washer Motor and Pump Assembly
- A 24 Low Pitched Horn Assembly
- A 25 High Pitched Horn Assembly
- A 26 Security Horn Assembly
- A 27 Engine Hood Courtesy Switch
- A 28 Fog Light Assembly LH
- A 29 Headlight Assembly LH
- A 30 Headlight Assembly LH
- A 31 Headlight Assembly RH
- A 32 Headlight Assembly LH
- A 33 Headlight Assembly RH
- A 34 Headlight Assembly RH
- A 35 Headlight Assembly LH
- A 36 Headlight Assembly RH
- A 37 Headlight Cleaner Motor and Pump Assembly
- A 38 Headlight Cleaner Control Relay
- A 39 Wireless Door Lock Buzzer
- A 44 Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Assembly)
- A 45 Headlight Assembly RH
- A 46 Headlight Assembly RH
- A 50 Fog Light Assembly RH
- A 53 Front Wiper Deicer (Windshield Glass)
- A 60 Headlight Assembly LH
- A 61 Headlight Assembly RH
- A 67 Junction Connector
- A 68 Junction Connector
- A 69 Junction Connector

Position of Parts in Engine Compartment <LHD 2TR-FE>

A1  
Black



A2  
Black




A3  
Gray




A4  
Black




A6  
Black

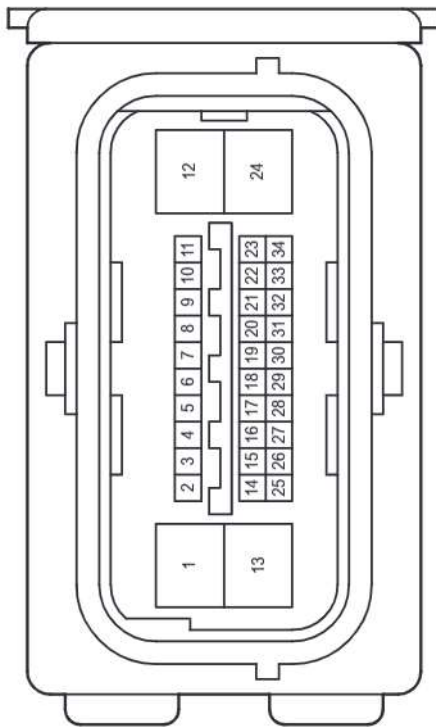


A16  
Black

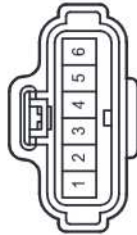


A17  
Black

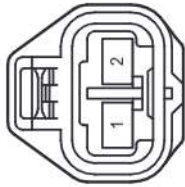


A18  
Black

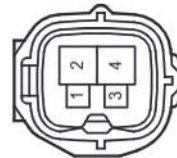


A20  
Yellow

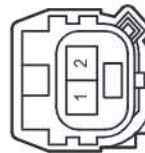


A21  
Yellow

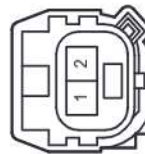

A22  
Black

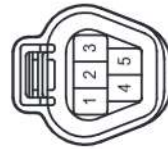

A23  
Dark Gray

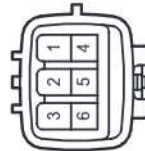

A24  
Black



A25  
Black




A26  
Black



A27  
Black




A28  
Black

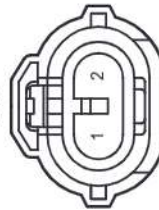

A29  
Black




A30  
Gray

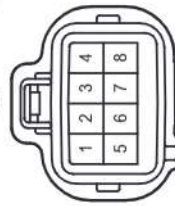

cardiagn.com

Position of Parts in Engine Compartment <LHD 2TR-FE>


A36  
Black

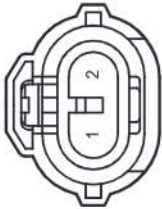


A37  
Black



A38  
Gray

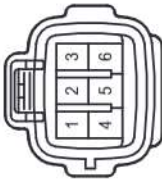


A39  
Gray

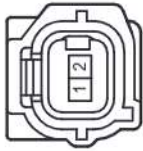

A44  
Gray




A45  
Black

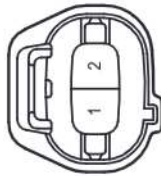


A46  
Gray




A50  
Black

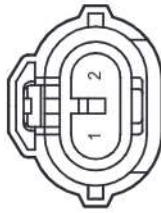

A53  
Gray

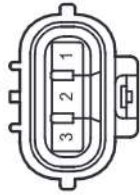

A60  
Black

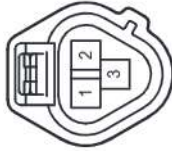


A61  
Black




A67  
Dark Gray




A68  
Dark Gray

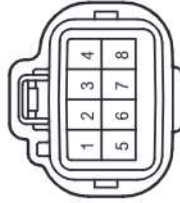

A69  
White

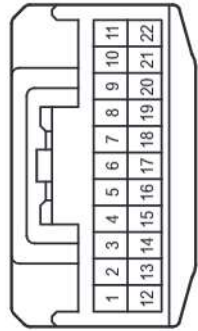

A70  
White

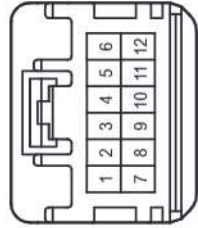

A71  
White

A86  
Black

A87  
Black


B5  
Black

cardiagn.com


Position of Parts in Engine Compartment <LHD 2TR-FE>

---

B6  
Black

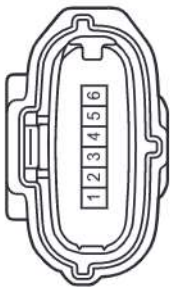






Position of Parts in Engine Compartment <LHD 2TR-FE>

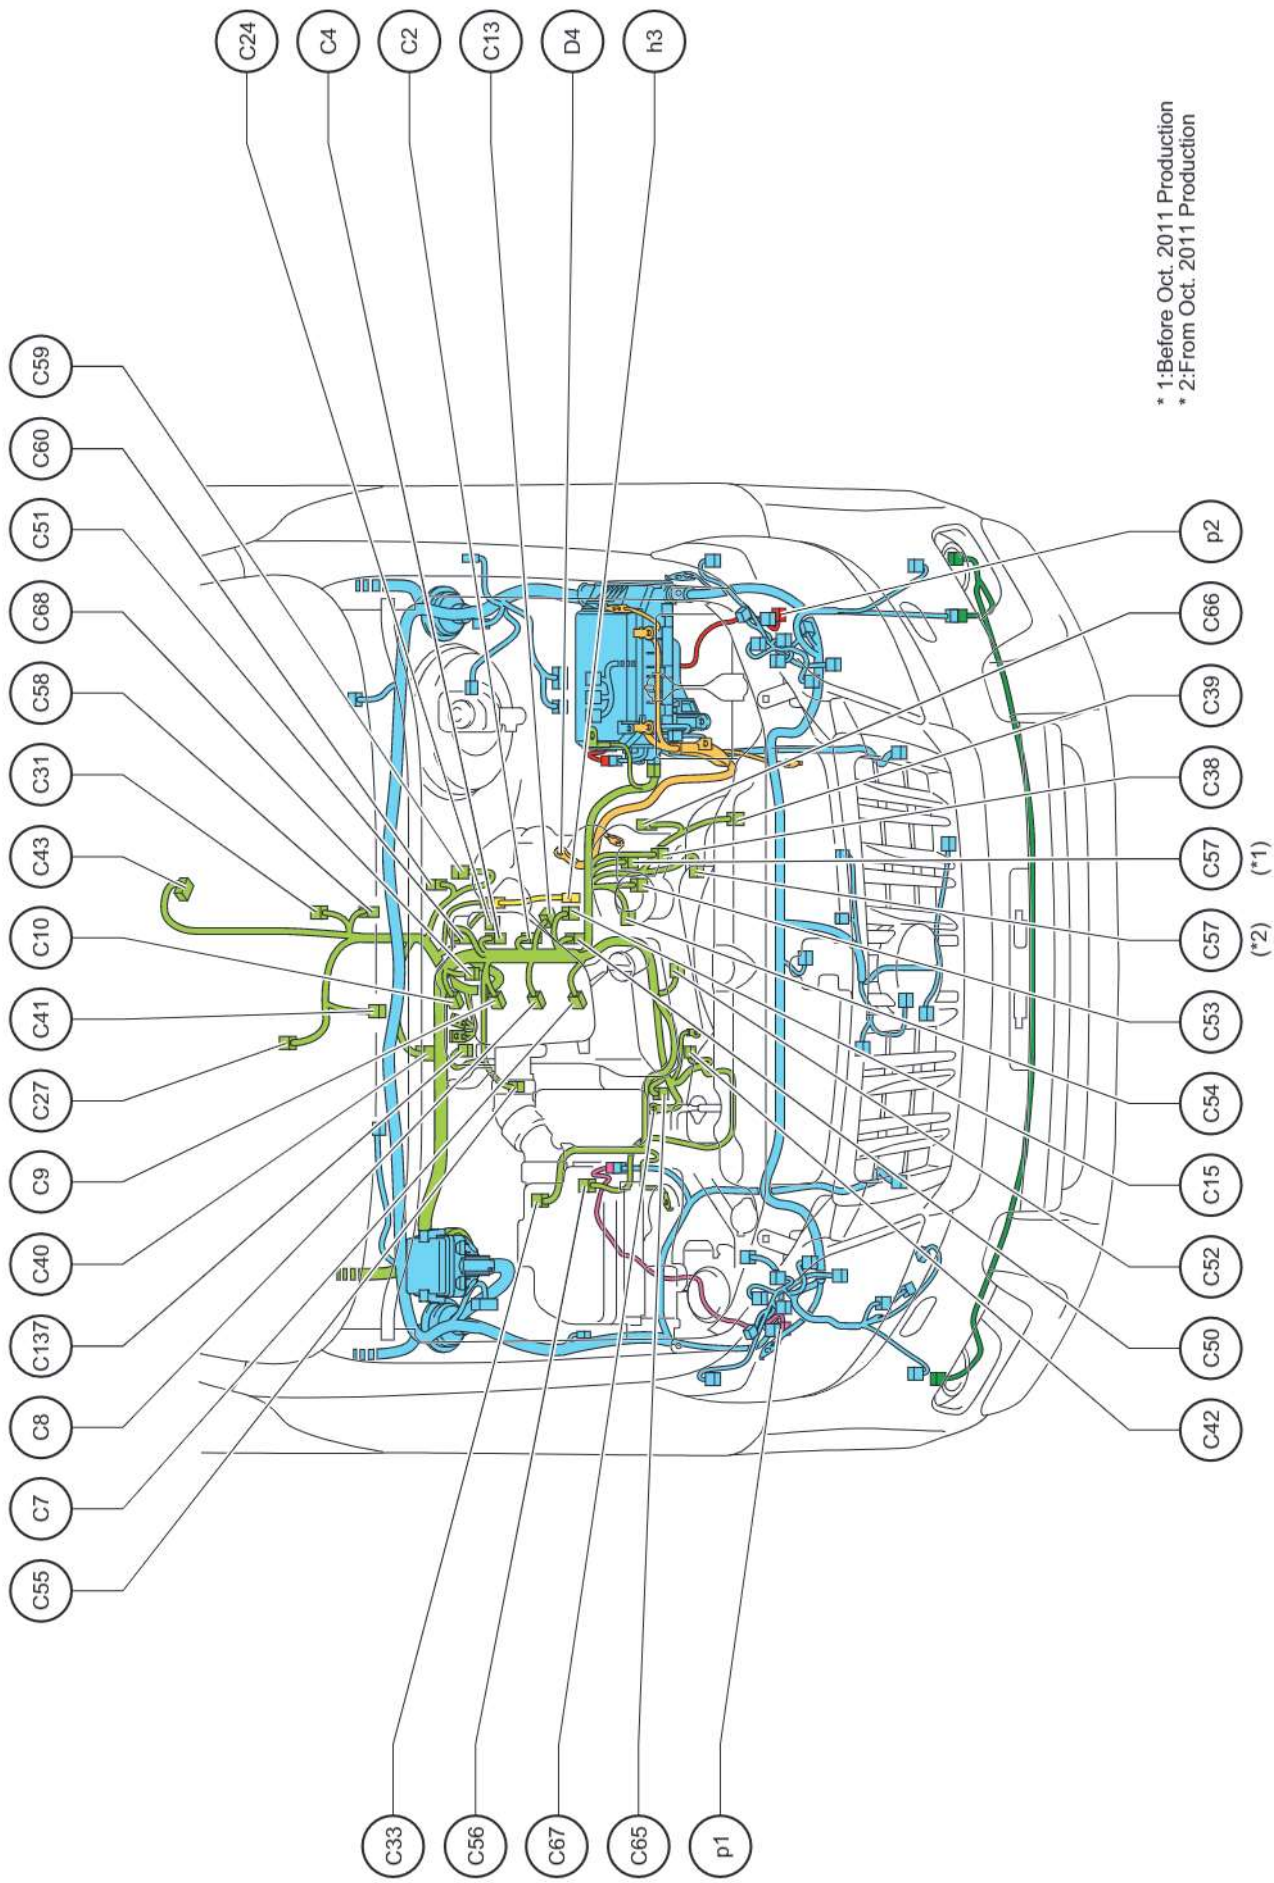

\* 1: Before Oct. 2011 Production  
 \* 2: From Oct. 2011 Production

- C 2 Fuel Injector Assembly No. 2
- C 4 Fuel Injector Assembly No. 4
- C 7 Ignition Coil Assembly No. 1
- C 8 Ignition Coil Assembly No. 2
- C 9 Ignition Coil Assembly No. 3
- C 10 Ignition Coil Assembly No. 4
- C 13 Throttle Body Assembly
- C 15 Purge VSV
- C 24 E.F.I. Engine Coolant Temperature Sensor
- C 27 Oxygen Sensor (Bank 1 Sensor 2)
- C 31 Transmission Revolution Sensor (Counter Gear)
- C 33 Intake Mass Air Flow Meter Sub-Assembly
- C 38 Vane Pump Assembly
- C 39 Cooler Compressor Assembly
- C 40 Park/Neutral Position Switch
- C 41 Back-Up Light Switch Assembly
- C 42 Engine Oil Pressure Switch Assembly
- C 43 Transfer Shift Actuator Assembly
- C 50 Fuel Injector Assembly No. 1
- C 51 Fuel Injector Assembly No. 3
- C 52 Cam Position Sensor
- C 53 Crank Position Sensor
- C 54 Cam Timing Oil Control Valve (Bank 1)
- C 55 Air Switching Valve Assembly
- C 56 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- C 57 Power Steering Oil Pressure Switch
- C 58 Electronically Controlled Transmission Solenoid
- C 59 Transmission Revolution Sensor (Turbine)
- C 60 Temperature Sensor
- C 65 Generator Assembly
- C 66 Starter Assembly
- C 67 Generator Assembly
- C 68 Noise Filter (Ignition)
- C137 Air Pressure Sensor
- D 4 Starter Assembly
- h 3 Knock Control Sensor (Bank 1)
- p 1 Front Speed Sensor RH
- p 2 Front Speed Sensor LH


Position of Parts in Engine Compartment <LHD 2TR-FE>

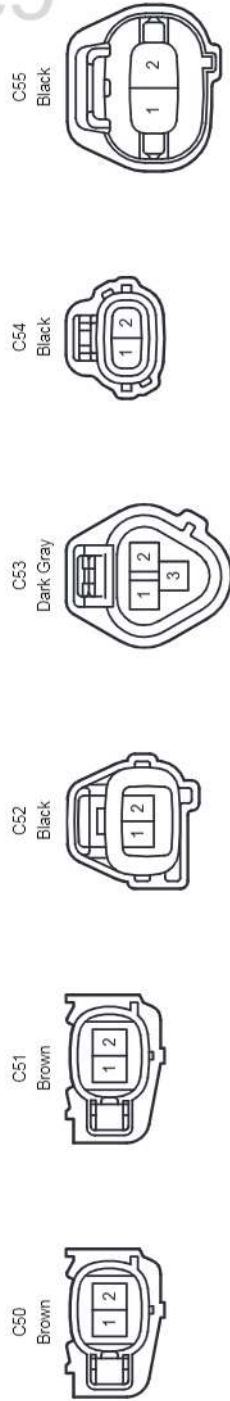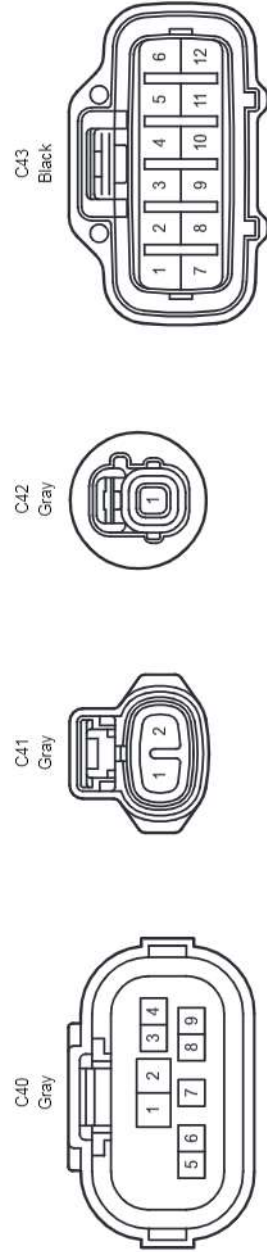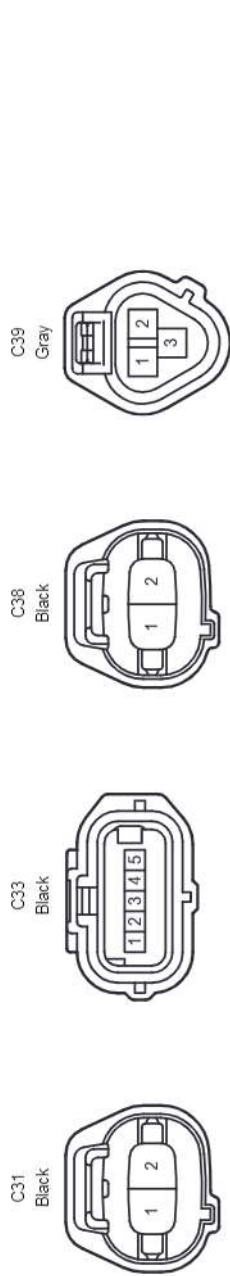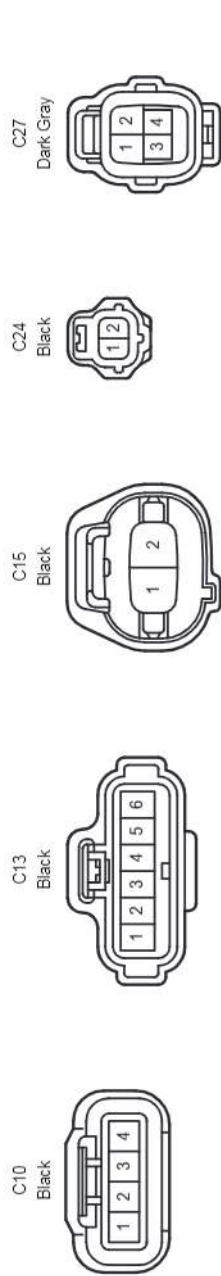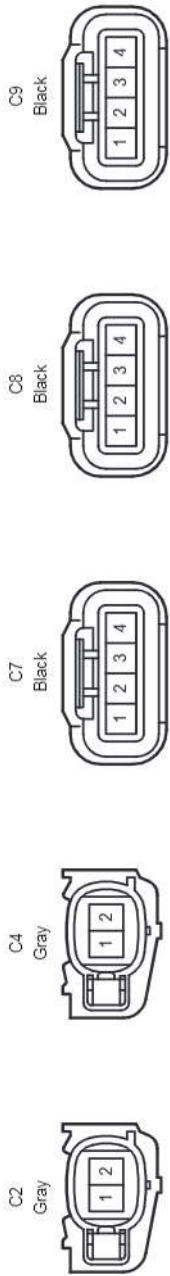



Position of Parts in Engine Compartment <LHD 2TR-FE>

 C66  
Black



C67



C68  
Gray



C137  
Black



D4



h3  
Black




p1  
Black



p2  
Black




Wire and Wire , Ground Points in Engine Compartment <LHD 2TR-FE>

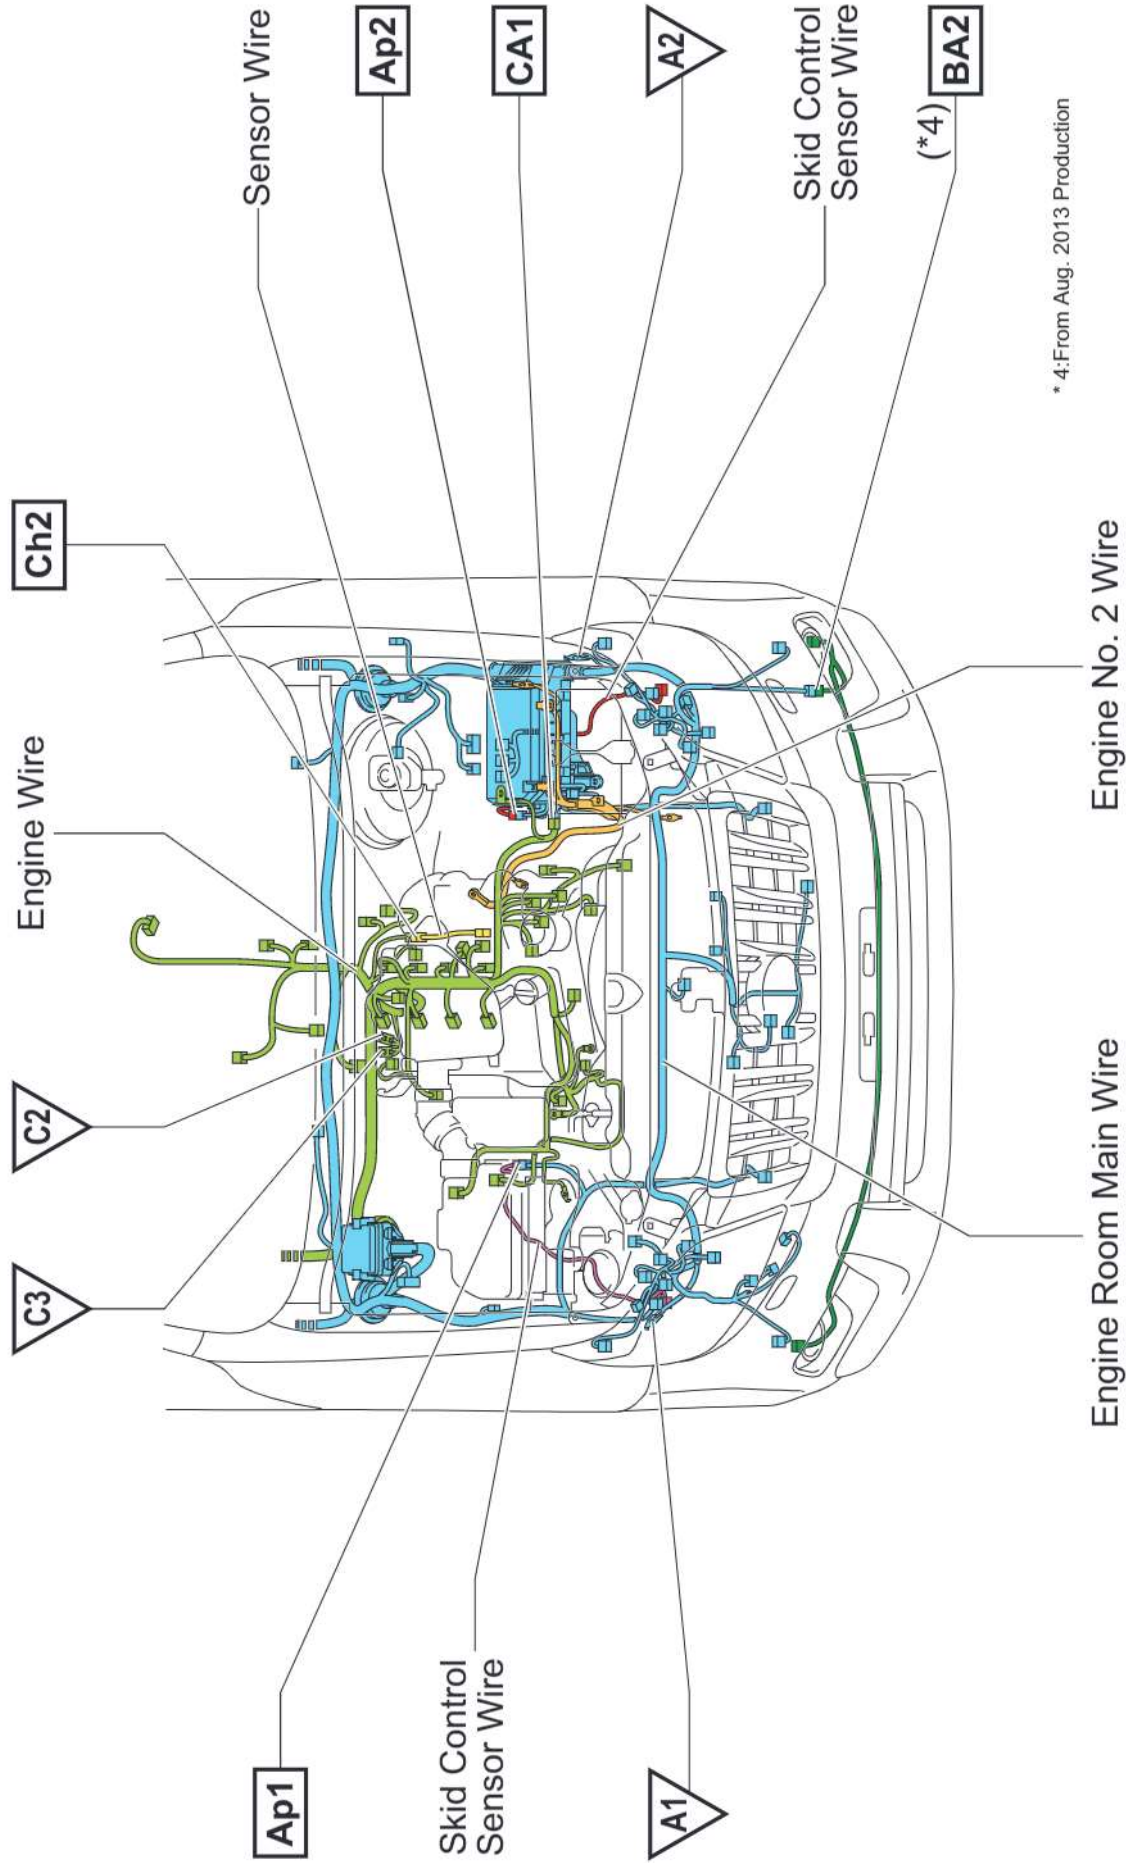


\* 4:From Aug. 2013 Production

Wire and Wire , Ground Points in Engine Compartment <LHD 2TR-FE>


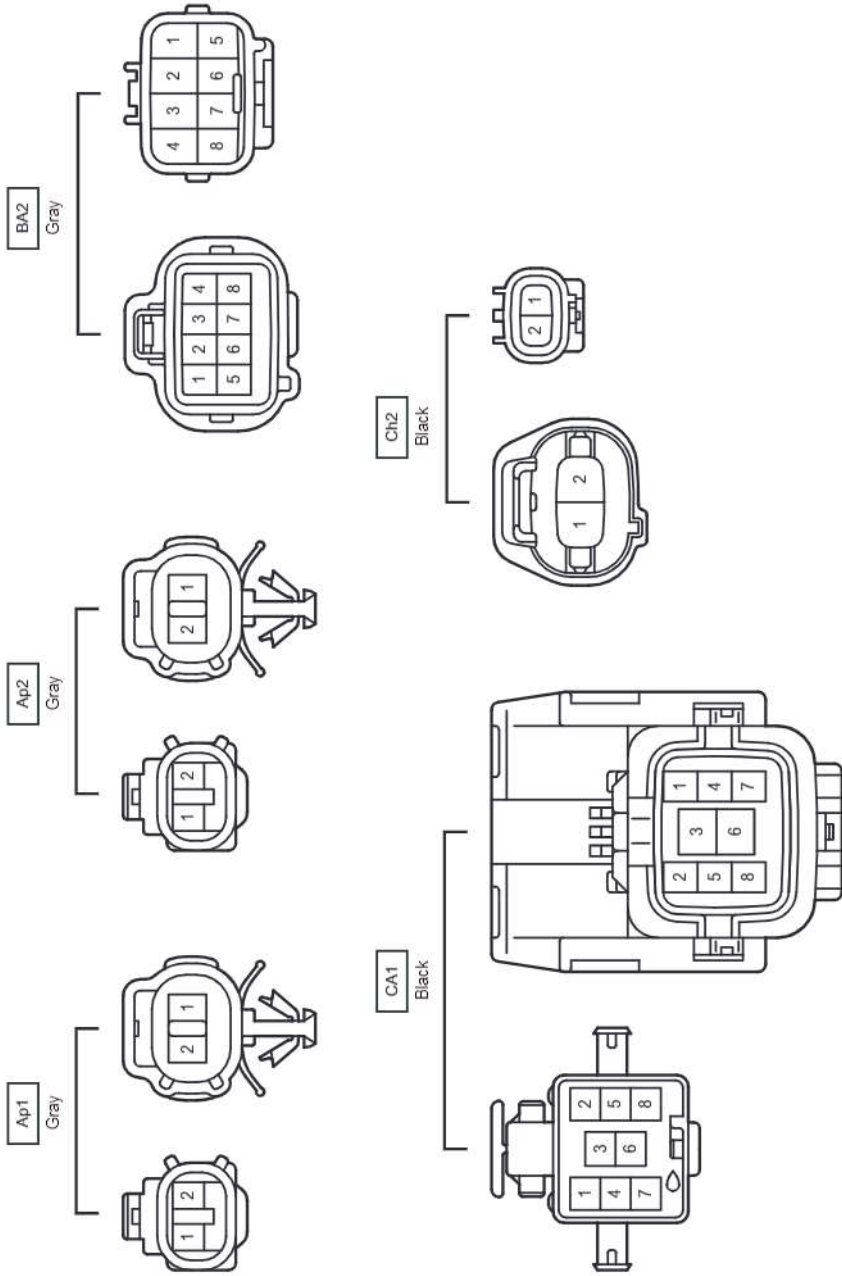


Position of Parts in Engine Compartment <RHD 2TR-FE>

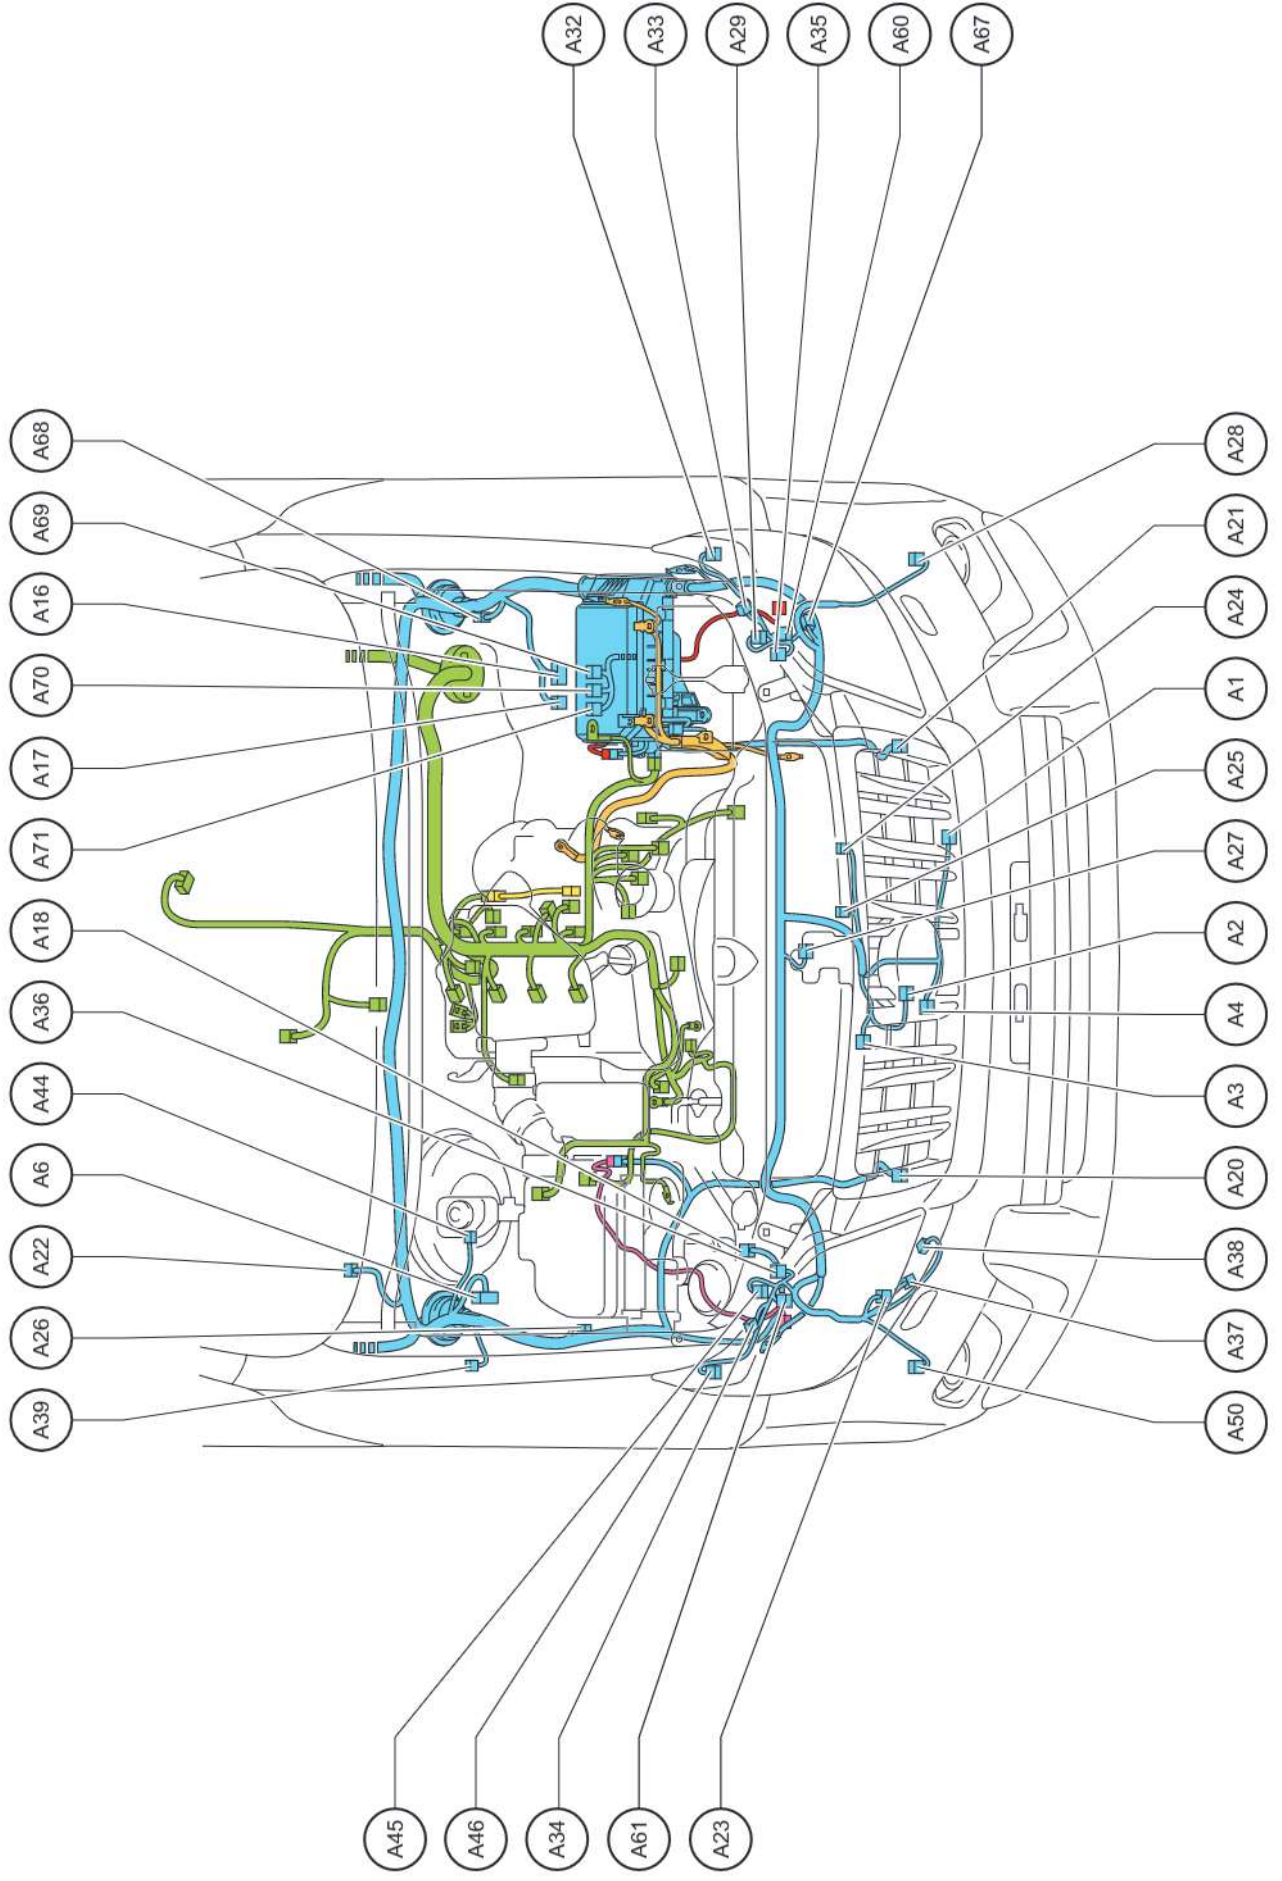


- A 1 Ambient Temperature Sensor
- A 2 A/C Pressure Sensor
- A 3 No. 1 Pressure Switch
- A 4 Condenser Fan Motor (With Shroud Blower Assembly)
- A 6 Brake Actuator Assembly
- A 16 Air Injection Control Driver
- A 17 Air Injection Control Driver
- A 18 Inlet Air Pump
- A 20 Front Airbag Sensor RH
- A 21 Front Airbag Sensor LH
- A 22 Windshield Wiper Motor Assembly
- A 23 Windshield Washer Motor and Pump Assembly
- A 24 Low Pitched Horn Assembly
- A 25 High Pitched Horn Assembly
- A 26 Security Horn Assembly
- A 27 Engine Hood Courtesy Switch
- A 28 Fog Light Assembly LH
- A 29 Headlight Assembly LH
- A 32 Headlight Assembly LH
- A 33 Headlight Assembly RH
- A 34 Headlight Assembly RH
- A 35 Headlight Assembly LH
- A 36 Headlight Assembly RH
- A 37 Headlight Cleaner Motor and Pump Assembly
- A 38 Headlight Cleaner Control Relay
- A 39 Wireless Door Lock Buzzer
- A 44 Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Assembly)
- A 45 Headlight Assembly RH
- A 46 Headlight Assembly RH
- A 50 Fog Light Assembly RH
- A 60 Headlight Assembly LH
- A 61 Headlight Assembly RH
- A 67 Junction Connector
- A 68 Junction Connector
- A 69 Junction Connector
- A 70 Junction Connector
- A 71 Junction Connector


Position of Parts in Engine Compartment <RHD 2TR-FE>

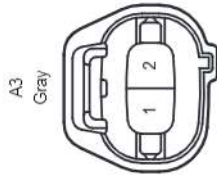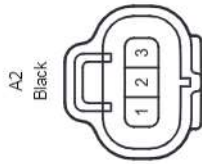


A6  
Black

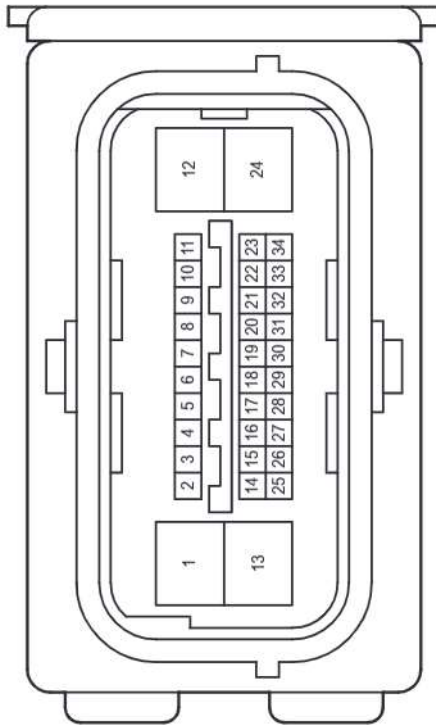


A16  
Black

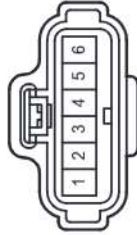


A17  
Black

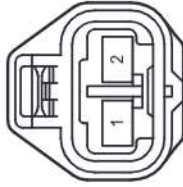


A18  
Black

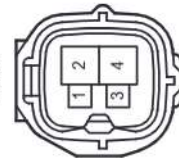


A20  
Yellow

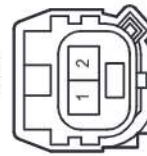


A21  
Yellow

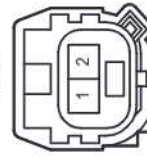

A22  
Black

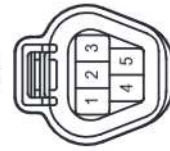

A23  
Dark Gray

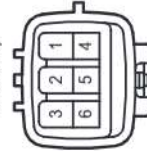

A24  
Black



 
A25  
Black




A26  
Black




A27  
Black



A28  
Black

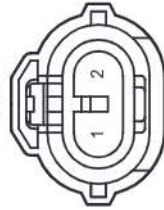














A29  
Black

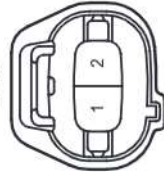

A32  
Gray




Position of Parts in Engine Compartment <RHD 2TR-FE>

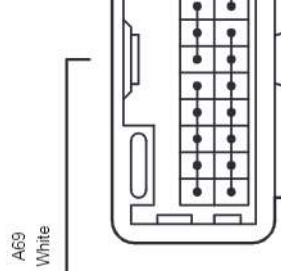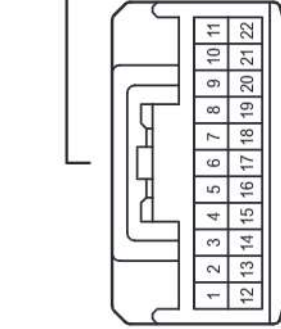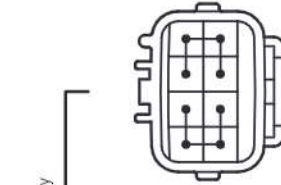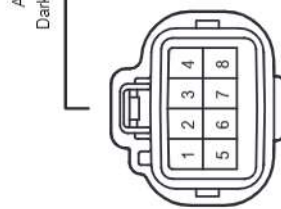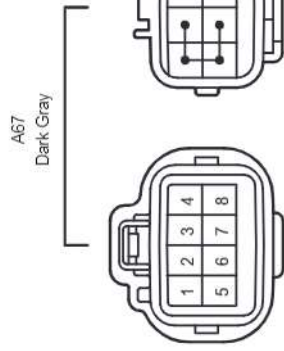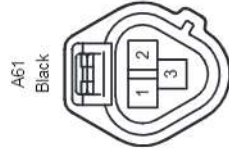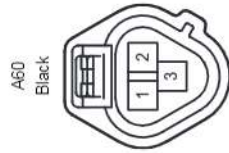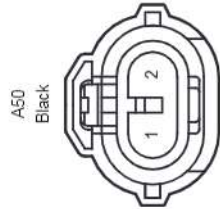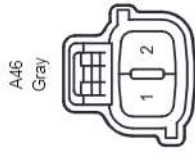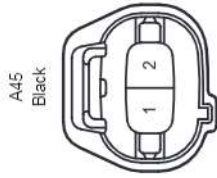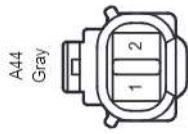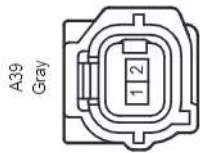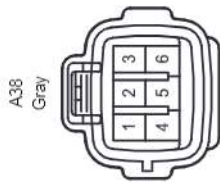

cardiagn.com






Position of Parts in Engine Compartment <RHD 2TR-FE>

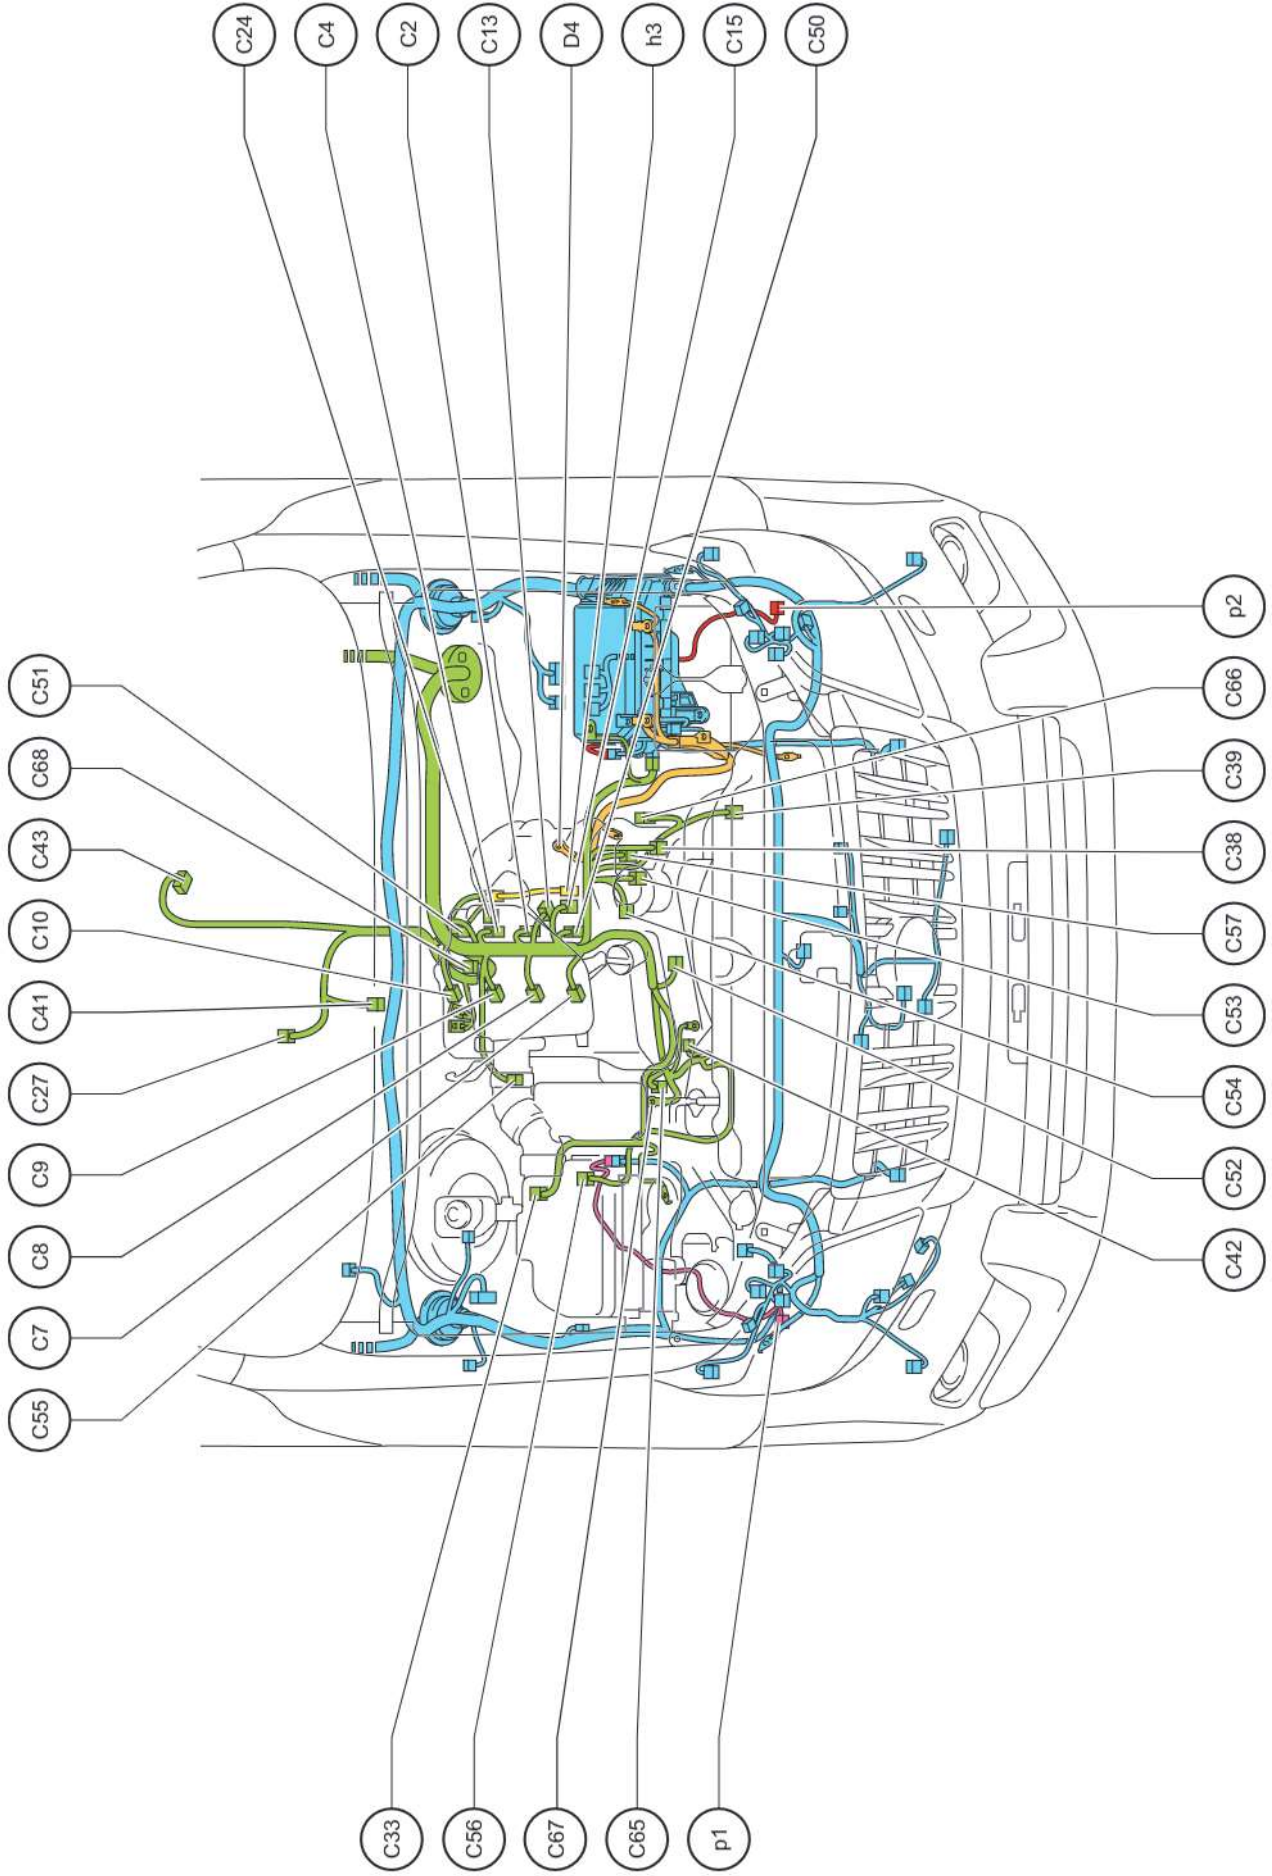




- C 2 Fuel Injector Assembly No. 2
- C 4 Fuel Injector Assembly No. 4
- C 7 Ignition Coil Assembly No. 1
- C 8 Ignition Coil Assembly No. 2
- C 9 Ignition Coil Assembly No. 3
- C 10 Ignition Coil Assembly No. 4
- C 13 Throttle Body Assembly
- C 15 Purge VSV
- C 24 E.F.I. Engine Coolant Temperature Sensor
- C 27 Oxygen Sensor (Bank 1 Sensor 2)
- C 33 Intake Mass Air Flow Meter Sub-Assembly
- C 38 Vane Pump Assembly
- C 39 Cooler Compressor Assembly
- C 41 Back-Up Light Switch Assembly
- C 42 Engine Oil Pressure Switch Assembly
- C 43 Transfer Shift Actuator Assembly
- C 50 Fuel Injector Assembly No. 1
- C 51 Fuel Injector Assembly No. 3
- C 52 Cam Position Sensor
- C 53 Crank Position Sensor
- C 54 Cam Timing Oil Control Valve (Bank 1)
- C 55 Air Switching Valve Assembly
- C 56 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- C 57 Power Steering Oil Pressure Switch
- C 65 Generator Assembly
- C 66 Starter Assembly
- C 67 Generator Assembly
- C 68 Noise Filter (Ignition)
- D 4 Starter Assembly
- h 3 Knock Control Sensor (Bank 1)
- p 1 Front Speed Sensor RH
- p 2 Front Speed Sensor LH


Position of Parts in Engine Compartment <RHD 2TR-FE>

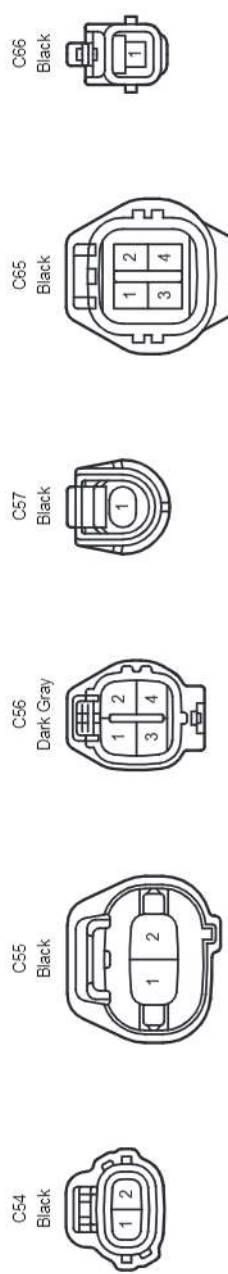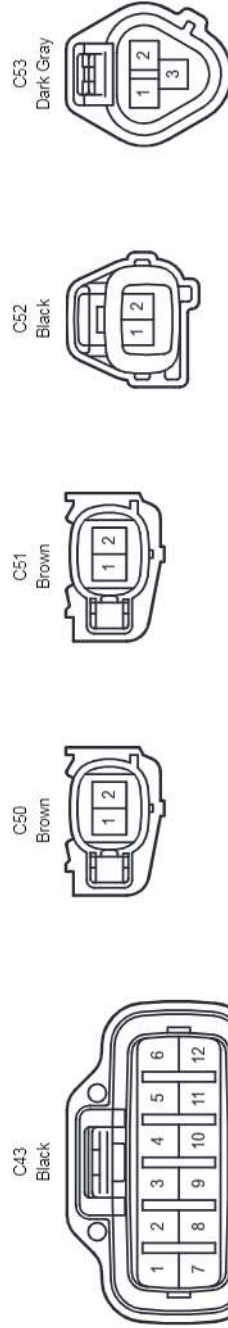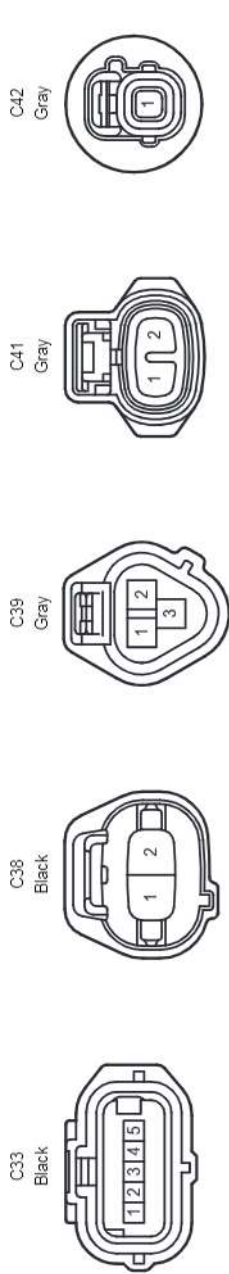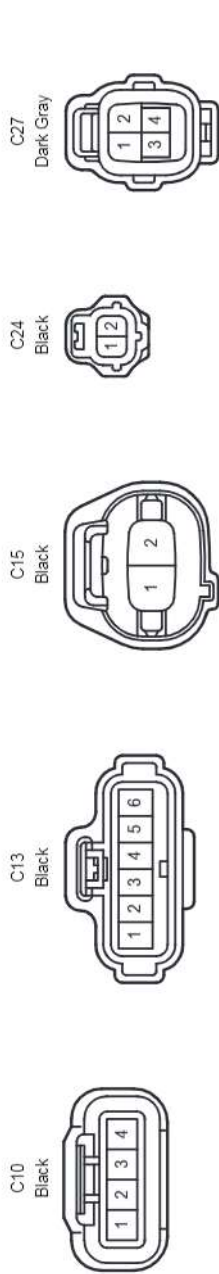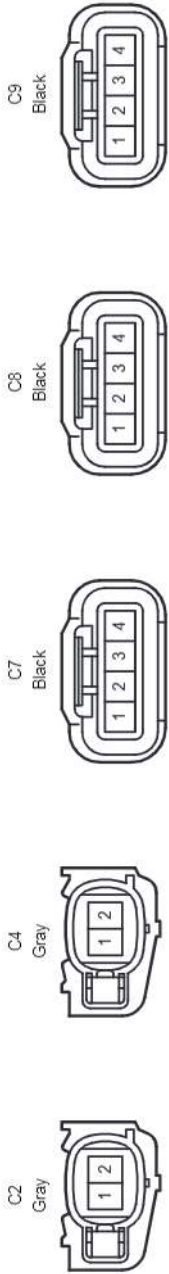


Wire and Wire , Ground Points in Engine Compartment <RHD 2TR-FE>

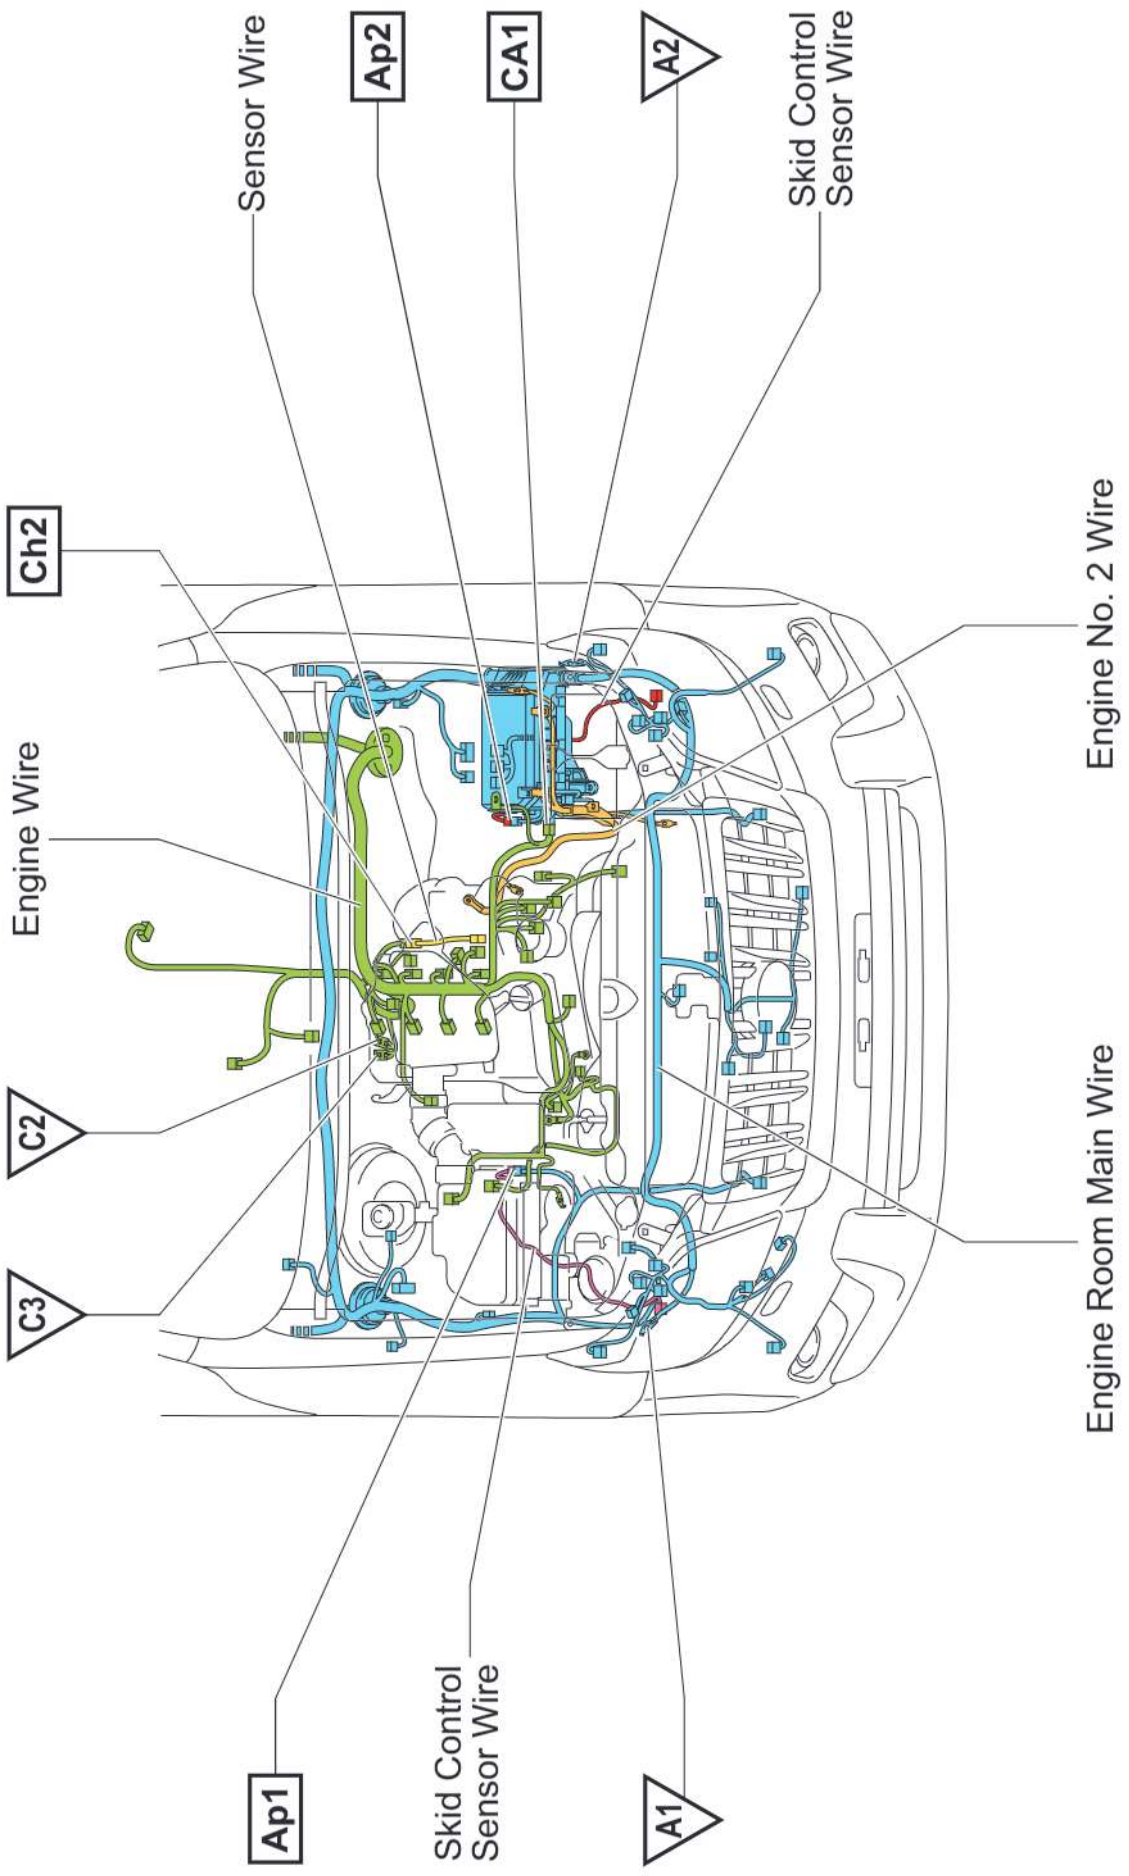


Wire and Wire , Ground Points in Engine Compartment <RHD 2TR-FE>

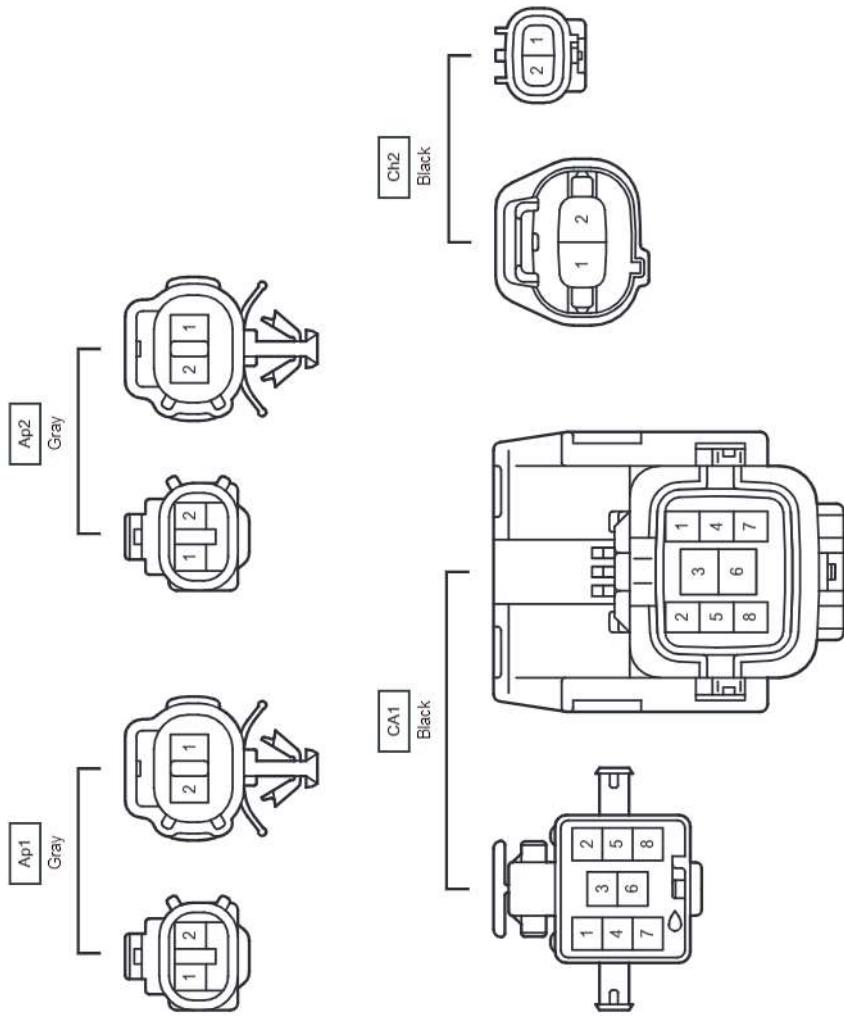

Antenna in Antenna <LHD 3-Door>

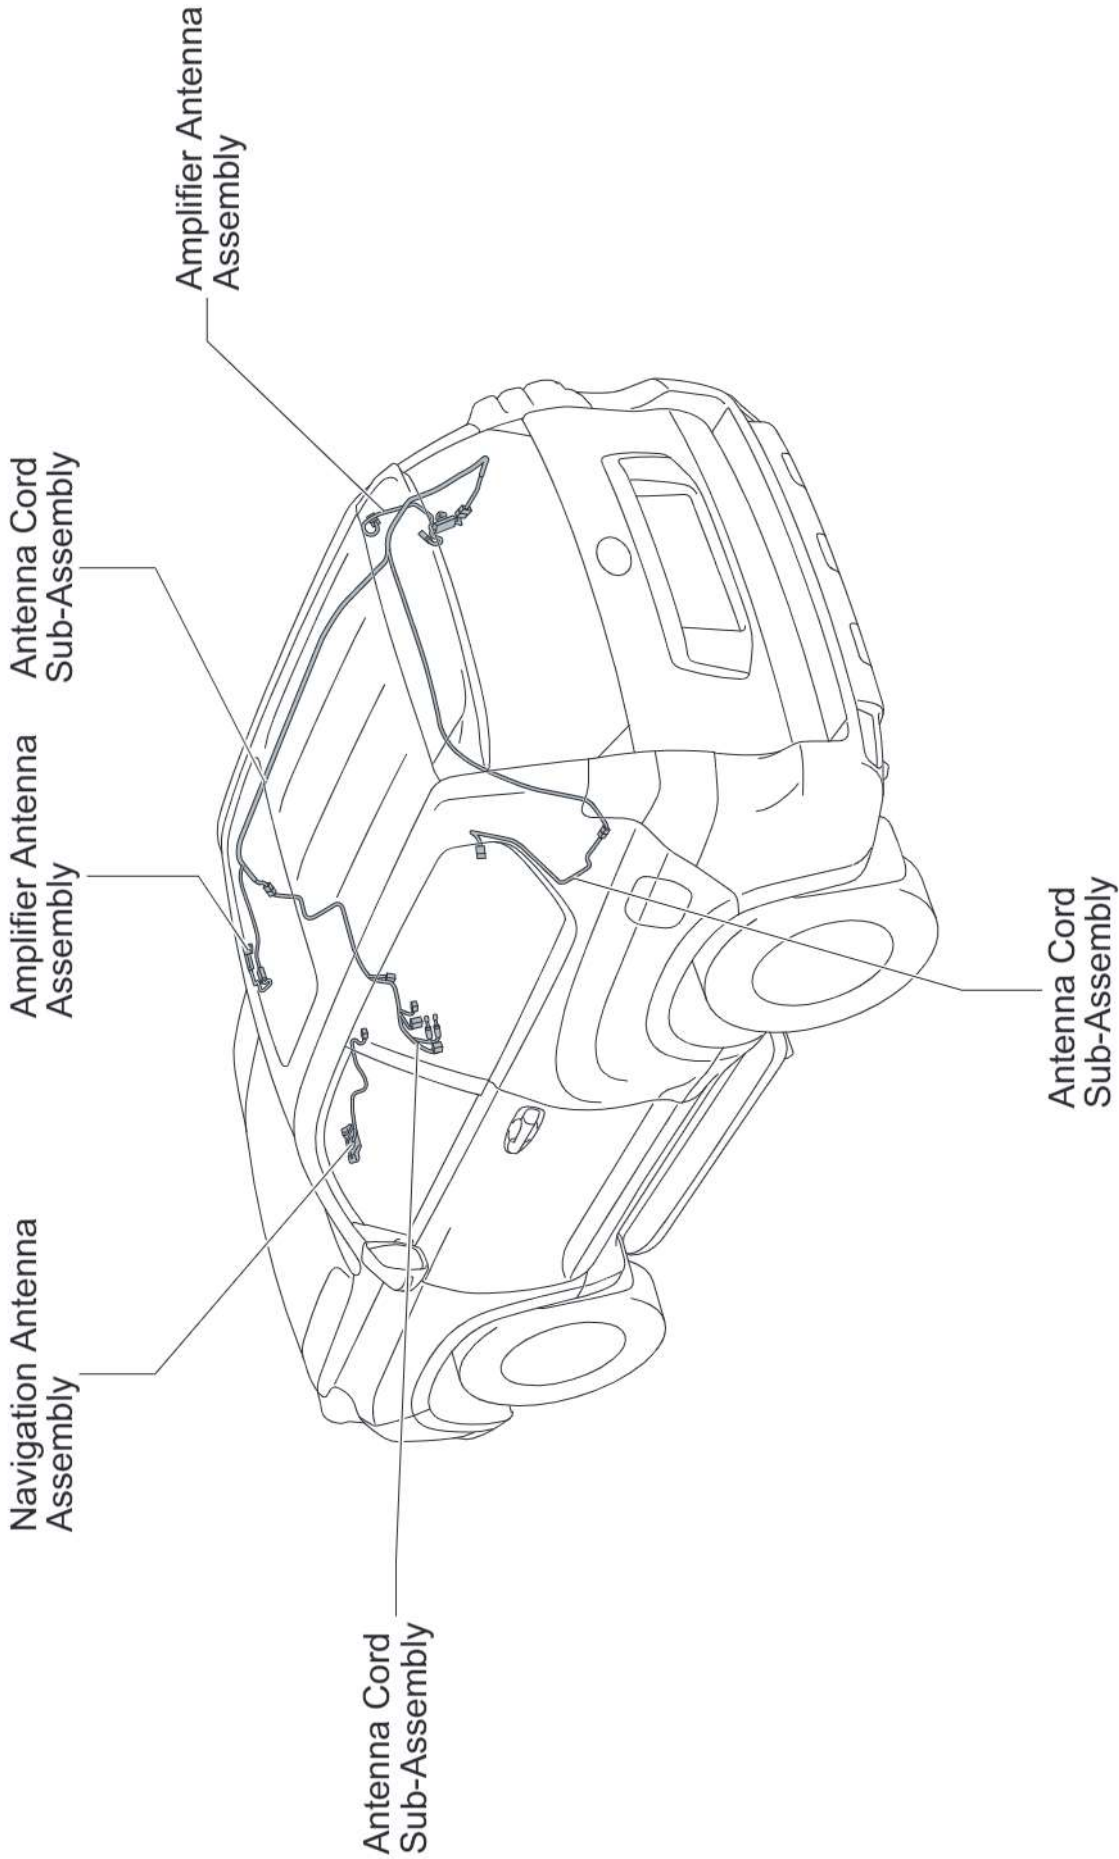


Antenna in Antenna <RHD 3-Door>

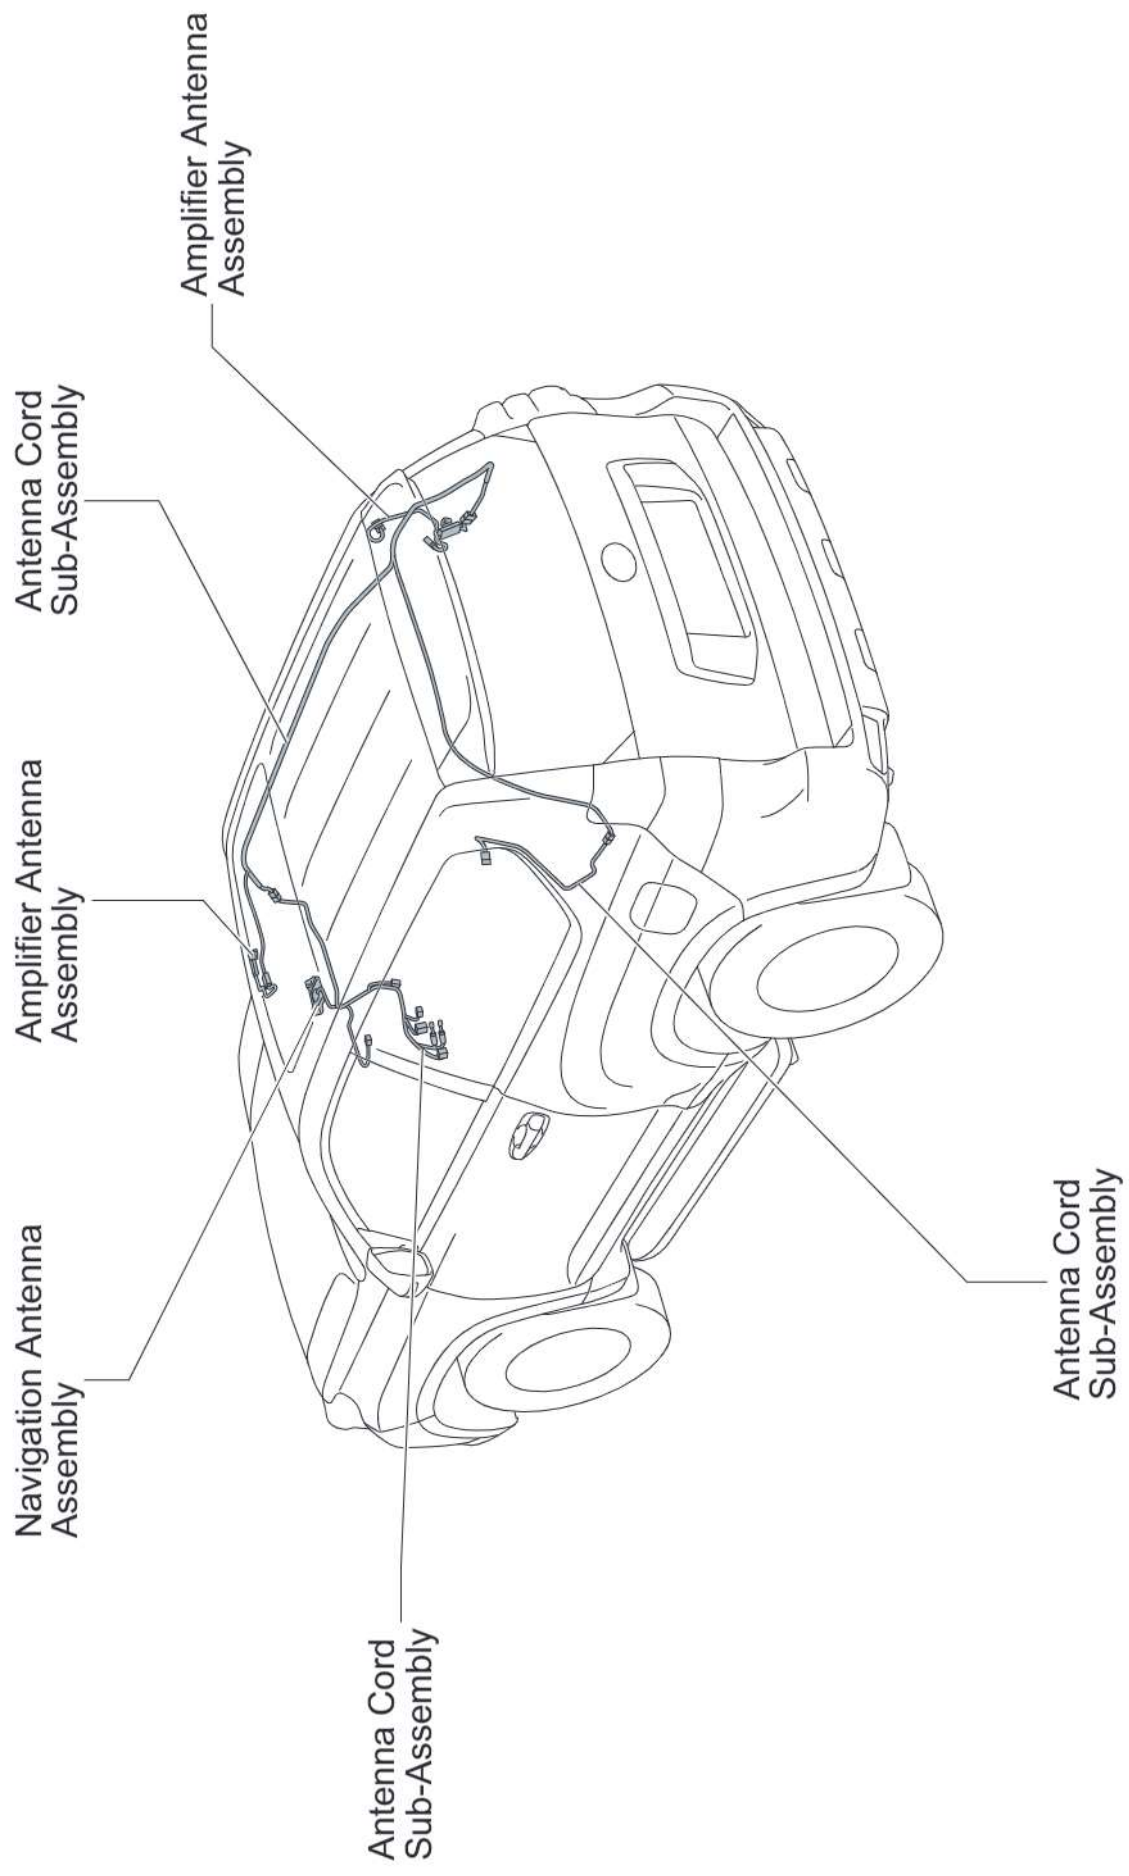






















Position of Parts in Body <LHD 3-Door>

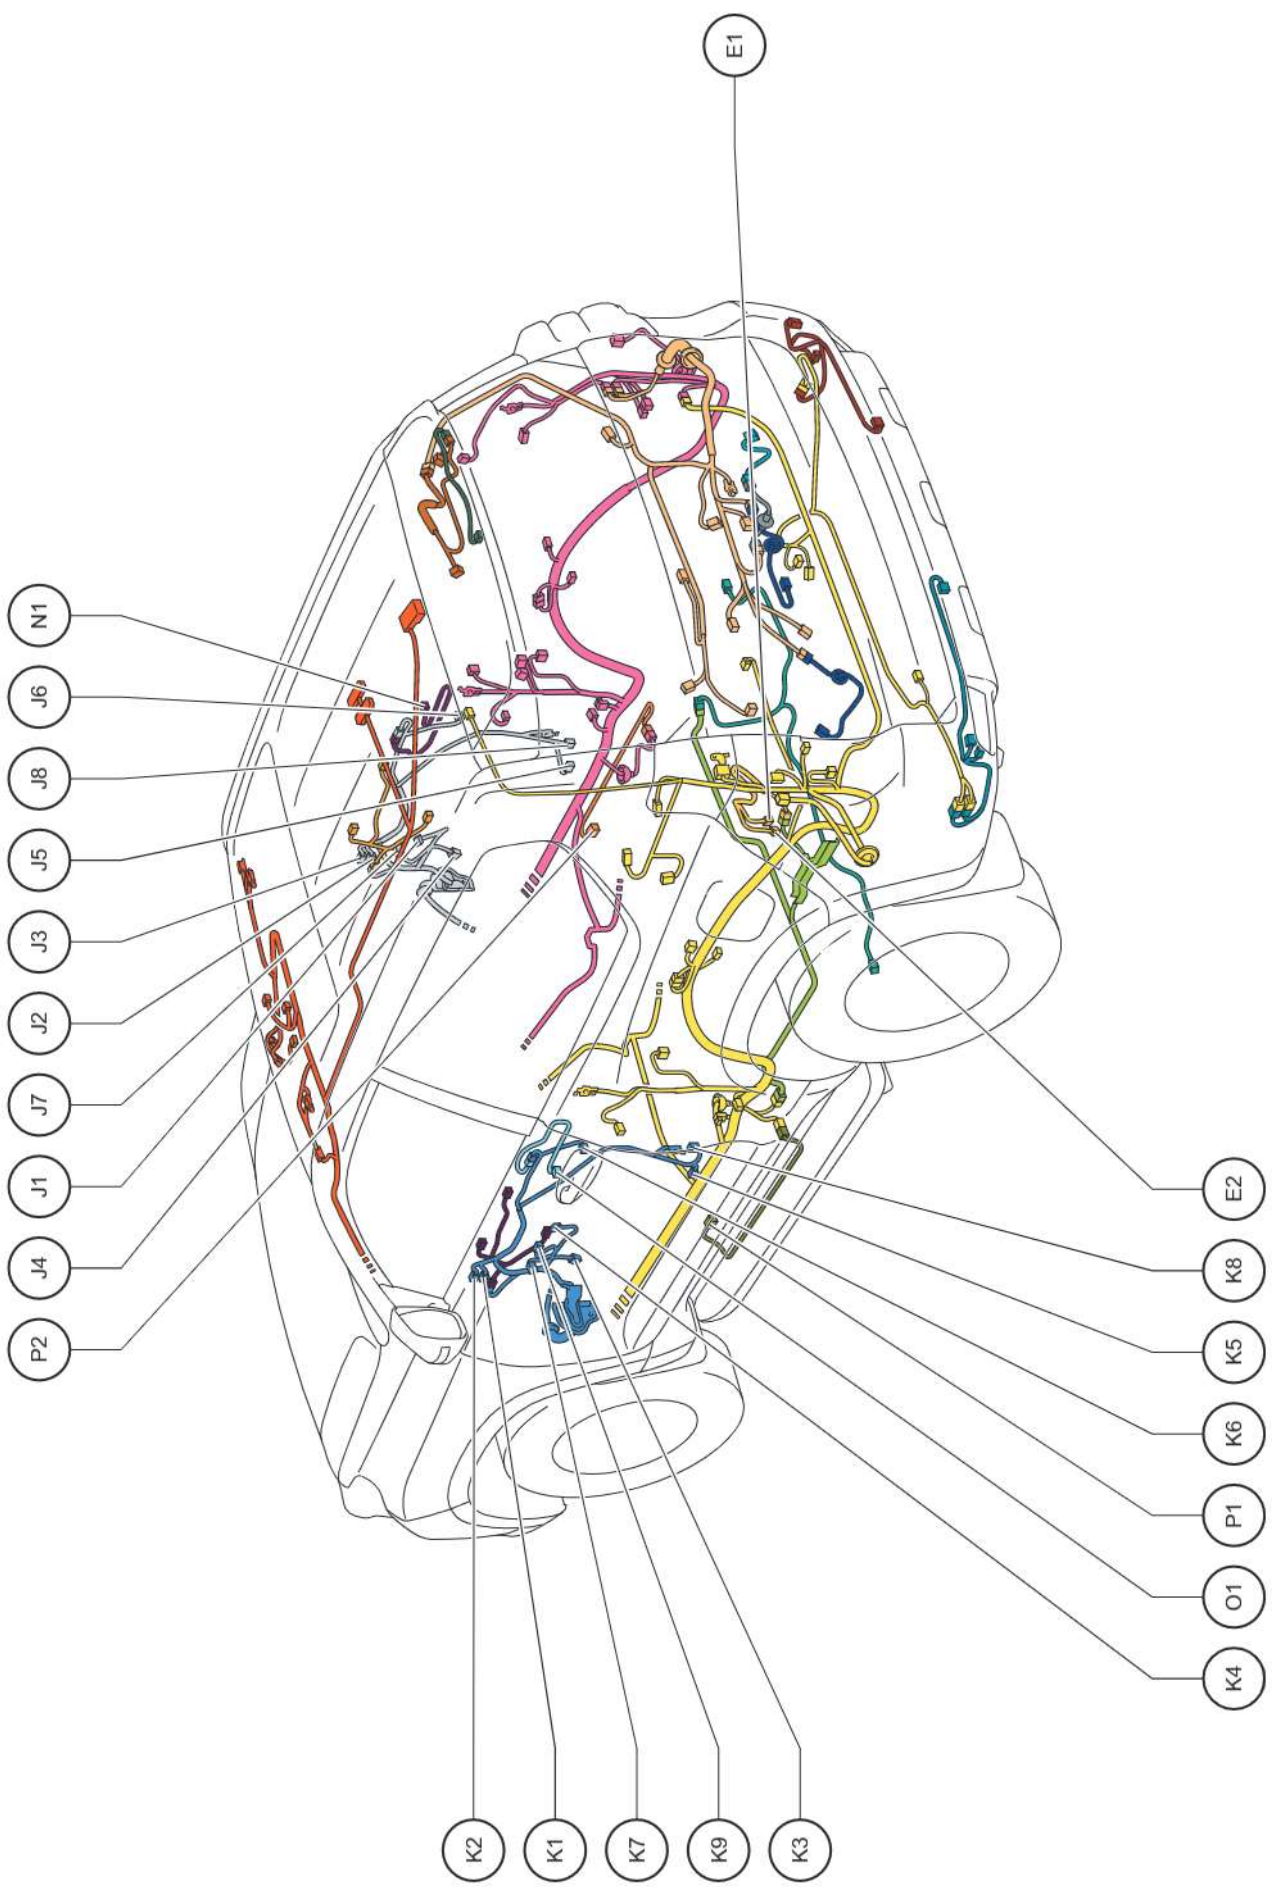



E	1	Differential Lock Shift Actuator
E	2	No. 1 Transfer Indicator Switch
J	1	Front Power Window Regulator Switch Assembly RH
J	2	Outer Rear View Mirror Assembly RH
J	3	Outer Rear View Mirror Assembly RH
J	4	Front No. 2 Speaker Assembly RH
J	5	Front Door Courtesy Light Assembly RH
J	6	Front Door with Motor Lock Assembly RH
J	7	Front Power Window Regulator Motor Assembly RH
J	8	Side Airbag Sensor Assembly RH
K	1	Outer Rear View Mirror Assembly LH
K	2	Outer Rear View Mirror Assembly LH
K	3	Front No. 2 Speaker Assembly LH
K	4	Multiplex Network Master Switch Assembly
K	5	Front Door Courtesy Light Assembly LH
K	6	Front Door with Motor Lock Assembly LH
K	7	Front Power Window Regulator Motor Assembly LH
K	8	Side Airbag Sensor Assembly LH
K	9	Seat Memory Switch
N	1	Electrical Key Antenna RH
O	1	Electrical Key Antenna LH
P	1	Front Side Step Light LH
P	2	Front Side Step Light RH

   Position of Parts in Body <LHD 3-Door>

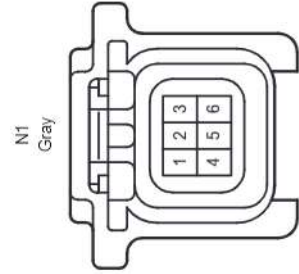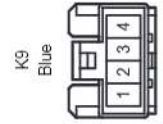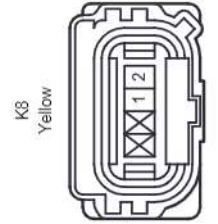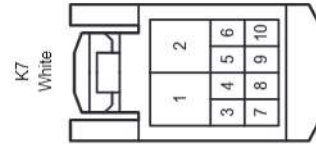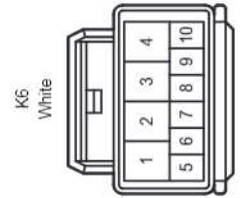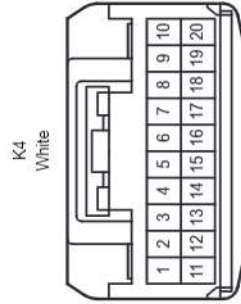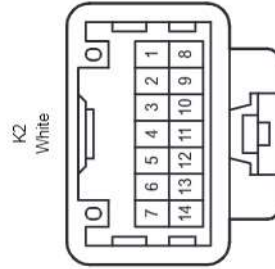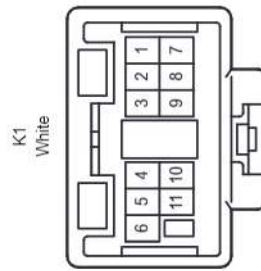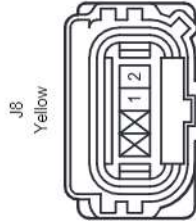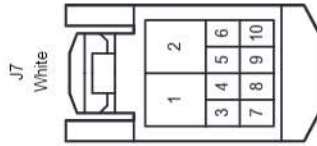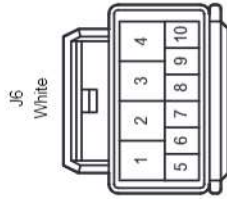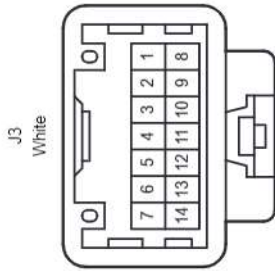
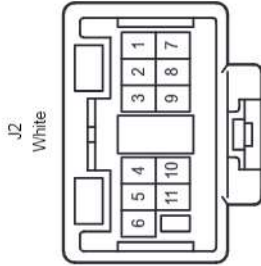
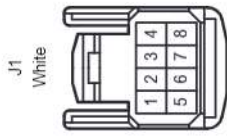
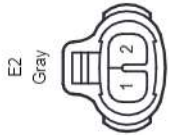
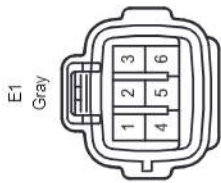


cardiagr.com



- Q 2 Front Seat Outer Belt Assembly RH
- Q 3 Front Seat Outer Belt Assembly RH
- Q 4 Rear Side Airbag Sensor Assembly RH
- Q 8 Front Door Courtesy Light Switch Assembly RH
- Q 15 Rear Header Speaker Assembly RH
- Q 16 Rear Power Point Socket Assembly
- Q 18 Theft Warning Siren Assembly
- Q 22 Power Outlet Socket
- Q 23 Junction Connector
- Q 24 Junction Connector
- Q 27 Voltage Inverter Assembly
- Q 29 Curtain Shield Airbag Assembly RH
- Q 30 No. 1 Speaker with Box Assembly
- Q 31 Rear Combination Light Assembly RH
- Q 32 Rear Speaker Set RH
- Q 33 Theft Warning Siren Assembly
- R 2 Front Seat Outer Belt Assembly LH
- R 3 Front Seat Outer Belt Assembly LH
- R 4 Rear Side Airbag Sensor Assembly LH
- R 7 Front Door Courtesy Light Switch Assembly LH
- R 9 Back Door Courtesy Light Switch Assembly
- R 13 Rear Header Speaker Assembly LH
- R 15 No. 3 Indoor Electrical Key Antenna Assembly
- R 16 Outside Luggage Electrical Key Antenna
- R 17 Door Control Receiver
- R 22 Rear Combination Light Assembly LH
- R 23 Trailer Socket
- R 26 Door Control Receiver
- R 27 Junction Connector
- R 28 Junction Connector
- R 29 Junction Connector
- R 30 Junction Connector
- R 31 Junction Connector
- R 35 Curtain Shield Airbag Assembly LH
- R 37 Rear Speaker Set LH
- R 38 Fuel Pump
- R 39 Fuel Tank Sub-Assembly
- R 40 Fuel Sender Gauge Assembly

Position of Parts in Body <LHD 3-Door>

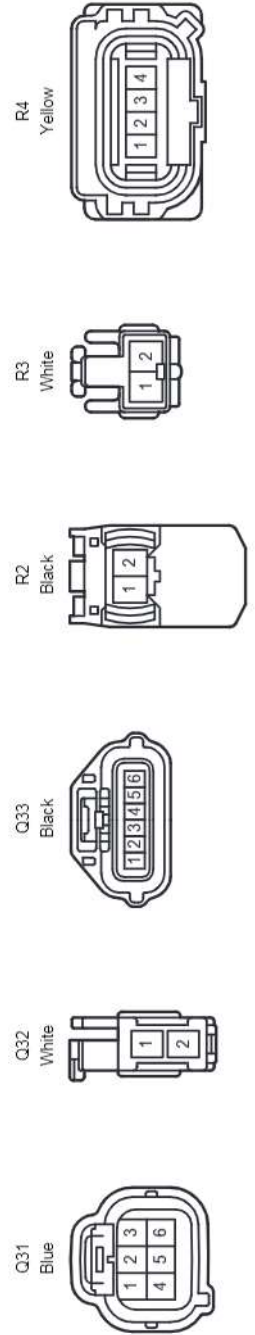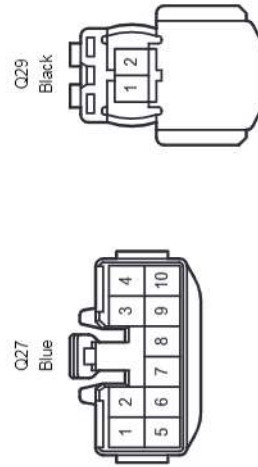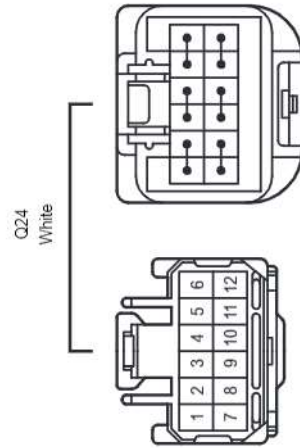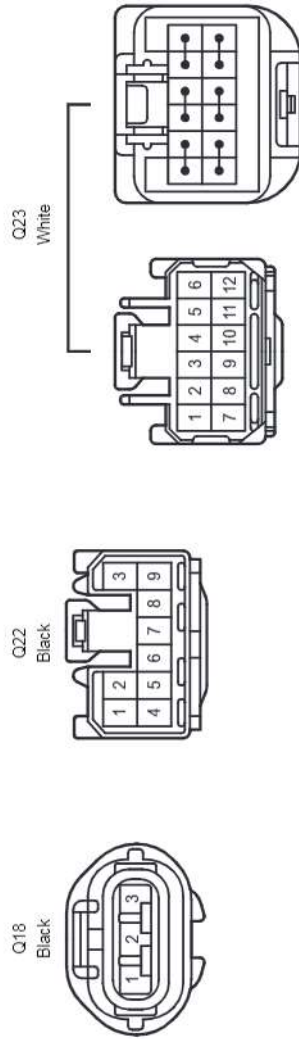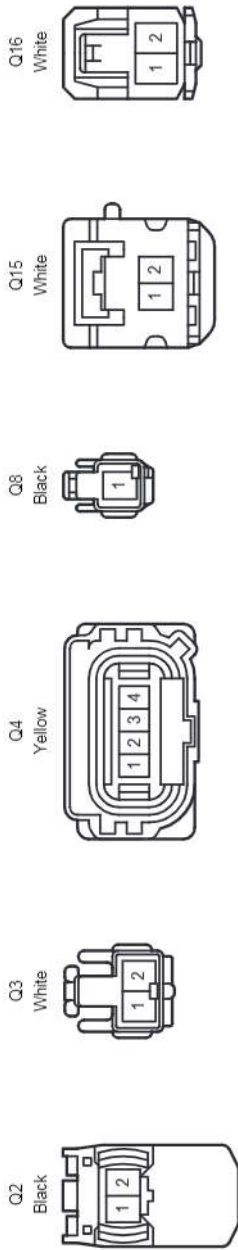


cardiagn.com


R7 R9 R13 R15 R16 R17

Position of Parts in Body <LHD 3-Door>


R22  
Blue

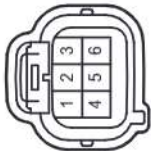


R23  
White

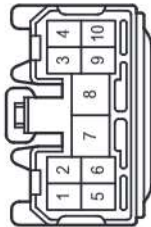


R26  
White

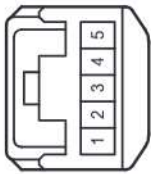


R27  
Dark Gray

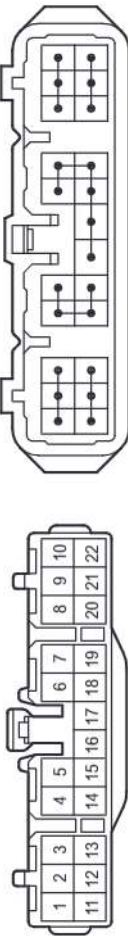


R28  
White

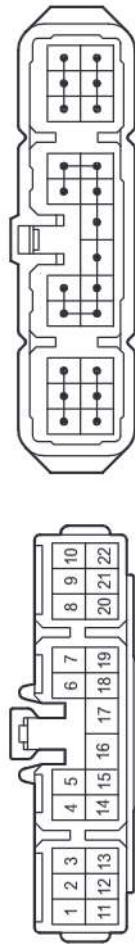

R29  
Blue

 


R30  
Blue

 


R31  
White



 R35  
Black



R37  
White

 


R38  
Dark Gray



R39  
Dark Gray



Position of Parts in Body <LHD 3-Door>


















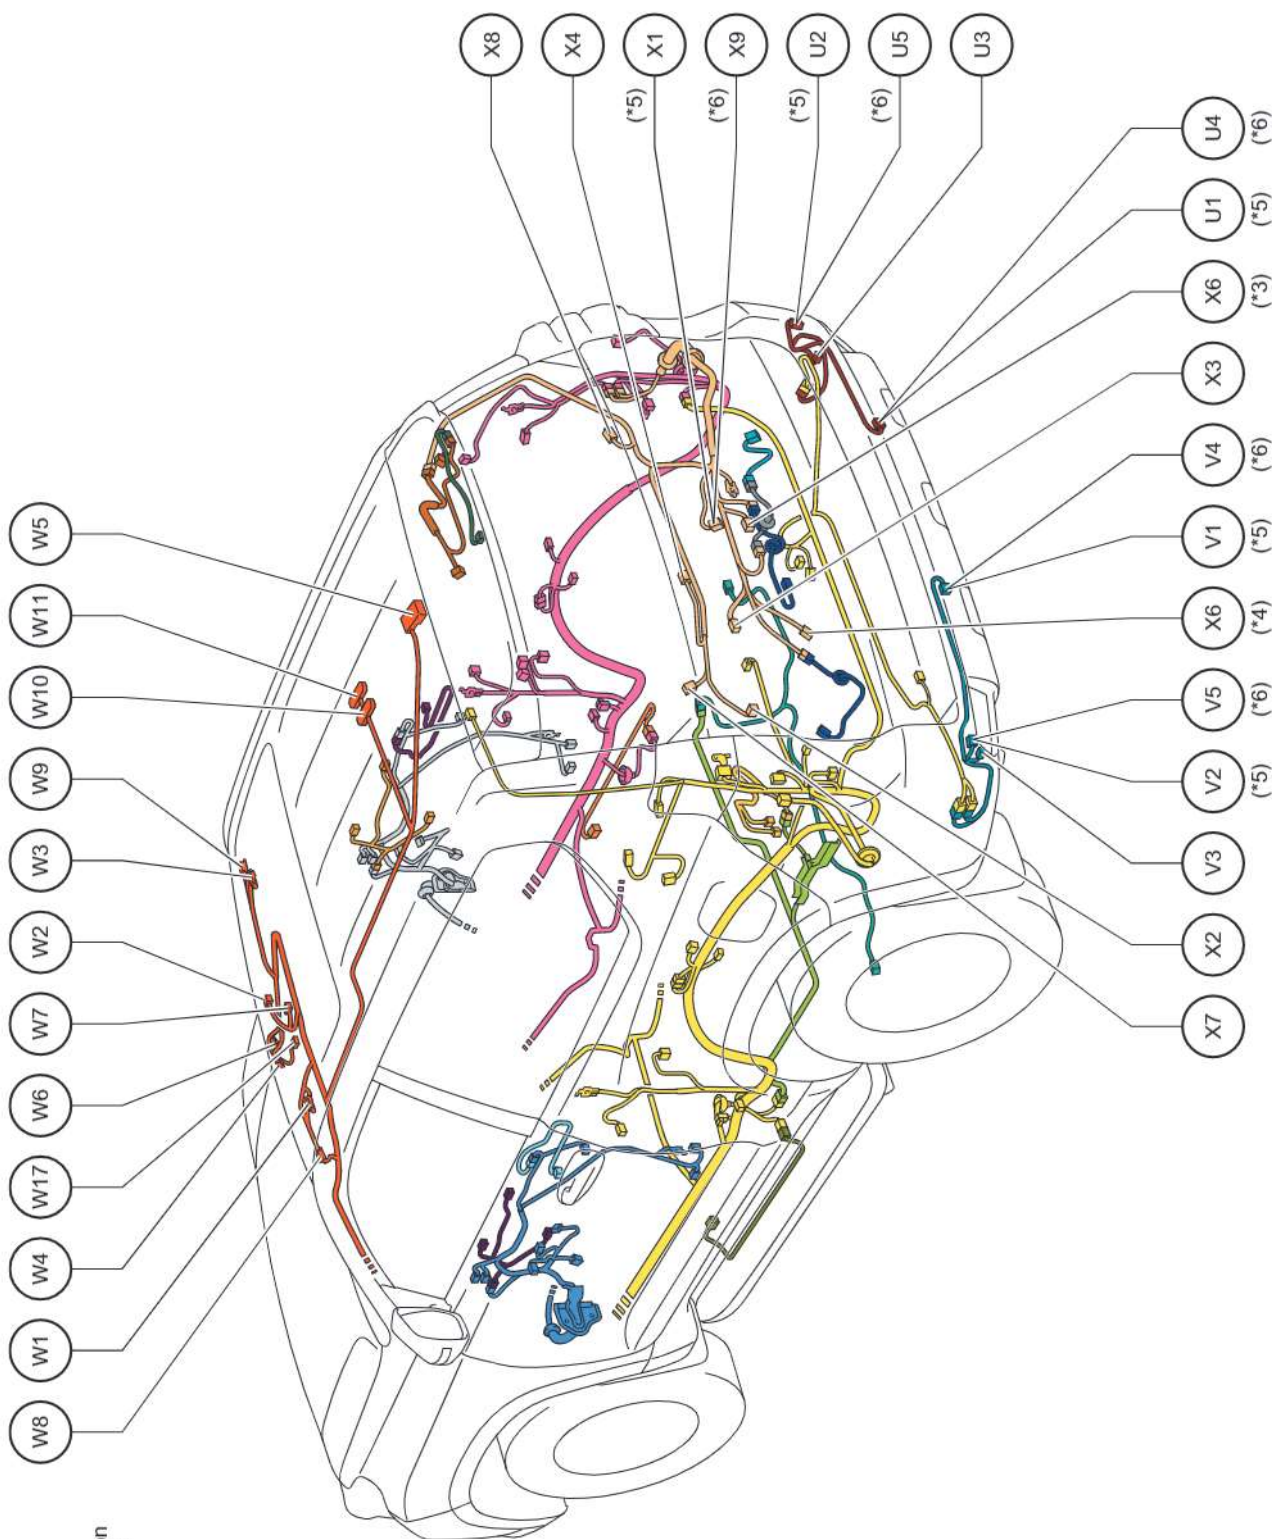


\* 3:w/ Glass Hatch Opener  
 \* 4:w/o Glass Hatch Opener  
 \* 5:Before Aug. 2013 Production  
 \* 6:From Aug. 2013 Production









- U 1 Rear No. 1 Ultrasonic Sensor Center RH
- U 2 Rear No. 1 Ultrasonic Sensor RH
- U 3 Rear Fog Light Assembly RH
- U 4 Rear No. 1 Ultrasonic Sensor Center RH
- U 5 Rear No. 1 Ultrasonic Sensor RH
- V 1 Rear No. 1 Ultrasonic Sensor Center LH
- V 2 Rear No. 1 Ultrasonic Sensor LH
- V 3 Rear Fog Light Assembly LH
- V 4 Rear No. 1 Ultrasonic Sensor Center LH
- V 5 Rear No. 1 Ultrasonic Sensor LH
- W 1 Vanity Light Assembly LH
- W 2 Sliding Roof Control ECU
- W 3 Vanity Light Assembly RH
- W 4 Inner Rear View Mirror Assembly
- W 5 No. 2 Room Light Assembly
- W 6 Rain Sensor
- W 7 Map Light Assembly
- W 8 Visor Assembly LH
- W 9 Visor Assembly RH
- W 10 No. 1 Room Light Assembly LH
- W 11 No. 1 Room Light Assembly RH
- W 17 Inner Rear View Mirror Assembly
- X 1 Rear Television Camera Assembly
- X 2 Back Door Lock Assembly
- X 3 Glass Hatch Opener Switch Assembly
- X 4 Back Window Lock Assembly
- X 6 Luggage Electrical Key Switch
- X 7 Rear Window Defogger (Back Door Glass)
- X 8 Rear Window Defogger (Back Door Glass)
- X 9 Rear Television Camera Assembly



   Position of Parts in Body <LHD 3-Door>

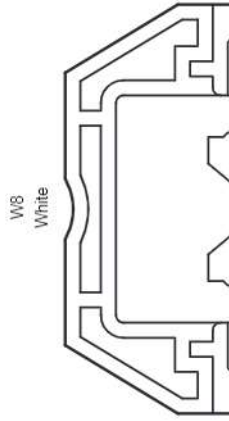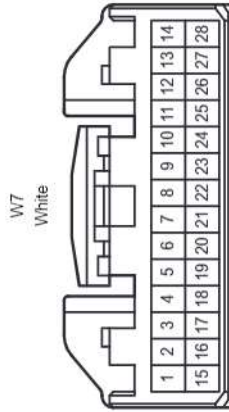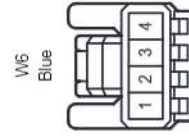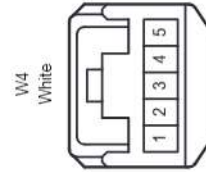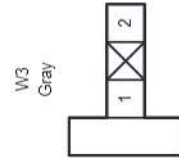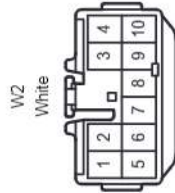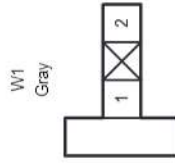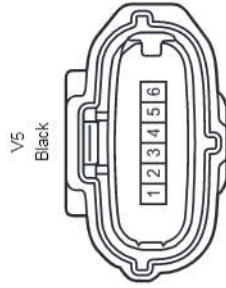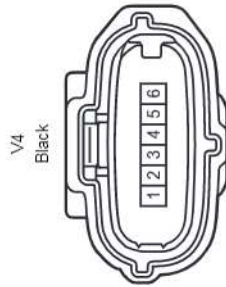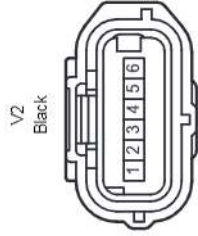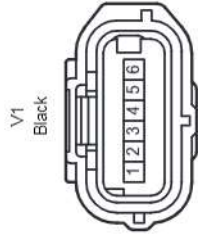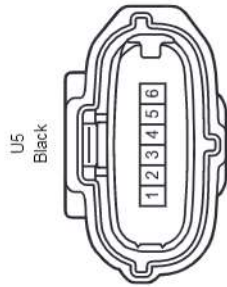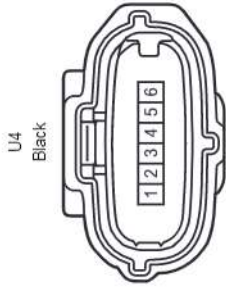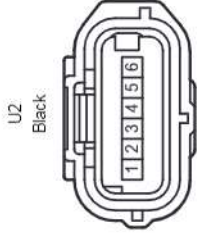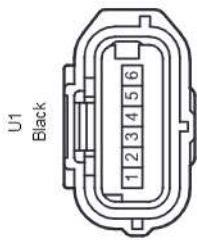


Position of Parts in Body <LHD 3-Door>

 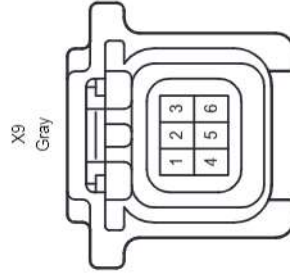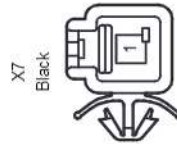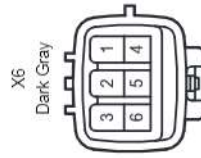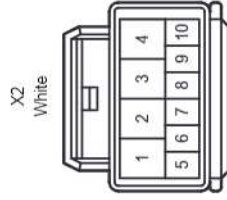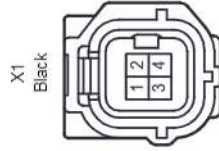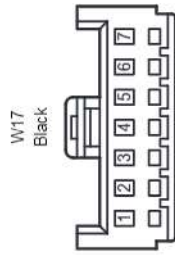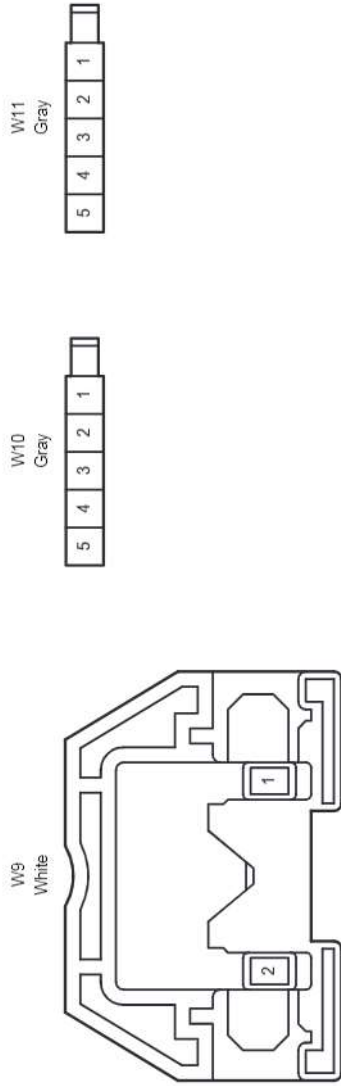

Position of Parts in Body <LHD 3-Door>

- \* 3:w/ Glass Hatch Opener
- \* 4:w/o Glass Hatch Opener
- \* 5:Before Aug. 2013 Production
- \* 6:From Aug. 2013 Production









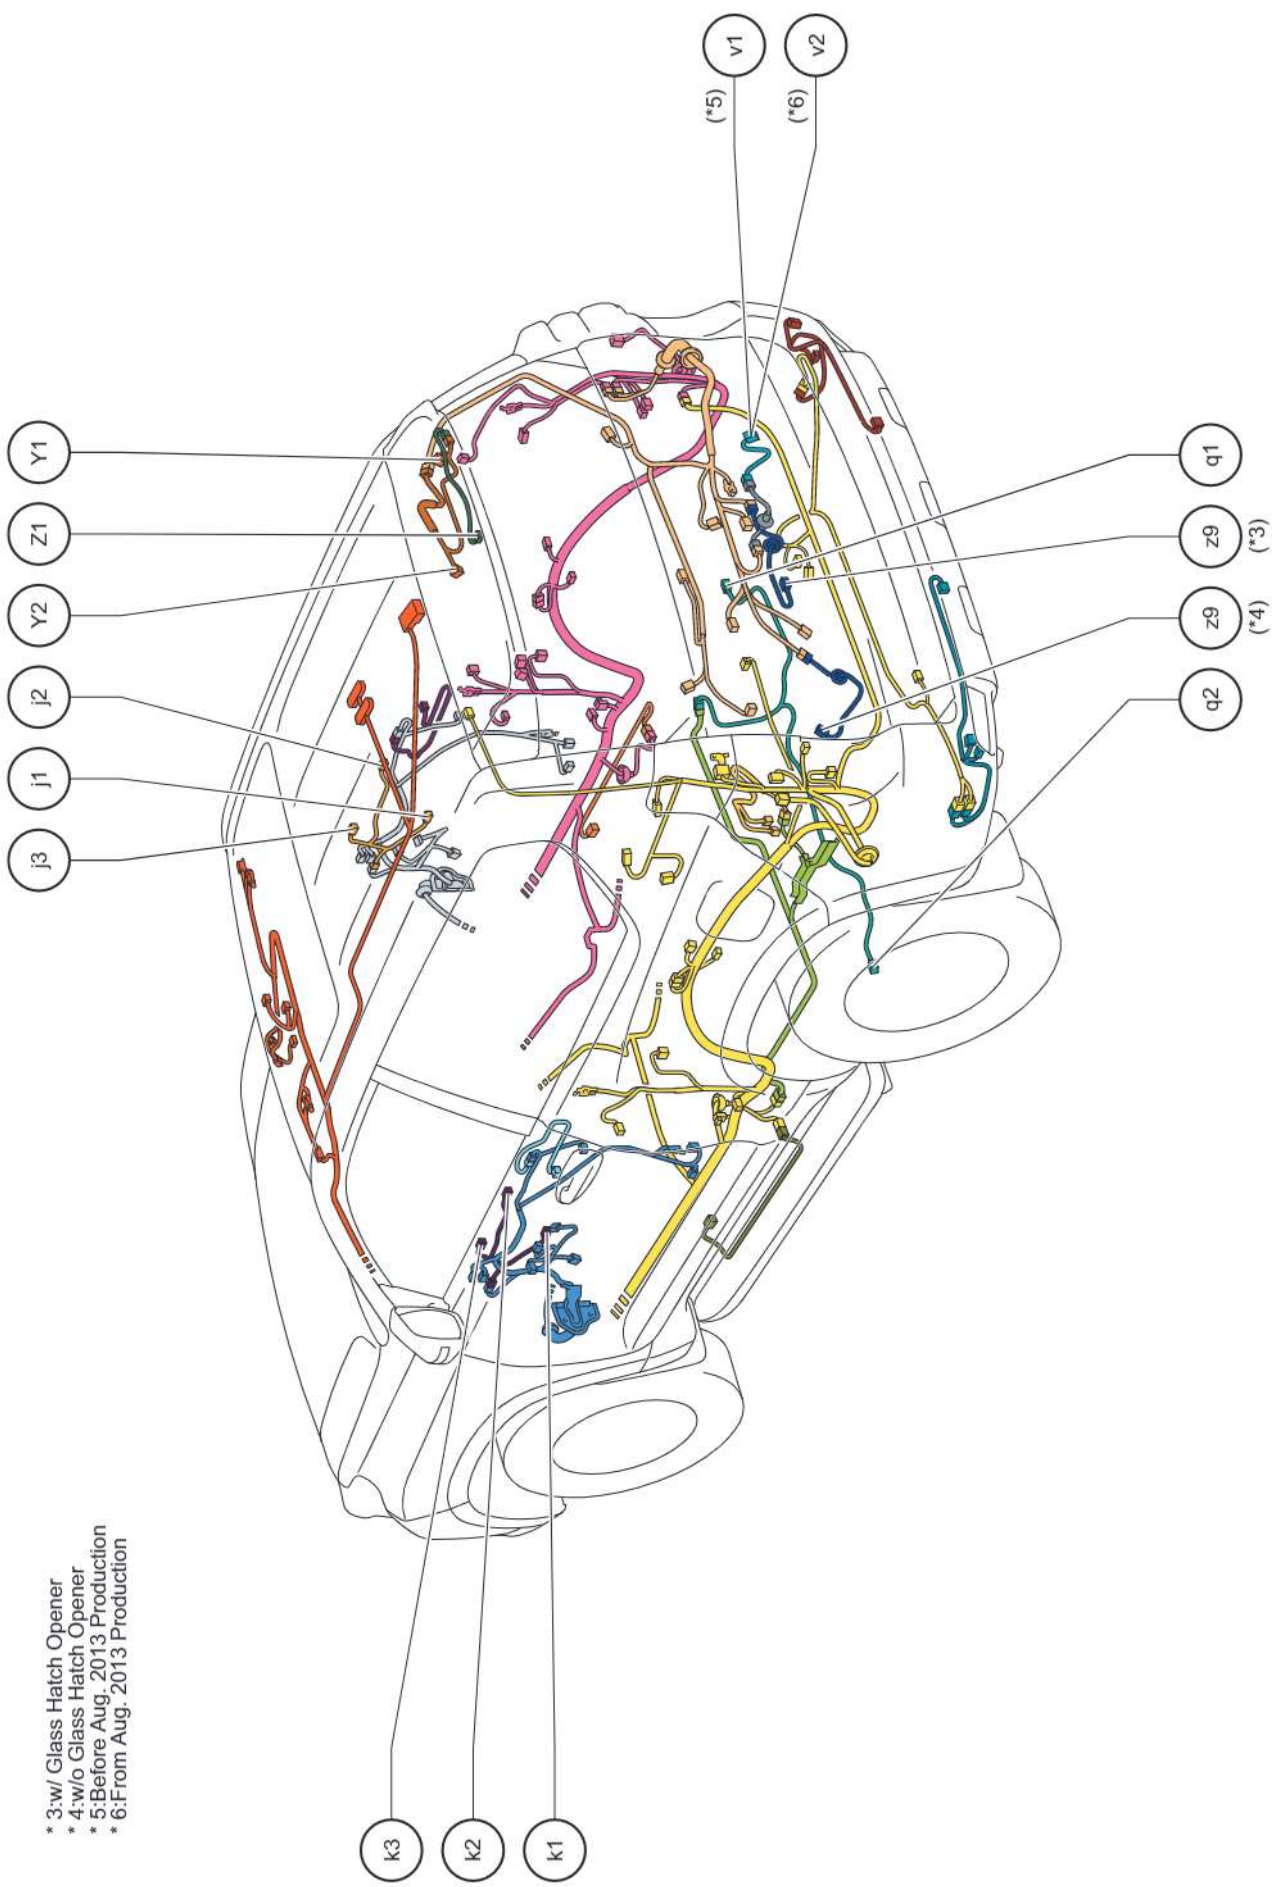


Position of Parts in Body <LHD 3-Door>

---


- Y 1 Rear Wiper Motor Assembly
- Y 2 Rear Window Defogger (Back Door Glass)
- Z 1 Center Stop Light Assembly
- j 1 Front Door Pocket Illumination RH
- j 2 Front Door Trim Illumination RH
- j 3 Front Door Inside Handle Illumination Light Assembly RH
- k 1 Front Door Pocket Illumination LH
- k 2 Front Door Trim Illumination LH
- k 3 Front Door Inside Handle Illumination Light Assembly LH
- q 1 Rear Speed Sensor RH
- q 2 Rear Speed Sensor LH
- v 1 Rear Television Camera Assembly
- v 2 Rear Television Camera Assembly
- z 9 License Plate Light Assembly

 Position of Parts in Body <LHD 3-Door>

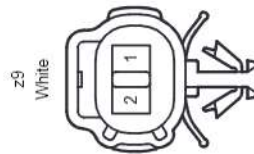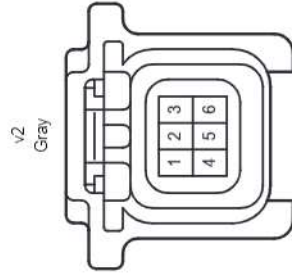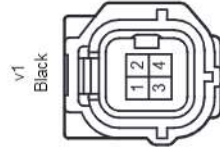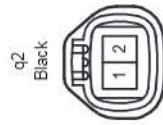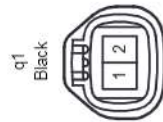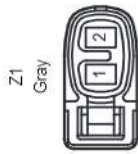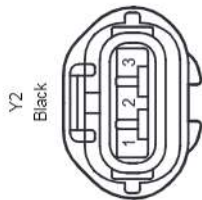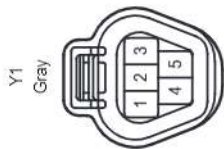


Wire and Wire in Body <LHD 3-Door>




- \* 1:w/ Glass Hatch Opener
- \* 2:w/o Glass Hatch Opener

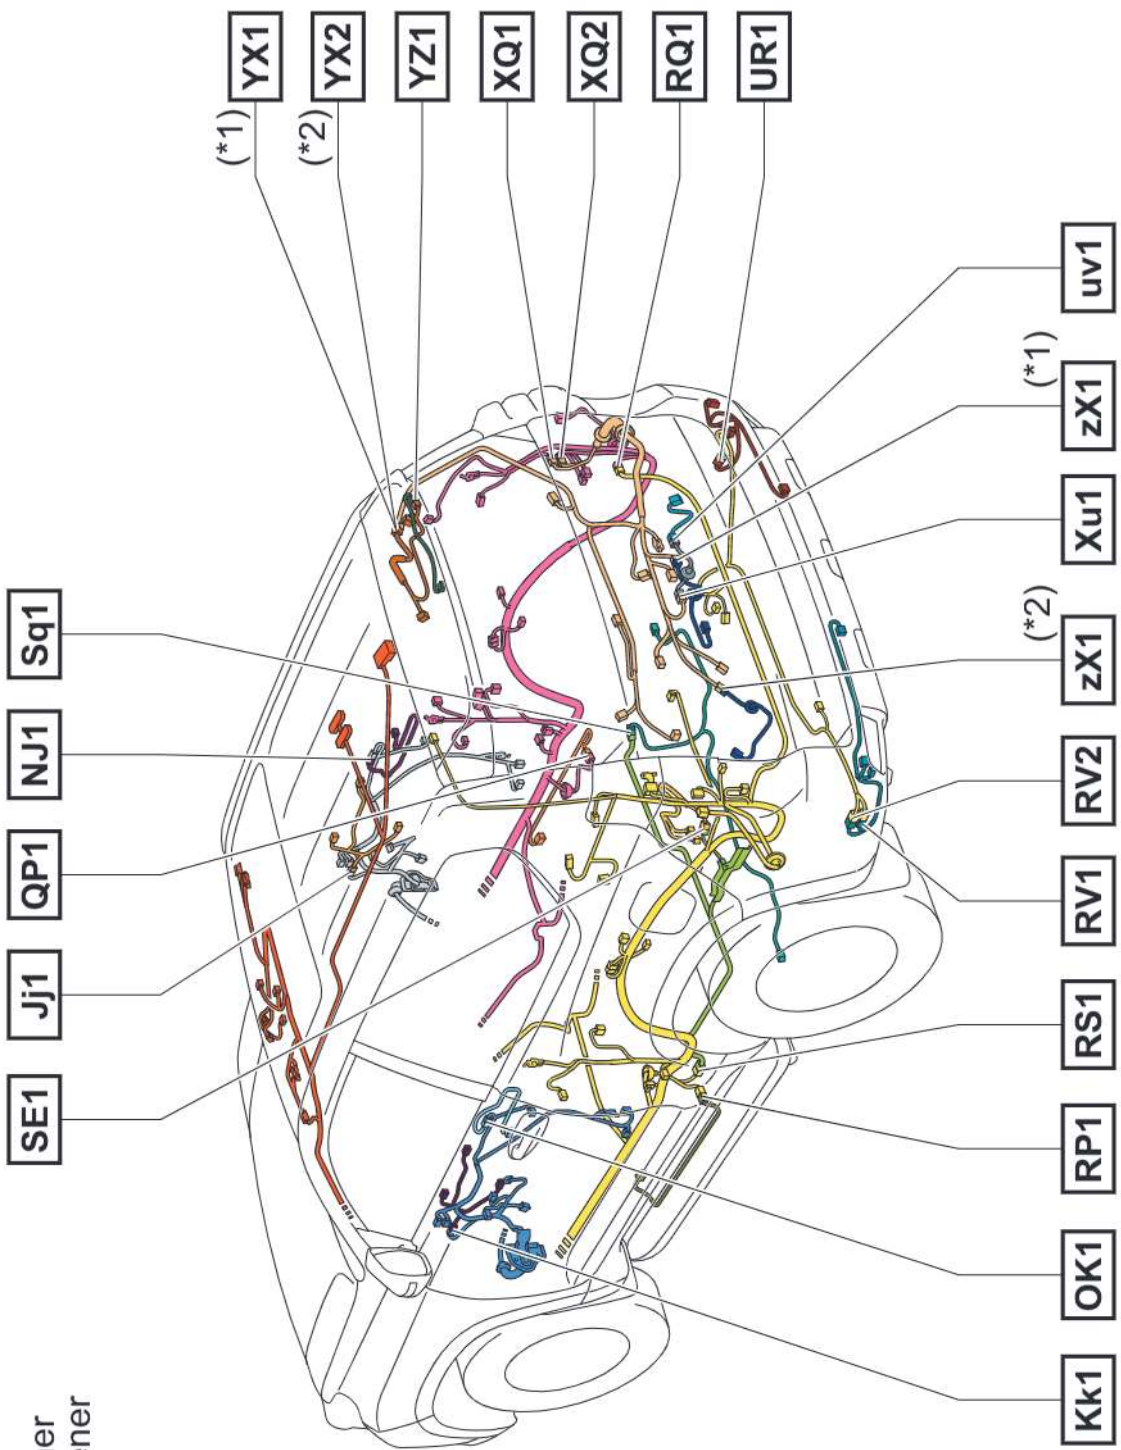


Wire and Wire in Body <LHD 3-Door>

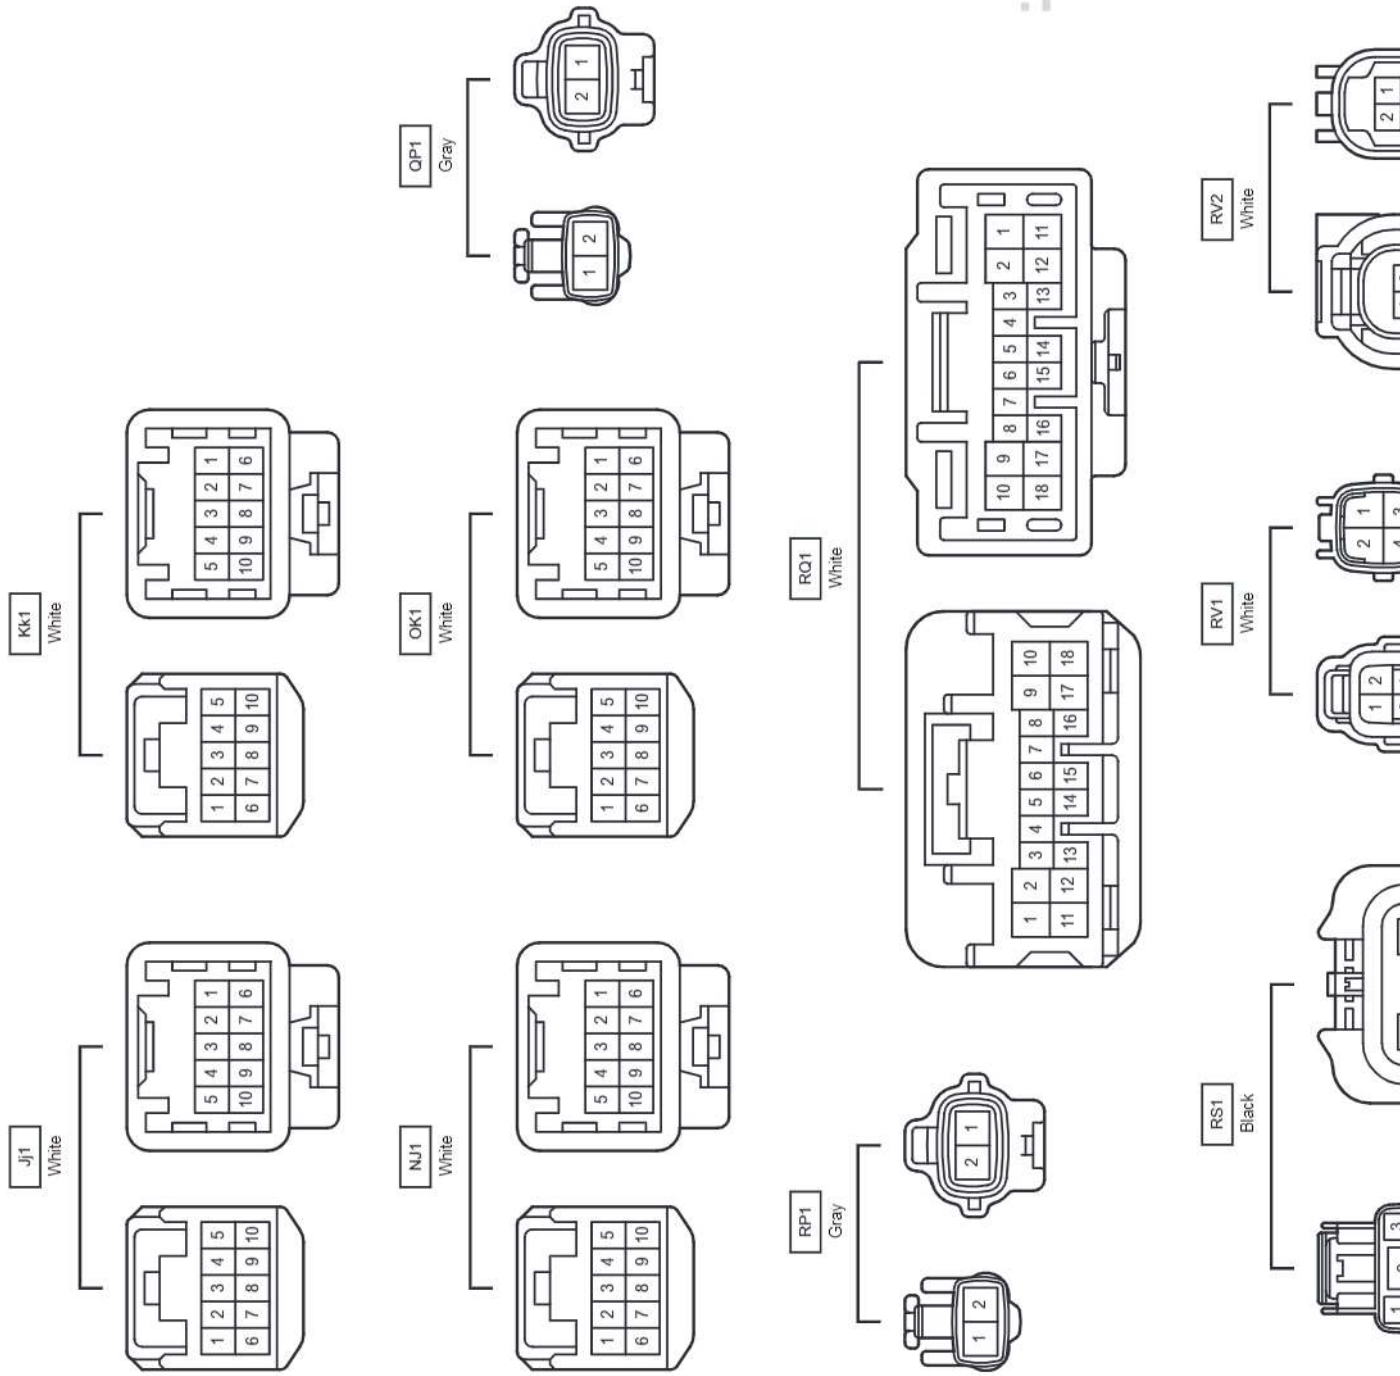


Wire and Wire in Body <LHD 3-Door>

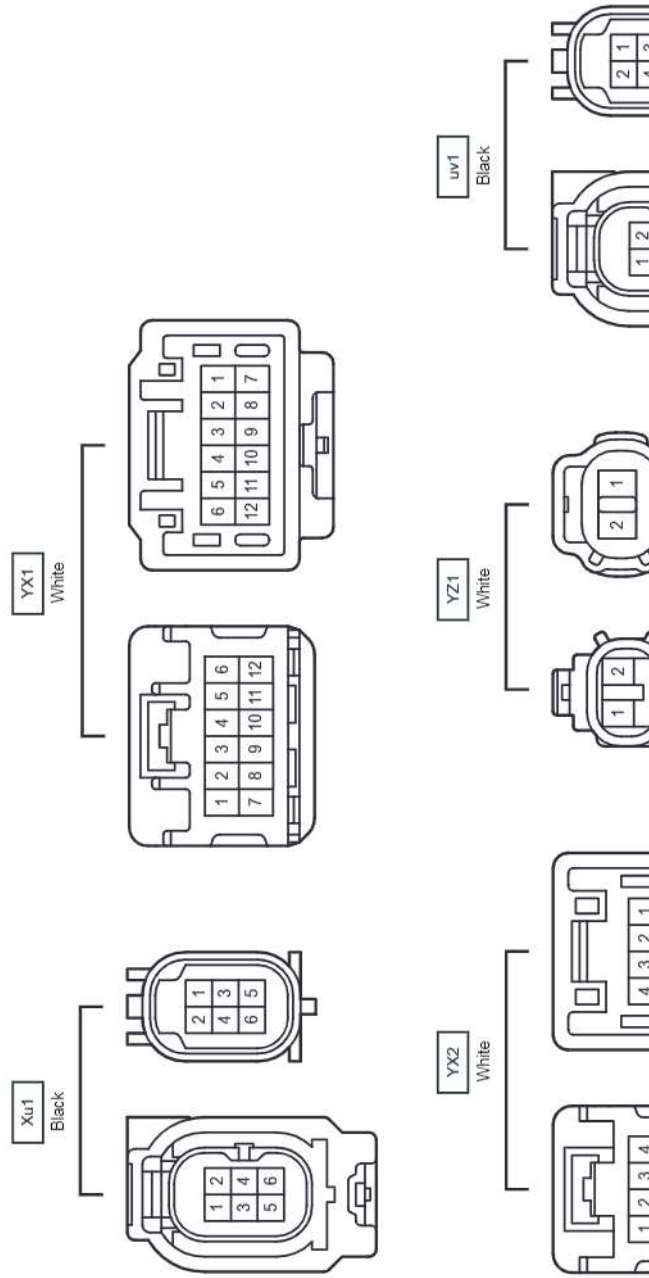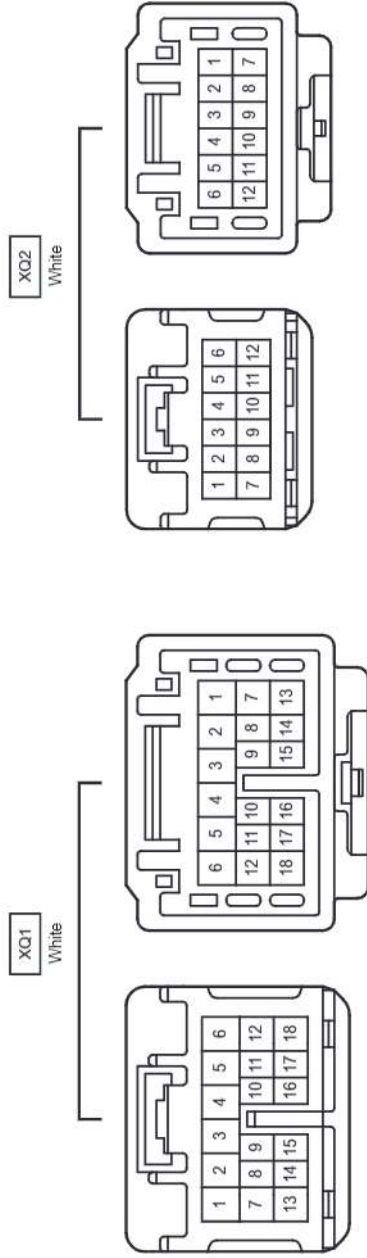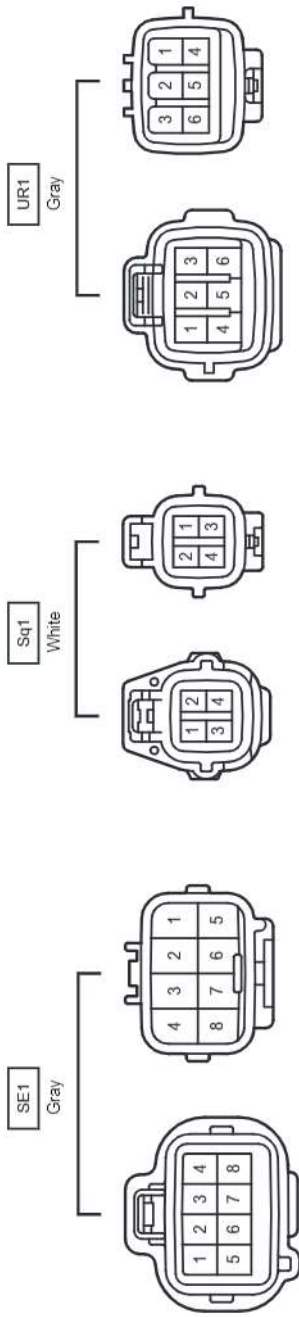




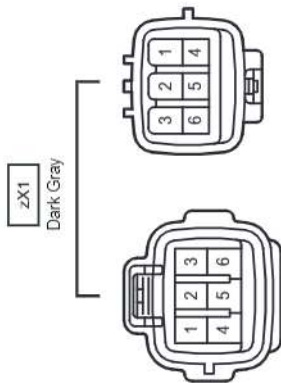

Ground Points in Body <RHD 3-Door>


















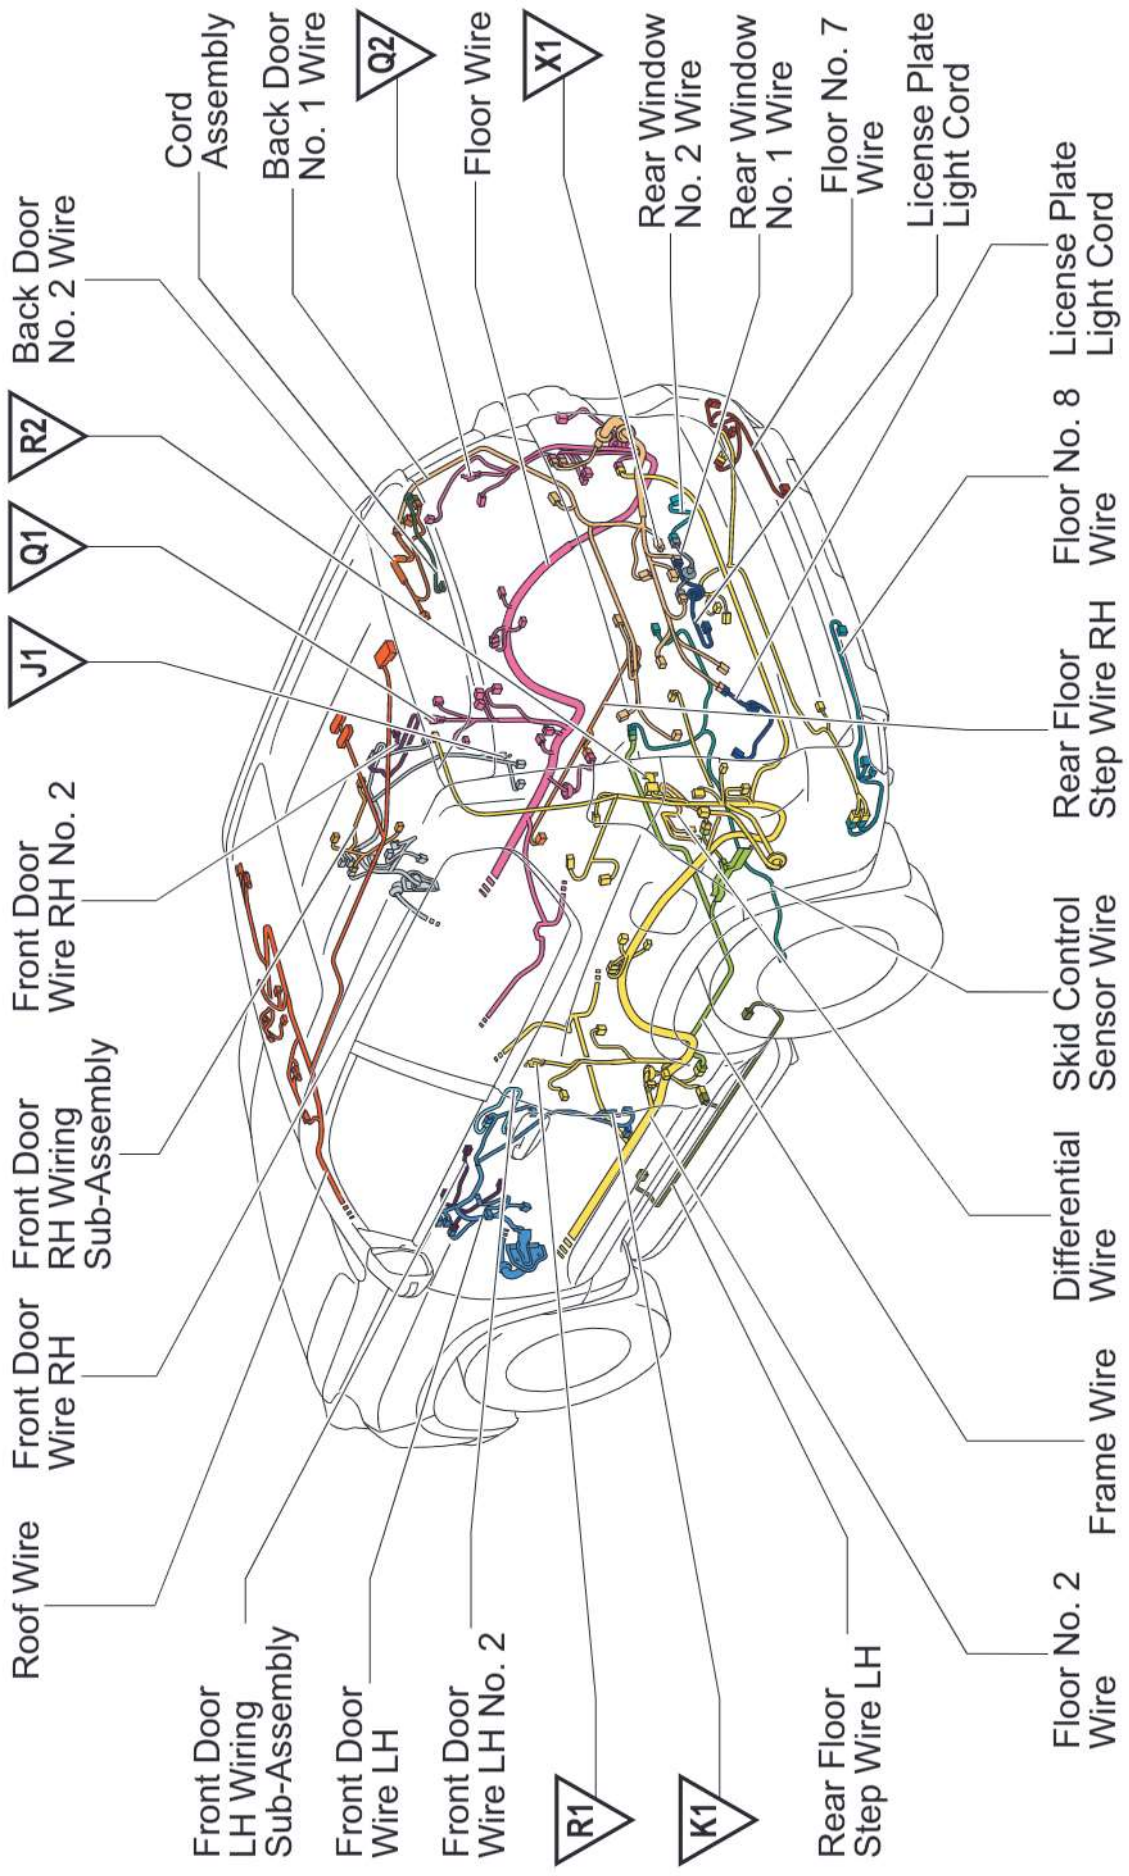


Position of Parts in Body <RHD 3-Door>

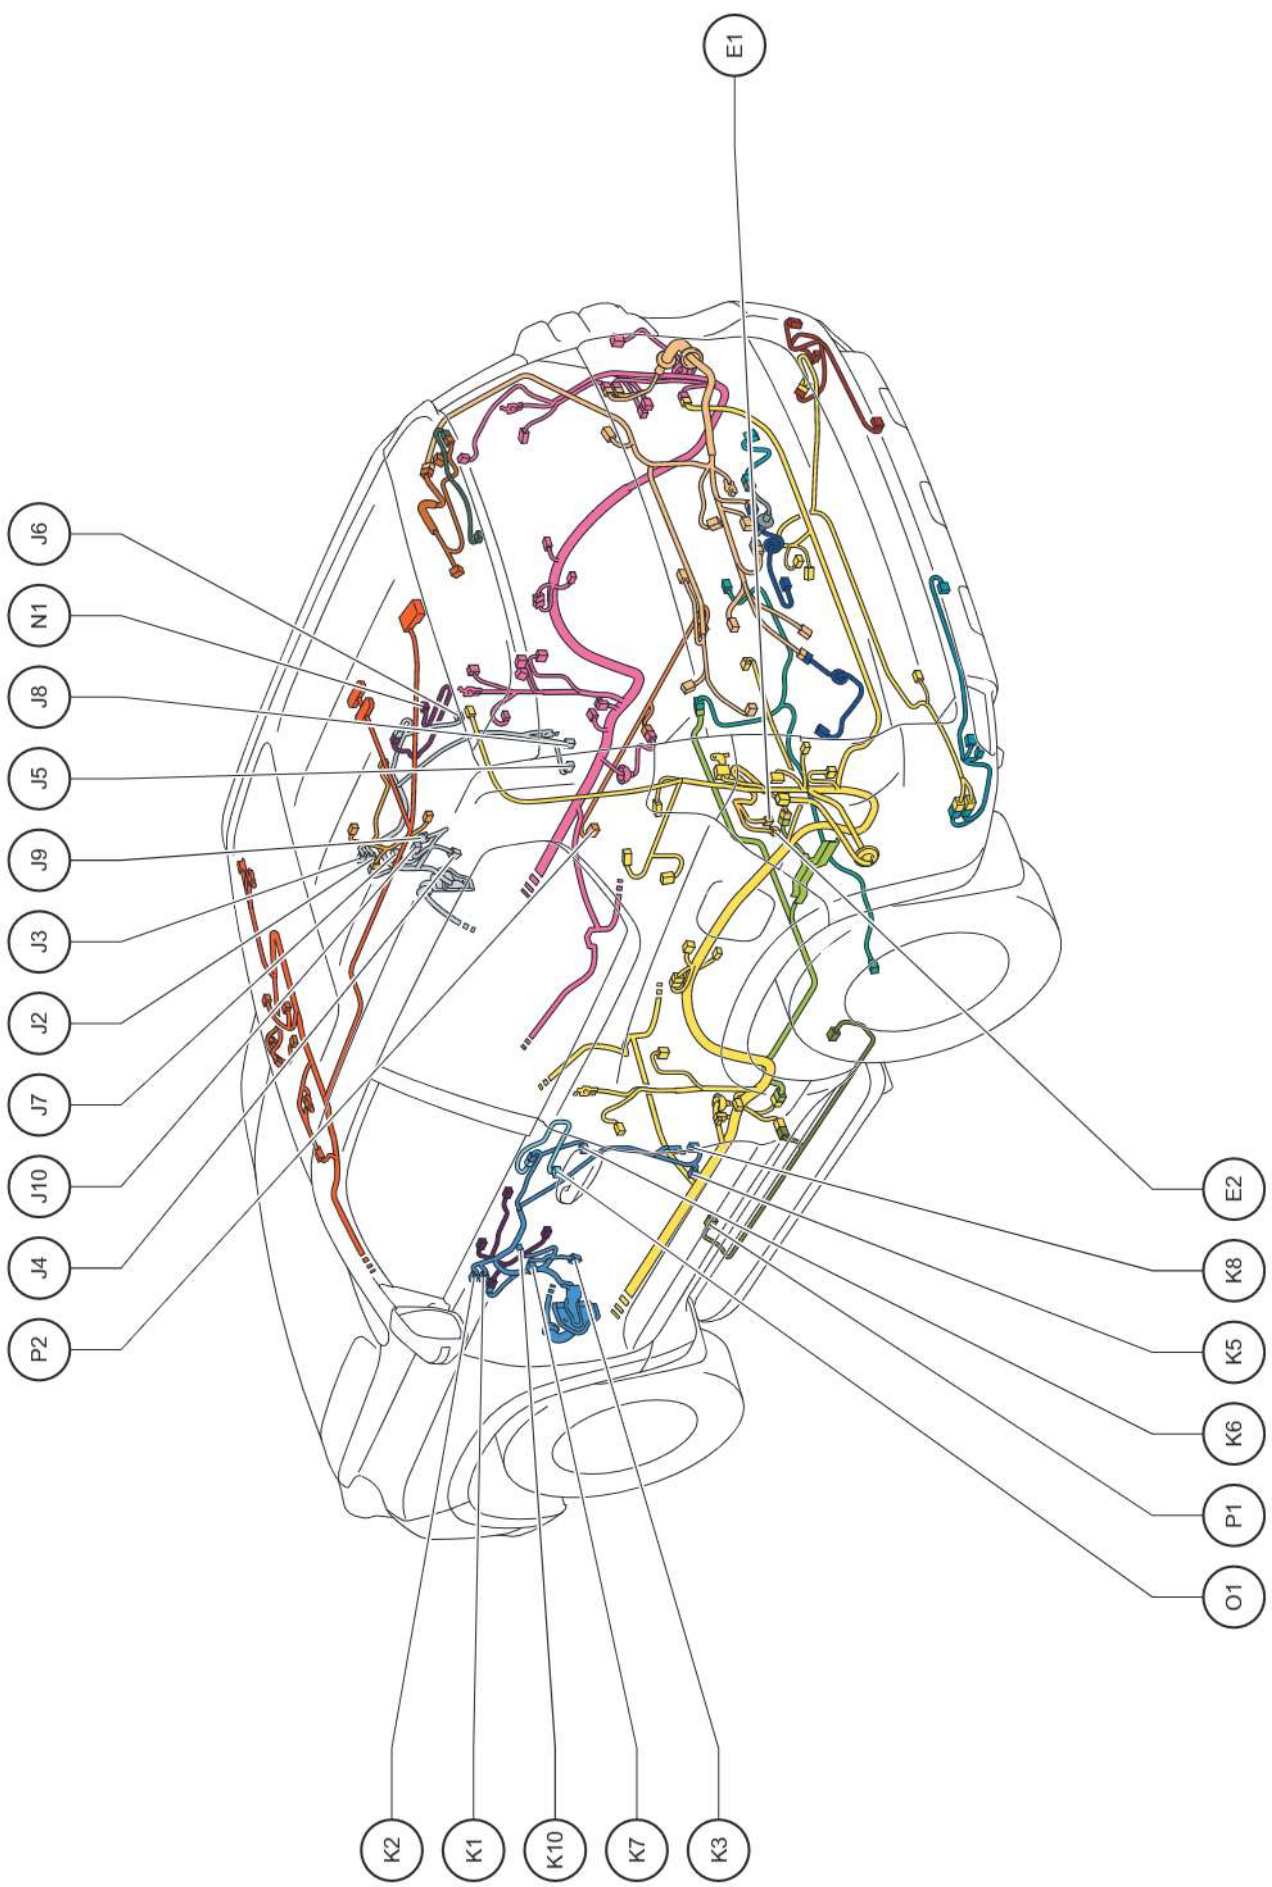

E	1	Differential Lock Shift Actuator
E	2	No. 1 Transfer Indicator Switch
J	2	Outer Rear View Mirror Assembly RH
J	3	Outer Rear View Mirror Assembly RH
J	4	Front No. 2 Speaker Assembly RH
J	5	Front Door Courtesy Light Assembly RH
J	6	Front Door with Motor Lock Assembly RH
J	7	Front Power Window Regulator Motor Assembly RH
J	8	Side Airbag Sensor Assembly RH
J	9	Multiplex Network Master Switch Assembly
J	10	Seat Memory Switch
K	1	Outer Rear View Mirror Assembly LH
K	2	Outer Rear View Mirror Assembly LH
K	3	Front No. 2 Speaker Assembly LH
K	5	Front Door Courtesy Light Assembly LH
K	6	Front Door with Motor Lock Assembly LH
K	7	Front Power Window Regulator Motor Assembly LH
K	8	Side Airbag Sensor Assembly LH
K	10	Front Power Window Regulator Switch Assembly LH
N	1	Electrical Key Antenna RH
O	1	Electrical Key Antenna LH
P	1	Front Side Step Light LH
P	2	Front Side Step Light RH

   Position of Parts in Body <RHD 3-Door>

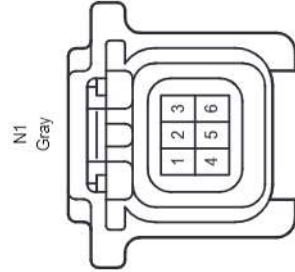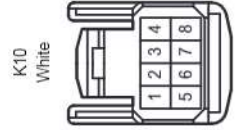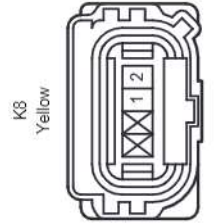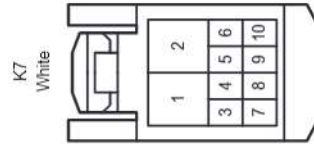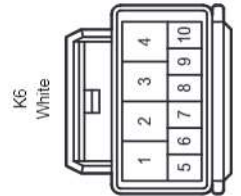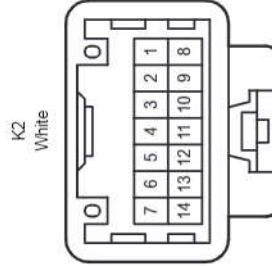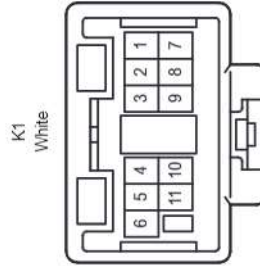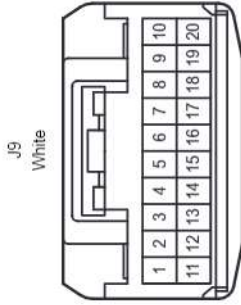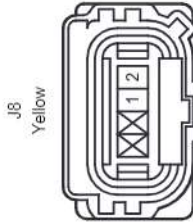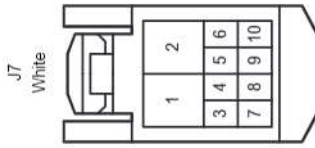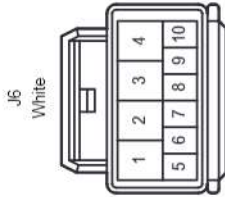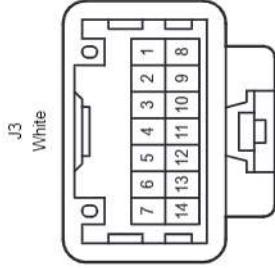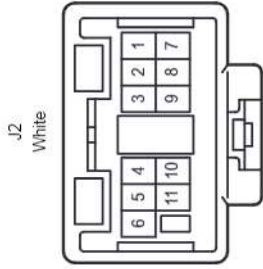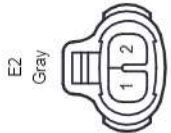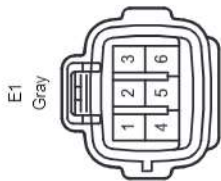

cardiagn.com





Position of Parts in Body <RHD 3-Door>



\* 1:w/ Entry & Start System  
 \* 2:w/o Entry & Start System  
 \* 6:From Aug. 2013 Production

- Q 2 Front Seat Outer Belt Assembly RH
- Q 3 Front Seat Outer Belt Assembly RH
- Q 4 Rear Side Airbag Sensor Assembly RH
- Q 8 Front Door Courtesy Light Switch Assembly RH
- Q 15 Rear Header Speaker Assembly RH
- Q 16 Rear Power Point Socket Assembly
- Q 18 Theft Warning Siren Assembly
- Q 22 Power Outlet Socket
- Q 23 Junction Connector
- Q 24 Junction Connector
- Q 27 Voltage Inverter Assembly
- Q 29 Curtain Shield Airbag Assembly RH
- Q 30 No. 1 Speaker with Box Assembly
- Q 31 Rear Combination Light Assembly RH
- Q 32 Rear Speaker Set RH
- Q 33 Theft Warning Siren Assembly
- R 2 Front Seat Outer Belt Assembly LH
- R 3 Front Seat Outer Belt Assembly LH
- R 4 Rear Side Airbag Sensor Assembly LH
- R 7 Front Door Courtesy Light Switch Assembly LH
- R 9 Back Door Courtesy Light Switch Assembly
- R 13 Rear Header Speaker Assembly LH
- R 15 No. 3 Indoor Electrical Key Antenna Assembly
- R 16 Outside Luggage Electrical Key Antenna
- R 17 Door Control Receiver
- R 22 Rear Combination Light Assembly LH
- R 23 Trailer Socket
- R 26 Door Control Receiver
- R 27 Junction Connector
- R 28 Junction Connector
- R 29 Junction Connector
- R 30 Junction Connector
- R 31 Junction Connector
- R 35 Curtain Shield Airbag Assembly LH
- R 37 Rear Speaker Set LH
- R 39 Fuel Tank Sub-Assembly
- R 40 Fuel Sender Gauge Assembly
- R 41 Tire Pressure Warning ECU and Receiver

Position of Parts in Body <RHD 3-Door>

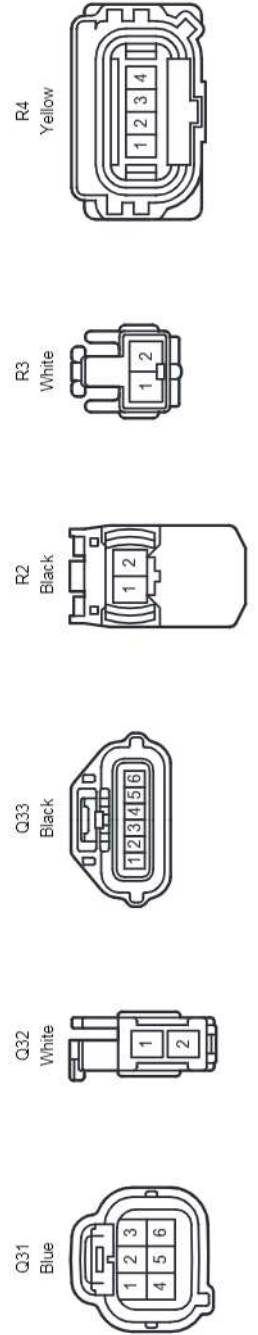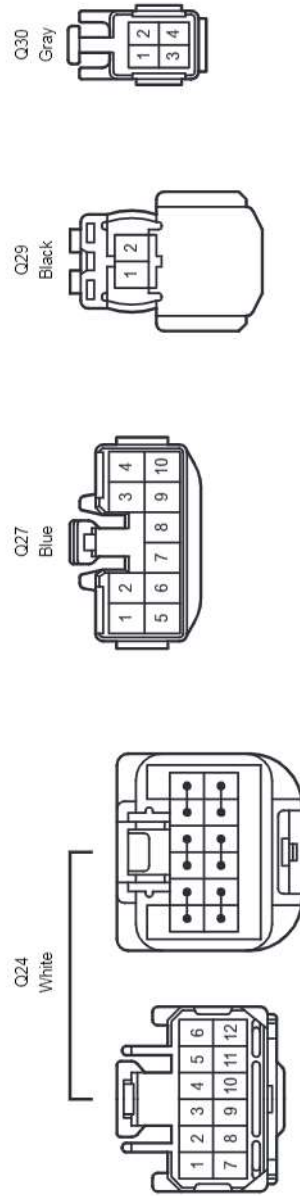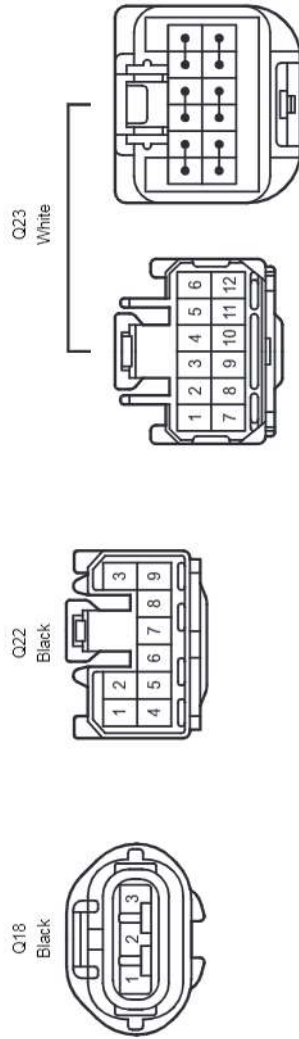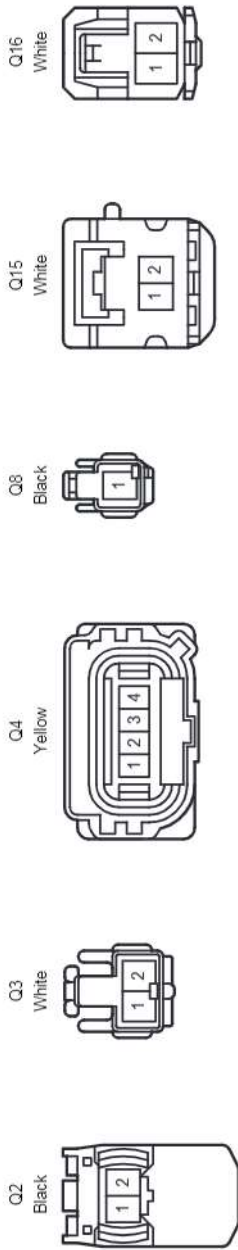


cardiagn.com

R7 R13 R15 R16 R17




Position of Parts in Body <RHD 3-Door>


R22  
Blue

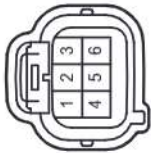


R23  
White

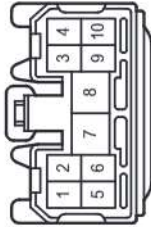


R26  
White

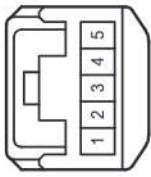


R27  
Dark Gray

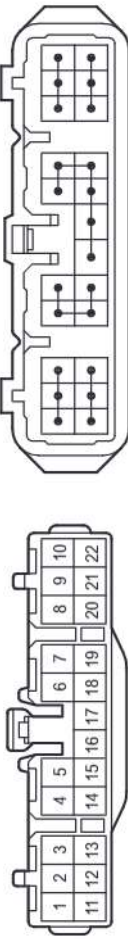


R28  
White

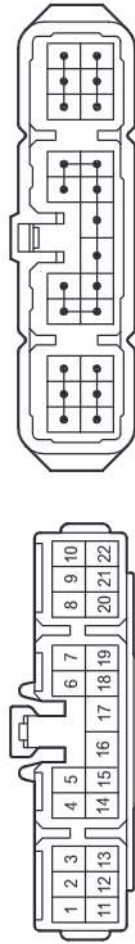

R29  
Blue

 


R30  
Blue

 


R31  
White



 R35  
Black



R37  
White

 


R39  
Dark Gray



R40  
Black




Position of Parts in Body <RHD 3-Door>

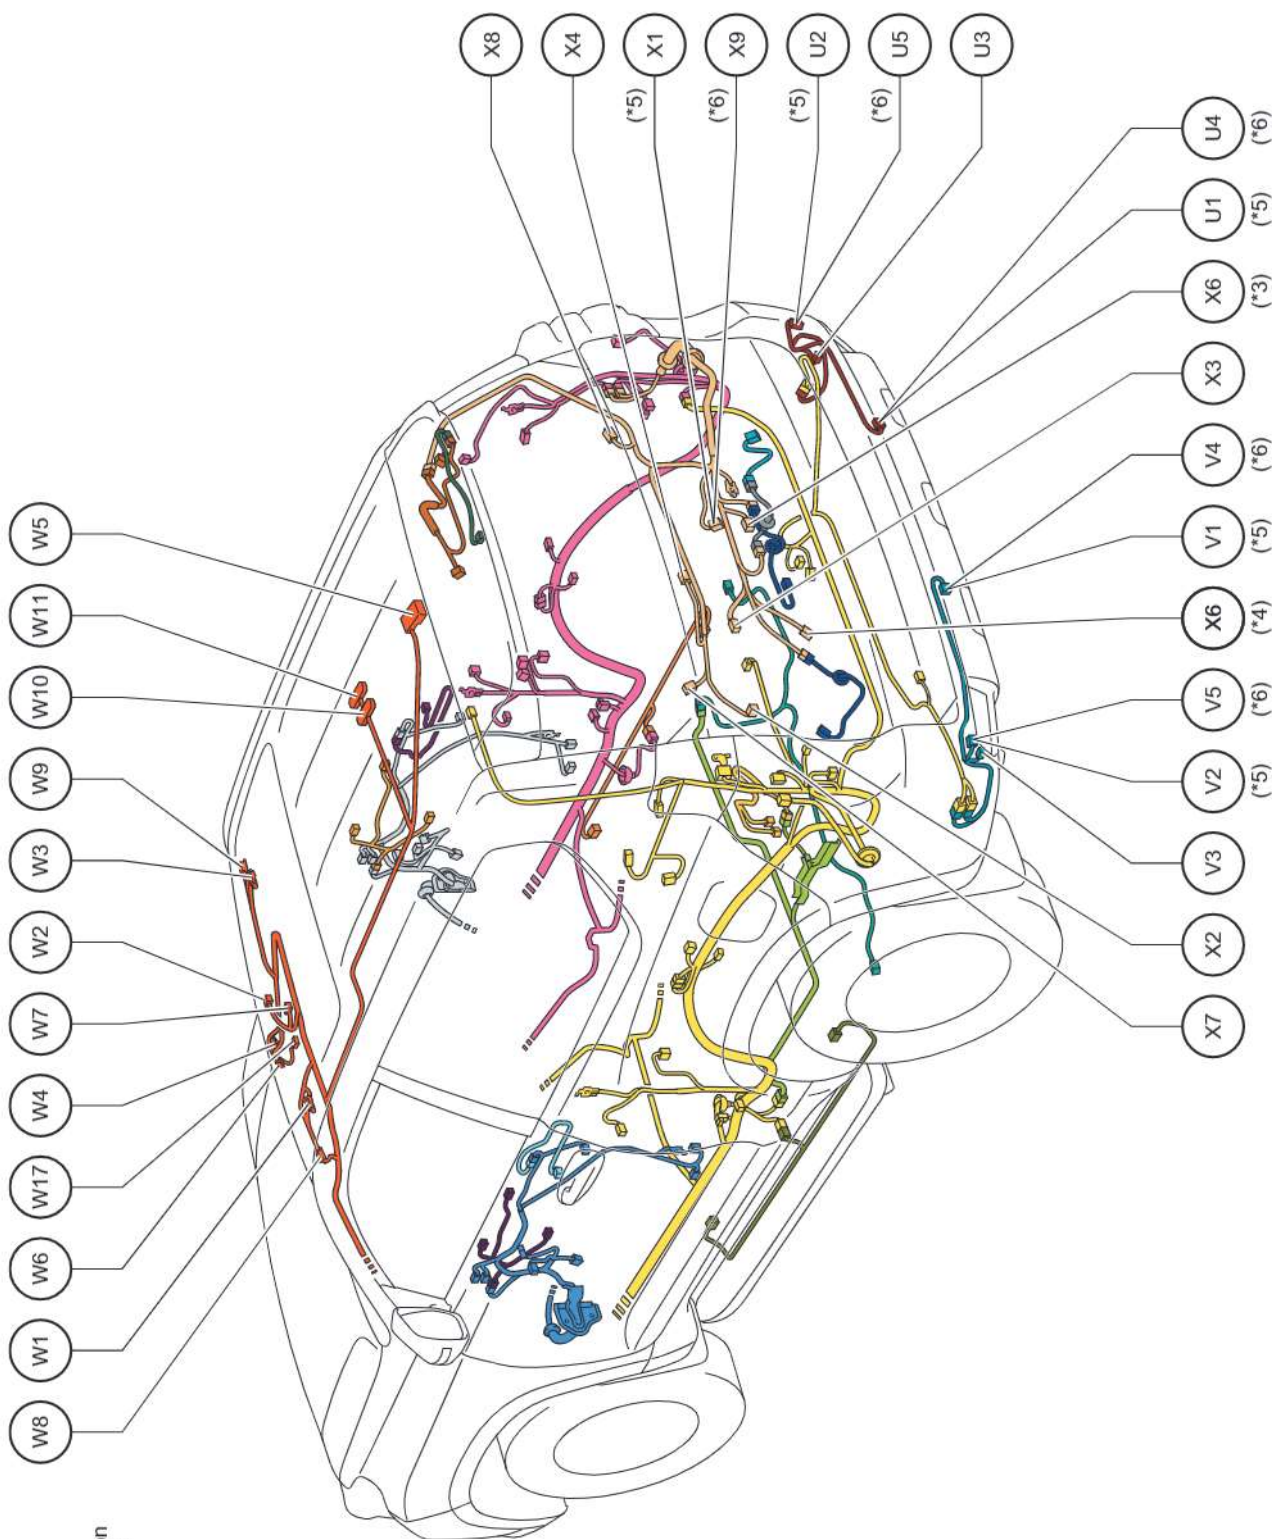


\* 3:w/ Glass Hatch Opener  
 \* 4:w/o Glass Hatch Opener  
 \* 5:Before Aug. 2013 Production  
 \* 6:From Aug. 2013 Production

- U 1 Rear No. 1 Ultrasonic Sensor Center RH
- U 2 Rear No. 1 Ultrasonic Sensor RH
- U 3 Rear Fog Light Assembly RH
- U 4 Rear No. 1 Ultrasonic Sensor Center RH
- U 5 Rear No. 1 Ultrasonic Sensor RH
- V 1 Rear No. 1 Ultrasonic Sensor Center LH
- V 2 Rear No. 1 Ultrasonic Sensor LH
- V 3 Rear Fog Light Assembly LH
- V 4 Rear No. 1 Ultrasonic Sensor Center LH
- V 5 Rear No. 1 Ultrasonic Sensor LH
- W 1 Vanity Light Assembly LH
- W 2 Sliding Roof Control ECU
- W 3 Vanity Light Assembly RH
- W 4 Inner Rear View Mirror Assembly
- W 5 No. 2 Room Light Assembly
- W 6 Rain Sensor
- W 7 Map Light Assembly
- W 8 Visor Assembly LH
- W 9 Visor Assembly RH
- W 10 No. 1 Room Light Assembly LH
- W 11 No. 1 Room Light Assembly RH
- W 17 Inner Rear View Mirror Assembly
- X 1 Rear Television Camera Assembly
- X 2 Back Door Lock Assembly
- X 3 Glass Hatch Opener Switch Assembly
- X 4 Back Window Lock Assembly
- X 6 Luggage Electrical Key Switch
- X 7 Rear Window Defogger (Back Door Glass)
- X 8 Rear Window Defogger (Back Door Glass)
- X 9 Rear Television Camera Assembly


Position of Parts in Body <RHD 3-Door>

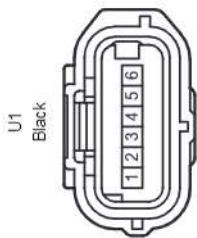


U1  
Black

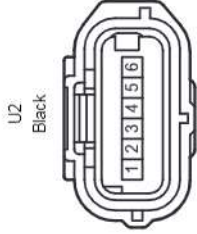


U2  
Black

 


U3  
Gray

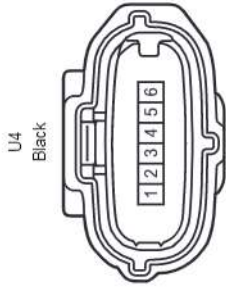


U4  
Black

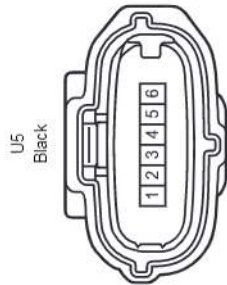


V1  
Black

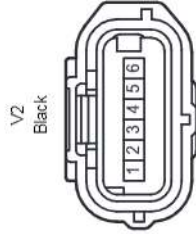


V2  
Black

 


V3  
Gray

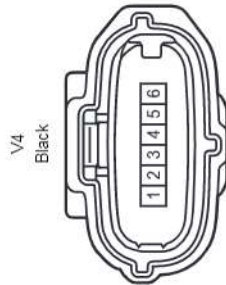


V4  
Black

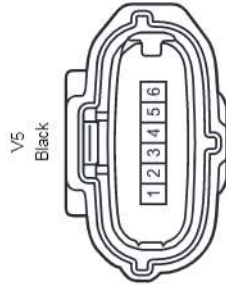


V5  
Black

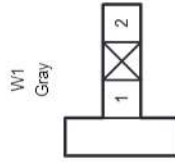


W1  
Gray

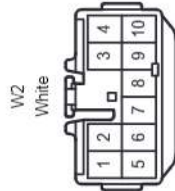


W2  
White

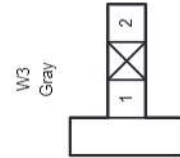


W3  
Gray

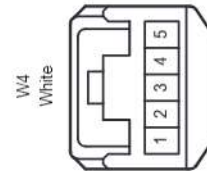


W4  
White

 


W5  
Gray

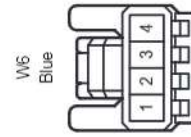

W6  
Blue








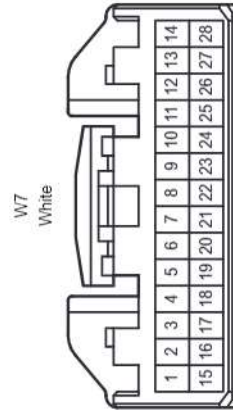


W7  
White

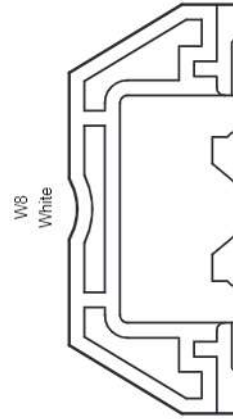


W8  
White

 Position of Parts in Body <RHD 3-Door>

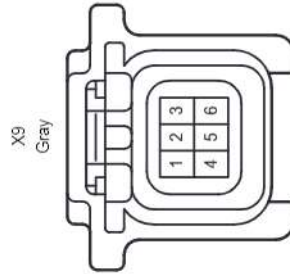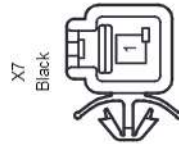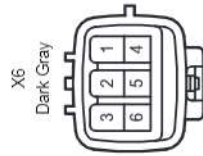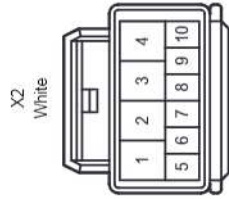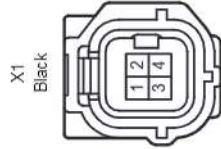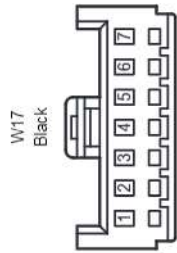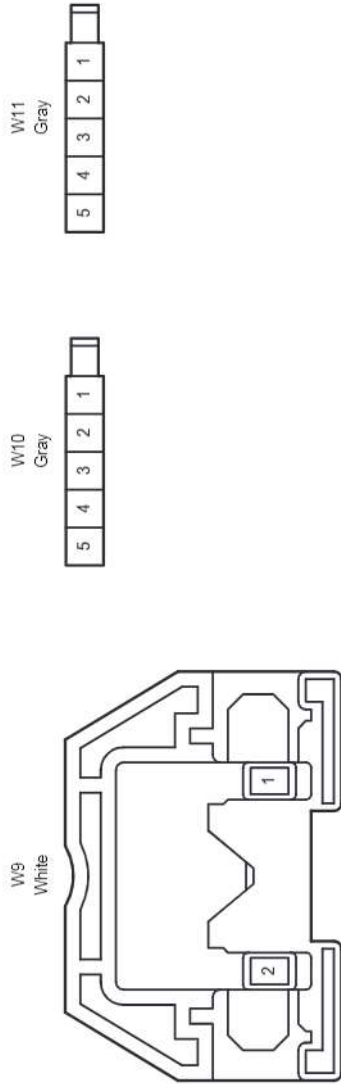

Position of Parts in Body <RHD 3-Door>

- \* 3:w/ Glass Hatch Opener
- \* 4:w/o Glass Hatch Opener
- \* 5:Before Aug. 2013 Production
- \* 6:From Aug. 2013 Production










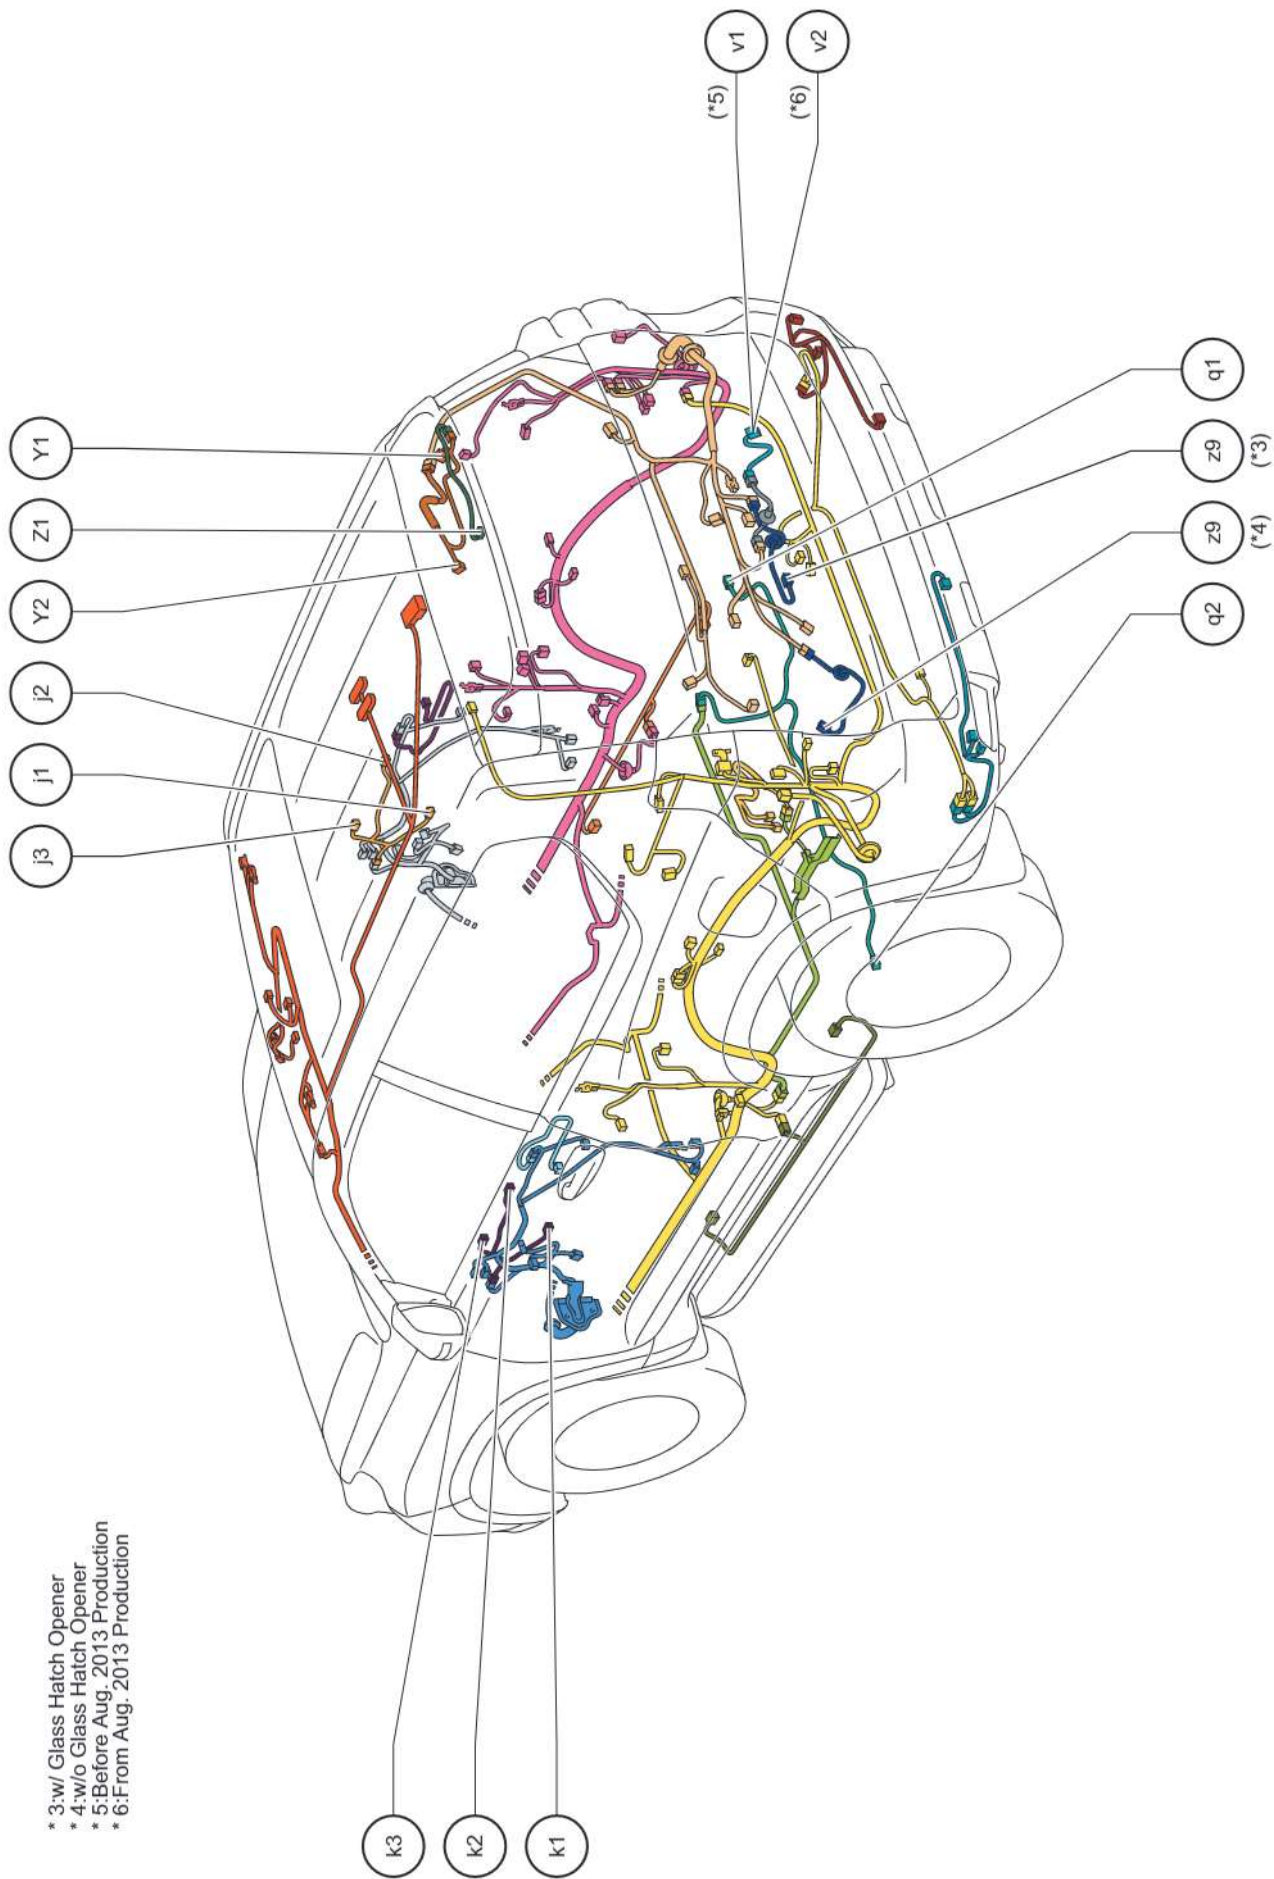


Position of Parts in Body <RHD 3-Door>

---

- Y 1 Rear Wiper Motor Assembly
- Y 2 Rear Window Defogger (Back Door Glass)
- Z 1 Center Stop Light Assembly
- j 1 Front Door Pocket Illumination RH
- j 2 Front Door Trim Illumination RH
- j 3 Front Door Inside Handle Illumination Light Assembly RH
- k 1 Front Door Pocket Illumination LH
- k 2 Front Door Trim Illumination LH
- k 3 Front Door Inside Handle Illumination Light Assembly LH
- q 1 Rear Speed Sensor RH
- q 2 Rear Speed Sensor LH
- v 1 Rear Television Camera Assembly
- v 2 Rear Television Camera Assembly
- z 9 License Plate Light Assembly

  
Position of Parts in Body <RHD 3-Door>

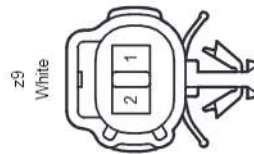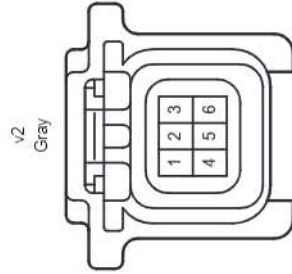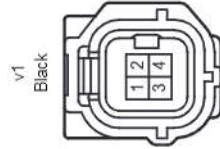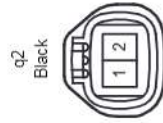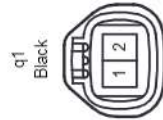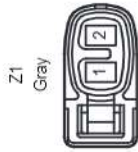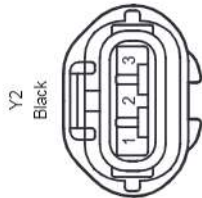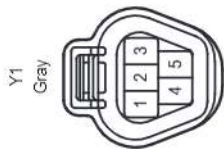








Wire and Wire in Body <RHD 3-Door>


- \* 1:w/ Glass Hatch Opener
- \* 2:w/o Glass Hatch Opener

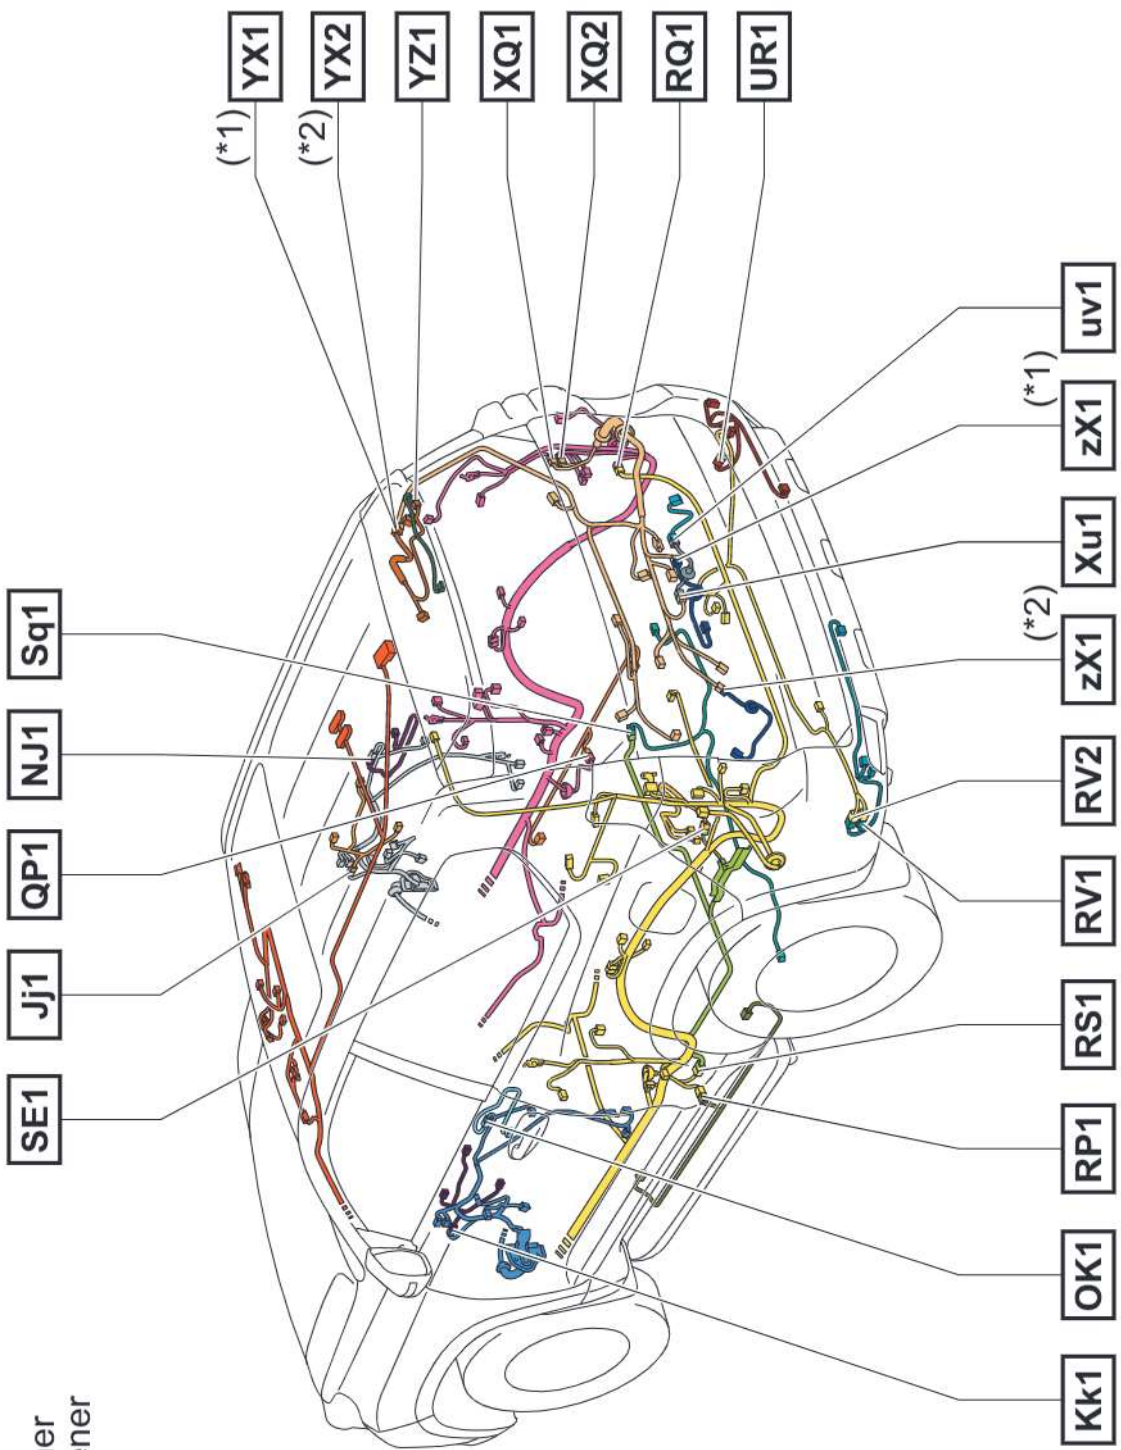

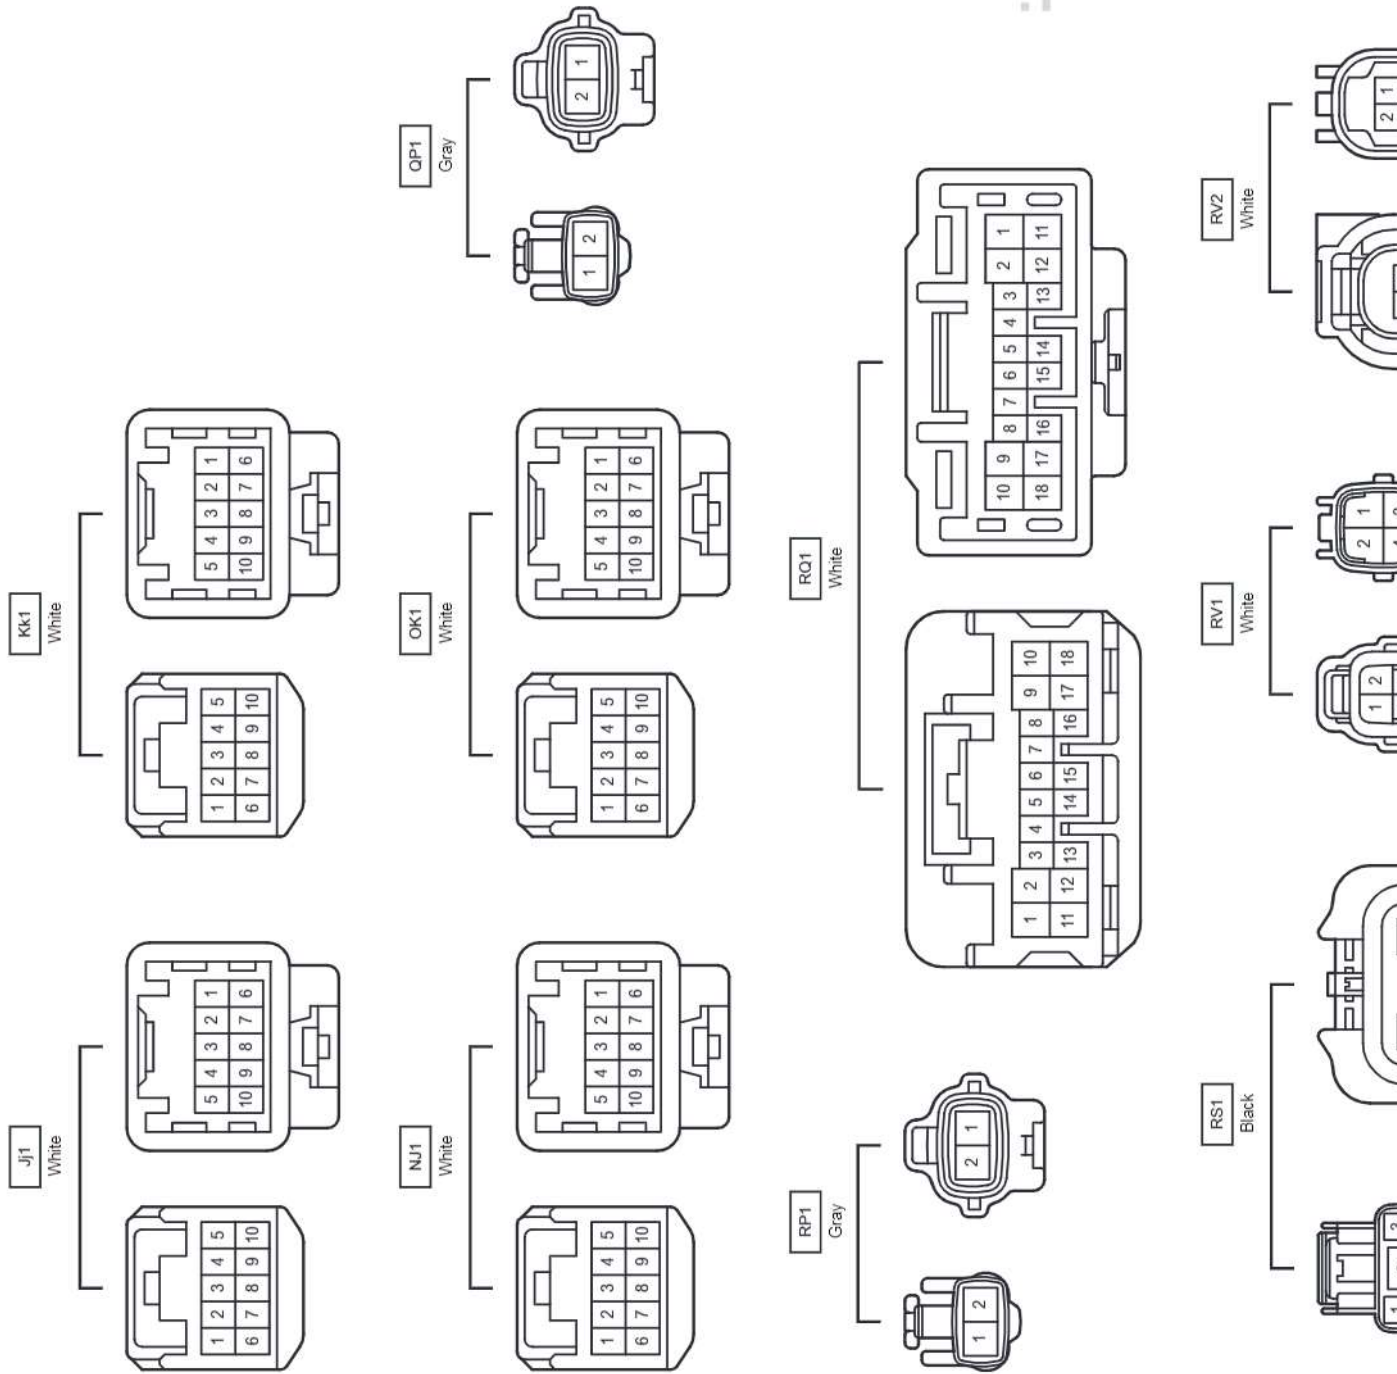


Wire and Wire in Body <RHD 3-Door>

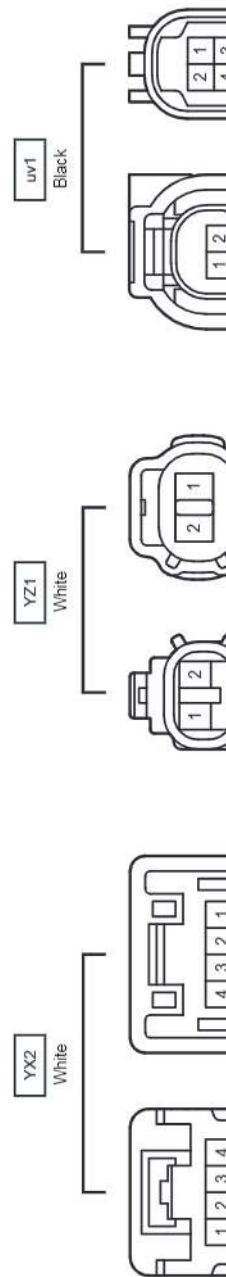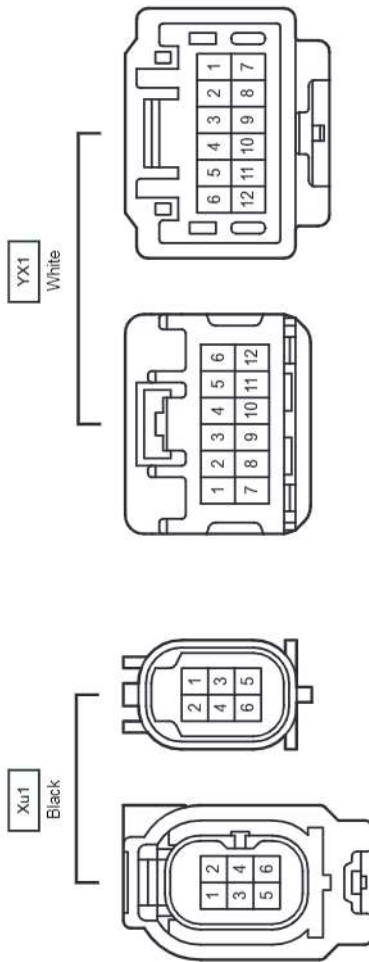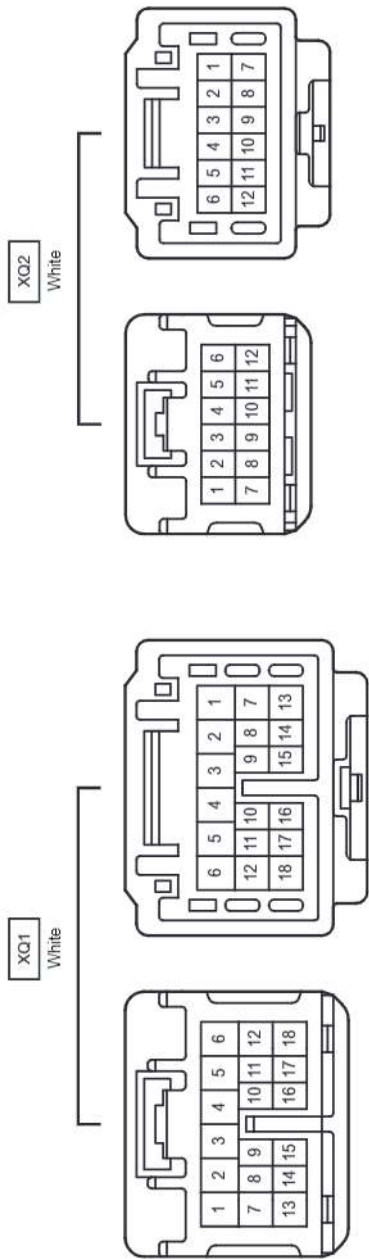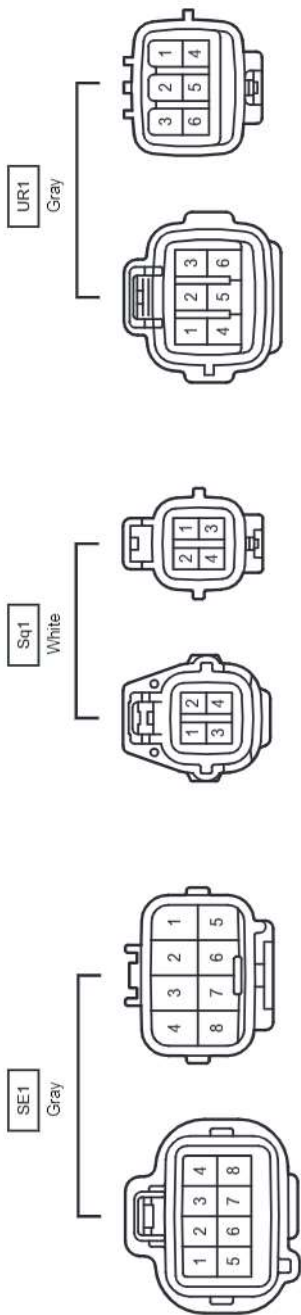

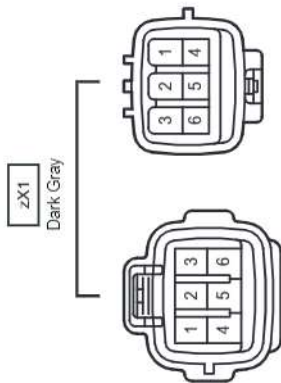

Position of Parts in Seat <LHD Rear No. 2 Seat>








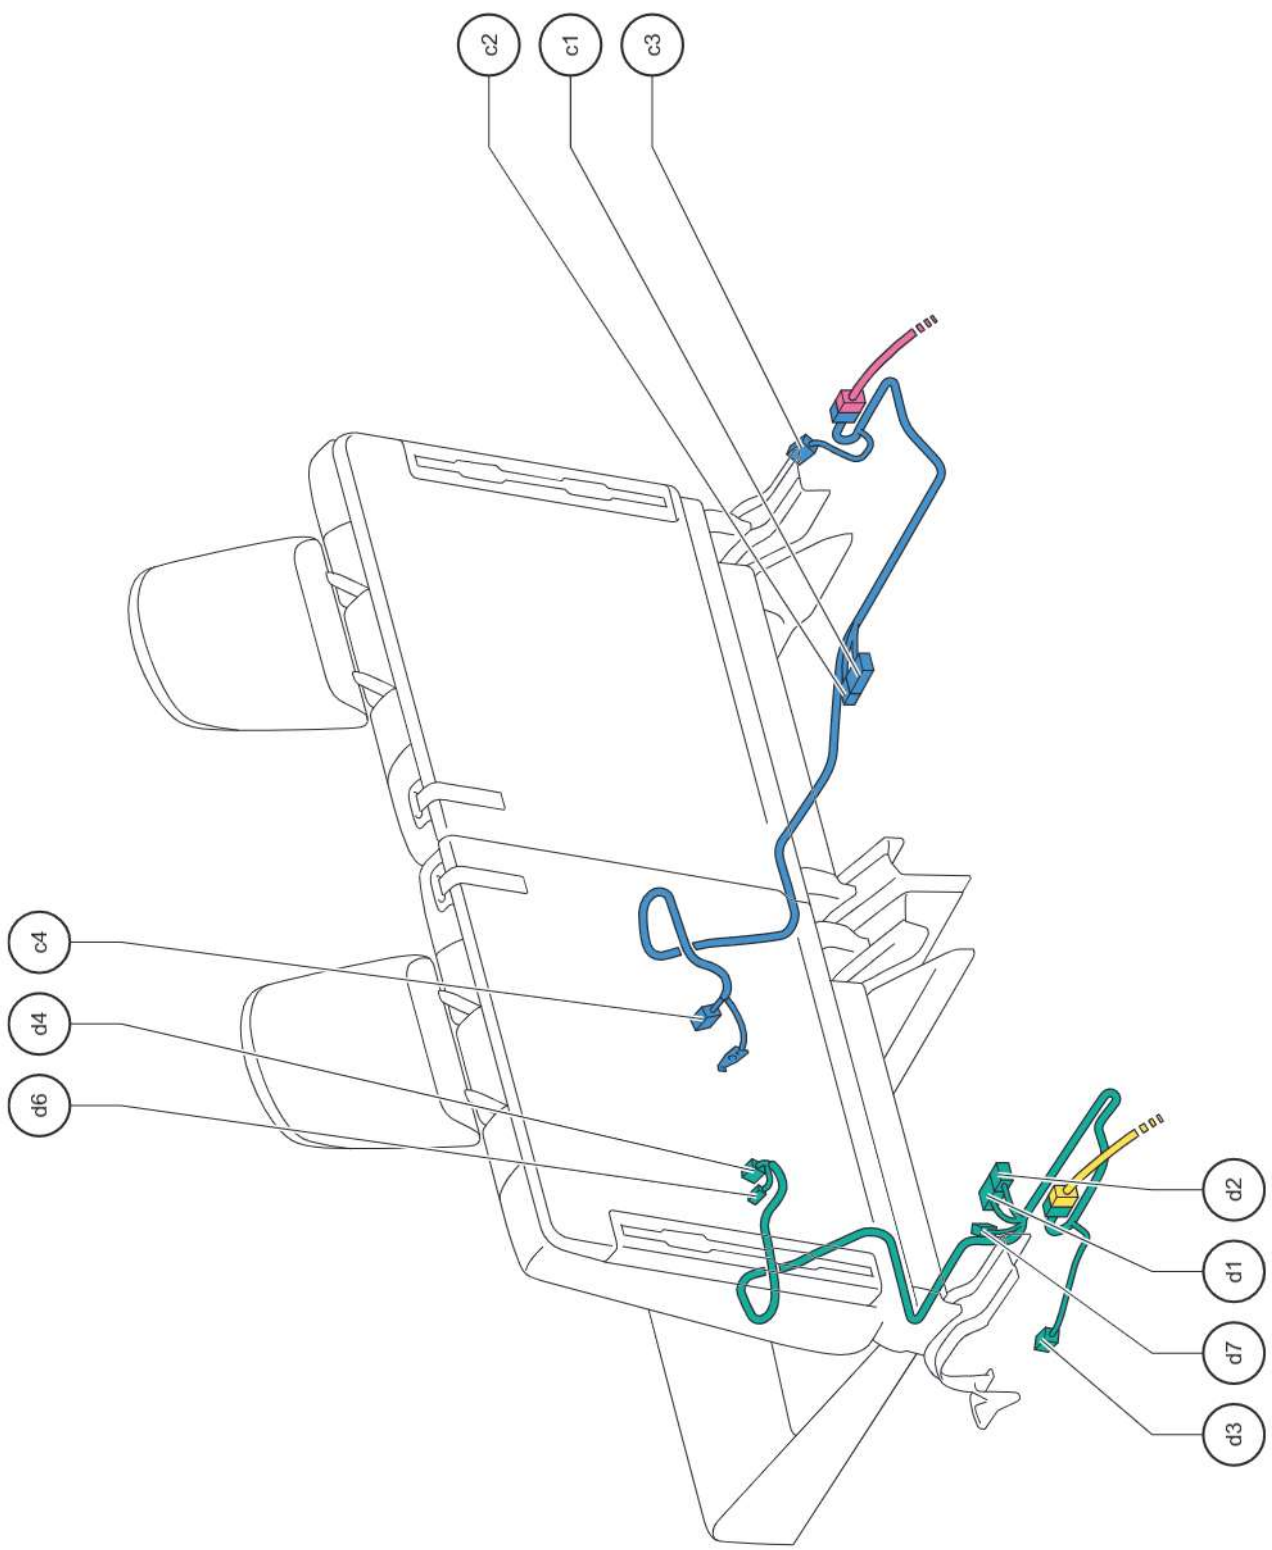


Position of Parts in Seat <LHD Rear No. 2 Seat>


---

- c 1 Fold Seat Control ECU RH
- c 2 Fold Seat Control ECU RH
- c 3 No. 3 Seat Back Frame Sub-Assembly RH
- c 4 No. 2 Seat Cushion Frame Sub-Assembly RH
- d 1 Fold Seat Control ECU LH
- d 2 Fold Seat Control ECU LH
- d 3 No. 3 Seat Back Frame Sub-Assembly LH
- d 4 No. 2 Seat Cushion Frame Sub-Assembly LH
- d 6 No. 2 Seat Cushion Frame Sub-Assembly LH
- d 7 Junction Connector

Position of Parts in Seat <LHD Rear No. 2 Seat>

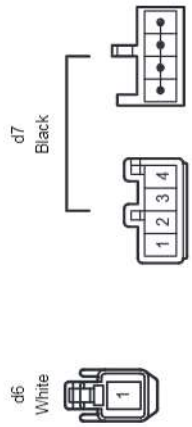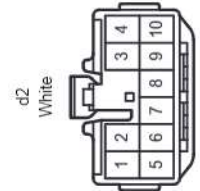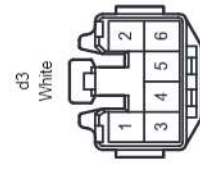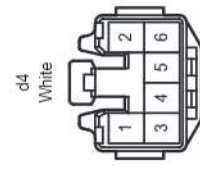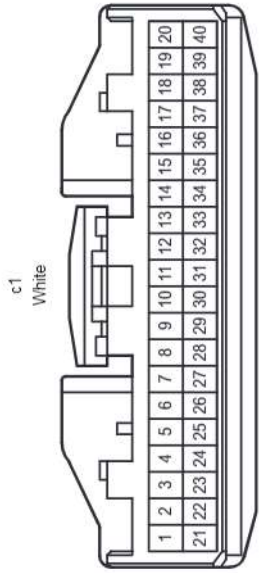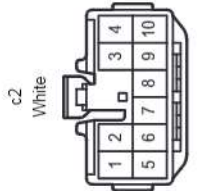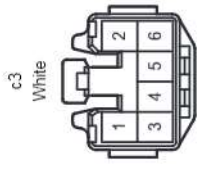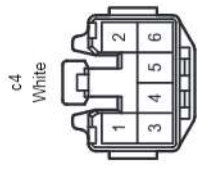


Wire and Wire , Ground Points in Seat <LHD Rear No. 2 Seat>

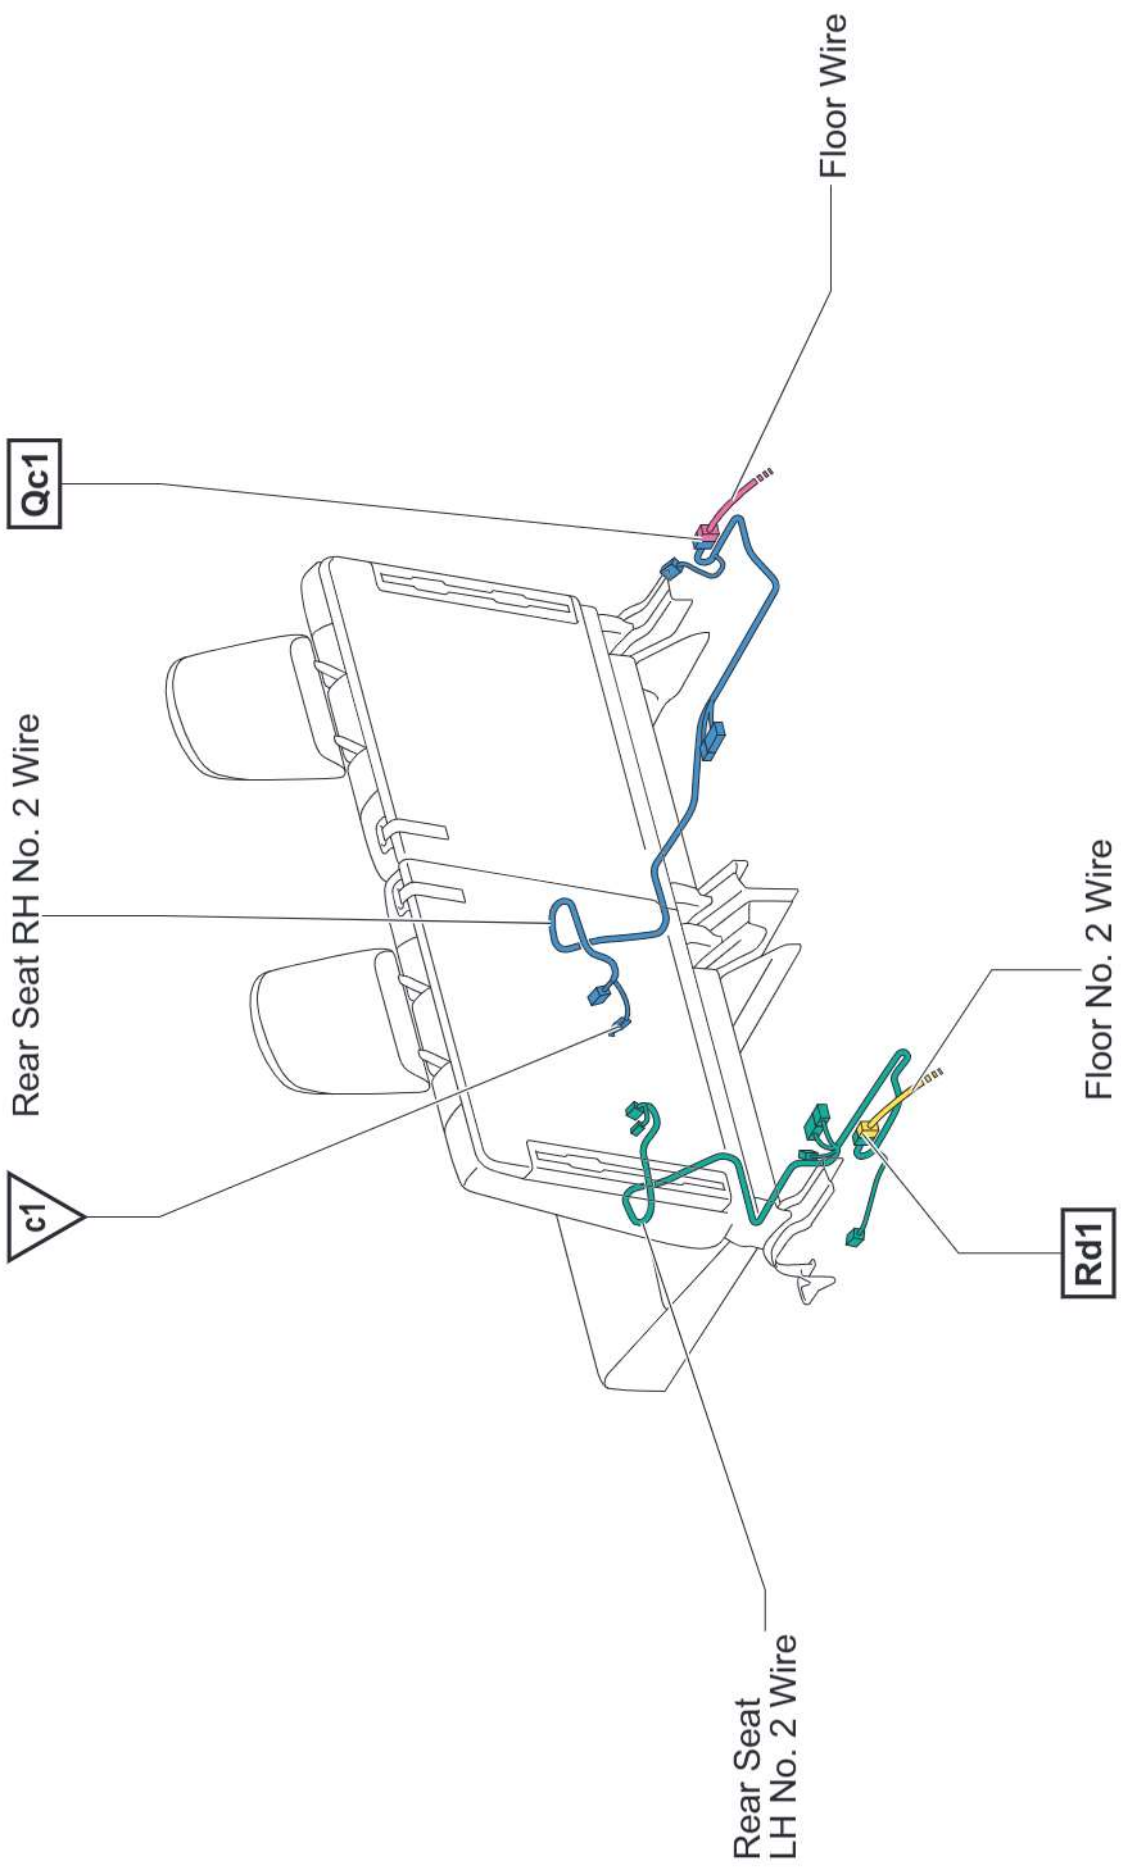




Wire and Wire , Ground Points in Seat <LHD Rear No. 2 Seat>

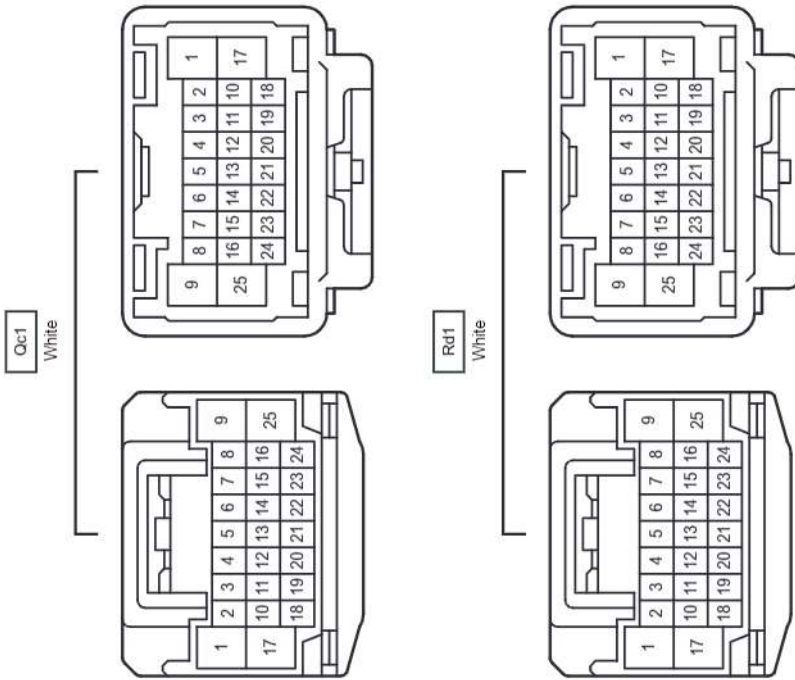

Position of Parts in Seat <RHD Rear No. 2 Seat>



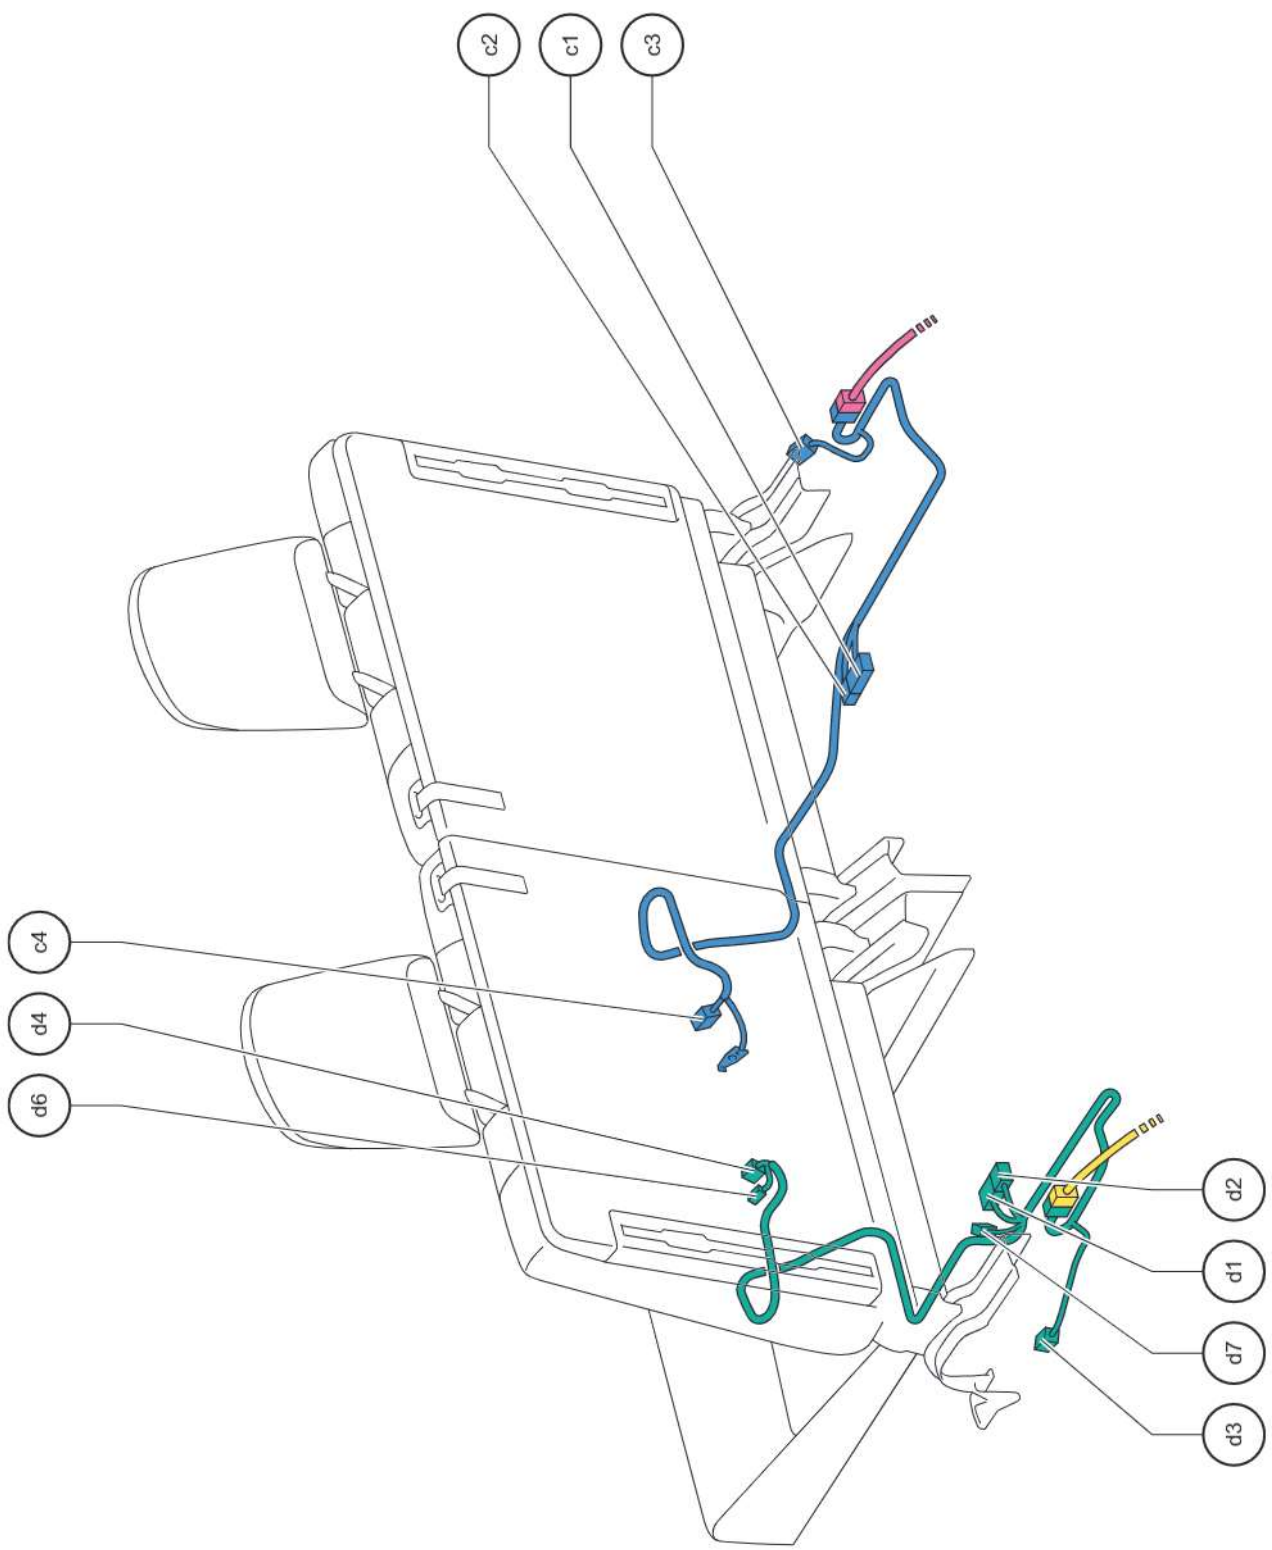


Position of Parts in Seat <RHD Rear No. 2 Seat>


---

- c 1 Fold Seat Control ECU RH
- c 2 Fold Seat Control ECU RH
- c 3 No. 3 Seat Back Frame Sub-Assembly RH
- c 4 No. 2 Seat Cushion Frame Sub-Assembly RH
- d 1 Fold Seat Control ECU LH
- d 2 Fold Seat Control ECU LH
- d 3 No. 3 Seat Back Frame Sub-Assembly LH
- d 4 No. 2 Seat Cushion Frame Sub-Assembly LH
- d 6 No. 2 Seat Cushion Frame Sub-Assembly LH
- d 7 Junction Connector


Position of Parts in Seat <RHD Rear No. 2 Seat>

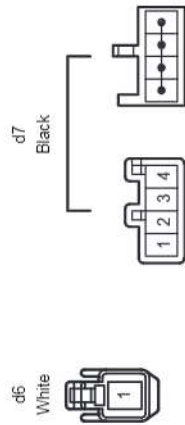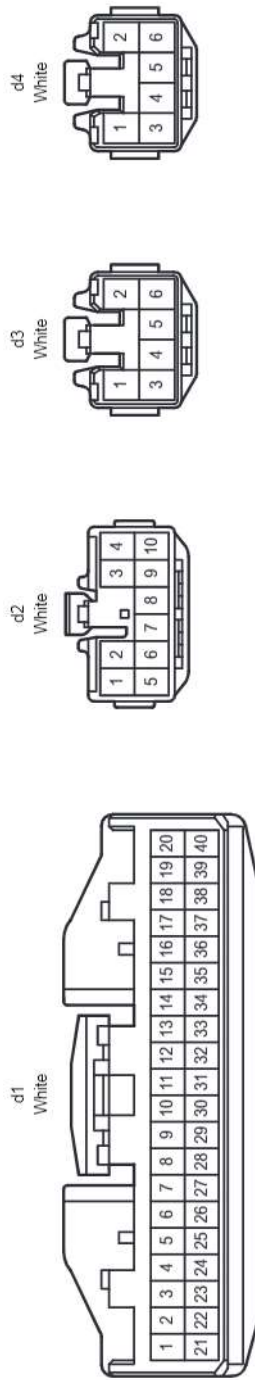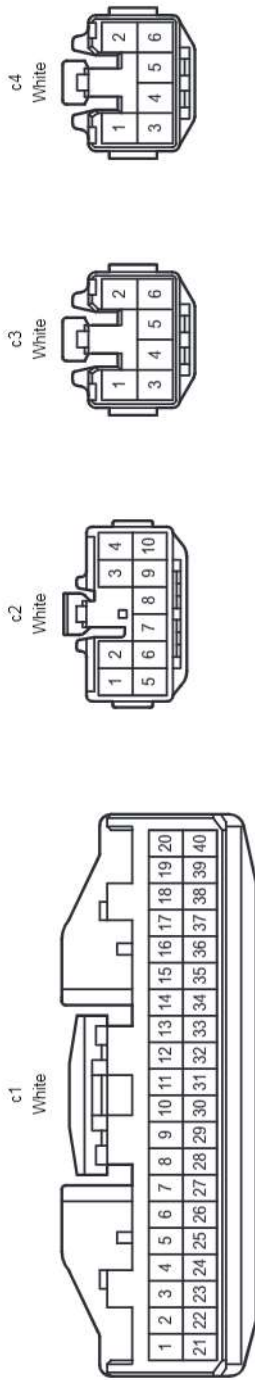


Wire and Wire , Ground Points in Seat <RHD Rear No. 2 Seat>

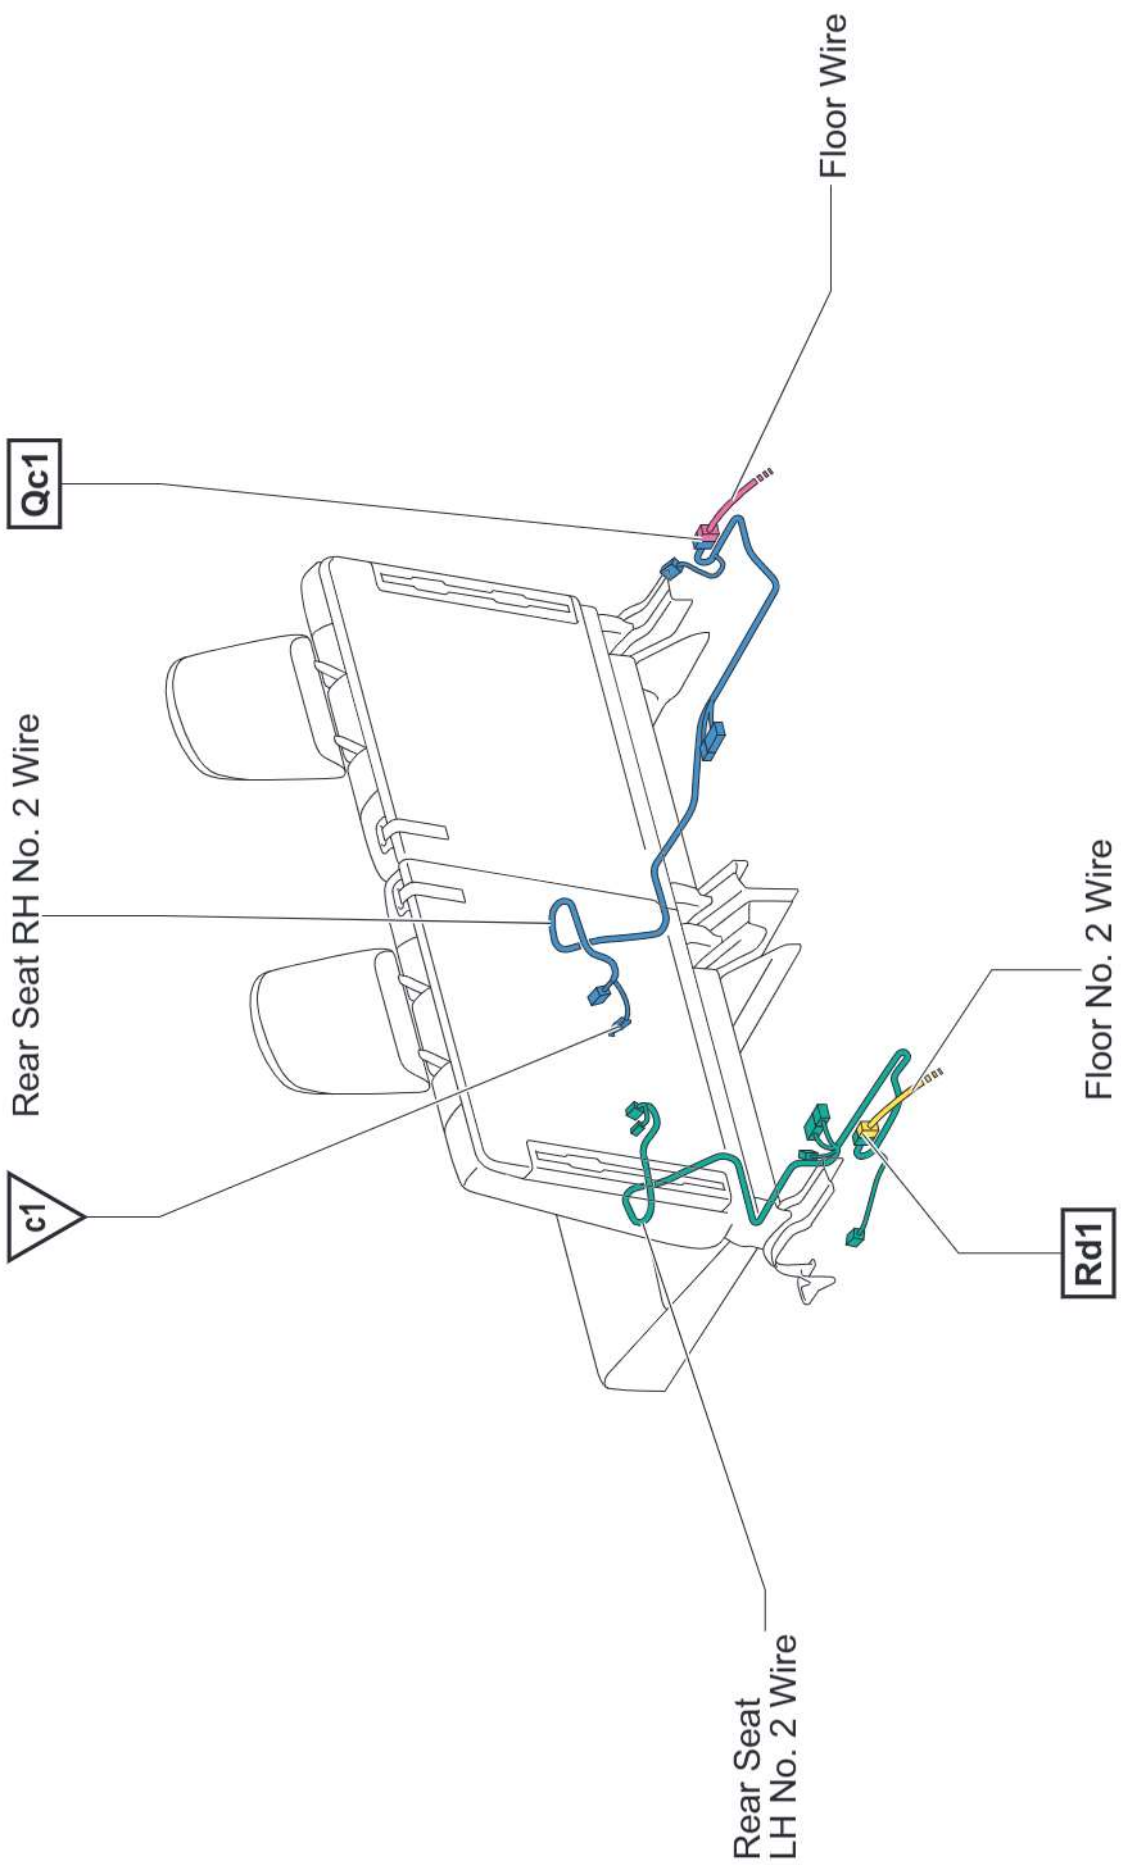


Wire and Wire , Ground Points in Seat <RHD Rear No. 2 Seat>

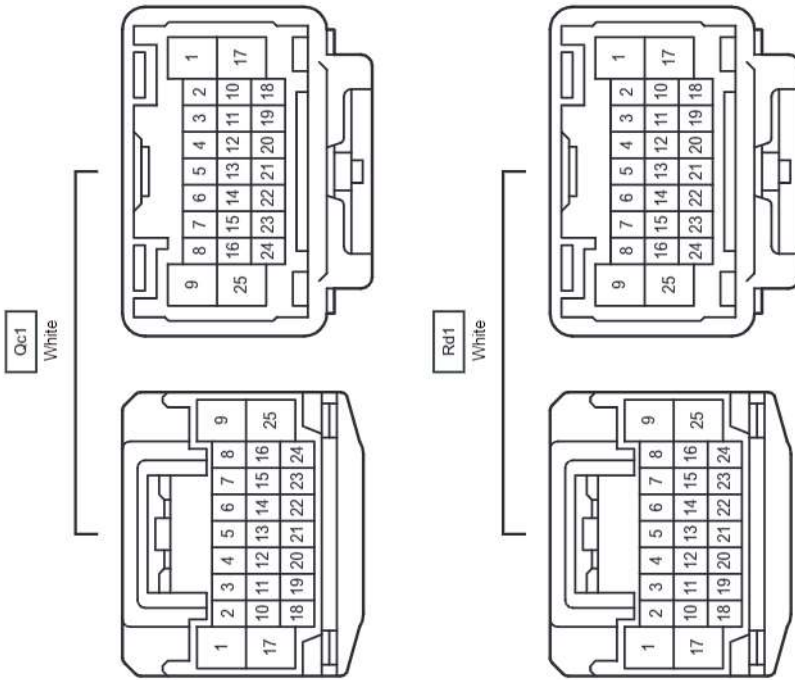

Antenna in Antenna <LHD 5-Door>

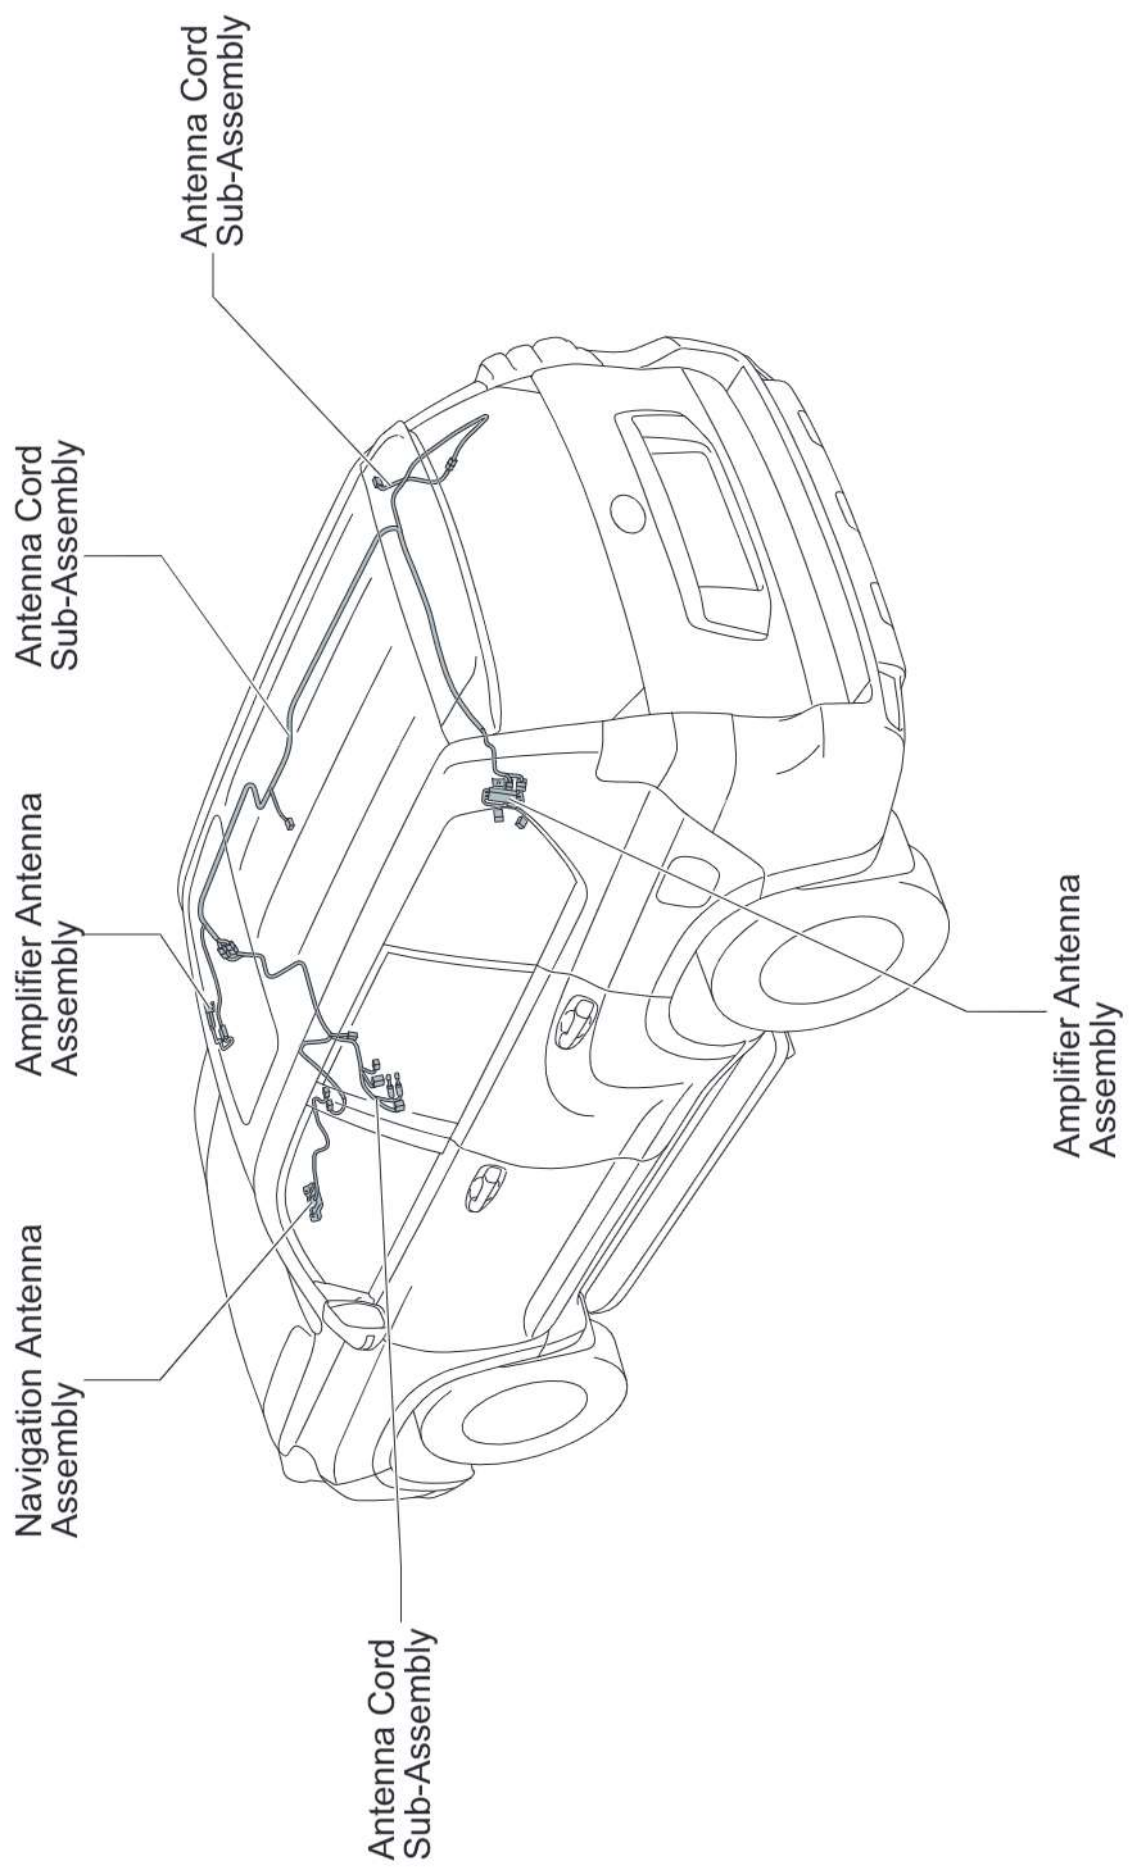


Antenna in Antenna <RHD 5-Door>

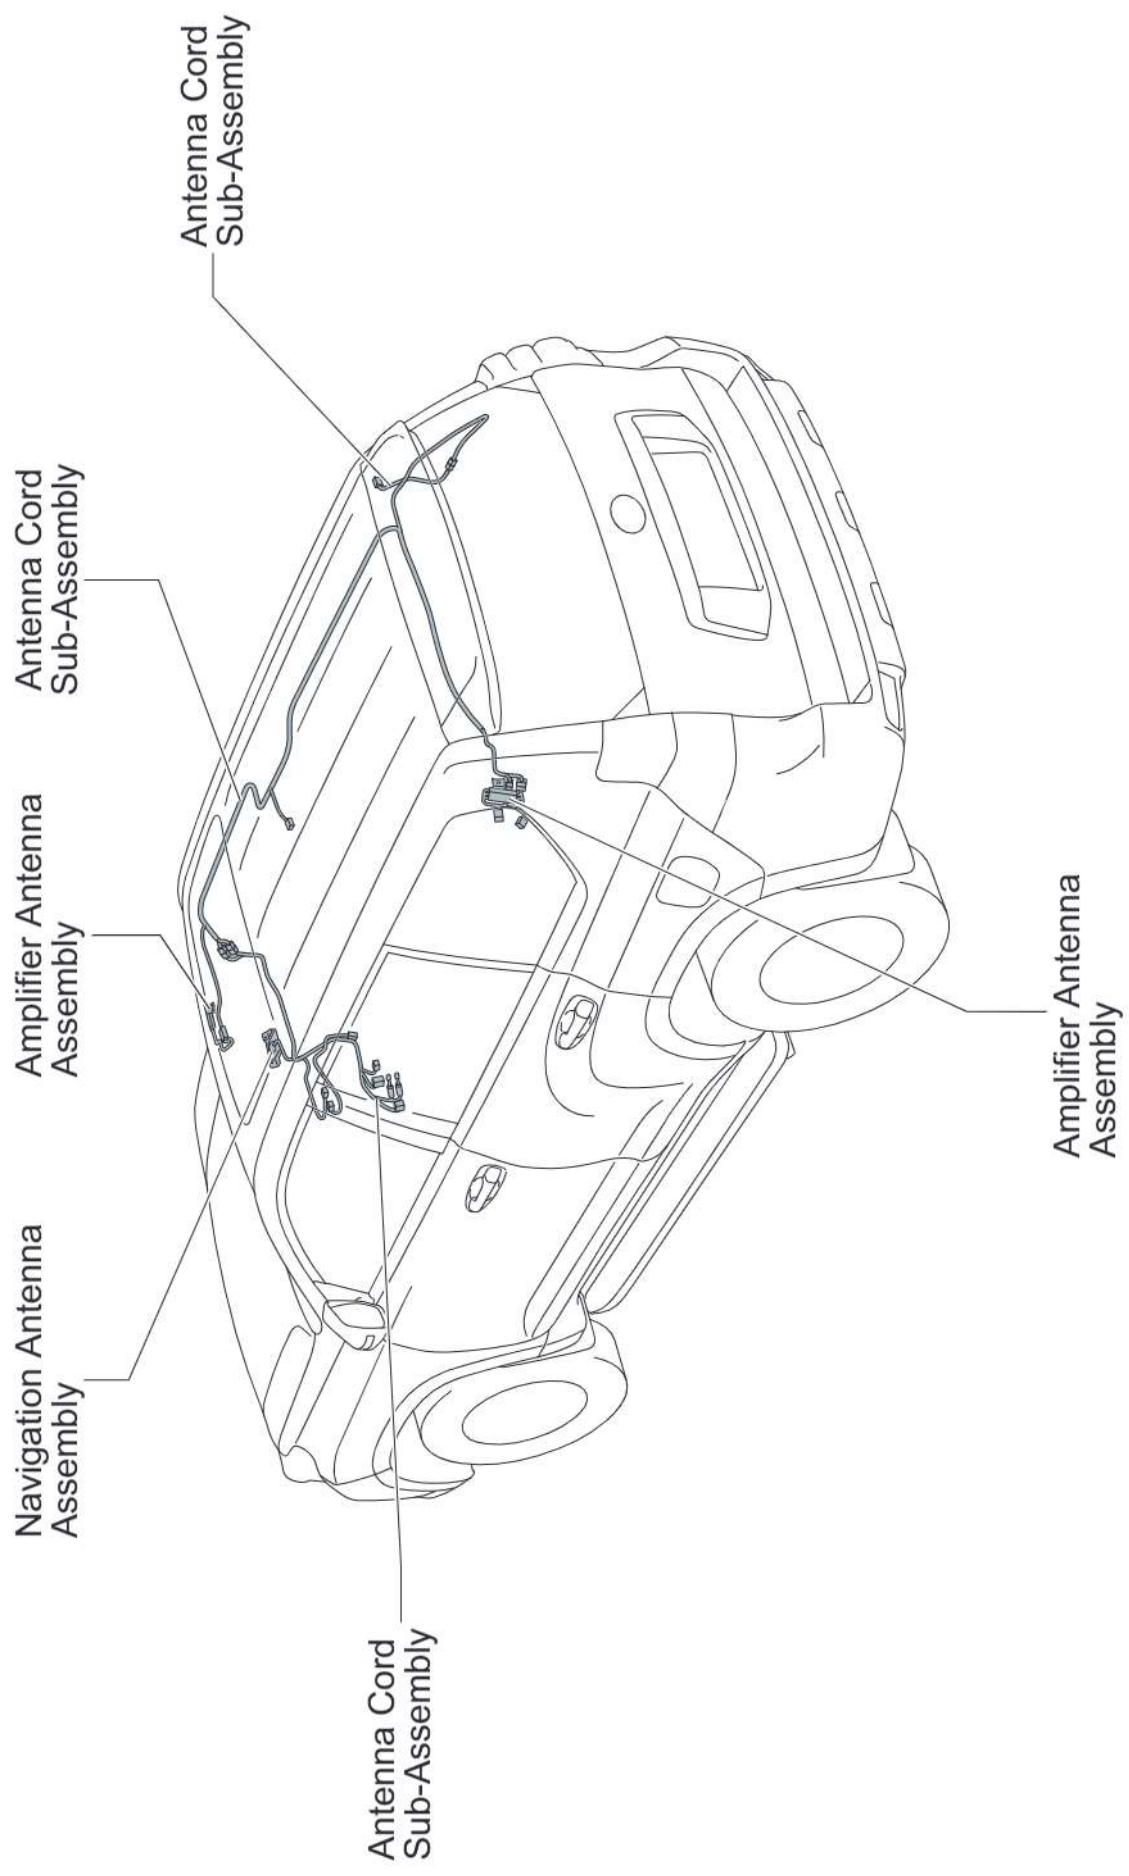

























Position of Parts in Body <LHD 5-Door>

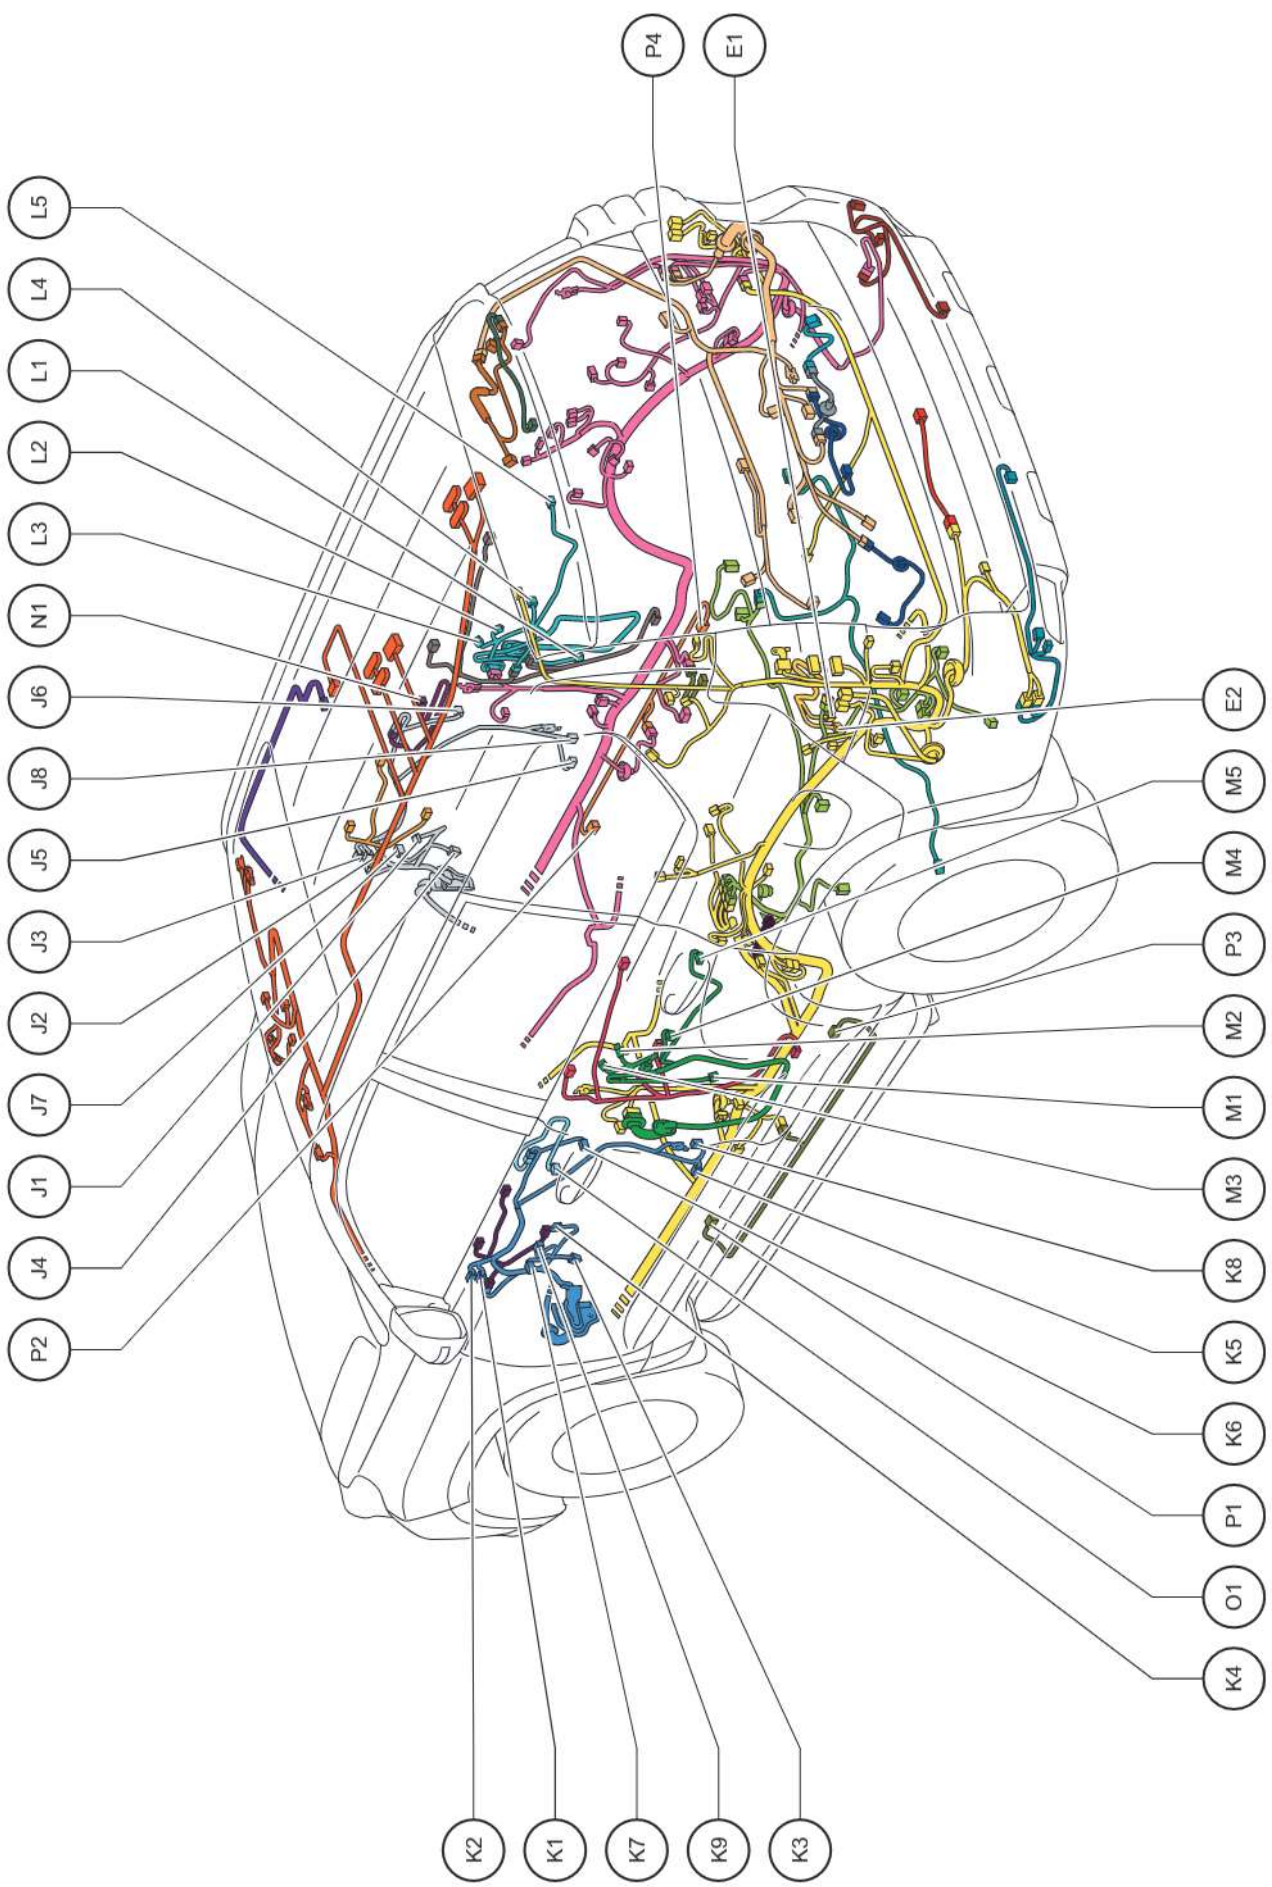






E	1	Differential Lock Shift Actuator
E	2	No. 1 Transfer Indicator Switch
J	1	Front Power Window Regulator Switch Assembly RH
J	2	Outer Rear View Mirror Assembly RH
J	3	Outer Rear View Mirror Assembly RH
J	4	Front No. 2 Speaker Assembly RH
J	5	Front Door Courtesy Light Assembly RH
J	6	Front Door with Motor Lock Assembly RH
J	7	Front Power Window Regulator Motor Assembly RH
J	8	Side Airbag Sensor Assembly RH
K	1	Outer Rear View Mirror Assembly LH
K	2	Outer Rear View Mirror Assembly LH
K	3	Front No. 2 Speaker Assembly LH
K	4	Multiplex Network Master Switch Assembly
K	5	Front Door Courtesy Light Assembly LH
K	6	Front Door with Motor Lock Assembly LH
K	7	Front Power Window Regulator Motor Assembly LH
K	8	Side Airbag Sensor Assembly LH
K	9	Seat Memory Switch
L	1	Rear Speaker Set RH
L	2	Rear Power Window Regulator Switch Assembly RH
L	3	Rear No. 2 Speaker Assembly RH
L	4	Rear Power Window Regulator Motor Assembly RH
L	5	Rear Door Lock Assembly RH
M	1	Rear Speaker Set LH
M	2	Rear Power Window Regulator Switch Assembly LH
M	3	Rear No. 2 Speaker Assembly LH
M	4	Rear Power Window Regulator Motor Assembly LH
M	5	Rear Door Lock Assembly LH
N	1	Electrical Key Antenna RH
O	1	Electrical Key Antenna LH
P	1	Front Side Step Light LH
P	2	Front Side Step Light RH
P	3	Rear Side Step Light LH
P	4	Rear Side Step Light RH

    Position of Parts in Body <LHD 5-Door>

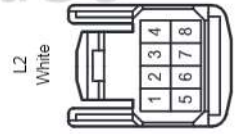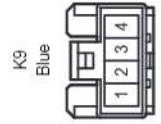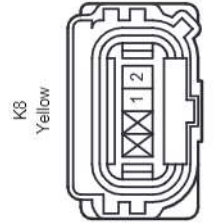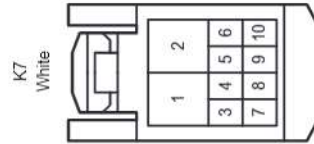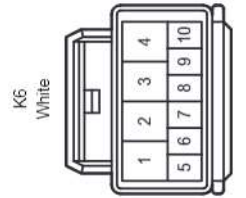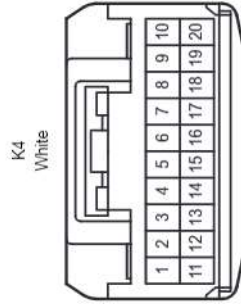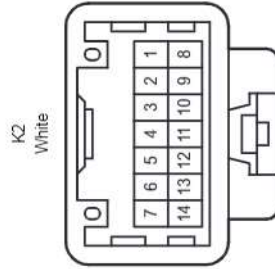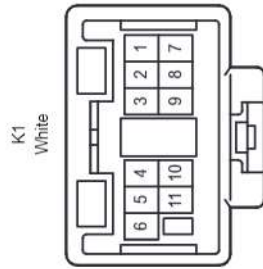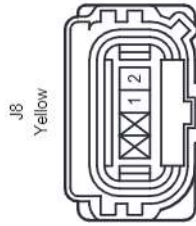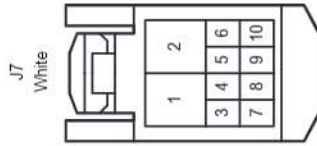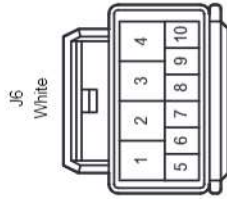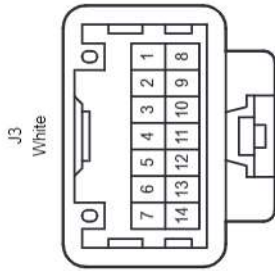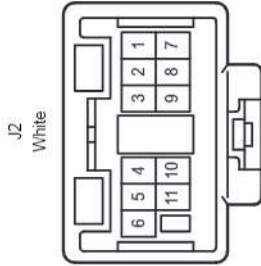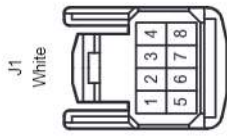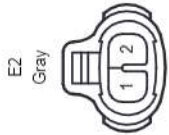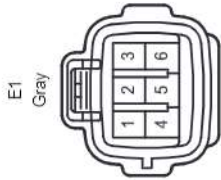

cardiagr.com

Position of Parts in Body <LHD 5-Door>

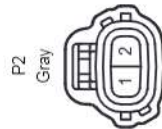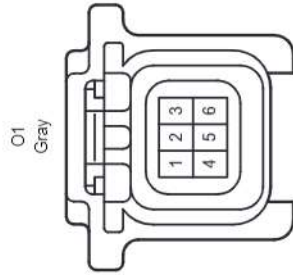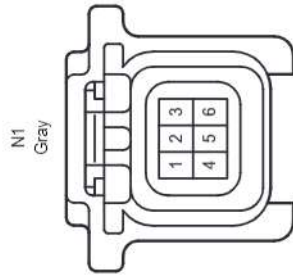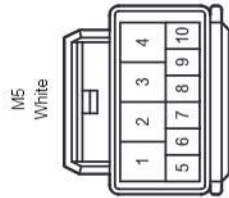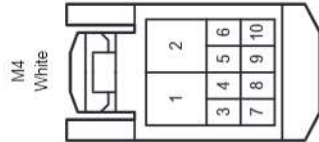



Q 2	Front Seat Outer Belt Assembly RH
Q 3	Front Seat Outer Belt Assembly RH
Q 4	Rear Side Airbag Sensor Assembly RH
Q 5	Rear Floor Side Airbag Sensor
Q 6	Curtain Shield Airbag Assembly RH
Q 8	Front Door Courtesy Light Switch Assembly RH
Q 9	Rear Door Courtesy Light Switch Assembly RH
Q 10	Rear Power Seat Switch RH
Q 11	No. 1 Fold Seat Switch Assembly
Q 12	Rear Blower with Fan Motor Sub-Assembly
Q 13	Rear A/C Blower Assembly
Q 14	Rear Blower with Fan Motor Sub-Assembly
Q 15	Rear Header Speaker Assembly RH
Q 16	Rear Power Point Socket Assembly
Q 17	Voltage Inverter Assembly
Q 18	Theft Warning Siren Assembly
Q 19	Rear No. 1 Cooler Thermistor
Q 20	Glass Breakage Sensor RH (Quarter Glass RH)
Q 22	Power Outlet Socket
Q 23	Junction Connector
Q 24	Junction Connector
Q 33	Theft Warning Siren Assembly
R 2	Front Seat Outer Belt Assembly LH
R 3	Front Seat Outer Belt Assembly LH
R 4	Rear Side Airbag Sensor Assembly LH
R 5	Curtain Shield Airbag Assembly LH
R 7	Front Door Courtesy Light Switch Assembly LH
R 8	Rear Door Courtesy Light Switch Assembly LH
R 9	Back Door Courtesy Light Switch Assembly
R 11	Rear Power Seat Switch LH
R 12	No. 2 Fold Seat Switch Assembly
R 13	Rear Header Speaker Assembly LH
R 14	No. 2 Indoor Electrical Key Antenna Assembly
R 15	No. 3 Indoor Electrical Key Antenna Assembly
R 16	Outside Luggage Electrical Key Antenna
R 17	Door Control Receiver
R 18	Rear Acceleration Sensor Assembly
R 20	Stabilizer Control with Accumulator Housing Assembly


Position of Parts in Body <LHD 5-Door>

---

- R 42 Blind Spot Monitor Sensor LH
- R 43 Blind Spot Monitor Sensor RH
- R 44 Rear Cross Traffic Alert Buzzer (Blind Spot Monitor Buzzer)
- R 47 Junction Connector



Position of Parts in Body <LHD 5-Door>

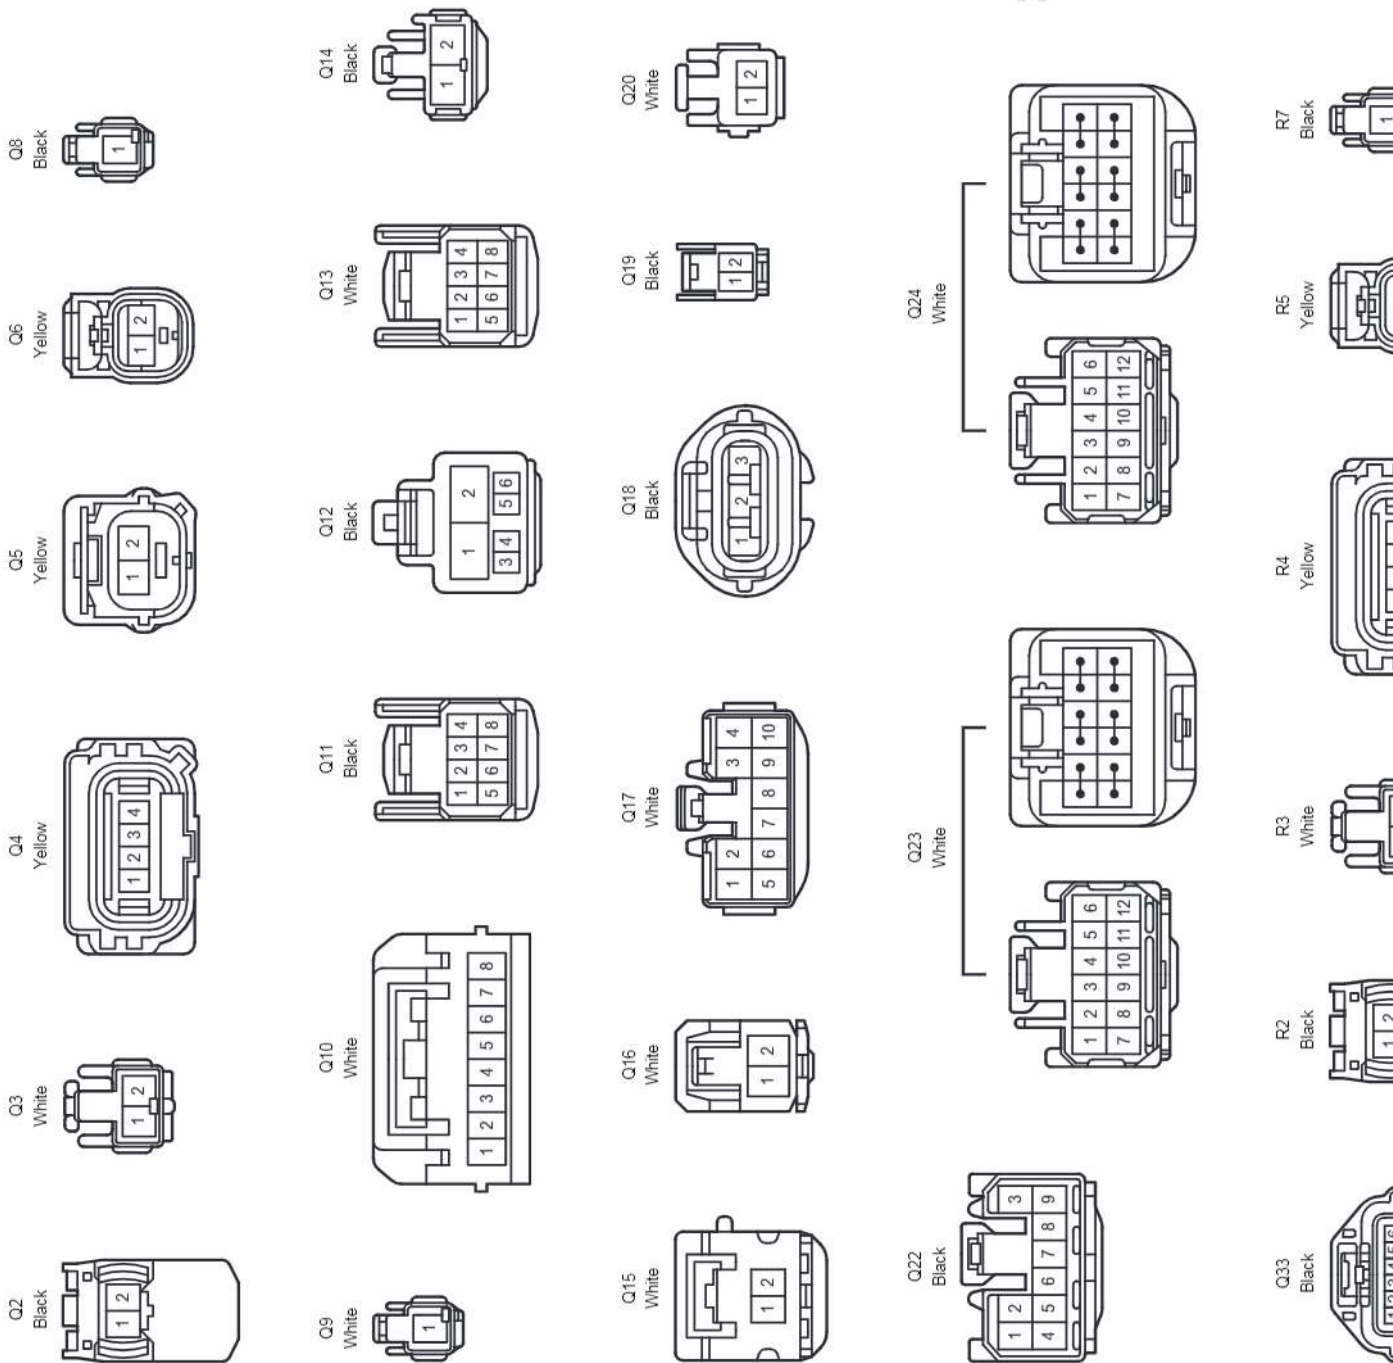

Position of Parts in Body <LHD 5-Door>


R8 White




R9 Black




R11 White

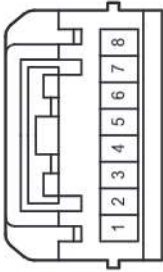


R12 Black

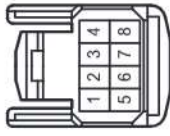

R13 White

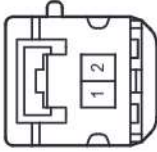


R14 Gray

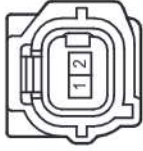


R15 Gray



 R16 White




R17 Blue

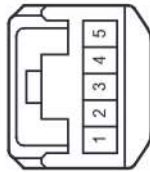


R18 Gray




R20 Black

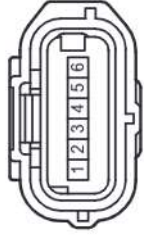


R21 Blue

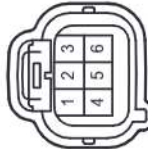


R22 Blue

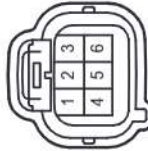


R23 White

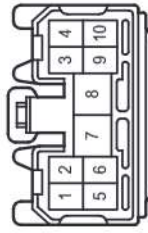


R24 White

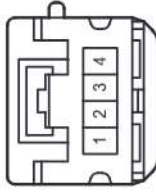


R25 White

 

R26 White

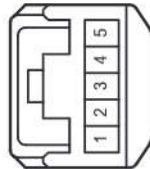

R27 Dark Gray

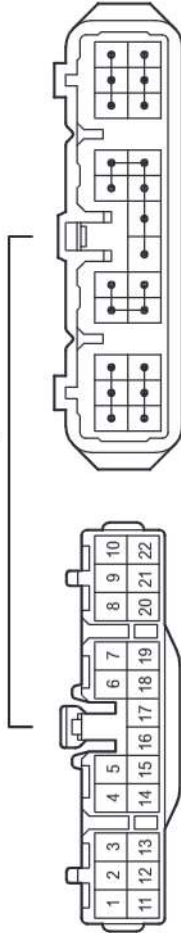


R28 White




Position of Parts in Body <LHD 5-Door>


R31  
White

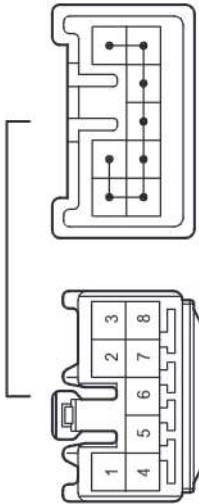


R41  
Black

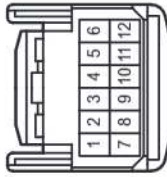

R42  
Black

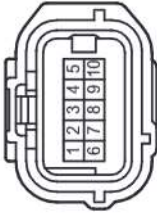


R43  
Black

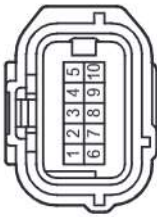


R44  
Black



R47  
Gray

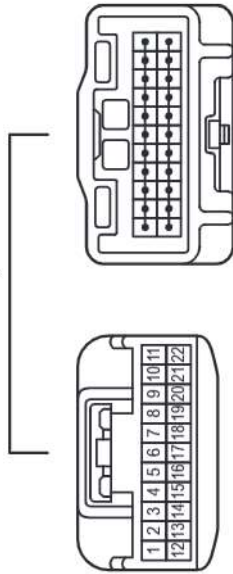

Position of Parts in Body <LHD 5-Door>





















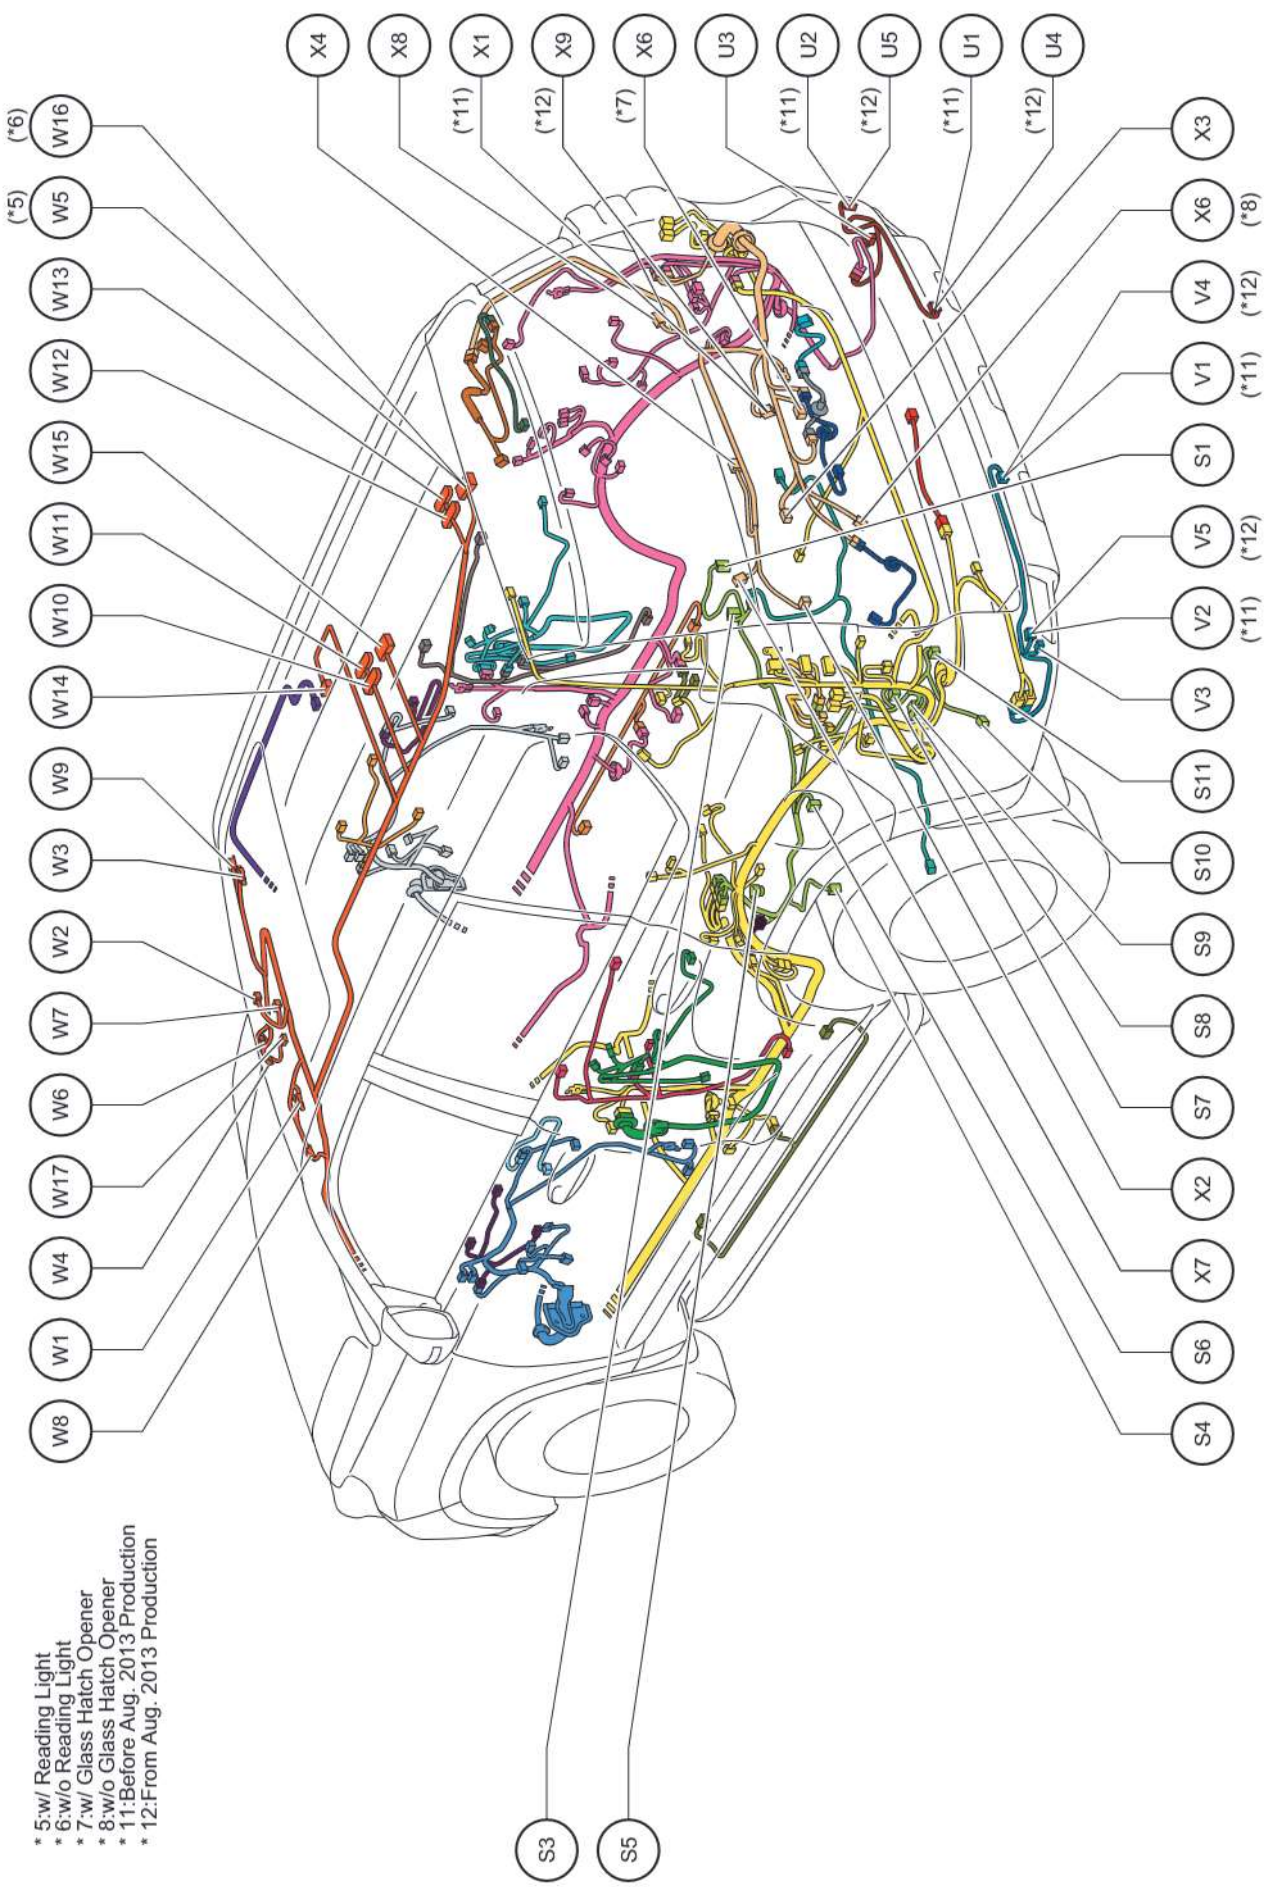


- \* 5:w/ Reading Light
- \* 6:w/o Reading Light
- \* 7:w/ Glass Hatch Opener
- \* 8:w/o Glass Hatch Opener
- \* 11:Before Aug. 2013 Production
- \* 12:From Aug. 2013 Production

S3  
S5


S	1	Rear Shock Absorber Assembly RH
S	3	Rear Height Control Sensor Sub-Assembly RH
S	4	Rear Shock Absorber Assembly LH
S	5	Fuel Sender Gauge Assembly
S	6	Rear Height Control Sensor Sub-Assembly LH
S	7	Height Control Valve
S	8	Fuel Pump Control ECU Assembly
S	9	Fuel Pump Control ECU Assembly
S	10	Height Control Exhaust Valve (Height Control Compressor)
S	11	Height Control Compressor Motor (Height Control Compressor Assembly)
U	1	Rear No. 1 Ultrasonic Sensor Center RH
U	2	Rear No. 1 Ultrasonic Sensor RH
U	3	Rear Fog Light Assembly RH
U	4	Rear No. 1 Ultrasonic Sensor Center RH
U	5	Rear No. 1 Ultrasonic Sensor RH
V	1	Rear No. 1 Ultrasonic Sensor Center LH
V	2	Rear No. 1 Ultrasonic Sensor LH
V	3	Rear Fog Light Assembly LH
V	4	Rear No. 1 Ultrasonic Sensor Center LH
V	5	Rear No. 1 Ultrasonic Sensor LH
W	1	Vanity Light Assembly LH
W	2	Sliding Roof Control ECU
W	3	Vanity Light Assembly RH
W	4	Inner Rear View Mirror Assembly
W	5	No. 2 Room Light Assembly
W	6	Rain Sensor
W	7	Map Light Assembly
W	8	Visor Assembly LH
W	9	Visor Assembly RH
W	10	No. 1 Room Light Assembly LH
W	11	No. 1 Room Light Assembly RH
W	12	No. 2 Room Light Assembly LH
W	13	No. 2 Room Light Assembly RH
W	14	Television Display Assembly
W	15	No. 1 Room Light Assembly
W	16	No. 2 Room Light Assembly
W	17	Inner Rear View Mirror Assembly
X	1	Rear Television Camera Assembly

 Position of Parts in Body <LHD 5-Door>

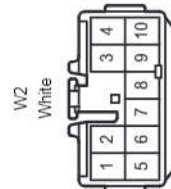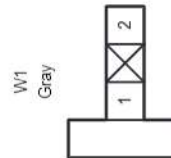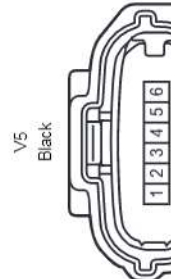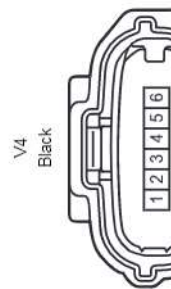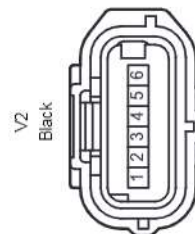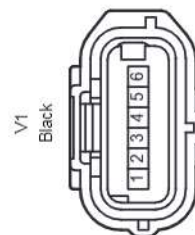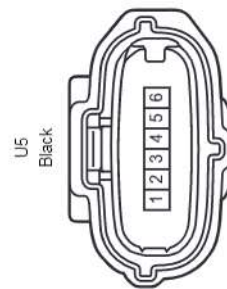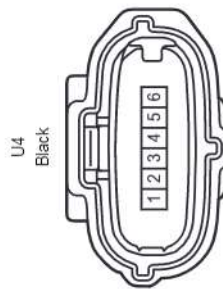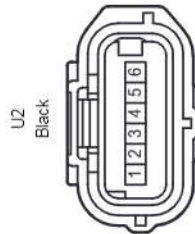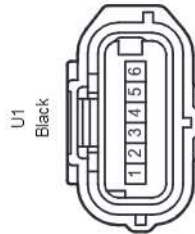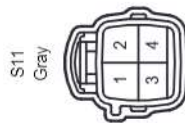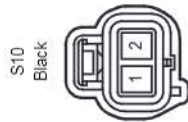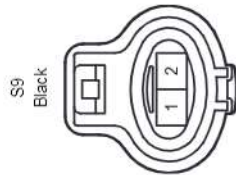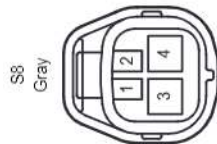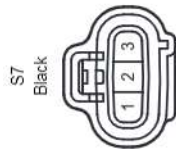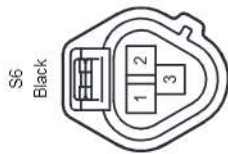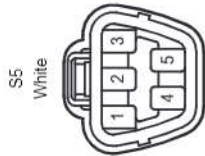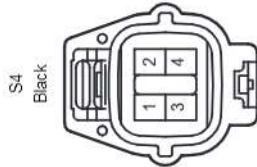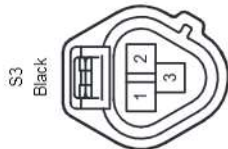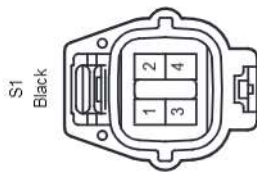


Position of Parts in Body <LHD 5-Door>


W7  
White

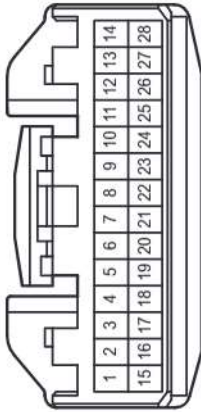

W8  
White

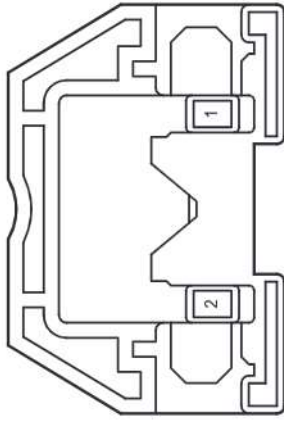

W9  
White

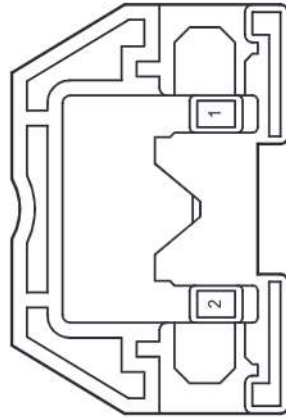

W10  
Gray



W11  
Gray




W12  
Gray



W13  
Gray



W14  
White

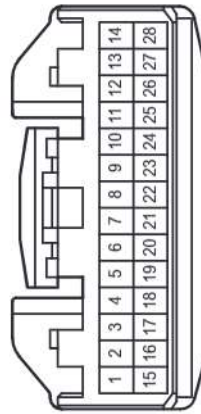


W15  
Gray




W16  
Gray




W17  
Black

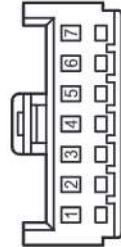

X1  
Black

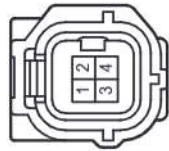

X2  
White

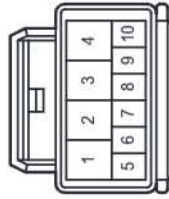


X3  
White



cardiagn.com

Position of Parts in Body <LHD 5-Door>

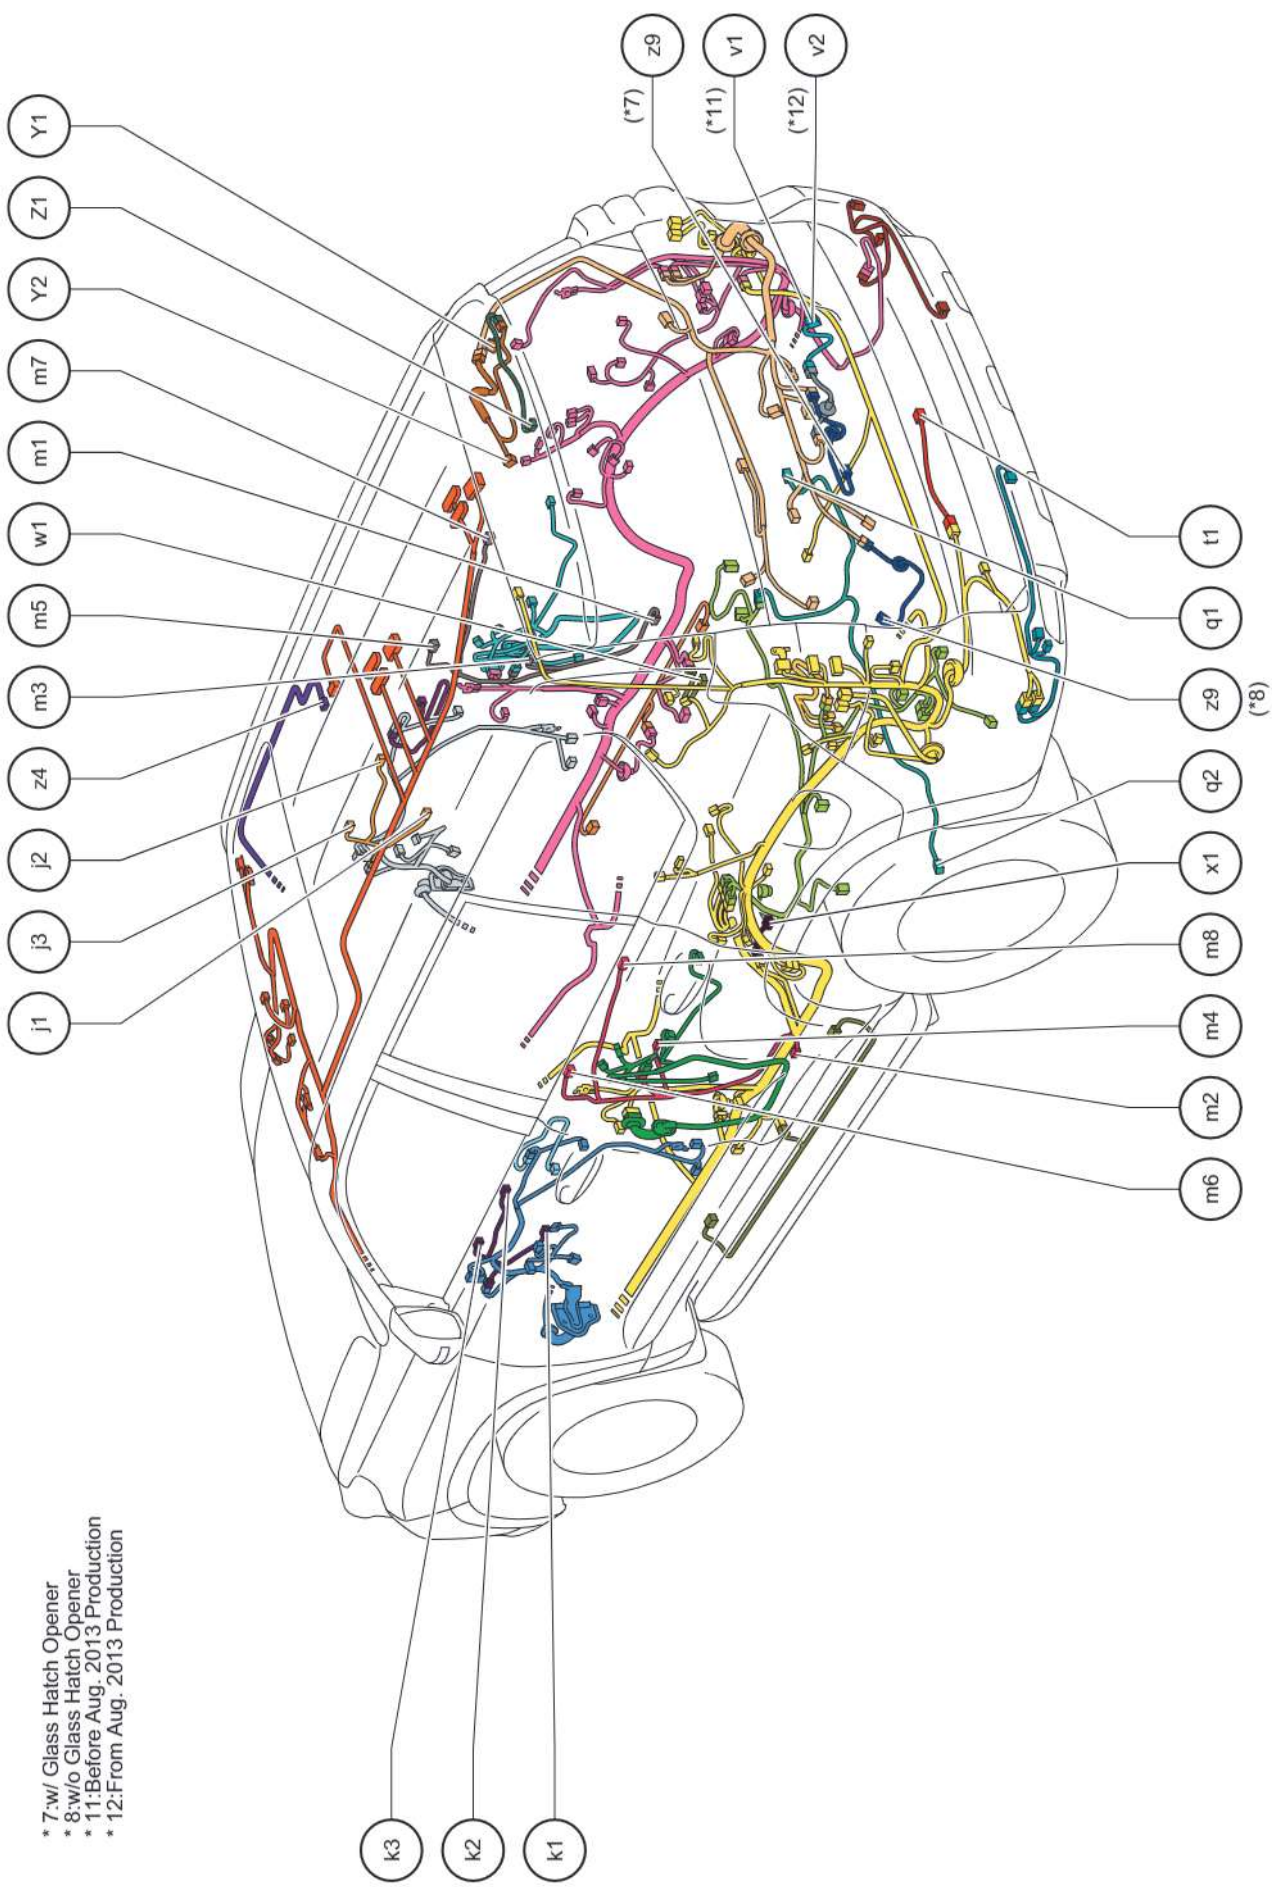


- \* 7:w/ Glass Hatch Opener
- \* 8:w/o Glass Hatch Opener
- \* 11:Before Aug. 2013 Production
- \* 12:From Aug. 2013 Production



Y	1	Rear Wiper Motor Assembly
Y	2	Rear Window Defogger (Back Door Glass)
Z	1	Center Stop Light Assembly
j	1	Front Door Pocket Illumination RH
j	2	Front Door Trim Illumination RH
j	3	Front Door Inside Handle Illumination Light Assembly RH
k	1	Front Door Pocket Illumination LH
k	2	Front Door Trim Illumination LH
k	3	Front Door Inside Handle Illumination Light Assembly LH
m	1	Rear Door Courtesy Light Assembly RH
m	2	Rear Door Courtesy Light Assembly LH
m	3	Rear Door Pocket Illumination RH
m	4	Rear Door Pocket Illumination LH
m	5	Rear Door Inside Handle Illumination Light Assembly RH
m	6	Rear Door Inside Handle Illumination Light Assembly LH
m	7	Rear Door Trim Illumination RH
m	8	Rear Door Trim Illumination LH
q	1	Rear Speed Sensor RH
q	2	Rear Speed Sensor LH
t	1	Fuel Sender Gauge Assembly (Sub)
v	1	Rear Television Camera Assembly
v	2	Rear Television Camera Assembly
w	1	Rear Seat Heater Assembly RH
x	1	Rear Seat Heater Assembly LH
z	4	Television Display Assembly
z	9	License Plate Light Assembly

Position of Parts in Body <LHD 5-Door>

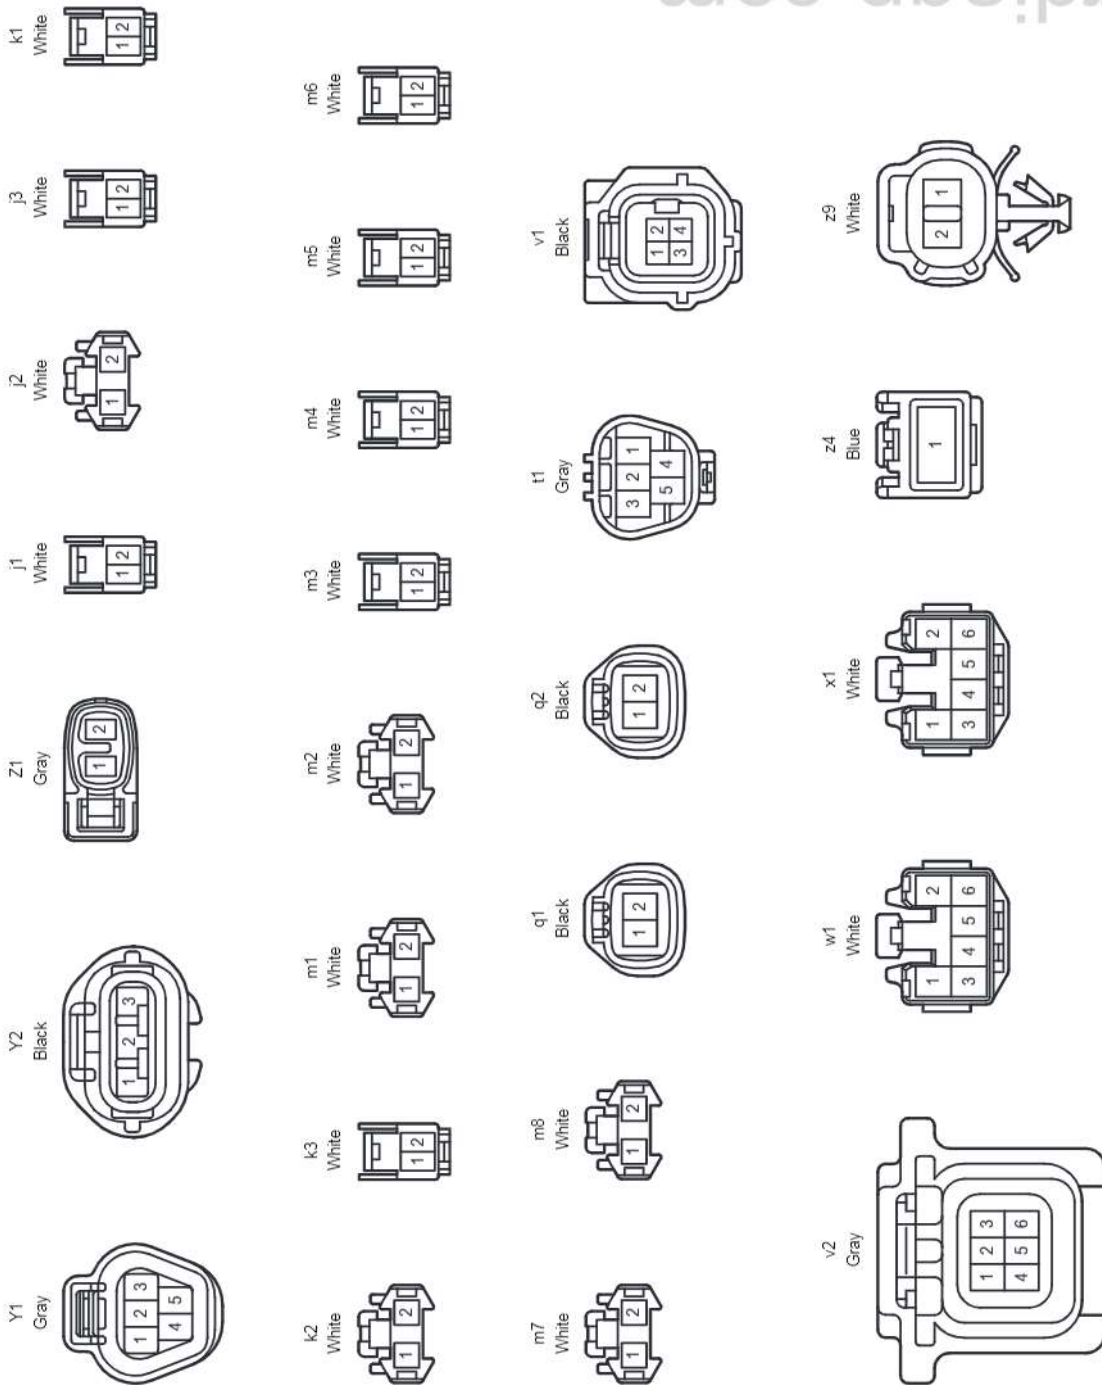


cardiagn.com

Wire and Wire in Body <LHD 5-Door>





\* 1:w/ Glass Hatch Opener  
\* 2:w/o Glass Hatch Opener




Wire and Wire in Body <LHD 5-Door>

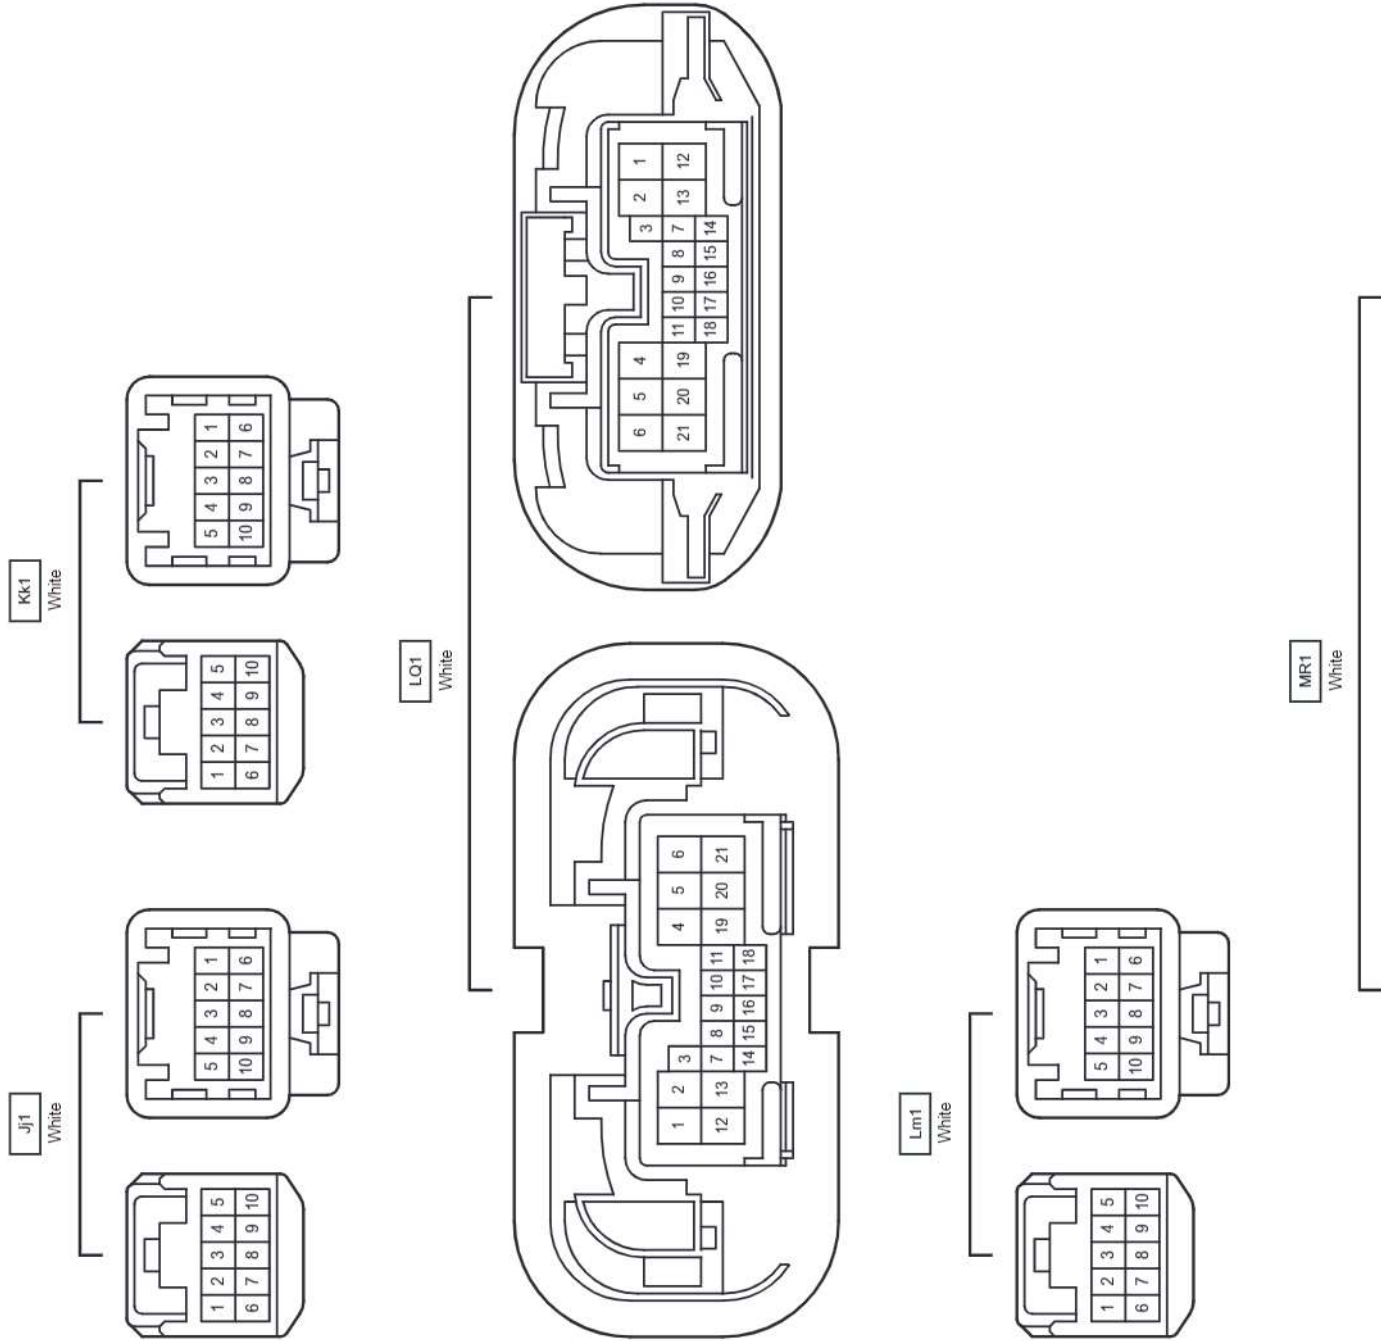






Wire and Wire in Body <LHD 5-Door>

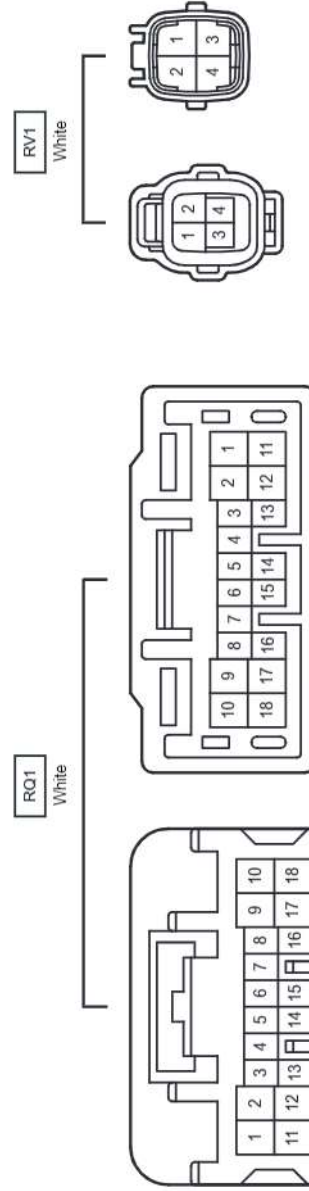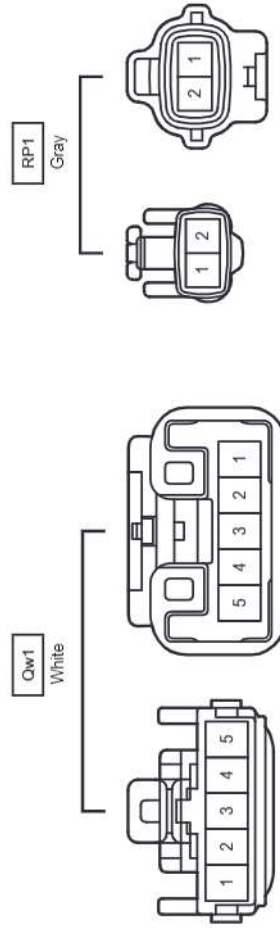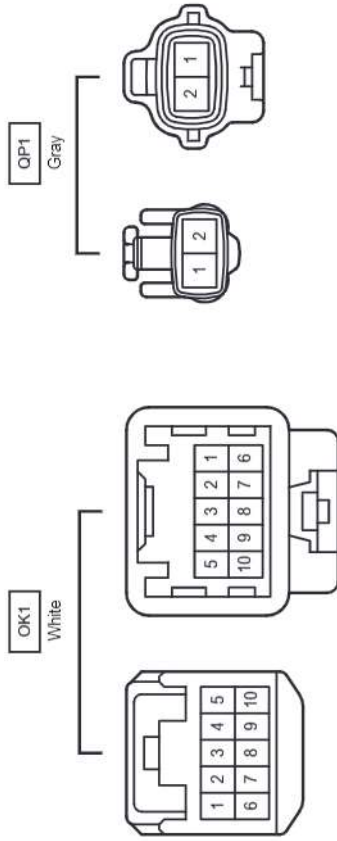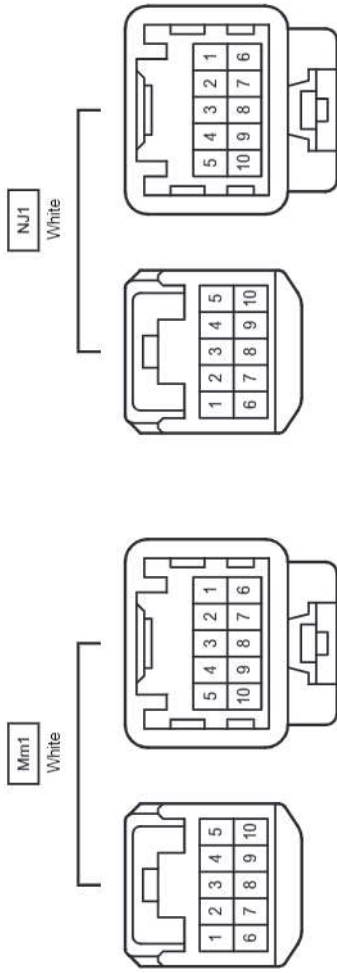


Wire and Wire in Body <LHD 5-Door>

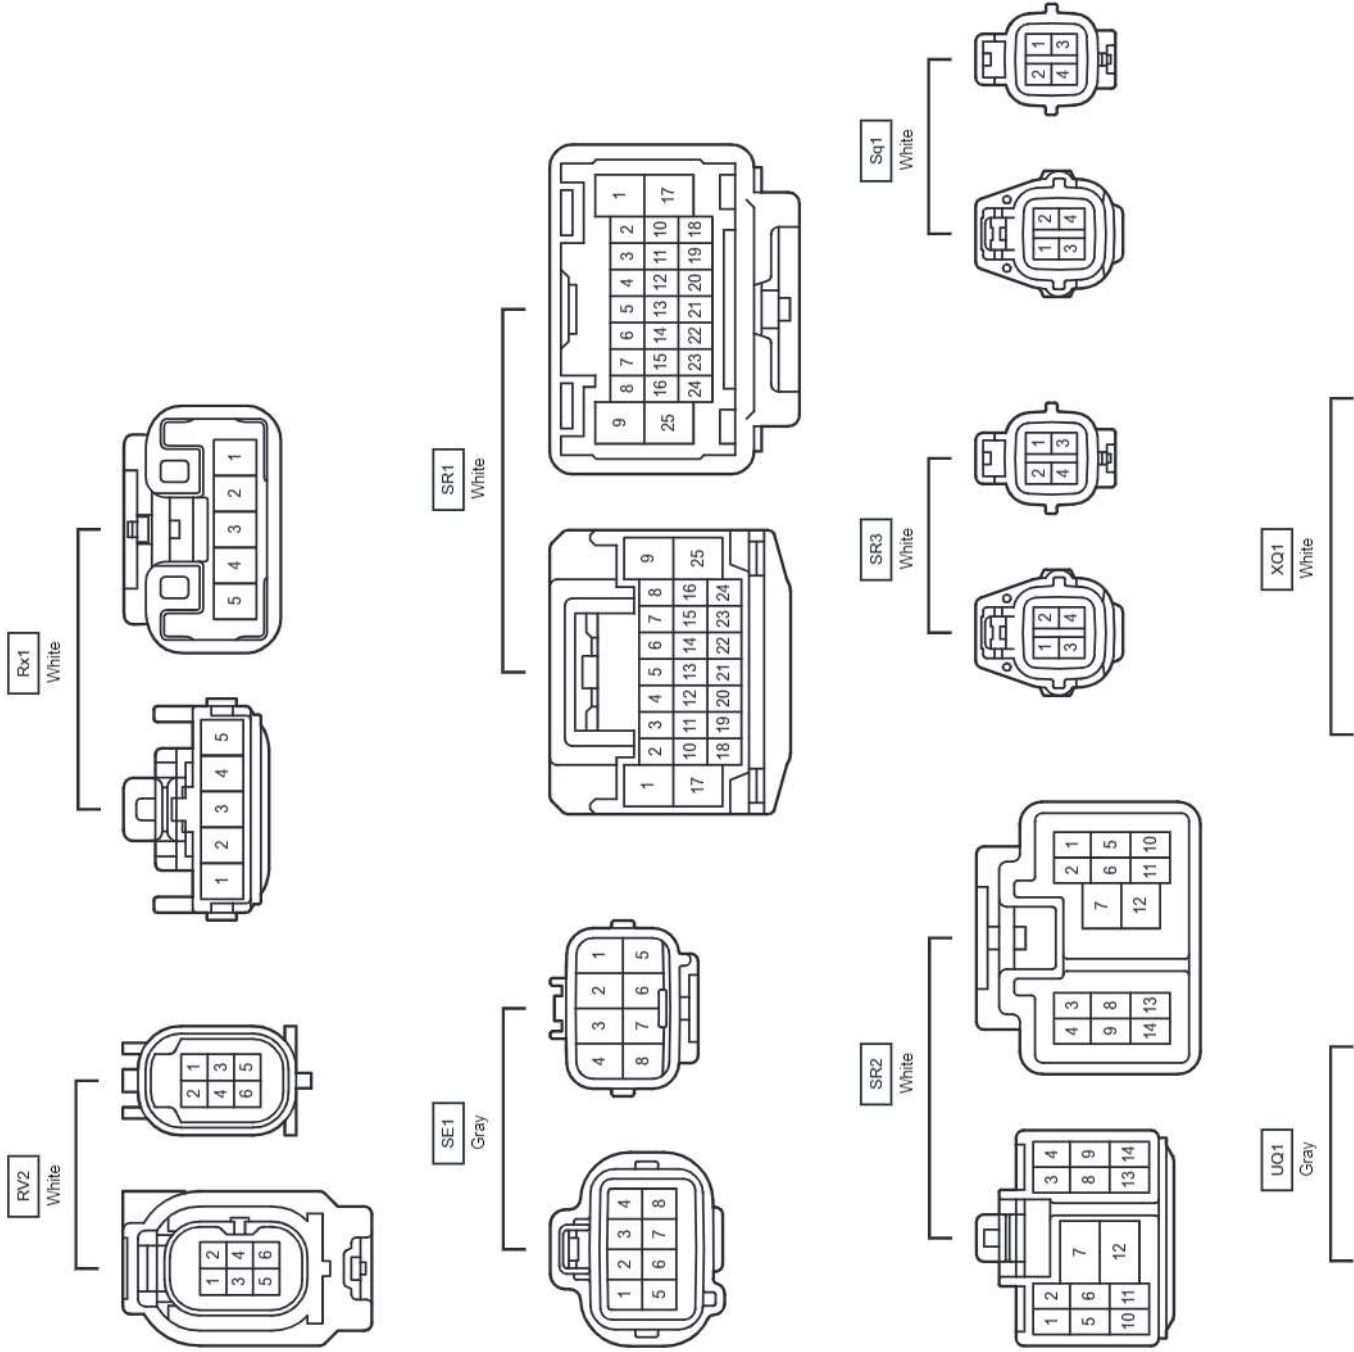

Wire and Wire in Body <LHD 5-Door>

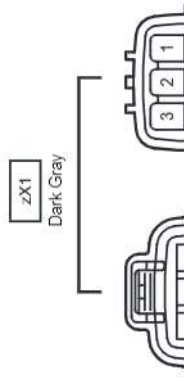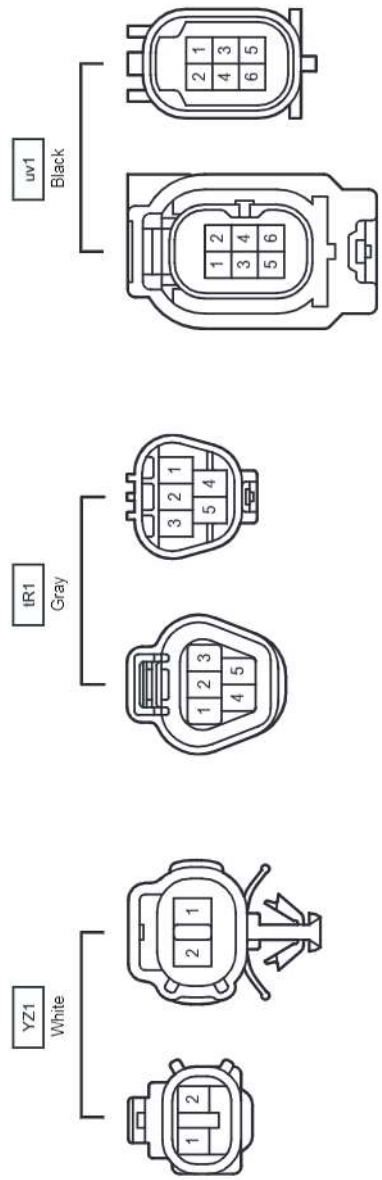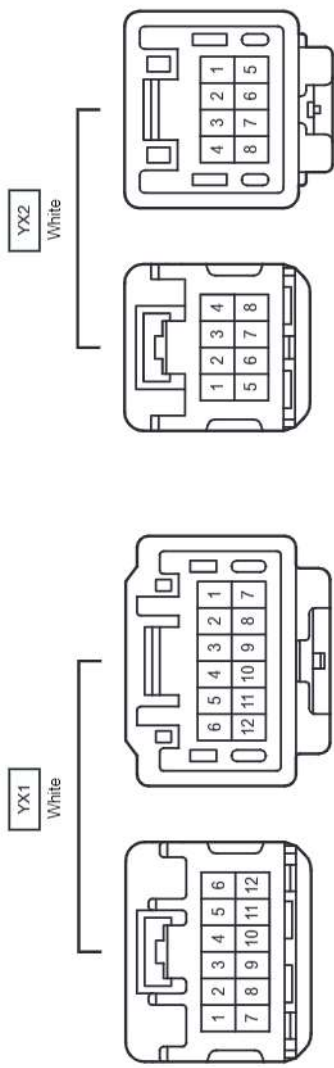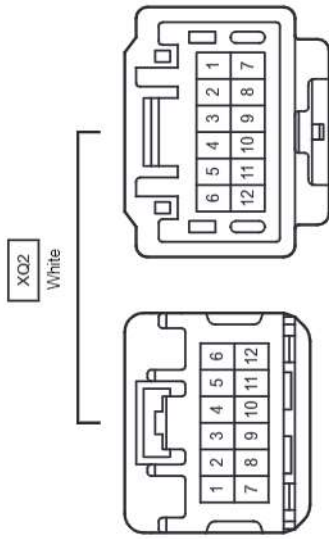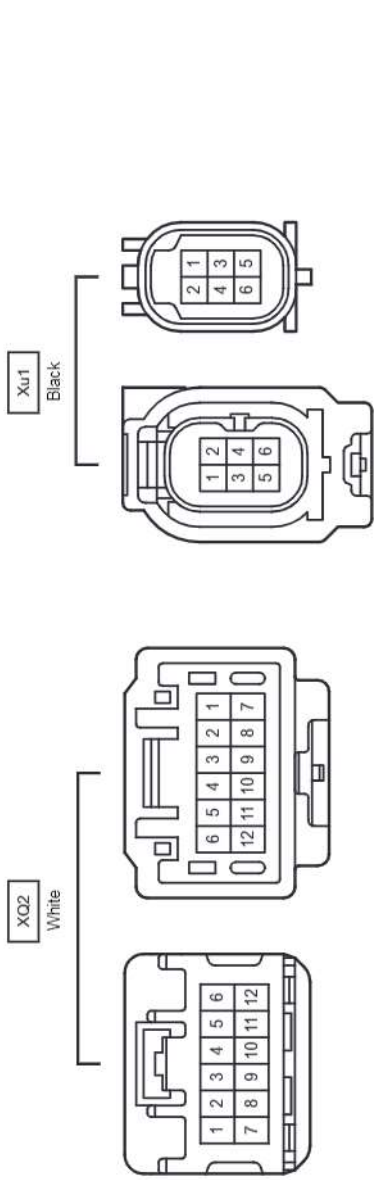


Ground Points in Body <RHD 5-Door>

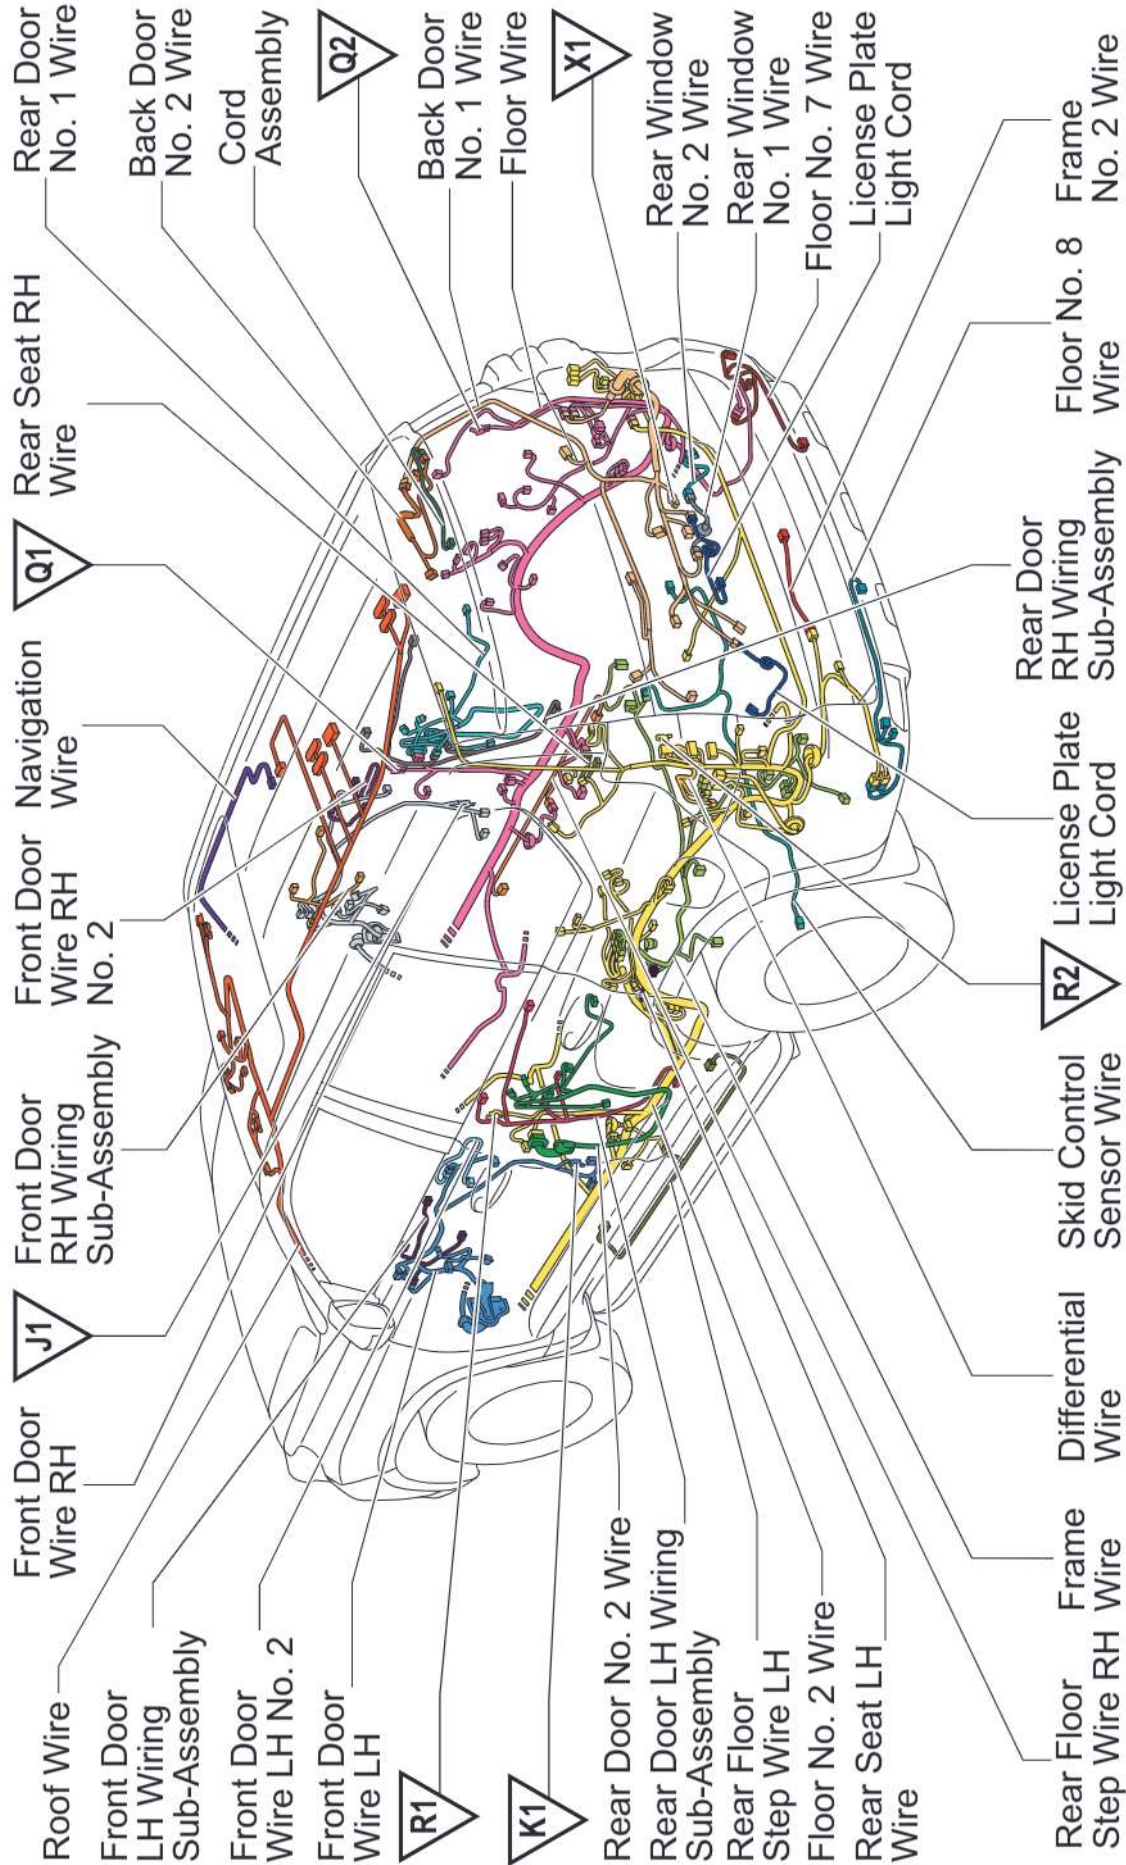






















Position of Parts in Body <RHD 5-Door>

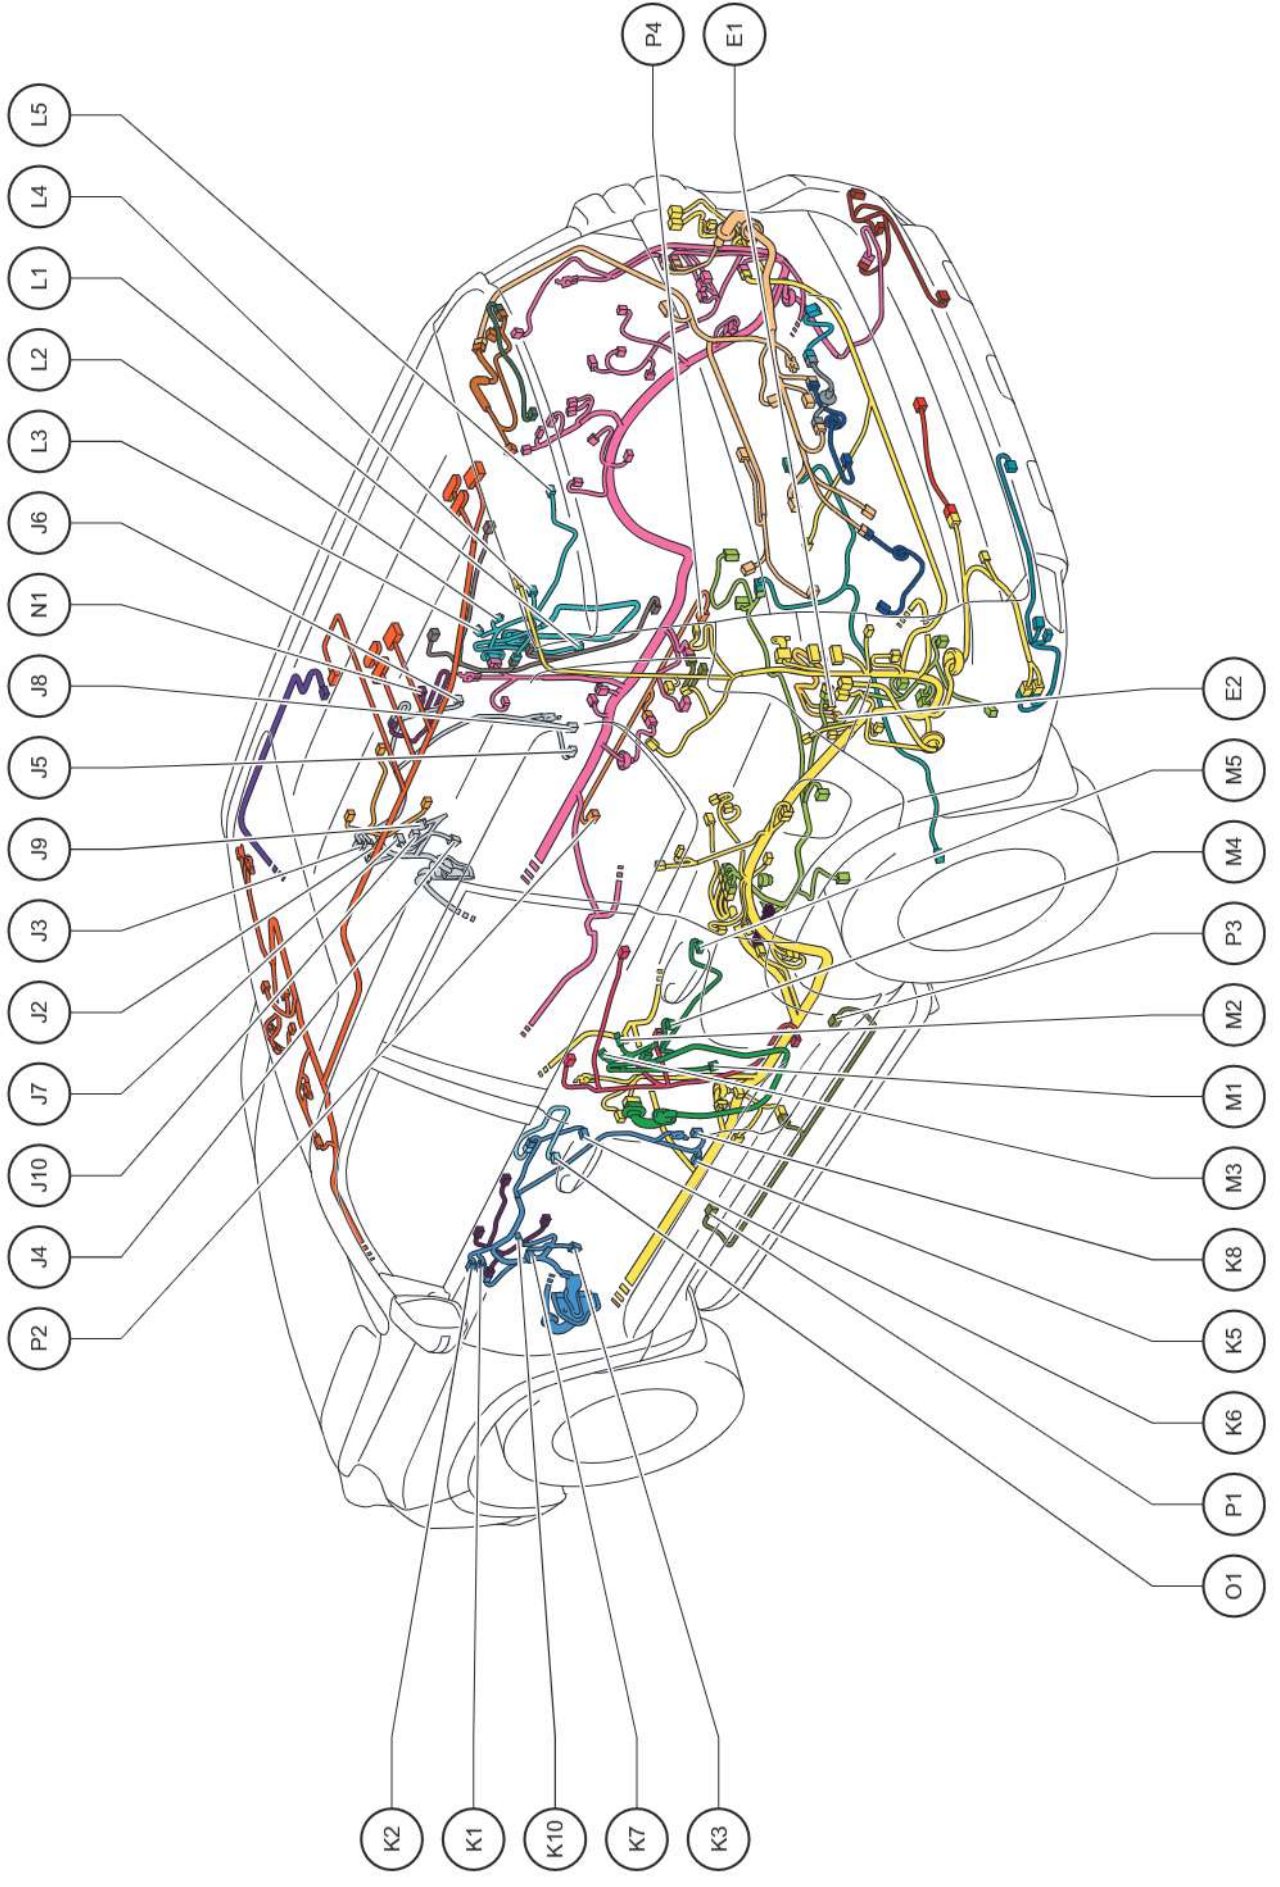


E	1	Differential Lock Shift Actuator
E	2	No. 1 Transfer Indicator Switch
J	2	Outer Rear View Mirror Assembly RH
J	3	Outer Rear View Mirror Assembly RH
J	4	Front No. 2 Speaker Assembly RH
J	5	Front Door Courtesy Light Assembly RH
J	6	Front Door with Motor Lock Assembly RH
J	7	Front Power Window Regulator Motor Assembly RH
J	8	Side Airbag Sensor Assembly RH
J	9	Multiplex Network Master Switch Assembly
J	10	Seat Memory Switch
K	1	Outer Rear View Mirror Assembly LH
K	2	Outer Rear View Mirror Assembly LH
K	3	Front No. 2 Speaker Assembly LH
K	5	Front Door Courtesy Light Assembly LH
K	6	Front Door with Motor Lock Assembly LH
K	7	Front Power Window Regulator Motor Assembly LH
K	8	Side Airbag Sensor Assembly LH
K	10	Front Power Window Regulator Switch Assembly LH
L	1	Rear Speaker Set RH
L	2	Rear Power Window Regulator Switch Assembly RH
L	3	Rear No. 2 Speaker Assembly RH
L	4	Rear Power Window Regulator Motor Assembly RH
L	5	Rear Door Lock Assembly RH
M	1	Rear Speaker Set LH
M	2	Rear Power Window Regulator Switch Assembly LH
M	3	Rear No. 2 Speaker Assembly LH
M	3	Rear No. 2 Speaker Assembly LH
M	4	Rear Power Window Regulator Motor Assembly LH
M	5	Rear Door Lock Assembly LH
N	1	Electrical Key Antenna RH
O	1	Electrical Key Antenna LH
P	1	Front Side Step Light LH
P	2	Front Side Step Light RH
P	3	Rear Side Step Light LH
P	4	Rear Side Step Light RH

    Position of Parts in Body <RHD 5-Door>

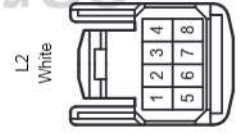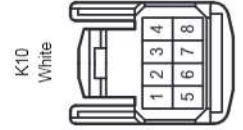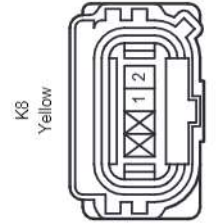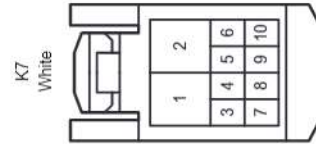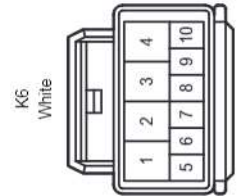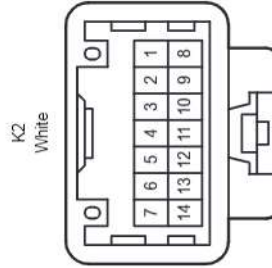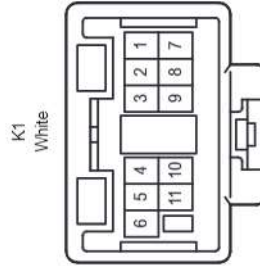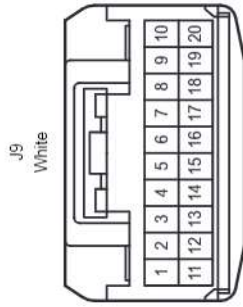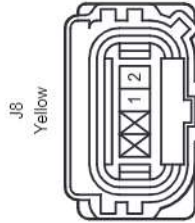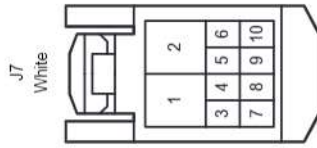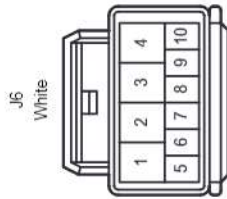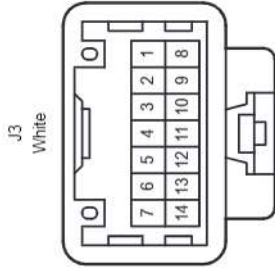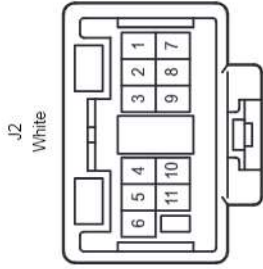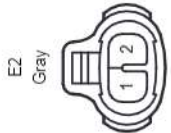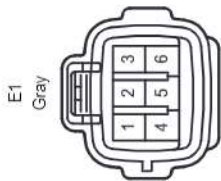


Position of Parts in Body <RHD 5-Door>


M3  
White

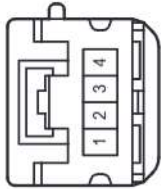


M4  
White

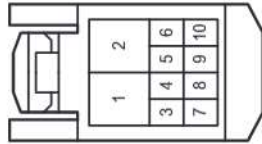


M5  
White

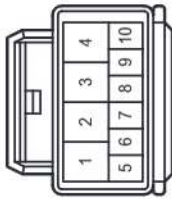

N1  
Gray

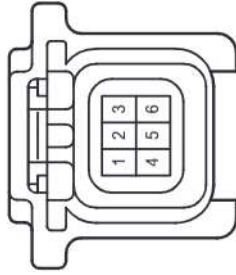

O1  
Gray

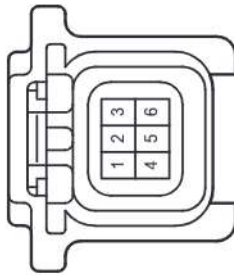

P1  
Gray



P2  
Gray




P3  
Gray



P4  
Gray



Position of Parts in Body <RHD 5-Door>

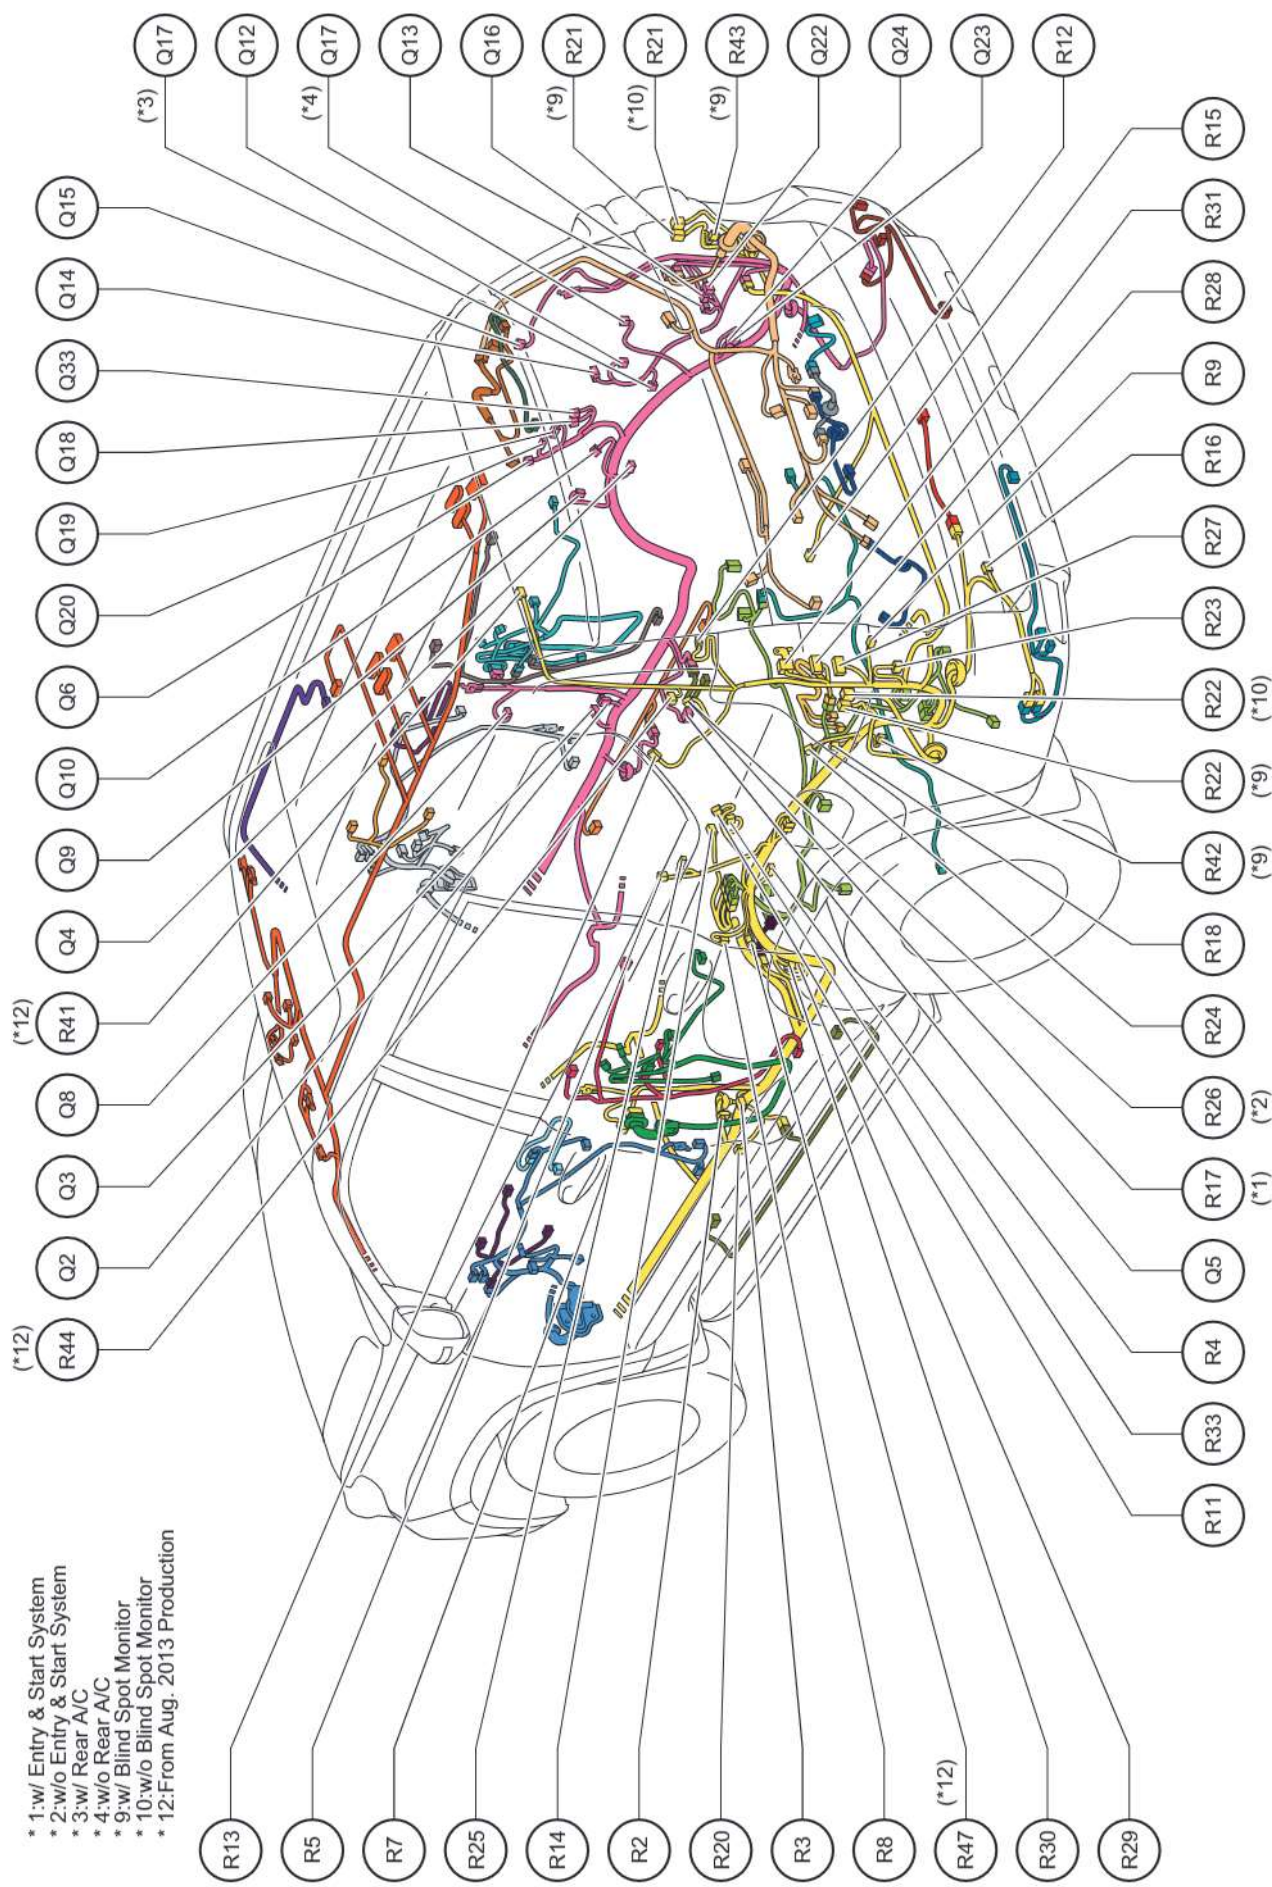

- \* 1:w/ Entry & Start System
- \* 2:w/o Entry & Start System
- \* 3:w/ Rear A/C
- \* 4:w/o Rear A/C
- \* 9:w/ Blind Spot Monitor
- \* 10:w/o Blind Spot Monitor
- \* 12:From Aug. 2013 Production


Q 2	Front Seat Outer Belt Assembly RH
Q 3	Front Seat Outer Belt Assembly RH
Q 4	Rear Side Airbag Sensor Assembly RH
Q 5	Rear Floor Side Airbag Sensor
Q 6	Curtain Shield Airbag Assembly RH
Q 8	Front Door Courtesy Light Switch Assembly RH
Q 9	Rear Door Courtesy Light Switch Assembly RH
Q 10	Rear Power Seat Switch RH
Q 12	Rear Blower with Fan Motor Sub-Assembly
Q 13	Rear A/C Blower Assembly
Q 14	Rear Blower with Fan Motor Sub-Assembly
Q 15	Rear Header Speaker Assembly RH
Q 16	Rear Power Point Socket Assembly
Q 17	Voltage Inverter Assembly
Q 18	Theft Warning Siren Assembly
Q 19	Rear No. 1 Cooler Thermistor
Q 20	Glass Breakage Sensor RH (Quarter Glass RH)
Q 22	Power Outlet Socket
Q 23	Junction Connector
Q 24	Junction Connector
Q 33	Theft Warning Siren Assembly
R 2	Front Seat Outer Belt Assembly LH
R 3	Front Seat Outer Belt Assembly LH
R 4	Rear Side Airbag Sensor Assembly LH
R 5	Curtain Shield Airbag Assembly LH
R 7	Front Door Courtesy Light Switch Assembly LH
R 8	Rear Door Courtesy Light Switch Assembly LH
R 9	Back Door Courtesy Light Switch Assembly
R 11	Rear Power Seat Switch LH
R 12	No. 2 Fold Seat Switch Assembly
R 13	Rear Header Speaker Assembly LH
R 14	No. 2 Indoor Electrical Key Antenna Assembly
R 15	No. 3 Indoor Electrical Key Antenna Assembly
R 16	Outside Luggage Electrical Key Antenna
R 17	Door Control Receiver
R 18	Rear Acceleration Sensor Assembly
R 20	Stabilizer Control with Accumulator Housing Assembly
R 21	Rear Combination Light Assembly RH

Position of Parts in Body <RHD 5-Door>

---













- R 42 Blind Spot Monitor Sensor LH
- R 43 Blind Spot Monitor Sensor RH
- R 44 Rear Cross Traffic Alert Buzzer (Blind Spot Monitor Buzzer)
- R 47 Junction Connector

Position of Parts in Body <RHD 5-Door>

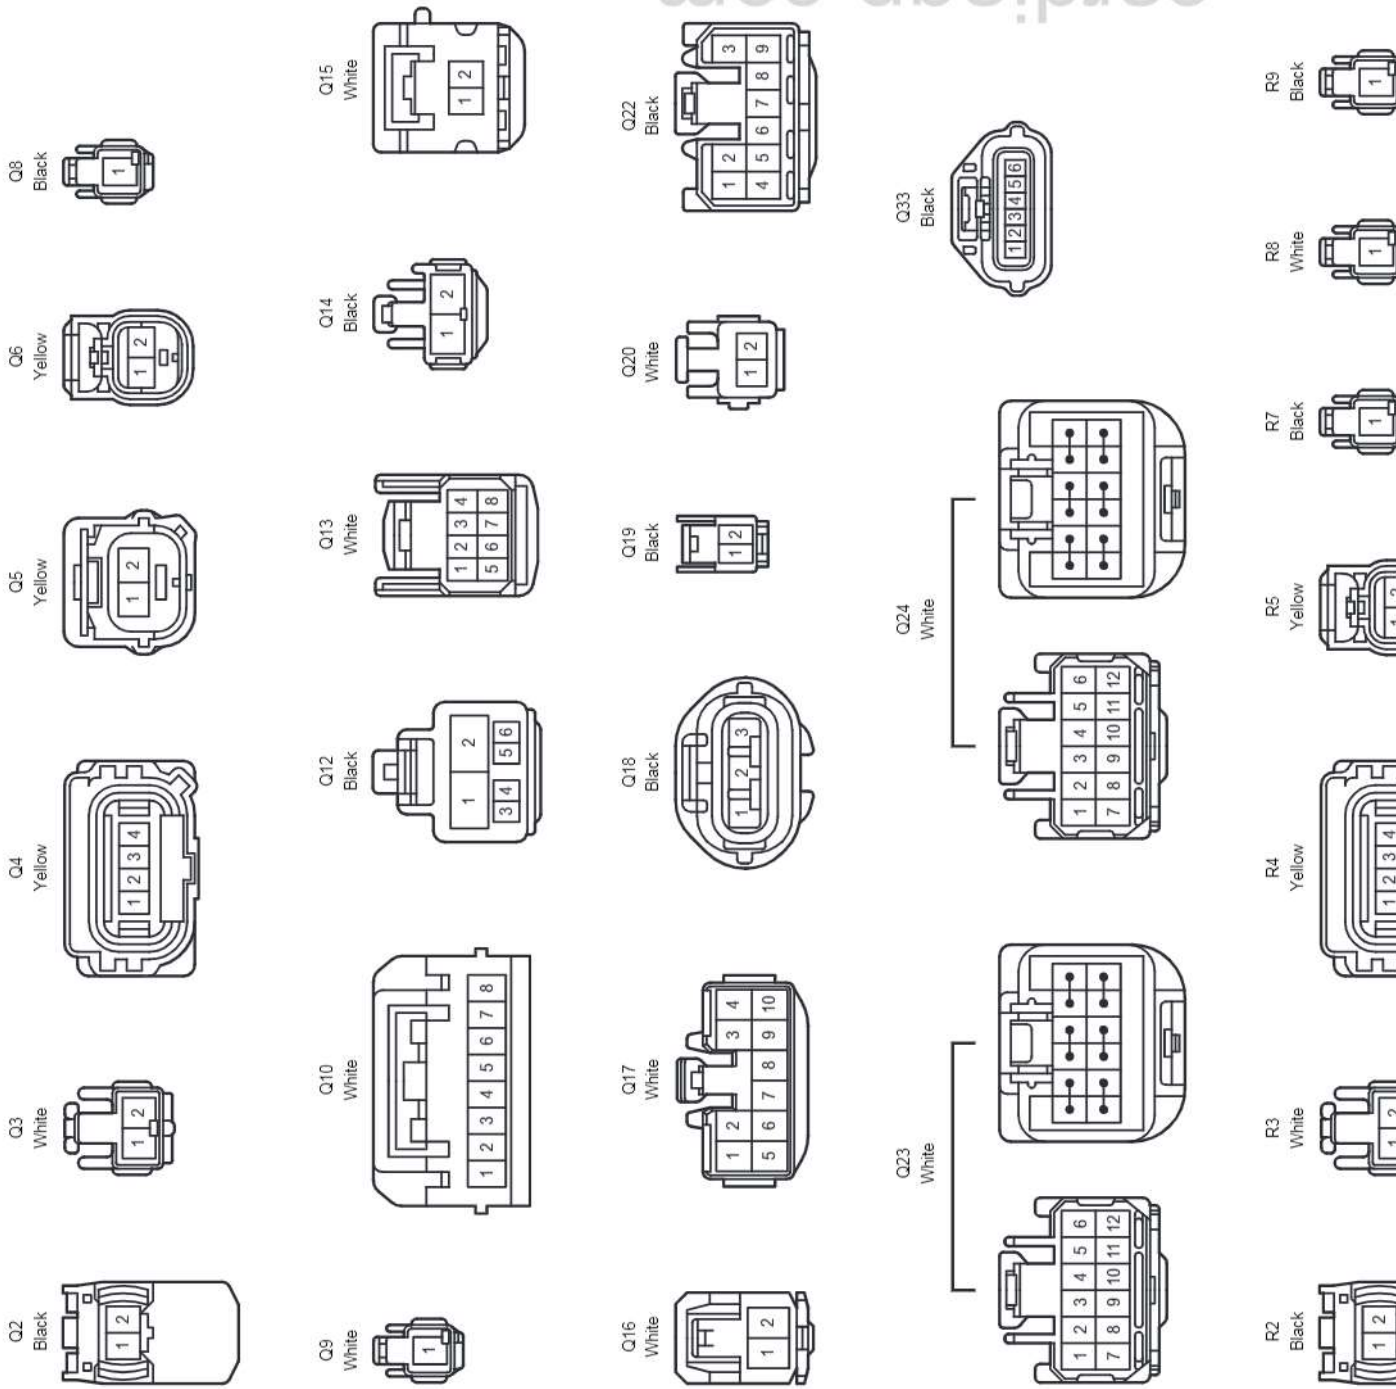




Position of Parts in Body <RHD 5-Door>

 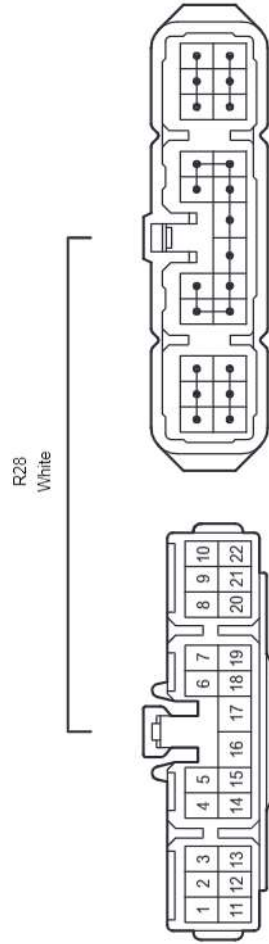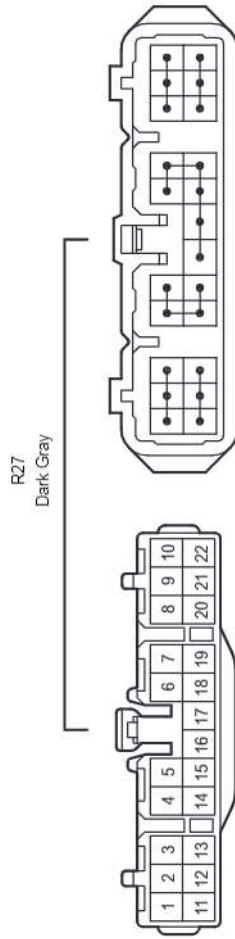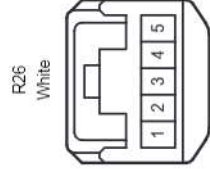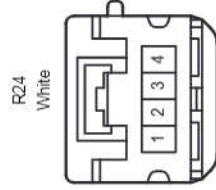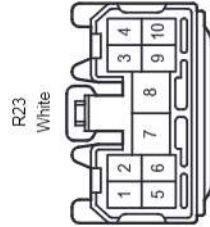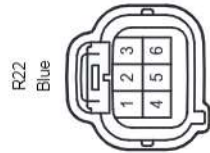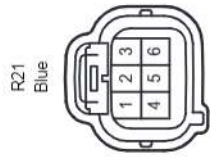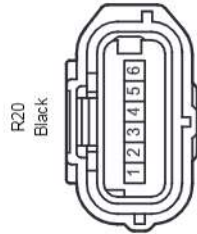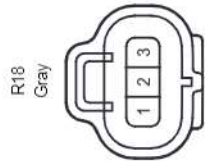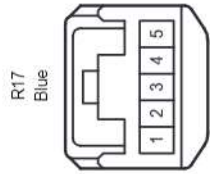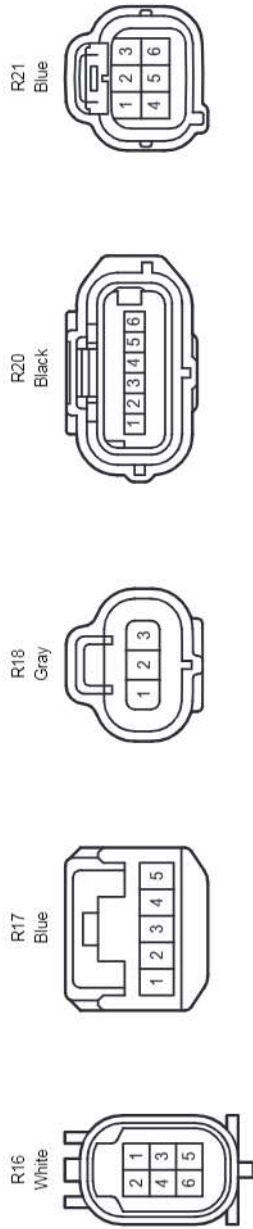


Position of Parts in Body <RHD 5-Door>


R31  
White

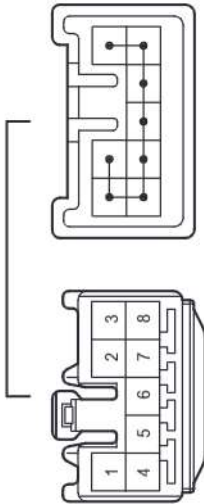


R33  
Black

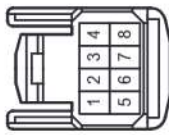


R41  
Black

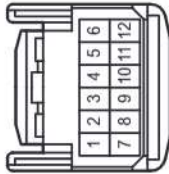

R42  
Black

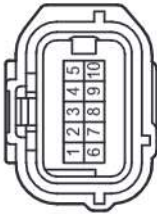


R43  
Black

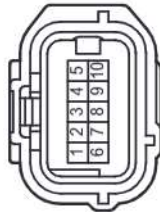


R44  
Black



R47  
Gray

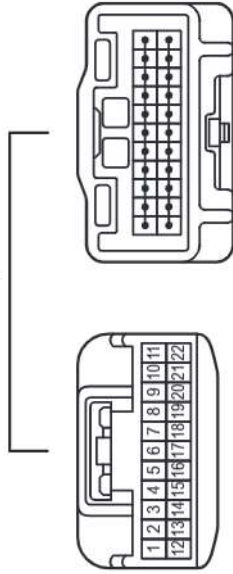






















Position of Parts in Body <RHD 5-Door>

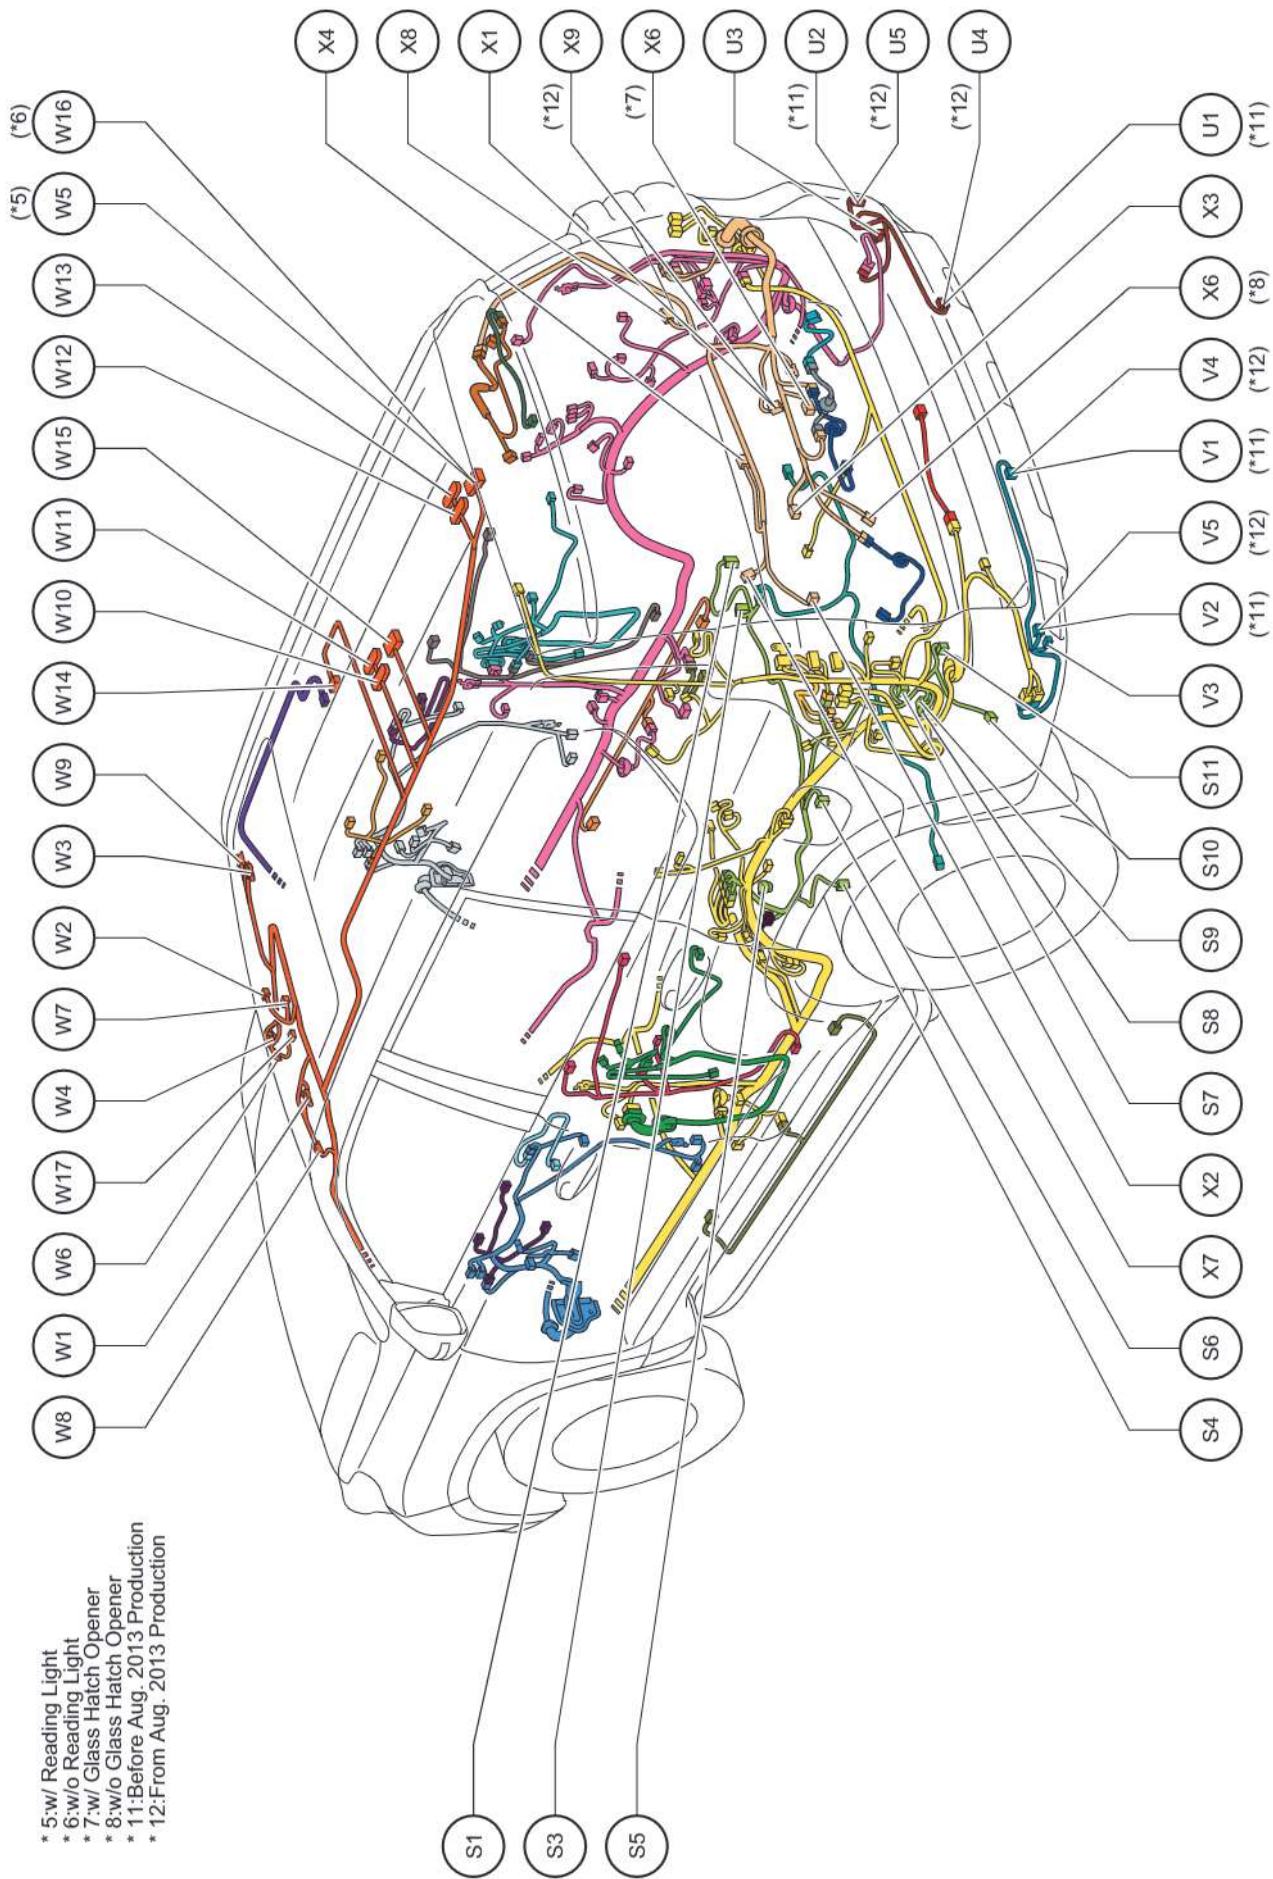

- \* 5:w/ Reading Light
- \* 6:w/o Reading Light
- \* 7:w/ Glass Hatch Opener
- \* 8:w/o Glass Hatch Opener
- \* 11:Before Aug. 2013, Production
- \* 12:From Aug. 2013 Production


S	1	Rear Shock Absorber Assembly RH
S	3	Rear Height Control Sensor Sub-Assembly RH
S	4	Rear Shock Absorber Assembly LH
S	5	Fuel Sender Gauge Assembly
S	6	Rear Height Control Sensor Sub-Assembly LH
S	7	Height Control Valve
S	8	Fuel Pump Control ECU Assembly
S	9	Fuel Pump Control ECU Assembly
S	10	Height Control Exhaust Valve (Height Control Compressor)
S	11	Height Control Compressor Motor (Height Control Compressor Assembly)
U	1	Rear No. 1 Ultrasonic Sensor Center RH
U	2	Rear No. 1 Ultrasonic Sensor RH
U	3	Rear Fog Light Assembly RH
U	4	Rear No. 1 Ultrasonic Sensor Center RH
U	5	Rear No. 1 Ultrasonic Sensor RH
V	1	Rear No. 1 Ultrasonic Sensor Center LH
V	2	Rear No. 1 Ultrasonic Sensor LH
V	3	Rear Fog Light Assembly LH
V	4	Rear No. 1 Ultrasonic Sensor Center LH
V	5	Rear No. 1 Ultrasonic Sensor LH
W	1	Vanity Light Assembly LH
W	2	Sliding Roof Control ECU
W	3	Vanity Light Assembly RH
W	4	Inner Rear View Mirror Assembly
W	5	No. 2 Room Light Assembly
W	6	Rain Sensor
W	7	Map Light Assembly
W	8	Visor Assembly LH
W	9	Visor Assembly RH
W	10	No. 1 Room Light Assembly LH
W	11	No. 1 Room Light Assembly RH
W	12	No. 2 Room Light Assembly LH
W	13	No. 2 Room Light Assembly RH
W	14	Television Display Assembly
W	15	No. 1 Room Light Assembly
W	16	No. 2 Room Light Assembly
W	17	Inner Rear View Mirror Assembly
X	1	Rear Television Camera Assembly

  Position of Parts in Body <RHD 5-Door>

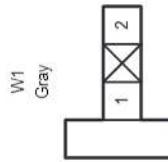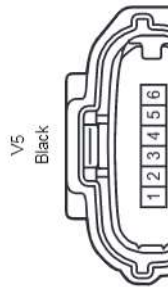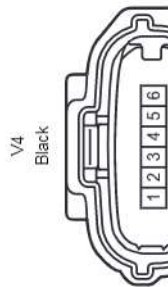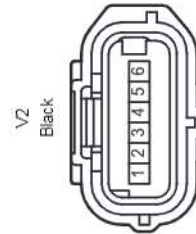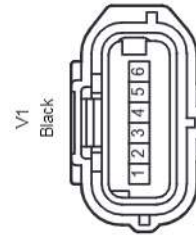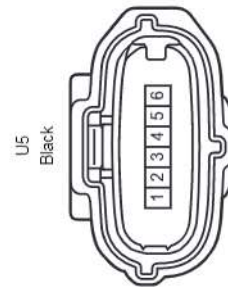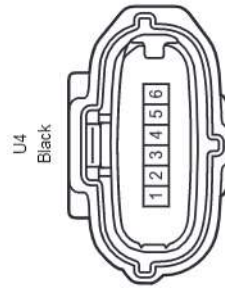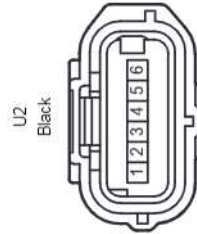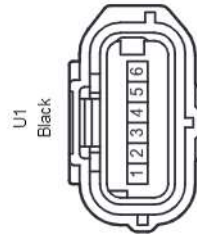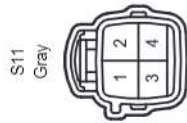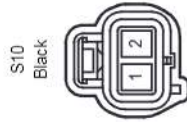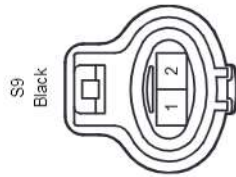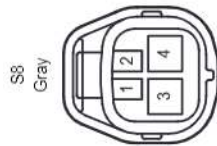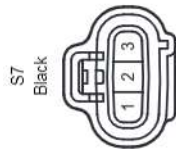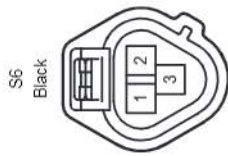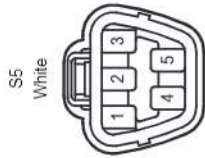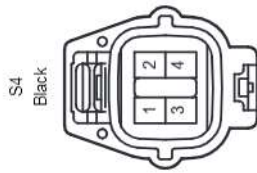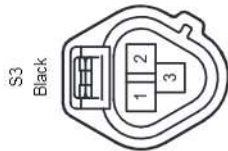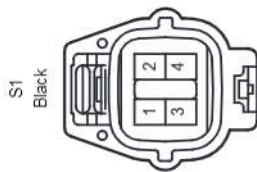


Position of Parts in Body <RHD 5-Door>


W7  
White

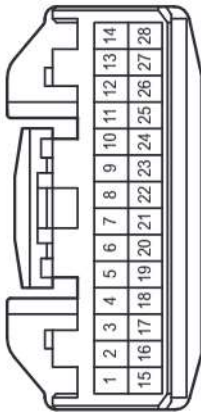

W8  
White

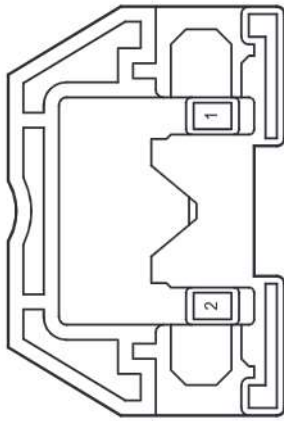

W9  
White

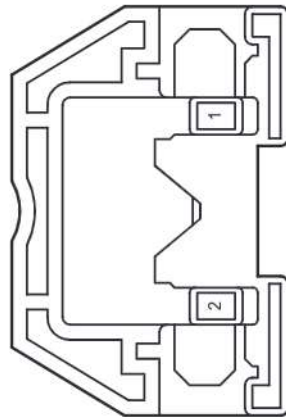

W10  
Gray



 
W11  
Gray




W12  
Gray



W13  
Gray



W14  
White

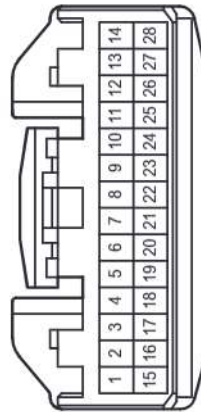


W15  
Gray




W16  
Gray




W17  
Black

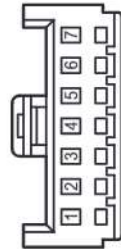

X1  
Black

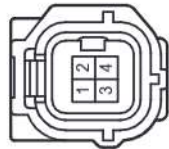

X2  
White

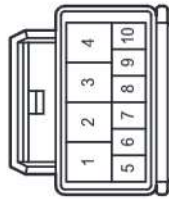


X3  
White



cardiagn.com

Position of Parts in Body <RHD 5-Door>

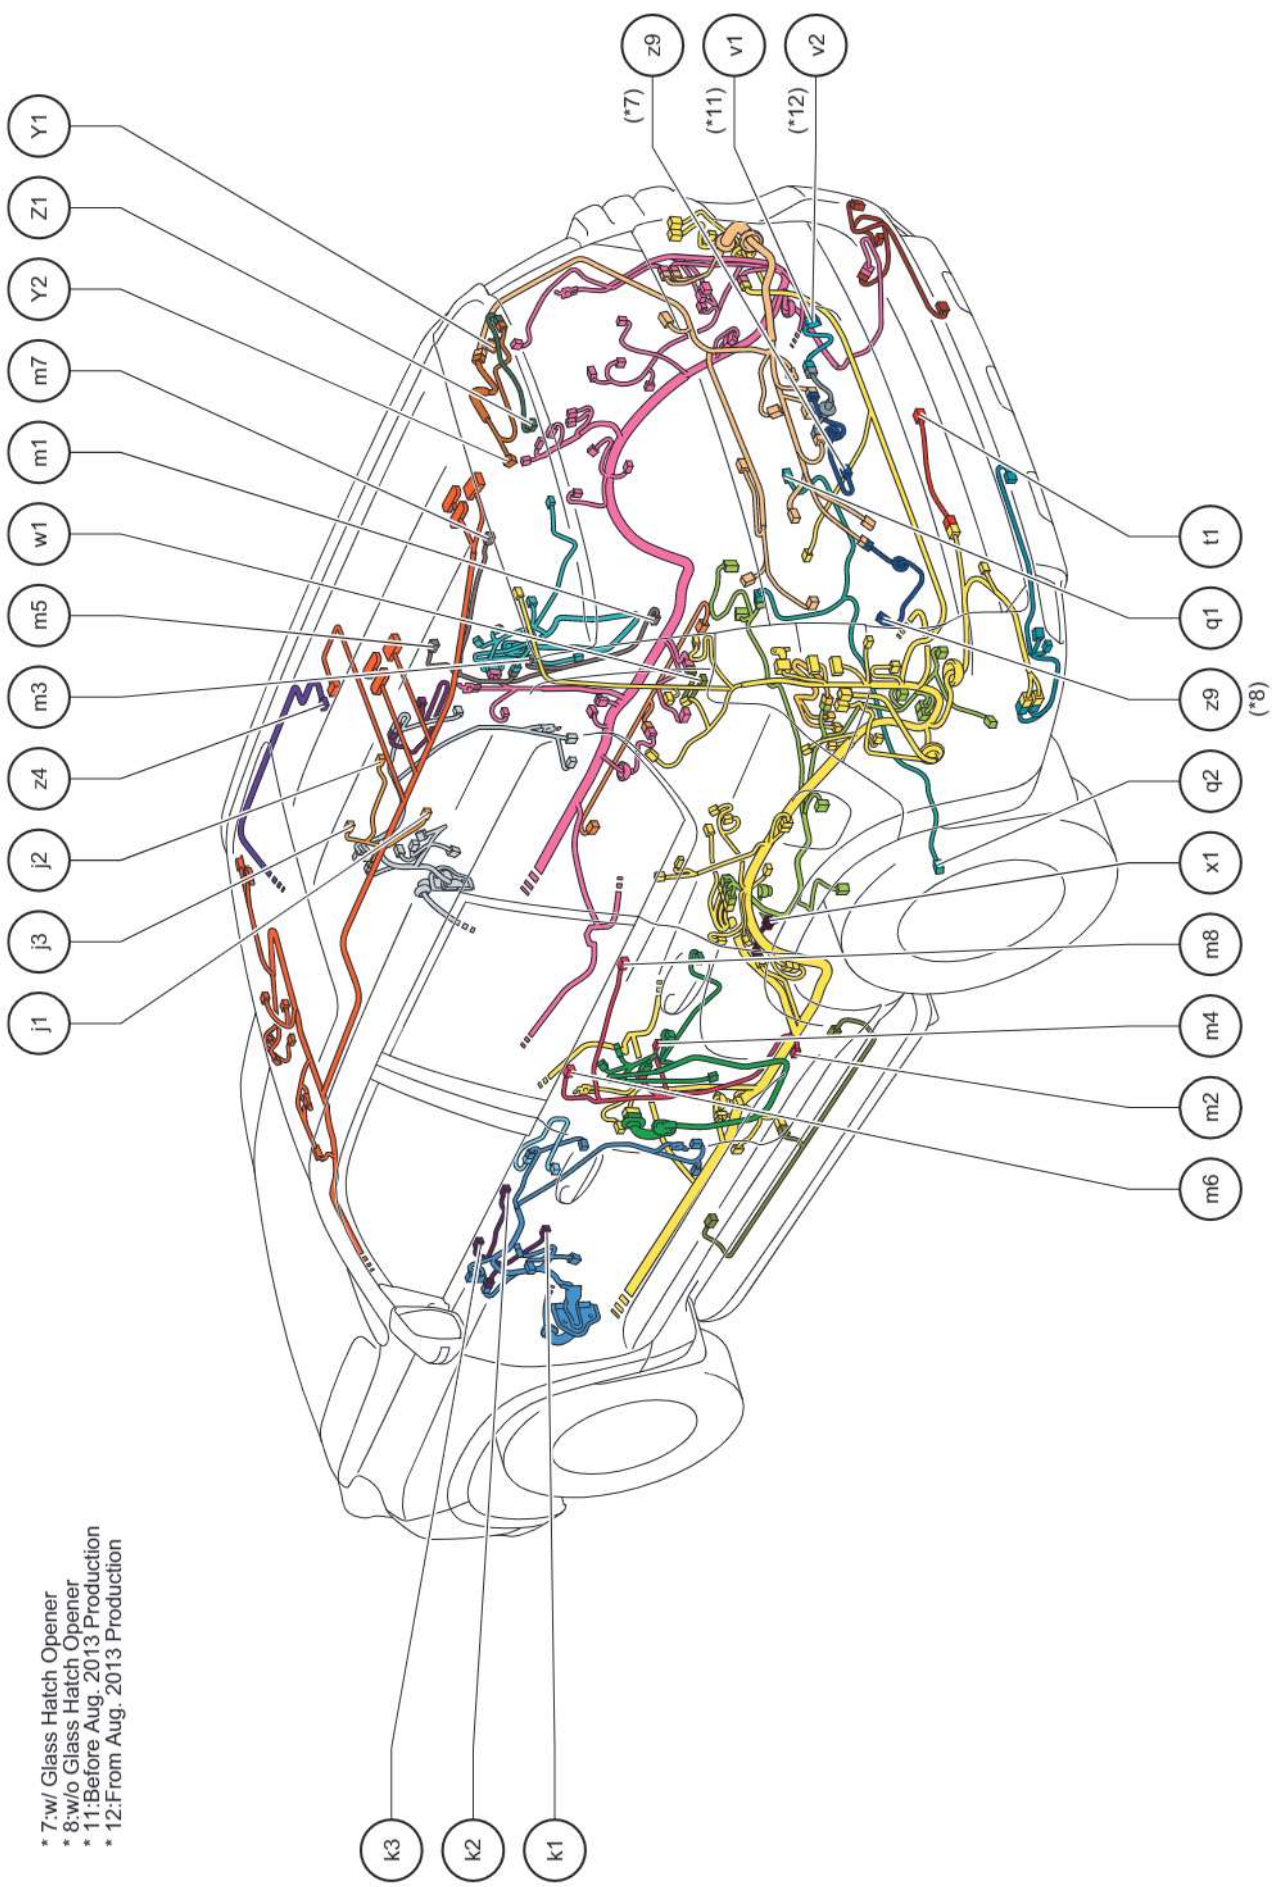


- \* 7:w/ Glass Hatch Opener
- \* 8:w/o Glass Hatch Opener
- \* 11:Before Aug. 2013, Production
- \* 12:From Aug. 2013 Production

Y	1	Rear Wiper Motor Assembly
Y	2	Rear Window Defogger (Back Door Glass)
Z	1	Center Stop Light Assembly
j	1	Front Door Pocket Illumination RH
j	2	Front Door Trim Illumination RH
j	3	Front Door Inside Handle Illumination Light Assembly RH
k	1	Front Door Pocket Illumination LH
k	2	Front Door Trim Illumination LH
k	3	Front Door Inside Handle Illumination Light Assembly LH
m	1	Rear Door Courtesy Light Assembly RH
m	2	Rear Door Courtesy Light Assembly LH
m	3	Rear Door Pocket Illumination RH
m	4	Rear Door Pocket Illumination LH
m	5	Rear Door Inside Handle Illumination Light Assembly RH
m	6	Rear Door Inside Handle Illumination Light Assembly LH
m	7	Rear Door Trim Illumination RH
m	8	Rear Door Trim Illumination LH
q	1	Rear Speed Sensor RH
q	2	Rear Speed Sensor LH
t	1	Fuel Sender Gauge Assembly (Sub)
v	1	Rear Television Camera Assembly
v	2	Rear Television Camera Assembly
w	1	Rear Seat Heater Assembly RH
x	1	Rear Seat Heater Assembly LH
z	4	Television Display Assembly
z	9	License Plate Light Assembly




Position of Parts in Body <RHD 5-Door>

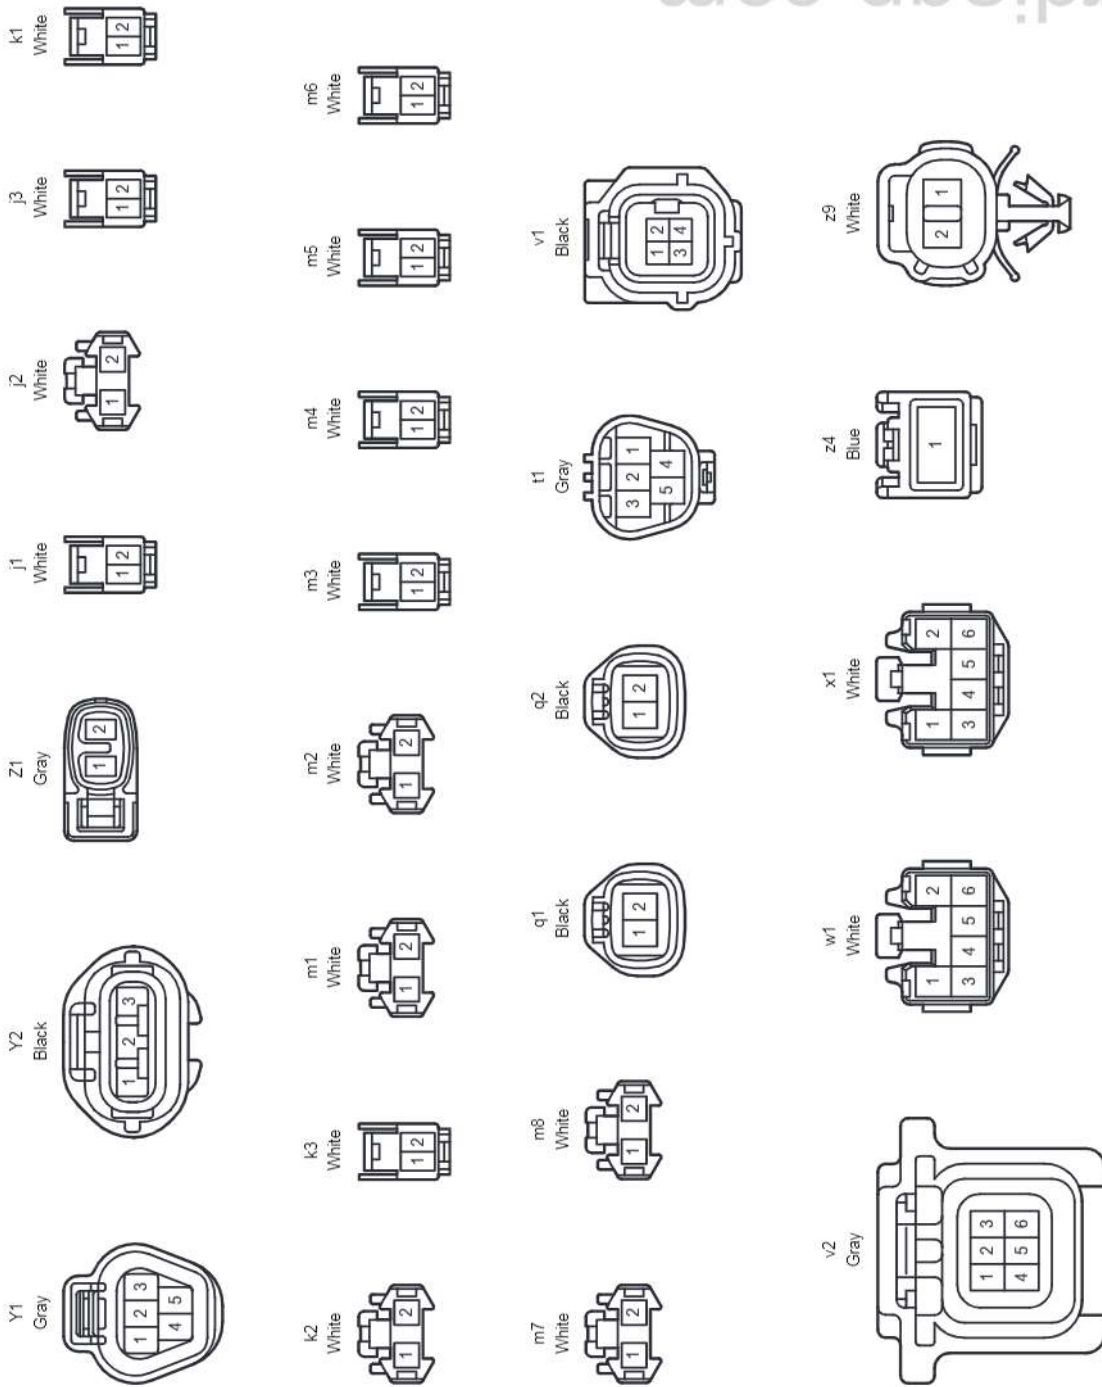


Wire and Wire in Body <RHD 5-Door>





\* 1:w/ Glass Hatch Opener  
\* 2:w/o Glass Hatch Opener

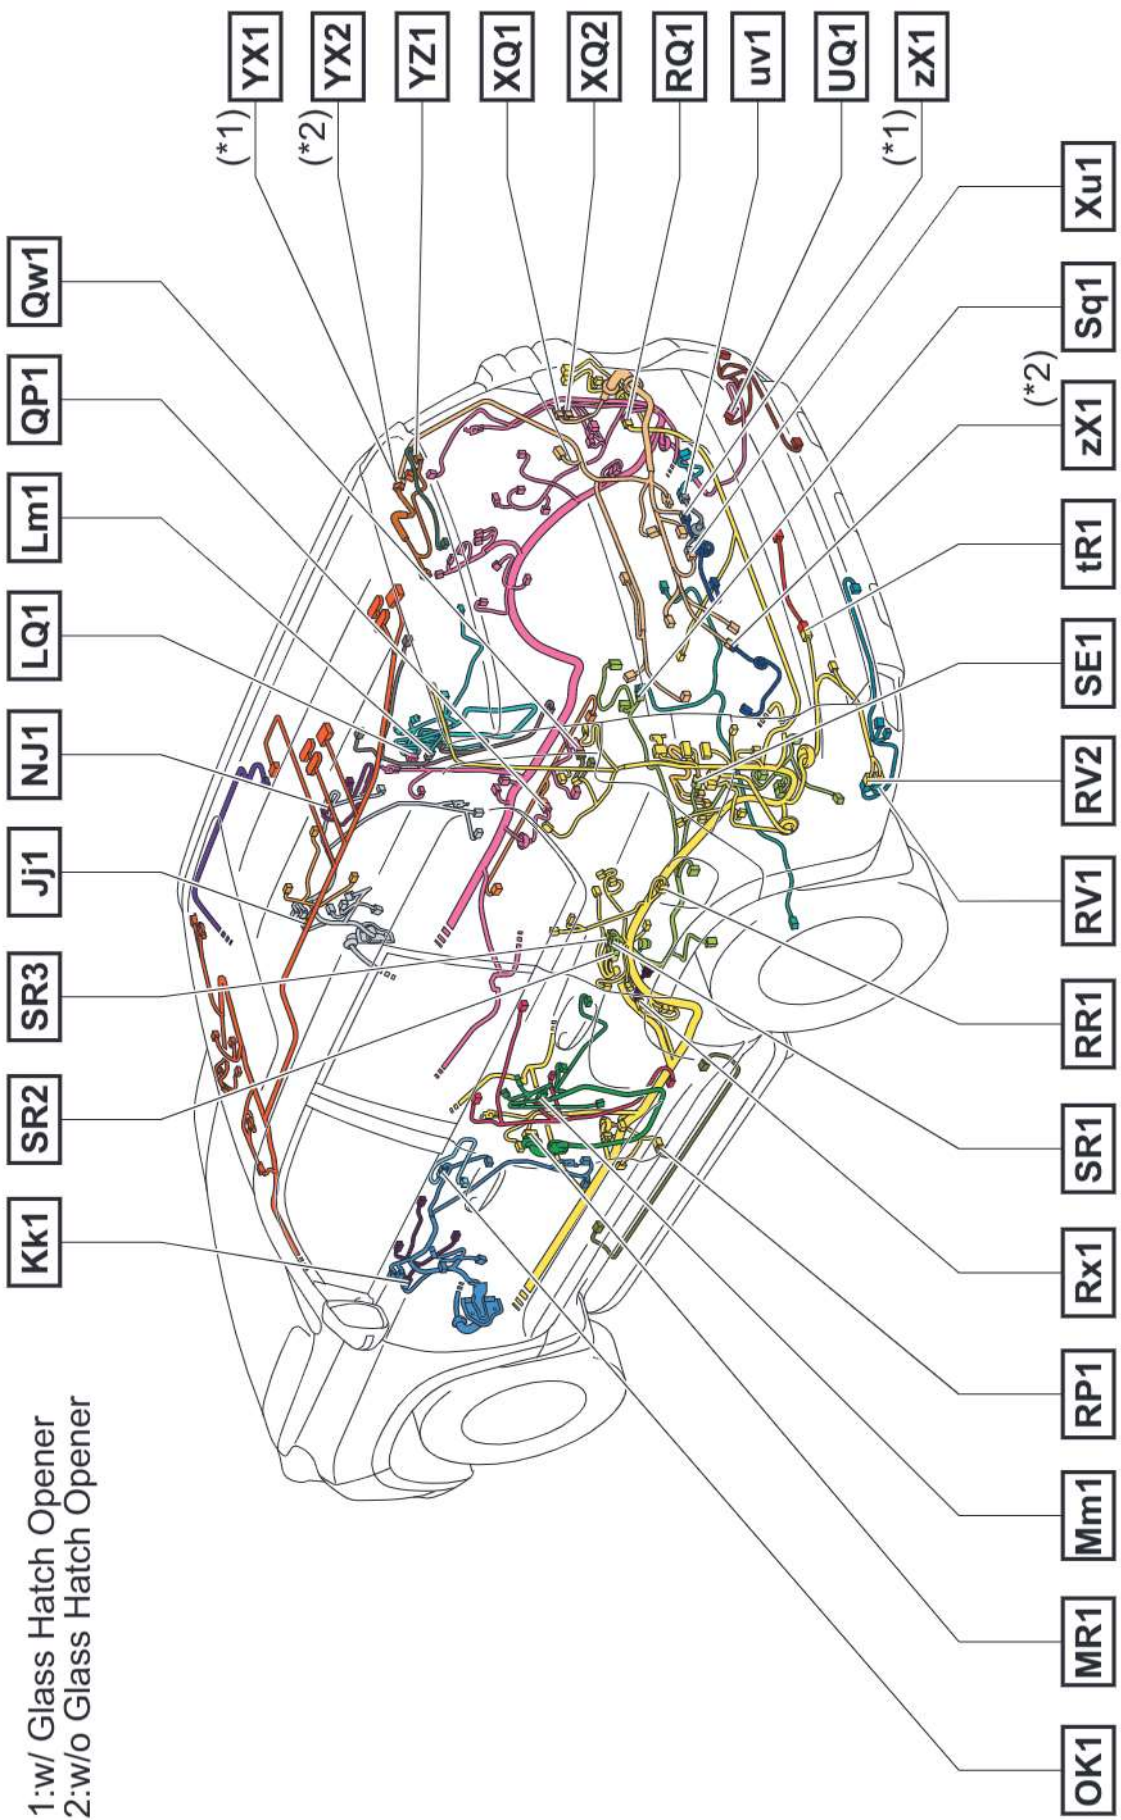




Wire and Wire in Body <RHD 5-Door>

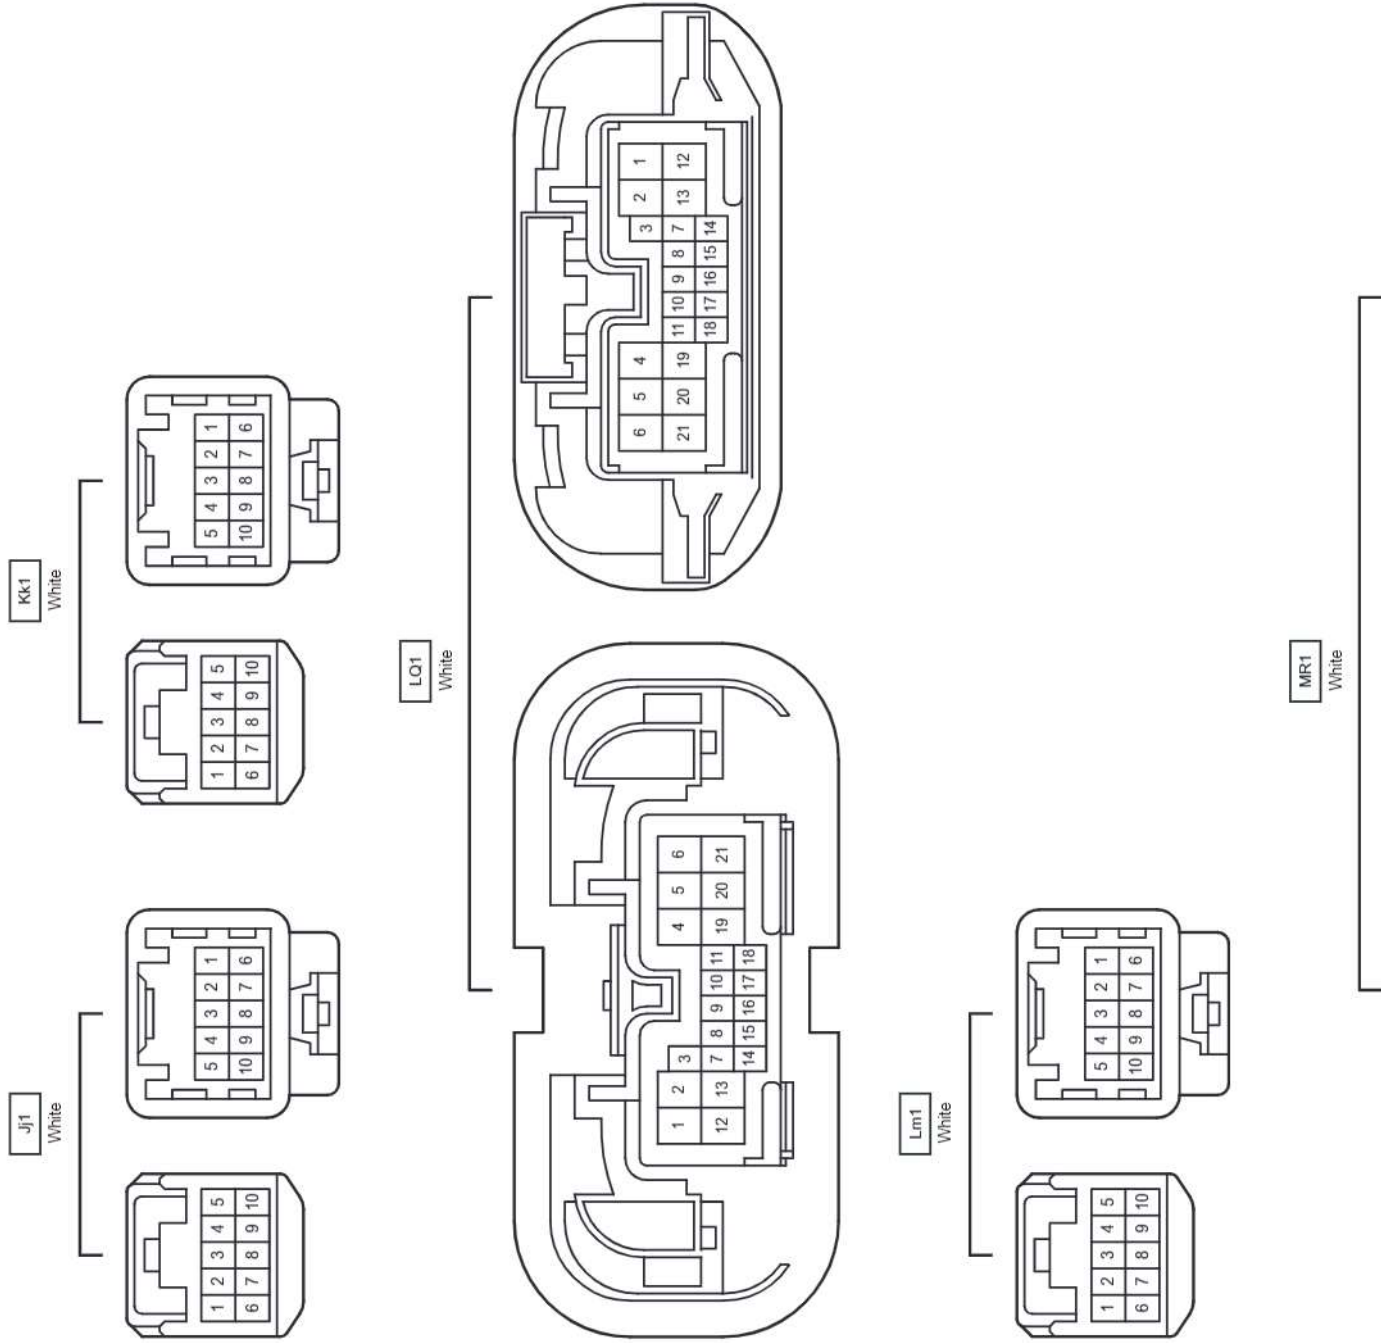


Wire and Wire in Body <RHD 5-Door>

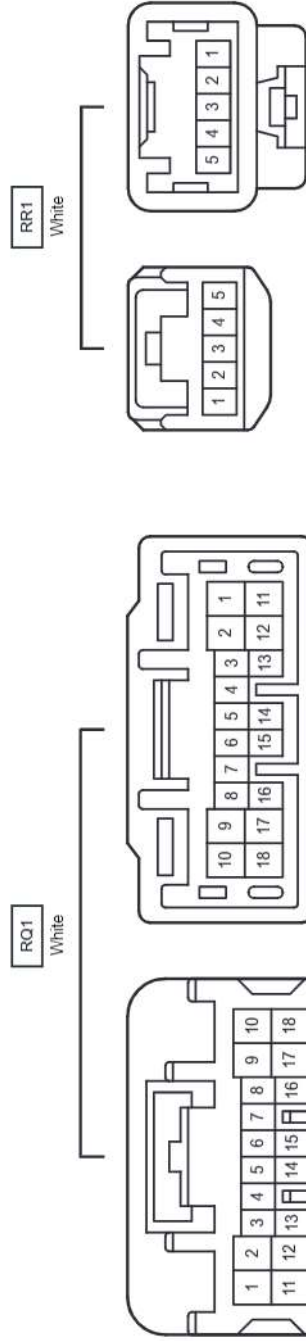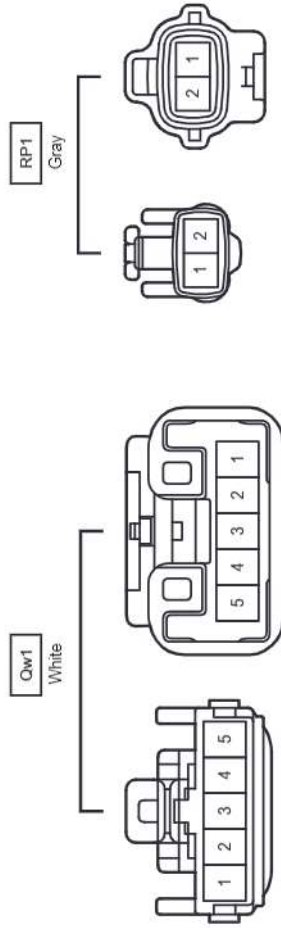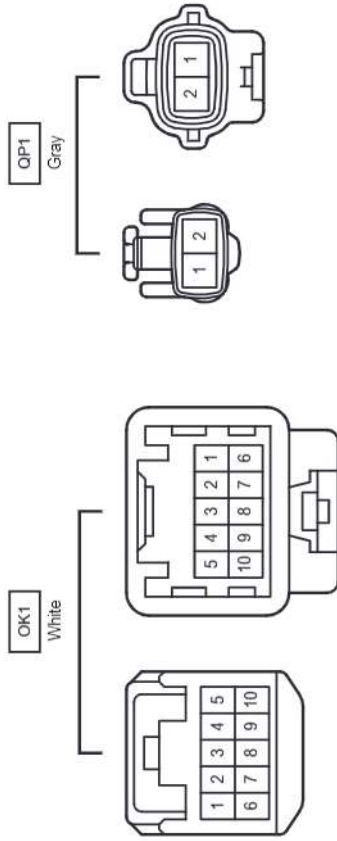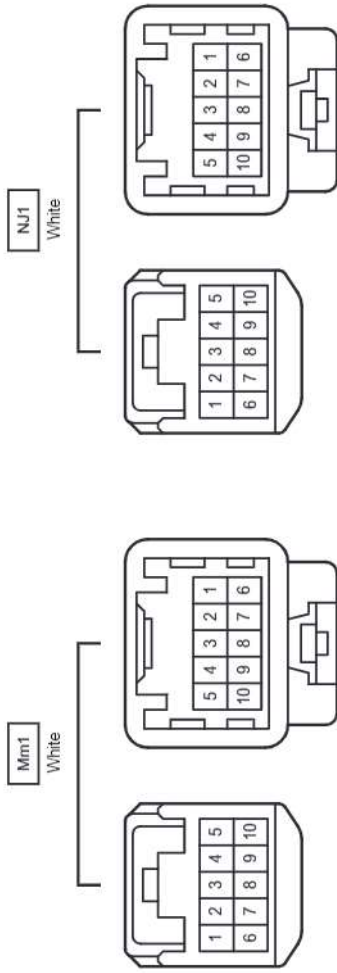


Wire and Wire in Body <RHD 5-Door>

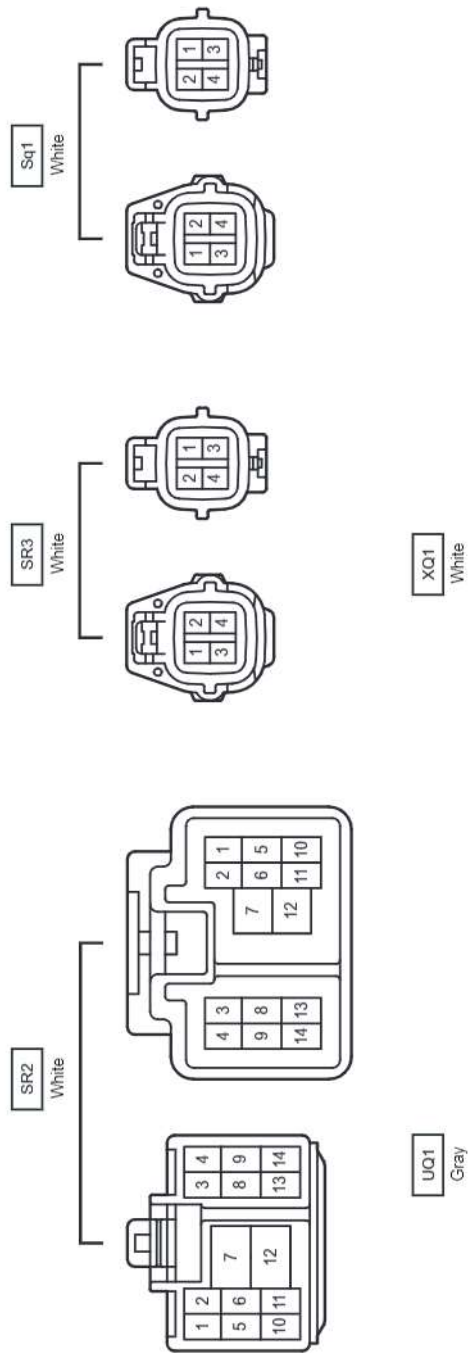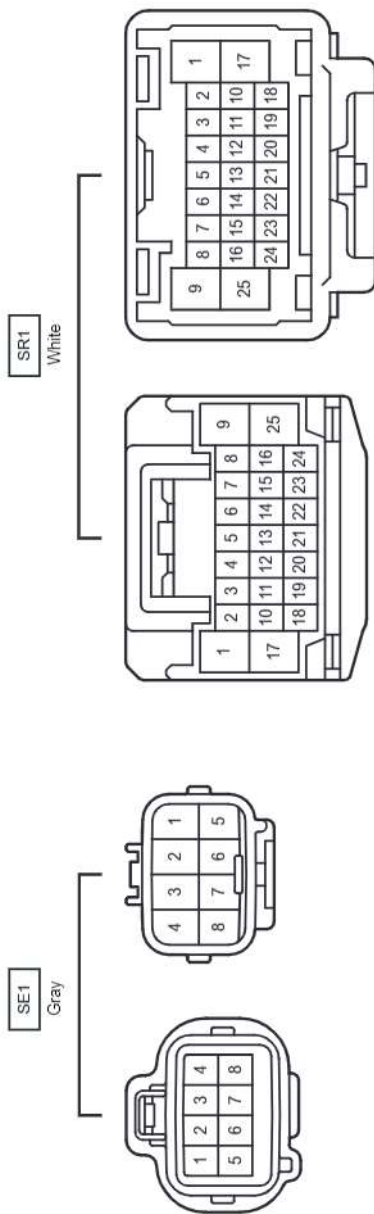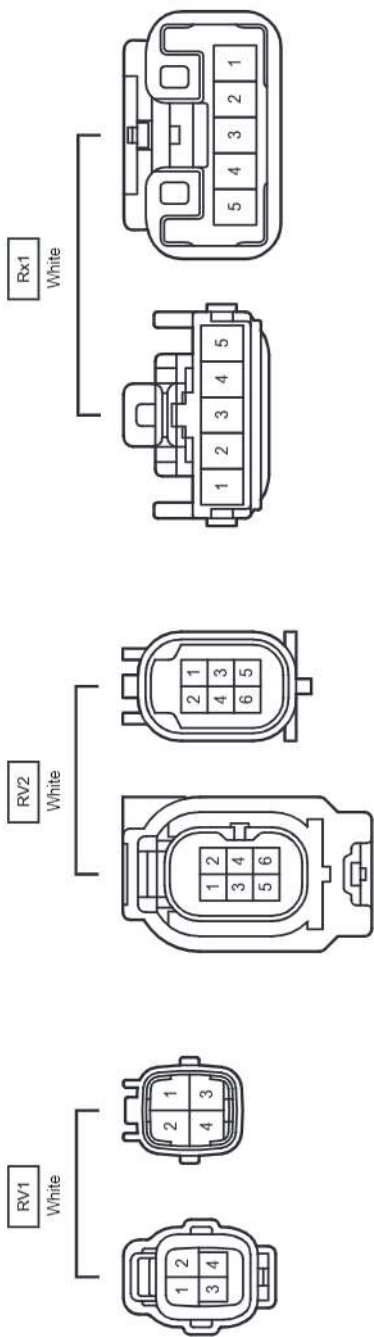

Wire and Wire in Body <RHD 5-Door>

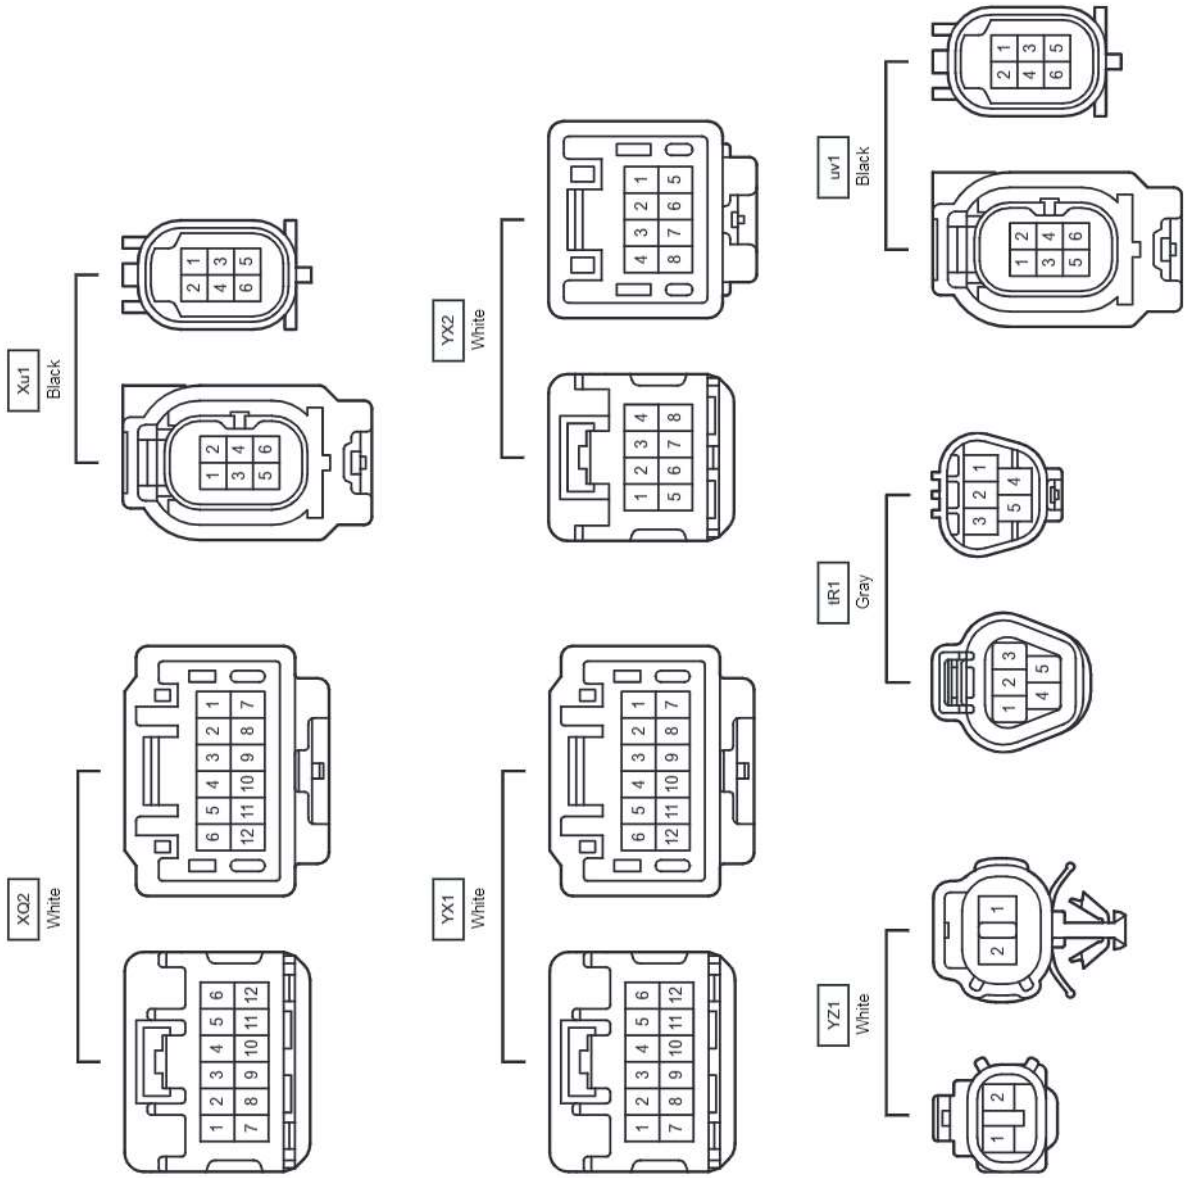

Position of Parts in Engine Compartment <LHD 5L-E>


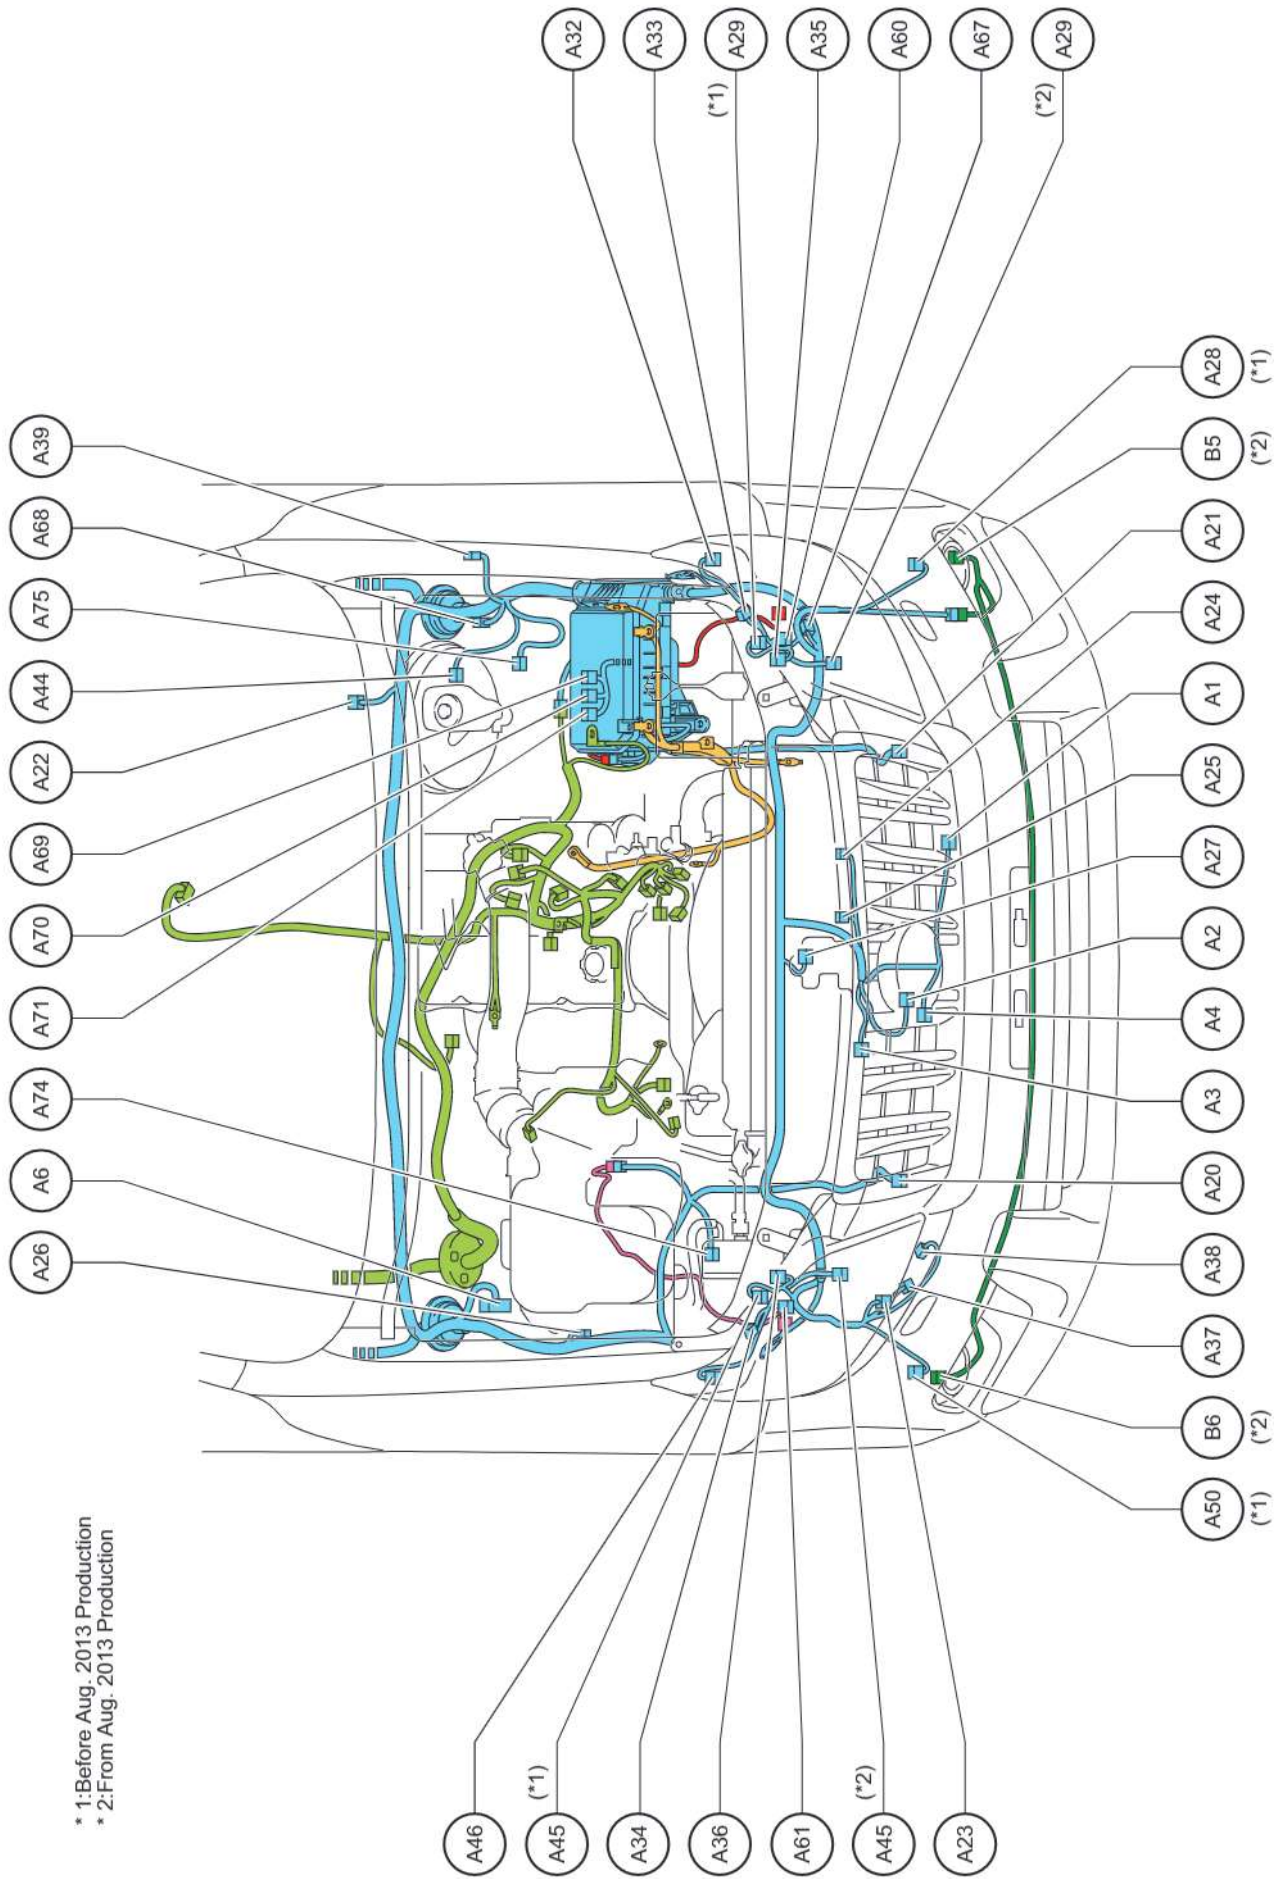


\* 1: Before Aug. 2013 Production  
 \* 2: From Aug. 2013 Production













- A 1 Ambient Temperature Sensor
- A 2 A/C Pressure Sensor
- A 3 No. 1 Pressure Switch
- A 4 Condenser Fan Motor (With Shroud Blower Assembly)
- A 6 Brake Actuator Assembly
- A 20 Front Airbag Sensor RH
- A 21 Front Airbag Sensor LH
- A 22 Windshield Wiper Motor Assembly
- A 23 Windshield Washer Motor and Pump Assembly
- A 24 Low Pitched Horn Assembly
- A 25 High Pitched Horn Assembly
- A 26 Security Horn Assembly
- A 27 Engine Hood Courtesy Switch
- A 28 Fog Light Assembly LH
- A 29 Headlight Assembly LH
- A 29 Headlight Assembly LH
- A 32 Headlight Assembly LH
- A 33 Headlight Assembly RH
- A 34 Headlight Assembly RH
- A 35 Headlight Assembly LH
- A 36 Headlight Assembly RH
- A 37 Headlight Cleaner Motor and Pump Assembly
- A 38 Headlight Cleaner Control Relay
- A 39 Wireless Door Lock Buzzer
- A 44 Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Assembly)
- A 45 Headlight Assembly RH
- A 46 Headlight Assembly RH
- A 50 Fog Light Assembly RH
- A 60 Headlight Assembly LH
- A 61 Headlight Assembly RH
- A 67 Junction Connector
- A 68 Junction Connector
- A 69 Junction Connector
- A 70 Junction Connector
- A 71 Junction Connector
- A 74 Vacuum Warning Switch Assembly
- A 75 Fuel Filter Warning Switch
- B 5 Fog Light Assembly LH



Position of Parts in Engine Compartment <LHD 5L-E>

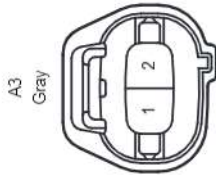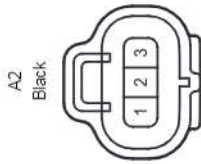

A6  
Black

 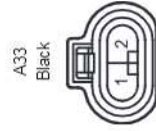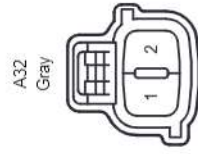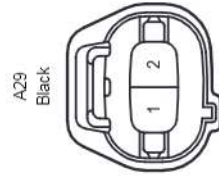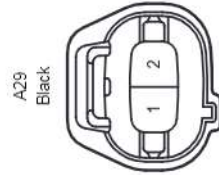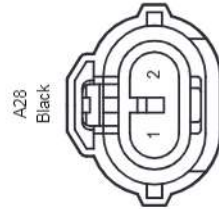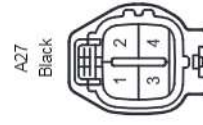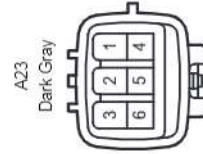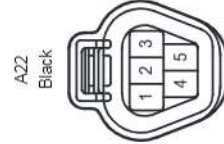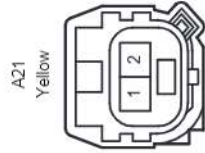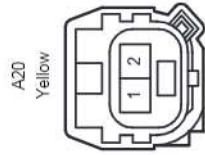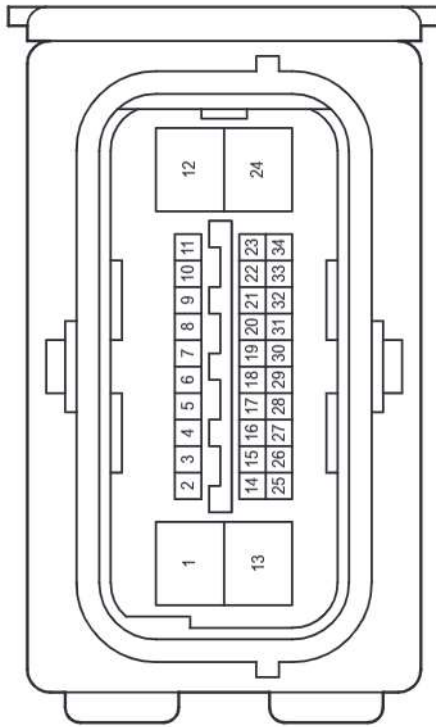

Position of Parts in Engine Compartment <LHD 5L-E>


A39  
Gray



A44  
Gray




A45  
Black

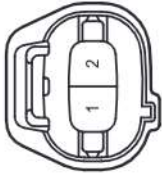

A46  
Gray



A50  
Black

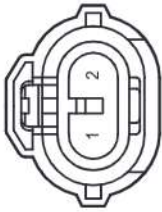


A60  
Black




A61  
Black




A67  
Dark Gray

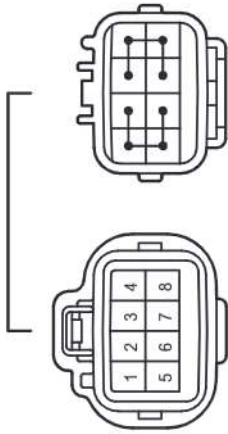


A68  
Dark Gray

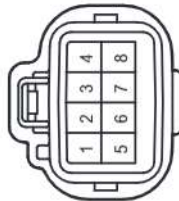


A69  
White

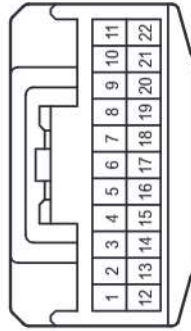

A70  
White

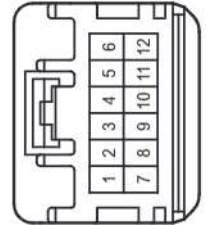

A71  
White

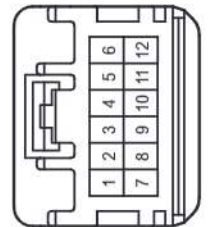


A74  
Gray



cardiagn.com


Position of Parts in Engine Compartment <LHD 5L-E>

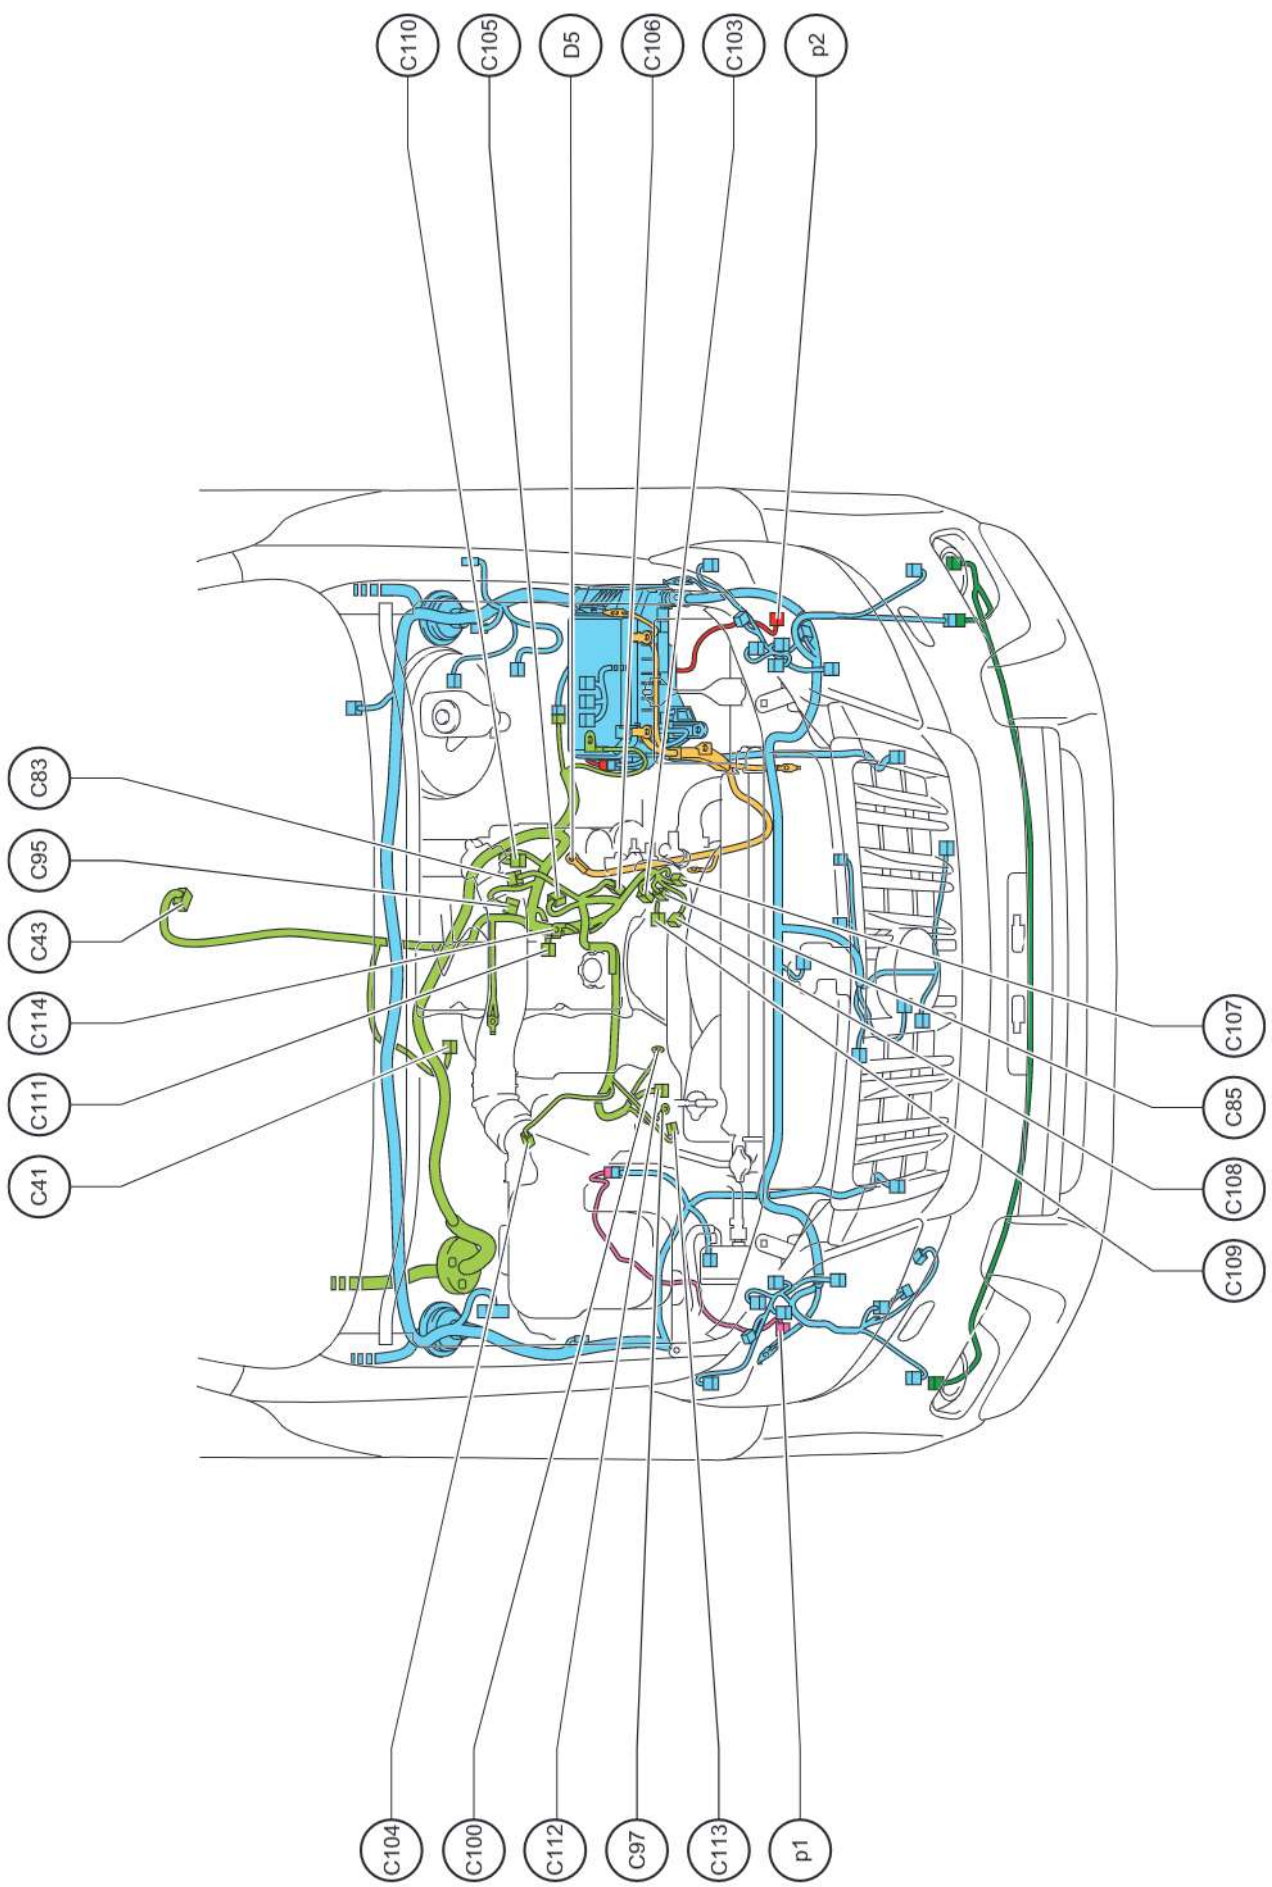


- C 41 Back-Up Light Switch Assembly
- C 43 Transfer Shift Actuator Assembly
- C 43 Transfer Shift Actuator Assembly
- C 83 Vacuum Sensor (Diesel Turbo Pressure Sensor)
- C 85 Fuel Temperature Sensor
- C 95 Starter Assembly
- C 97 Generator Assembly
- C100 Engine Oil Pressure Switch Assembly
- C103 Cam Position Sensor
- C104 Intake Air Temperature Sensor
- C105 Throttle Control Motor
- C106 Spill Control Valve
- C107 Injection Pump
- C108 Timing Control Valve
- C109 Crank Position Sensor
- C110 Throttle Open Switch
- C111 Diesel Engine Coolant Temperature Sensor
- C112 Generator Assembly
- C113 Cooler Compressor Assembly
- C114 Glow Plug Assembly
- D 5 Starter Assembly
- p 1 Front Speed Sensor RH
- p 2 Front Speed Sensor LH

Position of Parts in Engine Compartment <LHD 5L-E>


C41  
Gray

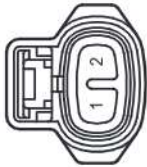

C43  
Black

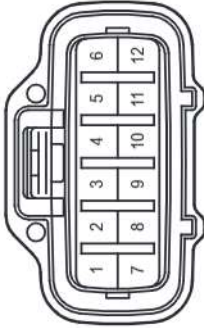

C43  
Black

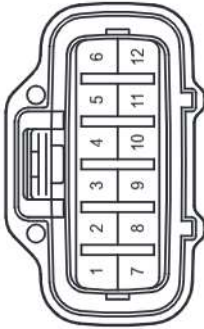

C83  
Black



C85  
Dark Gray



C95  
Black



C97



C100  
Black




C103  
White



C104  
Black



C105  
Black

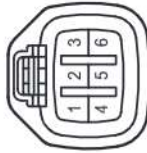

C106  
Gray



C107  
Black



C108  
Gray



C109  
Black




C110  
Black



C111  
Black



C112  
Black

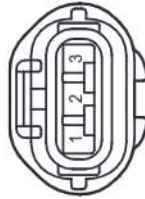

C113  
Gray



C114



D5




p1  
Black



p2  
Black




Wire and Wire , Ground Points in Engine Compartment <LHD 5L-E>

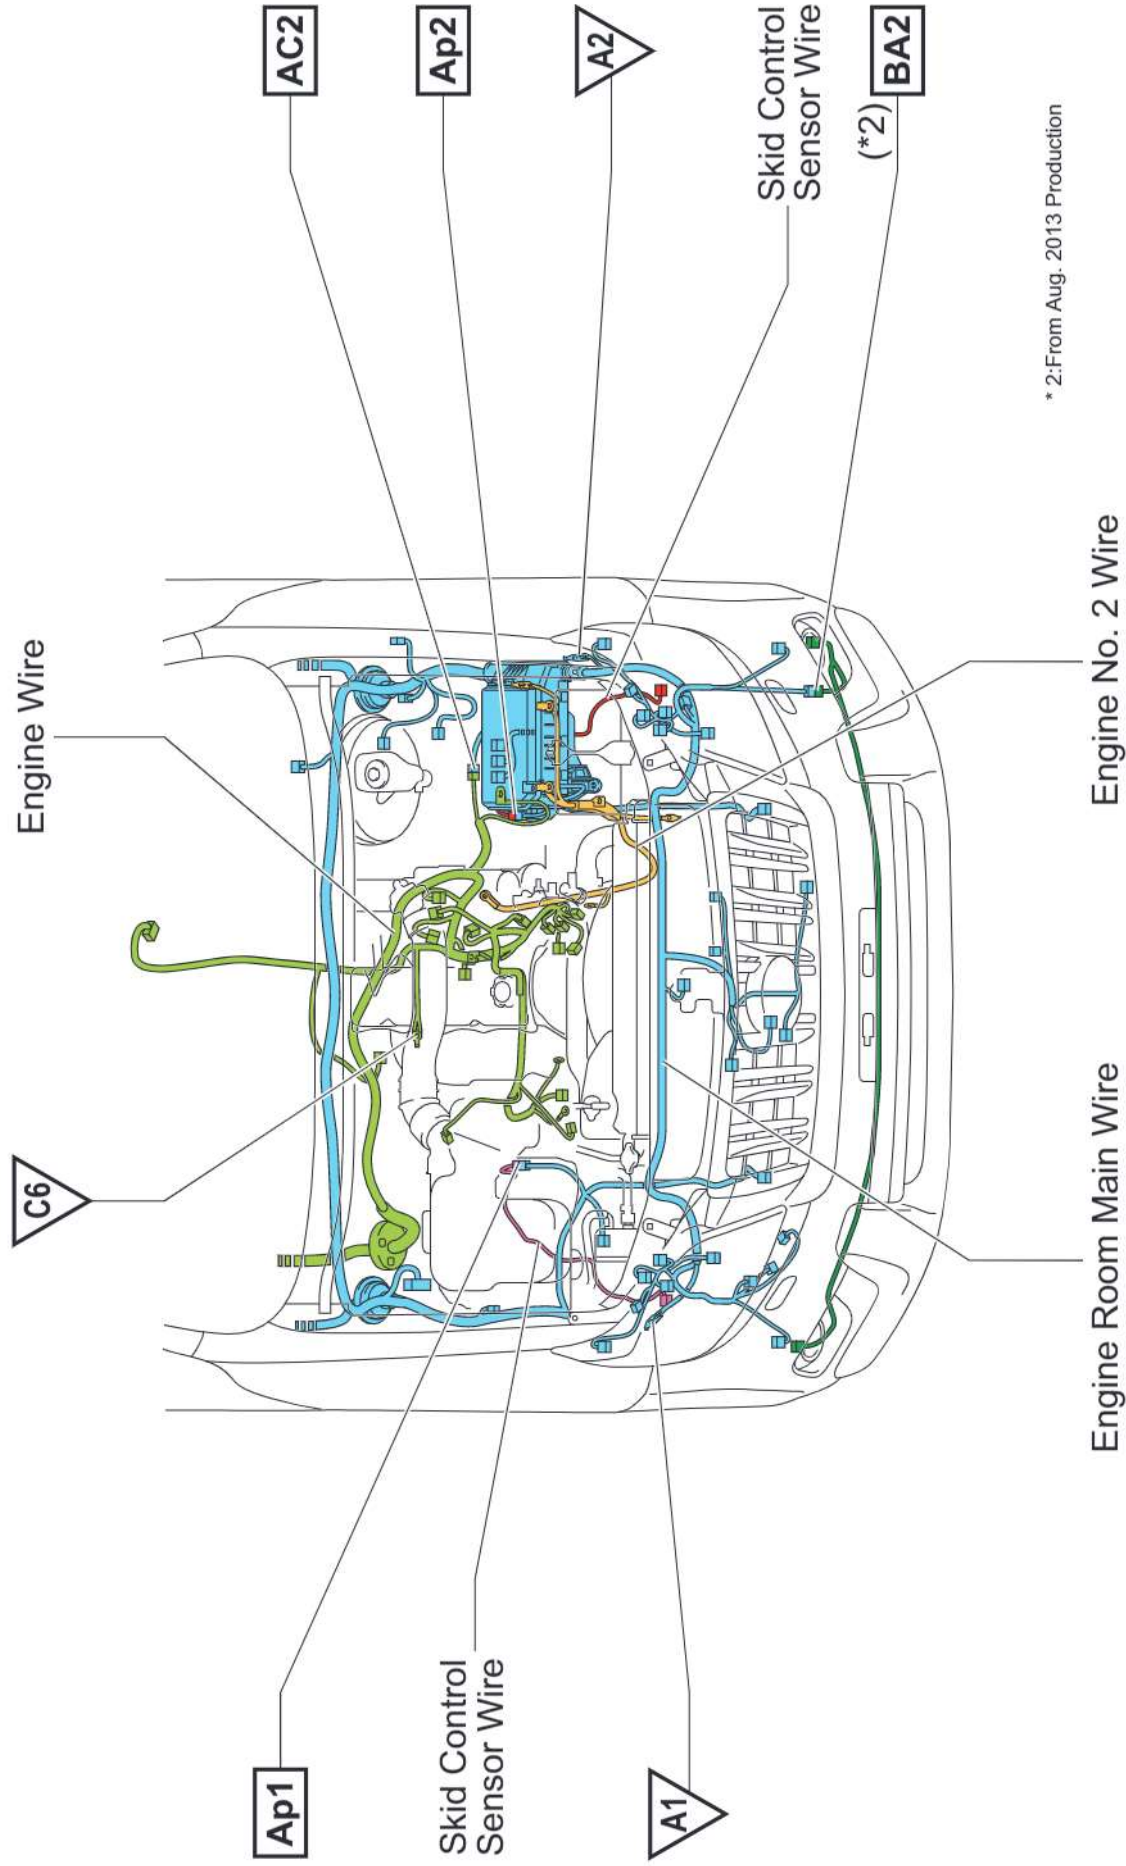


\* 2:From Aug. 2013 Production

Wire and Wire , Ground Points in Engine Compartment <LHD 5L-E>

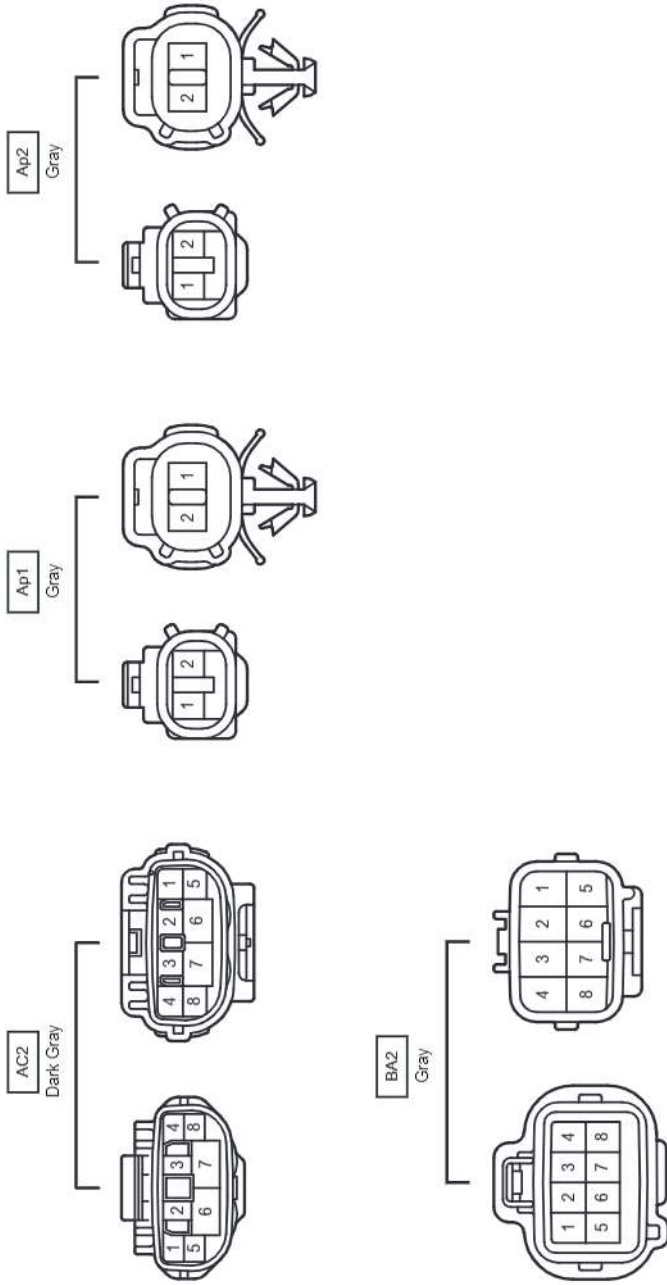

Position of Parts in Engine Compartment <RHD 5L-E>

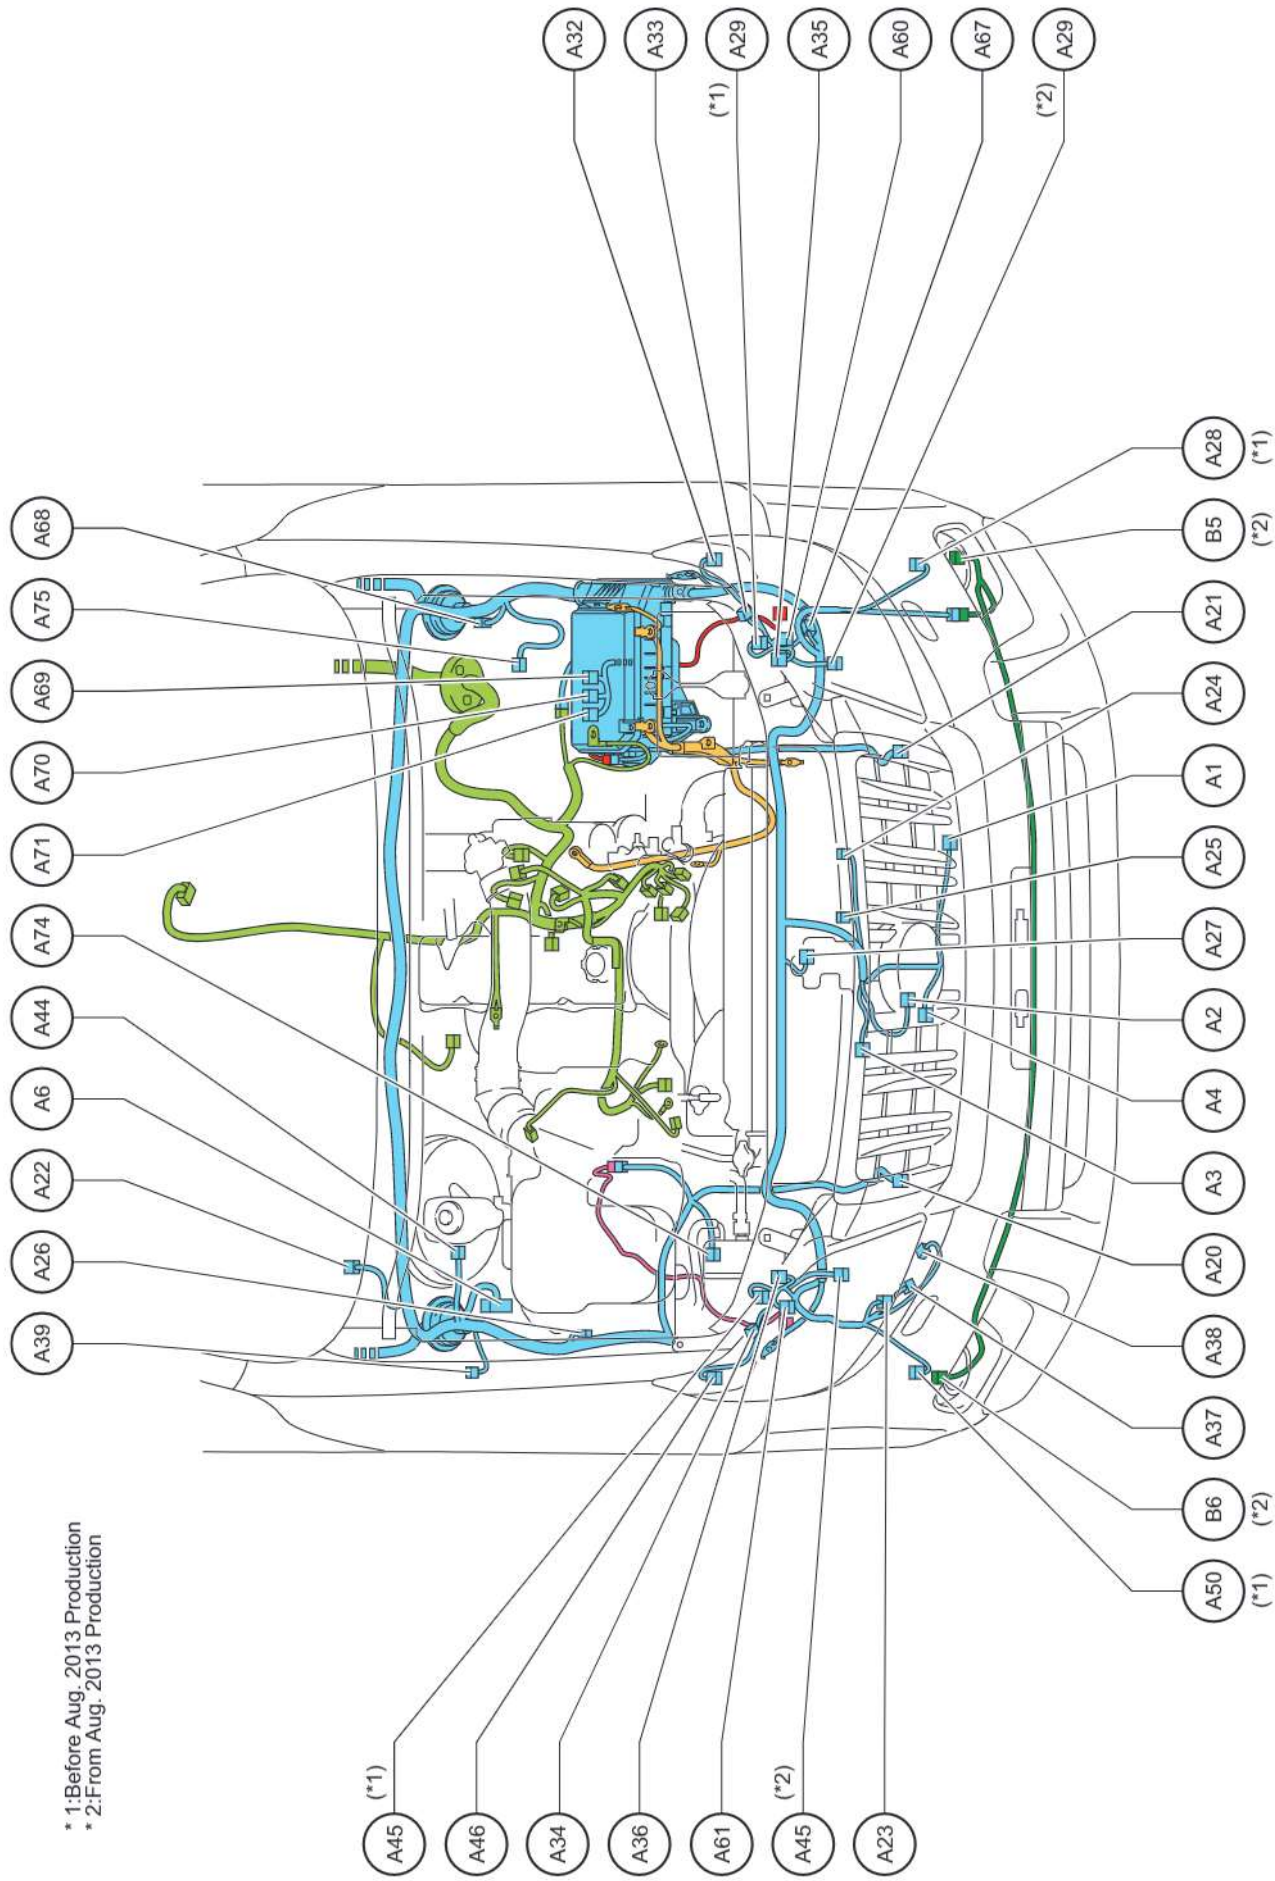

\* 1: Before Aug. 2013 Production  
 \* 2: From Aug. 2013 Production



A	1	Ambient Temperature Sensor
A	2	A/C Pressure Sensor
A	3	No. 1 Pressure Switch
A	4	Condenser Fan Motor (With Shroud Blower Assembly)
A	6	Brake Actuator Assembly
A	20	Front Airbag Sensor RH
A	21	Front Airbag Sensor LH
A	22	Windshield Wiper Motor Assembly
A	23	Windshield Washer Motor and Pump Assembly
A	24	Low Pitched Horn Assembly
A	25	High Pitched Horn Assembly
A	26	Security Horn Assembly
A	27	Engine Hood Courtesy Switch
A	28	Fog Light Assembly LH
A	29	Headlight Assembly LH
A	32	Headlight Assembly LH
A	33	Headlight Assembly RH
A	34	Headlight Assembly RH
A	35	Headlight Assembly LH
A	36	Headlight Assembly RH
A	37	Headlight Cleaner Motor and Pump Assembly
A	38	Headlight Cleaner Control Relay
A	39	Wireless Door Lock Buzzer
A	44	Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Assembly)
A	45	Headlight Assembly RH
A	46	Headlight Assembly RH
A	50	Fog Light Assembly RH
A	60	Headlight Assembly LH
A	61	Headlight Assembly RH
A	67	Junction Connector
A	68	Junction Connector
A	69	Junction Connector
A	70	Junction Connector
A	71	Junction Connector
A	74	Vacuum Warning Switch Assembly
A	75	Fuel Filter Warning Switch
B	5	Fog Light Assembly LH
B	6	Fog Light Assembly RH

Position of Parts in Engine Compartment <RHD 5L-E>


A1  
Black



A2  
Black




A3  
Gray

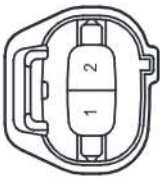


A4  
Black




A6  
Black

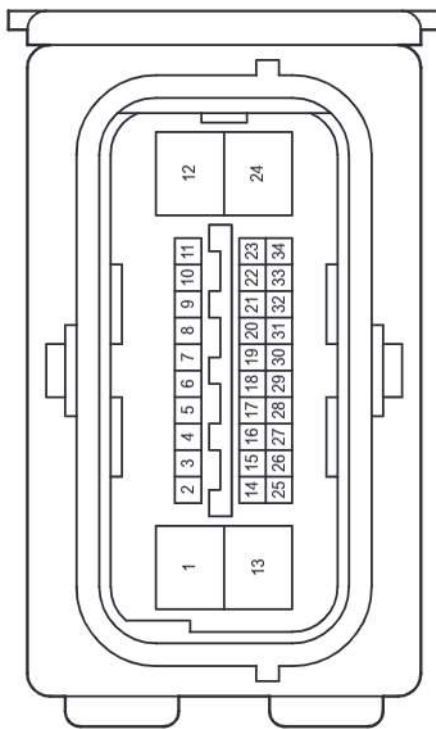


A20  
Yellow

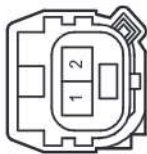


A21  
Yellow

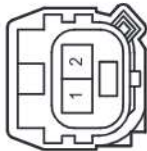

A22  
Black

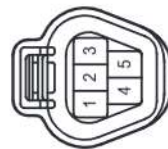

A23  
Dark Gray

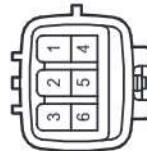

A24  
Black




A25  
Black




A26  
Black




A27  
Black

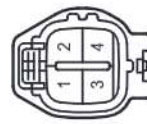

A28  
Black

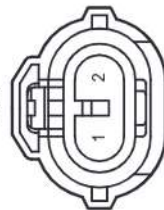

A29  
Black

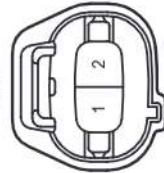

A32  
Gray


















A33  
Black



A34  
Black




Position of Parts in Engine Compartment <RHD 5L-E>

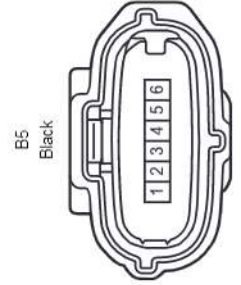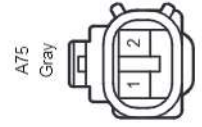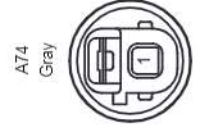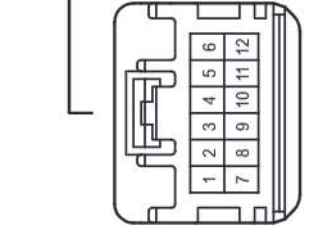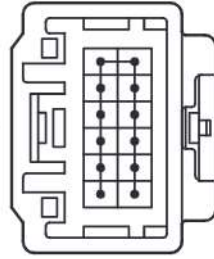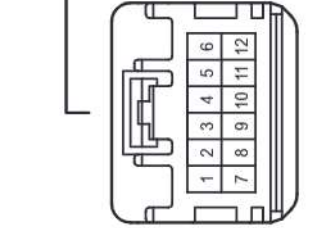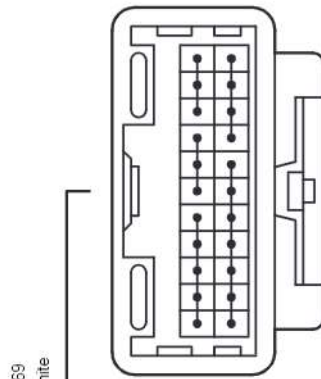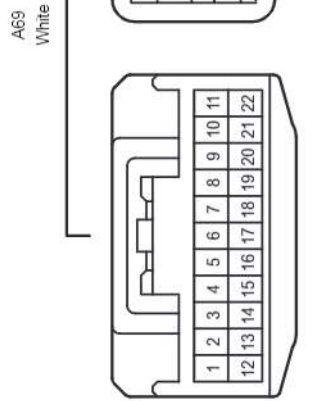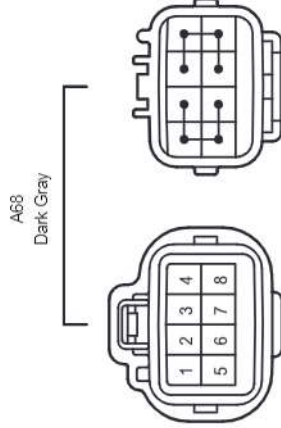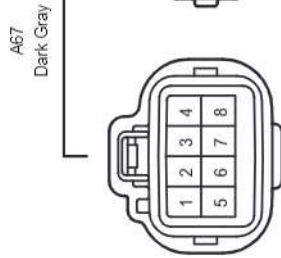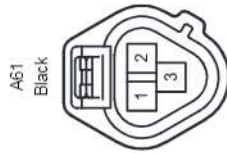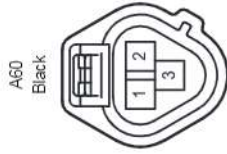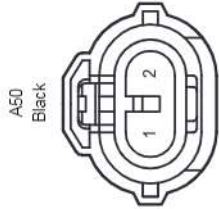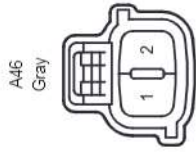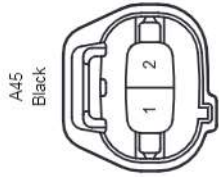















cardiagn.com

Position of Parts in Engine Compartment <RHD 5L-E>

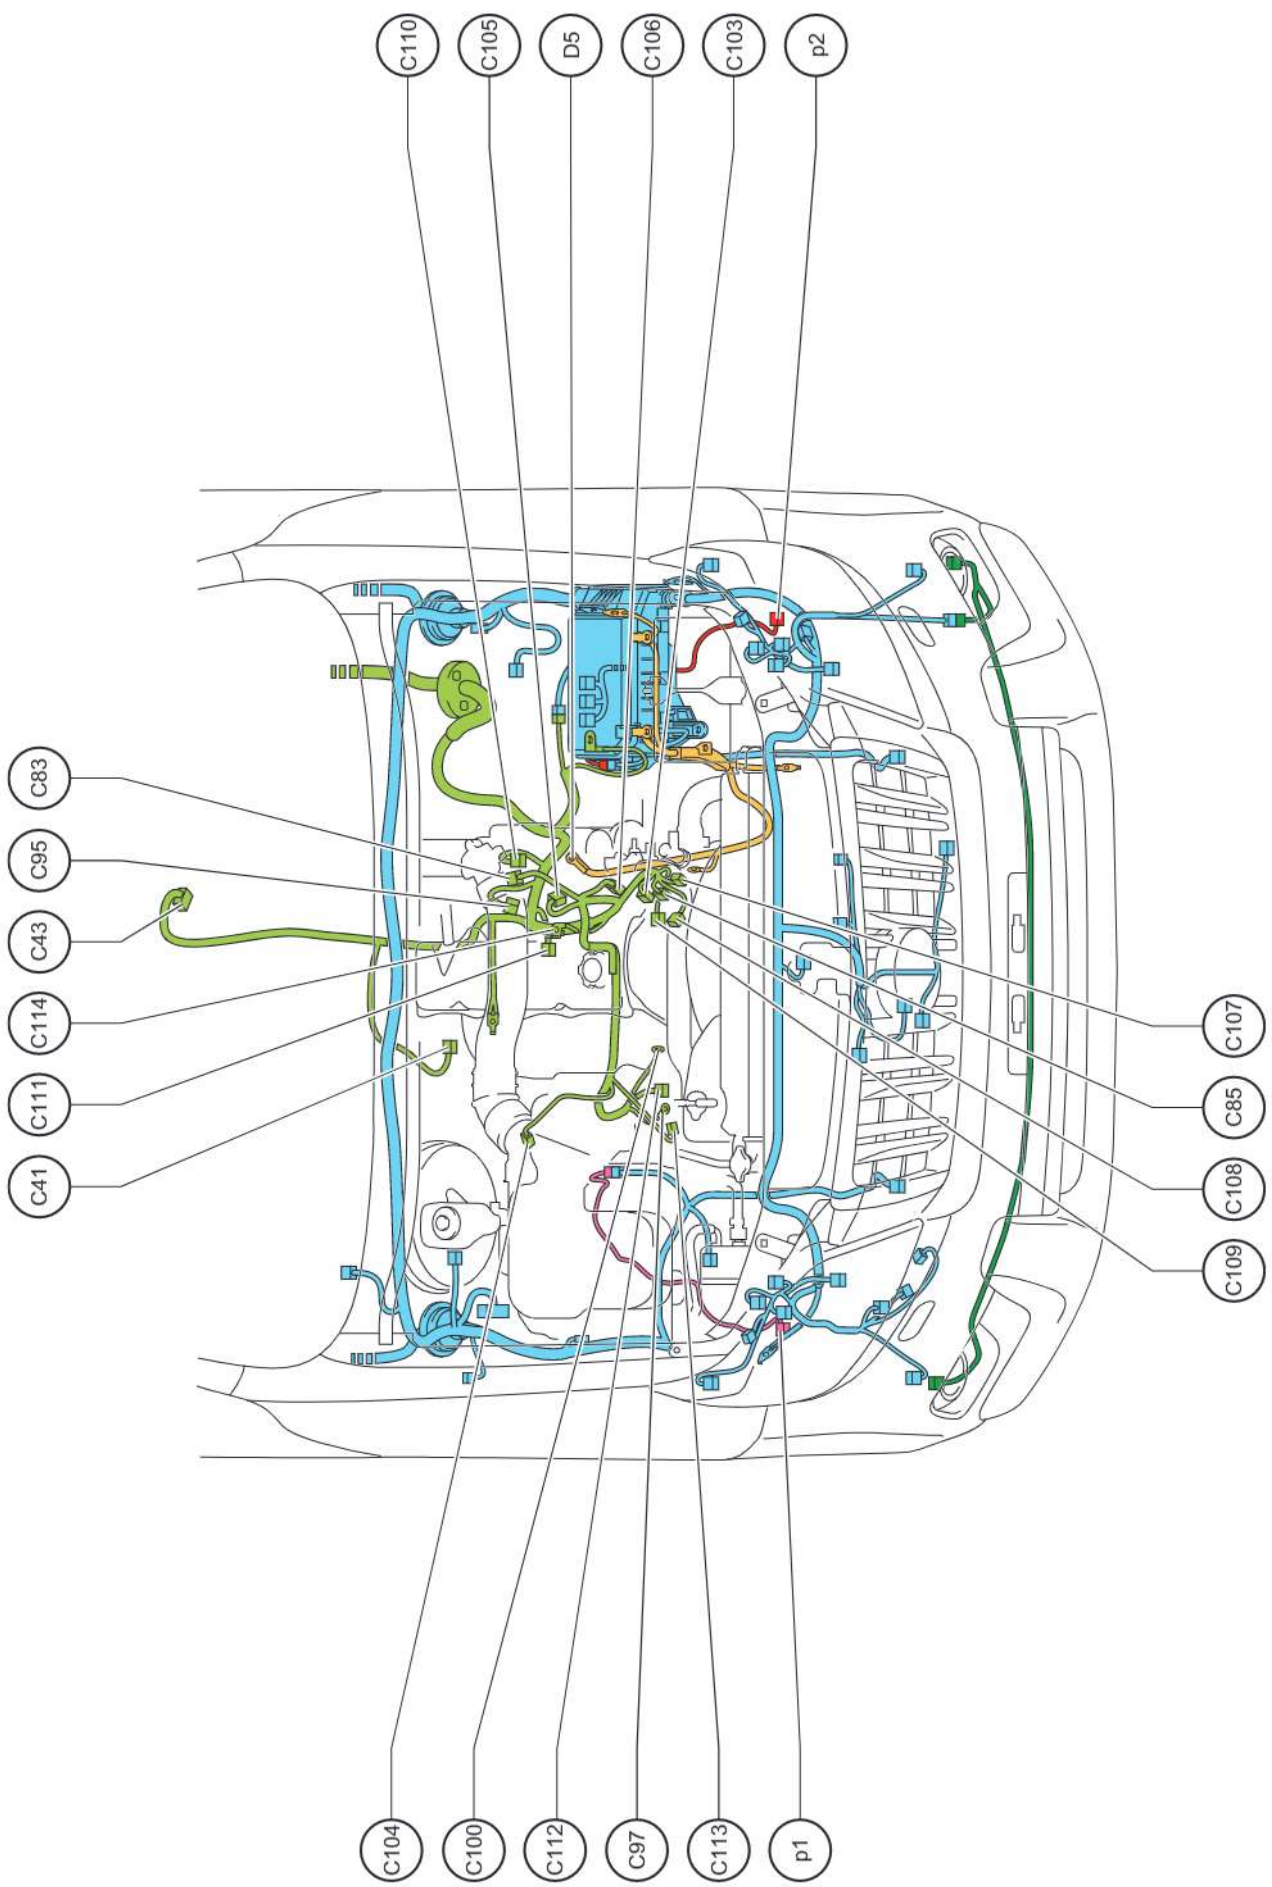


- C 41 Back-Up Light Switch Assembly
- C 43 Transfer Shift Actuator Assembly
- C 83 Vacuum Sensor (Diesel Turbo Pressure Sensor)
- C 85 Fuel Temperature Sensor
- C 95 Starter Assembly
- C 97 Generator Assembly
- C100 Engine Oil Pressure Switch Assembly
- C103 Cam Position Sensor
- C104 Intake Air Temperature Sensor
- C105 Throttle Control Motor
- C106 Spill Control Valve
- C107 Injection Pump
- C108 Timing Control Valve
- C109 Crank Position Sensor
- C110 Throttle Open Switch
- C111 Diesel Engine Coolant Temperature Sensor
- C112 Generator Assembly
- C113 Cooler Compressor Assembly
- C114 Glow Plug Assembly
- D 5 Starter Assembly
- p 1 Front Speed Sensor RH
- p 2 Front Speed Sensor LH

  Position of Parts in Engine Compartment <RHD 5L-E>

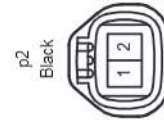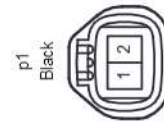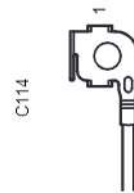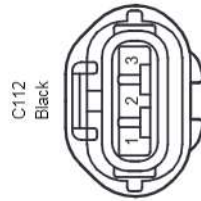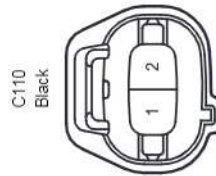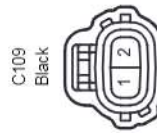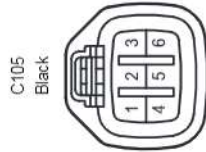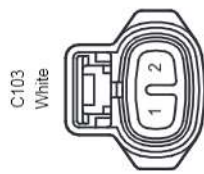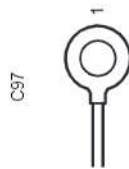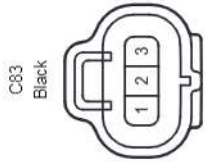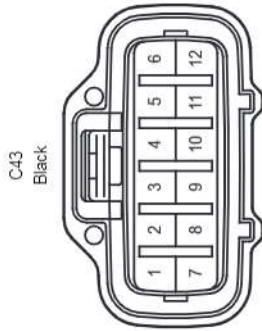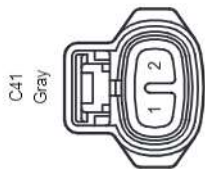


Wire and Wire , Ground Points in Engine Compartment <RHD 5L-E>

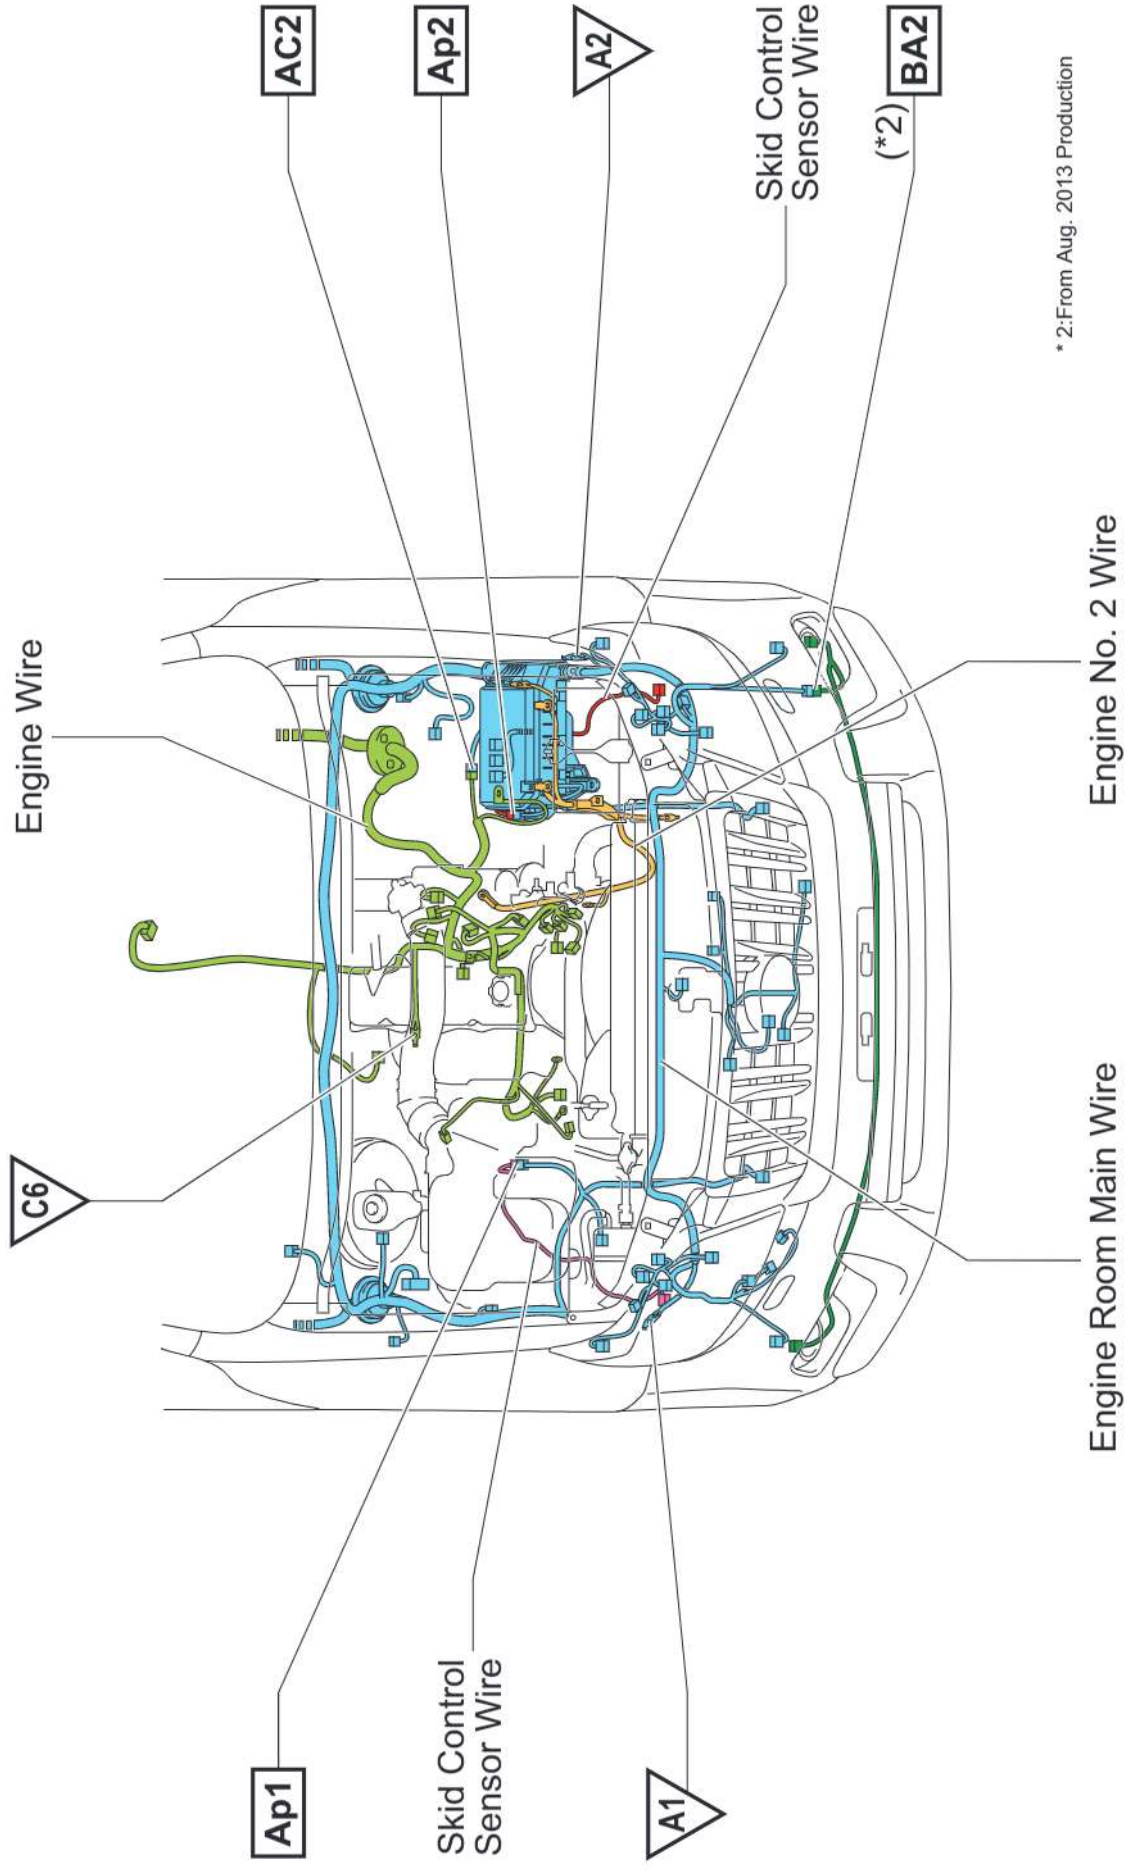


\* 2:From Aug. 2013 Production

Wire and Wire , Ground Points in Engine Compartment <RHD 5L-E>

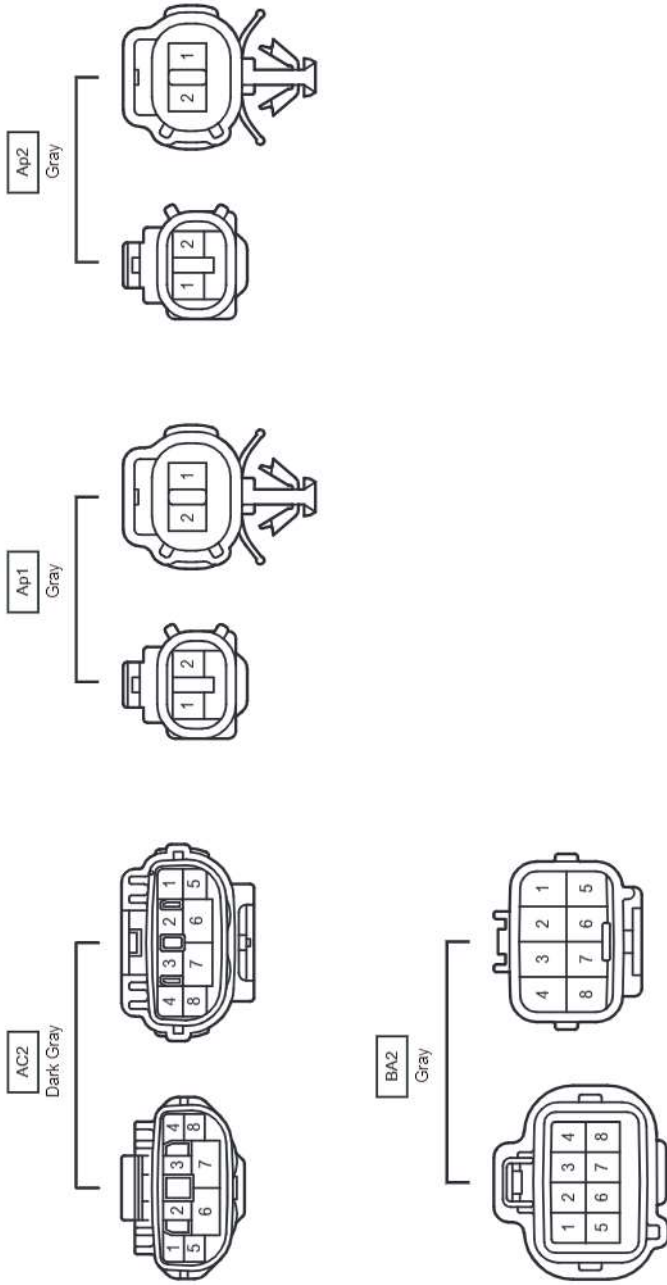



Position of Parts in Seat <LHD Front Bench Seat>

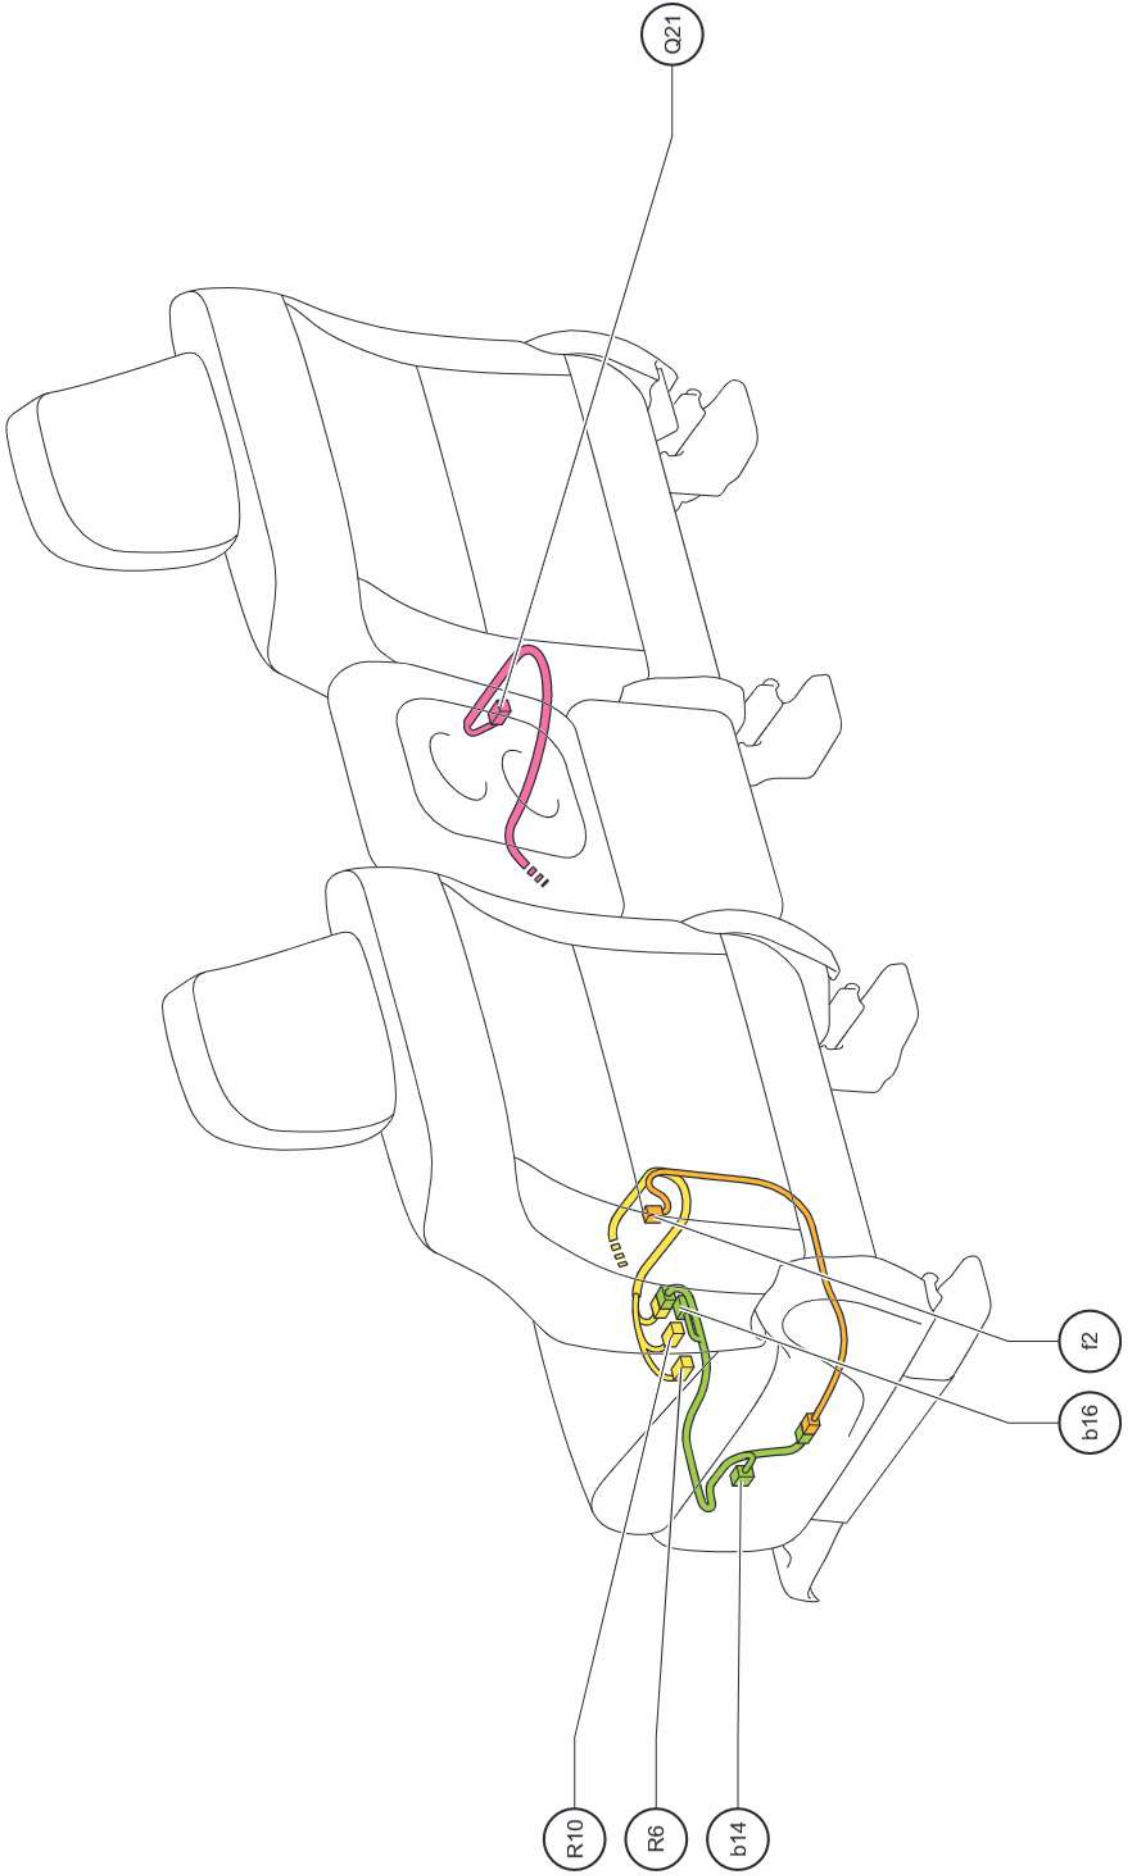


Position of Parts in Seat <LHD Front Bench Seat>

---


- Q 21 Front Seat Inner Belt Assembly RH
- R 6 Front Side Airbag Squib Circuit LH
- R 10 Front Seat Inner Belt Assembly LH
- b 14 Front Power Seat Switch Assembly LH
- b 16 Junction Connector
- f 2 Separate Type Front Seat Back Assembly LH

Position of Parts in Seat <LHD Front Bench Seat>

Q21  
White

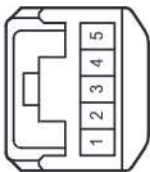


R6  
Yellow

 


R10  
Gray




b14  
White

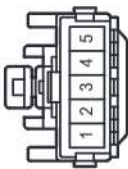


b16  
Black

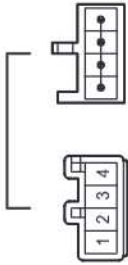


I2  
Blue

 


Wire and Wire in Seat <LHD Front Bench Seat>

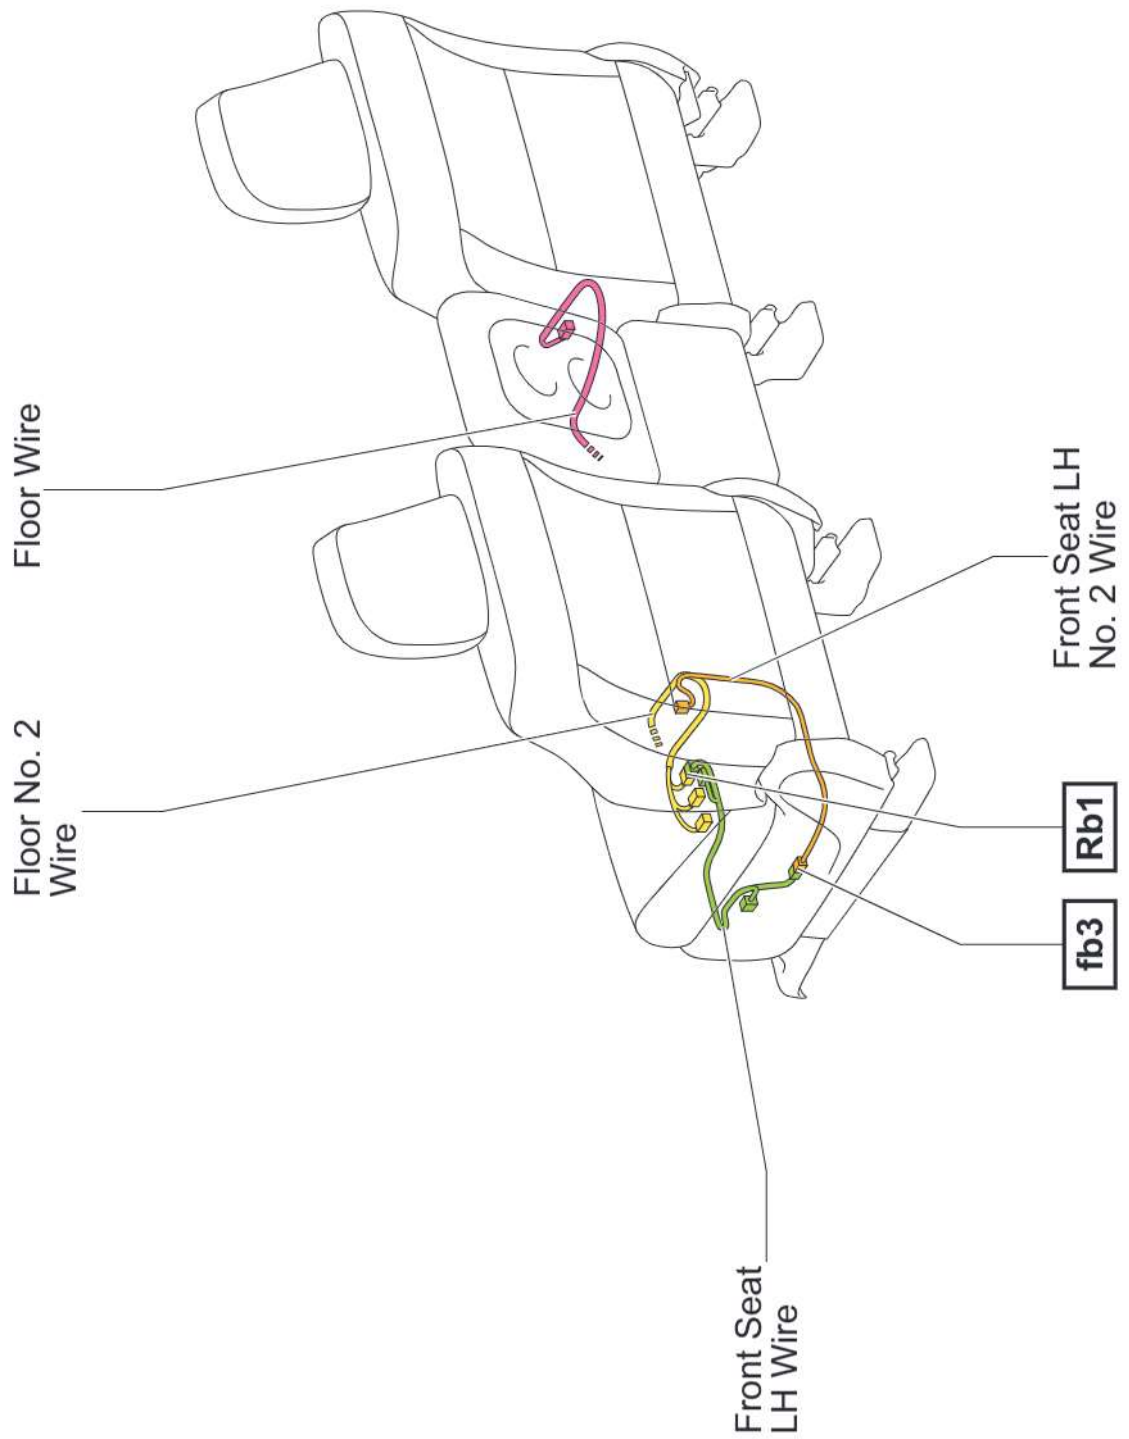

Wire and Wire in Seat <LHD Front Bench Seat>

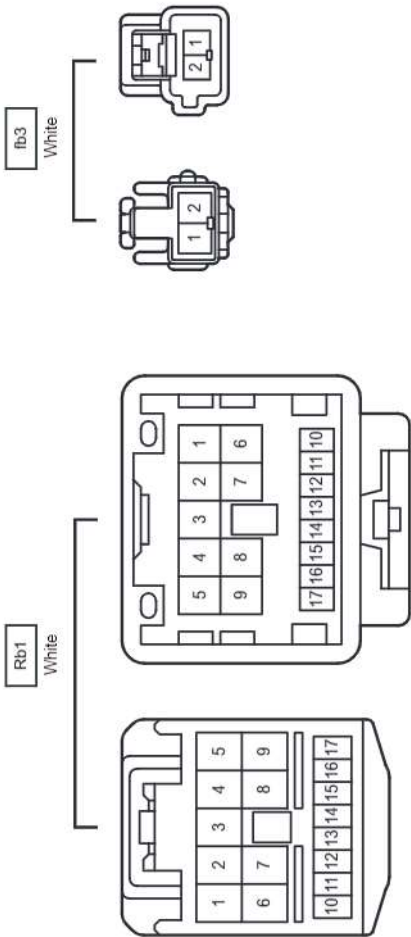

Position of Parts in Seat <RHD Front Bench Seat>






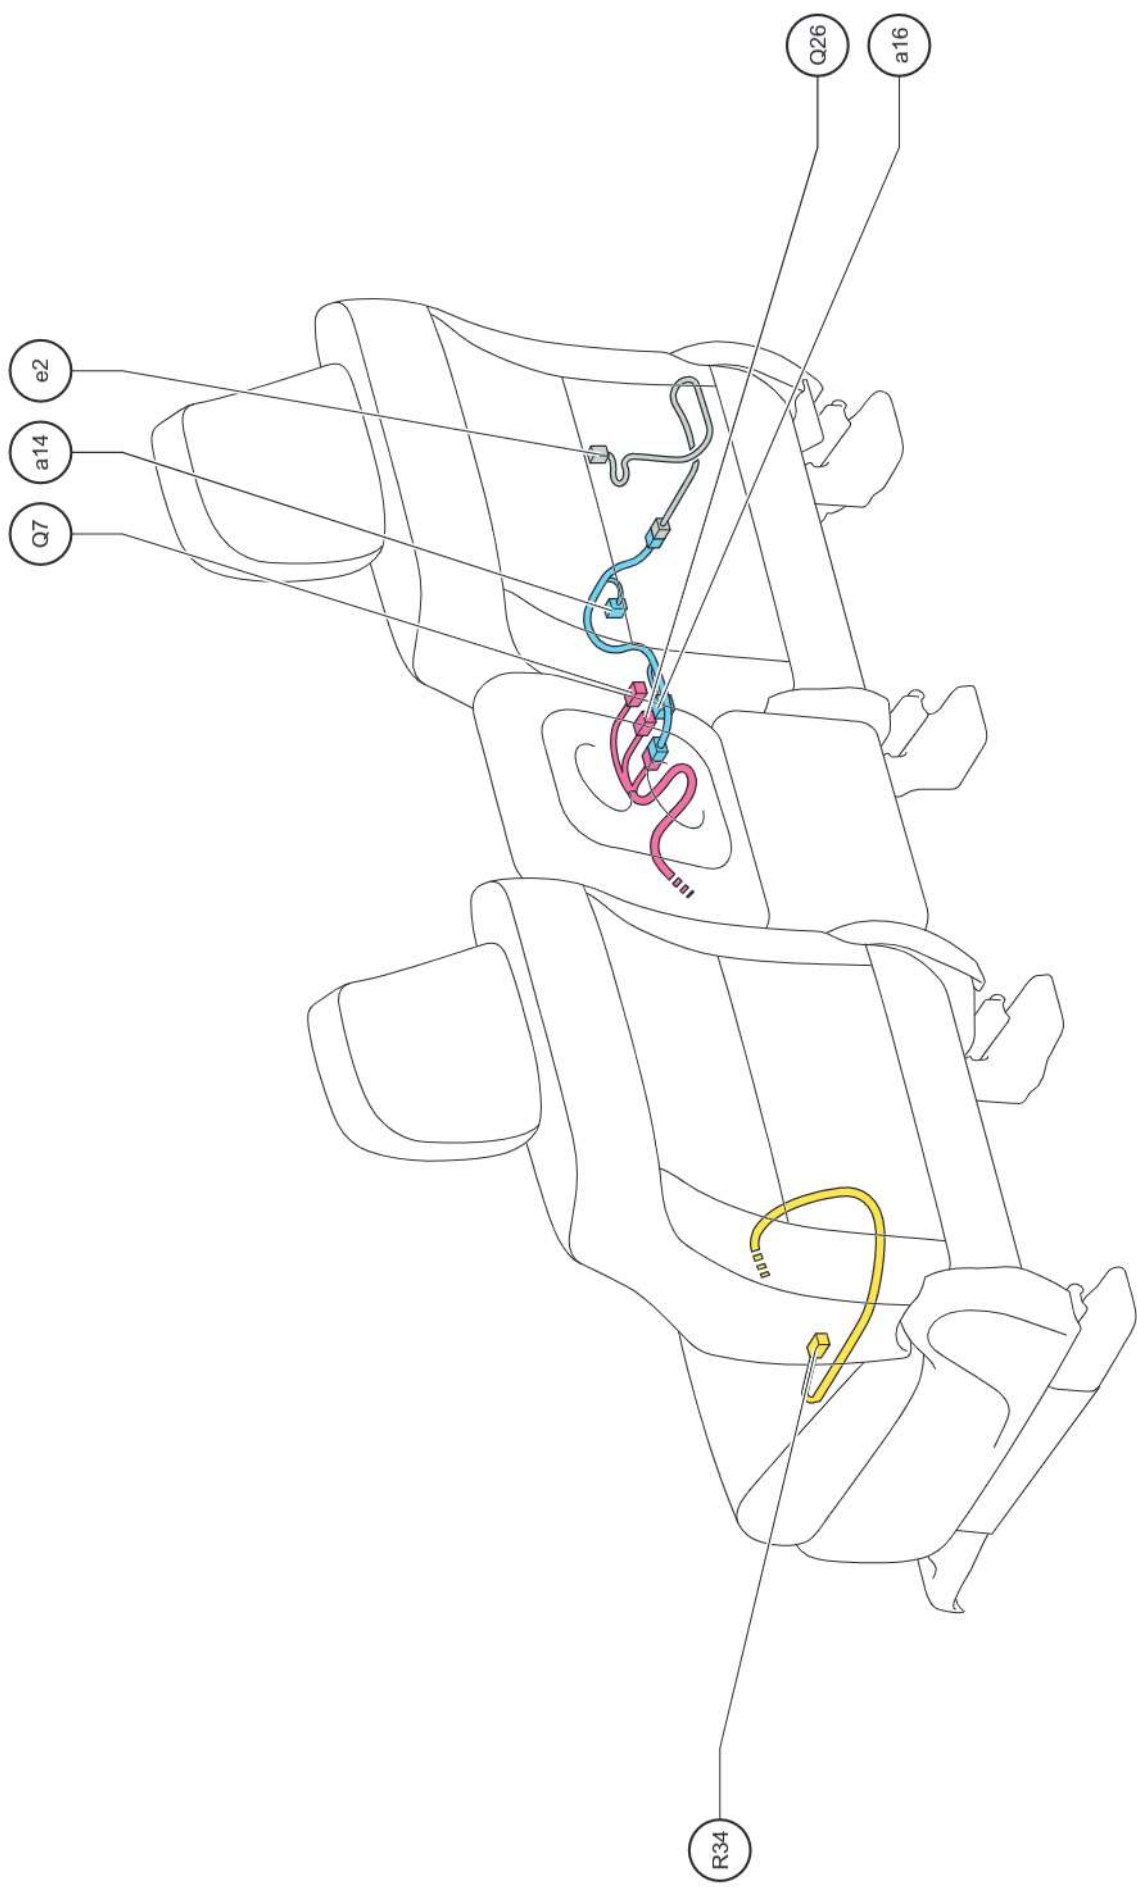


Position of Parts in Seat <RHD Front Bench Seat>

---


- Q 7 Front Side Airbag Squib Circuit RH
- Q 26 Front Seat Inner Belt Assembly RH
- R 34 Front Seat Inner Belt Assembly LH
- a 14 Front Power Seat Switch Assembly RH
- a 16 Junction Connector
- e 2 Separate Type Front Seat Back Assembly RH

  Position of Parts in Seat <RHD Front Bench Seat>

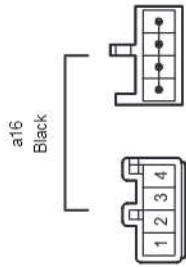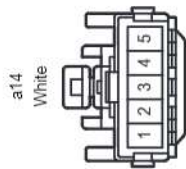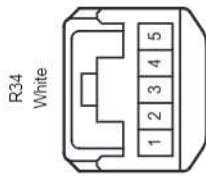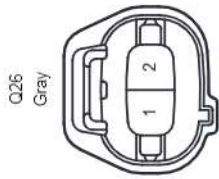





Wire and Wire in Seat <RHD Front Bench Seat>

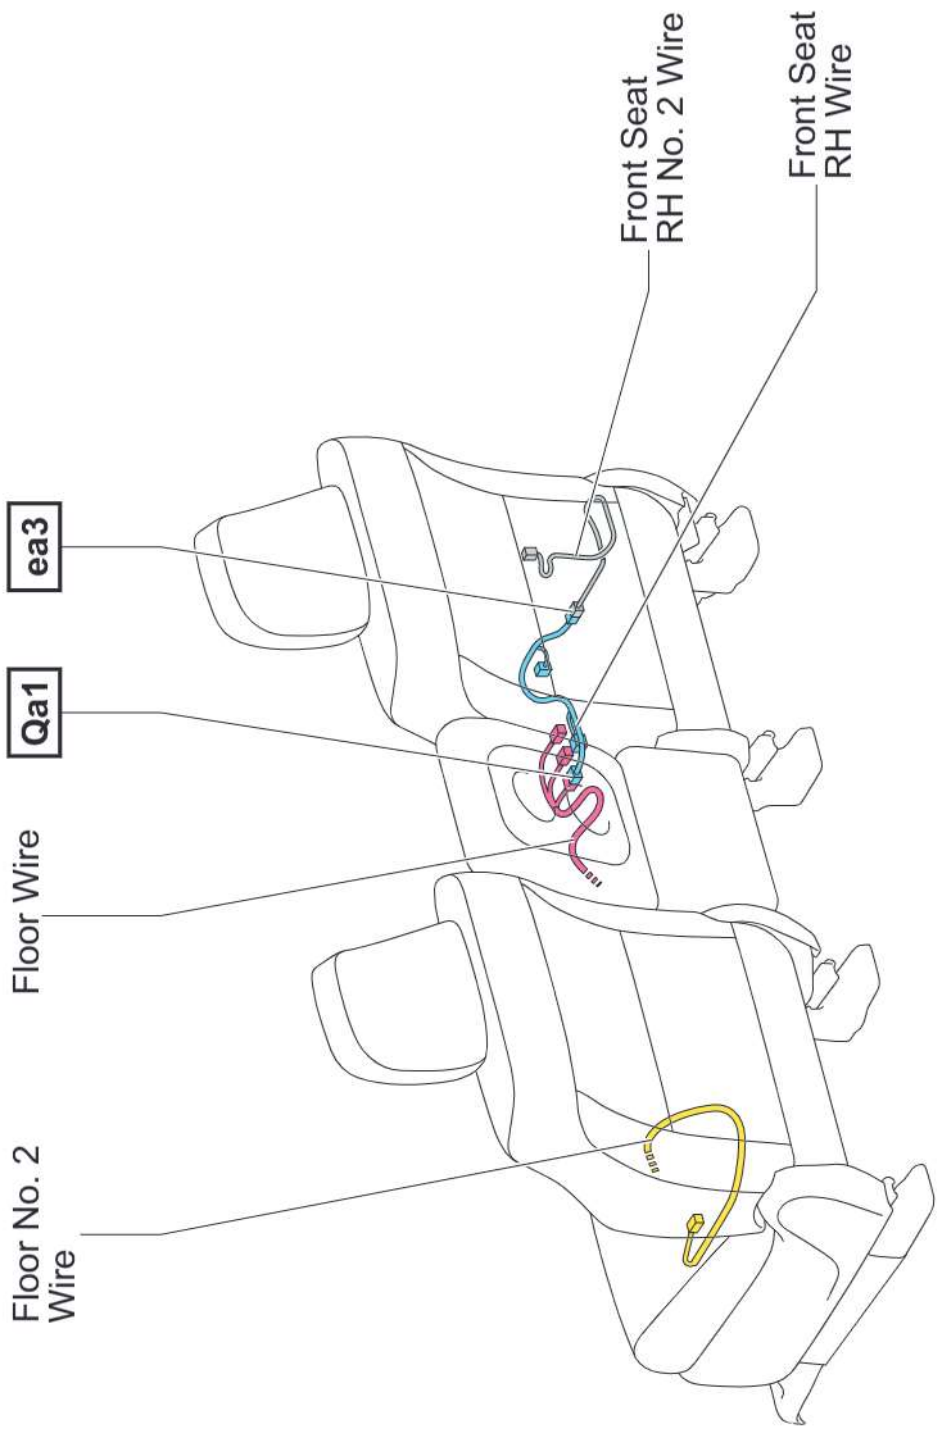


Wire and Wire in Seat <RHD Front Bench Seat>

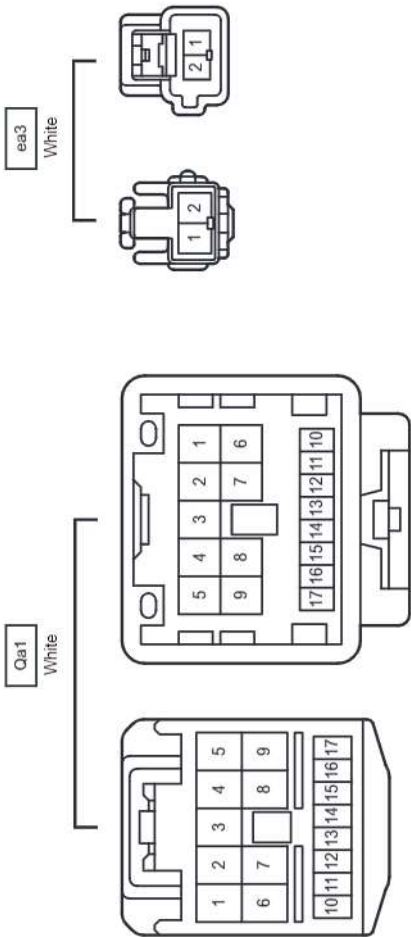

Ground Points in Instrument Panel <LHD Front Bench Seat>

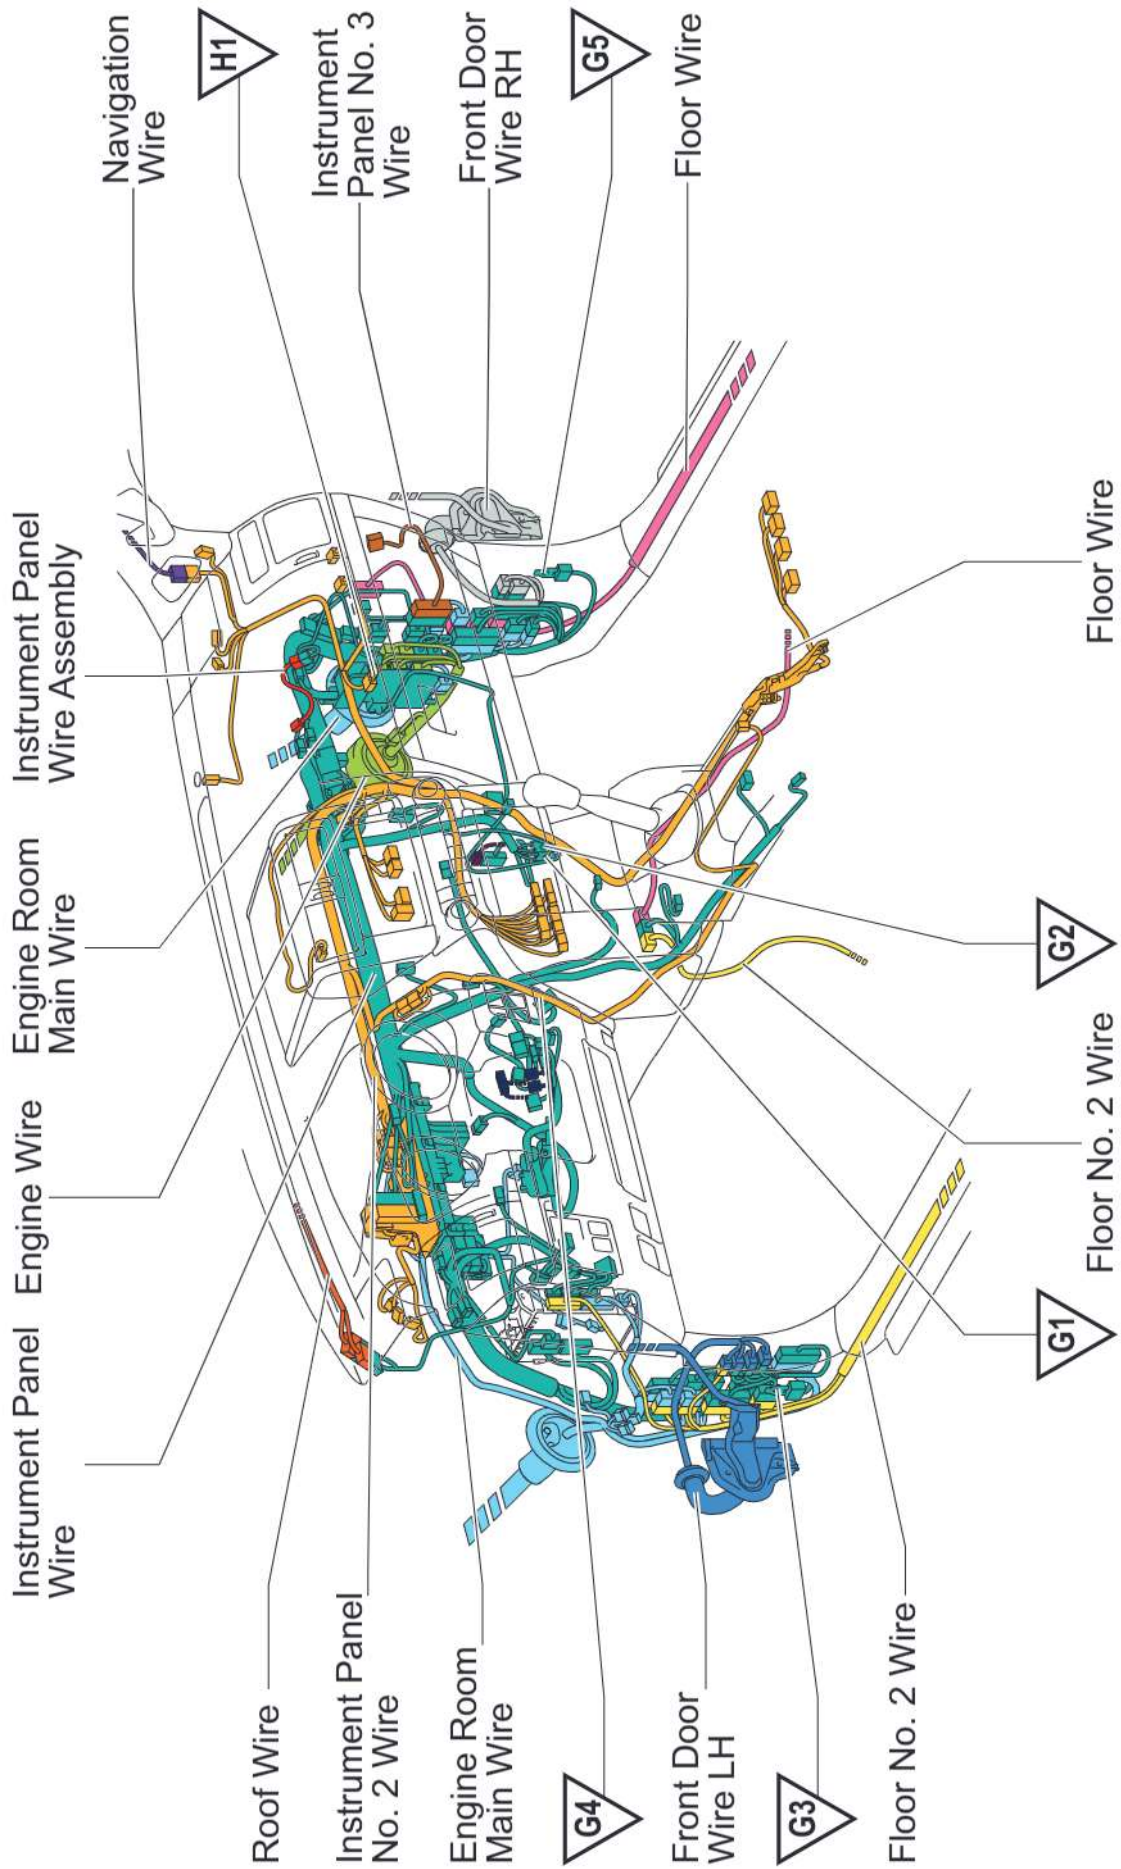

Position of Parts in Instrument Panel <LHD Front Bench Seat>

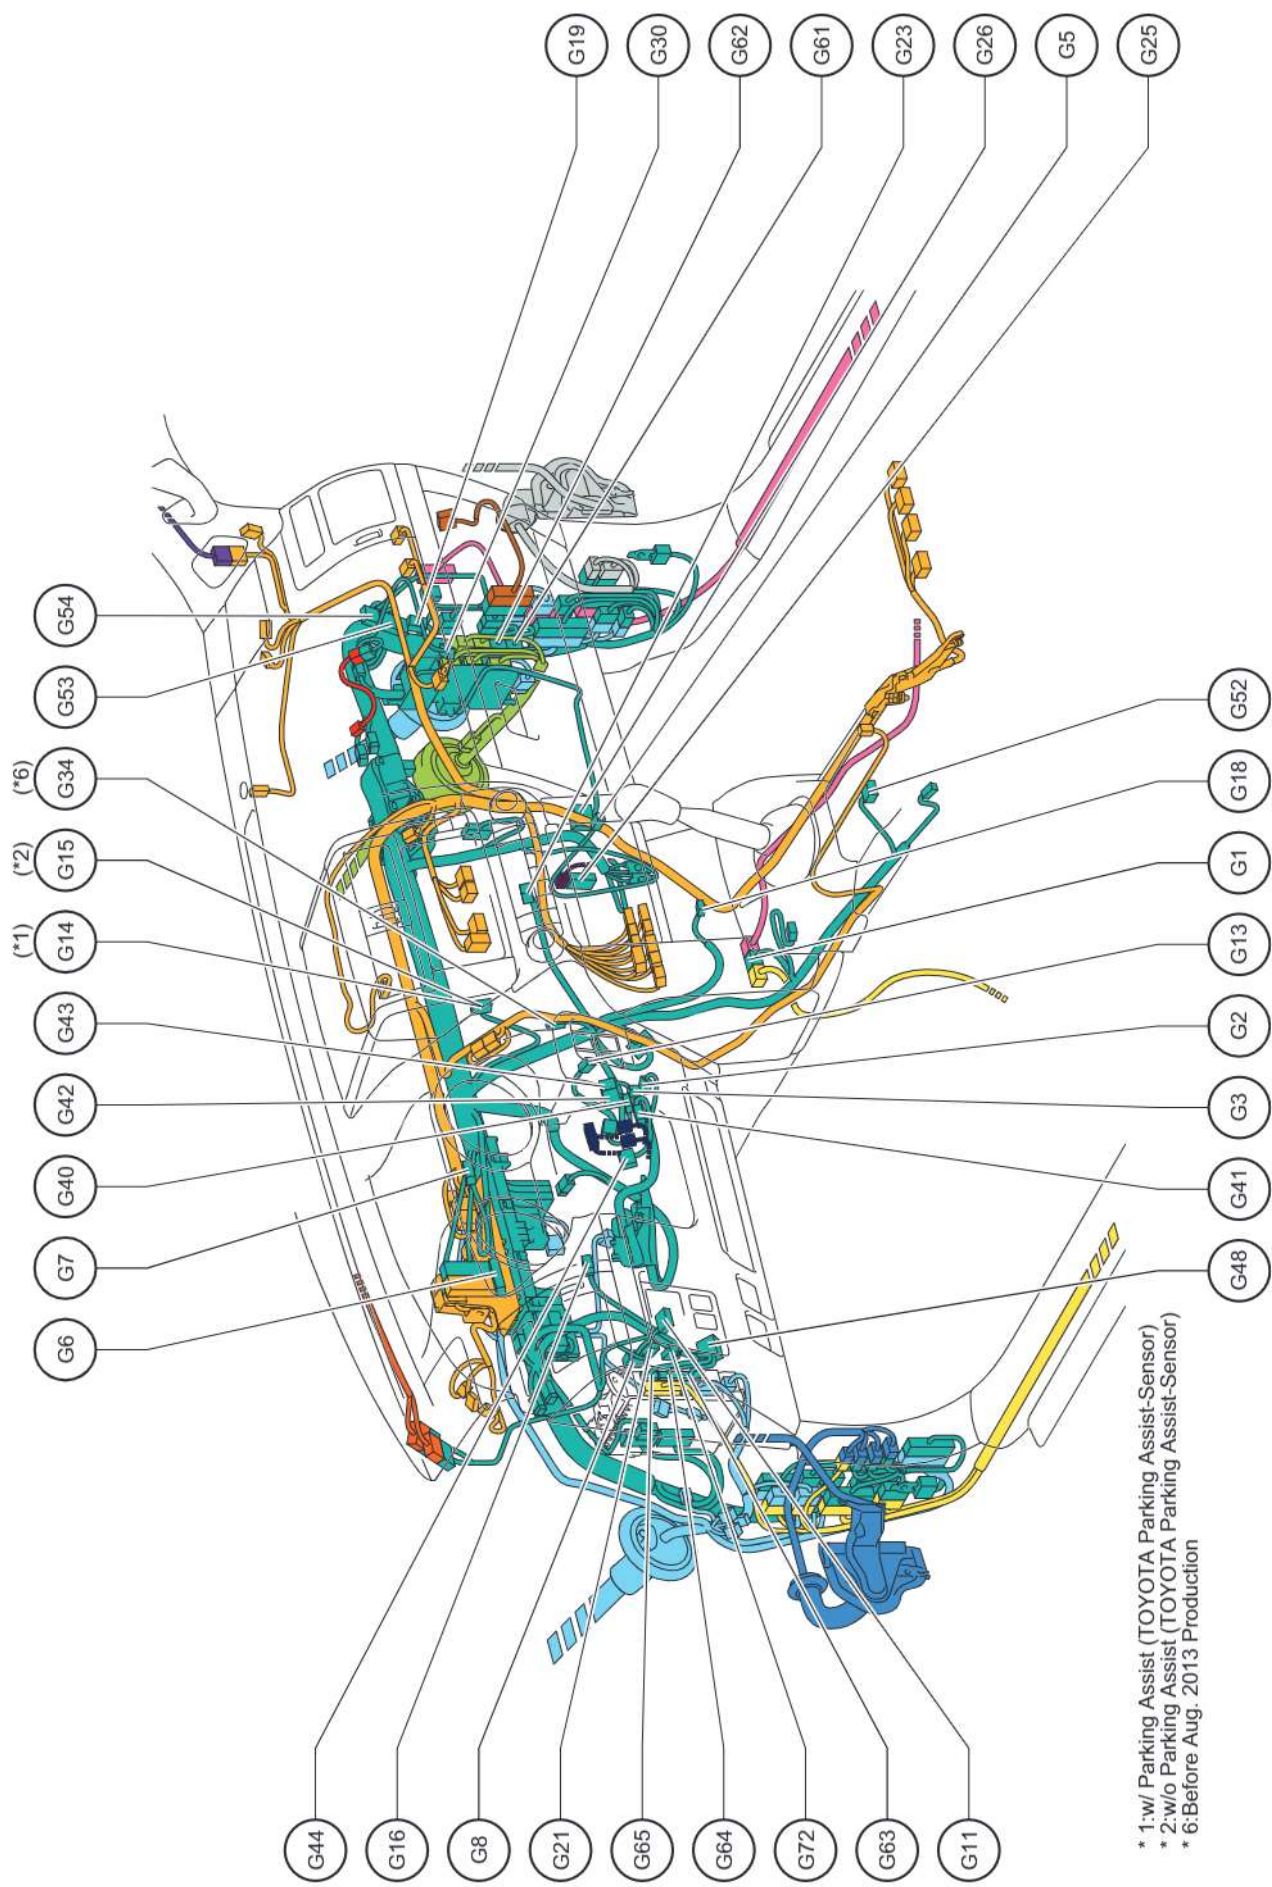


\* 1: w/ Parking Assist (TOYOTA Parking Assist-Sensor)  
 \* 2: w/o Parking Assist (TOYOTA Parking Assist-Sensor)  
 \* 6: Before Aug. 2013 Production


- G 1 Airbag Sensor Assembly
- G 2 Ignition or Starter Switch Assembly
- G 3 Un-Lock Warning Switch Assembly
- G 5 Telltale Light Assembly
- G 6 Combination Meter Assembly
- G 7 Combination Meter Assembly
- G 8 Turn Signal Flasher Assembly
- G 11 Outer Mirror Switch Assembly
- G 13 Back Sonar or Clearance Sonar Switch Assembly
- G 14 Clearance Warning Indicator Assembly
- G 15 Hazard Warning Signal Switch Assembly
- G 16 Trip Switch
- G 18 Transfer Position Switch
- G 19 Option Connector
- G 21 Headlight Leveling Switch
- G 23 Integration Control and Panel Assembly
- G 25 A/C Amplifier Assembly
- G 26 Front Blower with Fan Motor Sub-Assembly
- G 30 Glove Box Light
- G 34 No. 1 Clearance Warning Buzzer
- G 40 Spiral Cable Sub-Assembly
- G 41 Spiral Cable Sub-Assembly
- G 42 Windshield Wiper Switch Assembly
- G 43 Windshield Wiper Switch Assembly
- G 44 Headlight Dimmer Switch Assembly
- G 48 DLC3
- G 52 Yaw Rate Sensor Assembly
- G 53 Four Wheel Drive Control ECU
- G 54 Four Wheel Drive Control ECU
- G 61 ECM
- G 62 ECM
- G 63 Main Body ECU
- G 64 Main Body ECU
- G 65 Main Body ECU
- G 72 Headlight Cleaner Switch Assembly

Position of Parts in Instrument Panel <LHD Front Bench Seat>

G1  
Yellow

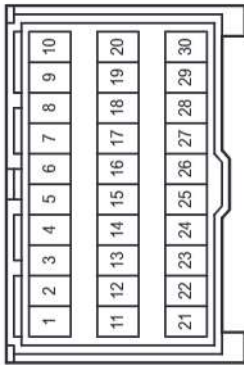


G2  
White

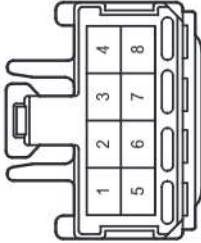


G3  
White




G5  
Black

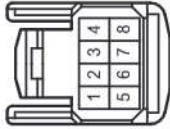

G6  
Black

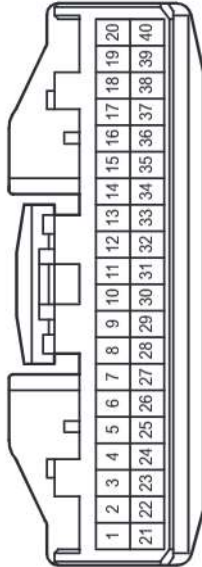


G7  
Black

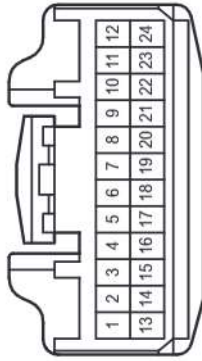


G8  
Black




G11  
Black

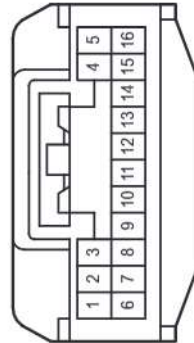


G13  
Black

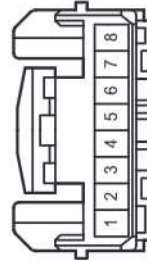


G14  
Black

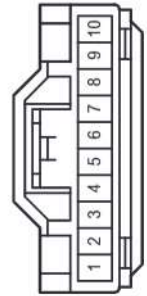


G15  
Gray

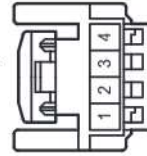


G16  
White

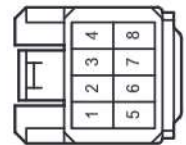

G18  
Black

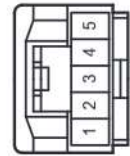


G19  
White

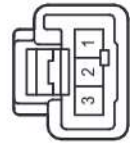

G21  
Black



G23  
Black

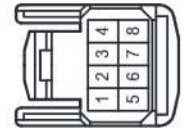

G25  
White



G26  
Black



G30  
Black




G34  
Blue




cardiagn.com

Position of Parts in Instrument Panel <LHD Front Bench Seat>


G40  
Black

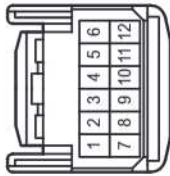


G41  
Yellow

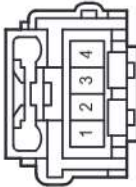


G42  
White

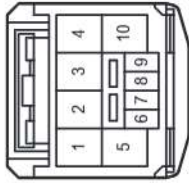


G43  
White

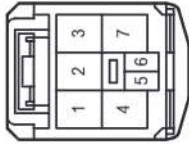


G44  
White

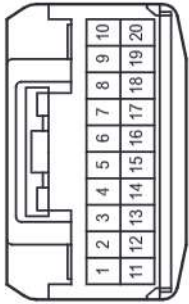


G48  
White

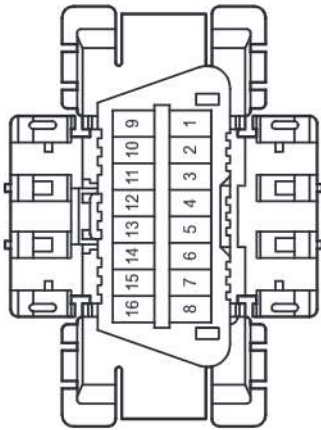


G52  
Black

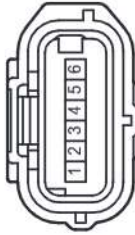


G53  
Black

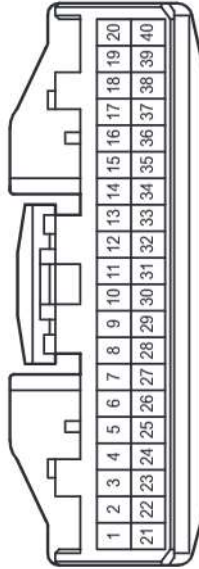


G54  
Black

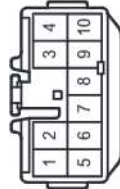


G61  
White

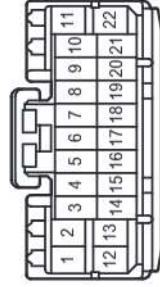

G62  
White

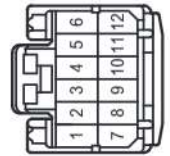


G63  
White

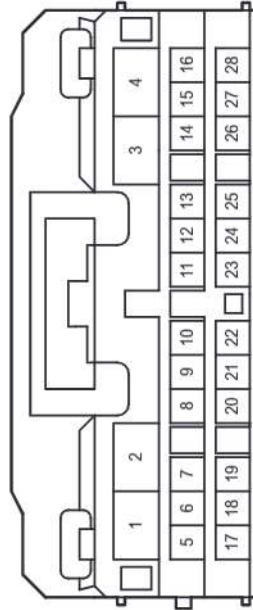


Position of Parts in Instrument Panel <LHD Front Bench Seat>


G64  
White

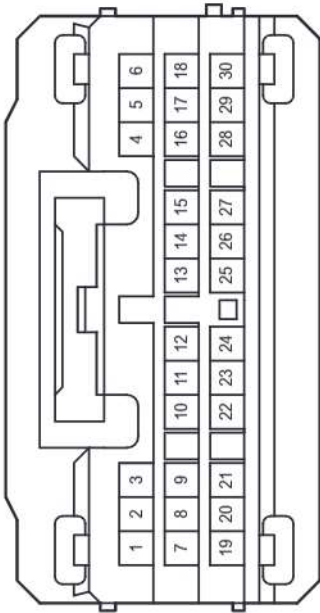

G66  
White

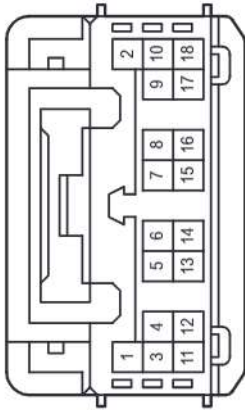


G72  
Black

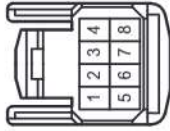



Position of Parts in Instrument Panel <LHD Front Bench Seat>

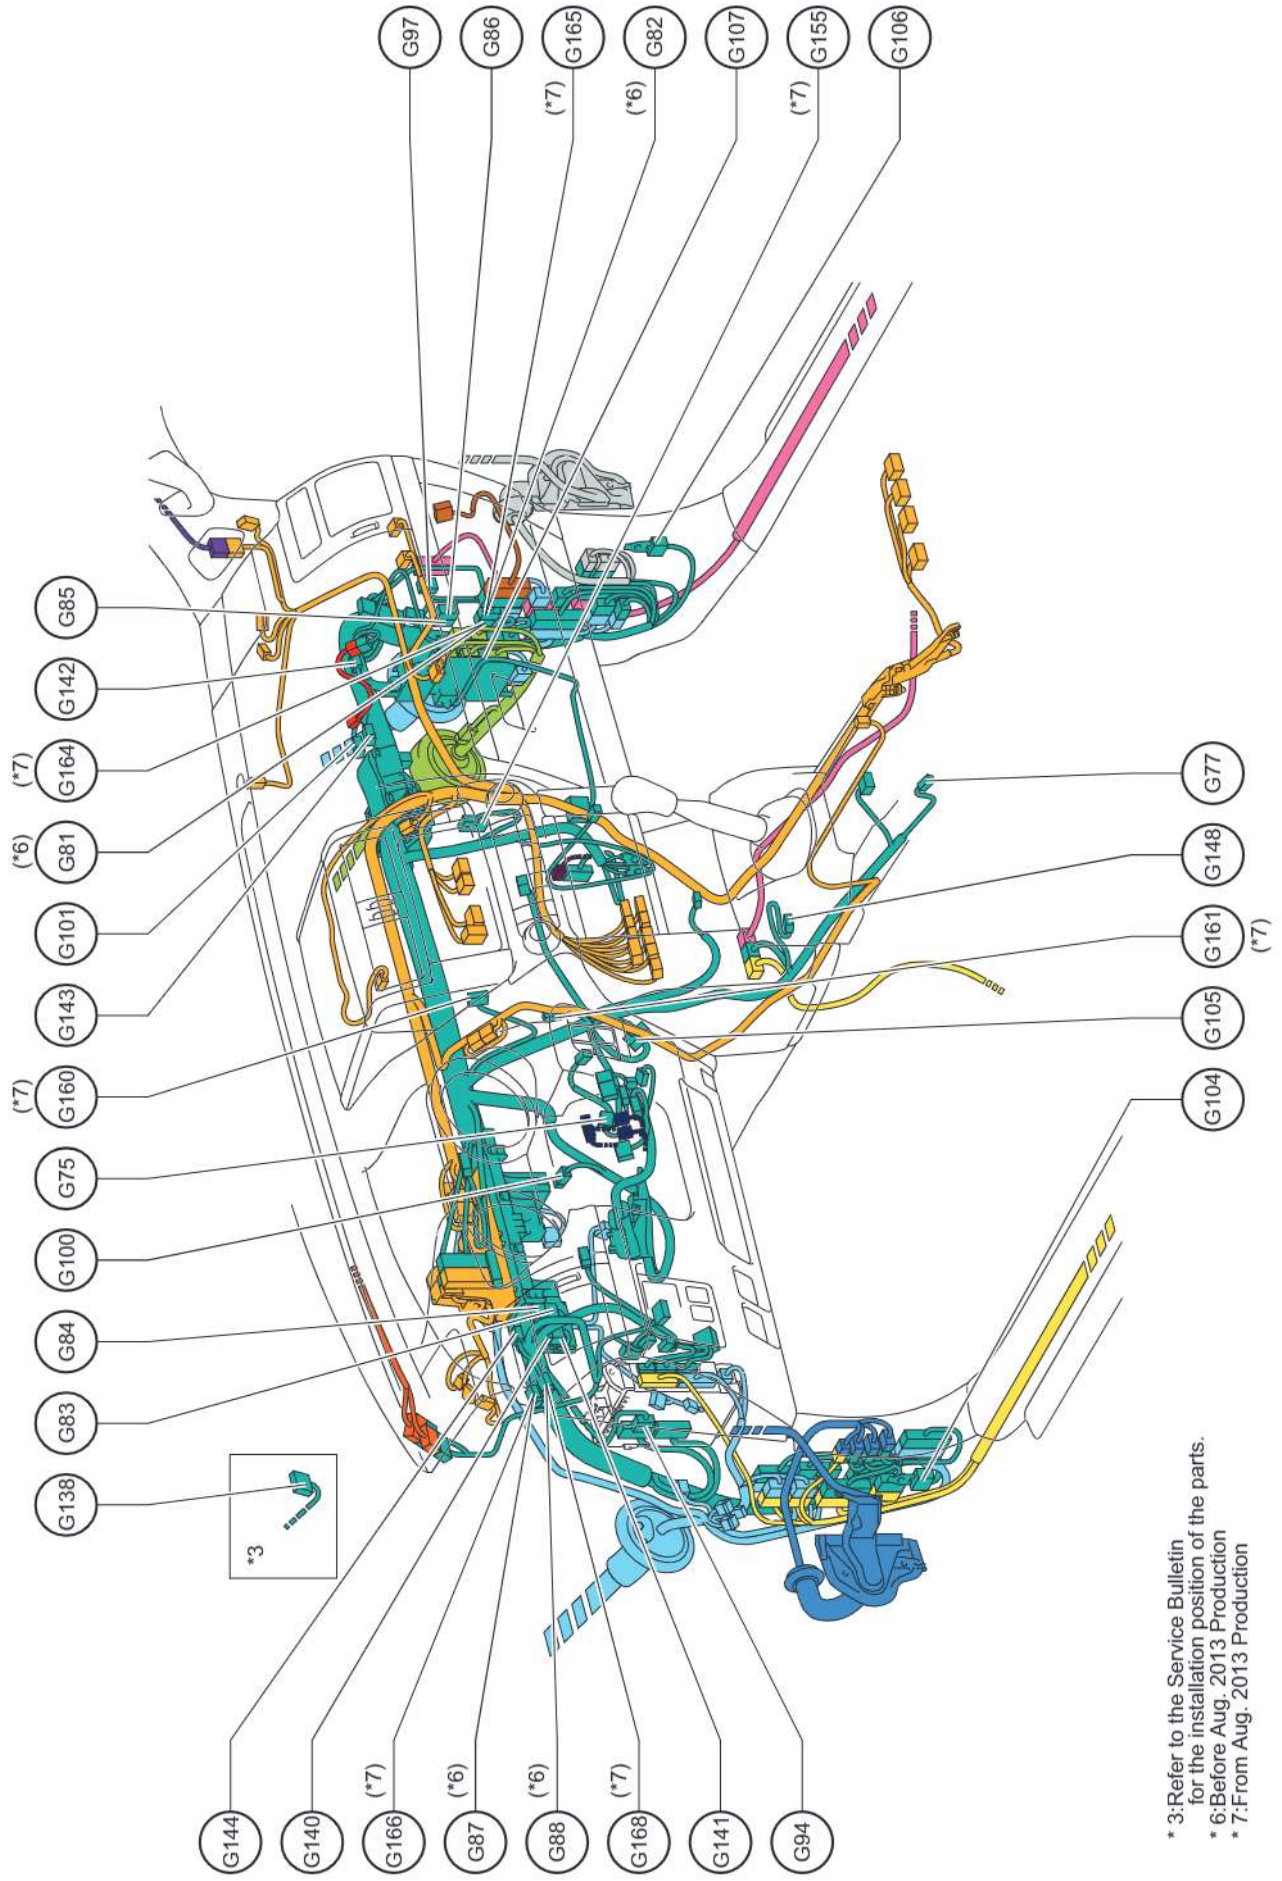


\* 3: Refer to the Service Bulletin for the installation position of the parts.  
 \* 6: Before Aug. 2013 Production  
 \* 7: From Aug. 2013 Production

- G 75 Transponder Key Amplifier
- G 77 Parking Brake Switch Assembly
- G 81 Junction Connector
- G 82 Junction Connector
- G 83 Junction Connector
- G 84 Junction Connector
- G 85 Junction Connector
- G 86 Junction Connector
- G 87 Junction Connector
- G 88 Junction Connector
- G 88 Junction Connector
- G 94 Junction Connector
- G 97 Junction Connector
- G100 Junction Connector
- G101 Junction Terminal
- G104 Junction Connector
- G105 Junction Connector
- G105 Junction Connector
- G106 Junction Connector
- G107 Junction Connector
- G138 Transponder Key ECU Assembly
- G140 Junction Connector
- G141 Junction Connector
- G142 Junction Connector
- G143 Junction Connector
- G144 Junction Connector
- G148 Power Point Socket Assembly
- G155 Network Gateway Assembly
- G160 Clearance Warning Indicator Assembly
- G161 No. 1 Clearance Warning Buzzer
- G164 Junction Connector
- G165 Junction Connector
- G166 Junction Connector
- G168 Junction Connector

Position of Parts in Instrument Panel <LHD Front Bench Seat>


G75  
Black

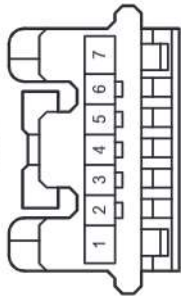


G77  
White




G81  
White

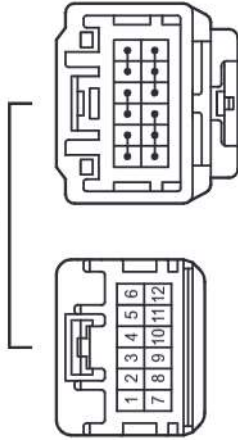


G82  
White

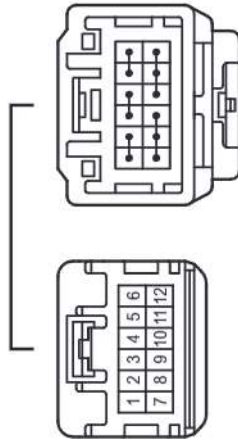


G83  
Black

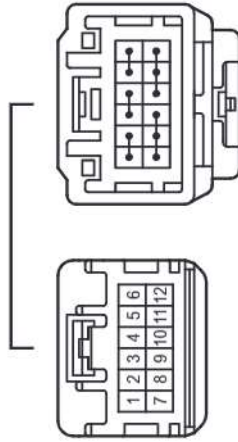


G84  
Black

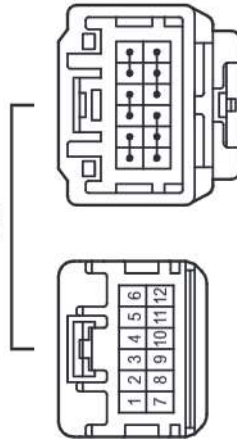


G85  
Black

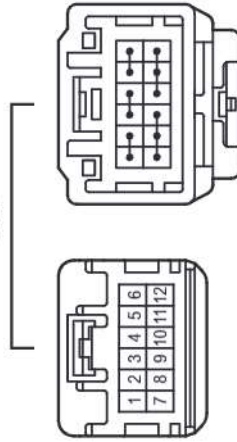















G86  
Black

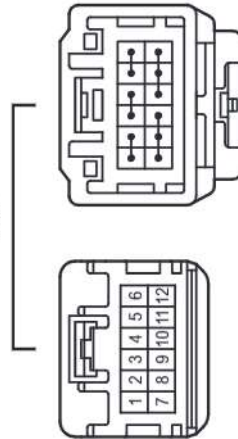

G87  
Black

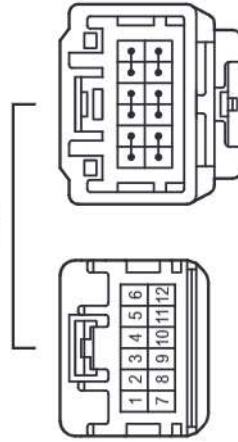

Position of Parts in Instrument Panel <LHD Front Bench Seat>

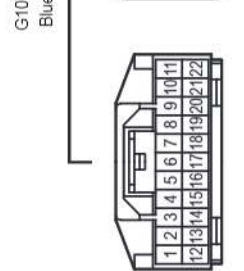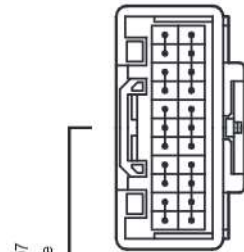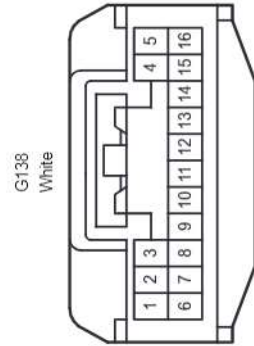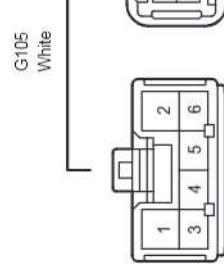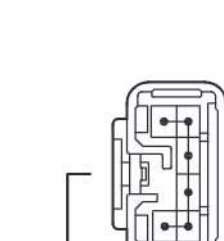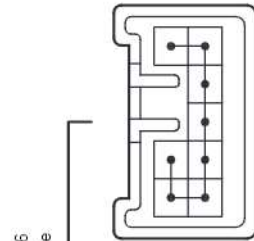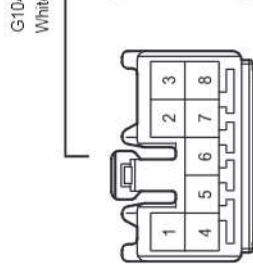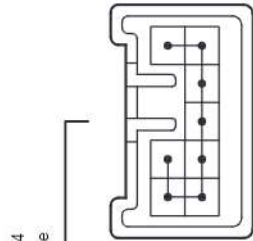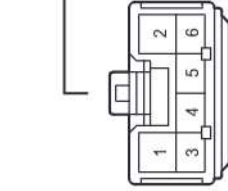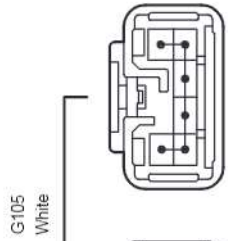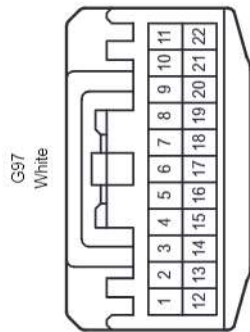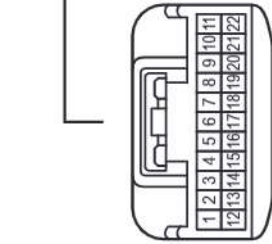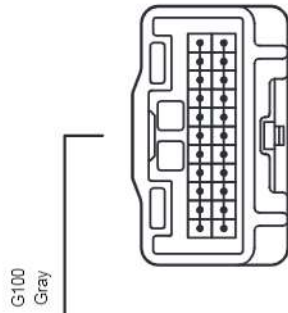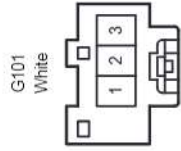


G141  
Black


G140  
Black

Position of Parts in Instrument Panel <LHD Front Bench Seat>


G142  
White

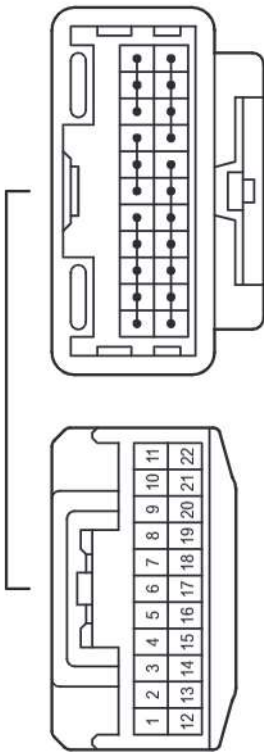


G143  
Black

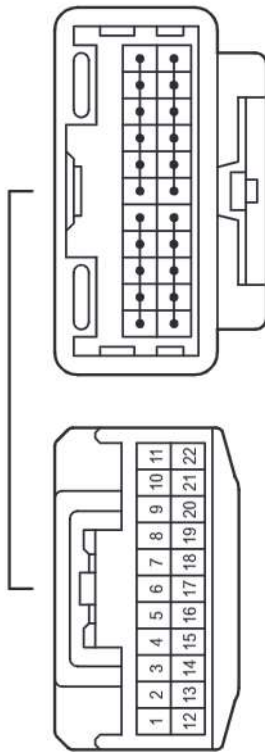


G144  
White

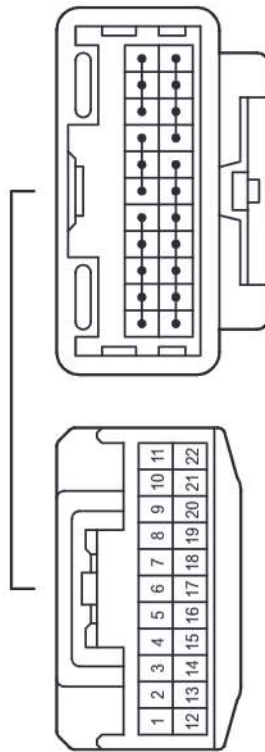


G161  
Black

 


G164  
Black

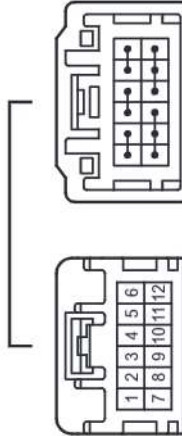


G148  
White

 

G155  
White


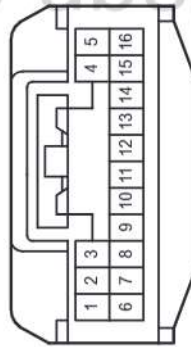


G160  
Black


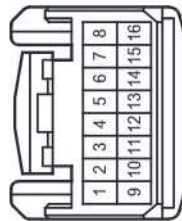


Position of Parts in Instrument Panel <LHD Front Bench Seat>



G165  
Black

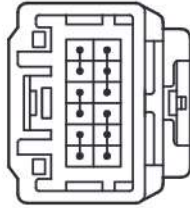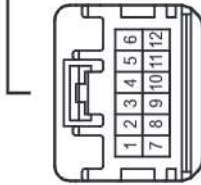


G166  
Blue

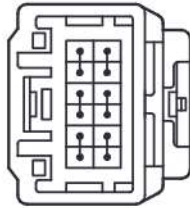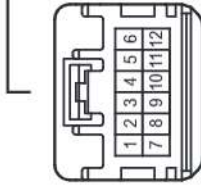

G168  
Blue

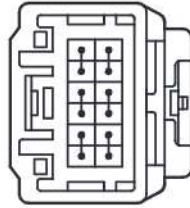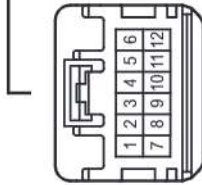

Position of Parts in Instrument Panel <LHD Front Bench Seat>

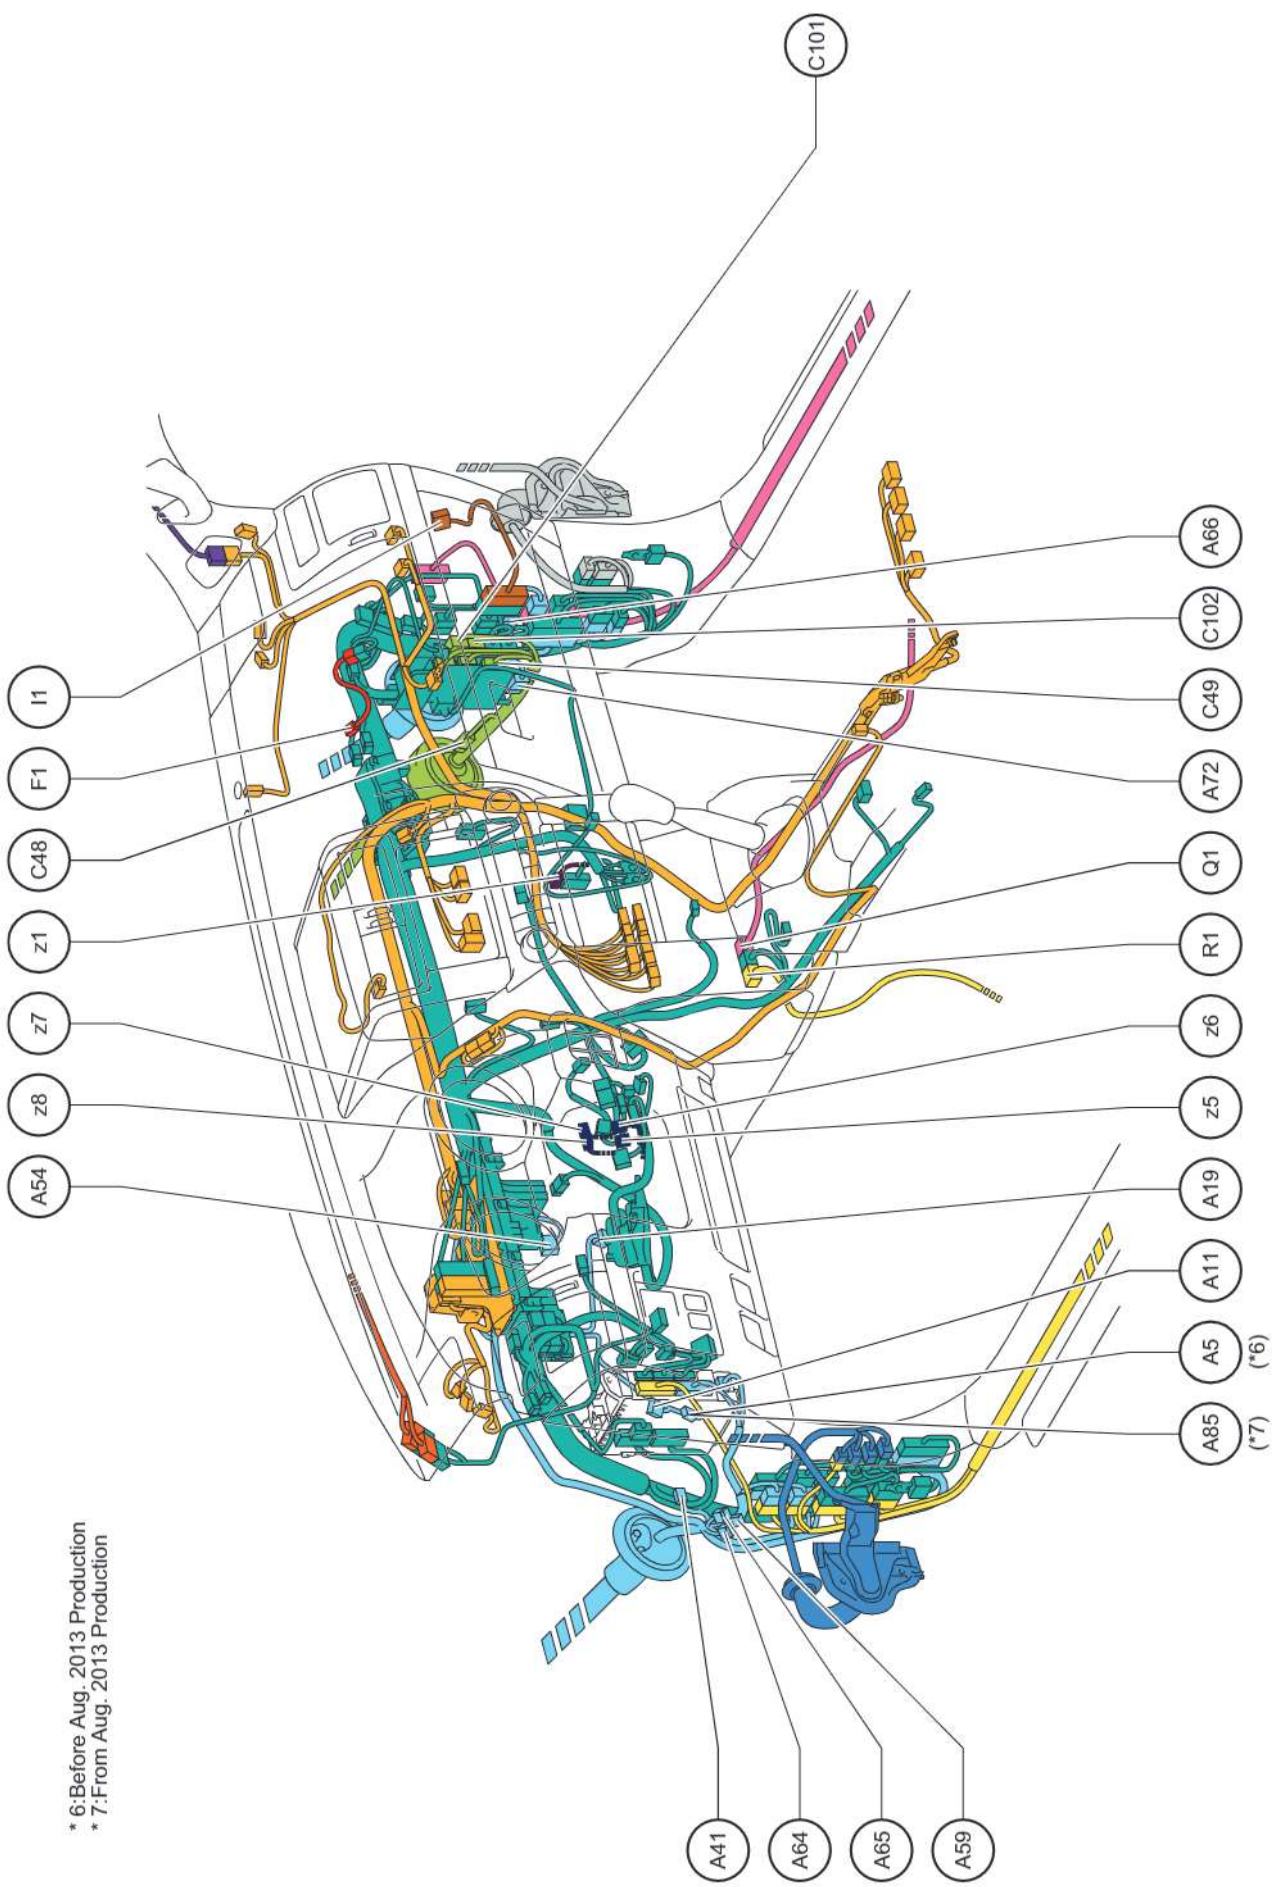

\* 6: Before Aug. 2013 Production  
 \* 7: From Aug. 2013 Production





Position of Parts in Instrument Panel <LHD Front Bench Seat>

---

- A 5 Stop Light Switch Assembly
- A 11 Brake Pedal Load Sensing Switch
- A 19 Acceleration Sensor
- A 41 Clutch Start Switch Assembly
- A 54 Stop Light Control Relay Assembly
- A 59 Diode (Stop Light)
- A 64 Junction Connector
- A 65 Junction Connector
- A 66 Junction Connector
- A 72 Junction Connector
- A 85 Stop Light Switch Assembly
- C 48 Junction Connector
- C 49 Junction Connector
- C101 ECM
- C102 ECM
- F 1 Front Passenger Side Squib Circuit
- I 1 Clearance Warning ECU Assembly
- Q 1 Airbag Sensor Assembly
- R 1 Airbag Sensor Assembly
- z 1 A/C Amplifier Assembly , A/C Blower Assembly
- z 5 Driver Side Squib Circuit , Spiral Cable Sub-Assembly
- z 6 Driver Side Squib 2nd Step Circuit , Spiral Cable Sub-Assembly
- z 7 Cruise Control Main Switch , Spiral Cable Sub-Assembly , Steering Pad Switch Assembly
- z 8 Spiral Cable Sub-Assembly , Steering Pad Switch Assembly





Position of Parts in Instrument Panel <LHD Front Bench Seat>

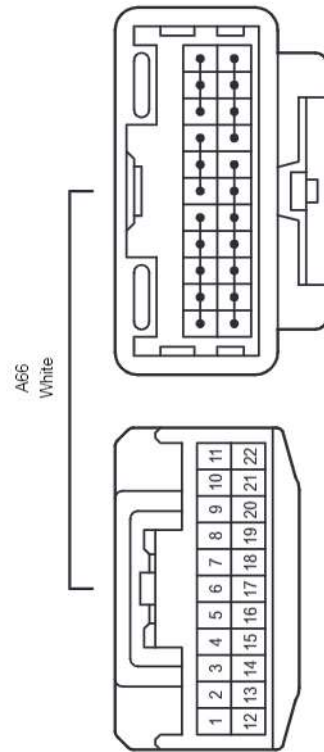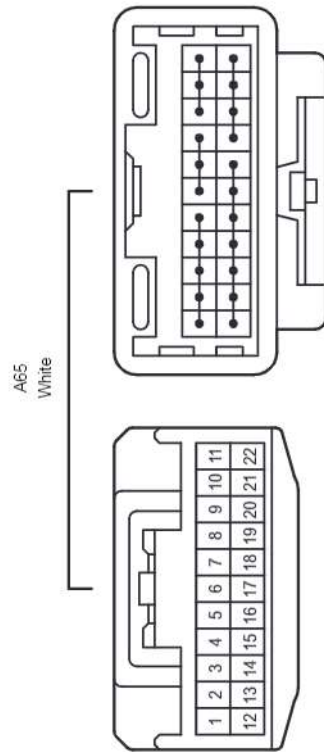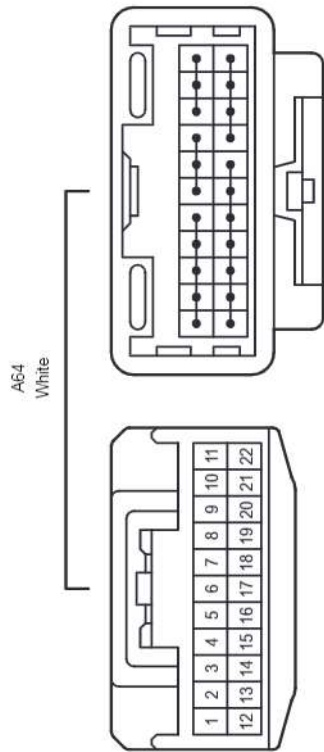
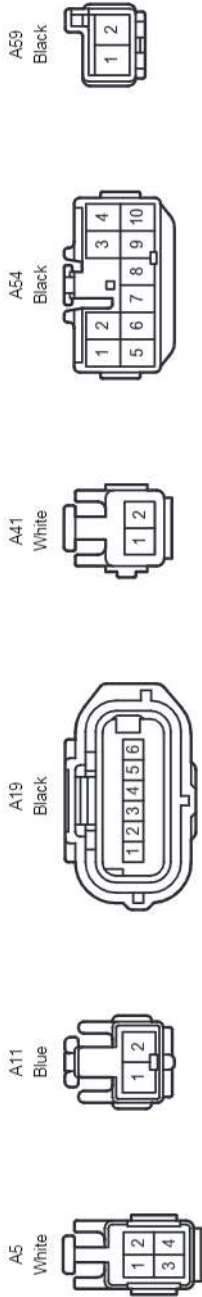


Position of Parts in Instrument Panel <LHD Front Bench Seat>


C48  
White

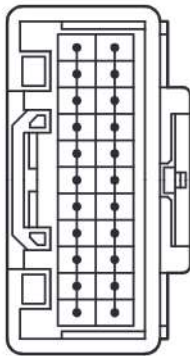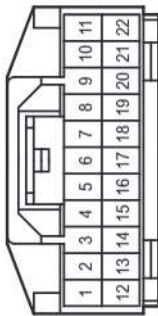


C49  
Blue

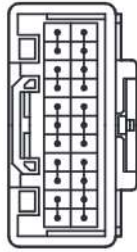 


C101  
White

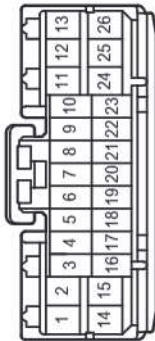


C102  
White

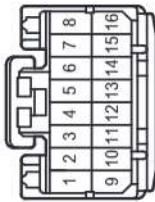


F1  
Orange

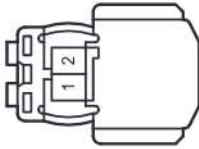


I1  
White

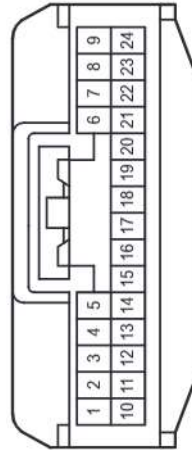


Q1  
Yellow

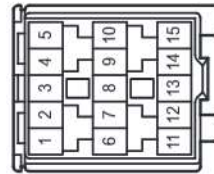


R1  
Yellow

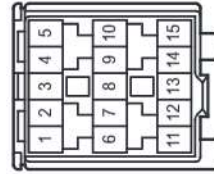


z1  
White

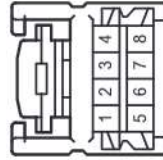


z5  
Orange

 


z6  
Black

 


z7  
White

 

z8  
White

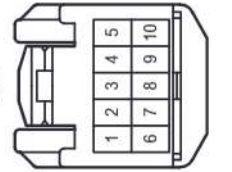

Position of Parts in Instrument Panel <LHD Front Bench Seat>

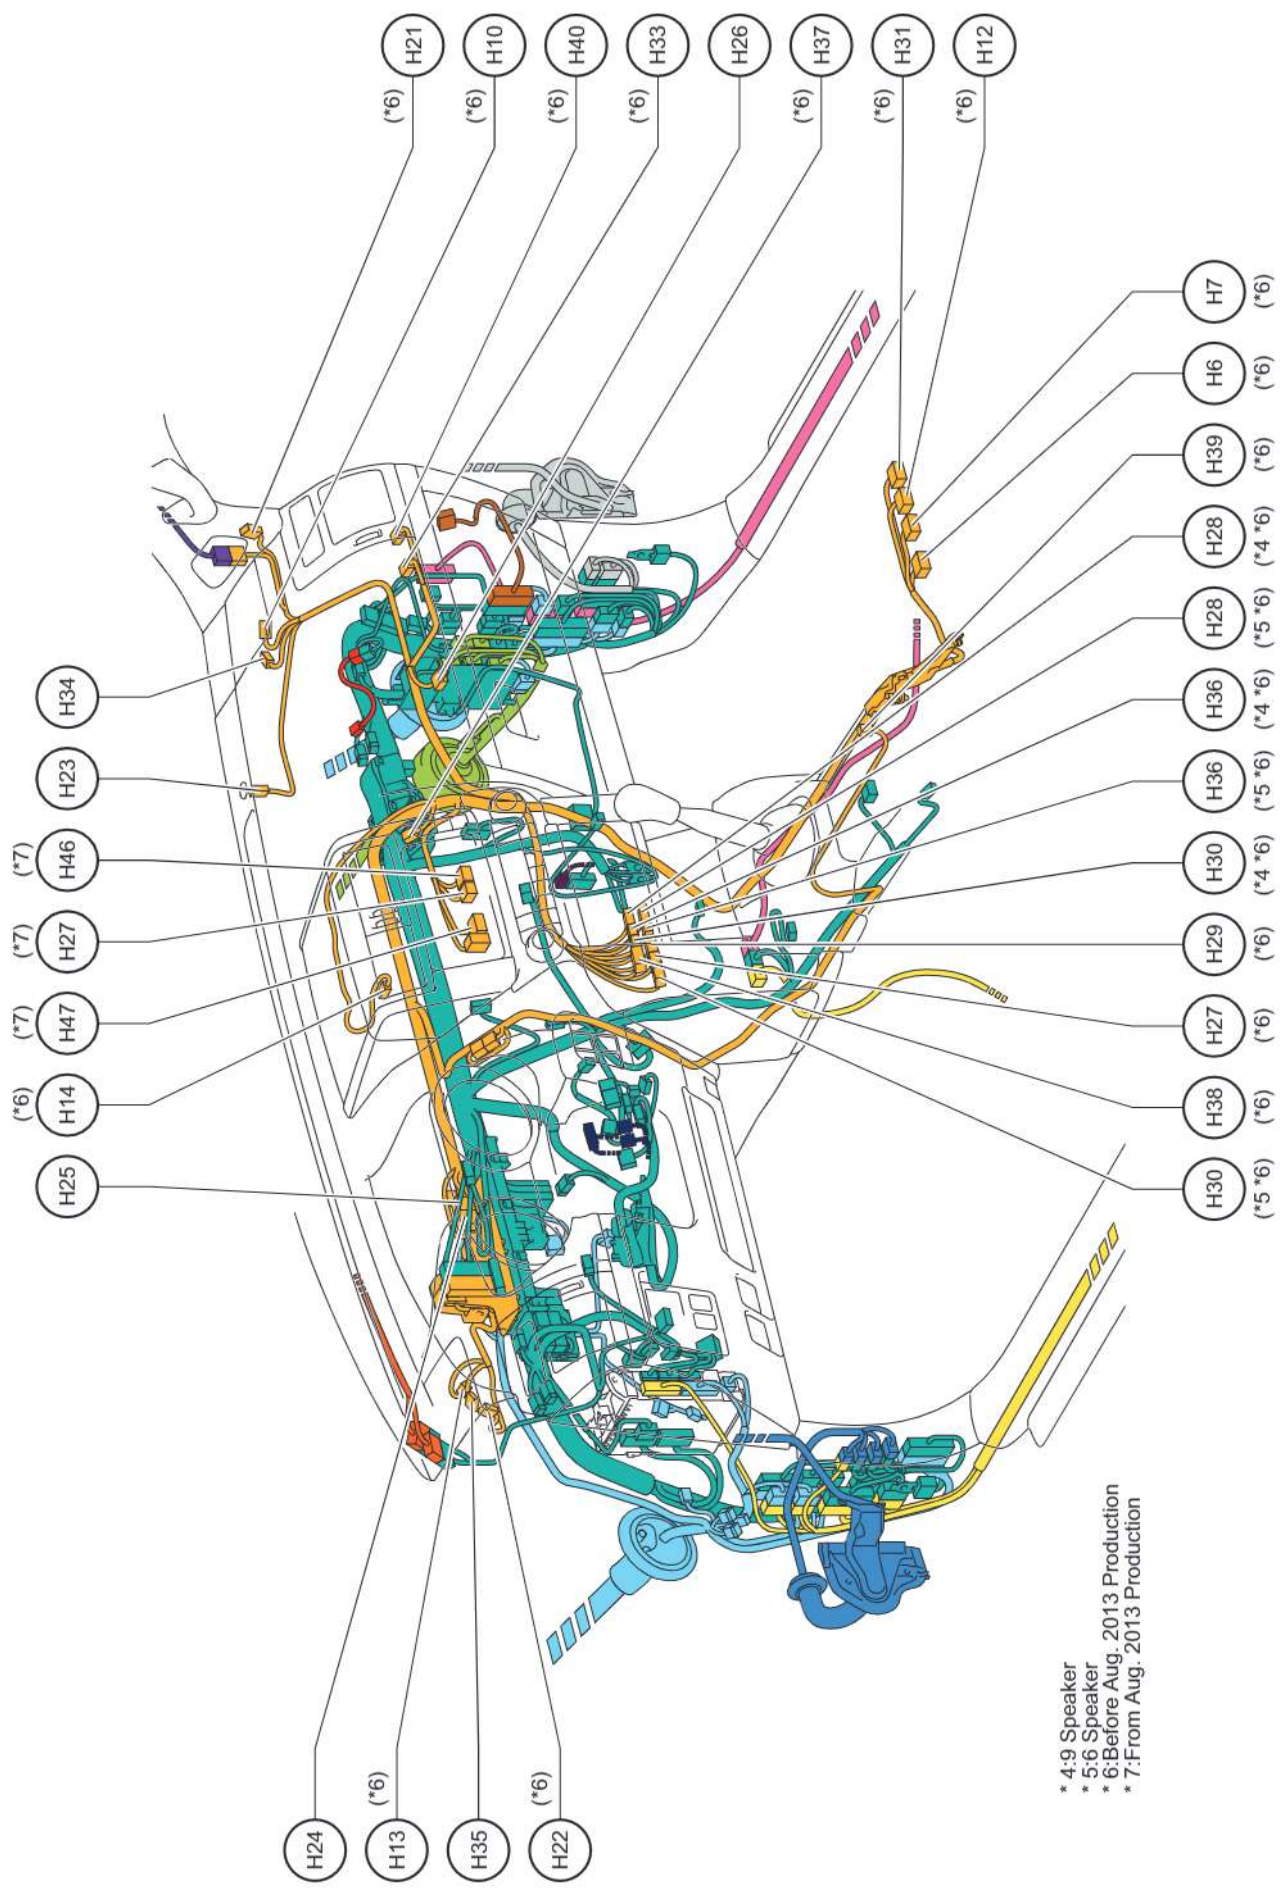






















- \* 4:9 Speaker
- \* 5:6 Speaker
- \* 6:Before Aug. 2013 Production
- \* 7:From Aug. 2013 Production

Position of Parts in Instrument Panel <LHD Front Bench Seat>

---

- H 6 Stereo Component Amplifier Assembly
- H 7 Stereo Component Amplifier Assembly
- H 10 Front No. 1 Speaker Assembly RH
- H 12 Stereo Component Amplifier Assembly
- H 13 Front No. 1 Speaker Assembly LH
- H 14 Front No. 4 Speaker Assembly
- H 21 Front No. 3 Speaker Assembly RH
- H 22 Front No. 3 Speaker Assembly LH
- H 23 Theft Warning Indicator Light Assembly
- H 24 Junction Connector
- H 25 Junction Connector
- H 26 Junction Connector
- H 27 Radio Receiver Assembly
- H 28 Radio Receiver Assembly
- H 29 Radio Receiver Assembly
- H 30 Radio Receiver Assembly
- H 31 Stereo Component Amplifier Assembly
- H 33 Multi-Media Interface ECU
- H 34 Front No. 2 Speaker Assembly RH
- H 35 Front No. 2 Speaker Assembly LH
- H 36 Radio Receiver Assembly
- H 37 Amplifier Antenna Assembly
- H 38 Radio Receiver Assembly
- H 39 No. 1 Stereo Jack Adapter Assembly
- H 40 Multi-Media Interface ECU
- H 46 Radio Receiver Assembly
- H 47 Radio Receiver Assembly

 
Position of Parts in Instrument Panel <LHD Front Bench Seat>

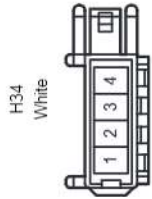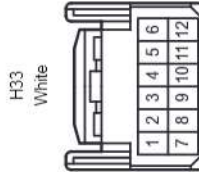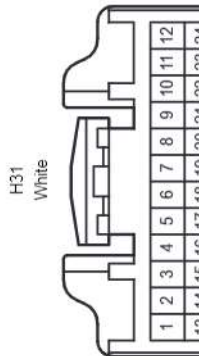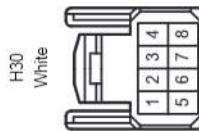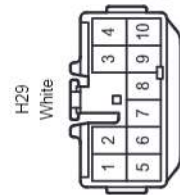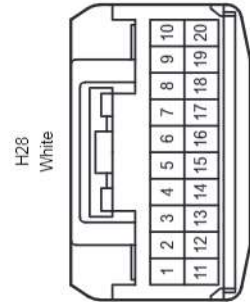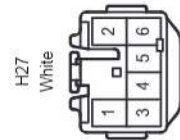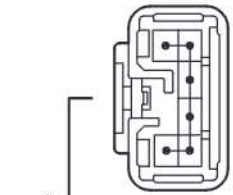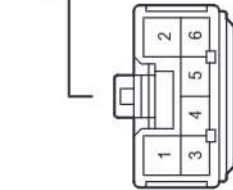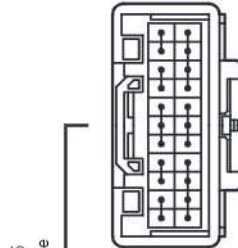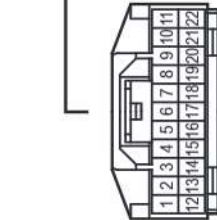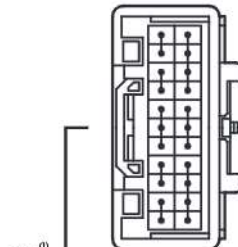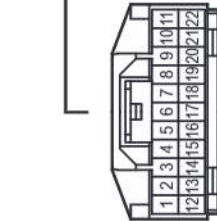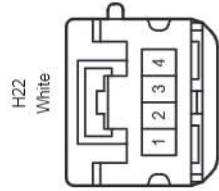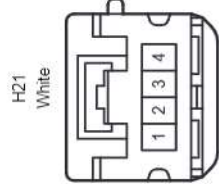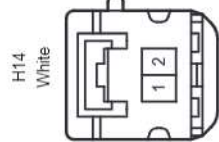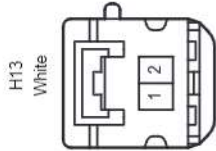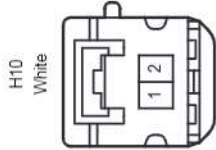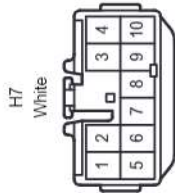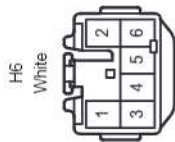


cardiagn.com

Position of Parts in Instrument Panel <LHD Front Bench Seat>

 H35  
White




H36  
White

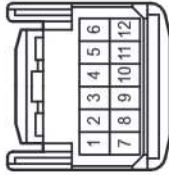


H37  
White




H38  
White

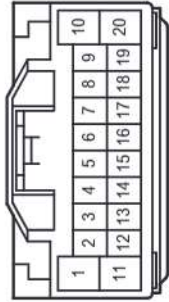


H39  
Black

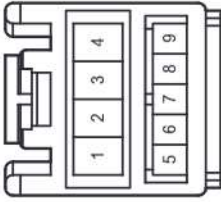


H40  
Brown

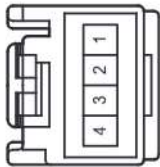


H46  
White

 


H47  
White

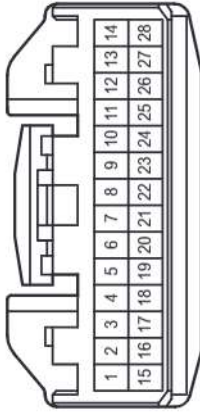

Wire and Wire in Instrument Panel <LHD Front Bench Seat>

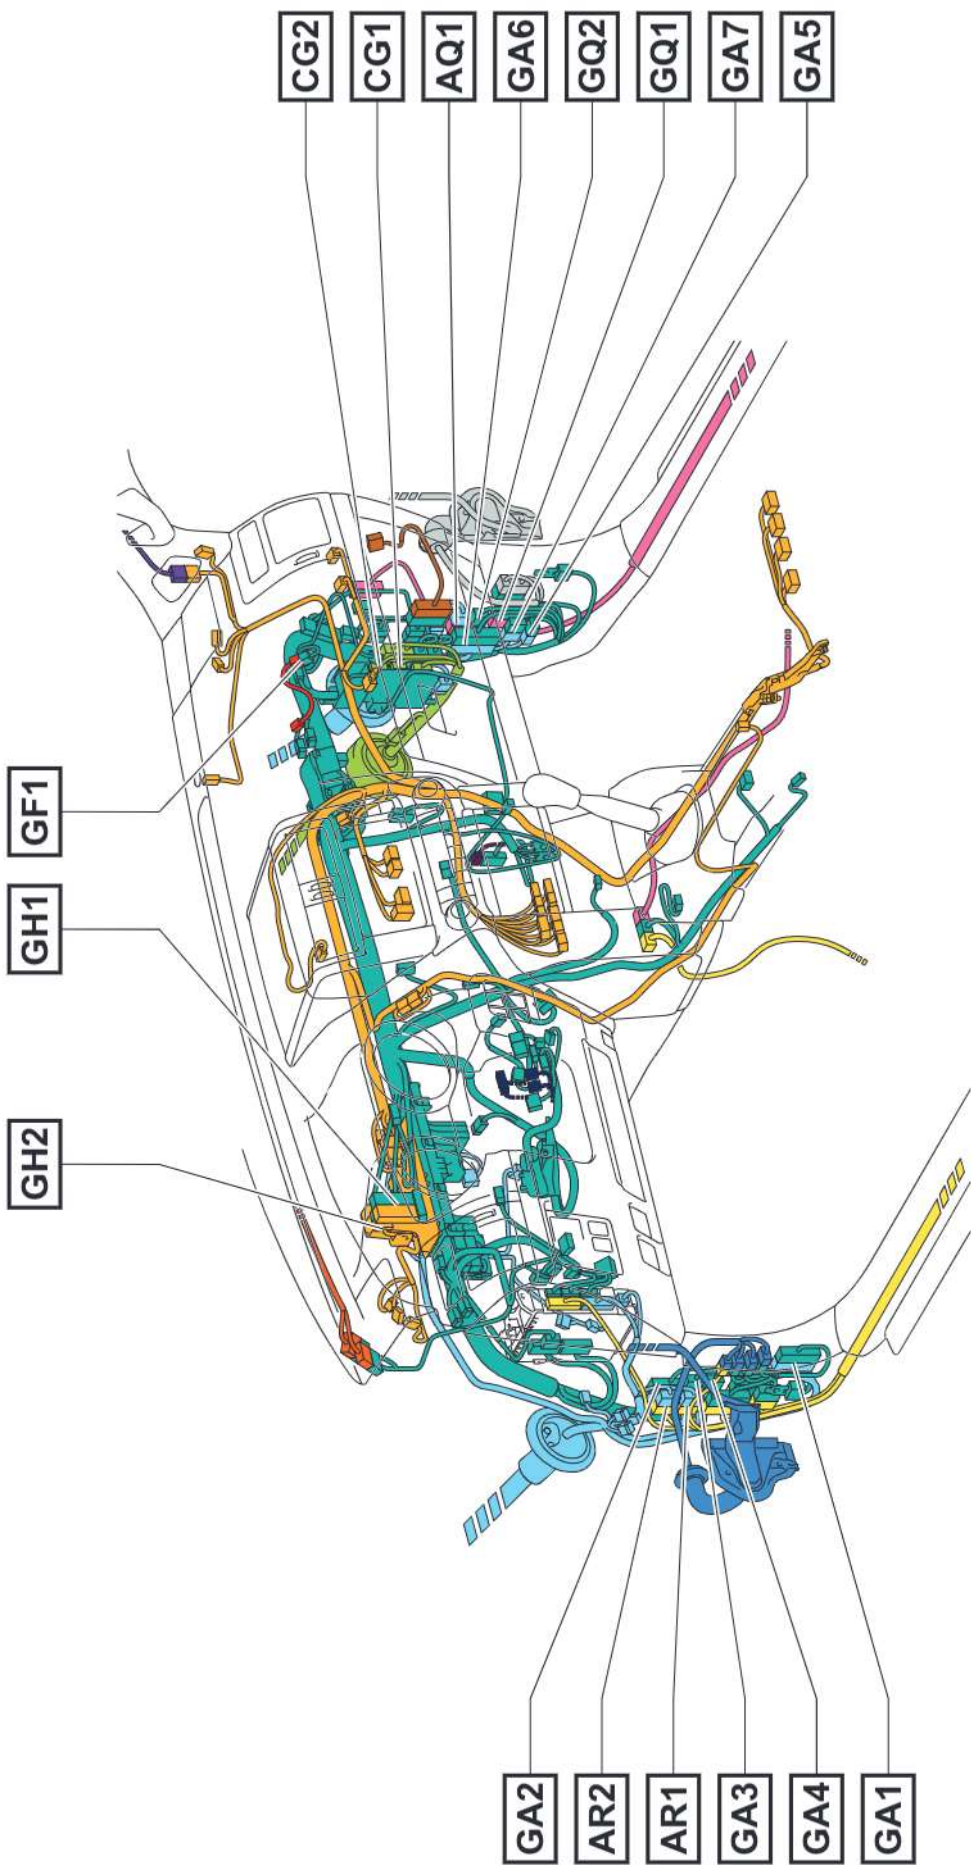


Wire and Wire in Instrument Panel <LHD Front Bench Seat>

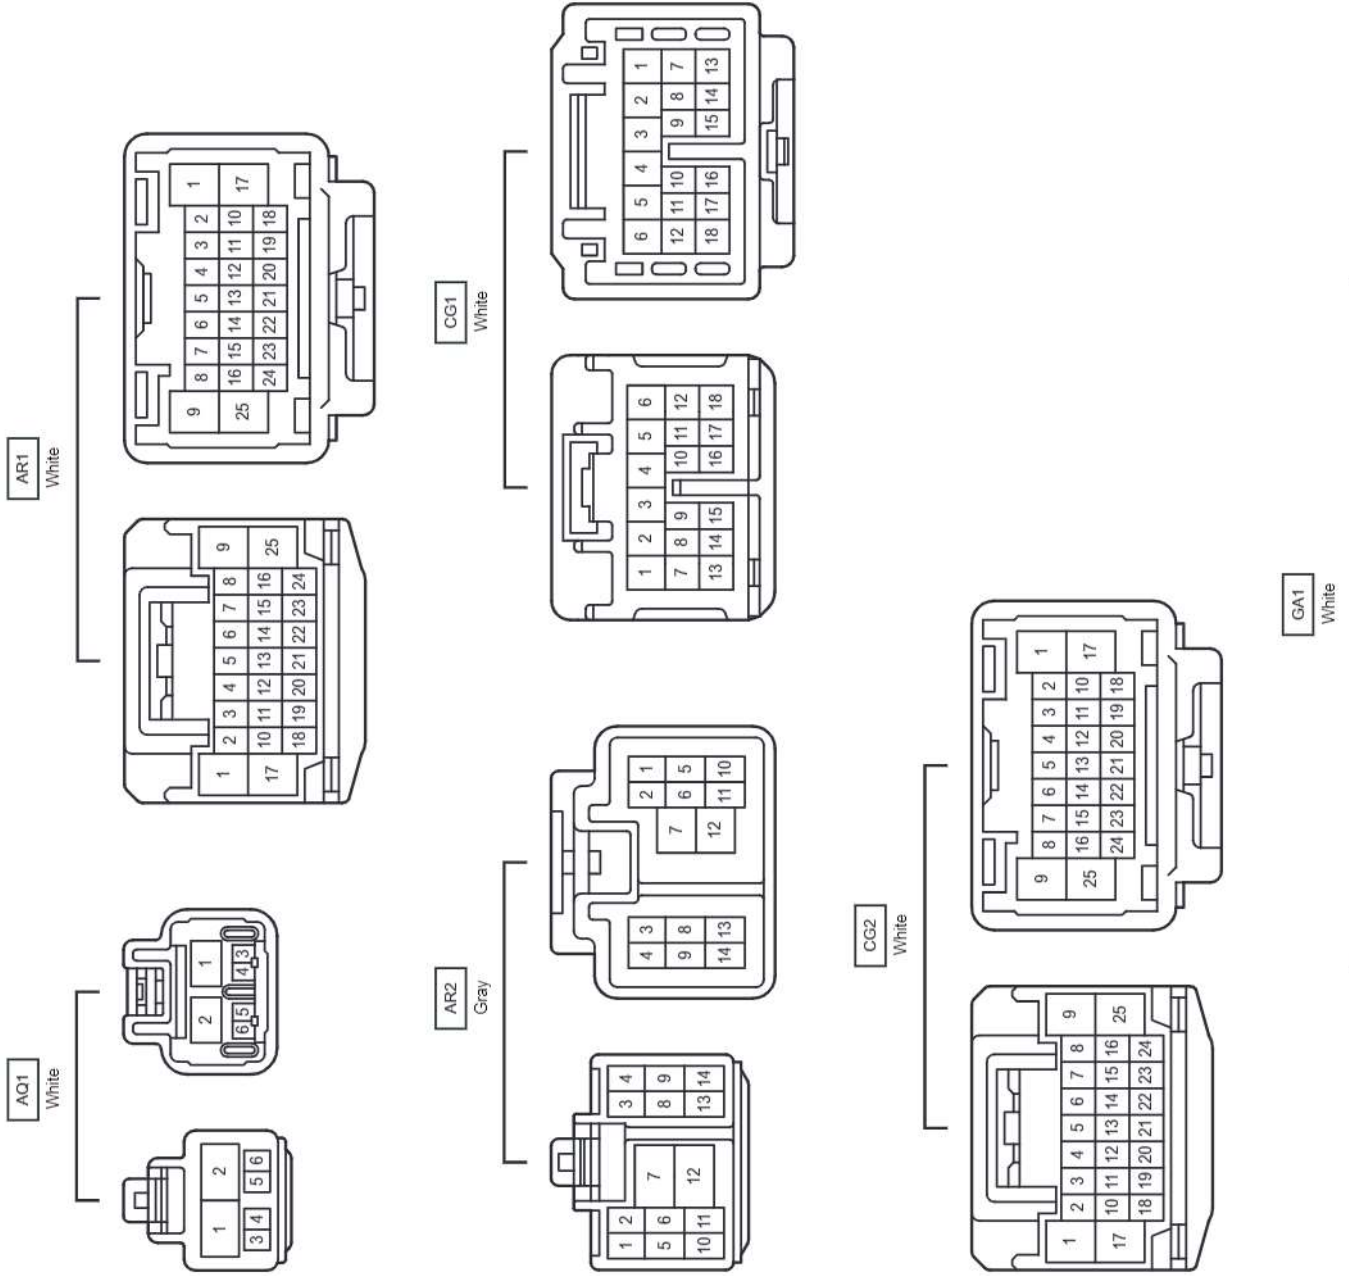






Wire and Wire in Instrument Panel <LHD Front Bench Seat>




GA2  
White

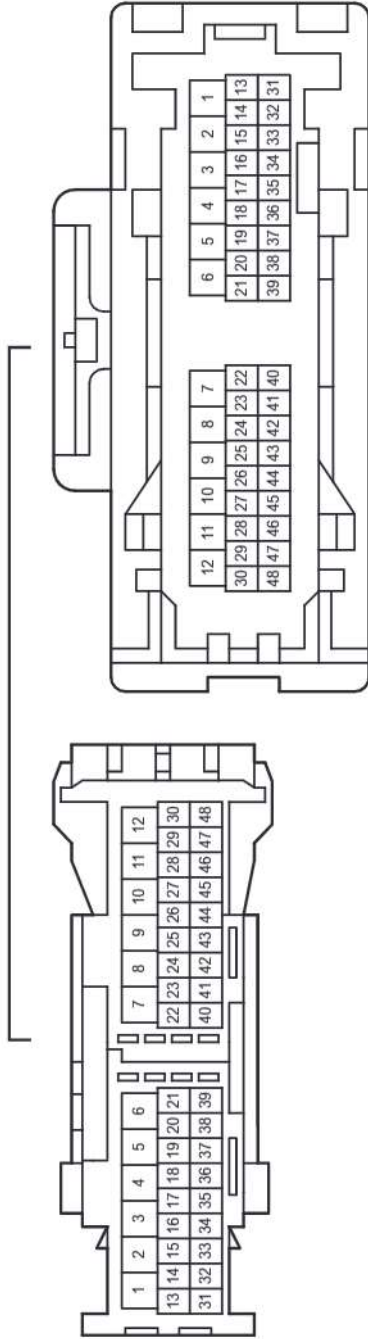



GA3  
Black

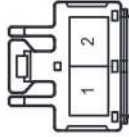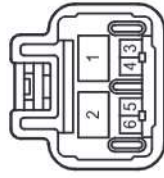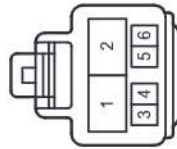


GA4  
White

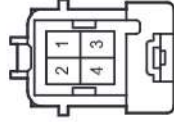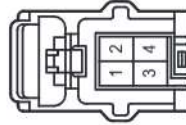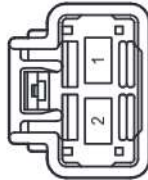

GA5  
Yellow

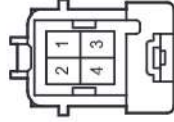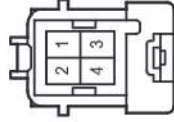

GA6  
White

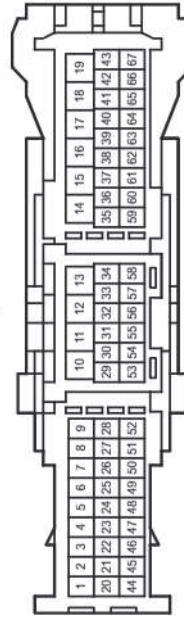


GA7  
Black


GF1  
Yellow

Wire and Wire in Instrument Panel <LHD Front Bench Seat>


GH1  
White

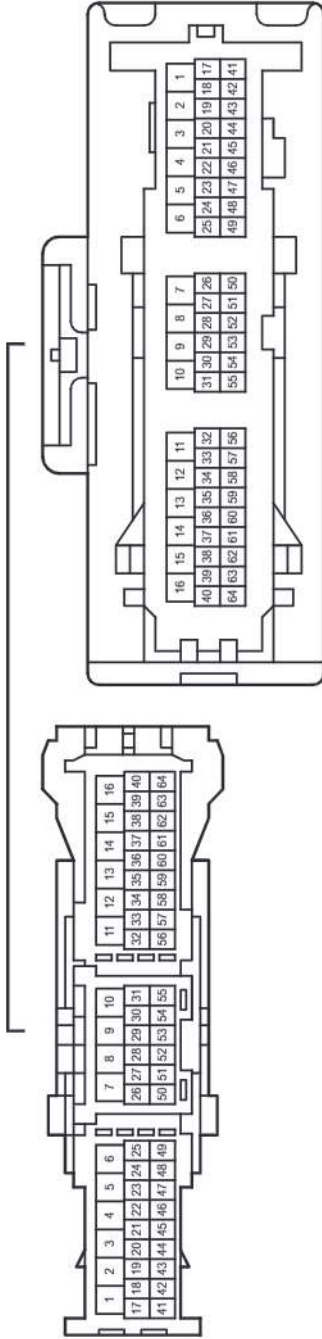

GH2  
White

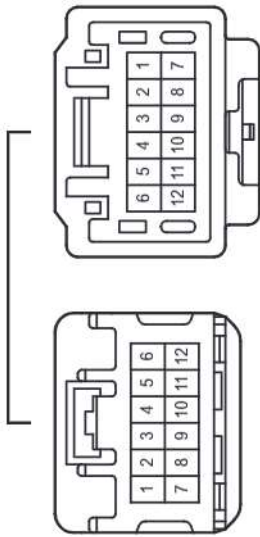


GQ1  
White

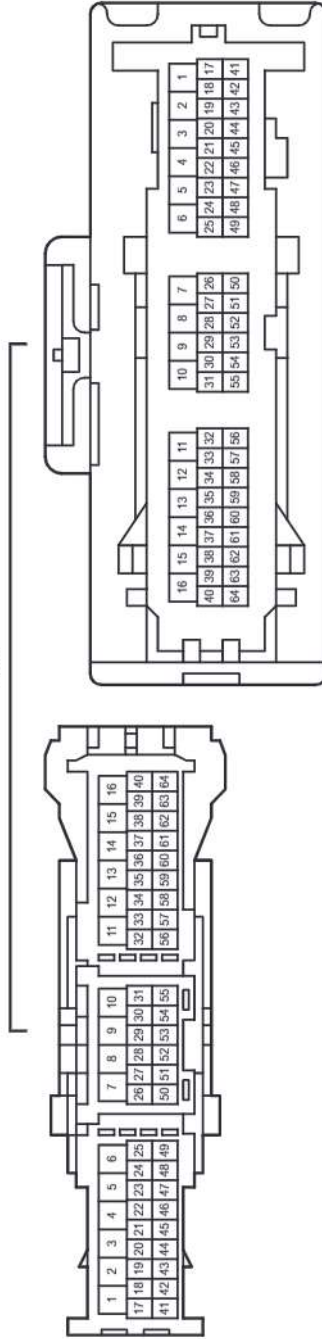

GQ2  
White




Wire and Wire in Instrument Panel <LHD Front Bench Seat>

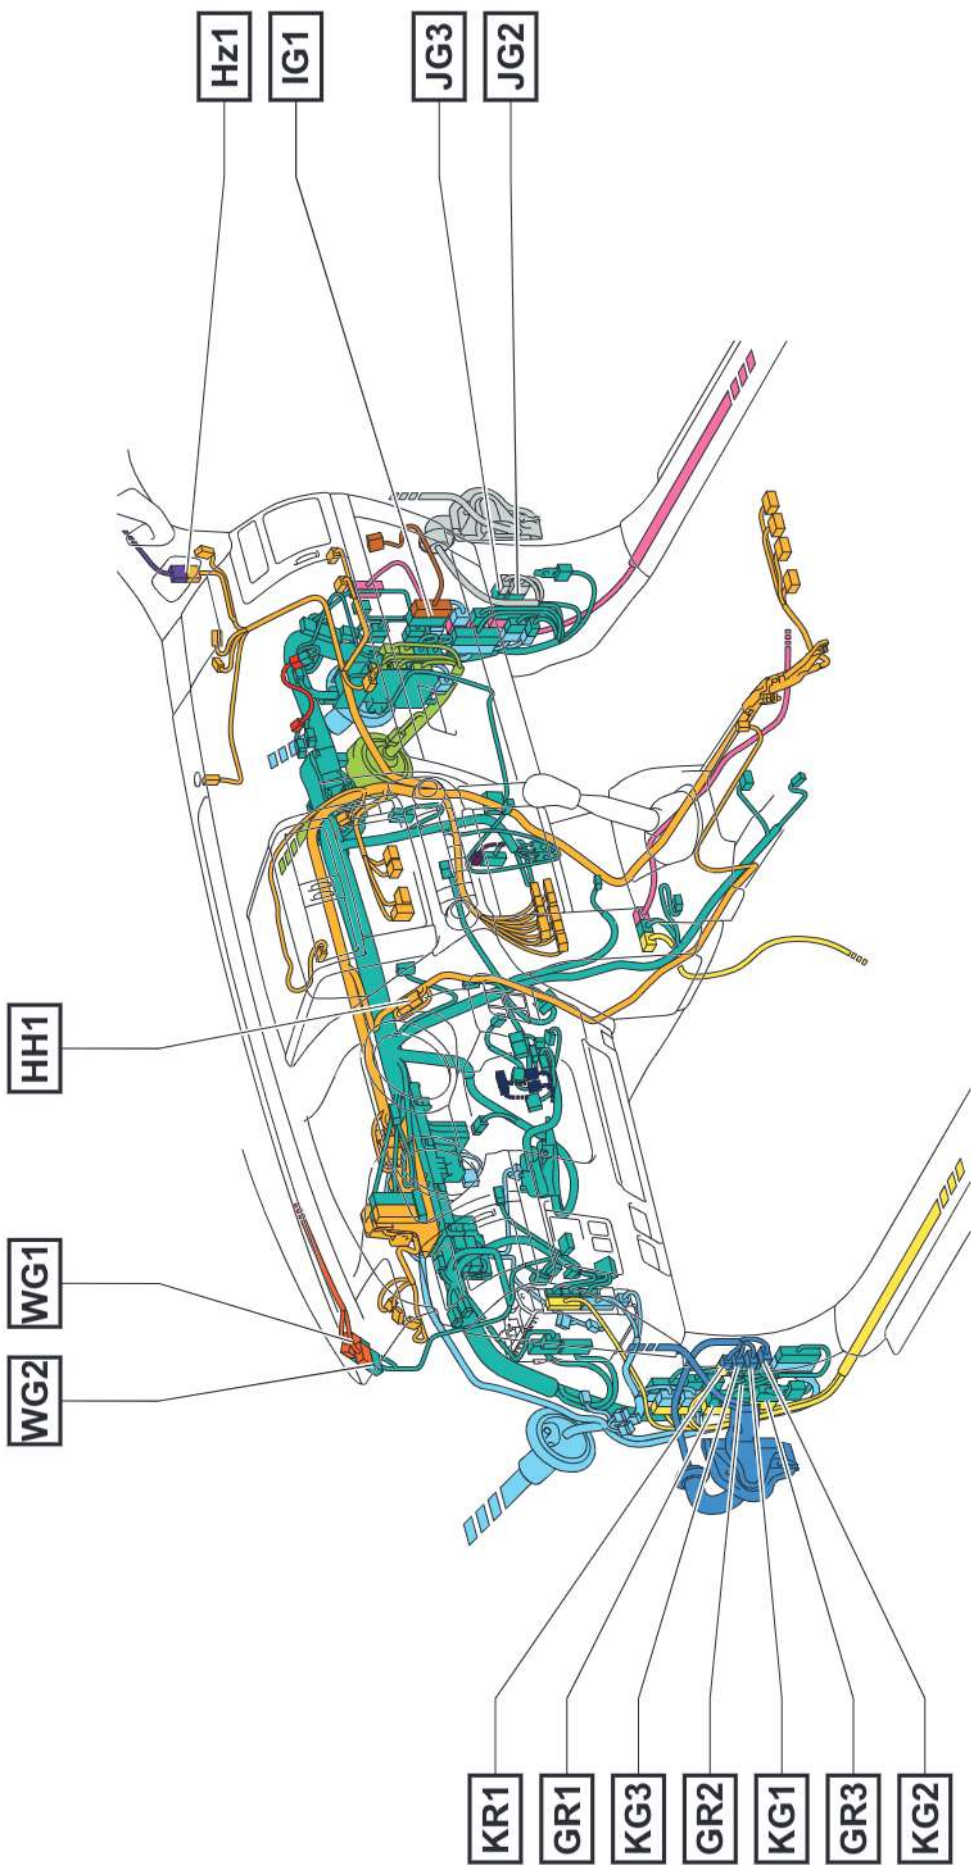


Wire and Wire in Instrument Panel <LHD Front Bench Seat>


GR1  
White

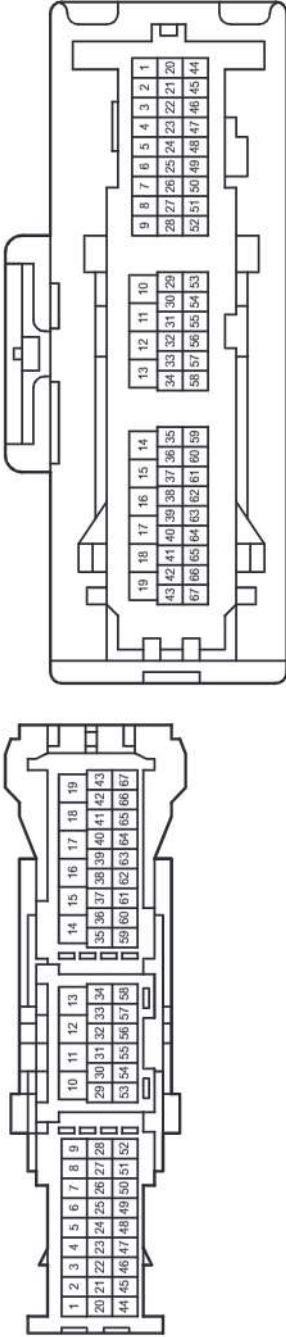


GR2  
Gray

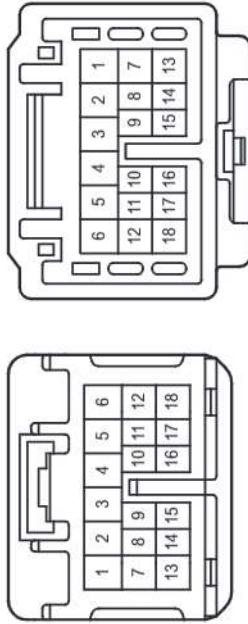

GR3  
Blue

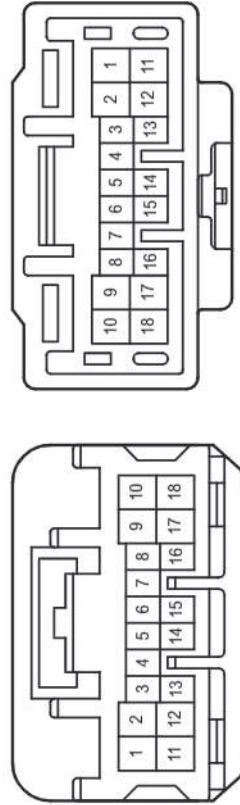


HH1  
White

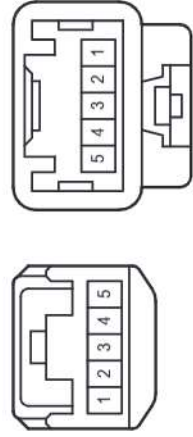

HZ1  
Blue




Wire and Wire in Instrument Panel <LHD Front Bench Seat>

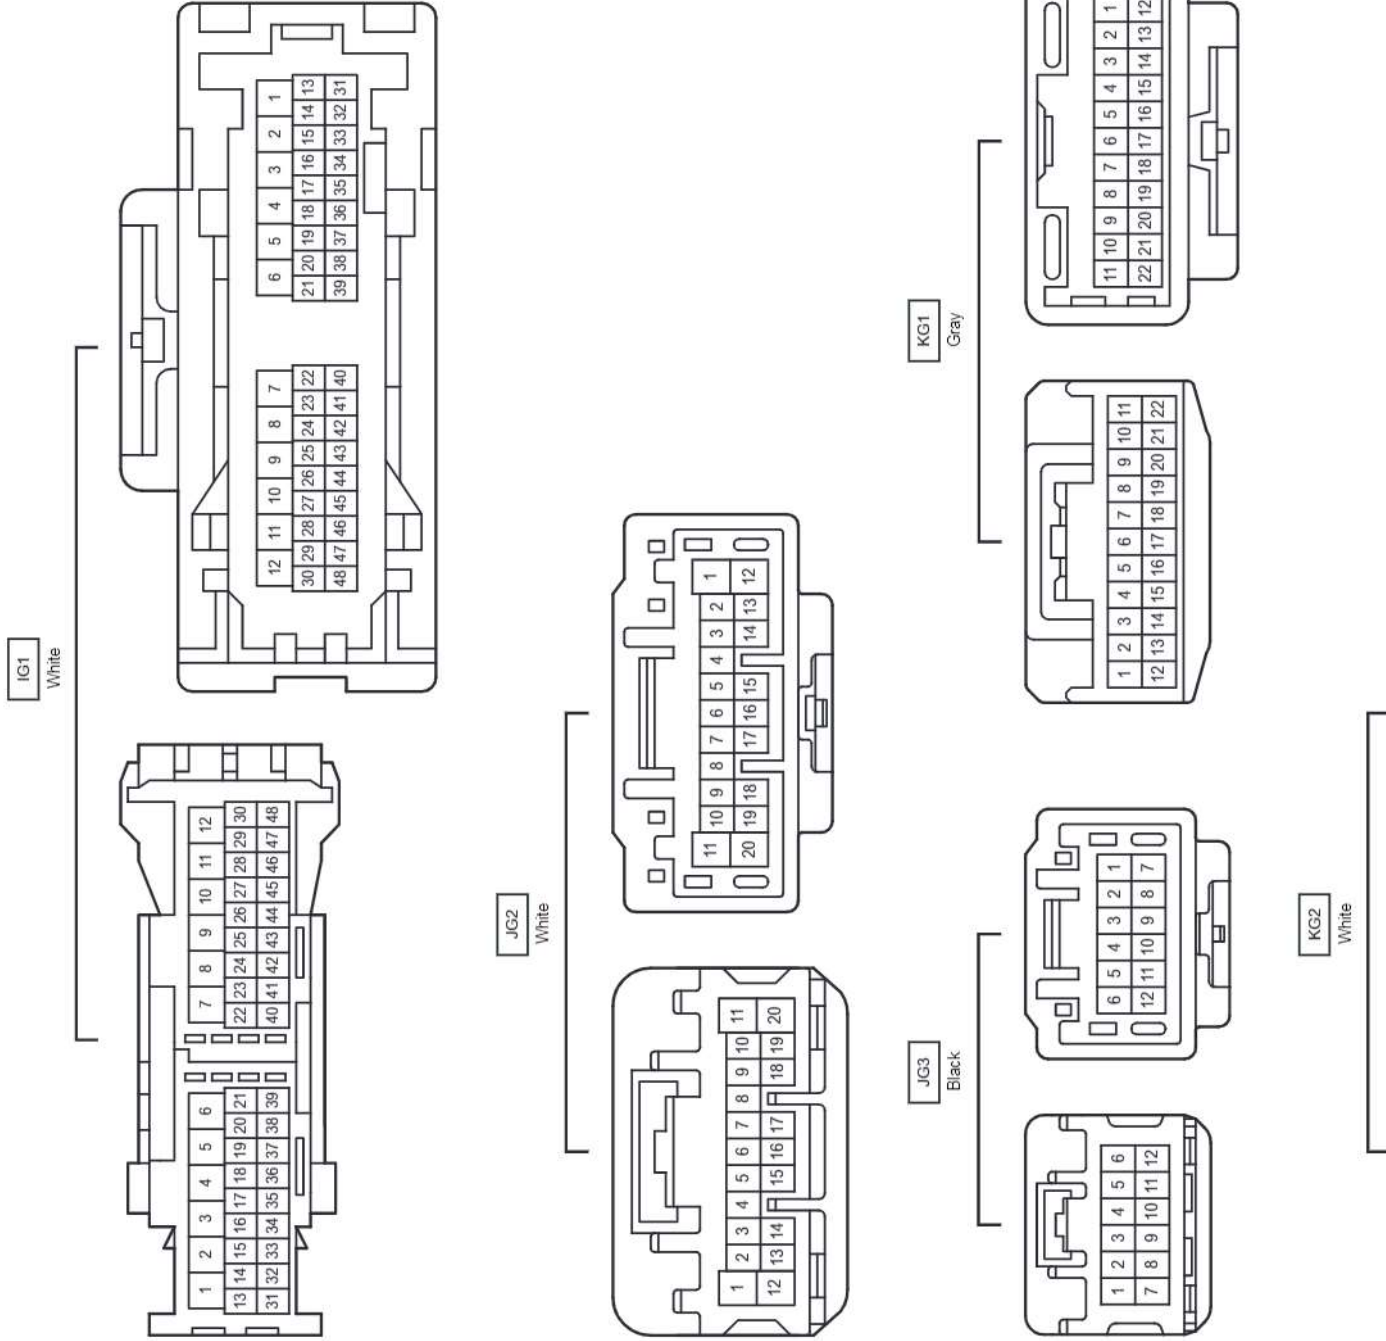


cardiagn.com


Wire and Wire in Instrument Panel <LHD Front Bench Seat>

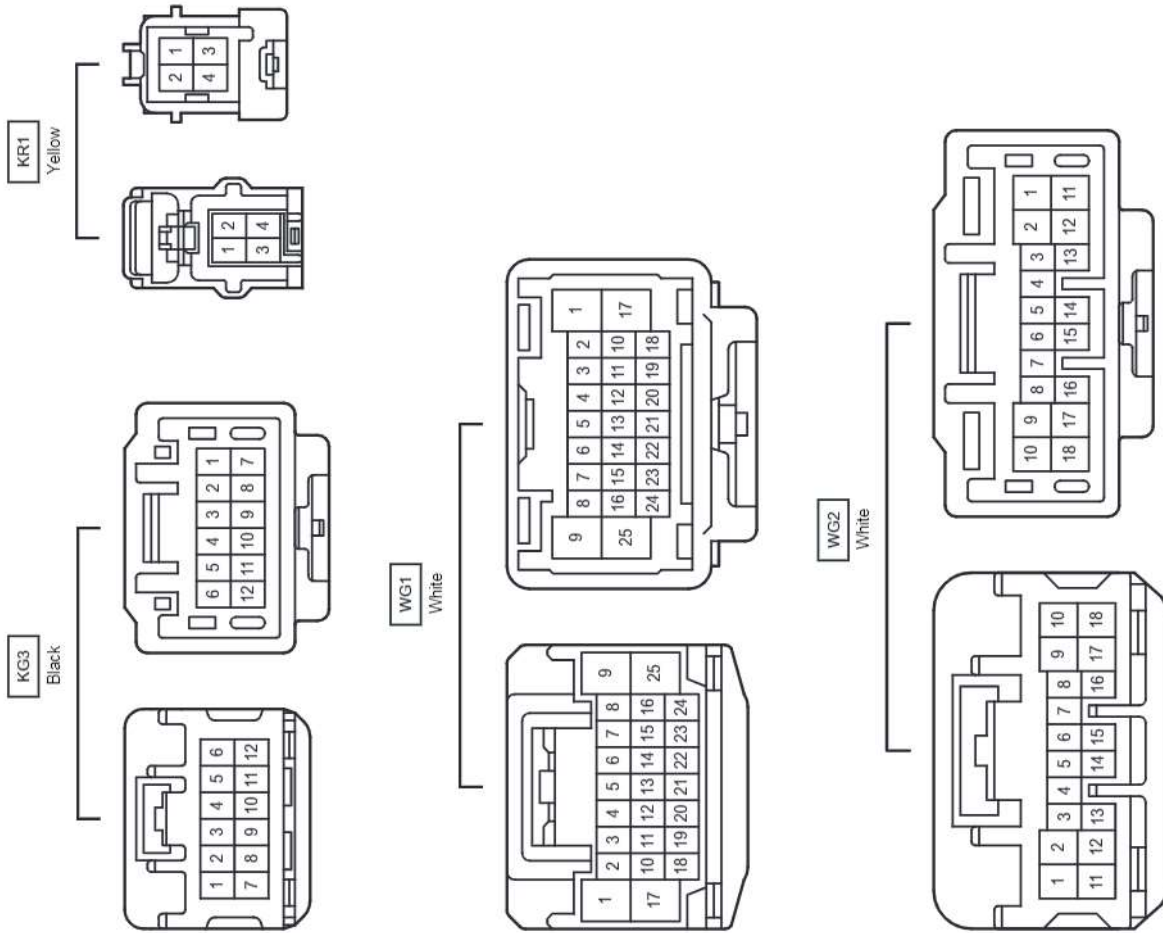

Ground Points in Instrument Panel <RHD Front Bench Seat>

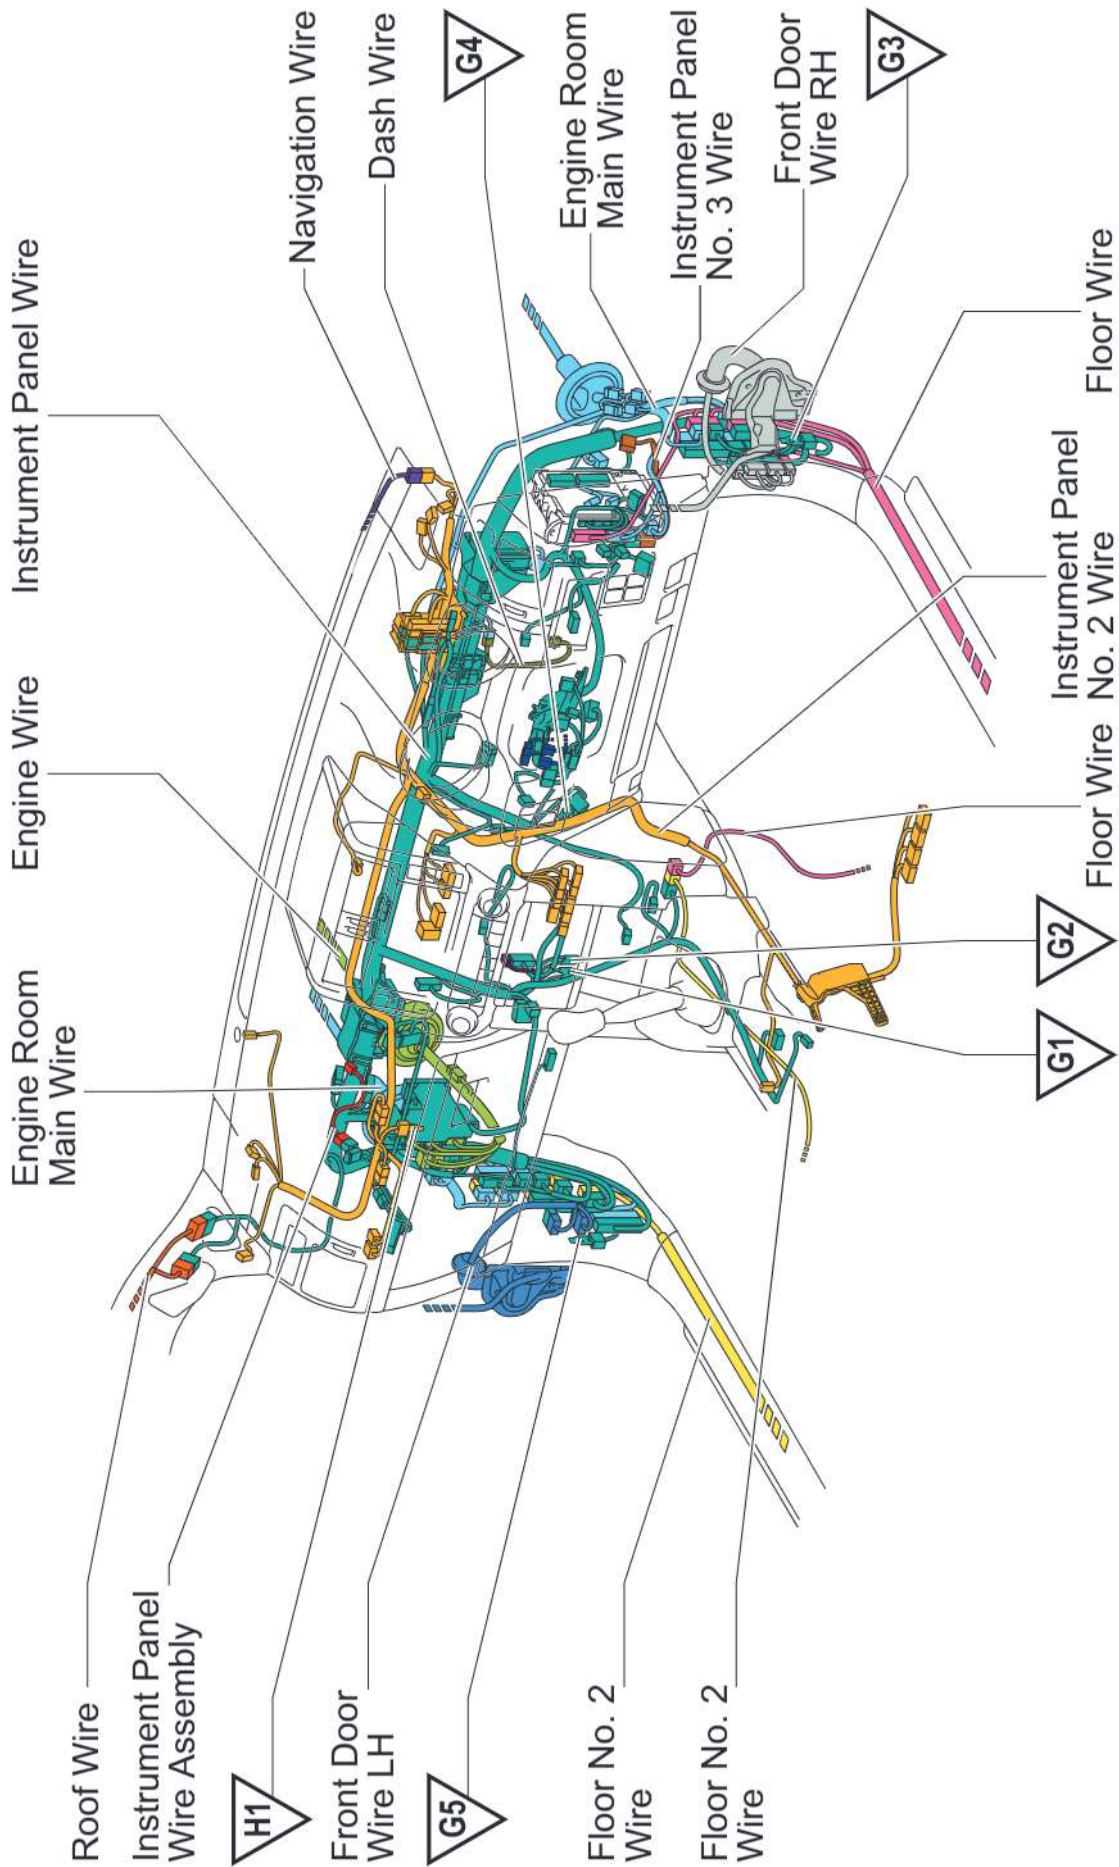

Position of Parts in Instrument Panel <RHD Front Bench Seat>

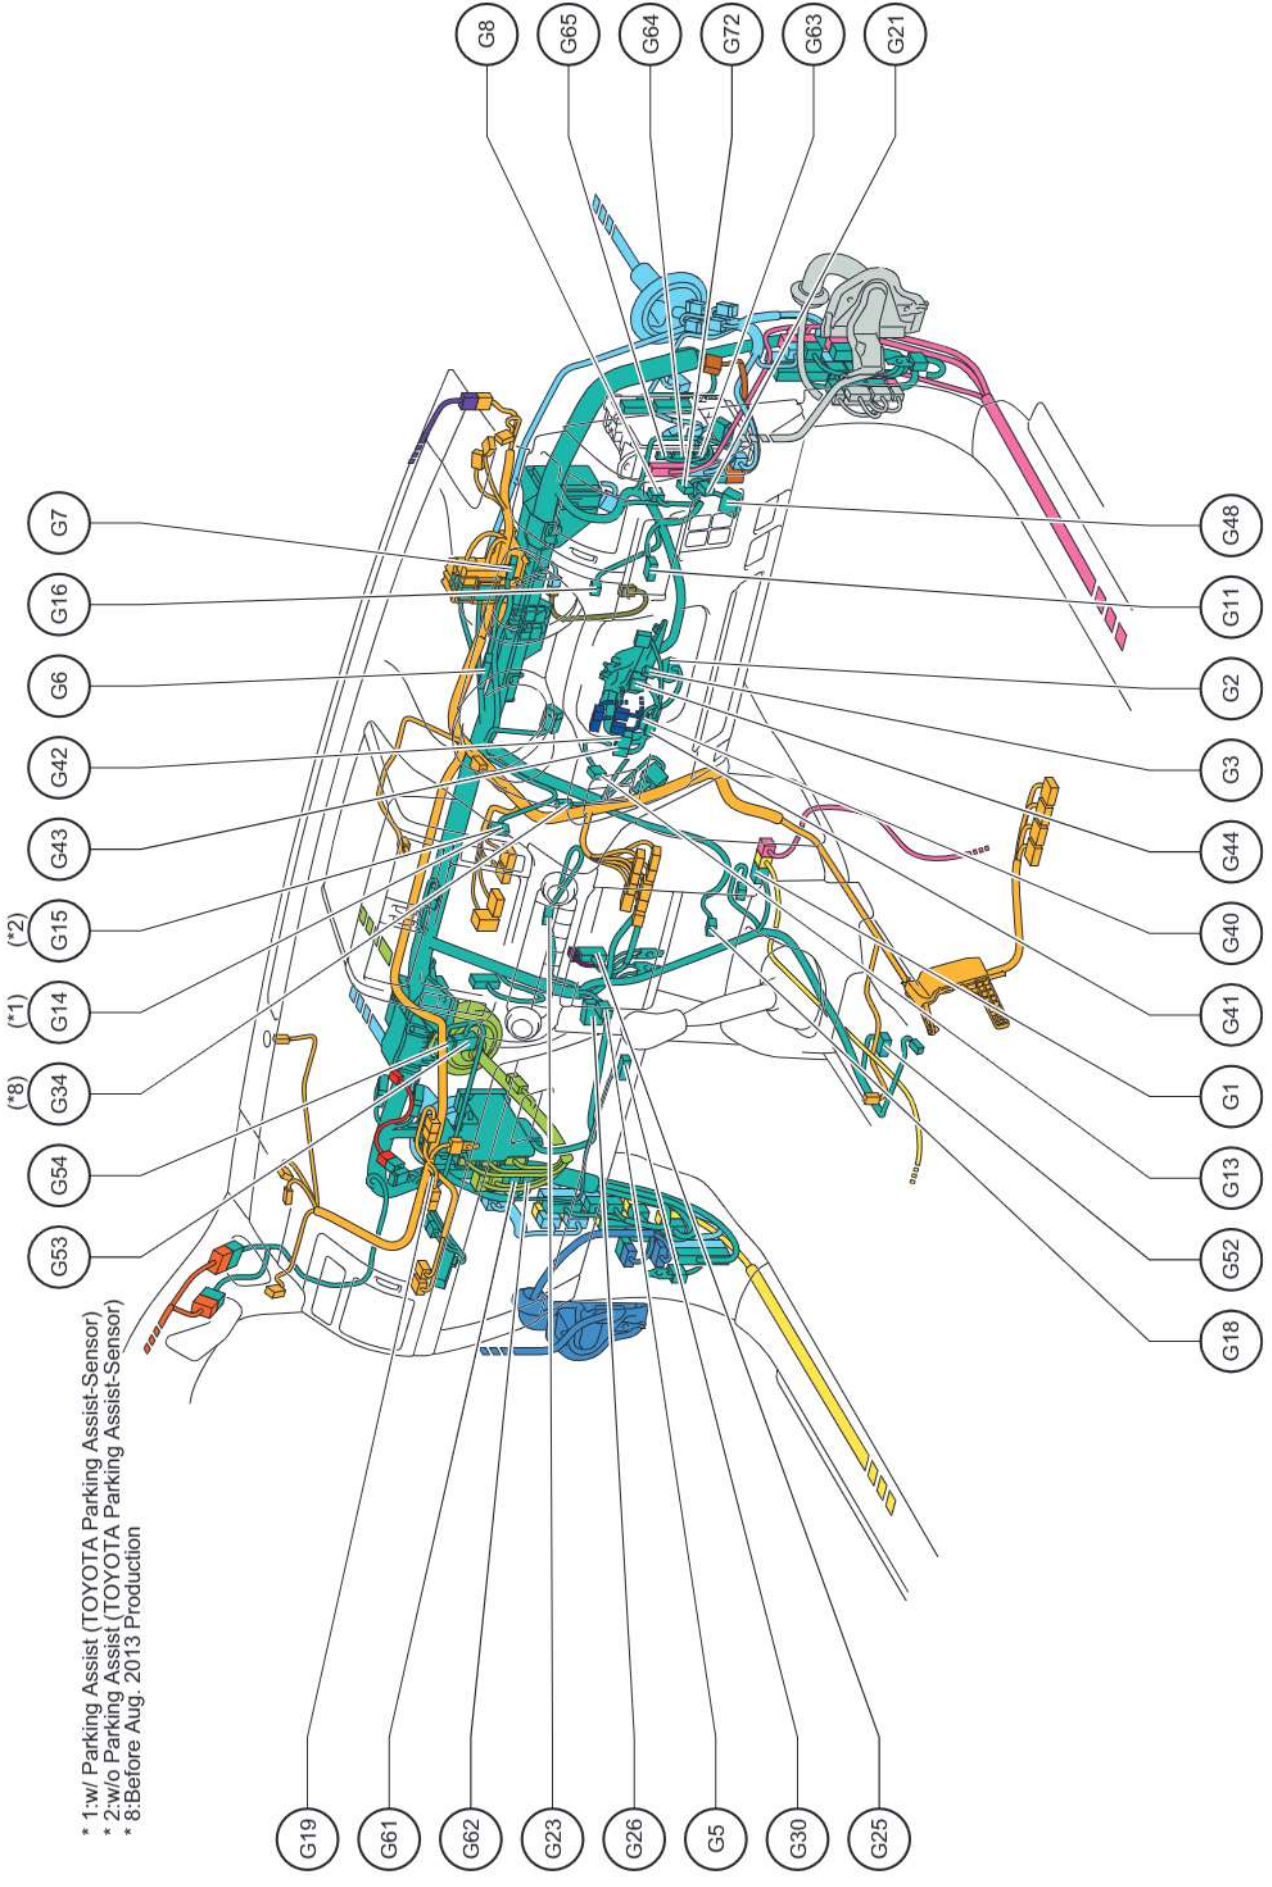


- \* 1:w/ Parking Assist (TOYOTA Parking Assist-Sensor)
- \* 2:w/o Parking Assist (TOYOTA Parking Assist-Sensor)
- \* 8:Before Aug. 2013 Production




- G 1 Airbag Sensor Assembly
- G 2 Ignition or Starter Switch Assembly
- G 3 Un-Lock Warning Switch Assembly
- G 5 Telltale Light Assembly
- G 6 Combination Meter Assembly
- G 7 Combination Meter Assembly
- G 8 Turn Signal Flasher Assembly
- G 11 Outer Mirror Switch Assembly
- G 13 Back Sonar or Clearance Sonar Switch Assembly
- G 14 Clearance Warning Indicator Assembly
- G 15 Hazard Warning Signal Switch Assembly
- G 16 Trip Switch
- G 18 Transfer Position Switch
- G 19 Option Connector
- G 21 Headlight Leveling Switch
- G 23 Integration Control and Panel Assembly
- G 25 A/C Amplifier Assembly
- G 26 Front Blower with Fan Motor Sub-Assembly
- G 30 Glove Box Light
- G 34 No. 1 Clearance Warning Buzzer
- G 40 Spiral Cable Sub-Assembly
- G 41 Spiral Cable Sub-Assembly
- G 42 Windshield Wiper Switch Assembly
- G 43 Windshield Wiper Switch Assembly
- G 44 Headlight Dimmer Switch Assembly
- G 48 DLC3
- G 52 Yaw Rate Sensor Assembly
- G 53 Four Wheel Drive Control ECU
- G 54 Four Wheel Drive Control ECU
- G 61 ECM
- G 62 ECM
- G 63 Main Body ECU
- G 64 Main Body ECU
- G 65 Main Body ECU
- G 72 Headlight Cleaner Switch Assembly

Position of Parts in Instrument Panel <RHD Front Bench Seat>

G1  
Yellow

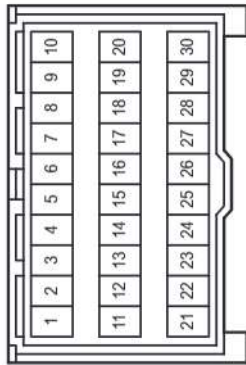


G2  
White

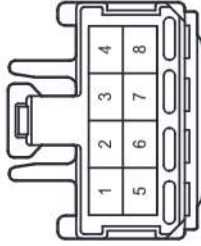


G3  
White




G5  
Black

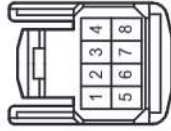

G6  
Black

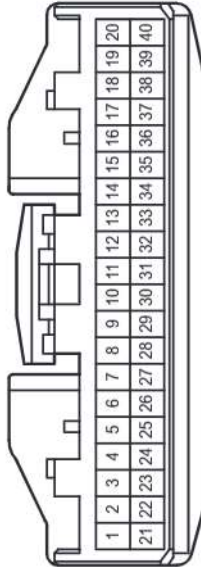


G7  
Black

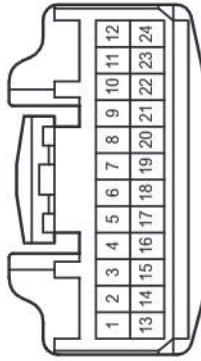


G8  
Black




G11  
Black

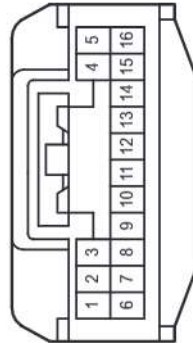


G13  
Black

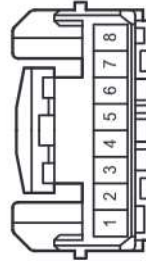


G14  
Black

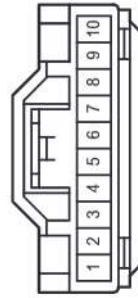


G15  
Gray

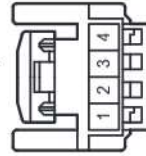


G16  
White

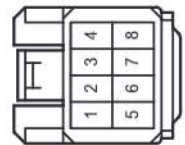

G18  
Black

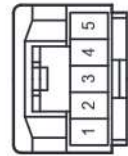


G19  
White

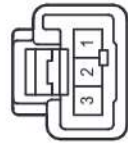

G21  
Black



G23  
Black

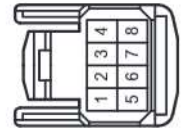

G25  
White



G26  
Black



G30  
Black




G34  
Blue






Position of Parts in Instrument Panel <RHD Front Bench Seat>


G64  
White

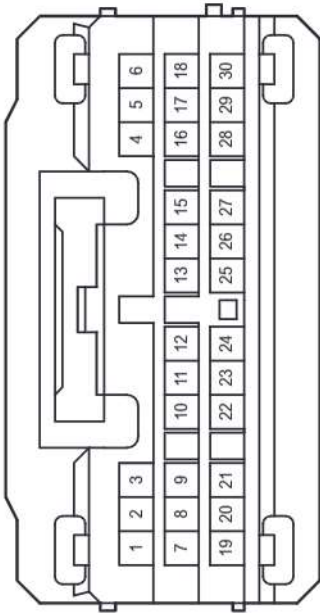


G66  
White

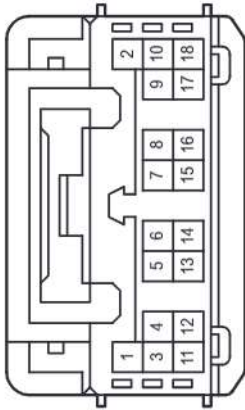

G72  
Black

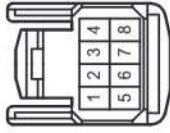

Position of Parts in Instrument Panel <RHD Front Bench Seat>

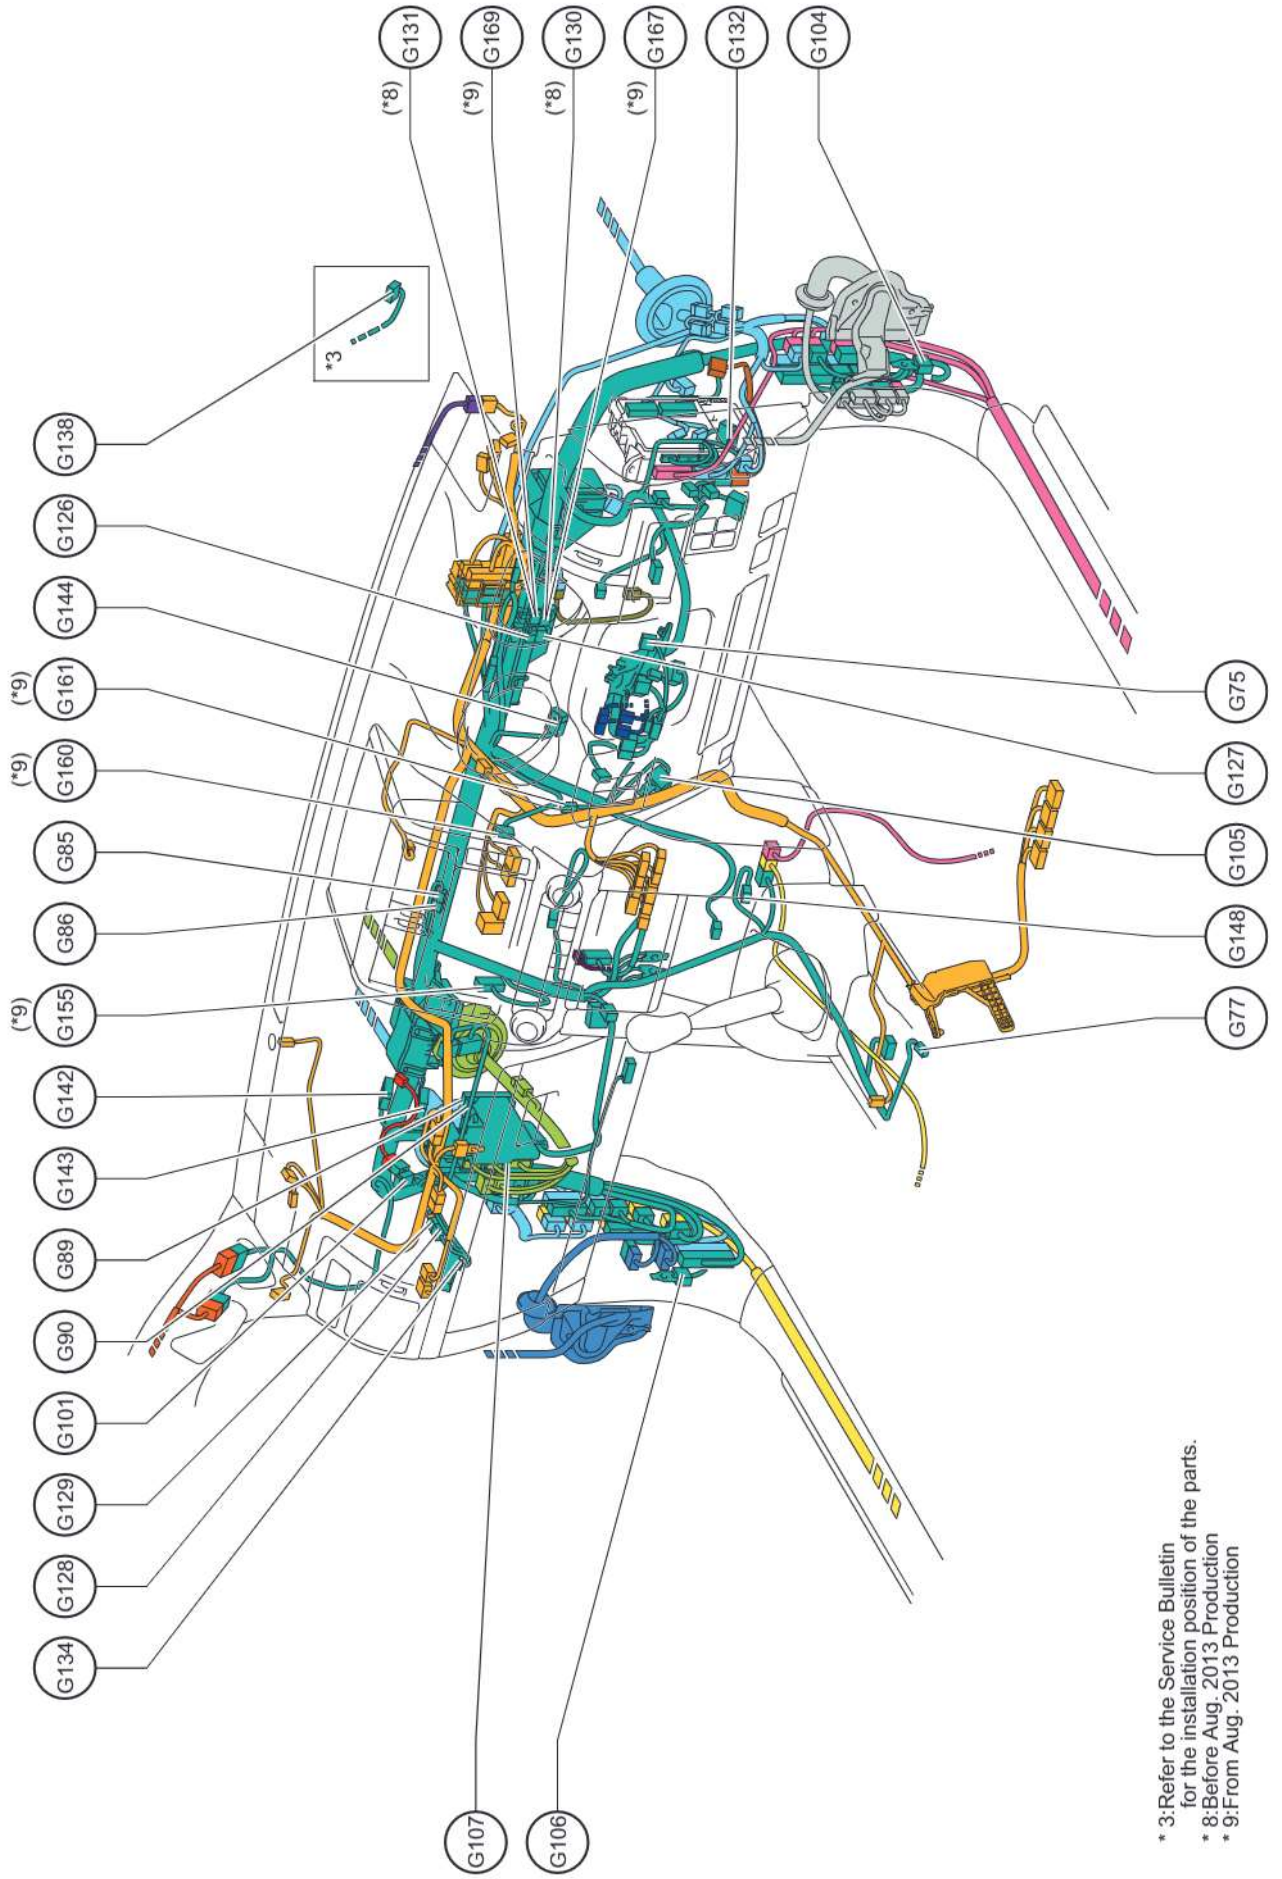


\* 3: Refer to the Service Bulletin for the installation position of the parts.  
 \* 8: Before Aug. 2013 Production  
 \* 9: From Aug. 2013 Production

- G 75 Transponder Key Amplifier
- G 77 Parking Brake Switch Assembly
- G 85 Junction Connector
- G 86 Junction Connector
- G 89 Junction Connector
- G 90 Junction Connector
- G101 Junction Terminal
- G104 Junction Connector
- G105 Junction Connector
- G106 Junction Connector
- G107 Junction Connector
- G126 Junction Connector
- G127 Junction Connector
- G128 Junction Connector
- G129 Junction Connector
- G130 Junction Connector
- G131 Junction Connector
- G132 Junction Connector
- G134 Junction Connector
- G138 Transponder Key ECU Assembly
- G142 Junction Connector
- G143 Junction Connector
- G144 Junction Connector
- G148 Power Point Socket Assembly
- G155 Network Gateway ECU
- G160 Clearance Warning Indicator Assembly
- G161 No. 1 Clearance Warning Buzzer
- G167 Junction Connector
- G169 Junction Connector

Position of Parts in Instrument Panel <RHD Front Bench Seat>


G75  
Black

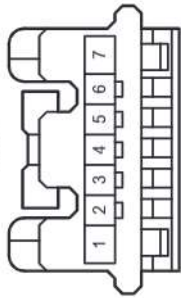


G77  
White





G85  
Black

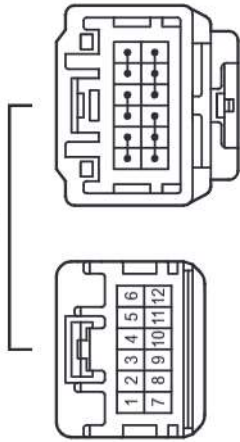


G86  
Black

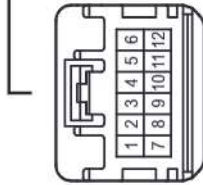


G89  
White

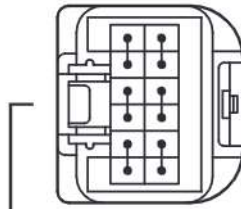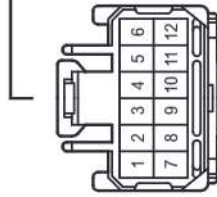



G90  
White

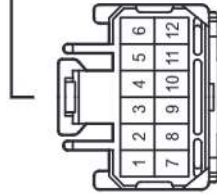


G101  
White

 



G104  
White

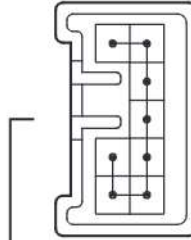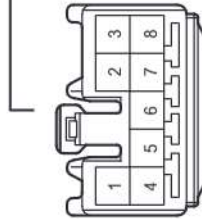

G105  
White

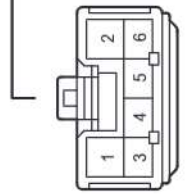


G106  
White

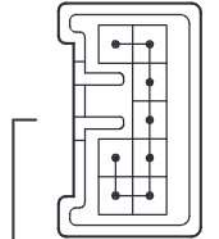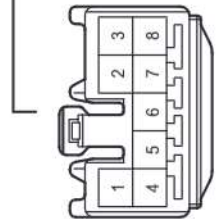


Position of Parts in Instrument Panel <RHD Front Bench Seat>


G127  
Black

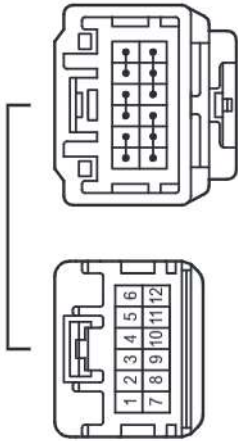


G128  
Black

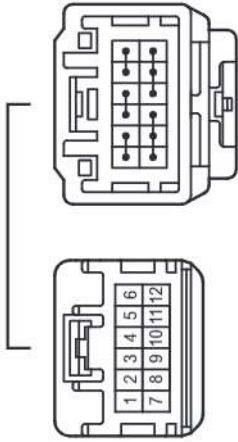


G129  
Black

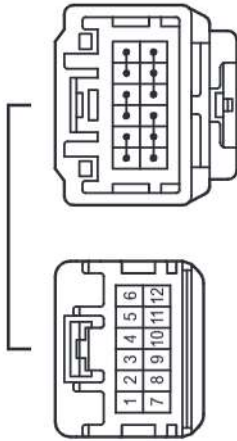


G130  
White

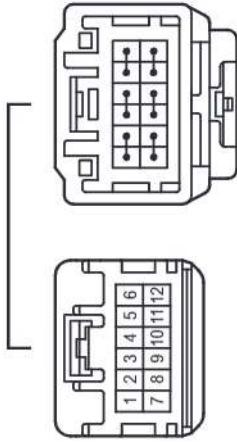


G131  
White

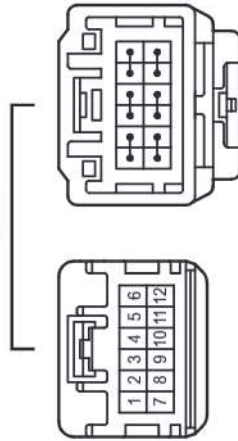


G132  
Gray

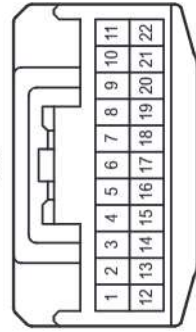


G134  
Gray

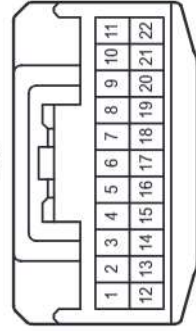

G138  
White

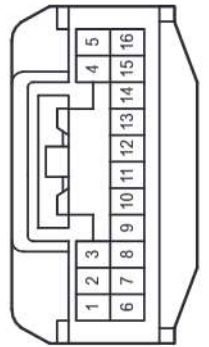


G142  
White

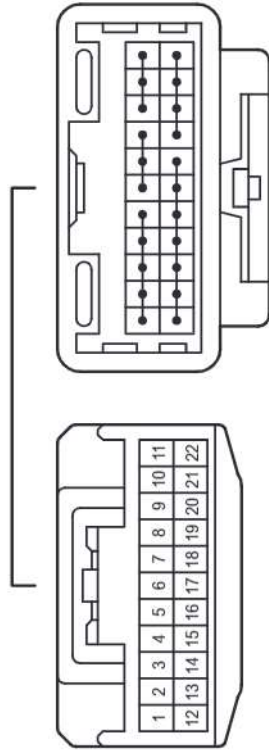




Position of Parts in Instrument Panel <RHD Front Bench Seat>


G144  
White

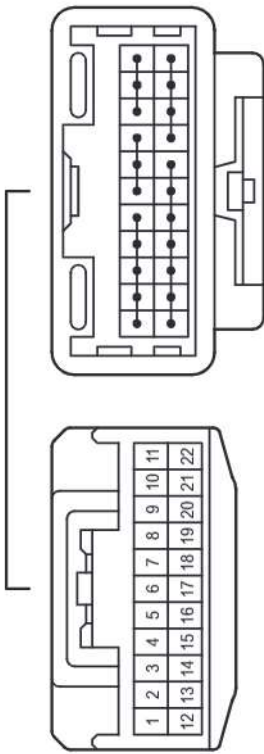


G148  
White

 


G155  
White

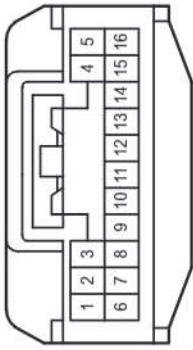


G161  
Black

 


G167  
Blue

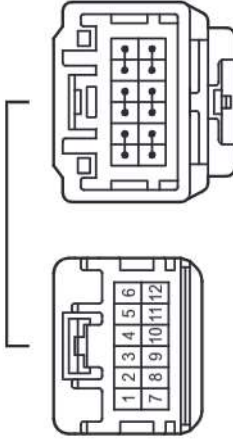


G160  
Black

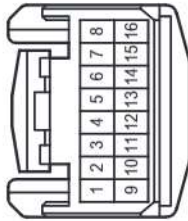

G169  
Blue

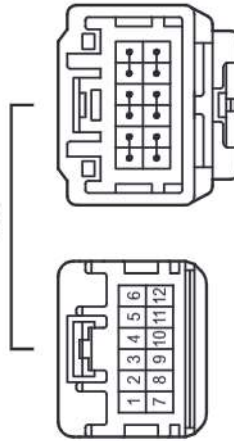

Position of Parts in Instrument Panel <RHD Front Bench Seat>




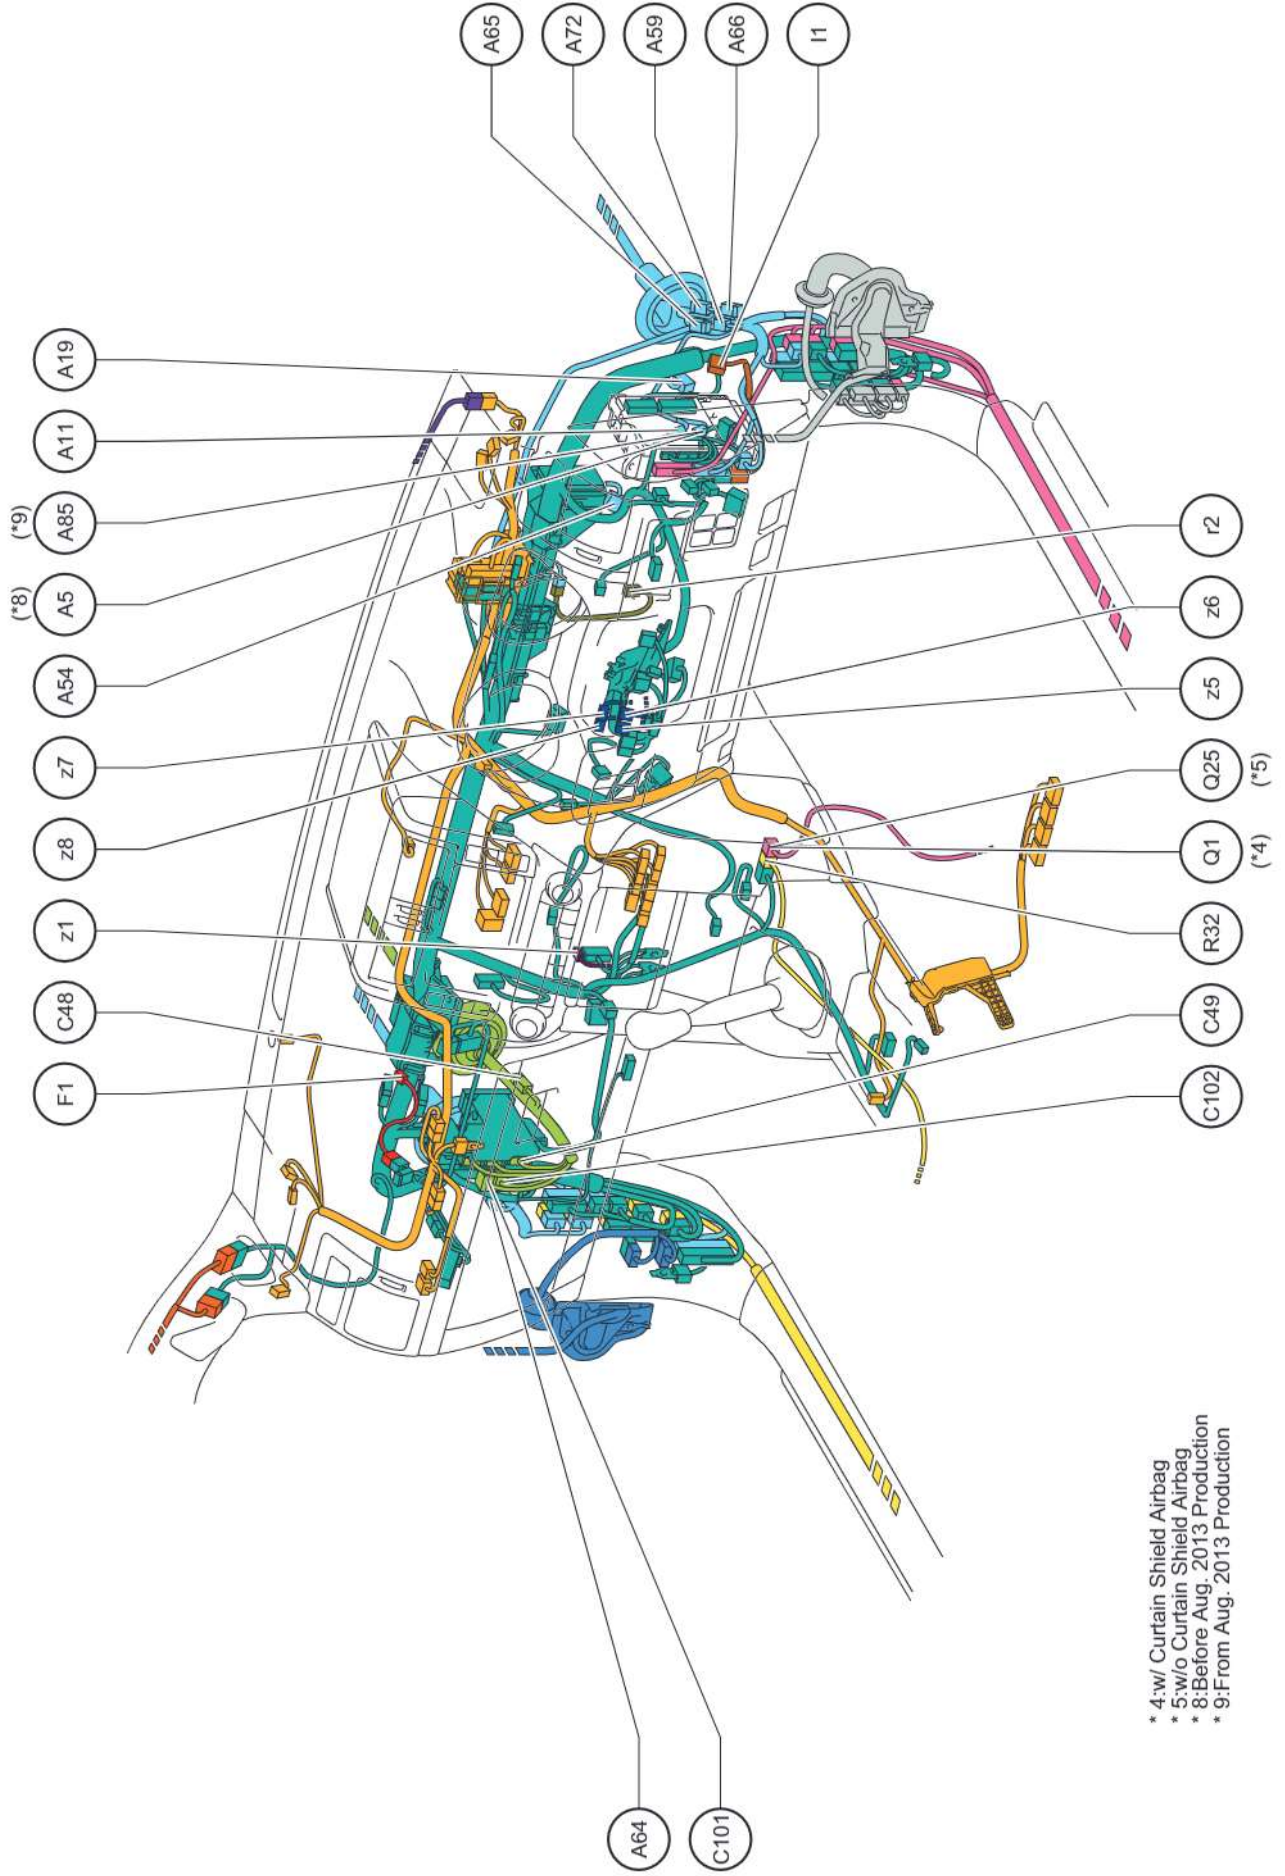


- \* 4:w/ Curtain Shield Airbag
- \* 5:w/o Curtain Shield Airbag
- \* 8:Before Aug. 2013 Production
- \* 9:From Aug. 2013 Production

Position of Parts in Instrument Panel <RHD Front Bench Seat>



- A 5 Stop Light Switch Assembly
- A 11 Brake Pedal Load Sensing Switch
- A 19 Acceleration Sensor
- A 54 Stop Light Control Relay Assembly
- A 59 Diode (Stop Light)
- A 64 Junction Connector
- A 65 Junction Connector
- A 66 Junction Connector
- A 72 Junction Connector
- A 85 Stop Light Switch Assembly
- C 48 Junction Connector
- C 49 Junction Connector
- C101 ECM
- C102 ECM
- F 1 Front Passenger Side Squib Circuit
- I 1 Clearance Warning ECU Assembly
- Q 1 Airbag Sensor Assembly
- Q 25 Airbag Sensor Assembly
- R 32 Airbag Sensor Assembly
- r 2 Clutch Start Switch Assembly
- z 1 A/C Amplifier Assembly , A/C Blower Assembly
- z 5 Driver Side Squib Circuit , Spiral Cable Sub-Assembly
- z 6 Driver Side Squib 2nd Step Circuit , Spiral Cable Sub-Assembly
- z 7 Cruise Control Main Switch , Spiral Cable Sub-Assembly , Steering Pad Switch Assembly
- z 8 Spiral Cable Sub-Assembly , Steering Pad Switch Assembly

Position of Parts in Instrument Panel <RHD Front Bench Seat>

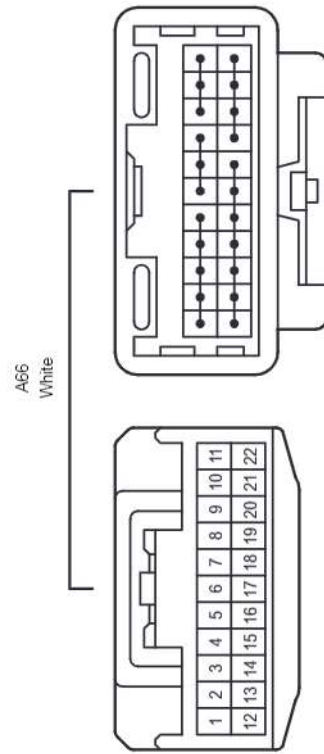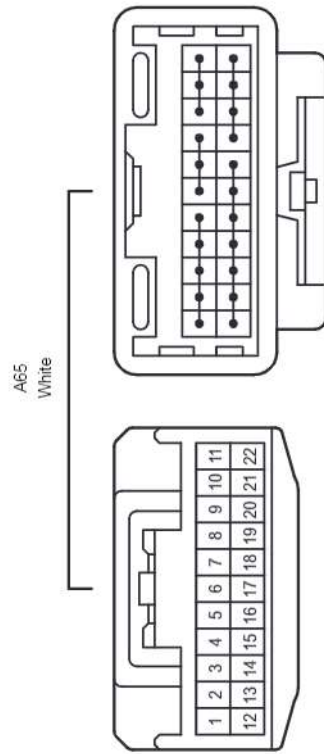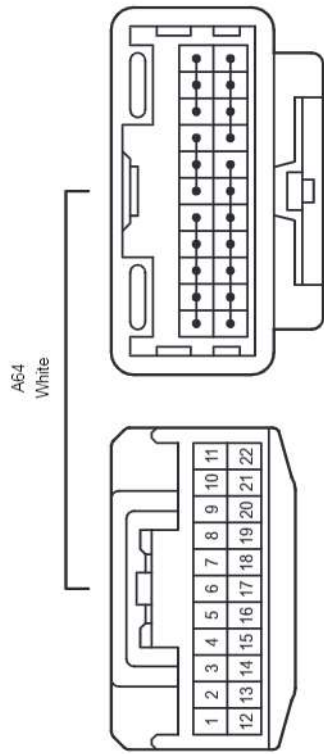
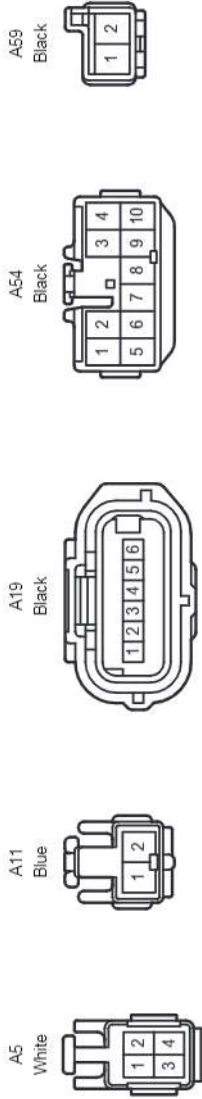


Position of Parts in Instrument Panel <RHD Front Bench Seat>


C48  
White

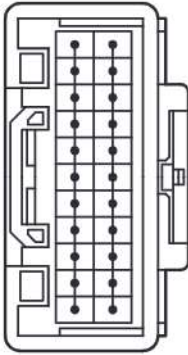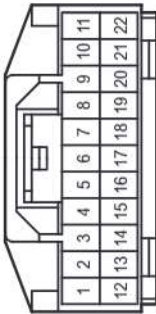


C49  
Blue

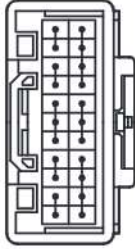 


C101  
White

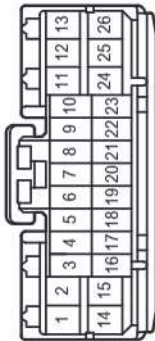


C102  
White

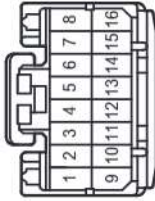


F1  
Orange

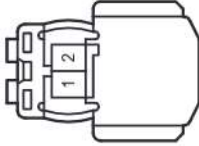


I1  
White

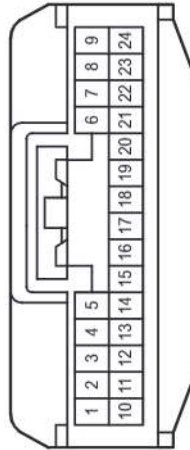


Q1  
Yellow

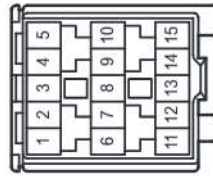


Q25  
Yellow

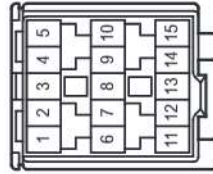


R32  
Yellow

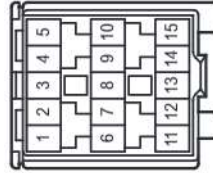


r2  
White

 


z1  
White

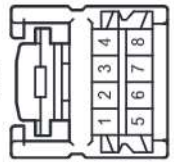


z5  
Orange

 


z6  
Black

 


z7  
White

 

z8  
White

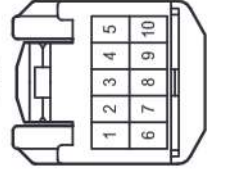

Position of Parts in Instrument Panel <RHD Front Bench Seat>

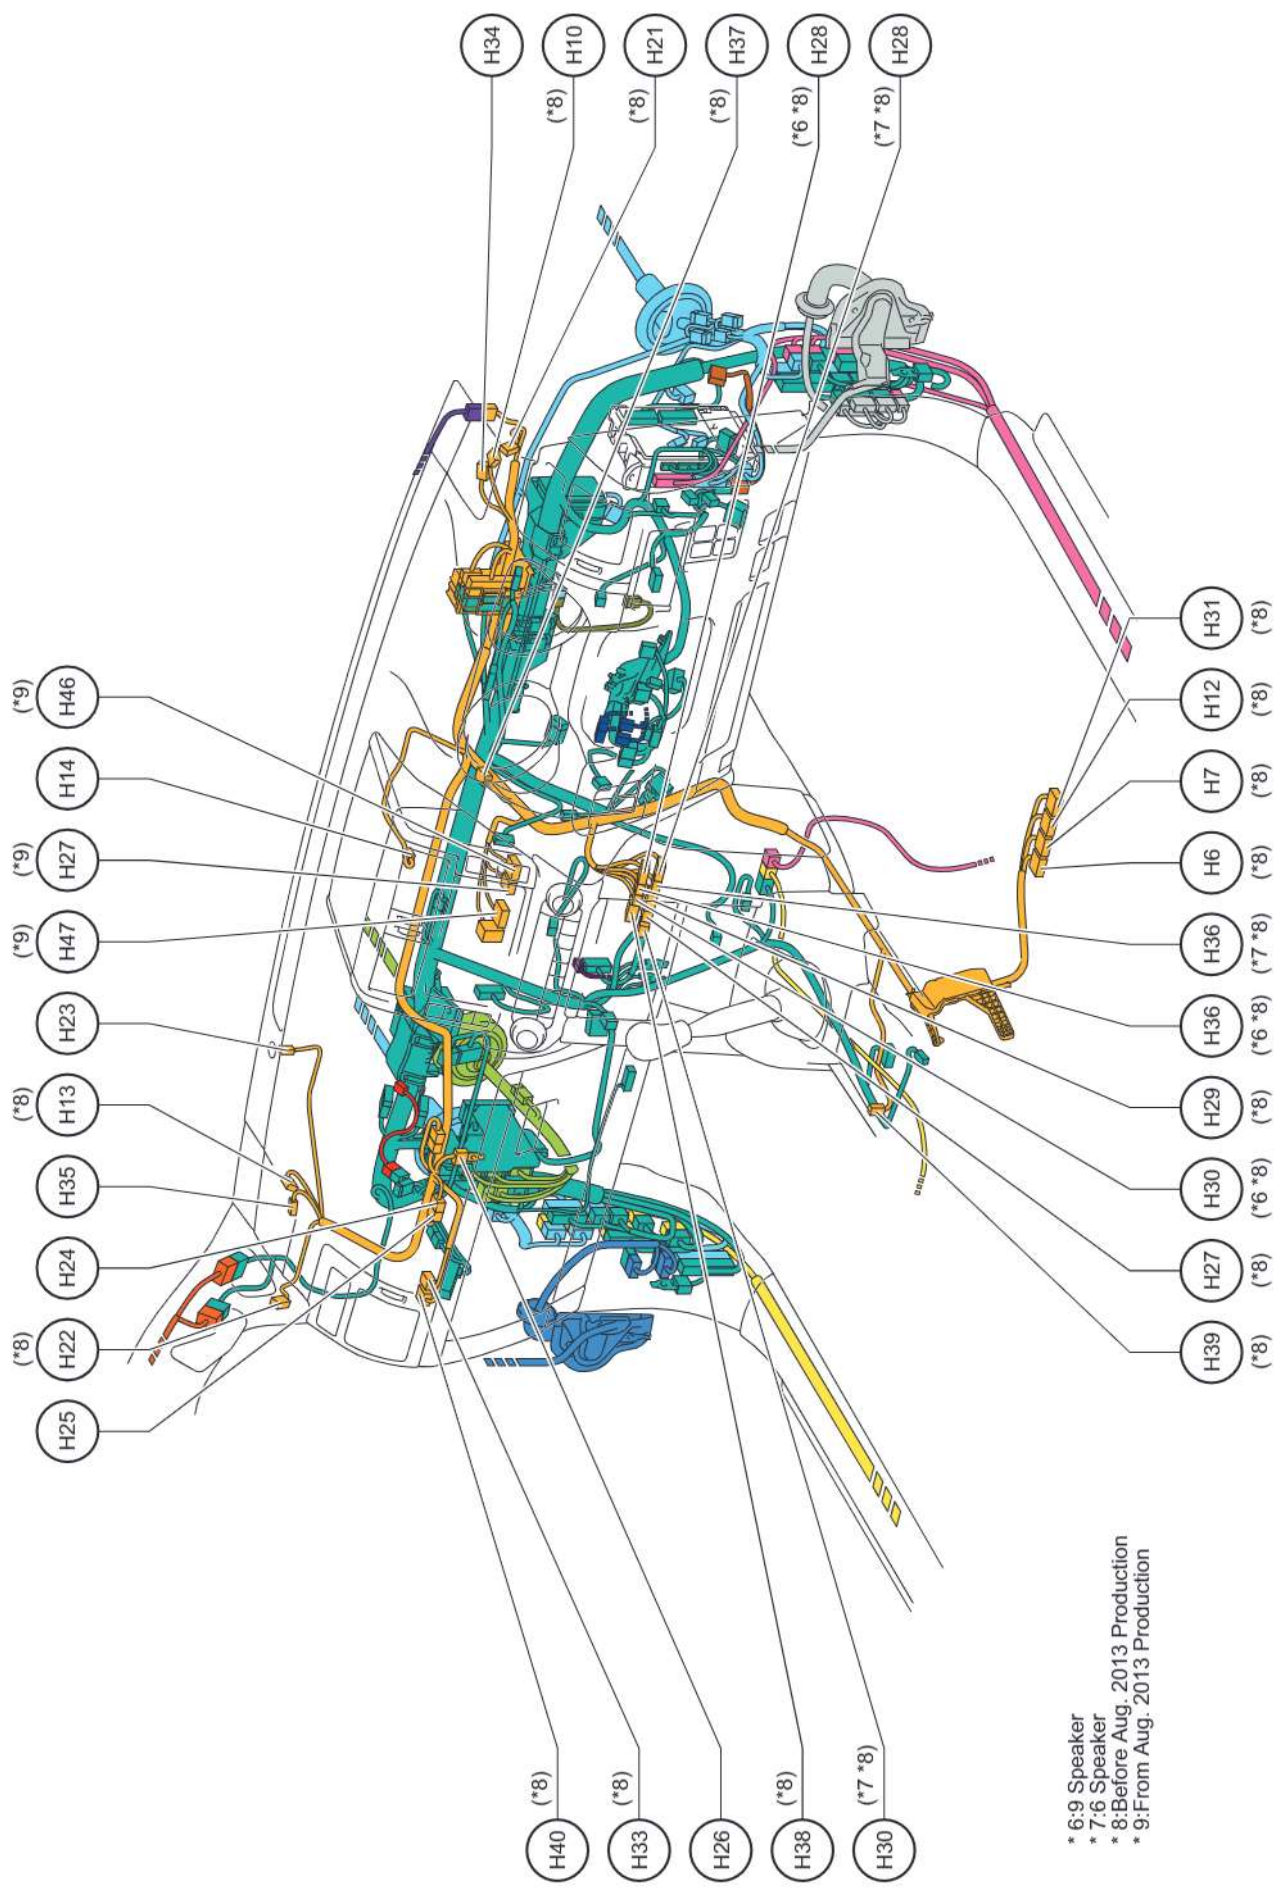





















\* 6:9 Speaker  
 \* 7:6 Speaker  
 \* 8: Before Aug. 2013 Production  
 \* 9: From Aug. 2013 Production

Position of Parts in Instrument Panel <RHD Front Bench Seat>

---

- H 6 Stereo Component Amplifier Assembly
- H 7 Stereo Component Amplifier Assembly
- H 10 Front No. 1 Speaker Assembly RH
- H 12 Stereo Component Amplifier Assembly
- H 13 Front No. 1 Speaker Assembly LH
- H 14 Front No. 4 Speaker Assembly
- H 21 Front No. 3 Speaker Assembly RH
- H 22 Front No. 3 Speaker Assembly LH
- H 23 Theft Warning Indicator Light Assembly
- H 24 Junction Connector
- H 25 Junction Connector
- H 26 Junction Connector
- H 27 Radio Receiver Assembly
- H 28 Radio Receiver Assembly
- H 29 Radio Receiver Assembly
- H 30 Radio Receiver Assembly
- H 31 Stereo Component Amplifier Assembly
- H 33 Multi-Media Interface ECU
- H 34 Front No. 2 Speaker Assembly RH
- H 35 Front No. 2 Speaker Assembly LH
- H 36 Radio Receiver Assembly
- H 37 Amplifier Antenna Assembly
- H 38 Radio Receiver Assembly
- H 39 No. 1 Stereo Jack Adapter Assembly
- H 40 Multi-Media Interface ECU
- H 46 Radio Receiver Assembly
- H 47 Radio Receiver Assembly

Position of Parts in Instrument Panel <RHD Front Bench Seat>

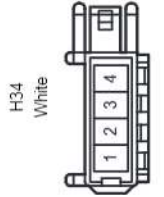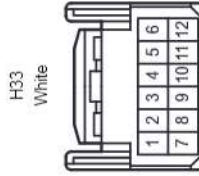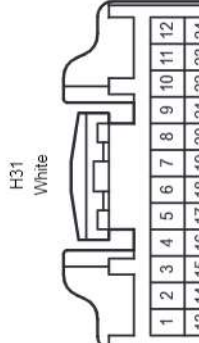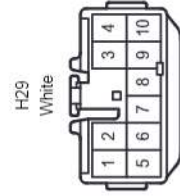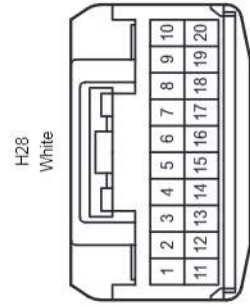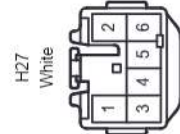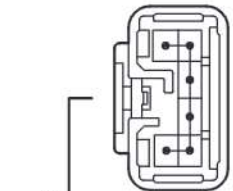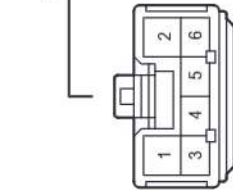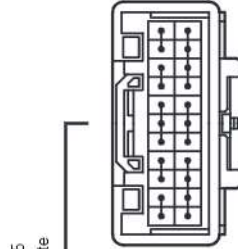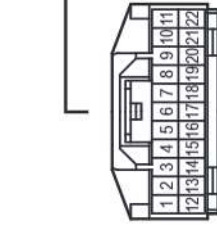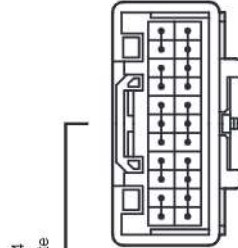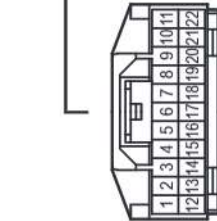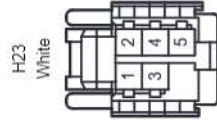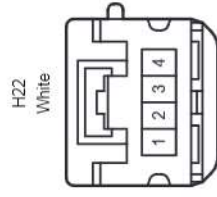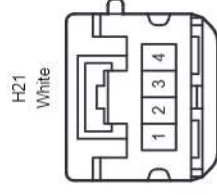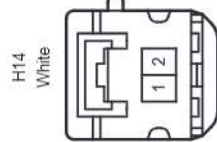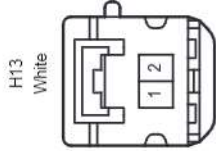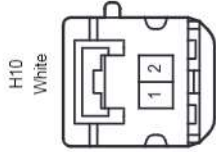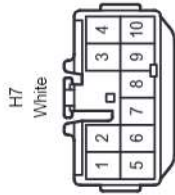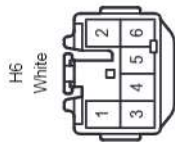


cardiagn.com




Position of Parts in Instrument Panel <RHD Front Bench Seat>

 H35  
White




H36  
White

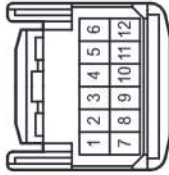


H37  
White




H38  
White

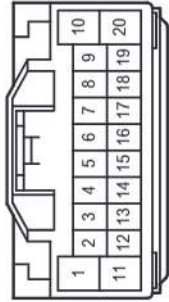


H39  
Black

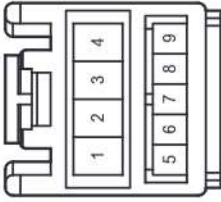


H40  
Brown

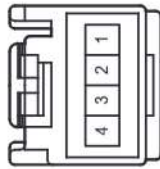


H46  
White

 


H47  
White

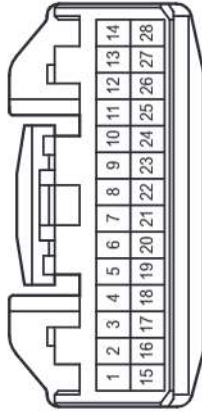

Wire and Wire in Instrument Panel <RHD Front Bench Seat>

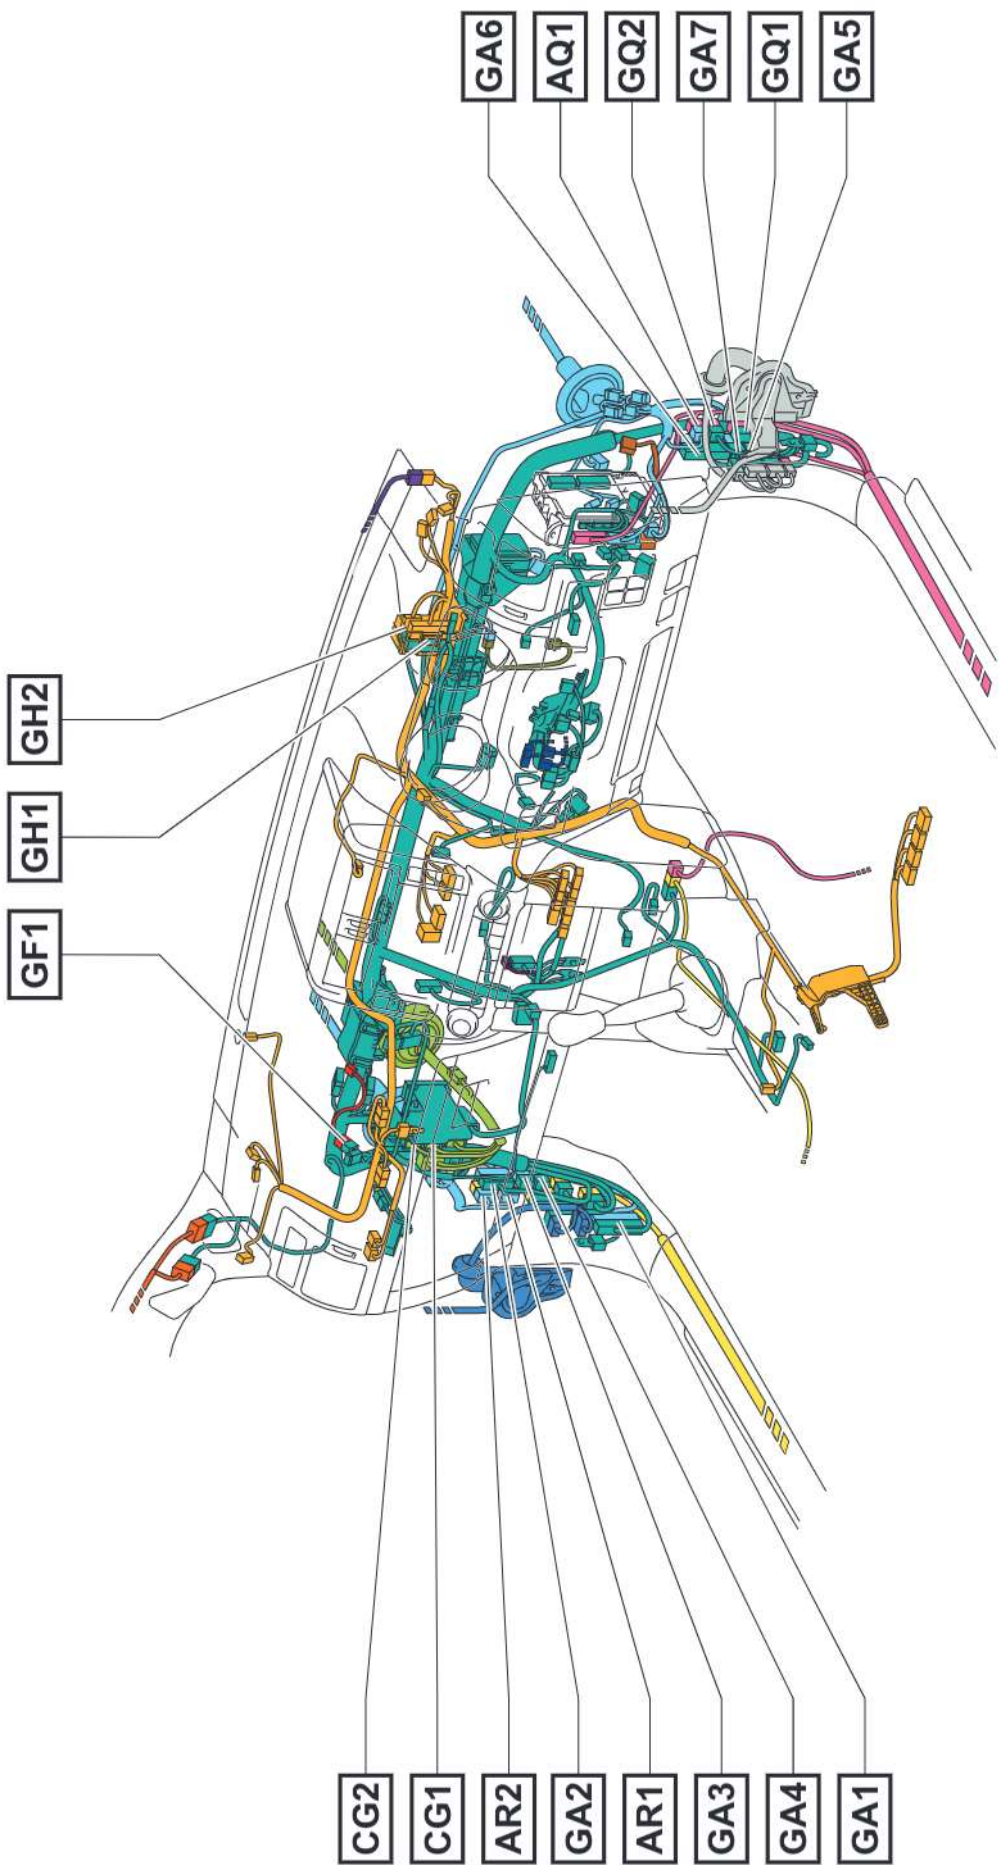


Wire and Wire in Instrument Panel <RHD Front Bench Seat>

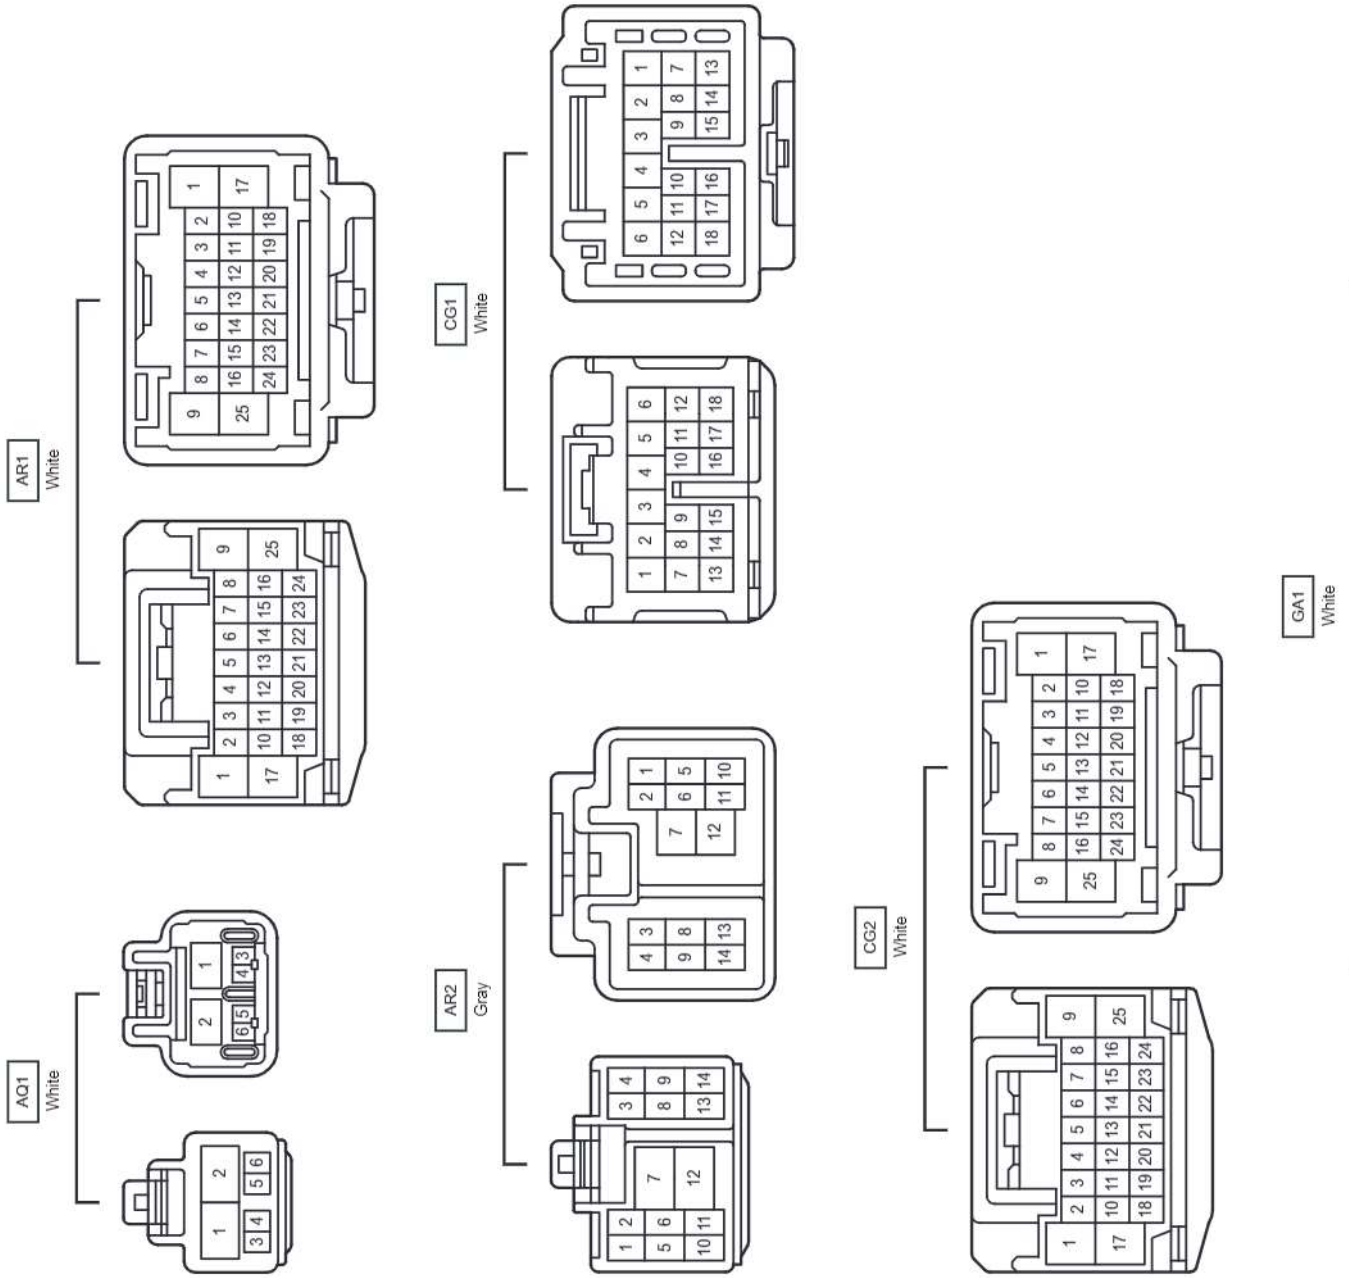


Wire and Wire in Instrument Panel <RHD Front Bench Seat>


GA2  
White

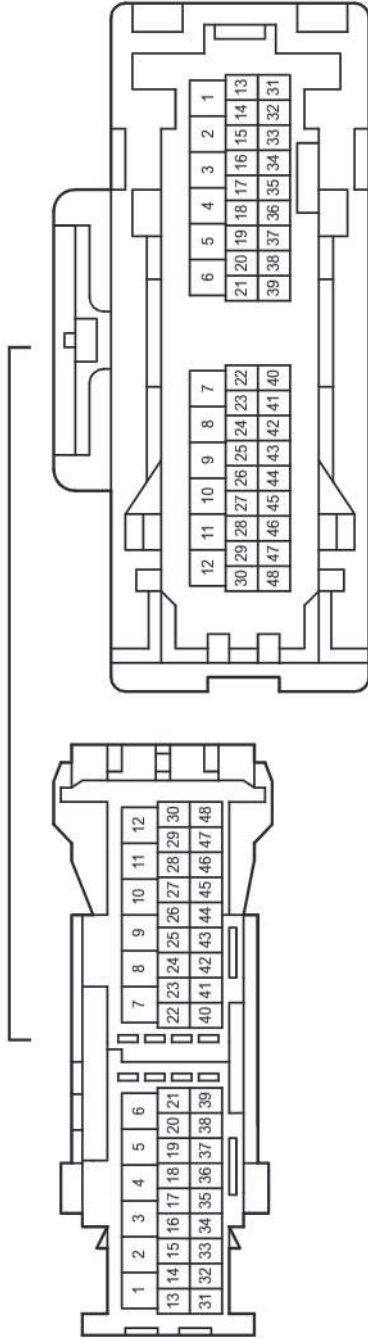


GA3  
Black

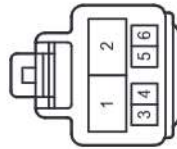


GA4  
White

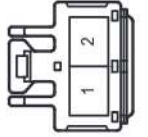

GA5  
Yellow

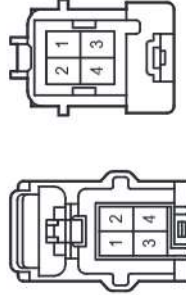


GA6  
White

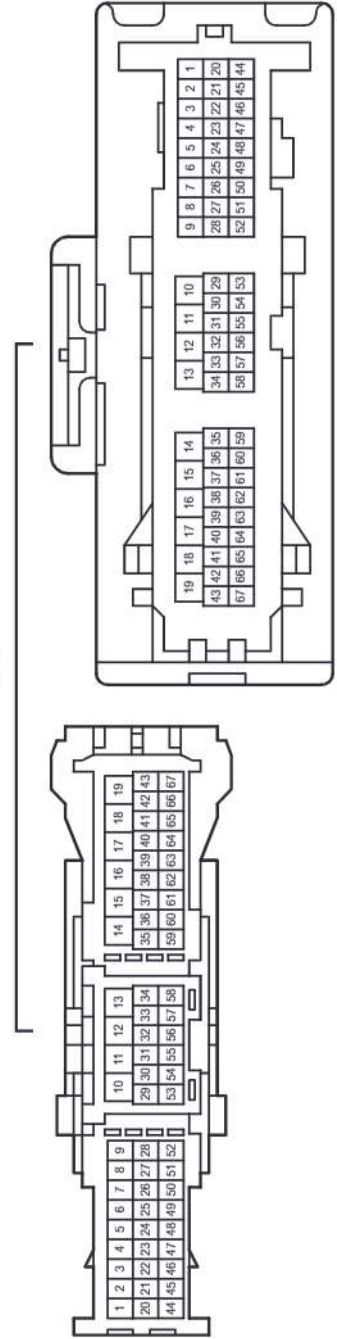


Wire and Wire in Instrument Panel <RHD Front Bench Seat>


GH1  
White

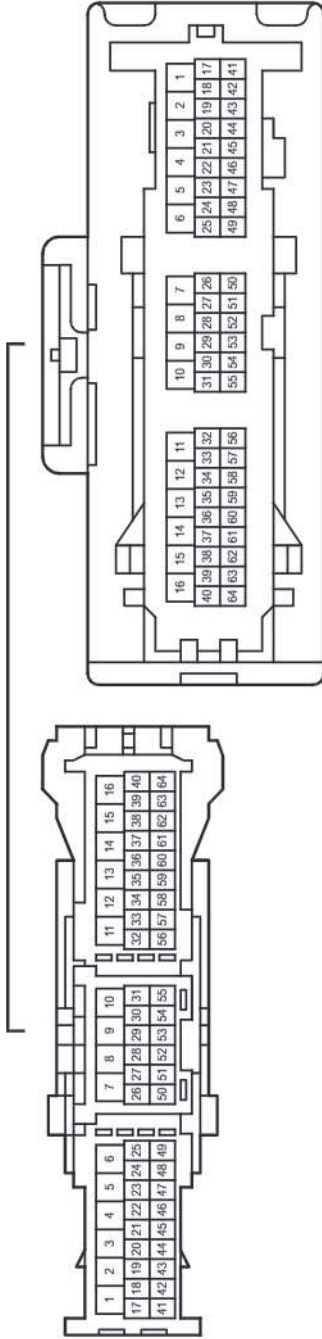


GH2  
White

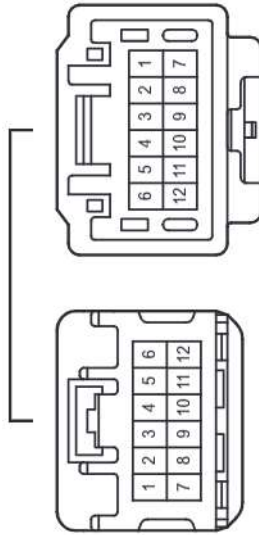


GQ1  
White

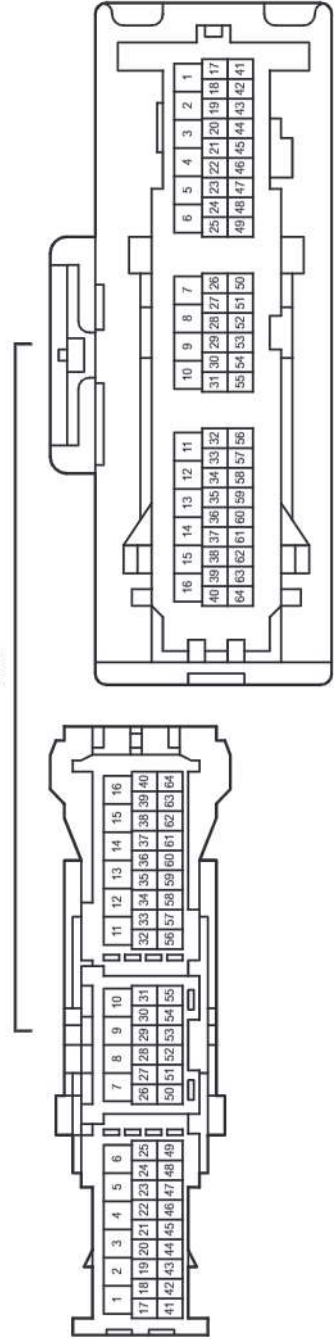


GQ2  
White

 


Wire and Wire in Instrument Panel <RHD Front Bench Seat>

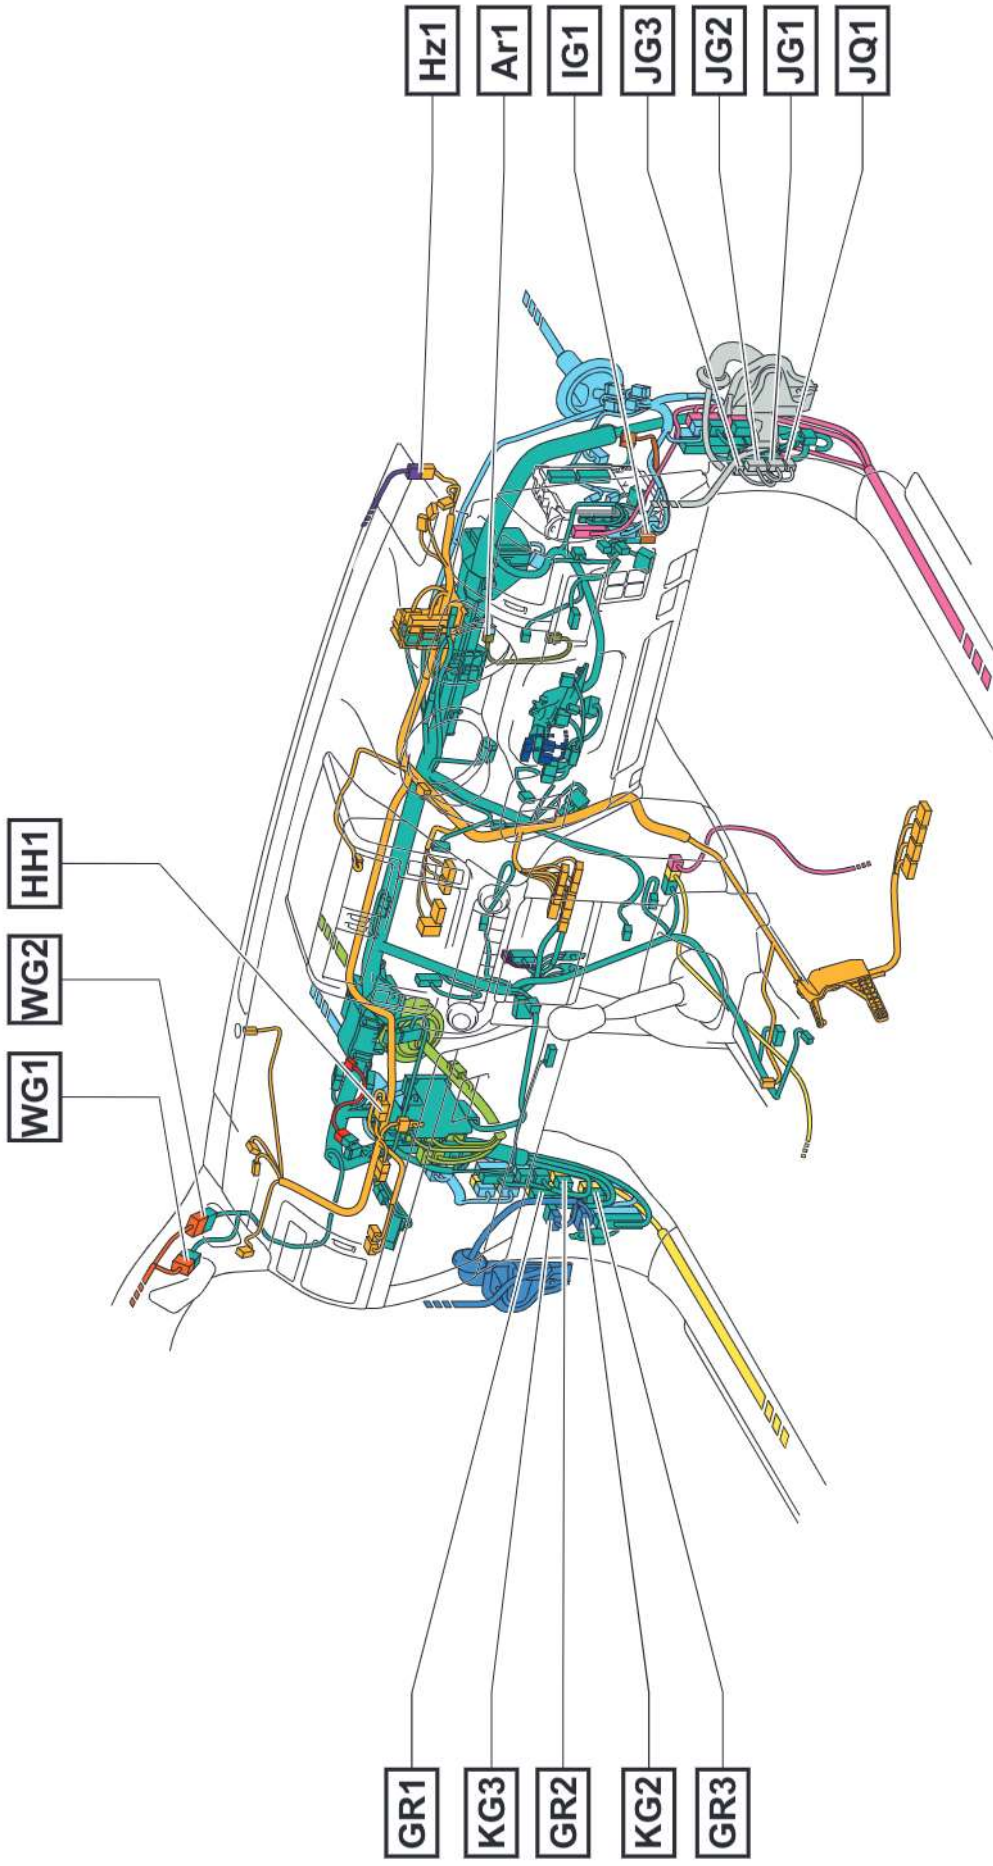


Wire and Wire in Instrument Panel <RHD Front Bench Seat>

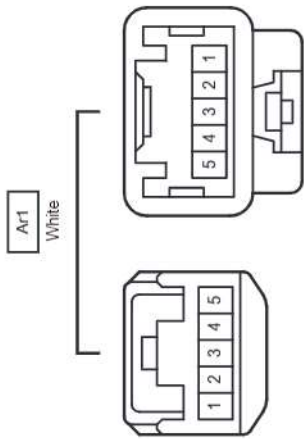

GR1  
White

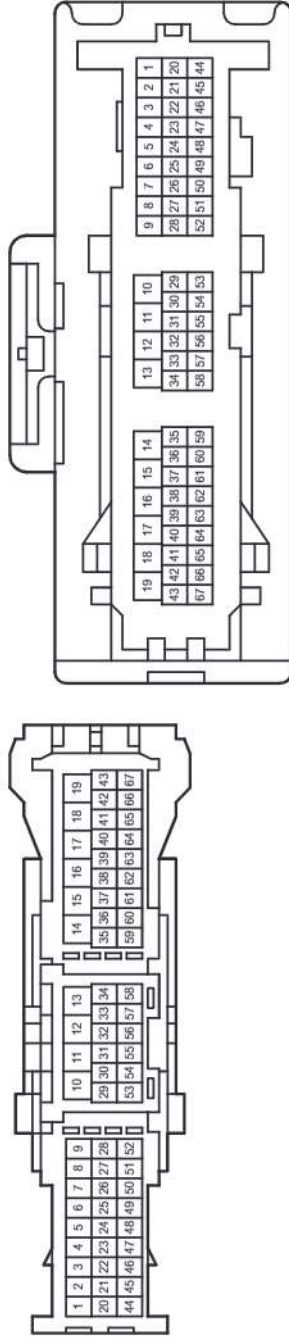

GR2  
Gray

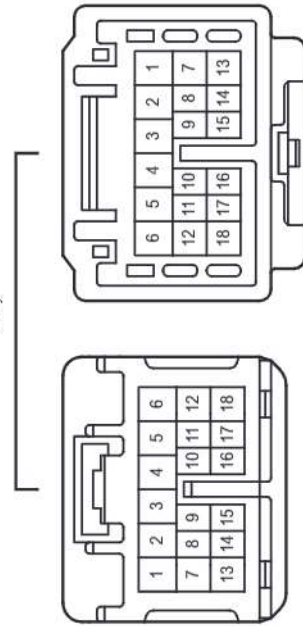


GR3  
Blue

HH1  
White




Wire and Wire in Instrument Panel <RHD Front Bench Seat>


Hz1  
Blue

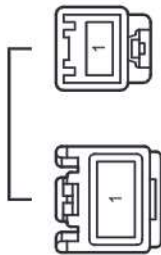


IG1  
White

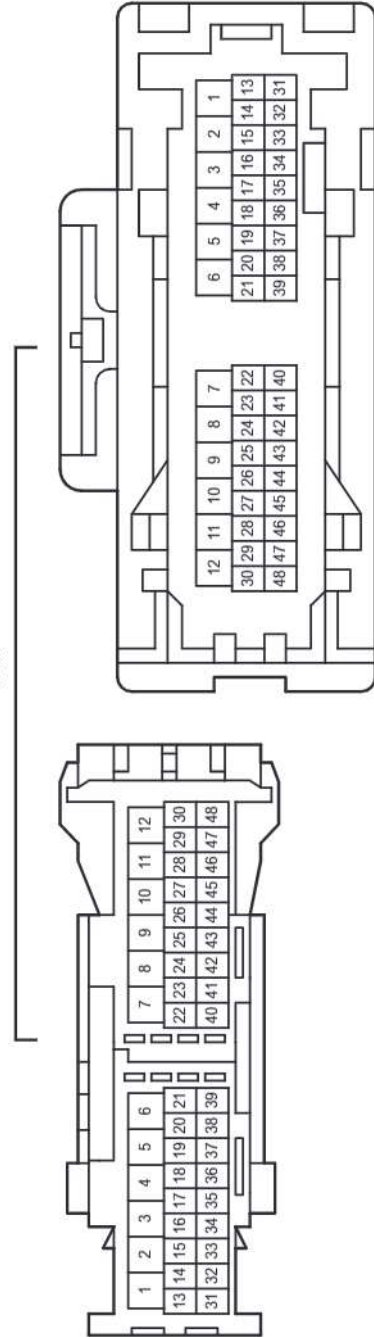

JG1  
Gray

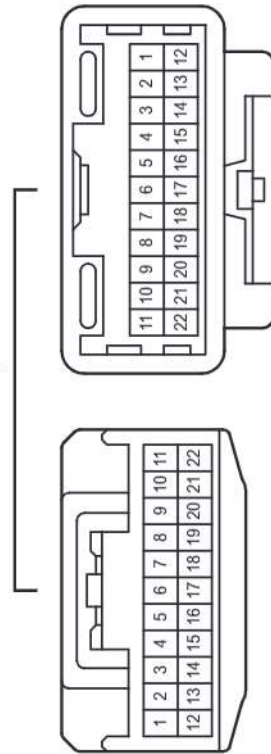



JG2  
White

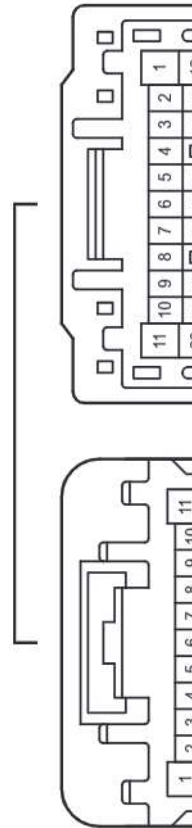





Wire and Wire in Instrument Panel <RHD Front Bench Seat>



JG3  
Black

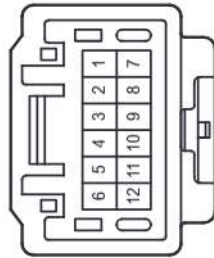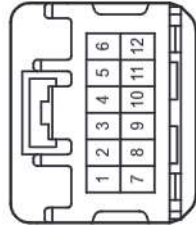



JQ1  
Yellow

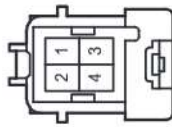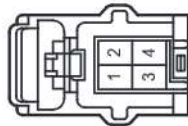





KG2  
White

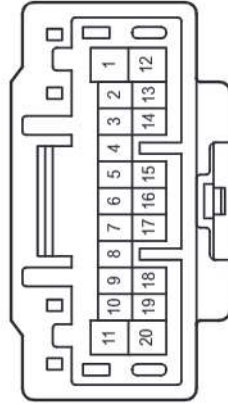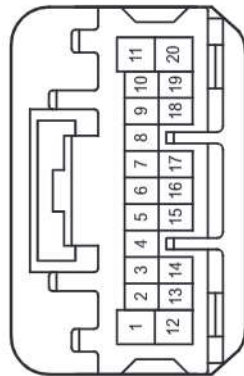

KG3  
Black

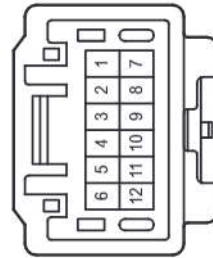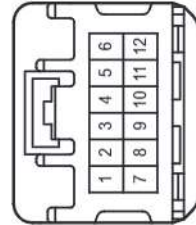


WG1  
White

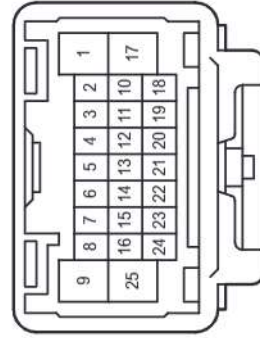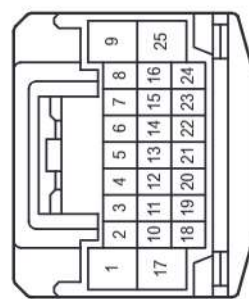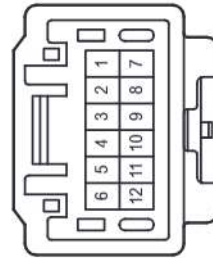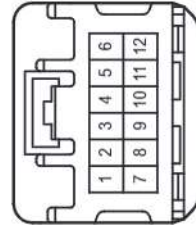


WG2  
White



Ground Points in Instrument Panel <LHD Front Separate Seat>

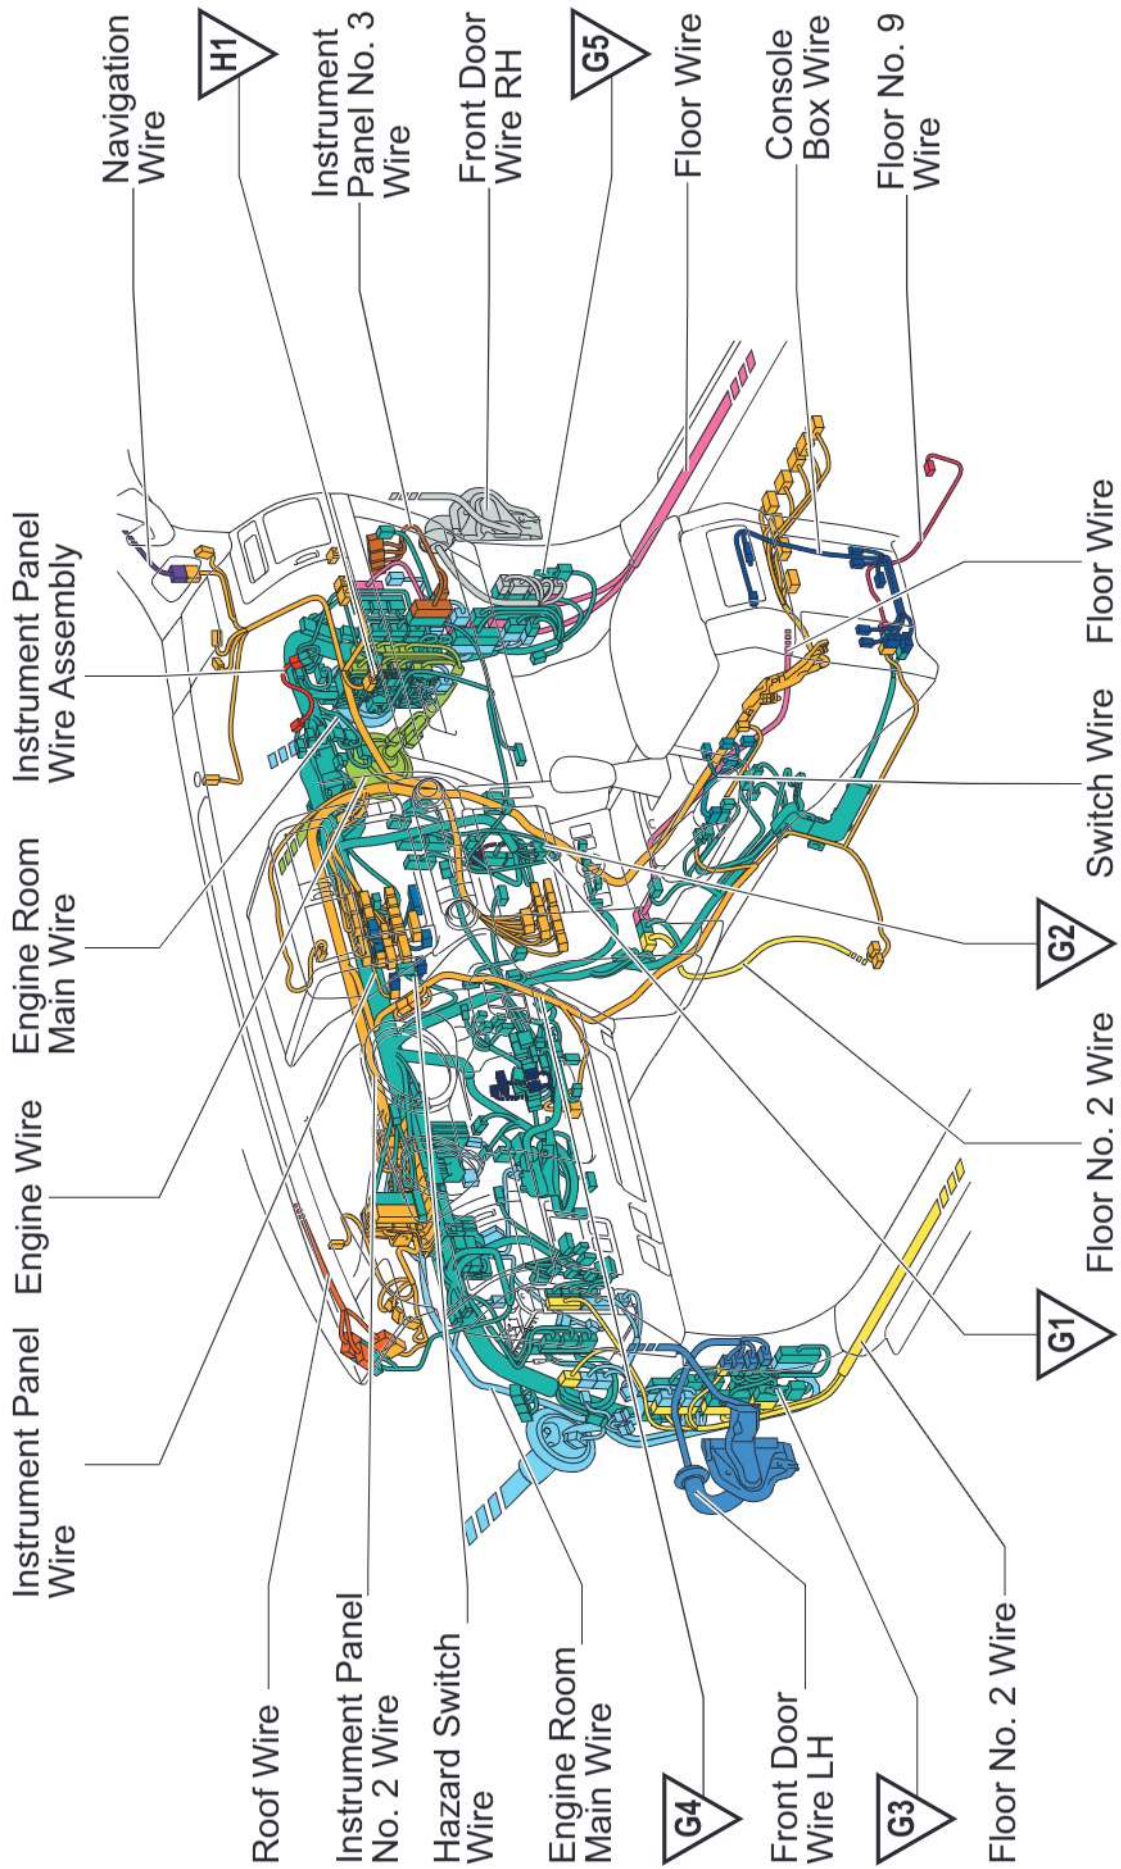


Position of Parts in Instrument Panel <LHD Front Separate Seat>

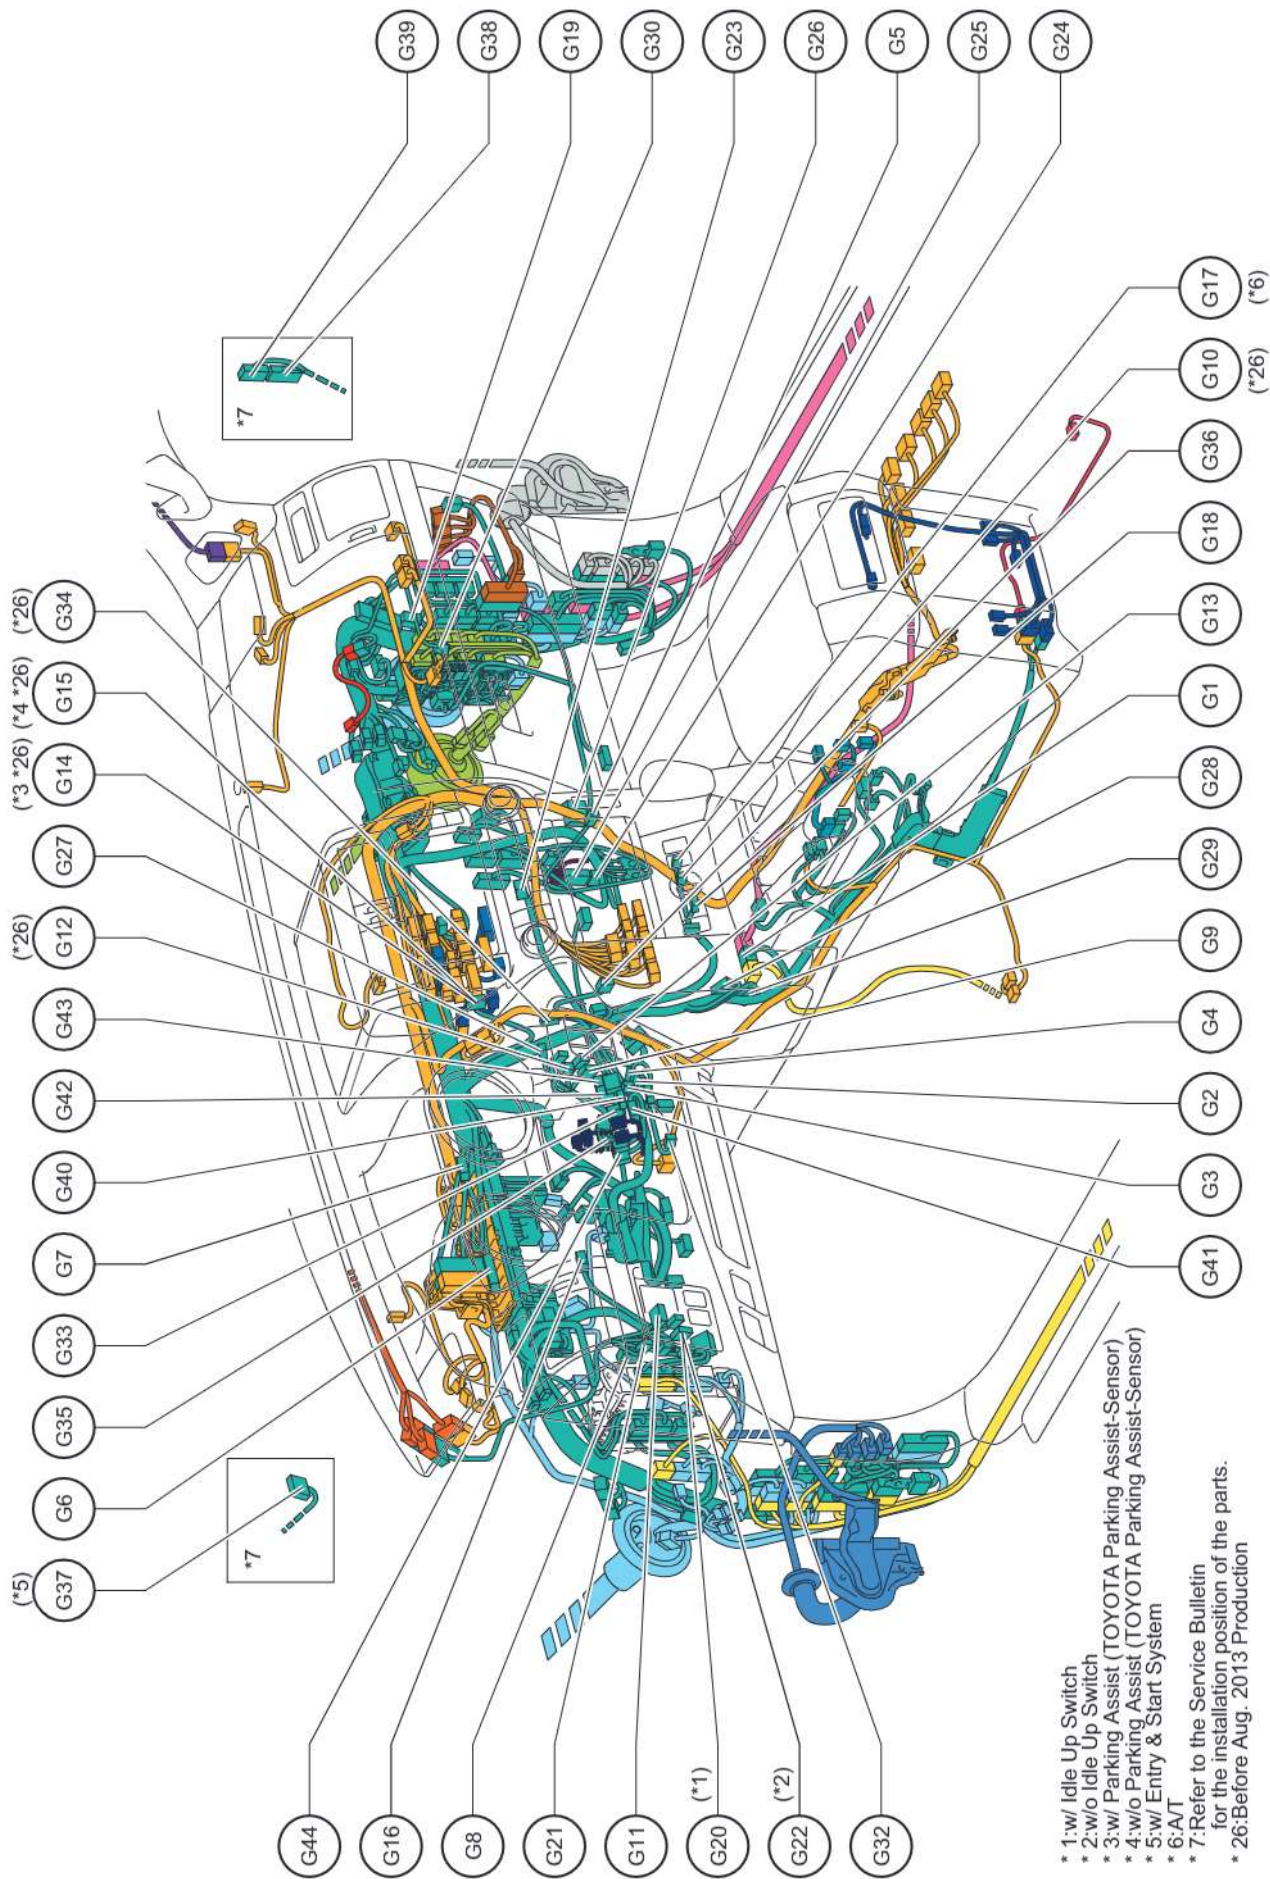

- \* 1:w/ Idle Up Switch
- \* 2:w/o Idle Up Switch
- \* 3:w/ Parking Assist (TOYOTA Parking Assist-Sensor)
- \* 4:w/o Parking Assist (TOYOTA Parking Assist-Sensor)
- \* 5:w/ Entry & Start System
- \* 6:A/T
- \* 7:Refer to the Service Bulletin for the installation position of the parts.
- \* 26:Before Aug. 2013 Production

- G 1 Airbag Sensor Assembly
- G 2 Ignition or Starter Switch Assembly
- G 3 Un-Lock Warning Switch Assembly
- G 4 Key Inter Lock Solenoid
- G 5 Telltale Light Assembly
- G 6 Combination Meter Assembly
- G 7 Combination Meter Assembly
- G 8 Turn Signal Flasher Assembly
- G 9 VSC Off Switch
- G 10 Downhill Assist Control Switch
- G 11 Outer Mirror Switch Assembly
- G 12 Pattern Select Switch Assembly
- G 13 Back Sonar or Clearance Sonar Switch Assembly
- G 14 Clearance Warning Indicator Assembly
- G 15 Hazard Warning Signal Switch Assembly
- G 16 Trip Switch
- G 17 Center Differential Lock Switch
- G 18 Transfer Position Switch
- G 19 Option Connector
- G 20 Idle Up Switch
- G 21 Headlight Leveling Switch
- G 22 Heater Switch Assembly
- G 23 Integration Control and Panel Assembly
- G 24 A/C Amplifier Assembly
- G 25 A/C Amplifier Assembly
- G 26 Front Blower with Fan Motor Sub-Assembly
- G 27 Intake Air Temperature Sensor
- G 28 Quick Heater Assembly
- G 29 Quick Heater Assembly
- G 30 Glove Box Light
- G 32 Lower No. 1 Instrument Panel Airbag Assembly
- G 33 Steering Sensor
- G 34 No. 1 Clearance Warning Buzzer
- G 35 Steering Lock Actuator Assembly
- G 36 Engine Switch
- G 37 ID Code Box
- G 38 Certification ECU Assembly
- G 39 Certification ECU Assembly


Position of Parts in Instrument Panel <LHD Front Separate Seat>

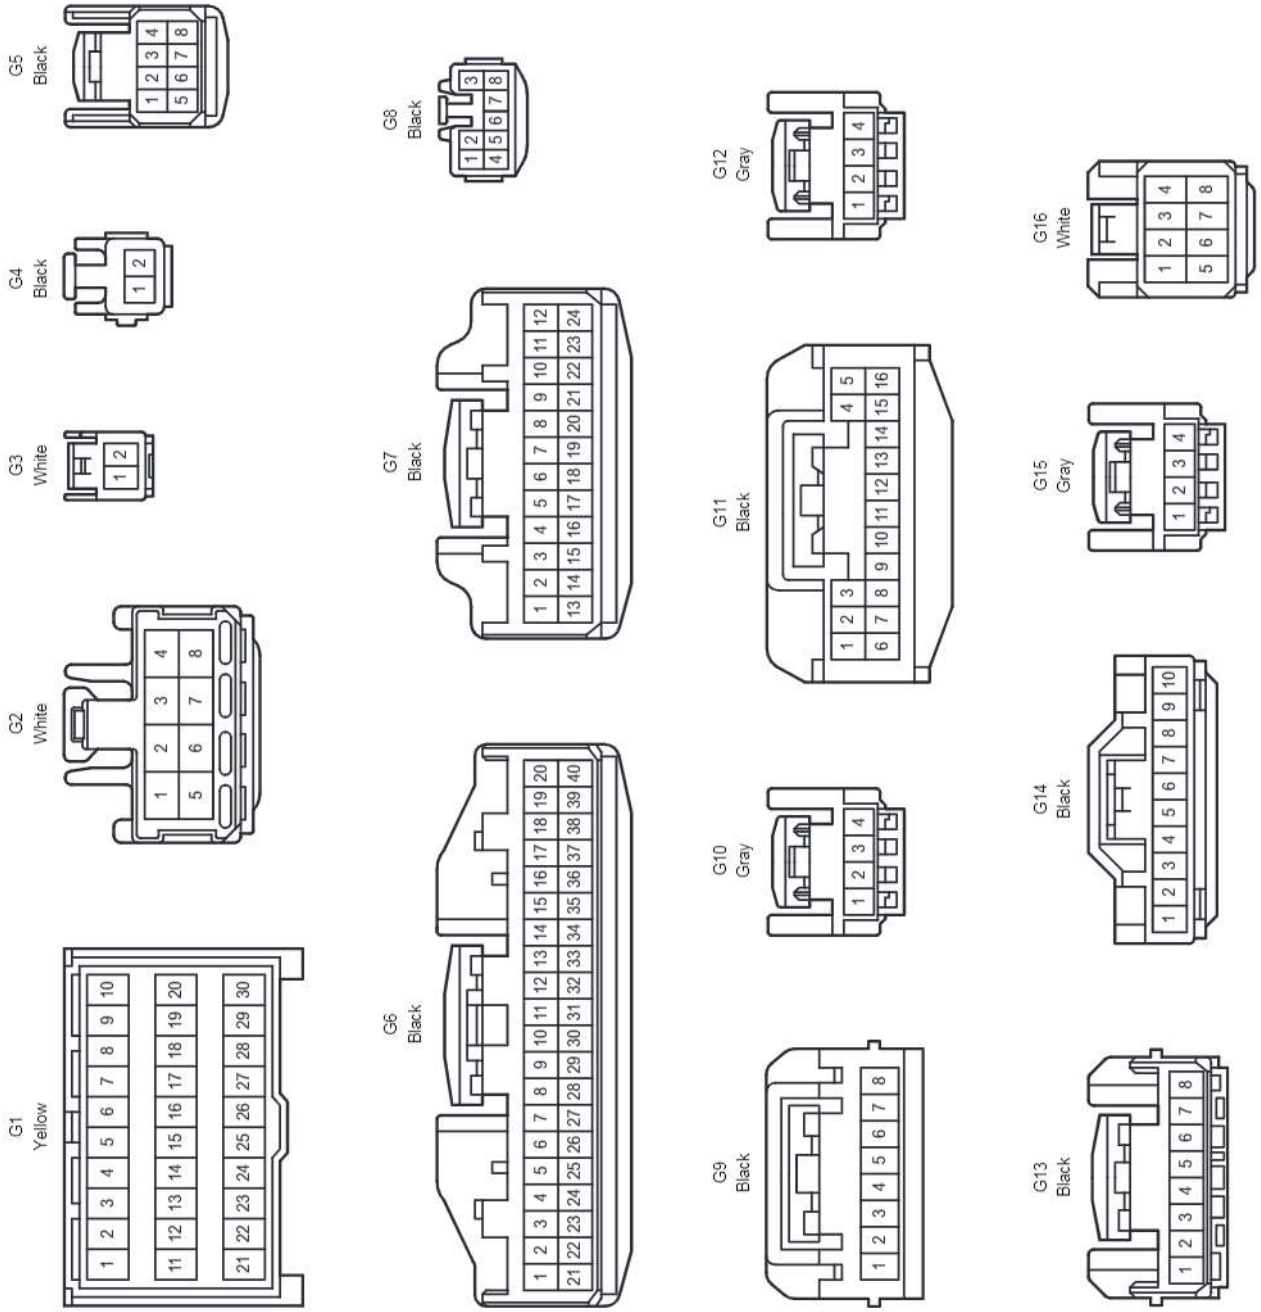


cardiagn.com

Position of Parts in Instrument Panel <LHD Front Separate Seat>


G22  
Black

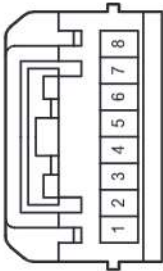


G23  
Black

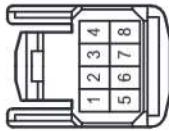


G24  
White

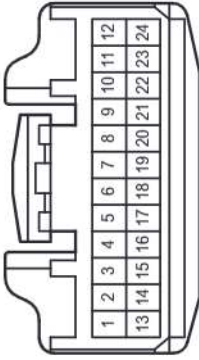


G25  
White

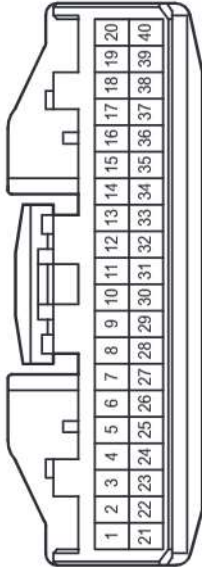


G26  
Black

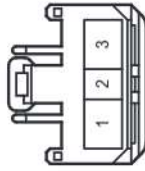


G27  
Black

 

G28  
White

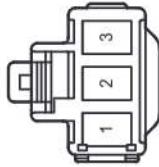


G29  
White

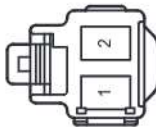


G30  
Black



 G32  
Black




G33  
White

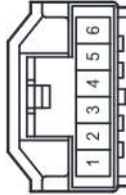


G34  
Blue




G35  
Black

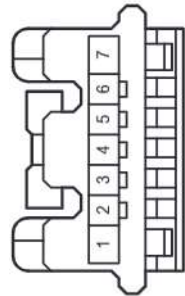

G36  
Black

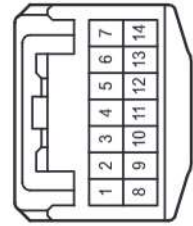


G37  
White

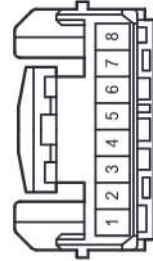

G38  
White




 G39  
White




Position of Parts in Instrument Panel <LHD Front Separate Seat>


G40  
Black

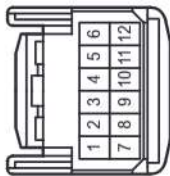


G41  
Yellow

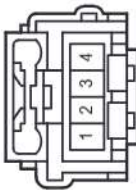


G42  
White

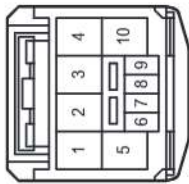

G43  
White

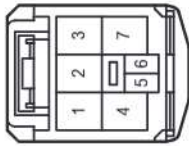

G44  
White

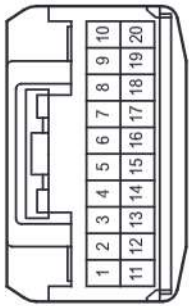







- G 45 Shift Lock Control ECU Sub-Assembly
- G 46 Power Steering ECU Assembly
- G 47 Transmission Control Switch
- G 48 DLC3
- G 49 Double Lock Door Control Relay Assembly
- G 50 Power Management Control ECU
- G 51 Power Management Control ECU
- G 52 Yaw Rate Sensor Assembly
- G 53 Four Wheel Drive Control ECU
- G 54 Four Wheel Drive Control ECU
- G 55 ECM
- G 56 ECM
- G 57 ECM
- G 58 ECM
- G 59 ECM
- G 60 ECM
- G 61 ECM
- G 62 ECM
- G 63 Main Body ECU
- G 64 Main Body ECU
- G 65 Main Body ECU
- G 66 Outer Mirror Heater Switch Assembly
- G 67 Shift Position Indicator (Console Box Assembly)
- G 68 Diode (Shift Position)
- G 69 Transmission Control ECU Assembly
- G 70 Transmission Control ECU Assembly
- G 71 Transmission Control ECU Assembly
- G 72 Headlight Cleaner Switch Assembly
- G 73 Airbag Cut Off Switch Cylinder Sub-Assembly
- G 74 Transponder Key ECU Assembly
- G 75 Transponder Key Amplifier
- G 76 Driving Support Switch Control ECU
- G 77 Parking Brake Switch Assembly
- G 79 Junction Connector
- G 80 Junction Connector
- G 81 Junction Connector
- G 82 Junction Connector
- G 83 Junction Connector

Position of Parts in Instrument Panel <LHD Front Separate Seat>


G45  
White

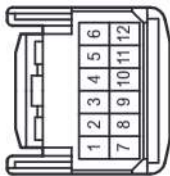


G46  
White

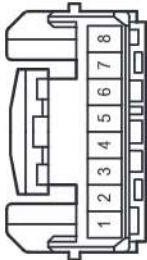


G47  
Black

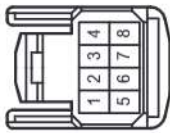


G48  
White

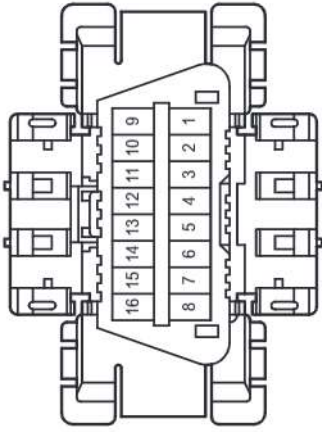


G49  
White

 


G50  
White

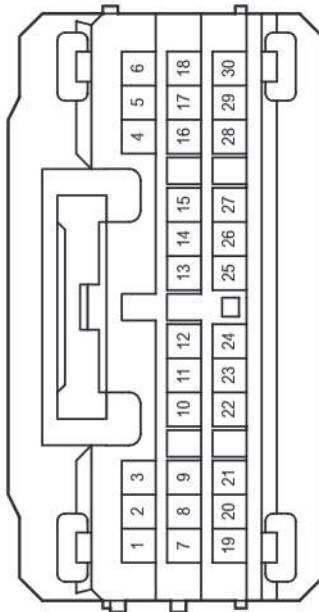

G51  
Black

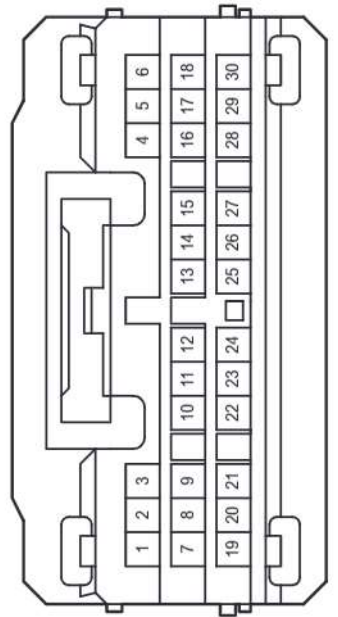


G52  
Black

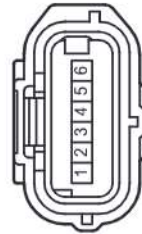


Position of Parts in Instrument Panel <LHD Front Separate Seat>


G53  
Black

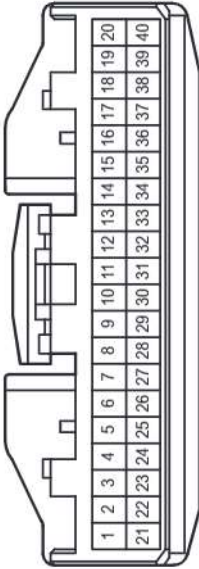


G54  
Black

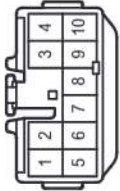


G55  
White

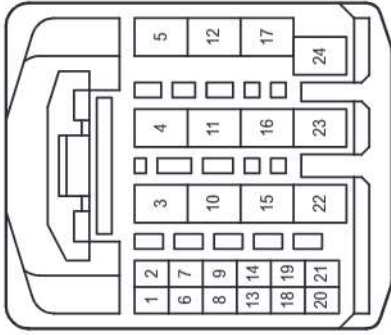


G56  
White

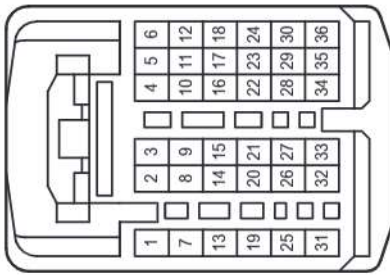


G57  
White

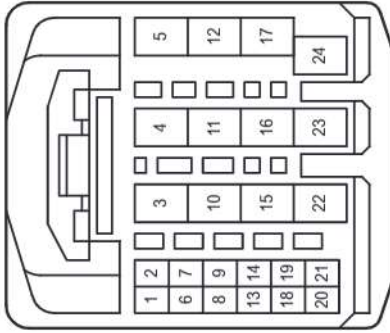


G58  
White

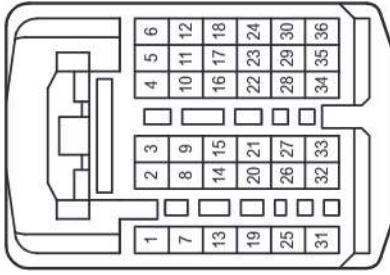


G59  
White

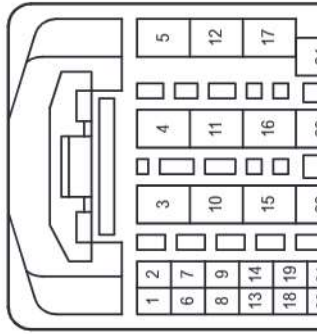


G60  
White

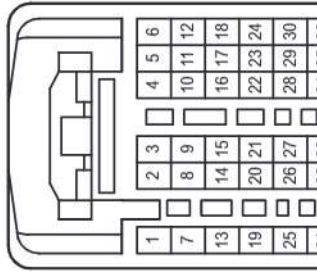

G61  
White

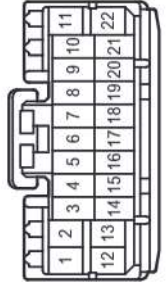


G62  
White

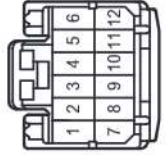


cardiagn.com

Position of Parts in Instrument Panel <LHD Front Separate Seat>


G63  
White

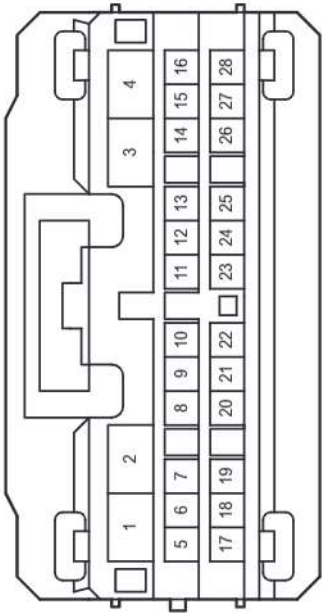


G64  
White

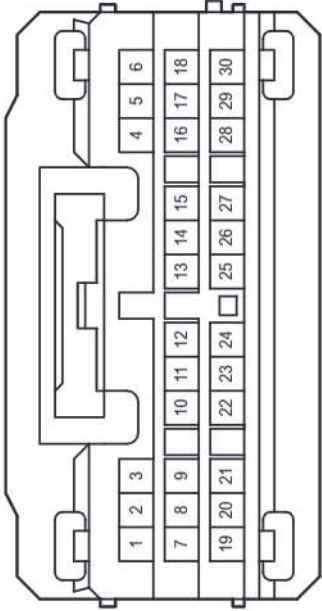


G65  
White

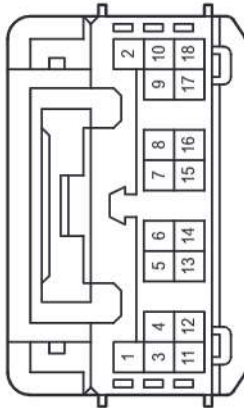


G66  
Black

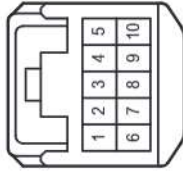


G67  
White

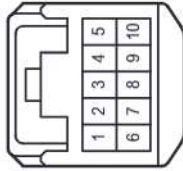


G68  
Gray

 


G69  
White

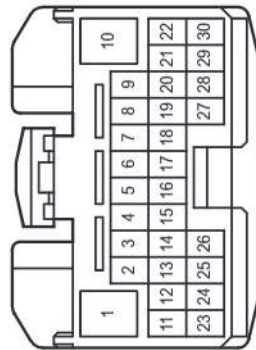


G70  
White

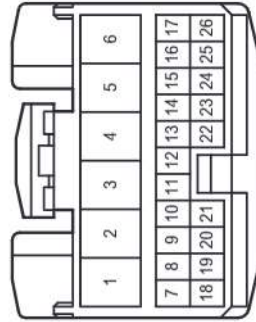

G71  
White

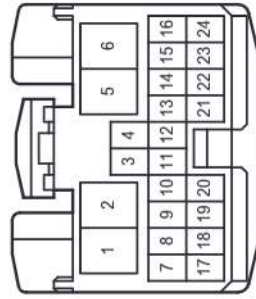


G72  
Black

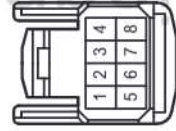


G73  
White




G74  
Black

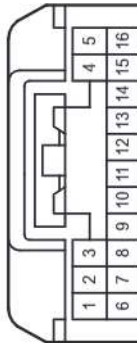

G75  
Black

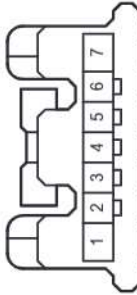

G76  
Black

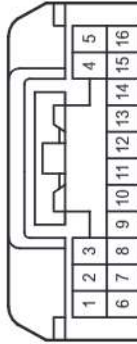


Position of Parts in Instrument Panel <LHD Front Separate Seat>




G77  
White




G79  
White

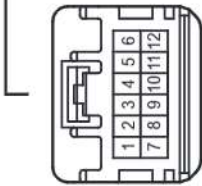




G80  
White

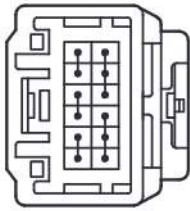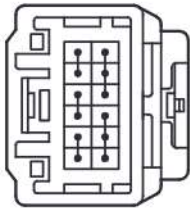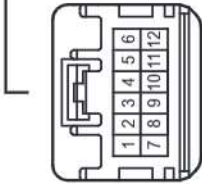


G81  
White

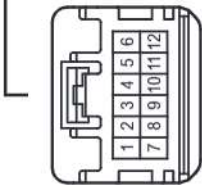




G82  
White

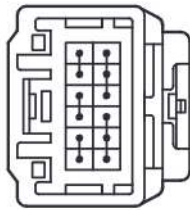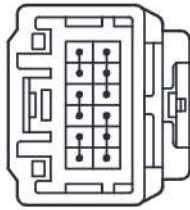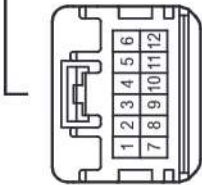


G83  
Black

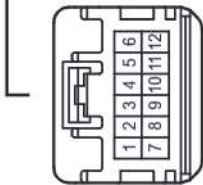

G84  
Black

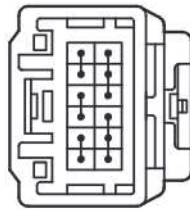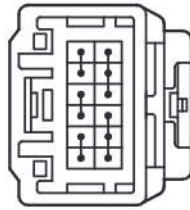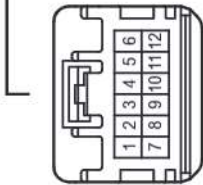

Position of Parts in Instrument Panel <LHD Front Separate Seat>

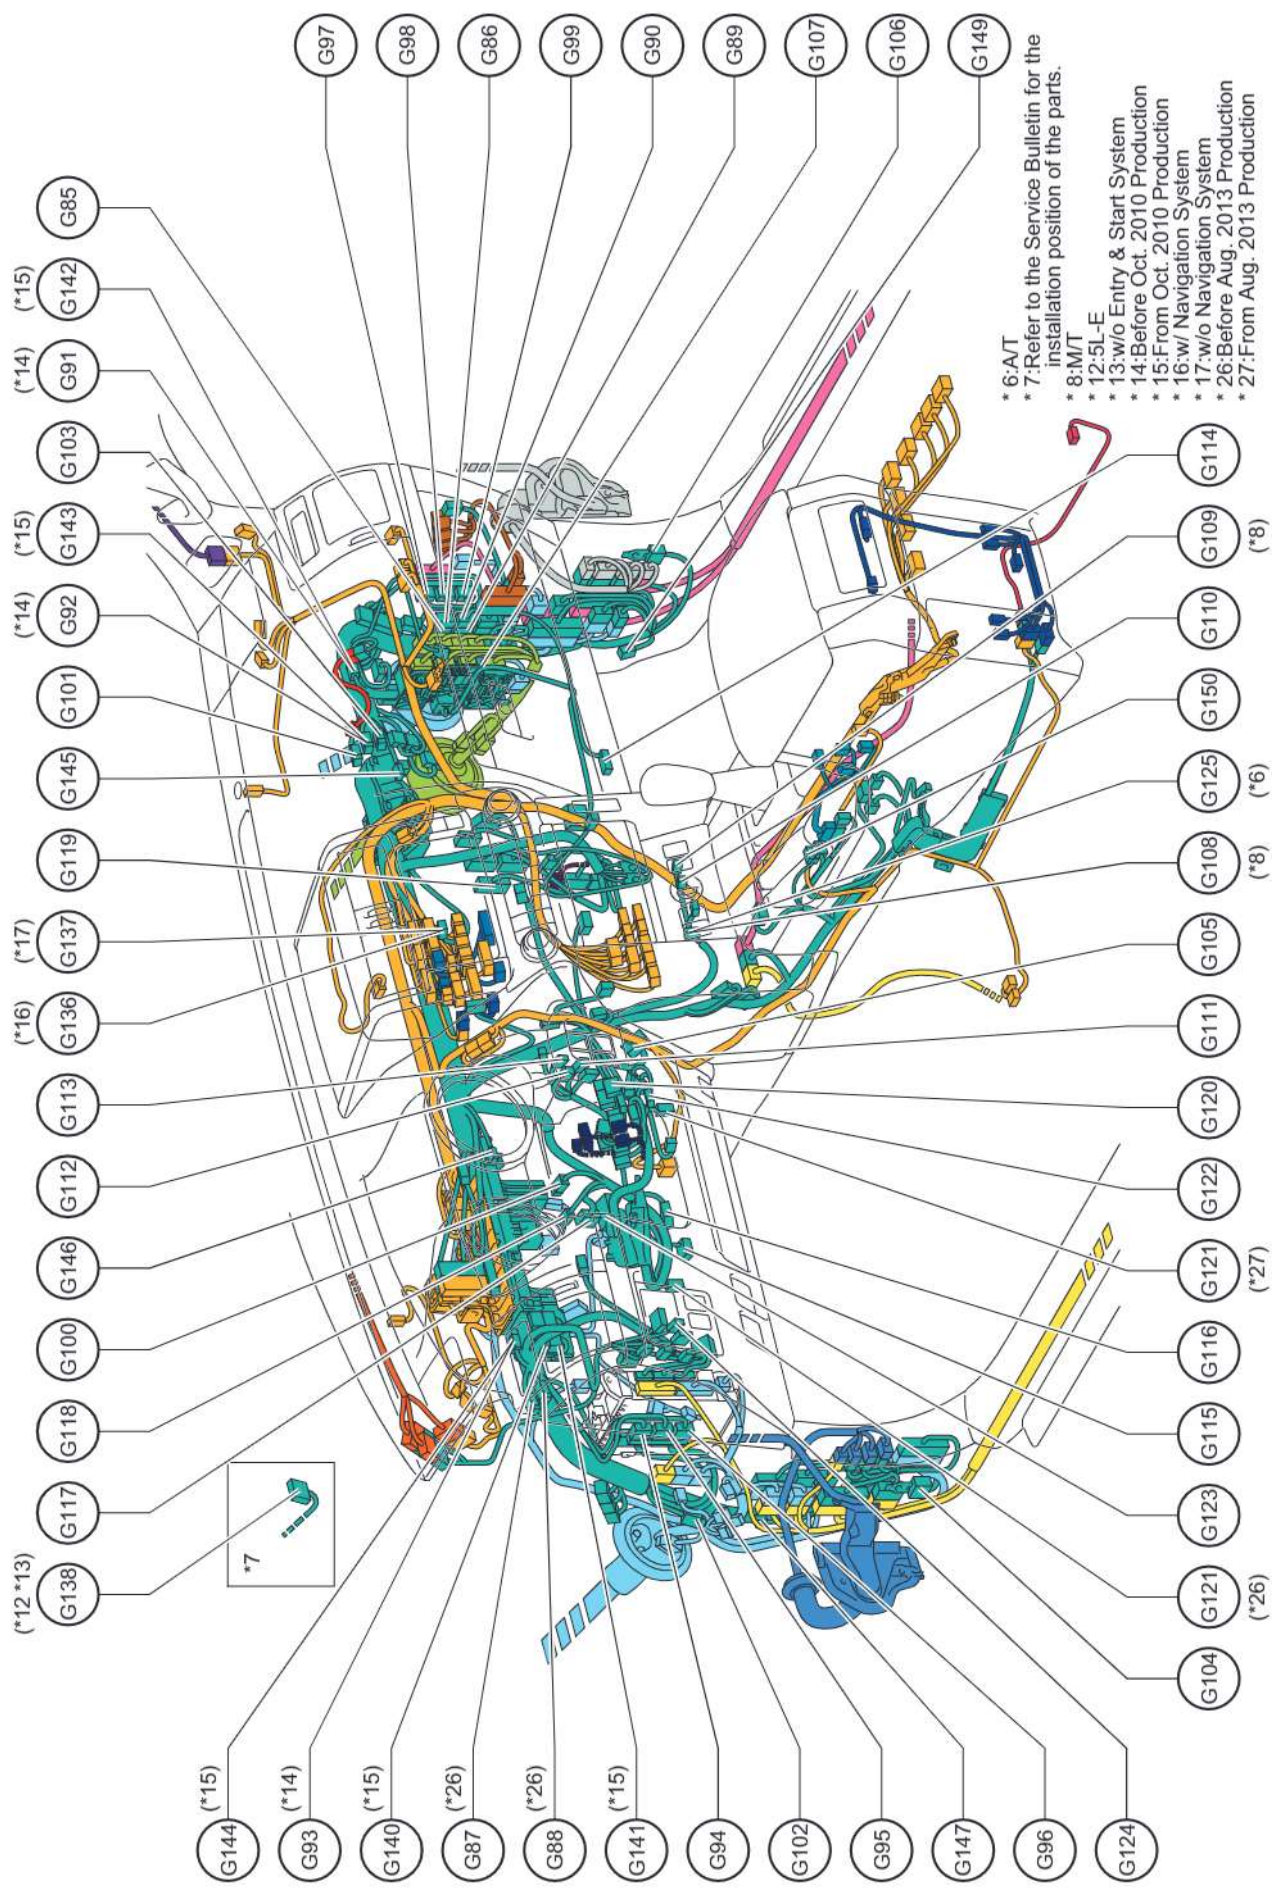

- \* 6:AT
- \* 7:Refer to the Service Bulletin for the installation position of the parts.
- \* 8:M/T
- \* 12:5L-E
- \* 13:w/o Entry & Start System
- \* 14:Before Oct. 2010 Production
- \* 15:From Oct. 2010 Production
- \* 16:w/ Navigation System
- \* 17:w/o Navigation System
- \* 26:Before Aug. 2013 Production
- \* 27:From Aug. 2013 Production

- G 85 Junction Connector
- G 86 Junction Connector
- G 87 Junction Connector
- G 88 Junction Connector
- G 89 Junction Connector
- G 90 Junction Connector
- G 91 Junction Connector
- G 92 Junction Connector
- G 93 Junction Connector
- G 94 Junction Connector
- G 95 Junction Connector
- G 96 Junction Connector
- G 97 Junction Connector
- G 98 Junction Connector
- G 99 Junction Connector
- G100 Junction Connector
- G101 Junction Terminal
- G102 Junction Terminal
- G103 Junction Terminal
- G104 Junction Connector
- G105 Junction Connector
- G106 Junction Connector
- G107 Junction Connector
- G108 Seat Heater Switch LH
- G109 Seat Heater Switch RH
- G110 Differential Lock Switch
- G111 Suspension Control Switch
- G112 No. 2 Absorber Control Switch
- G113 Absorber Control Switch
- G114 Interior Foot Light RH
- G115 Interior Foot Light LH
- G116 Multiplex Tilt & Telescopic ECU
- G117 Seat Belt Control ECU
- G118 Seat Belt Control ECU
- G119 Driving Support ECU Assembly
- G120 Windshield Wiper Switch Assembly
- G121 Pre-Crash System Cancel Switch Assembly
- G122 Power Tilt Motor

Position of Parts in Instrument Panel <LHD Front Separate Seat>



---

- G146 Diode (Shift Position No. 2)
- G147 Diode (Oil Pressure)
- G149 Diode (Viscous Relay)
- G150 Shift Lock Control ECU Sub-Assembly





Position of Parts in Instrument Panel <LHD Front Separate Seat>



G85  
Black

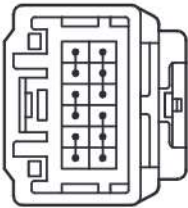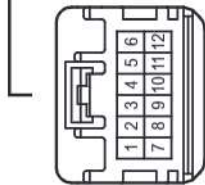



G86  
Black

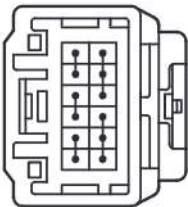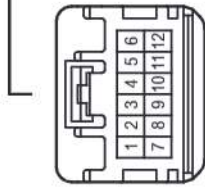



G87  
Black

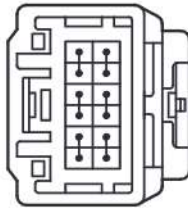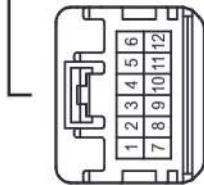



G88  
Black

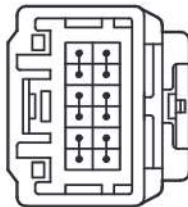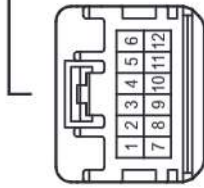



G89  
White

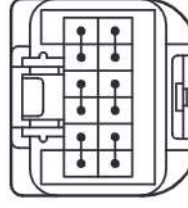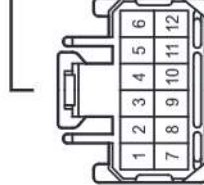

G90  
White

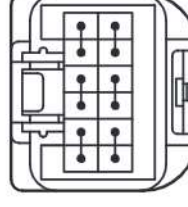
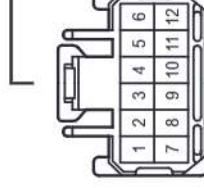


G91  
Gray

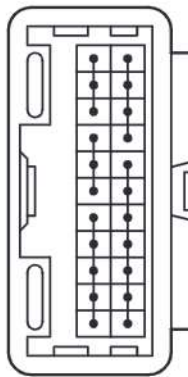
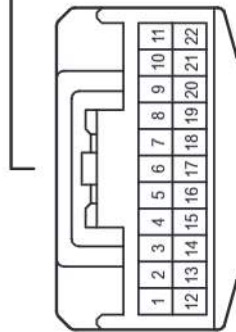


Position of Parts in Instrument Panel <LHD Front Separate Seat>


G92  
White

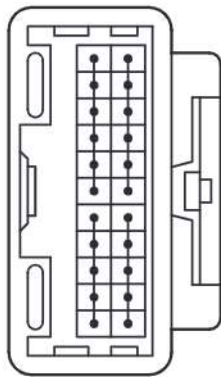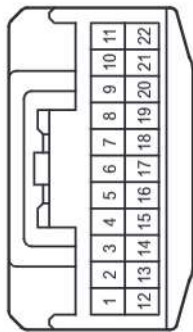



G93  
Gray

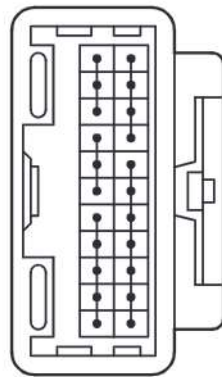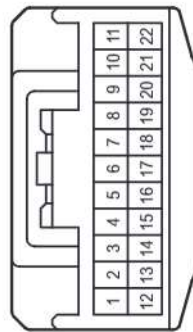


G94  
White

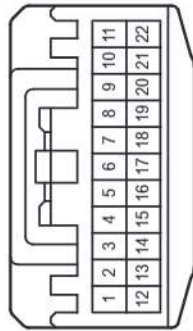


G95  
White

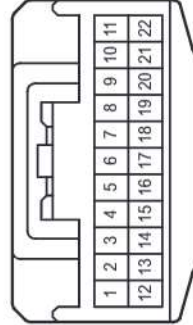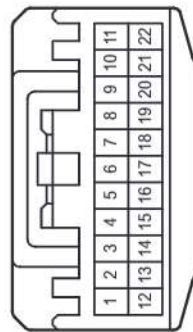



G96  
White

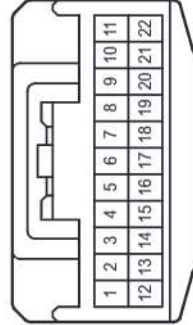


G97  
White

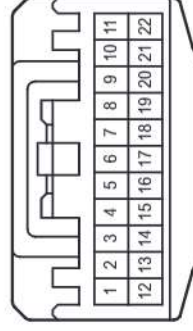

G98  
White

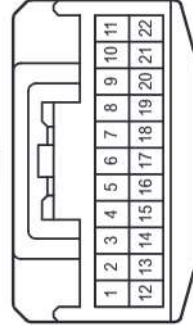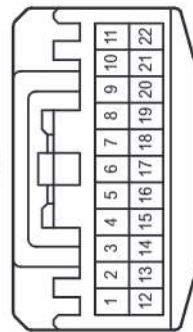


G99  
White

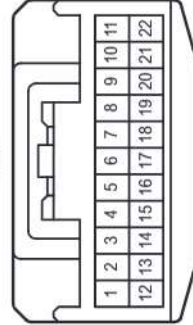


Position of Parts in Instrument Panel <LHD Front Separate Seat>


G104  
White

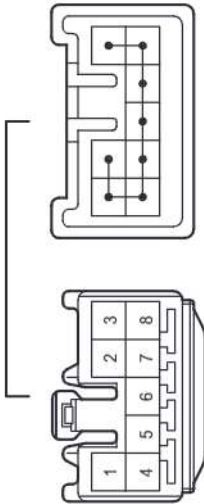


G105  
White

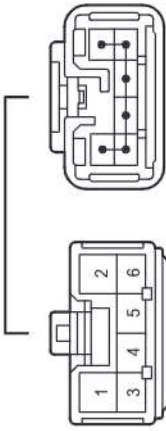


G106  
White

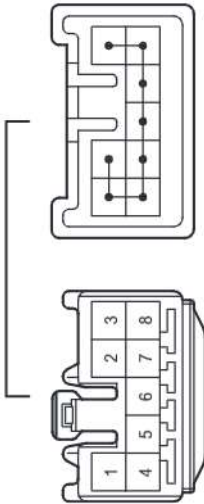


G107  
Blue

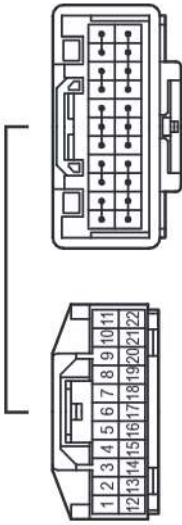


G108  
Black

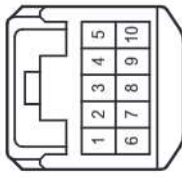


G109  
Black

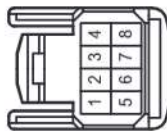


G110  
Black

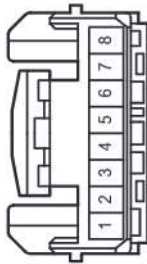


G111  
White

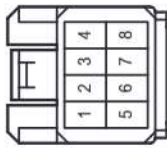

G112  
Black

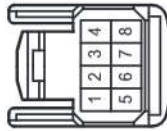

G113  
White

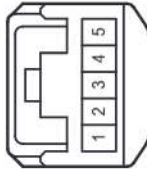


G114  
Black




G115  
Black




G116  
White

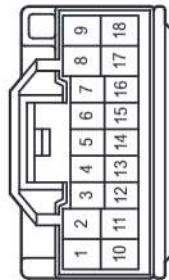


G117  
White

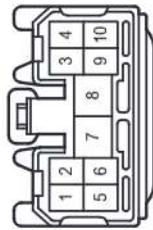


G118  
White

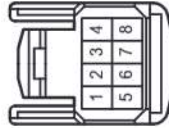


G119  
White

 

G120  
White

 


G121  
Gray

 


cardiagn.com

Position of Parts in Instrument Panel <LHD Front Separate Seat>


G122  
White

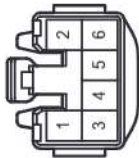


G123  
White

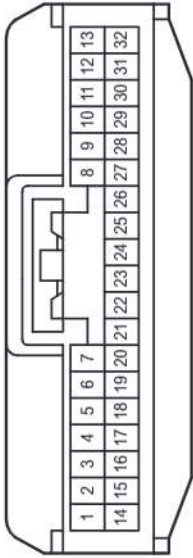


G124  
White

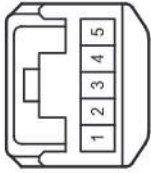


G125  
White

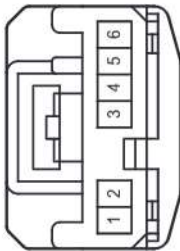


G136  
Blue

 


G137  
Blue

 



G138  
White

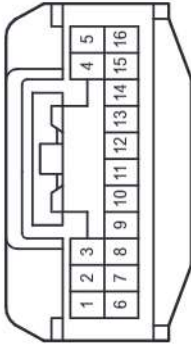



G140  
Black

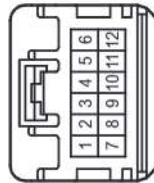

G141  
Black

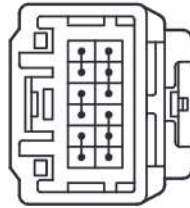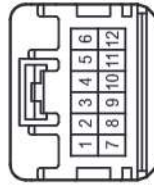


G142  
White

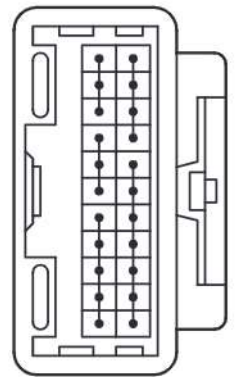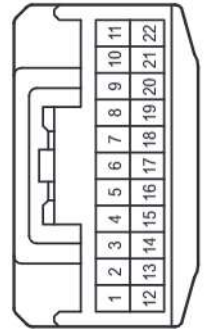

Position of Parts in Instrument Panel <LHD Front Separate Seat>

G144  
White

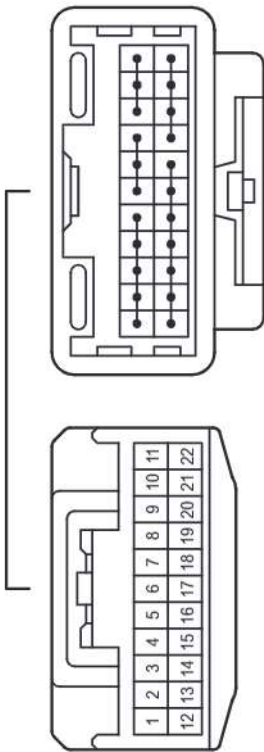

G145  
Gray



G146  
Gray




G147  
Gray




G149  
Gray



G150  
White

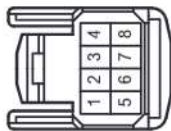


Position of Parts in Instrument Panel <LHD Front Separate Seat>

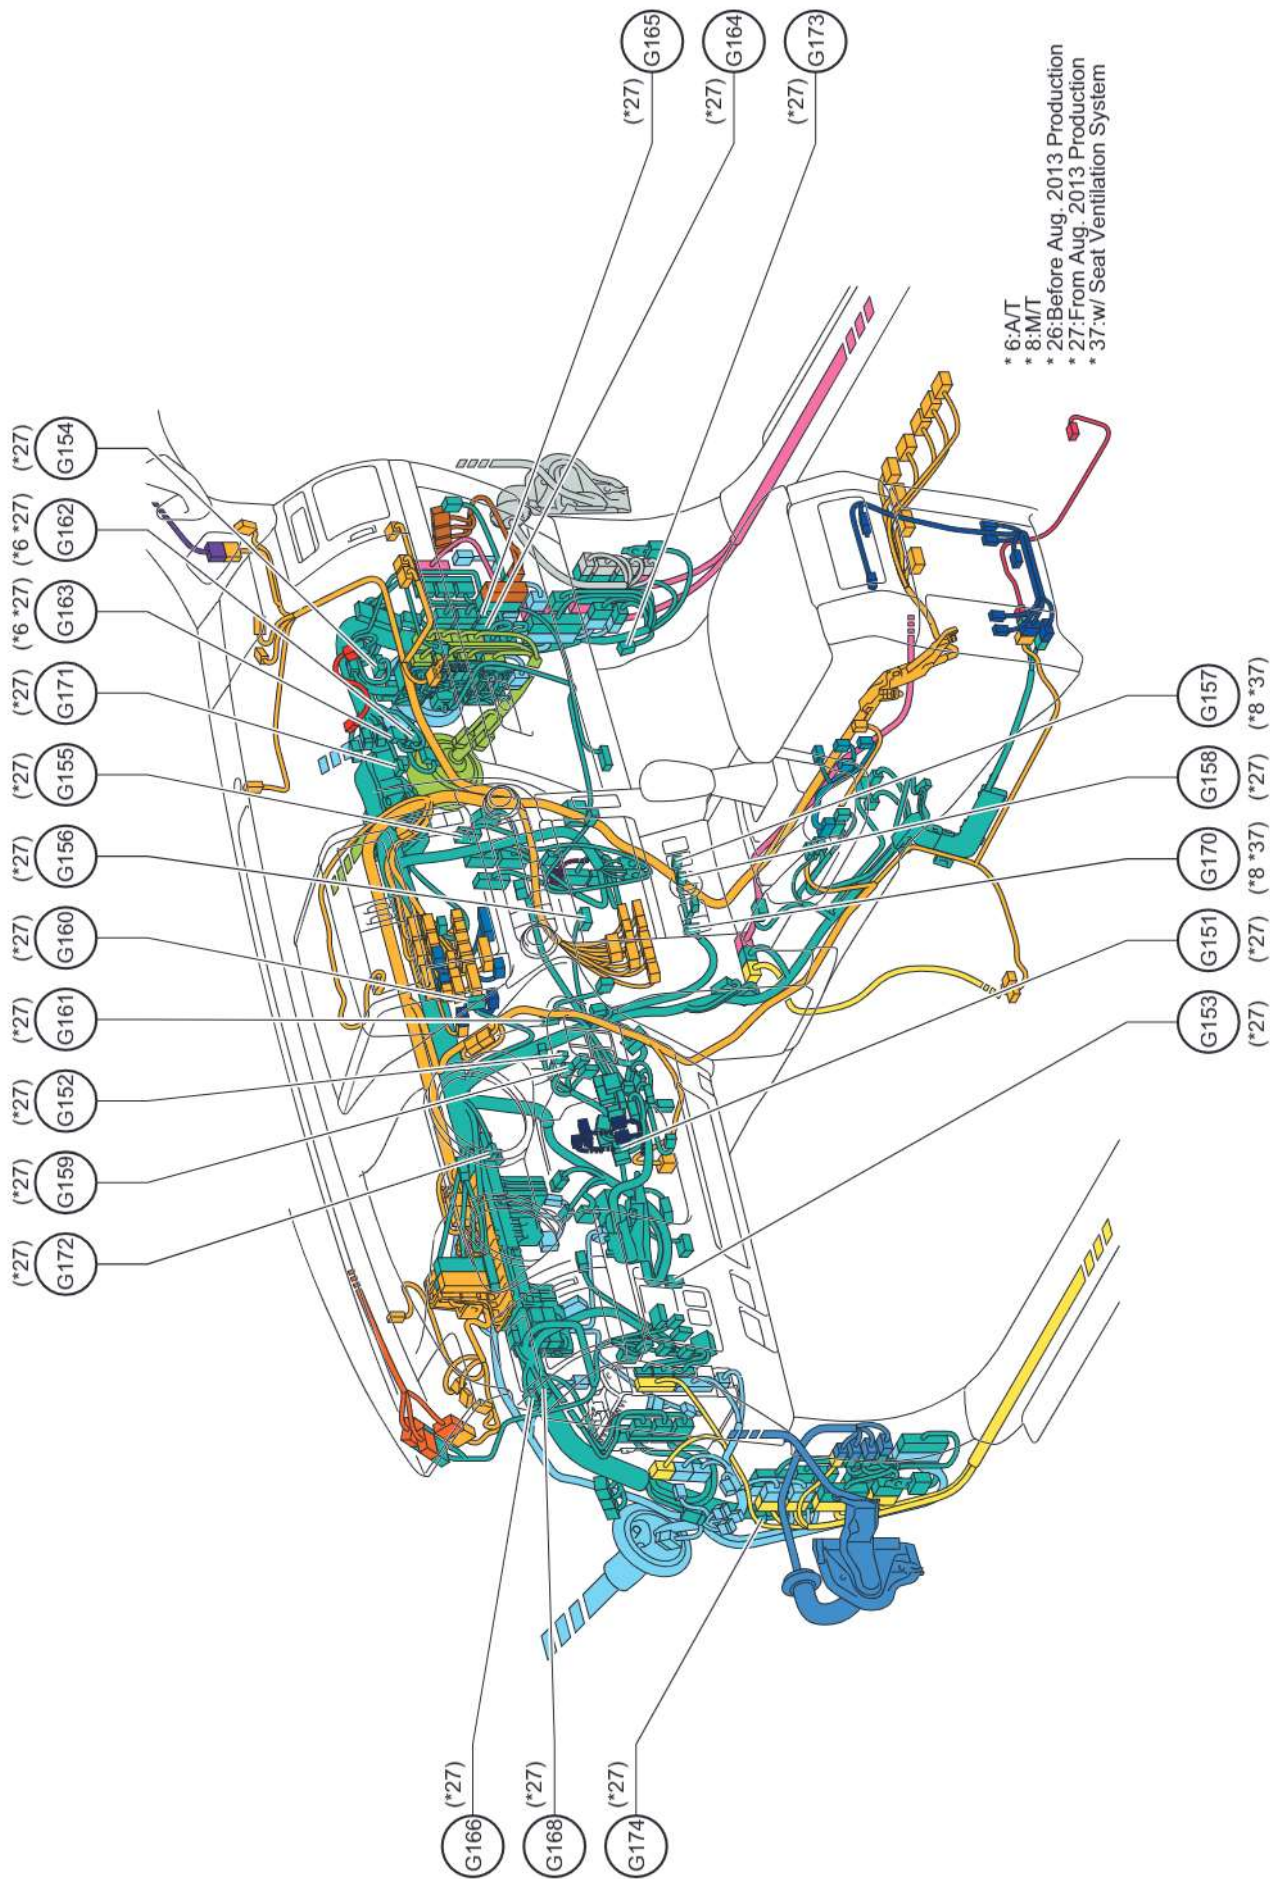


- G151 Spiral Cable Sub-Assembly
- G152 Steering Wheel Heater Control Assembly
- G153 Tire Pressure Warning Reset Switch
- G154 Clearance Warning ECU Assembly
- G155 Network Gateway ECU
- G156 Combination Switch Assembly
- G157 Refreshing Seat Switch LH
- G158 Downhill Assist Control Switch
- G159 Pattern Select Switch Assembly
- G160 Clearance Warning Indicator Assembly
- G161 No. 1 Clearance Warning Buzzer
- G162 Driving Support Switch Control ECU
- G163 Driving Support Switch Control ECU
- G164 Junction Connector
- G165 Junction Connector
- G166 Junction Connector
- G168 Junction Connector
- G170 Refreshing Seat Switch RH
- G171 Diode (Shift Position No. 1)
- G172 Diode (Shift Position No. 2)
- G173 Diode (Oil Pressure)
- G174 Diode (Viscous Relay)

Position of Parts in Instrument Panel <LHD Front Separate Seat>

 
G151  
Black




G152  
Blue

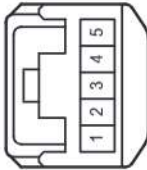


G153  
White

 


G154  
White

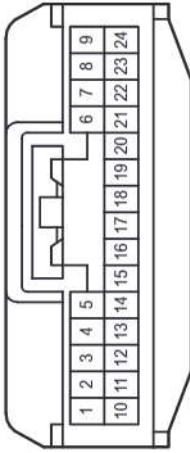


G155  
White

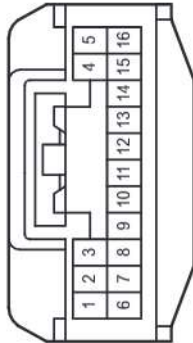


G156  
Black

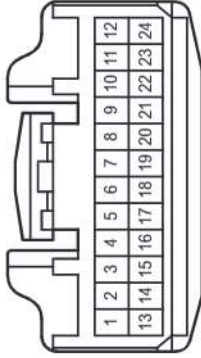


G157  
Black

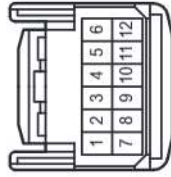


G158  
Gray

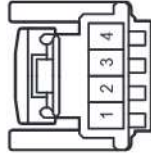


G159  
Gray

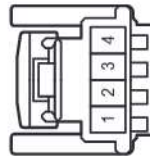


G160  
Black

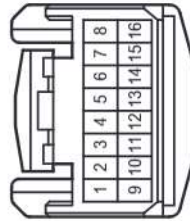


G161  
Black

 


G162  
Black

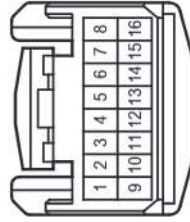


G163  
White

 


G164  
Black

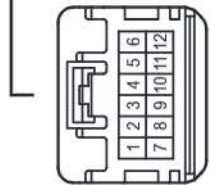


G165  
Black

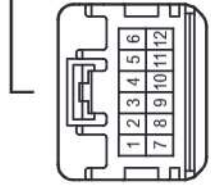


G166  
Blue

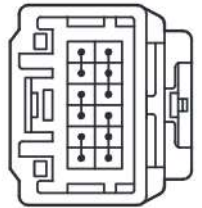

G168  
Blue

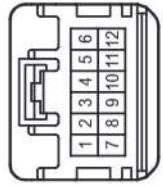

G170  
Black

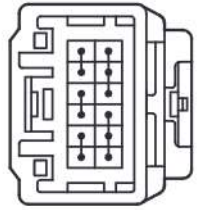



Position of Parts in Instrument Panel <LHD Front Separate Seat>

---

G171  
Gray



G172  
Gray




G173  
Gray



G174  
Gray















Position of Parts in Instrument Panel <LHD Front Separate Seat>

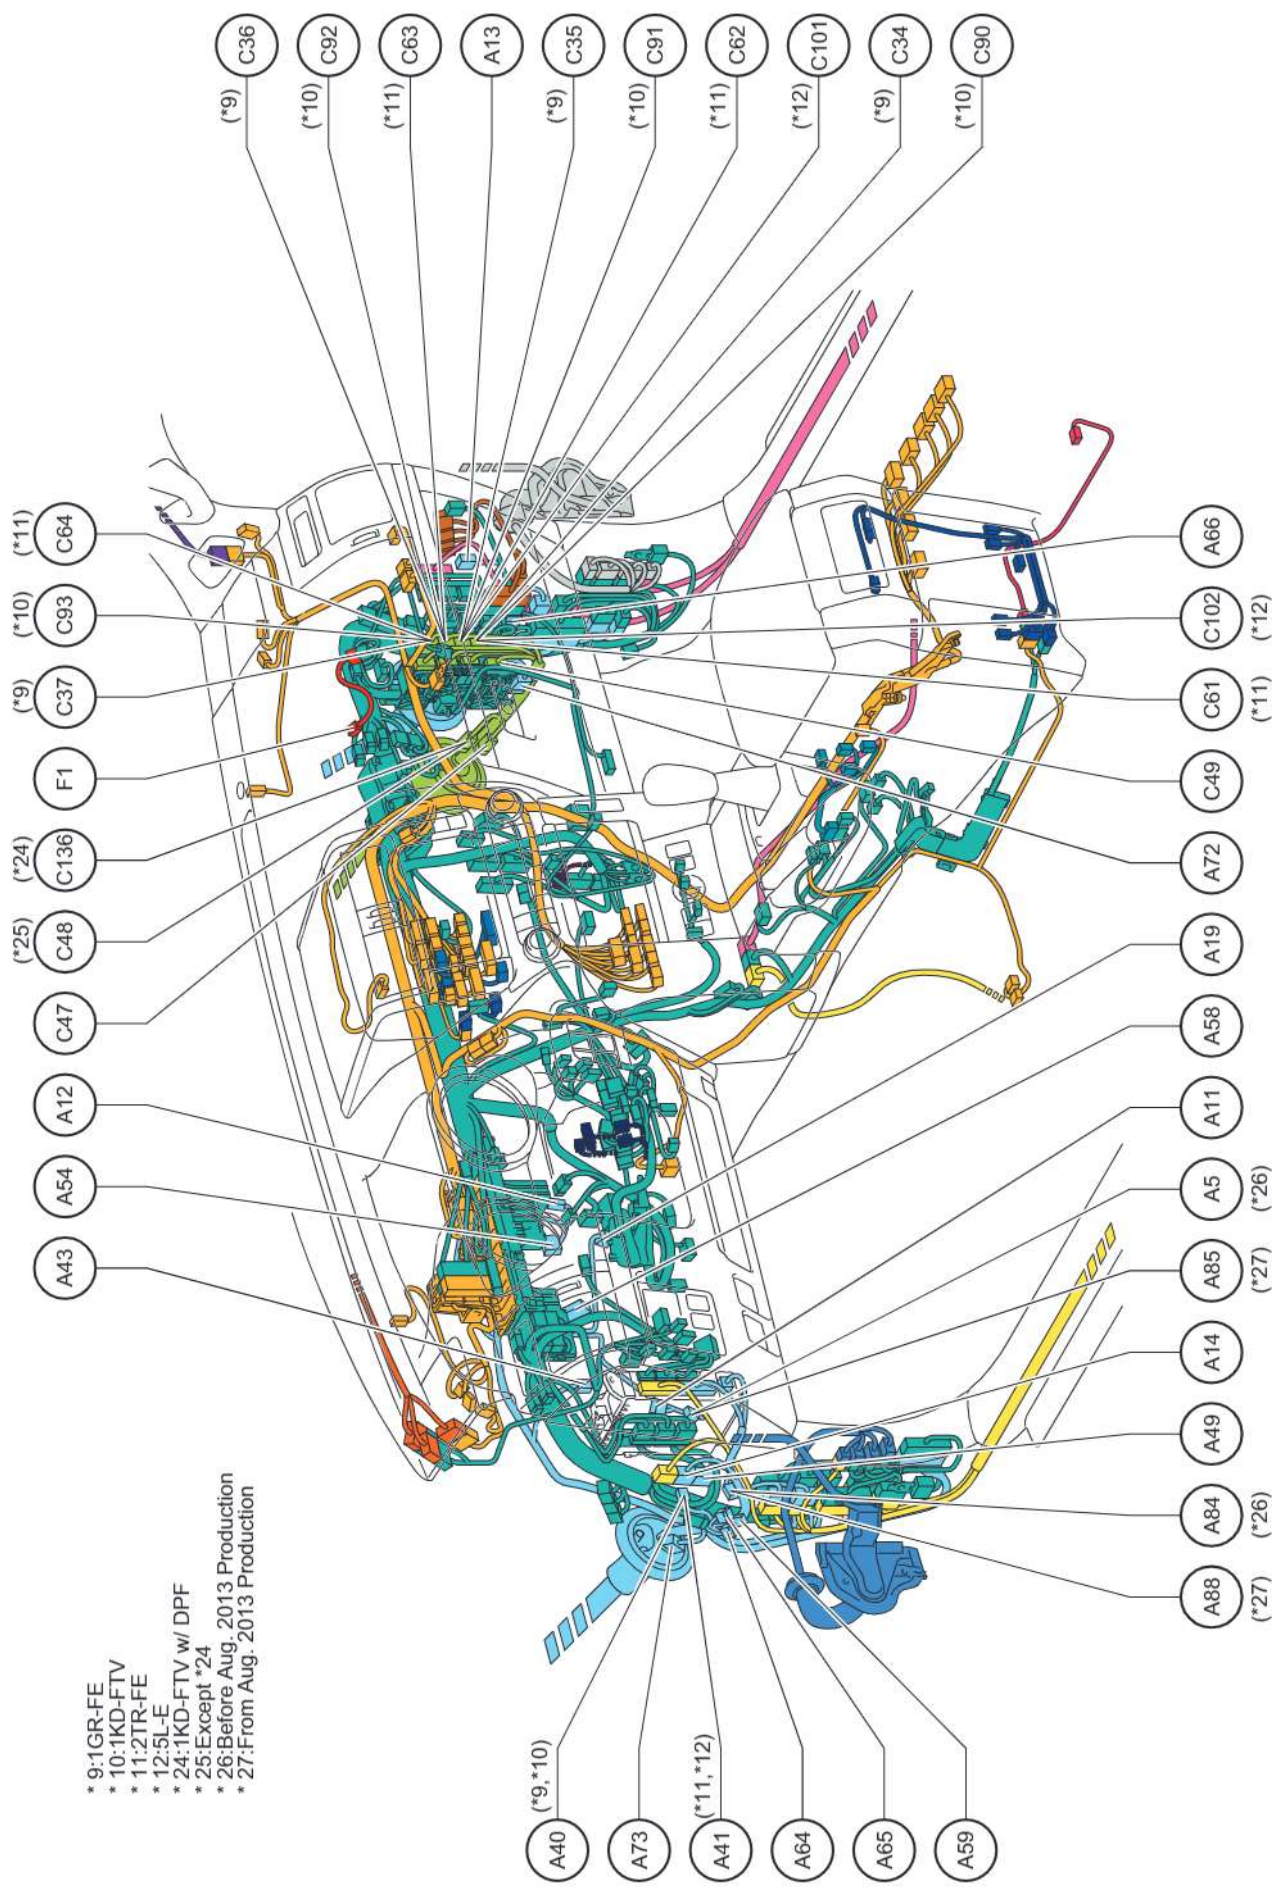

- \* 9:1GR-FE
- \* 10:1KD-FTV
- \* 11:2TR-FE
- \* 12:5L-E
- \* 24:1KD-FTV w/ DPF
- \* 25:Except \*24
- \* 26:Before Aug. 2013 Production
- \* 27:From Aug. 2013 Production


- A 5 Stop Light Switch Assembly
- A 11 Brake Pedal Load Sensing Switch
- A 12 Skid Control Buzzer Assembly
- A 13 Front Acceleration Sensor Assembly
- A 14 Suspension Control ECU
- A 19 Acceleration Sensor
- A 40 Clutch Start Switch Assembly
- A 41 Clutch Start Switch Assembly
- A 43 Clutch Switch Assembly
- A 49 Suspension Control ECU
- A 54 Stop Light Control Relay Assembly
- A 58 Headlight Swivel ECU Assembly
- A 59 Diode (Stop Light)
- A 64 Junction Connector
- A 65 Junction Connector
- A 66 Junction Connector
- A 72 Junction Connector
- A 73 Junction Connector
- A 84 Diode (A/C COMP Relay)
- A 85 Stop Light Switch Assembly
- A 88 Diode (A/C COMP Relay)
- C 34 ECM
- C 35 ECM
- C 36 ECM
- C 37 ECM
- C 47 Junction Connector
- C 48 Junction Connector
- C 49 Junction Connector
- C 61 ECM
- C 62 ECM
- C 63 ECM
- C 64 ECM
- C 90 ECM
- C 91 ECM
- C 92 ECM
- C 93 ECM
- C101 ECM
- C102 ECM

     Position of Parts in Instrument Panel <LHD Front Separate Seat>

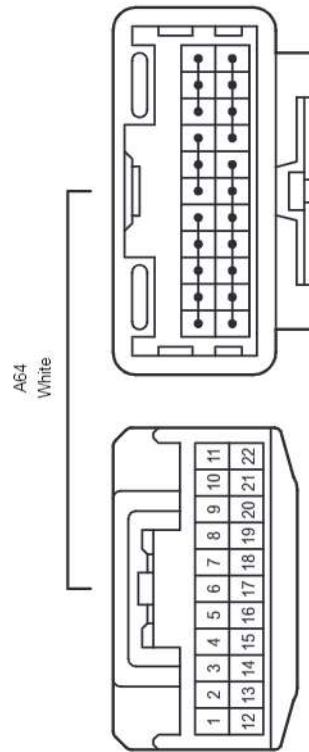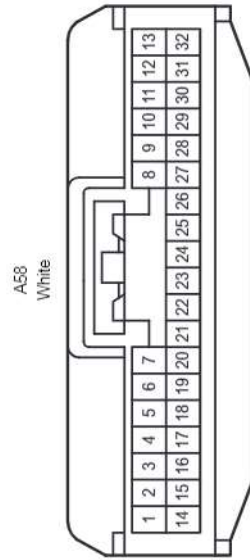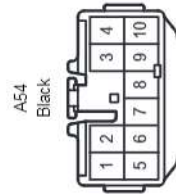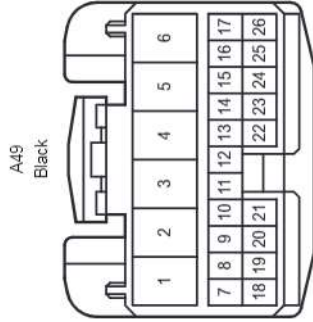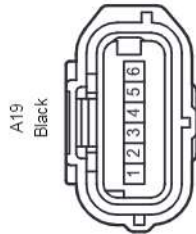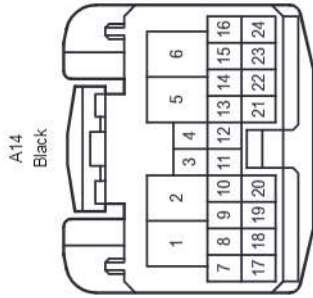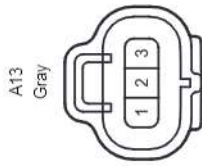


Position of Parts in Instrument Panel <LHD Front Separate Seat>


A65  
White

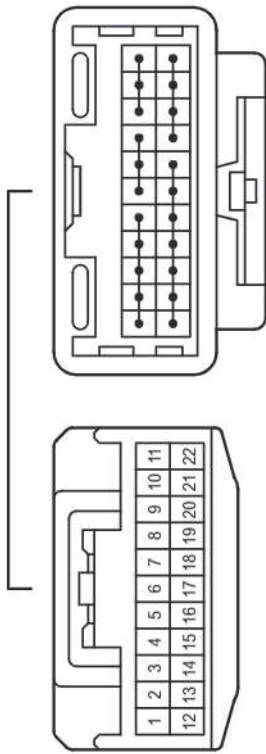


A66  
White

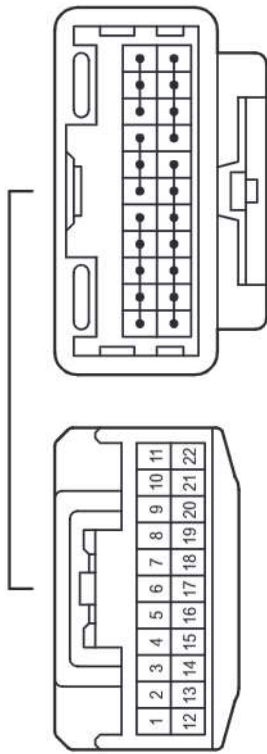

A72  
White

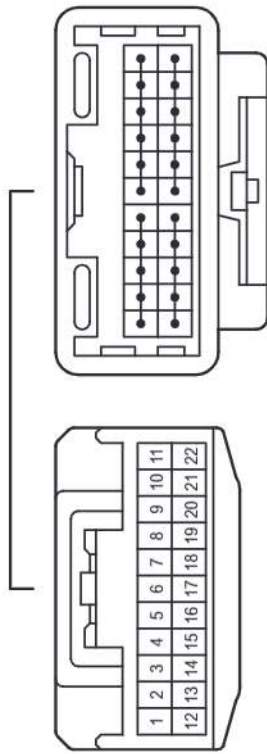


A73  
White

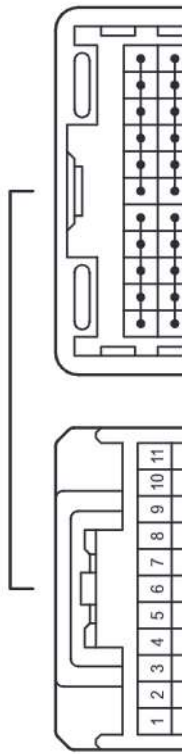

A84  
Gray



A85  
White

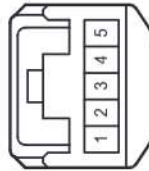


A88  
Gray




Position of Parts in Instrument Panel <LHD Front Separate Seat>


C34  
White

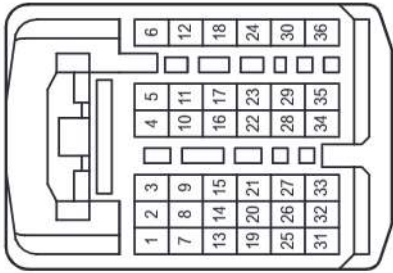


C35  
White

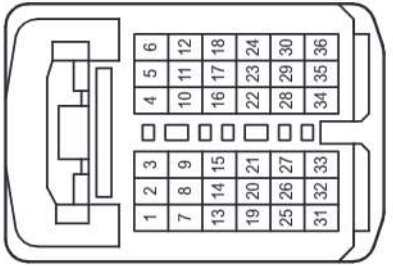


C36  
White

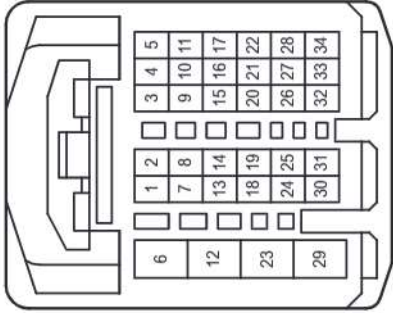


C37  
White

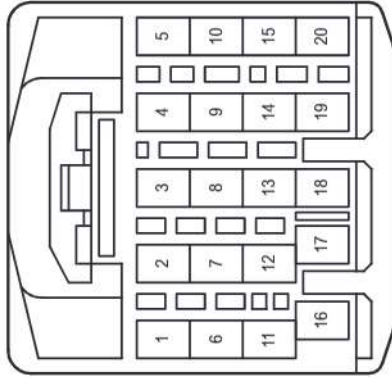


C47  
Black

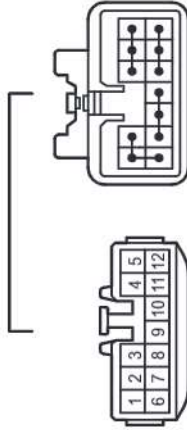

C48  
White

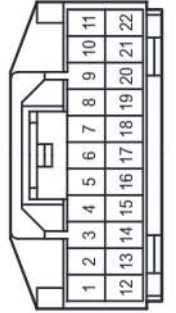


C49  
Blue

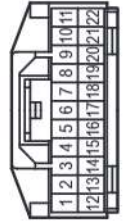


cardiagn.com

Position of Parts in Instrument Panel <LHD Front Separate Seat>


C61  
White

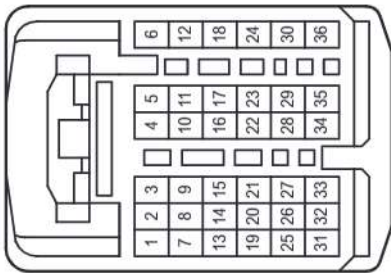


C62  
White

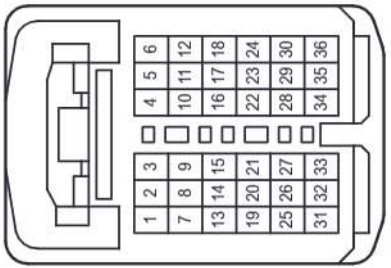


C63  
White

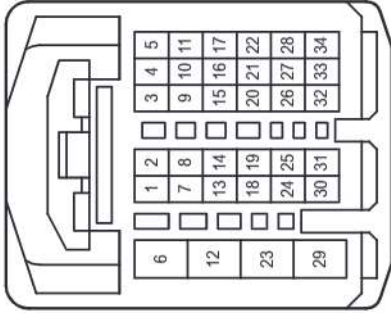


C64  
White

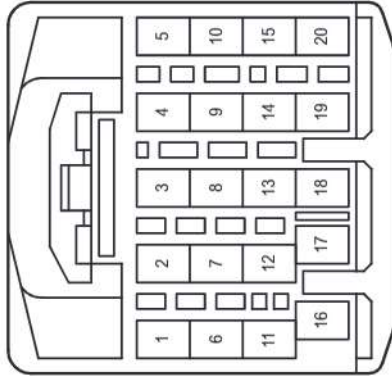


C90  
White

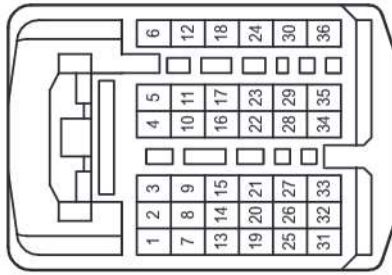


C91  
White

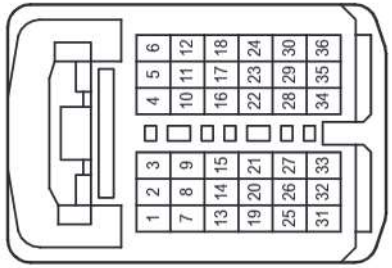


C92  
White

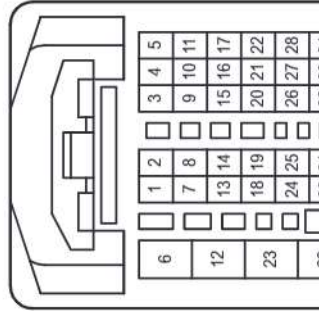

C93  
White

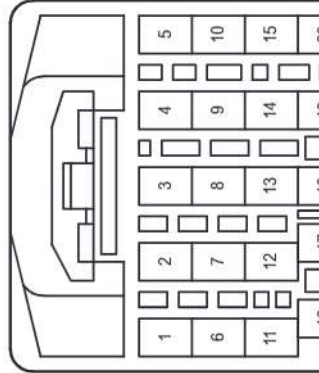


C101  
White


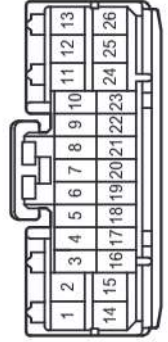


Position of Parts in Instrument Panel <LHD Front Separate Seat>


C102  
White

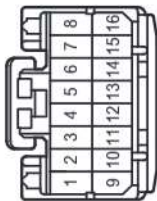

C136  
White

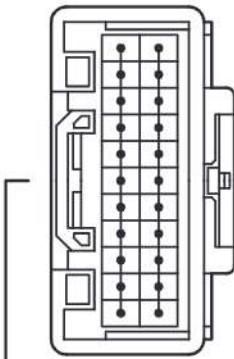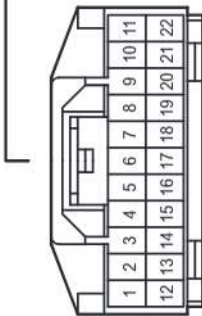


F1  
Orange

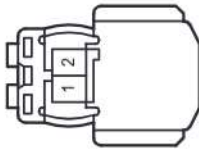



Position of Parts in Instrument Panel <LHD Front Separate Seat>

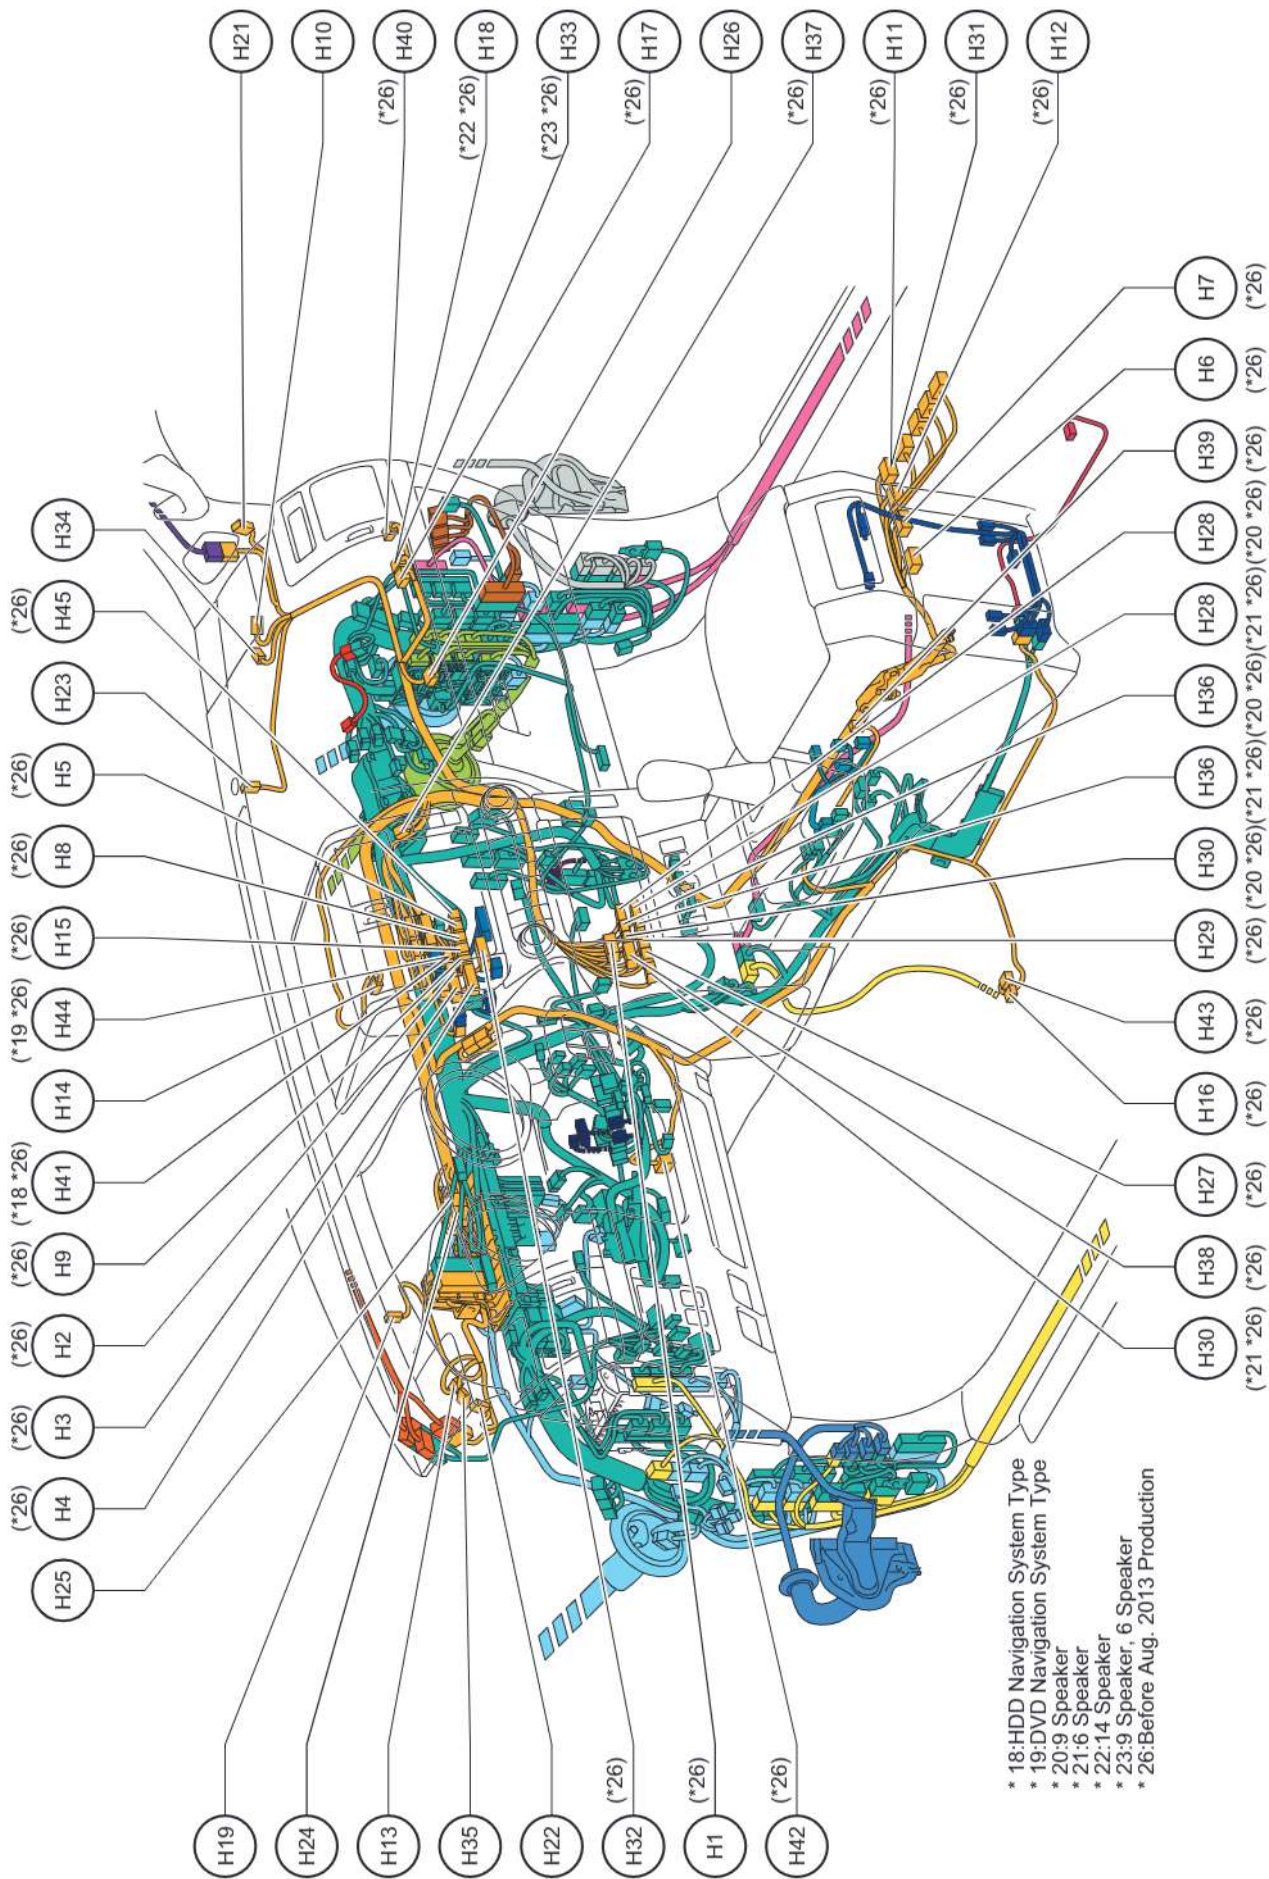


- \* 18:HDD Navigation System Type
- \* 19:DVD Navigation System Type
- \* 20:9 Speaker
- \* 21:6 Speaker
- \* 22:14 Speaker
- \* 23:9 Speaker, 6 Speaker
- \* 26:Before Aug. 2013 Production


- H 1 Radio Receiver Assembly
- H 2 Display & Navigation Module Display
- H 3 Display & Navigation Module Display
- H 4 Display & Navigation Module Display
- H 5 Display & Navigation Module Display
- H 6 Stereo Component Amplifier Assembly
- H 7 Stereo Component Amplifier Assembly
- H 8 Display & Navigation Module Display
- H 9 Display & Navigation Module Display
- H 10 Front No. 1 Speaker Assembly RH
- H 11 Stereo Component Amplifier Assembly
- H 12 Stereo Component Amplifier Assembly
- H 13 Front No. 1 Speaker Assembly LH
- H 14 Front No. 4 Speaker Assembly
- H 15 Display & Navigation Module Display
- H 16 Multi-Media Module Navigation Assembly
- H 17 Multi-Media Interface ECU
- H 18 Multi-Media Interface ECU
- H 19 Automatic Light Control Sensor
- H 21 Front No. 3 Speaker Assembly RH
- H 22 Front No. 3 Speaker Assembly LH
- H 23 Theft Warning Indicator Light Assembly
- H 24 Junction Connector
- H 25 Junction Connector
- H 26 Junction Connector
- H 27 Radio Receiver Assembly
- H 28 Radio Receiver Assembly
- H 29 Radio Receiver Assembly
- H 30 Radio Receiver Assembly
- H 31 Stereo Component Amplifier Assembly
- H 32 Accessory Meter Assembly
- H 33 Multi-Media Interface ECU
- H 34 Front No. 2 Speaker Assembly RH
- H 35 Front No. 2 Speaker Assembly LH
- H 36 Radio Receiver Assembly
- H 36 Radio Receiver Assembly
- H 37 Amplifier Antenna Assembly
- H 38 Radio Receiver Assembly

Position of Parts in Instrument Panel <LHD Front Separate Seat>


H1  
White

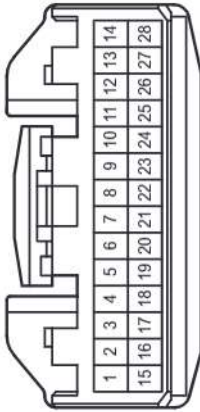


H2  
White

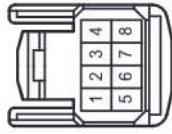


H3  
White

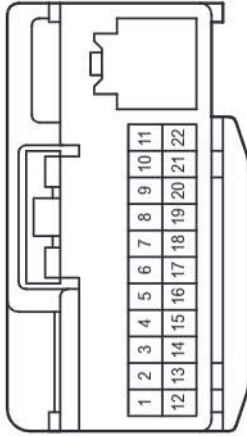


H4  
White

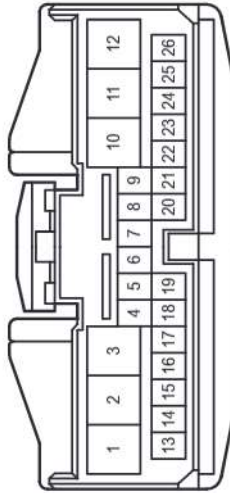


H5  
White

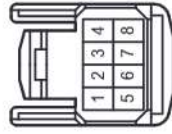


H6  
White

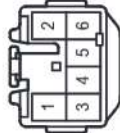


H7  
White

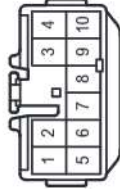


H8  
Blue

 


H9  
White

 


H10  
White

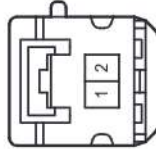


H11  
White

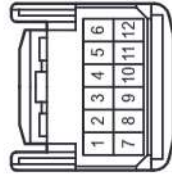


H12  
White

 


H13  
White

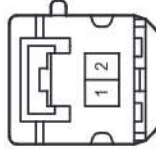


H14  
White

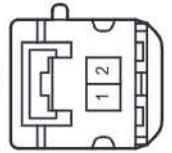


H15  
White

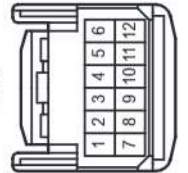


H16  
White

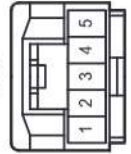

H17  
White

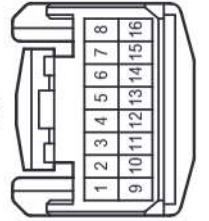

H18  
Black

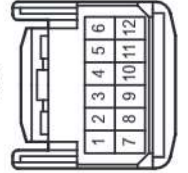

cardiagn.com

H19  
Blue

H21  
White

H22  
White


 

H23  
White

Position of Parts in Instrument Panel <LHD Front Separate Seat>


H24  
White




H25  
White

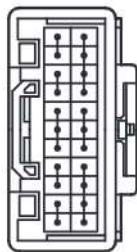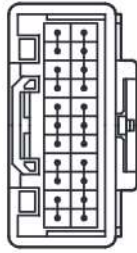


H26  
White

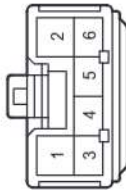


H27  
White

 


H28  
White

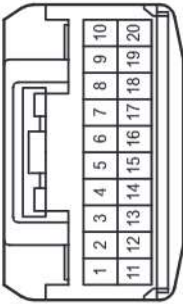


H29  
White

 


H30  
White

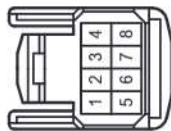


H31  
White

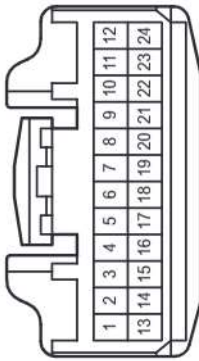


H32  
White

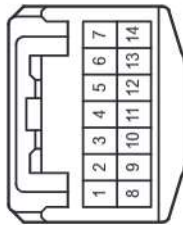


H33  
White

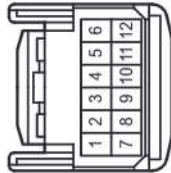


H34  
White

 


H35  
White

 

H36  
White

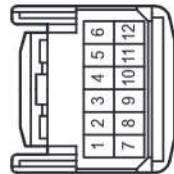


H36  
White

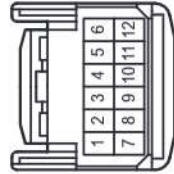

H37  
White



 
H38  
White




H39  
Black



 
H40  
Brown



H41  
Gray

 


H42  
Gray

 

cardiagn.com
















Position of Parts in Instrument Panel <LHD Front Separate Seat>

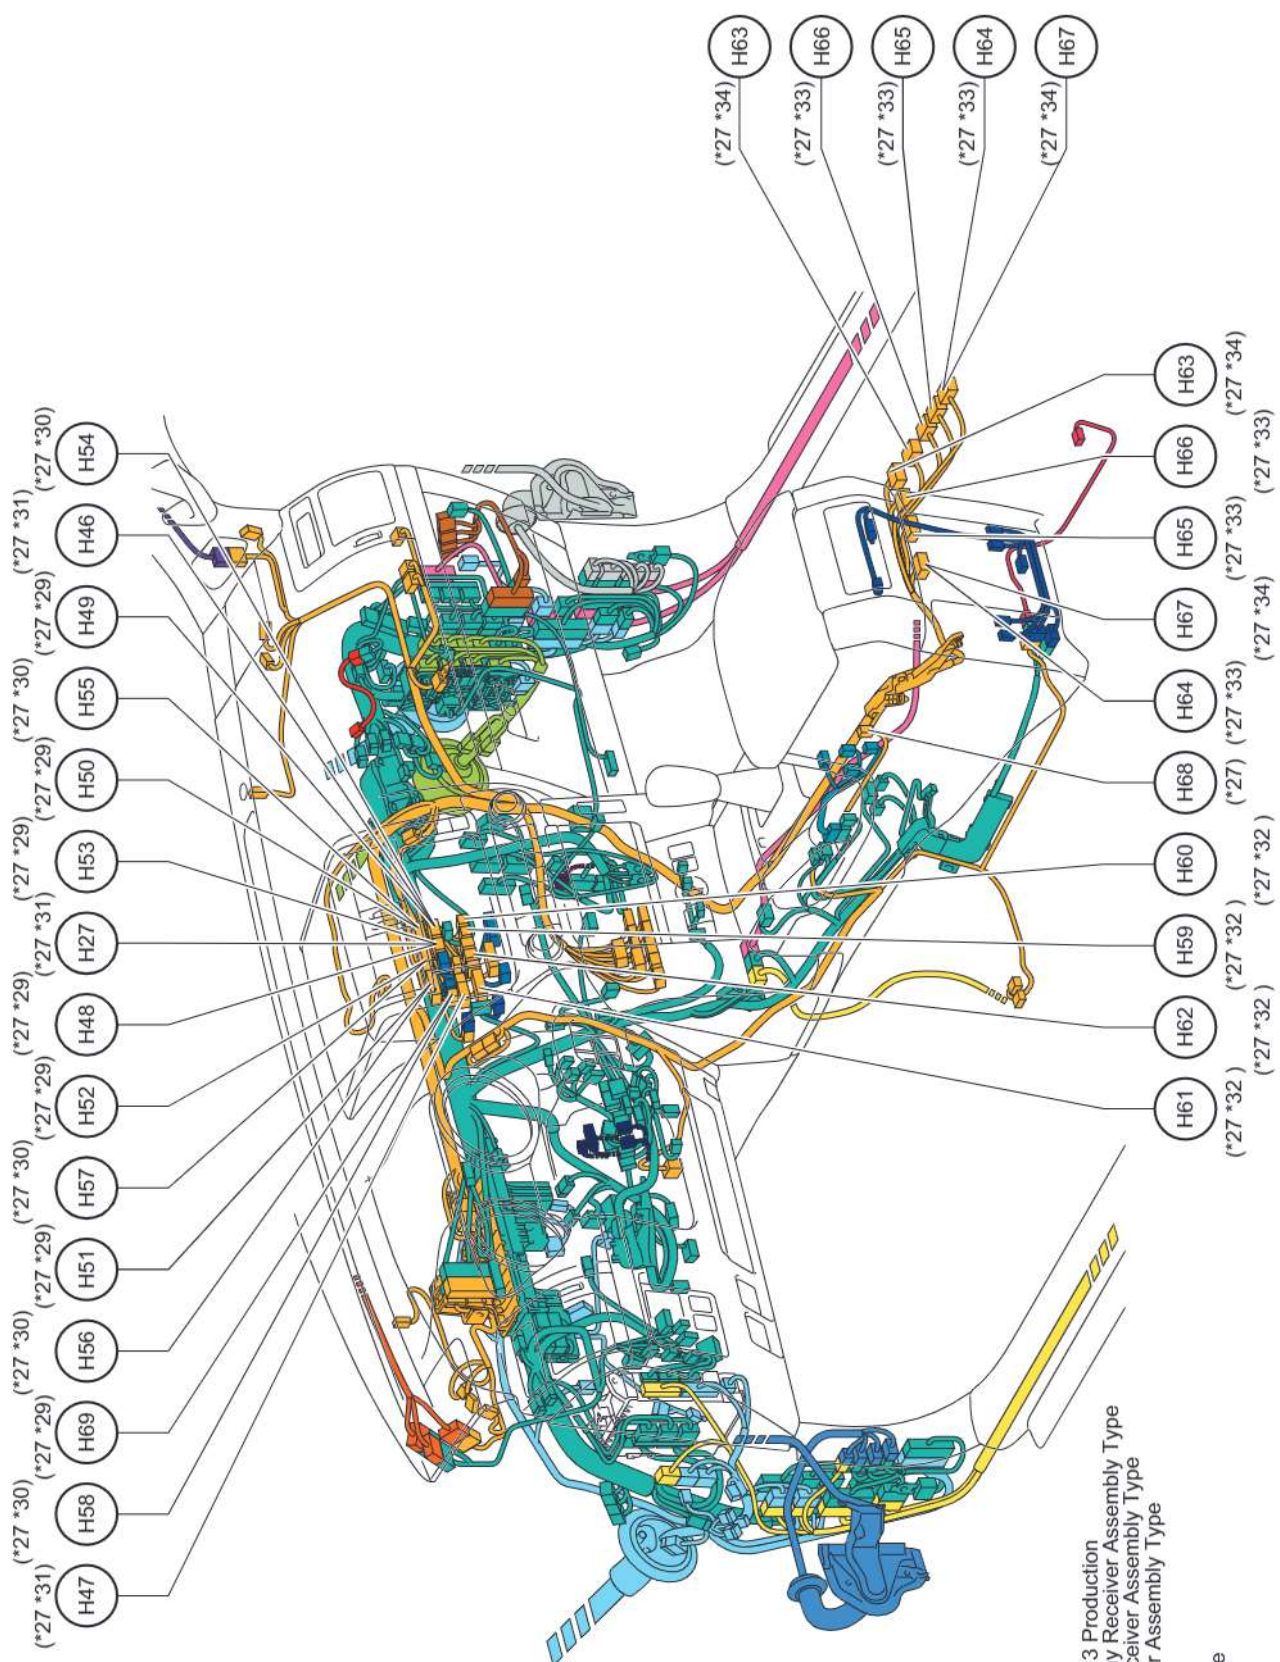

- \* 27: From Aug. 2013 Production
- \* 29: Radio & Display Receiver Assembly Type
- \* 30: Navigation Receiver Assembly Type
- \* 31: Radio Receiver Assembly Type
- \* 32: China
- \* 33: JBL Type
- \* 34: PIONEER Type

- H 27 Radio Receiver Assembly
- H 46 Radio Receiver Assembly
- H 47 Radio Receiver Assembly
- H 48 Radio & Display Receiver Assembly
- H 49 Radio & Display Receiver Assembly
- H 50 Radio & Display Receiver Assembly
- H 51 Radio & Display Receiver Assembly
- H 52 Radio & Display Receiver Assembly
- H 53 Navigation Receiver Assembly
- H 54 Navigation Receiver Assembly
- H 55 Navigation Receiver Assembly
- H 56 Navigation Receiver Assembly
- H 57 Navigation Receiver Assembly
- H 58 Navigation Receiver Assembly
- H 59 Navigation Receiver Assembly
- H 60 Navigation Receiver Assembly
- H 61 Navigation Receiver Assembly
- H 62 Navigation Receiver Assembly
- H 63 Stereo Component Amplifier Assembly
- H 64 Stereo Component Amplifier Assembly
- H 65 Stereo Component Amplifier Assembly
- H 66 Stereo Component Amplifier Assembly
- H 67 Stereo Component Amplifier Assembly
- H 68 No. 1 Stereo Jack Adapter Assembly
- H 69 Radio & Display Receiver Assembly

Position of Parts in Instrument Panel <LHD Front Separate Seat>

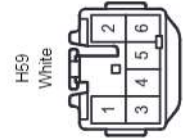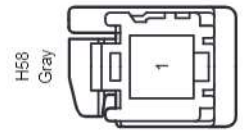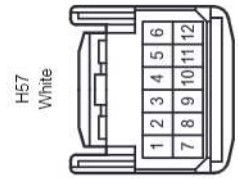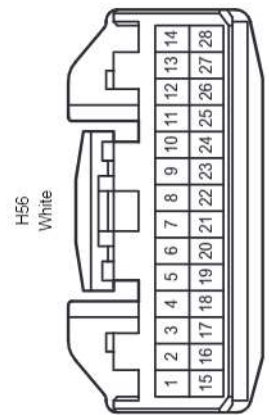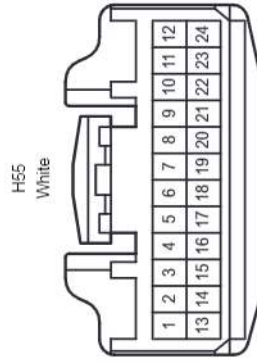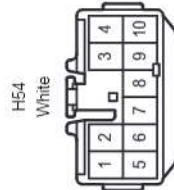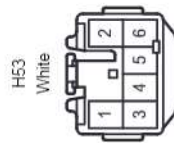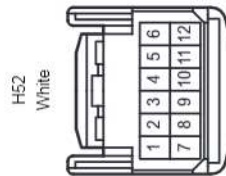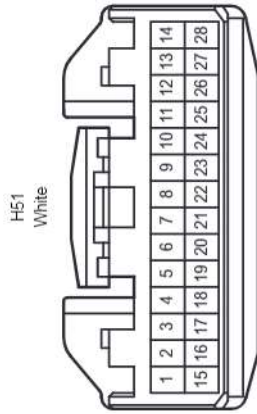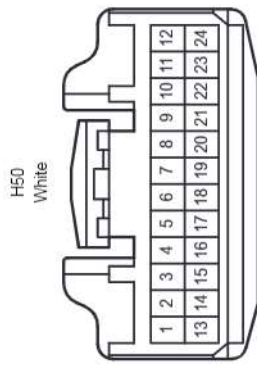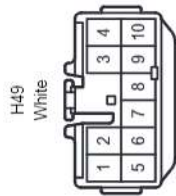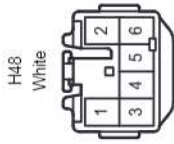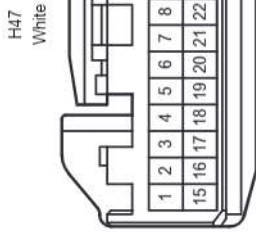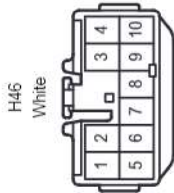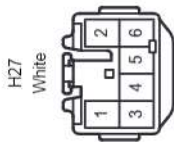


H60  
White

H61  
White


H62  
White

Position of Parts in Instrument Panel <LHD Front Separate Seat>


H63  
White

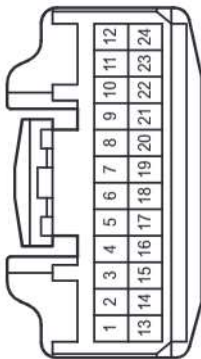

H64  
White

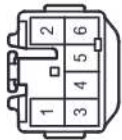


H65  
White

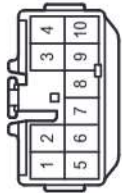


H66  
White



 
H67  
White



H68  
Black

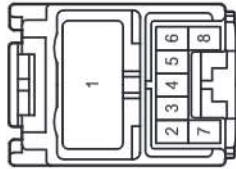

H69  
Gray

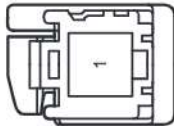






- I 1 Clearance Warning ECU Assembly
- I 2 Parking Assist ECU
- I 3 Parking Assist ECU
- I 5 Parking Assist ECU
- I 6 Parking Assist ECU
- I 7 Parking Assist ECU
- Q 1 Airbag Sensor Assembly
- R 1 Airbag Sensor Assembly
- R 19 Suspension Control ECU
- T 1 Video Adapter Terminal
- T 2 Headphone Terminal RH
- T 3 A/C Control Assembly
- T 4 Headphone Terminal LH
- T 5 Power Outlet Socket Assembly
- T 6 Cooling Box Assembly
- T 7 A/C Control Assembly
- i 1 No. 1 Indoor Electrical Key Antenna Assembly
- i 2 Power Point Socket Assembly
- i 3 Seat Heater Switch RH
- i 4 Seat Heater Switch LH
- i 5 Refreshing Seat Switch RH
- i 6 Refreshing Seat Switch LH
- s 1 No. 2 Indoor Electrical Key Antenna Assembly
- y 1 Hazard Warning Signal Switch Assembly
- z 1 A/C Amplifier Assembly , A/C Blower Assembly
- z 5 Driver Side Squib Circuit , Spiral Cable Sub-Assembly
- z 6 Driver Side Squib 2nd Step Circuit , Spiral Cable Sub-Assembly
- z 7 Cruise Control Main Switch , Spiral Cable Sub-Assembly , Steering Pad Switch Assembly
- z 8 Spiral Cable Sub-Assembly , Steering Pad Switch Assembly
- z 10 Radio & Display Receiver Assembly
- z 11 Navigation ECU Assembly
- z 12 Radio & Display Receiver Assembly
- z 13 Navigation ECU Assembly
- z 14 Steering Wheel Heater Control Assembly




Position of Parts in Instrument Panel <LHD Front Separate Seat>


T3 Black

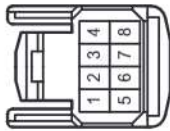


T4 White

 


T5 White

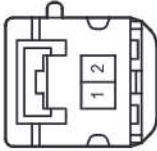


T6 White

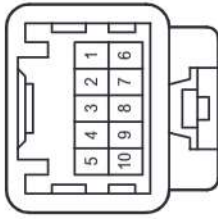


T7 Black

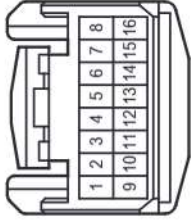


i1 White

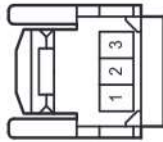


i2 White

 


i3 Black

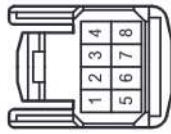


i4 Black

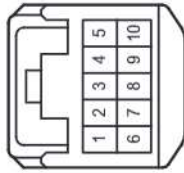


i5 Black

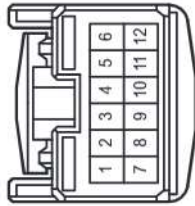


i6 Black

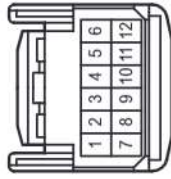


s1 Gray

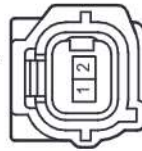


y1 Gray

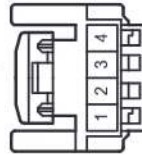


z1 White

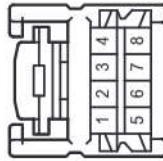


z5 Orange

 


z6 Black

 


z7 White

 


z8 White

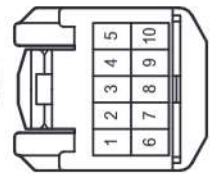


z10 White

 


z11 White

 

z12 White

 

z13 Black

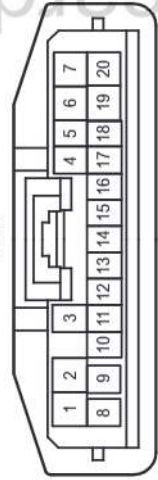


z14 White




cardiagn.com

Wire and Wire in Instrument Panel <LHD Front Separate Seat>

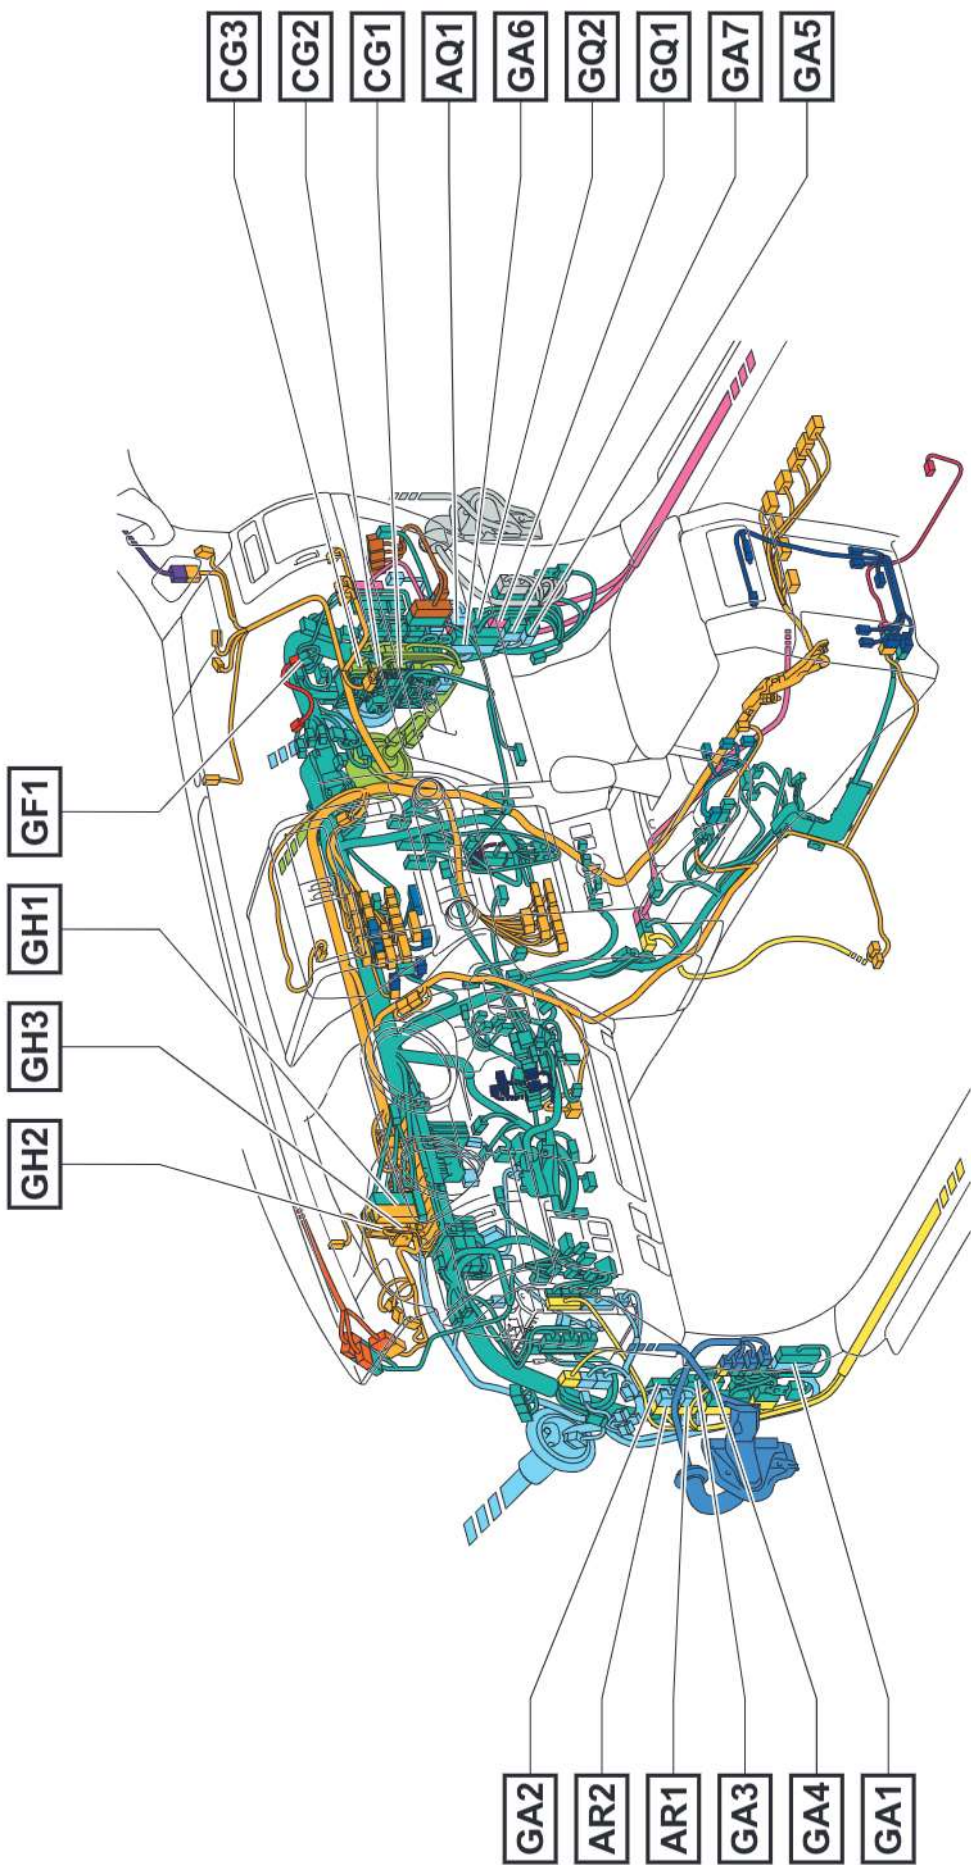


Wire and Wire in Instrument Panel <LHD Front Separate Seat>

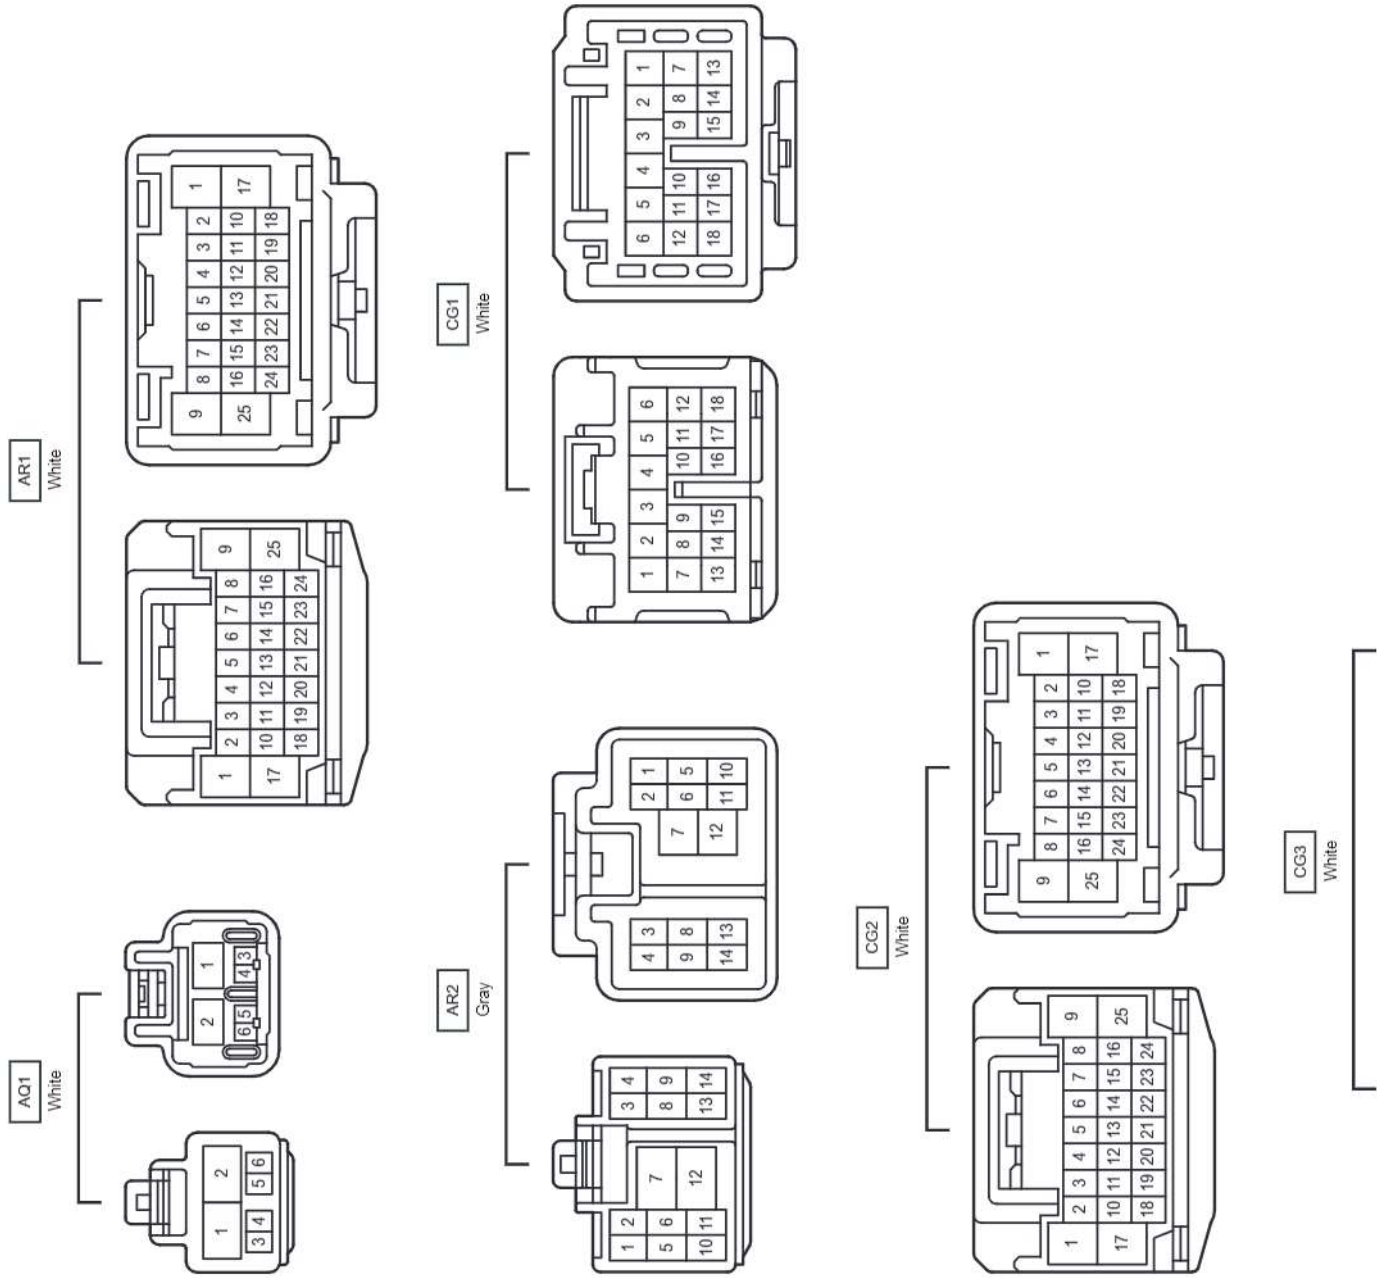


Wire and Wire in Instrument Panel <LHD Front Separate Seat>

cardiagn.com


GA1  
White

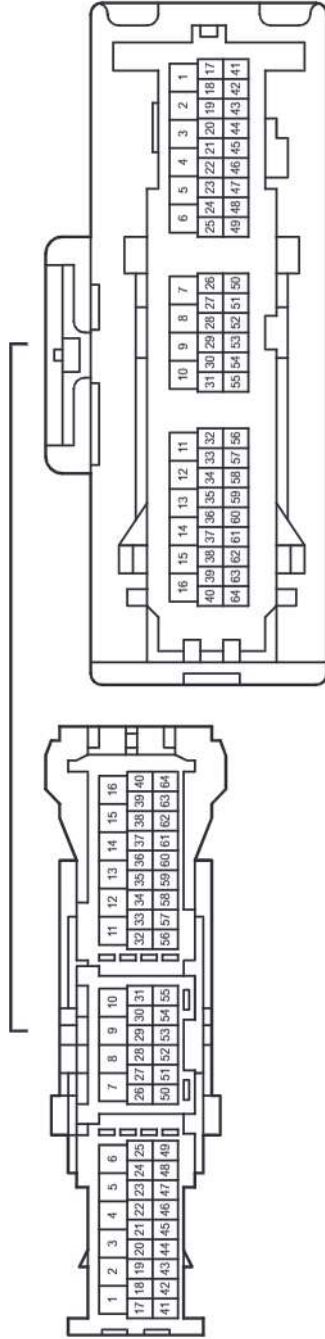


GA2  
White

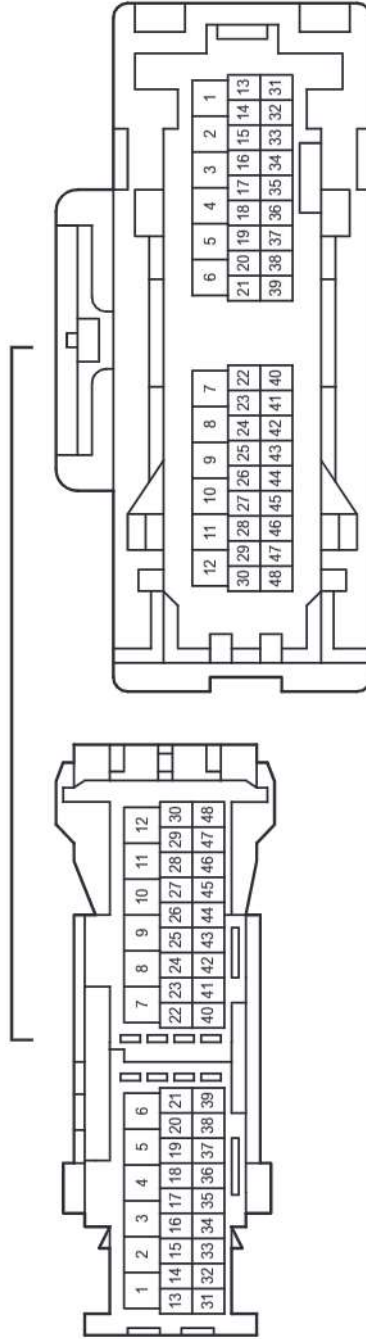


GA3  
Black

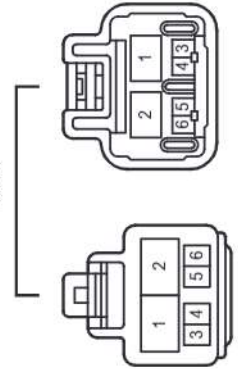

GA4  
White

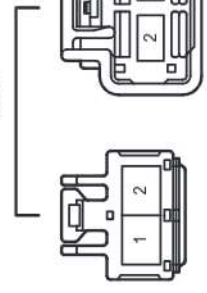


GA5  
Yellow

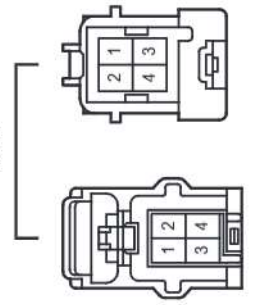

GA6  
White




Wire and Wire in Instrument Panel <LHD Front Separate Seat>

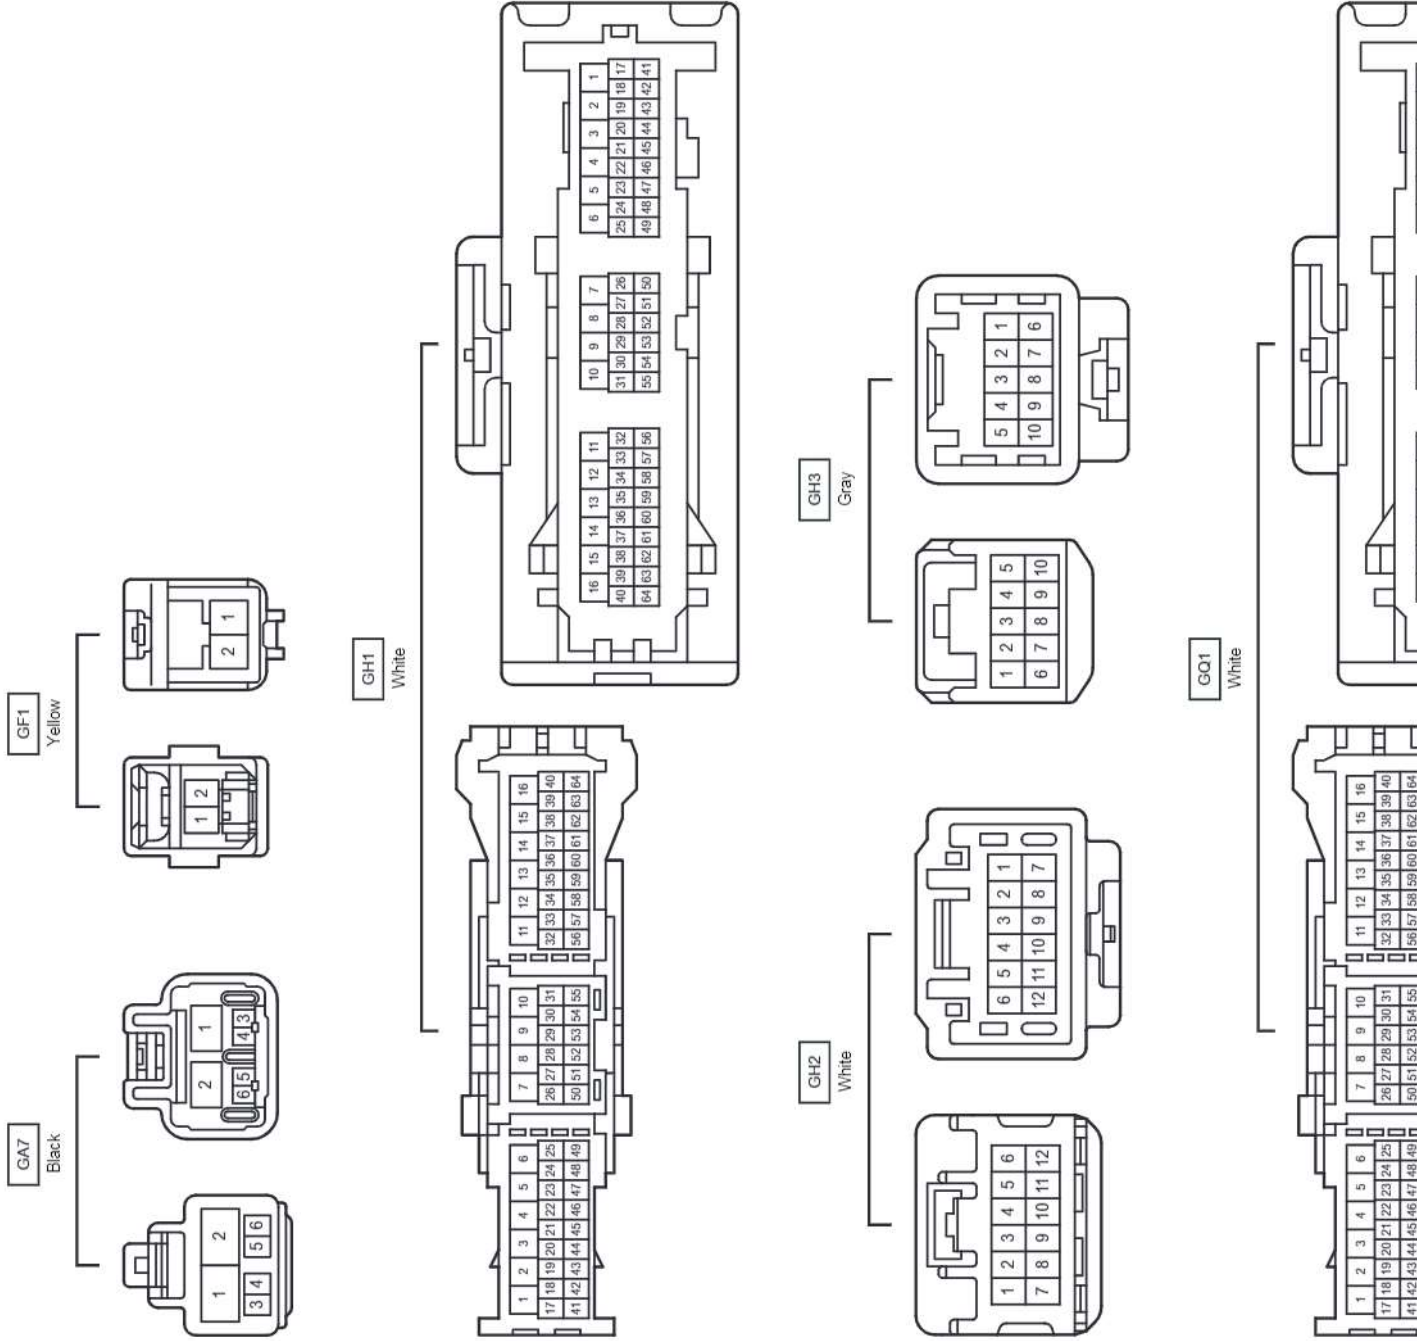




Wire and Wire in Instrument Panel <LHD Front Separate Seat>

G02  
White

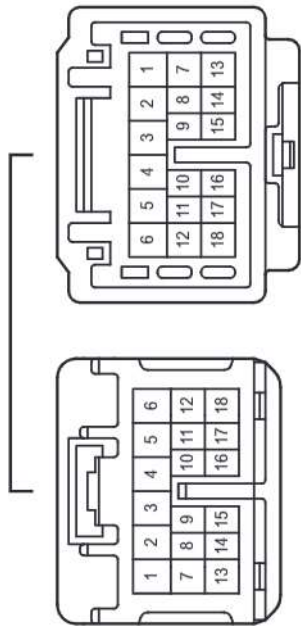


Wire and Wire in Instrument Panel <LHD Front Separate Seat>

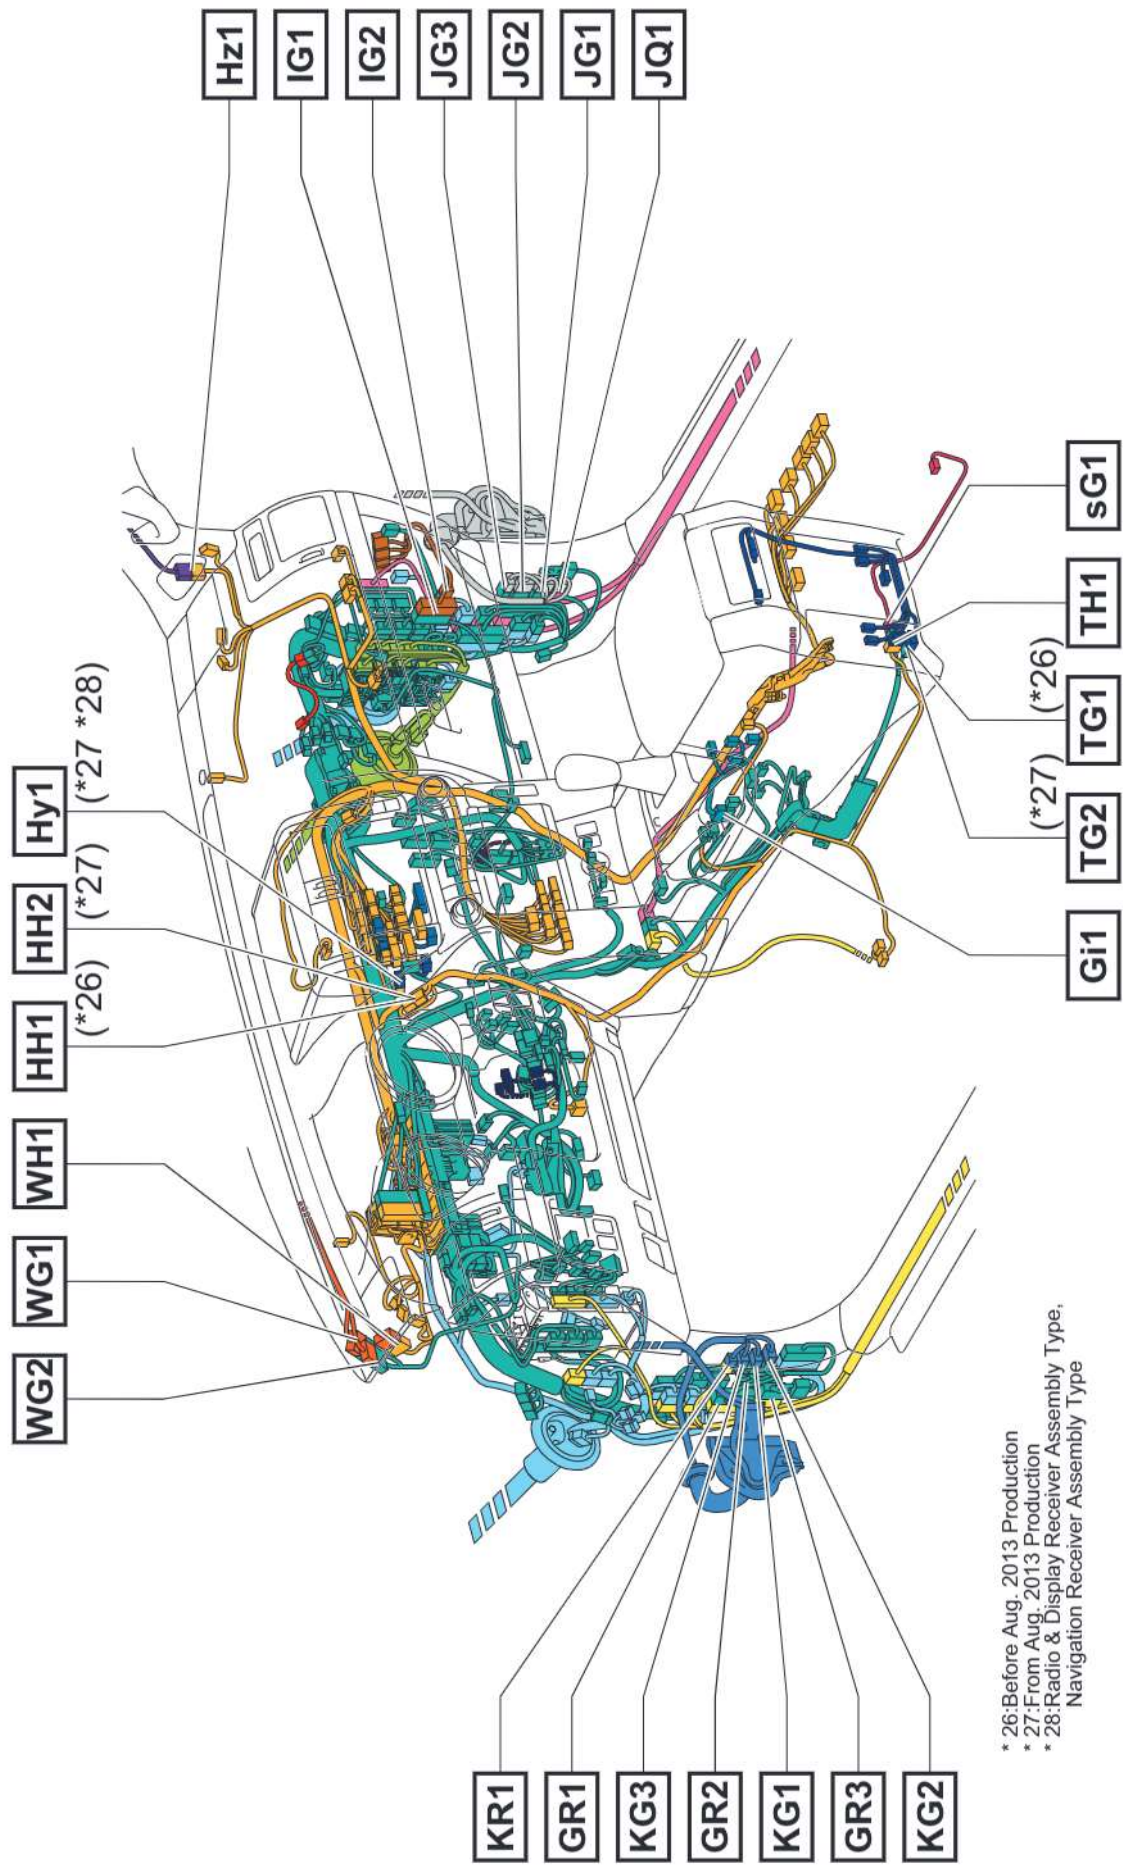


\* 26: Before Aug. 2013 Production  
 \* 27: From Aug. 2013 Production  
 \* 28: Radio & Display Receiver Assembly Type,  
 Navigation Receiver Assembly Type

Wire and Wire in Instrument Panel <LHD Front Separate Seat>


GR1  
White

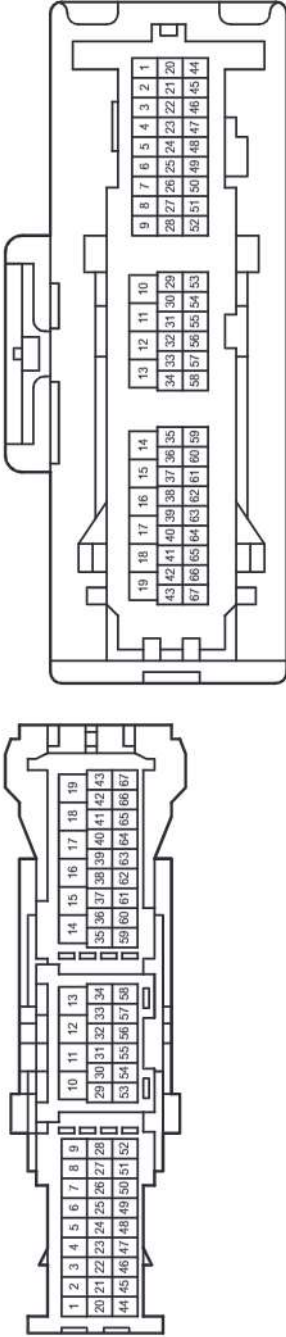

GR2  
Gray

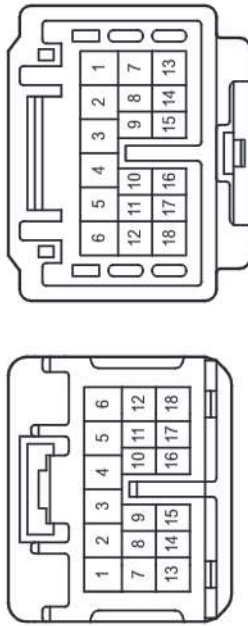


GR3  
Blue

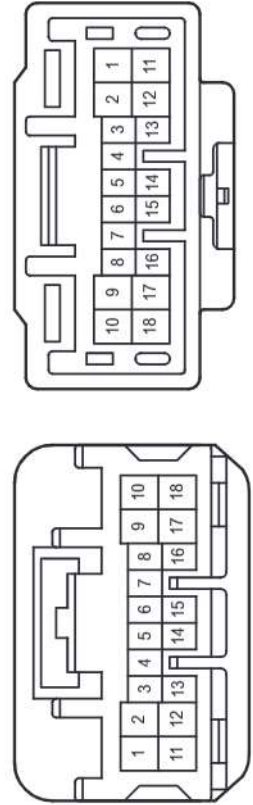





GR1  
White

HH1  
White





Wire and Wire in Instrument Panel <LHD Front Separate Seat>

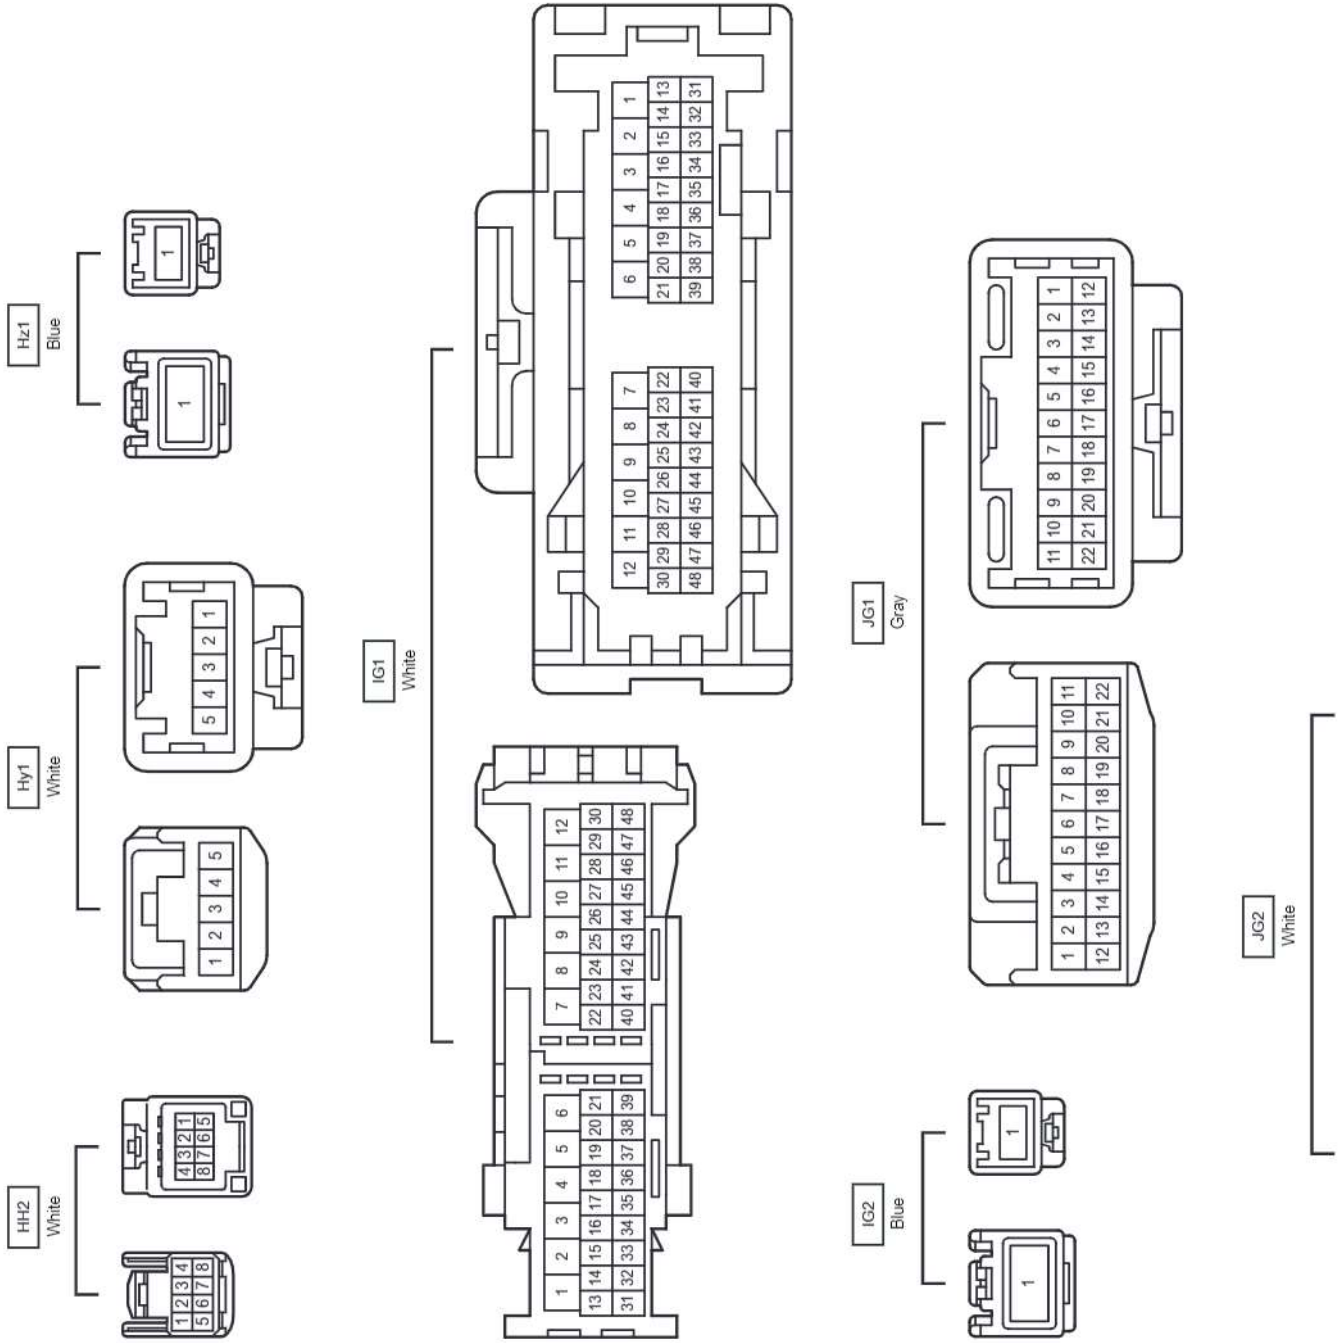

Wire and Wire in Instrument Panel <LHD Front Separate Seat>

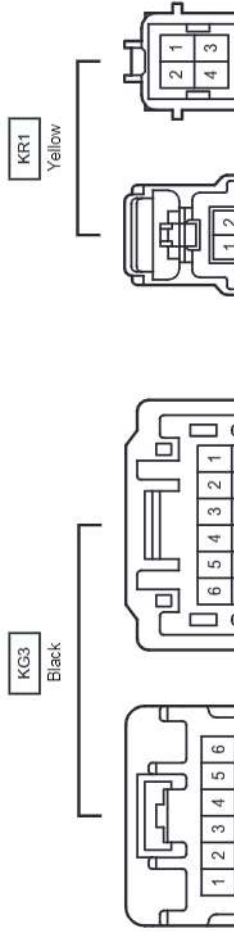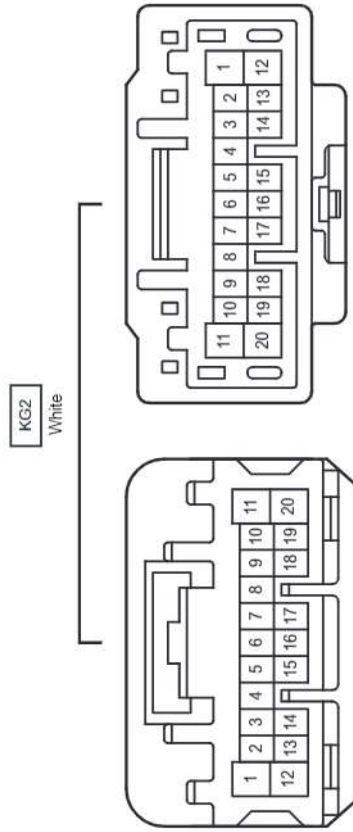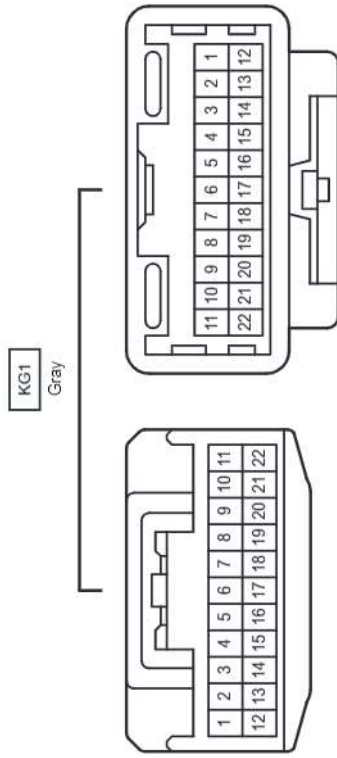
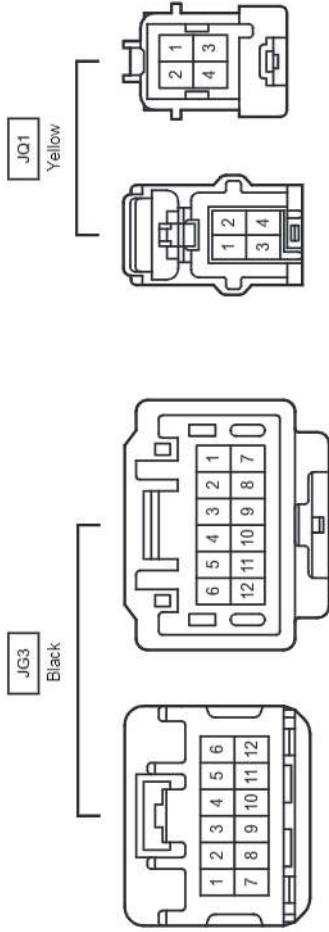


Wire and Wire in Instrument Panel <LHD Front Separate Seat>

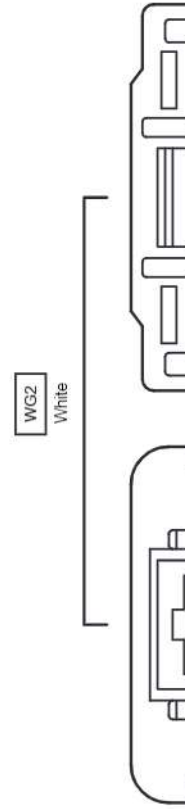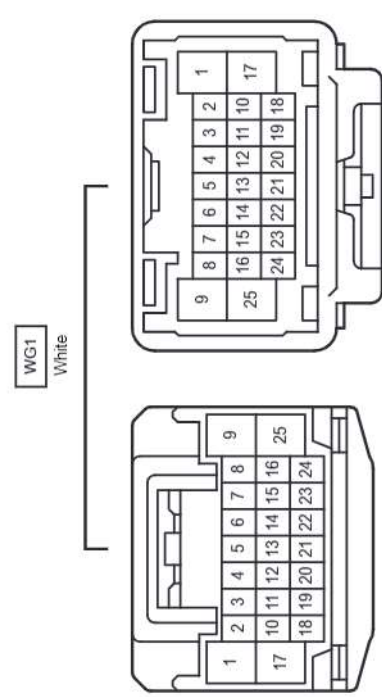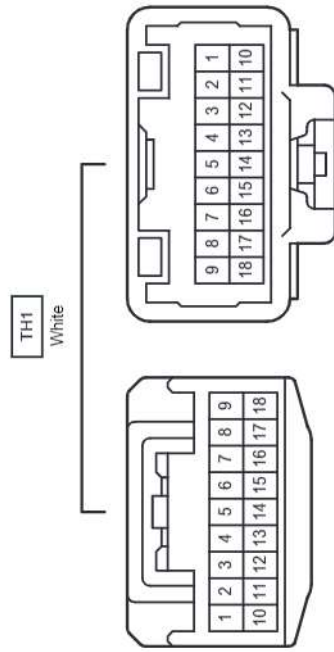
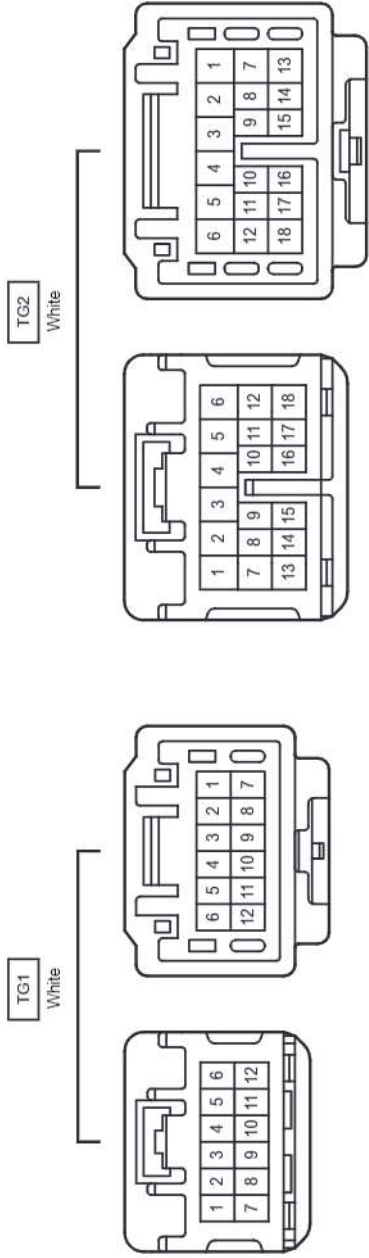


Wire and Wire in Instrument Panel <LHD Front Separate Seat>


WH1  
Gray

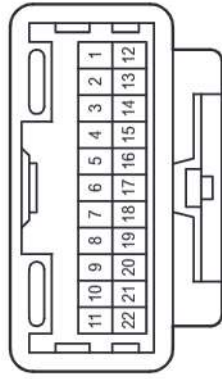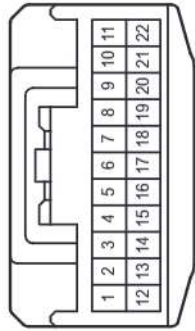

sG1  
White

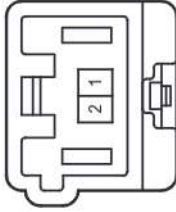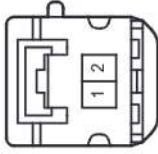

Ground Points in Instrument Panel <RHD Front Separate Seat>















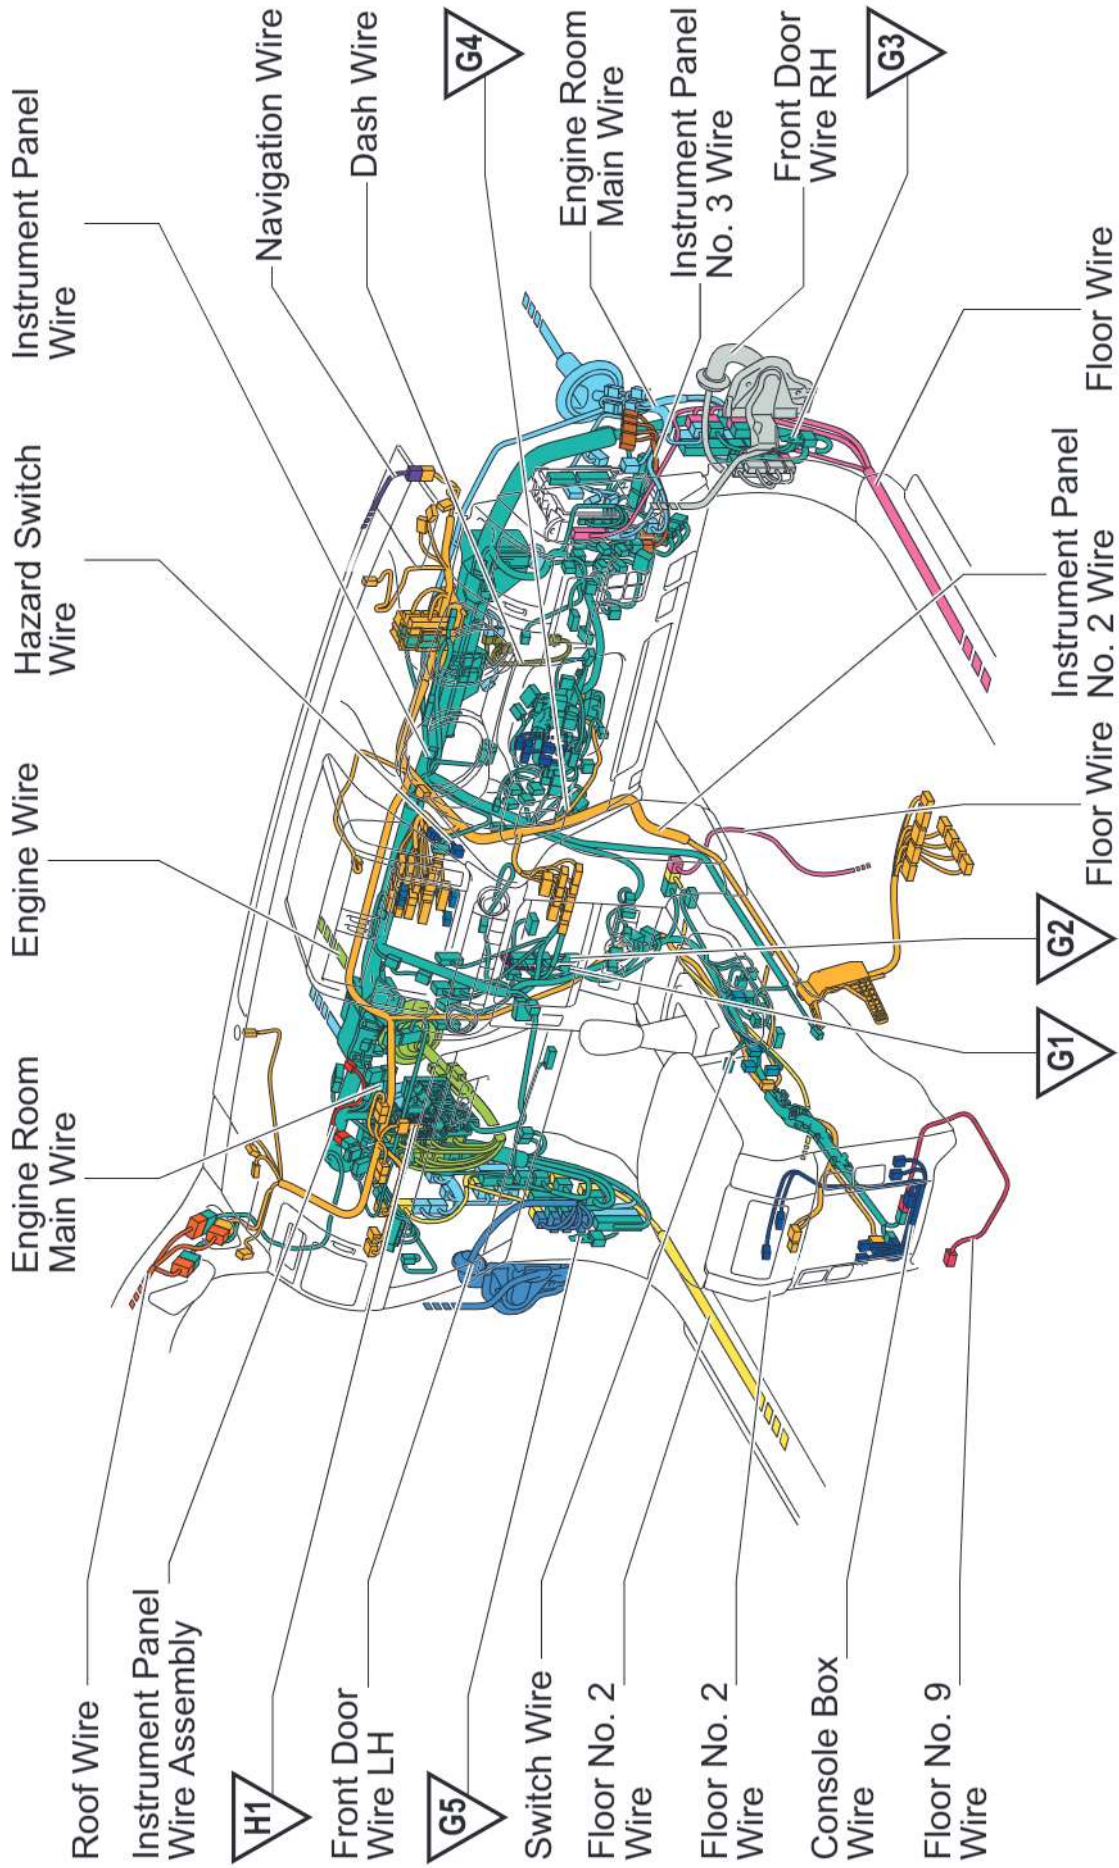







- G 1 Airbag Sensor Assembly
- G 2 Ignition or Starter Switch Assembly
- G 3 Un-Lock Warning Switch Assembly
- G 4 Key Inter Lock Solenoid
- G 5 Telltale Light Assembly
- G 6 Combination Meter Assembly
- G 7 Combination Meter Assembly
- G 8 Turn Signal Flasher Assembly
- G 9 VSC Off Switch
- G 10 Downhill Assist Control Switch
- G 11 Outer Mirror Switch Assembly
- G 12 Pattern Select Switch Assembly
- G 13 Back Sonar or Clearance Sonar Switch Assembly
- G 14 Clearance Warning Indicator Assembly
- G 15 Hazard Warning Signal Switch Assembly
- G 16 Trip Switch
- G 17 Center Differential Lock Switch
- G 18 Transfer Position Switch
- G 19 Option Connector
- G 20 Idle Up Switch
- G 21 Headlight Leveling Switch
- G 22 Heater Switch Assembly
- G 23 Integration Control and Panel Assembly
- G 24 A/C Amplifier Assembly
- G 25 A/C Amplifier Assembly
- G 26 Front Blower with Fan Motor Sub-Assembly
- G 27 Intake Air Temperature Sensor
- G 28 Quick Heater Assembly
- G 29 Quick Heater Assembly
- G 30 Glove Box Light
- G 32 Lower No. 1 Instrument Panel Airbag Assembly
- G 33 Steering Sensor
- G 34 No. 1 Clearance Warning Buzzer
- G 35 Steering Lock Actuator Assembly
- G 36 Engine Switch
- G 37 ID Code Box
- G 38 Certification ECU Assembly
- G 39 Certification ECU Assembly

 Position of Parts in Instrument Panel <RHD Front Separate Seat>

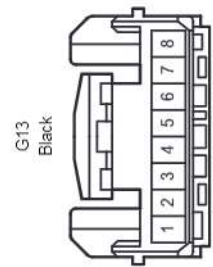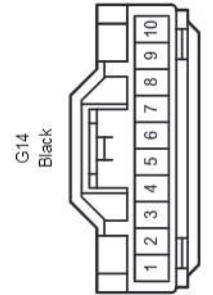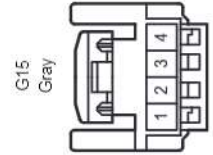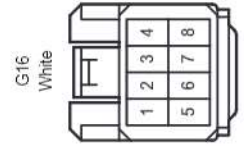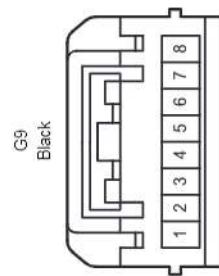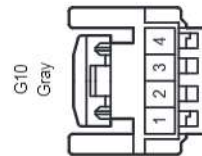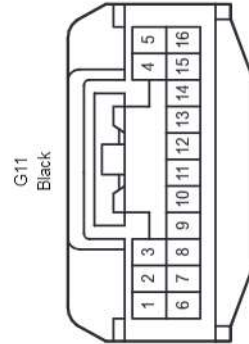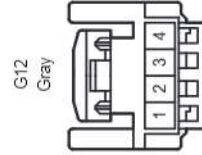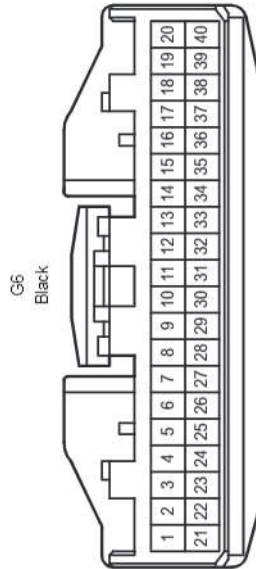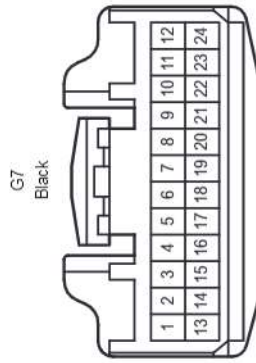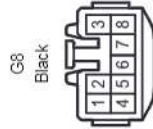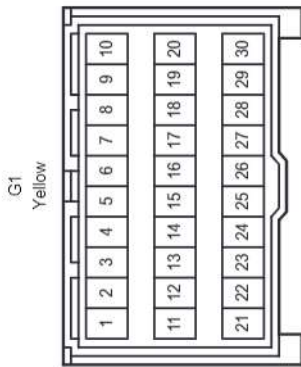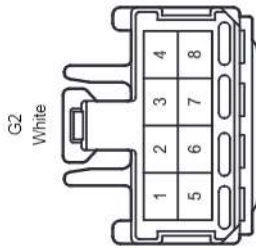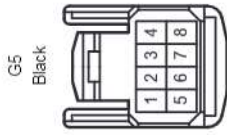


Position of Parts in Instrument Panel <RHD Front Separate Seat>


G22  
Black

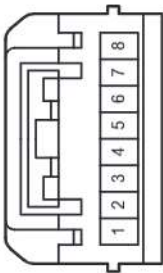


G23  
Black

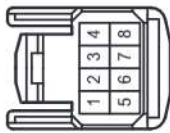


G24  
White

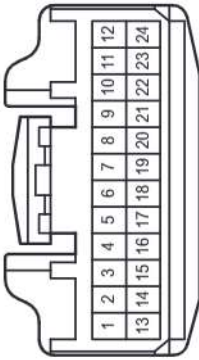


G25  
White

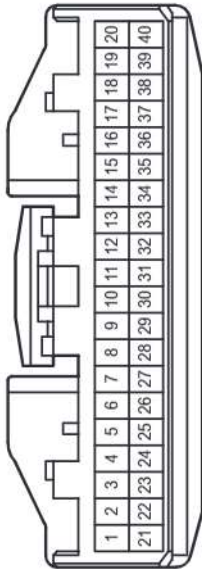


G26  
Black

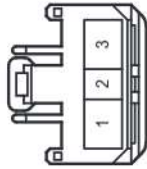


G27  
Black

 

G28  
White

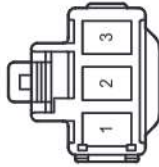


G29  
White

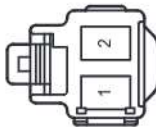


G30  
Black



 
G32  
Black




G33  
White

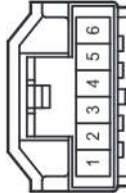


G34  
Blue

 


G35  
Black

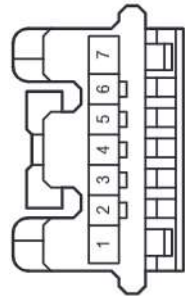


G36  
Black

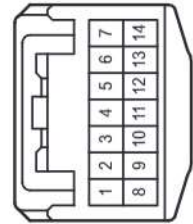


G37  
White

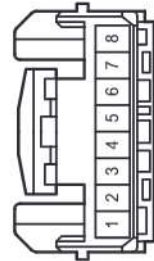

G38  
White

 


G39  
White

 


Position of Parts in Instrument Panel <RHD Front Separate Seat>


G40  
Black

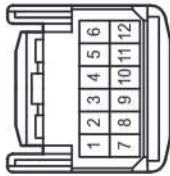


G41  
Yellow

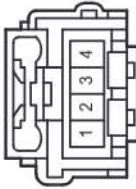


G42  
White

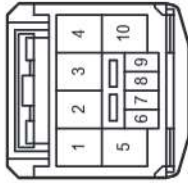

G43  
White

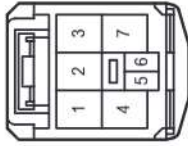

Position of Parts in Instrument Panel <RHD Front Separate Seat>

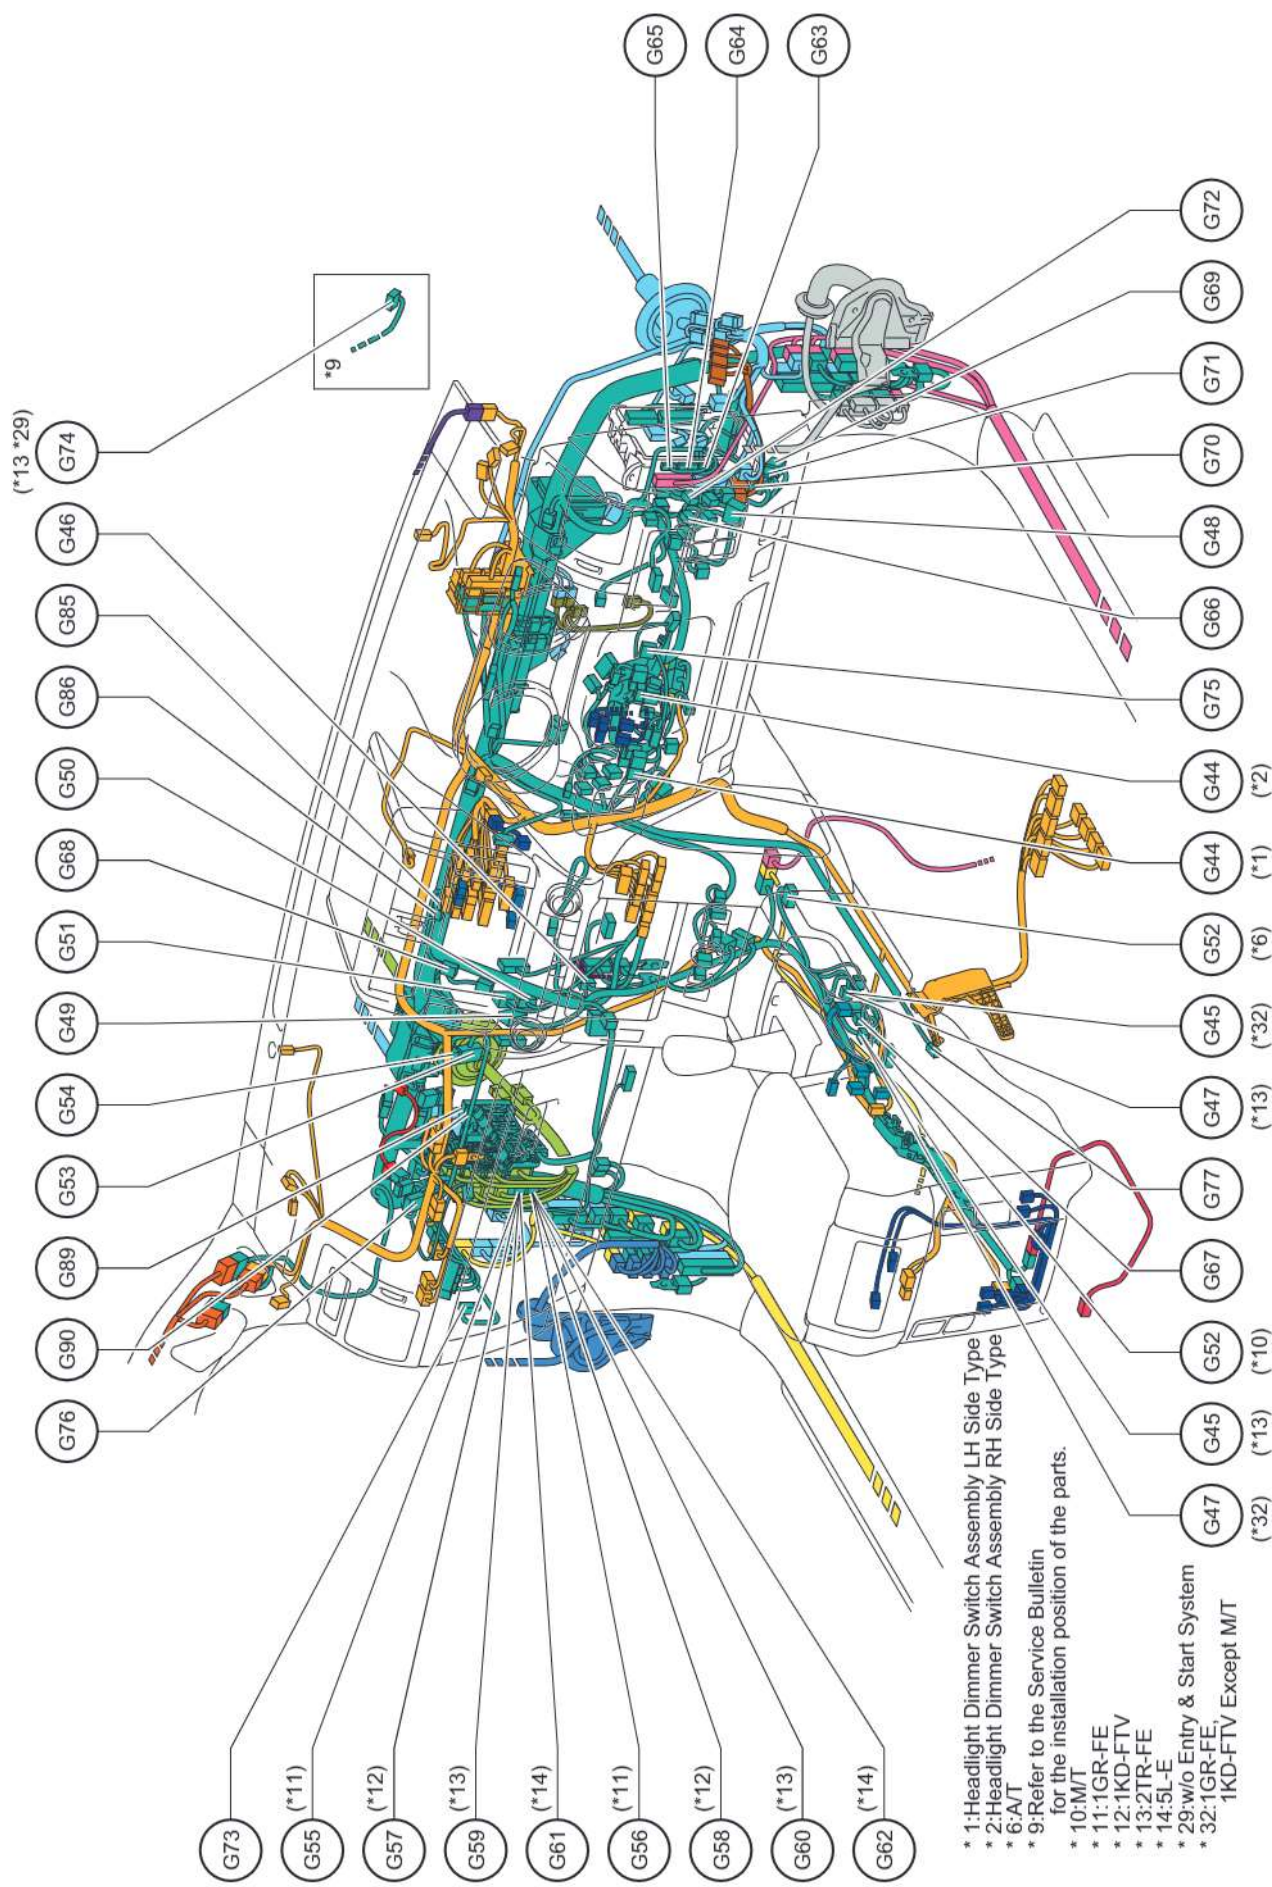


- \* 1:Headlight Dimmer Switch Assembly LH Side Type
- \* 2:Headlight Dimmer Switch Assembly RH Side Type
- \* 6:A/T
- \* 9:Refer to the Service Bulletin for the installation position of the parts.
- \* 10:M/T
- \* 11:1GR-FE
- \* 12:1KD-FTV
- \* 13:2TR-FE
- \* 14:5L-E
- \* 29:w/o Entry & Start System
- \* 32:1GR-FE, 1KD-FTV Except M/T


- G 44 Headlight Dimmer Switch Assembly
- G 45 Shift Lock Control ECU Sub-Assembly
- G 46 Power Steering ECU Assembly
- G 47 Transmission Control Switch
- G 48 DLC3
- G 49 Double Lock Door Control Relay Assembly
- G 50 Power Management Control ECU
- G 51 Power Management Control ECU
- G 52 Yaw Rate Sensor Assembly
- G 53 Four Wheel Drive Control ECU
- G 54 Four Wheel Drive Control ECU
- G 55 ECM
- G 56 ECM
- G 57 ECM
- G 58 ECM
- G 59 ECM
- G 60 ECM
- G 61 ECM
- G 62 ECM
- G 63 Main Body ECU
- G 64 Main Body ECU
- G 65 Main Body ECU
- G 66 Outer Mirror Heater Switch Assembly
- G 67 Shift Position Indicator (Console Box Assembly)
- G 68 Diode (Shift Position)
- G 69 Transmission Control ECU Assembly
- G 70 Transmission Control ECU Assembly
- G 71 Transmission Control ECU Assembly
- G 72 Headlight Cleaner Switch Assembly
- G 73 Airbag Cut Off Switch Cylinder Sub-Assembly
- G 74 Transponder Key ECU Assembly
- G 75 Transponder Key Amplifier
- G 76 Driving Support Switch Control ECU
- G 77 Parking Brake Switch Assembly
- G 85 Junction Connector
- G 86 Junction Connector
- G 89 Junction Connector
- G 90 Junction Connector

Position of Parts in Instrument Panel <RHD Front Separate Seat>


G44  
White

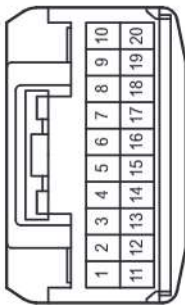


G45  
White

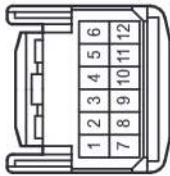


G46  
White

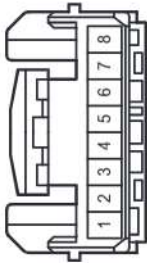


G47  
Black

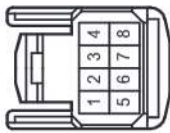


G48  
White

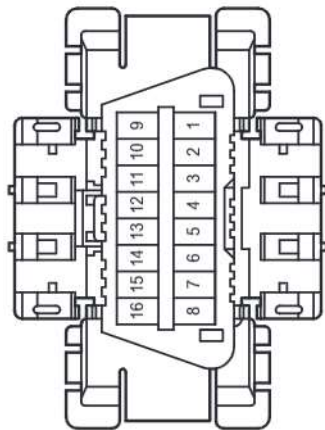


G49  
White

 

G50  
White

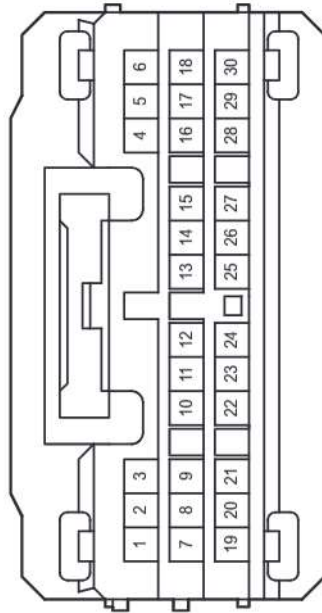


G51  
Black

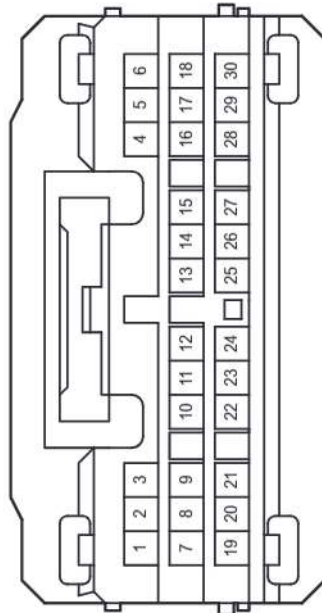


G52  
Black



G53  
Black

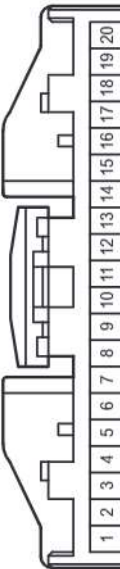


G54  
Black

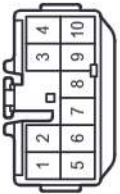




Position of Parts in Instrument Panel <RHD Front Separate Seat>


G55  
White

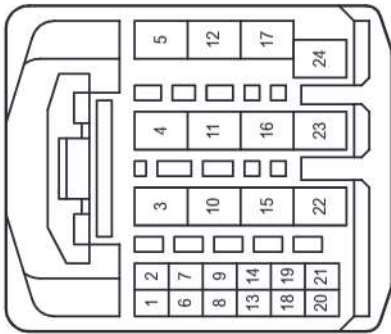


G56  
White

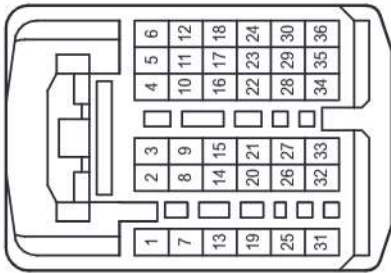


G57  
White

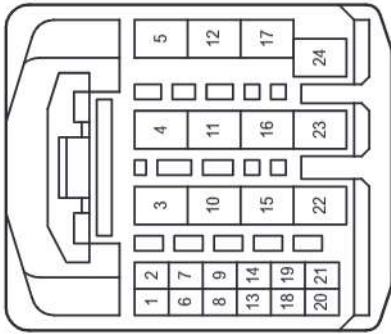


G58  
White

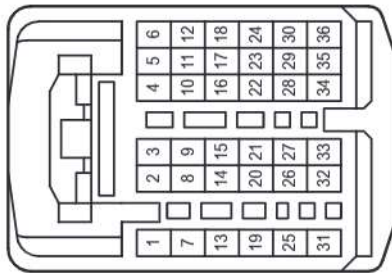


G59  
White

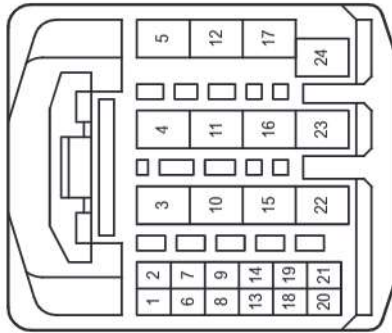


G60  
White

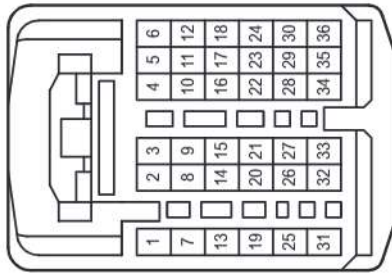


G61  
White

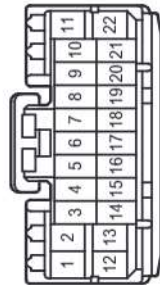

G62  
White

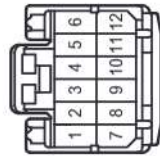


G63  
White

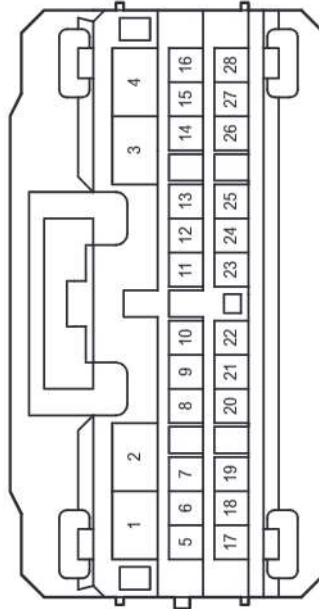


Position of Parts in Instrument Panel <RHD Front Separate Seat>


G64  
White

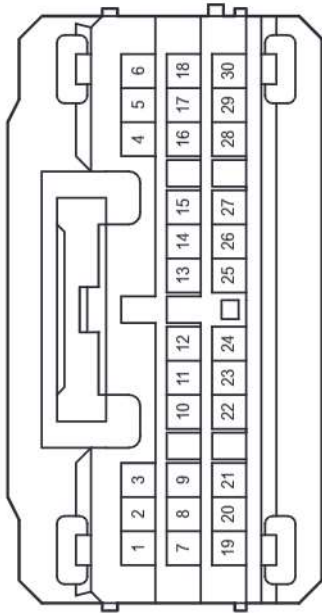


G66  
White

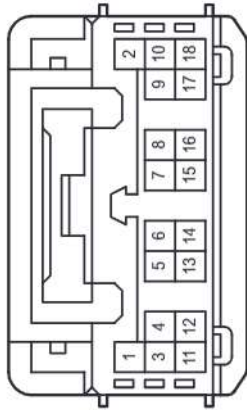

G66  
Black

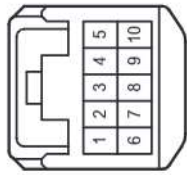


G67  
White

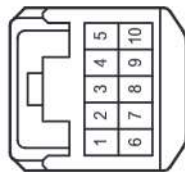


G68  
Gray




G69  
White

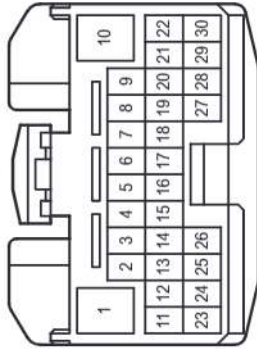


G70  
White

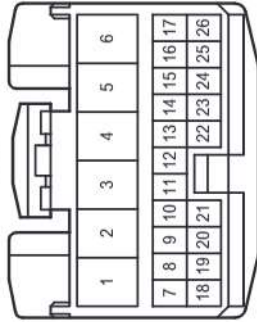

G71  
White

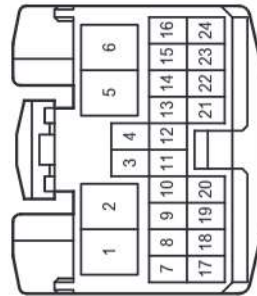


G72  
Black

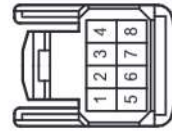


G73  
White




G74  
Black

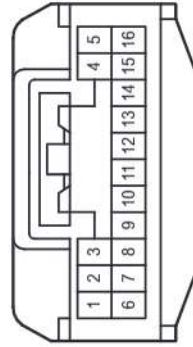

G75  
Black

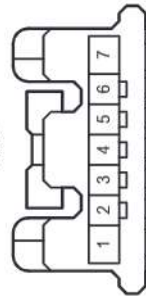

G76  
Black


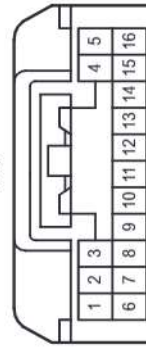


G77  
White





Position of Parts in Instrument Panel <RHD Front Separate Seat>



G85  
Black

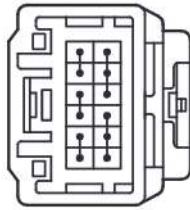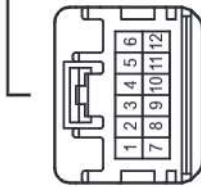



G86  
Black

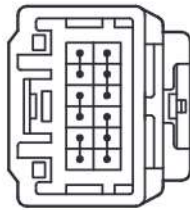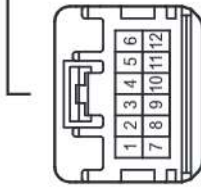

G89  
White

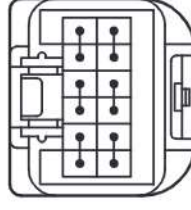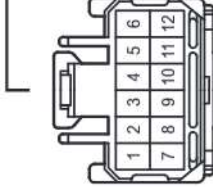

G90  
White

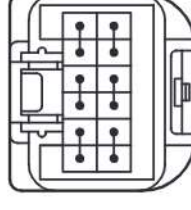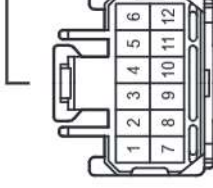




G 91	Junction Connector
G 92	Junction Connector
G 93	Junction Connector
G 95	Junction Connector
G 98	Junction Connector
G101	Junction Terminal
G102	Junction Terminal
G103	Junction Terminal
G104	Junction Connector
G105	Junction Connector
G106	Junction Connector
G107	Junction Connector
G108	Seat Heater Switch LH
G109	Seat Heater Switch RH
G110	Differential Lock Switch
G111	Suspension Control Switch
G112	No. 2 Absorber Control Switch
G113	Absorber Control Switch
G114	Interior Foot Light RH
G115	Interior Foot Light LH
G116	Multiplex Tilt & Telescopic ECU
G117	Seat Belt Control ECU
G118	Seat Belt Control ECU
G119	Driving Support ECU Assembly
G120	Windshield Wiper Switch Assembly
G121	Pre-Crash System Cancel Switch Assembly
G122	Power Tilt Motor
G123	Stabilizer Control ECU
G124	Room Light Switch Assembly
G125	Crawl Control Switch Assembly
G126	Junction Connector
G127	Junction Connector
G128	Junction Connector
G129	Junction Connector
G130	Junction Connector
G131	Junction Connector
G132	Junction Connector
G133	Junction Connector


G150 Shift Lock Control ECU Sub-Assembly

Position of Parts in Instrument Panel <RHD Front Separate Seat>


G91  
Gray

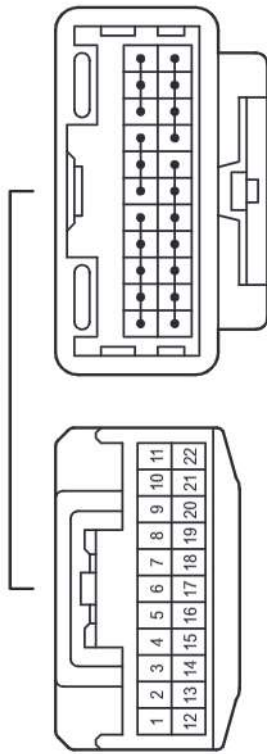


G92  
White

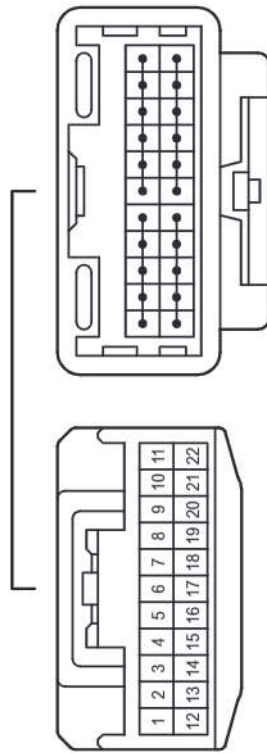


G93  
Gray

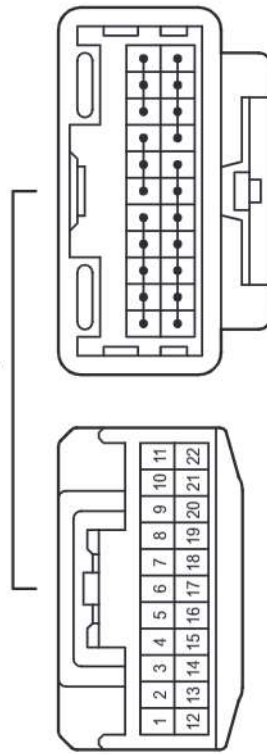


G95  
White

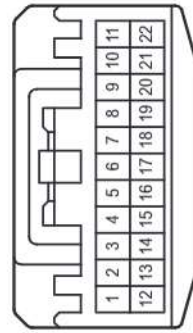


G98  
White

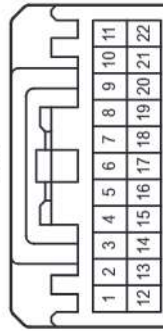


G101  
White

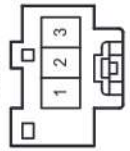





G102  
White

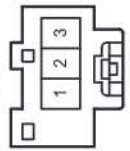

G103  
White

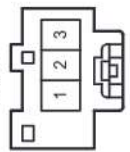

Position of Parts in Instrument Panel <RHD Front Separate Seat>

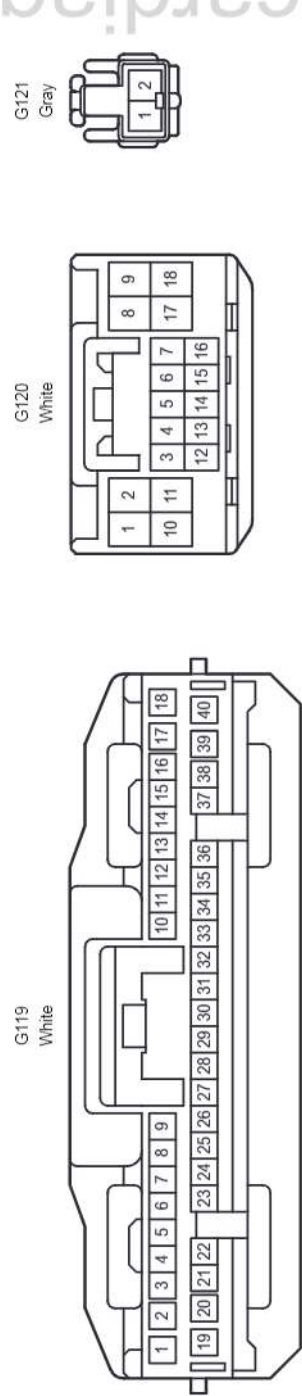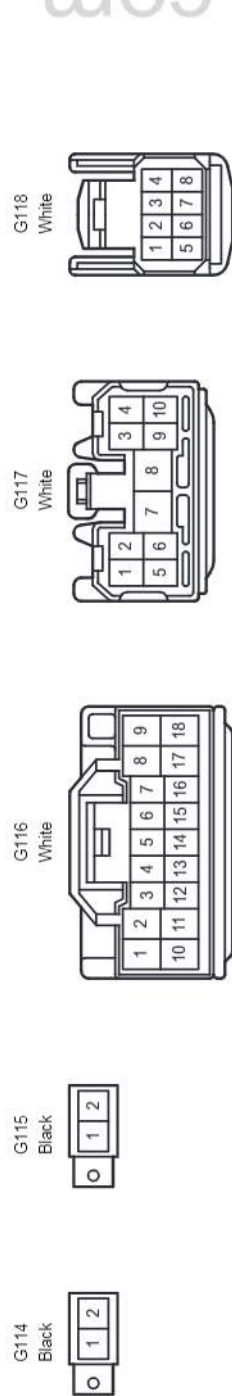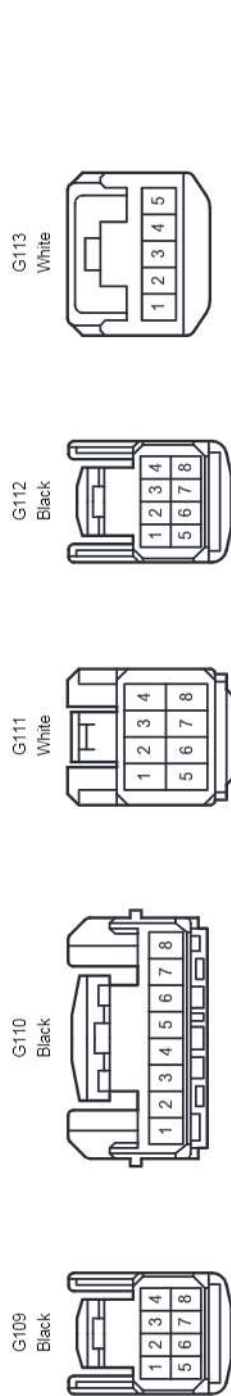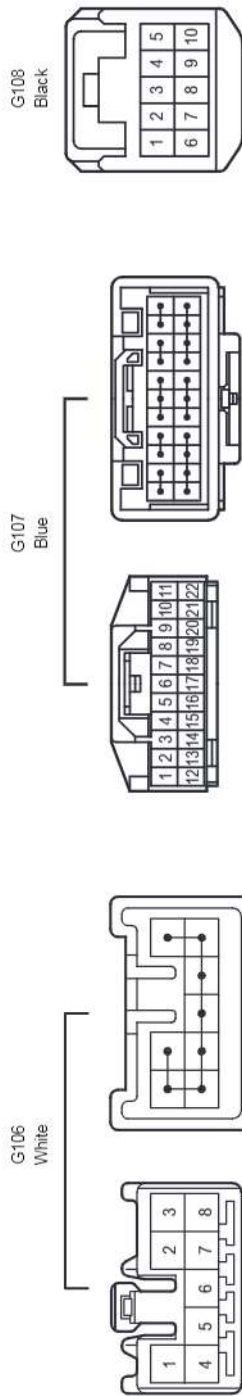


cardiagn.com




Position of Parts in Instrument Panel <RHD Front Separate Seat>



G125  
White

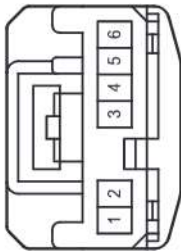


G126  
Black

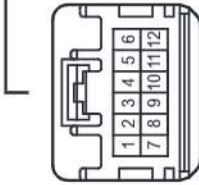



G127  
Black

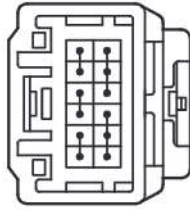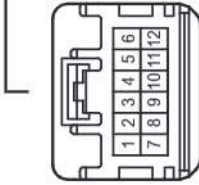


G128  
Black

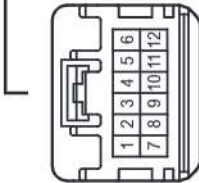



G129  
Black

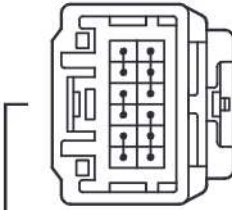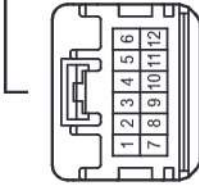


G130  
White

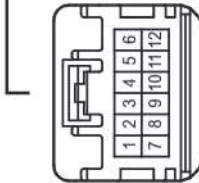


G131  
White

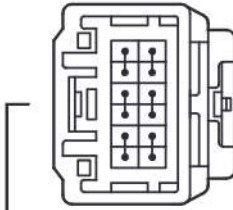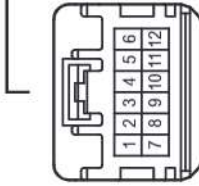


G132  
Gray

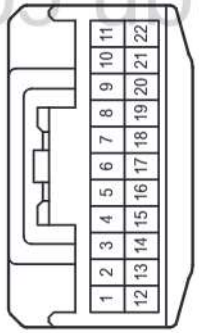


G133  
White

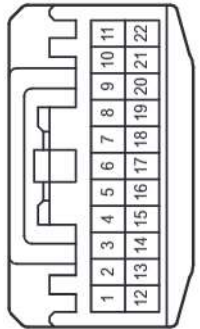


G134  
Gray

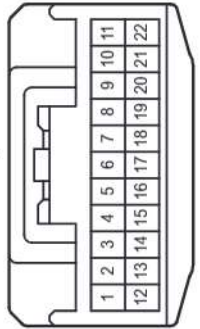

G135  
White

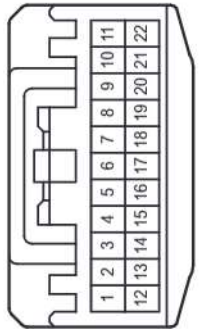


G136  
Blue

 


Position of Parts in Instrument Panel <RHD Front Separate Seat>


G143  
Black

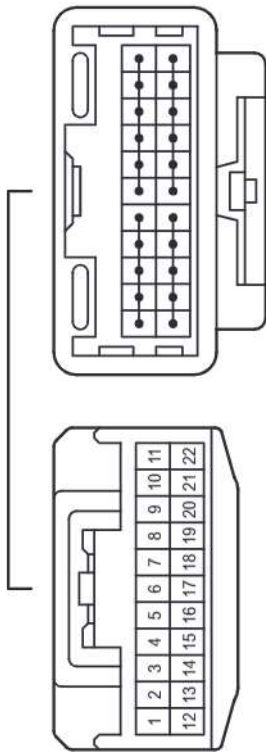

G144  
White

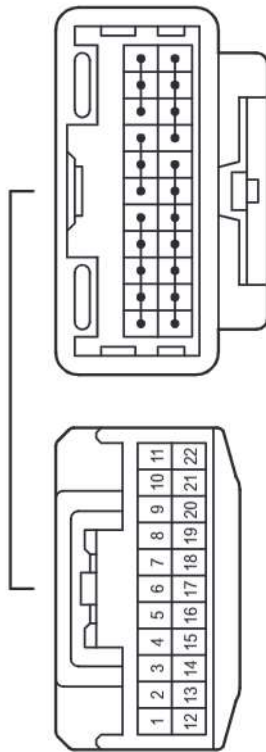

G150  
White

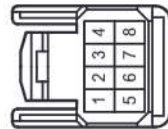

G145  
Gray



G146  
Gray




G147  
Gray



G149  
Gray



Position of Parts in Instrument Panel <RHD Front Separate Seat>

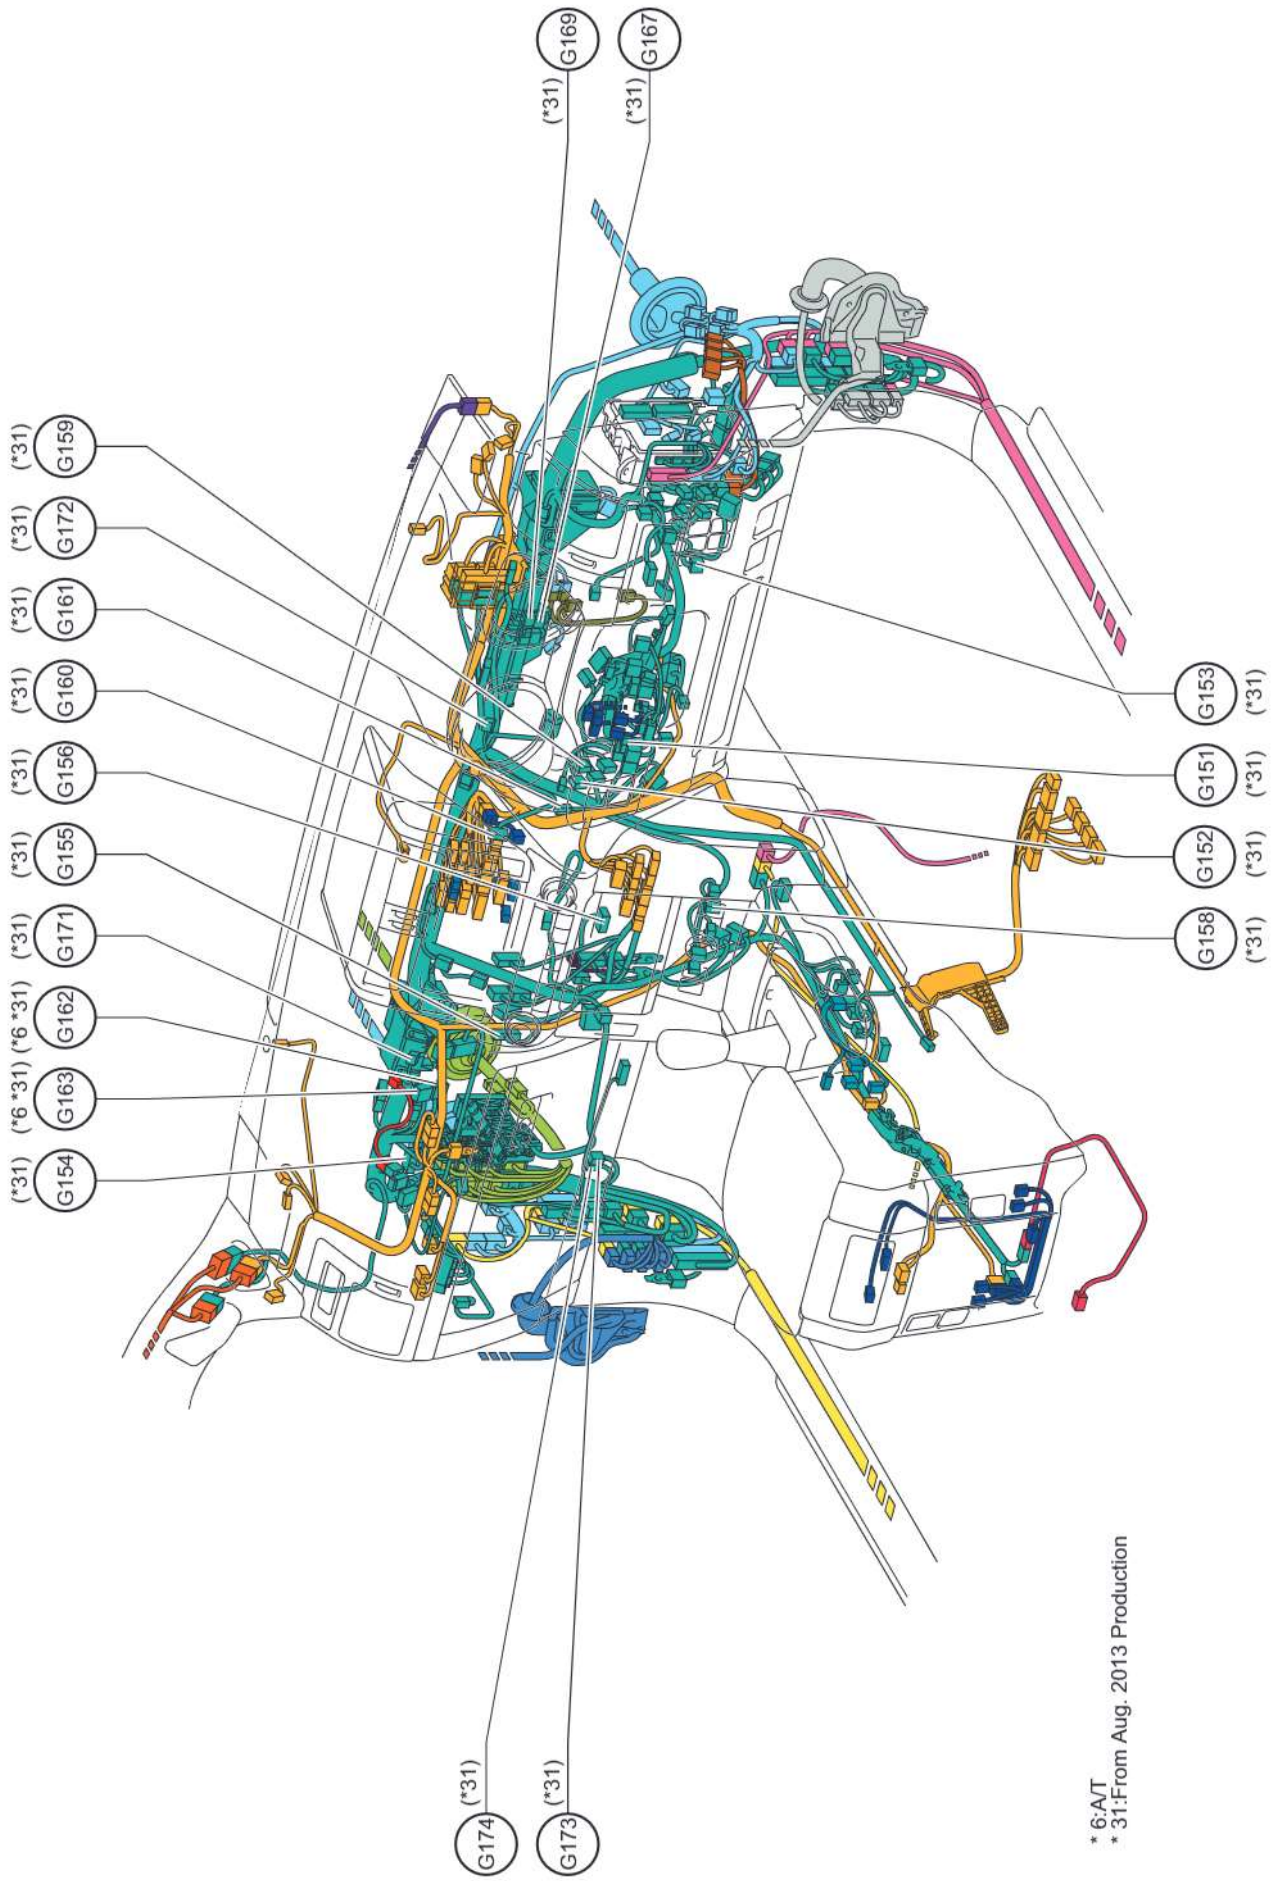


\* 6:A/T  
 \* 31:From Aug. 2013 Production


- G151 Spiral Cable Sub-Assembly
- G152 Steering Wheel Heater Control Assembly
- G153 Tire Pressure Warning Reset Switch
- G154 Clearance Warning ECU Assembly
- G155 Network Gateway ECU
- G156 Combination Switch Assembly
- G158 Downhill Assist Control Switch
- G159 Pattern Select Switch Assembly
- G160 Clearance Warning Indicator Assembly
- G161 No. 1 Clearance Warning Buzzer
- G162 Driving Support Switch Control ECU
- G163 Driving Support Switch Control ECU
- G167 Junction Connector
- G169 Junction Connector
- G171 Diode (Shift Position No. 1)
- G172 Diode (Shift Position No. 2)
- G173 Diode (Oil Pressure)
- G174 Diode (Viscous Relay)

Position of Parts in Instrument Panel <RHD Front Separate Seat>

 
G151  
Black




G152  
Blue

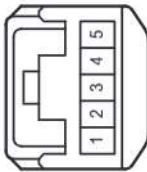


G153  
White

 


G154  
White

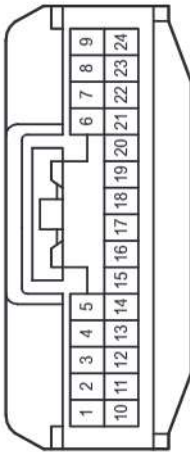


G155  
White

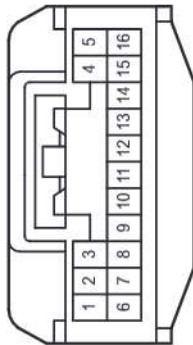


G156  
Black

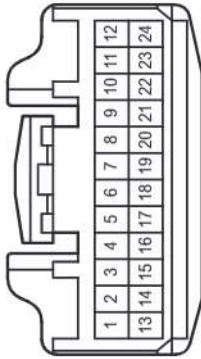


G158  
Gray

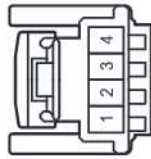

G159  
Gray

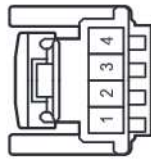


G160  
Black

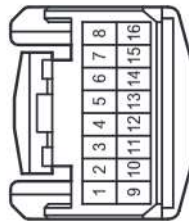


G161  
Black




G162  
Black

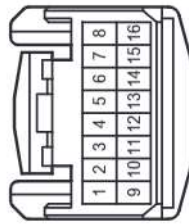


G163  
White

 

G167  
Blue

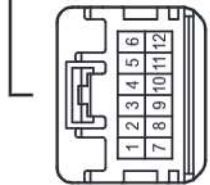

G169  
Blue

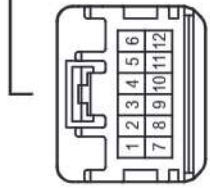

G171  
Gray



G172  
Gray




G173  
Gray

G174  
Gray

cardiagn.com





Position of Parts in Instrument Panel <RHD Front Separate Seat>

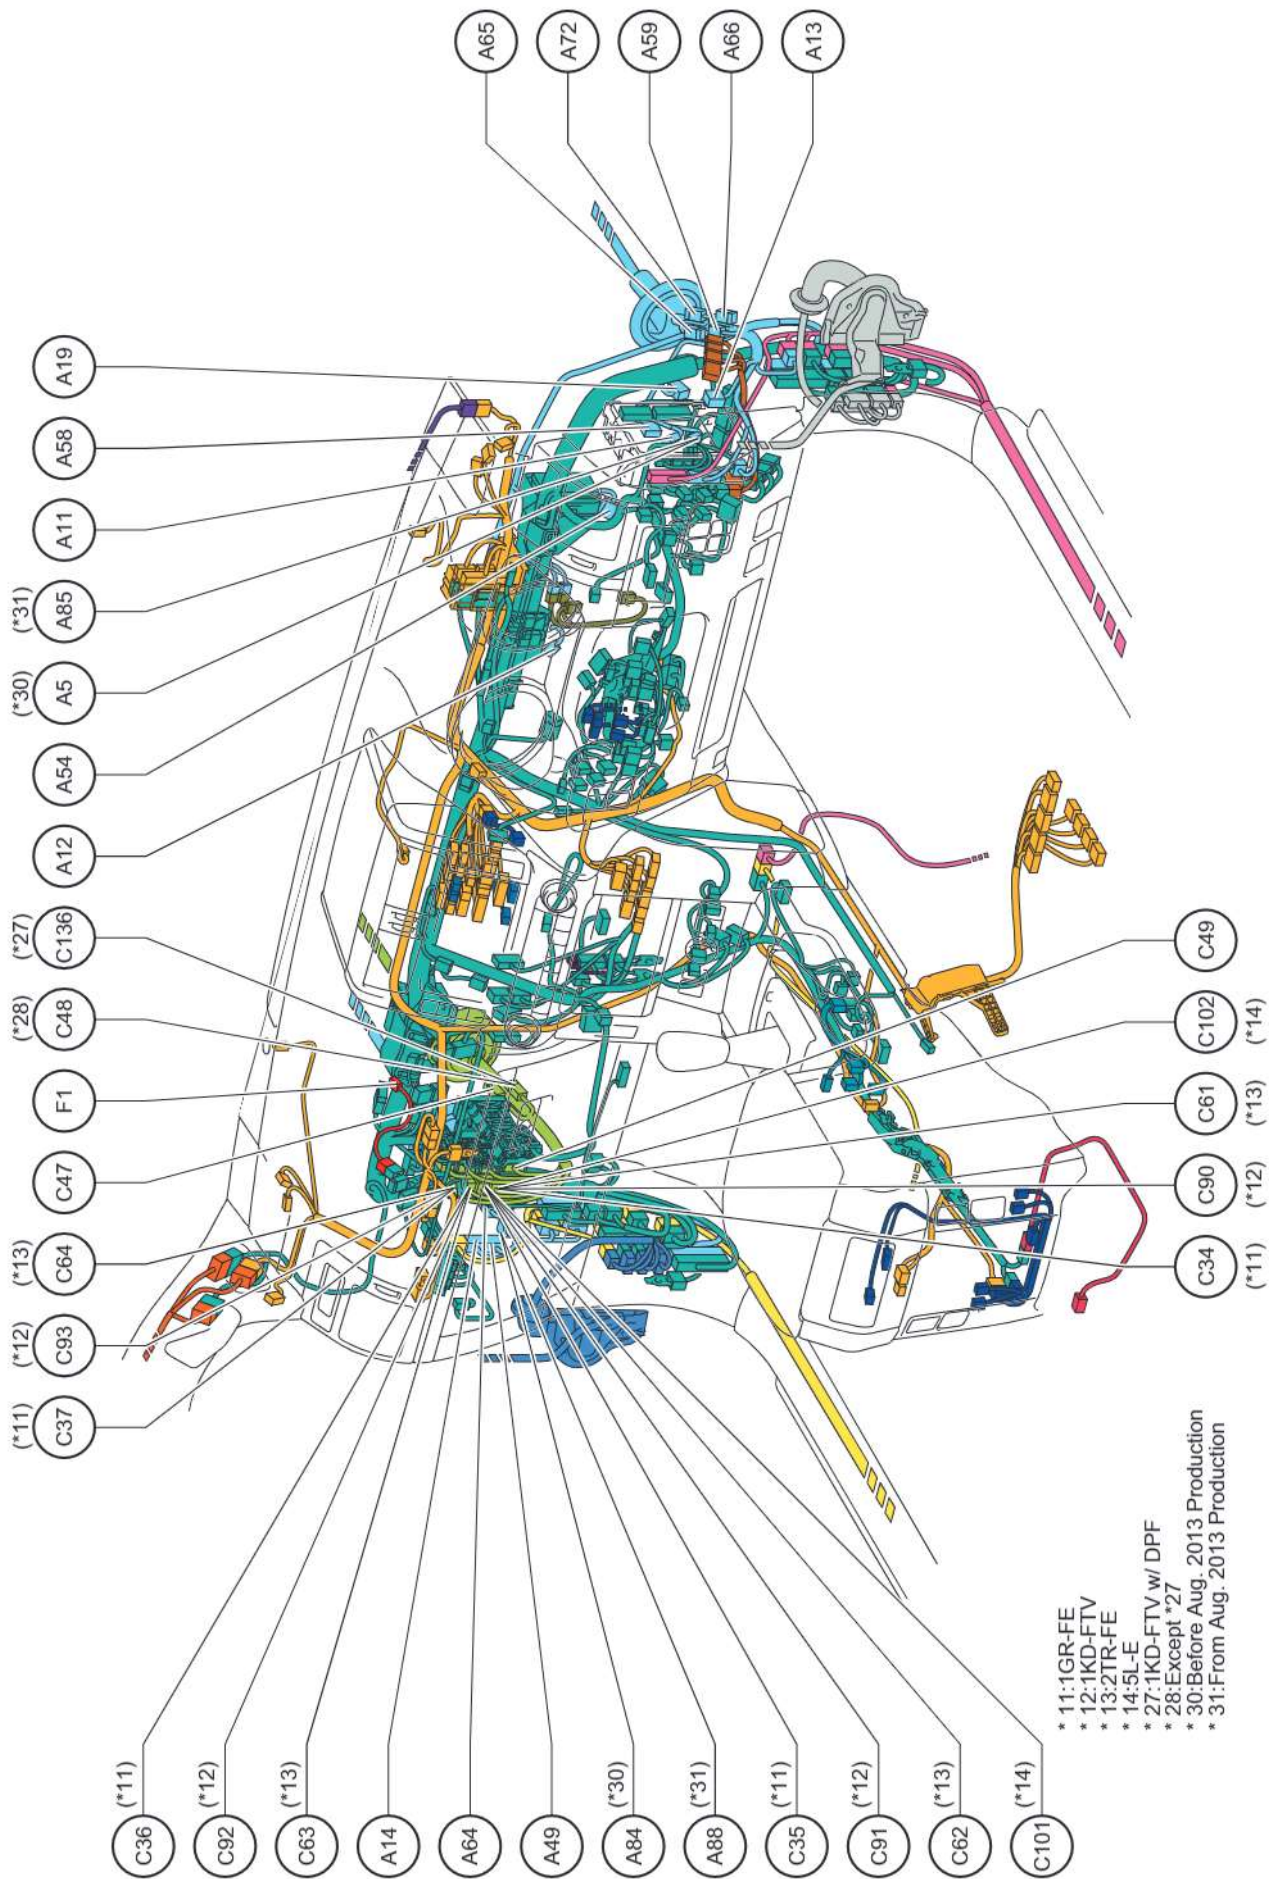

- \* 11:1GR-FE
- \* 12:1KD-FTV
- \* 13:2TR-FE
- \* 14:5L-E
- \* 27:1KD-FTV w/ DPF
- \* 28:Except \*27
- \* 30:Before Aug. 2013 Production
- \* 31:From Aug. 2013 Production

- A 5 Stop Light Switch Assembly
- A 11 Brake Pedal Load Sensing Switch
- A 12 Skid Control Buzzer Assembly
- A 13 Front Acceleration Sensor Assembly
- A 14 Suspension Control ECU
- A 19 Acceleration Sensor
- A 49 Suspension Control ECU
- A 54 Stop Light Control Relay Assembly
- A 58 Headlight Swivel ECU Assembly
- A 59 Diode (Stop Light)
- A 64 Junction Connector
- A 65 Junction Connector
- A 66 Junction Connector
- A 72 Junction Connector
- A 84 Diode (A/C COMP Relay)
- A 85 Stop Light Switch Assembly
- A 88 Diode (A/C COMP Relay)
- C 34 ECM
- C 35 ECM
- C 36 ECM
- C 37 ECM
- C 47 Junction Connector
- C 48 Junction Connector
- C 49 Junction Connector
- C 61 ECM
- C 62 ECM
- C 63 ECM
- C 64 ECM
- C 90 ECM
- C 91 ECM
- C 92 ECM
- C 93 ECM
- C101 ECM
- C102 ECM
- C136 Junction Connector
- F 1 Front Passenger Side Squib Circuit


Position of Parts in Instrument Panel <RHD Front Separate Seat>

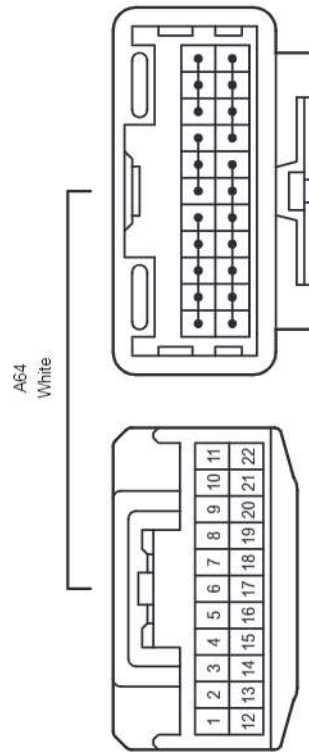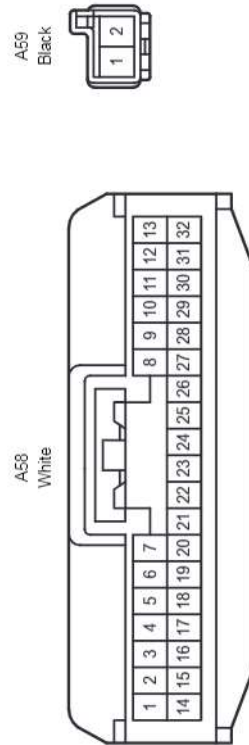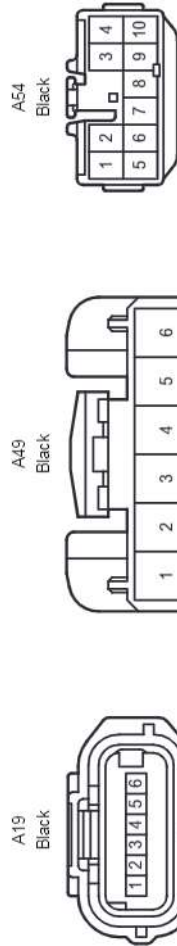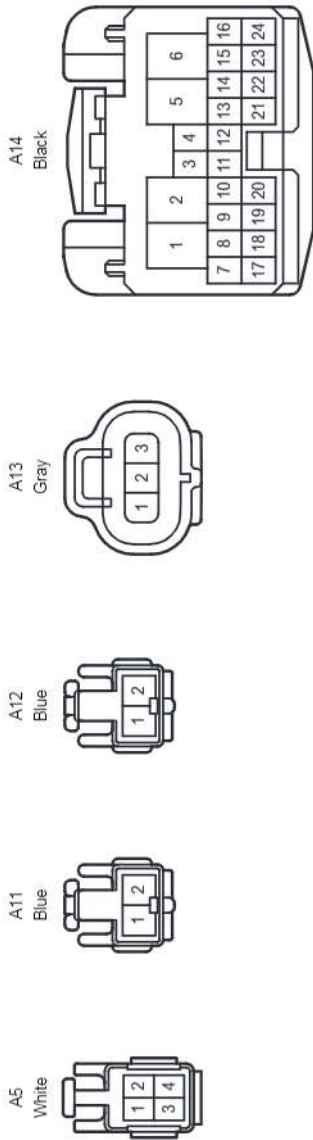




Position of Parts in Instrument Panel <RHD Front Separate Seat>


A65  
White

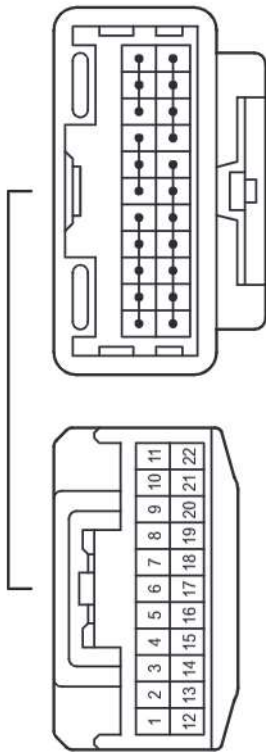


A66  
White

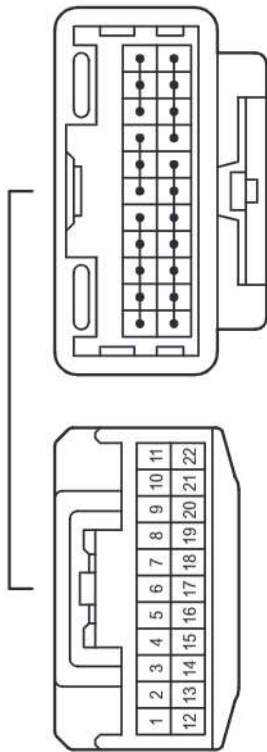


A72  
White

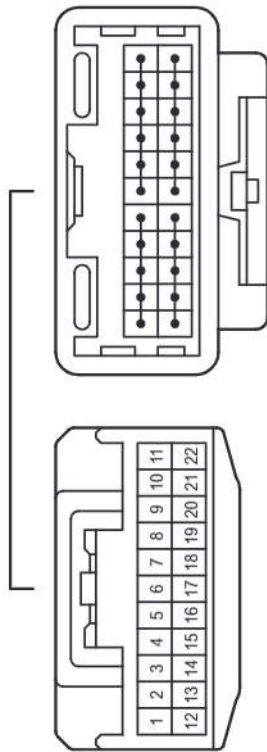


C34  
White

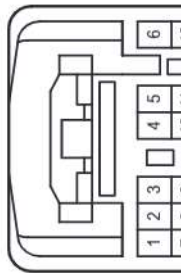

C35  
White

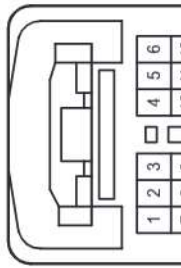


C36  
White

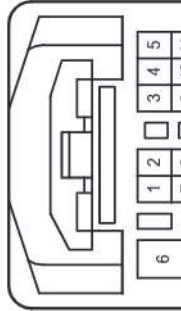

A84  
Gray



A85  
White

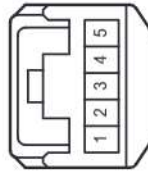


A88  
Gray




Position of Parts in Instrument Panel <RHD Front Separate Seat>


C37  
White

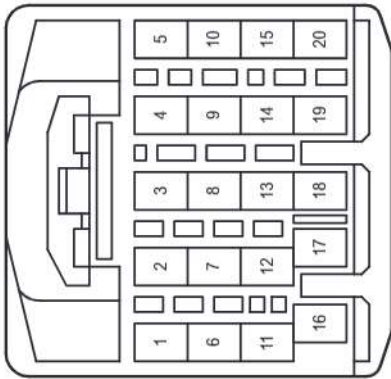


C47  
Black

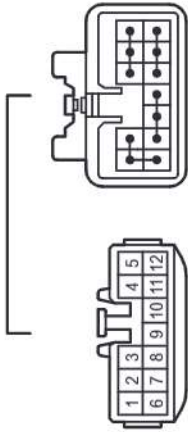


C48  
White

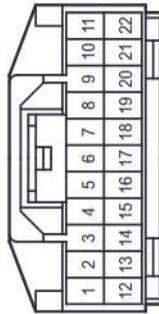


C49  
Blue

 


C61  
White

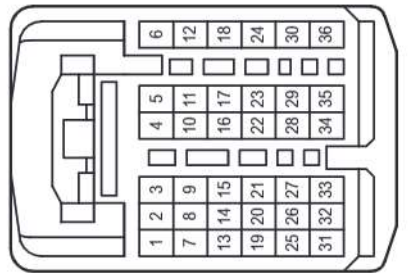

C62  
White

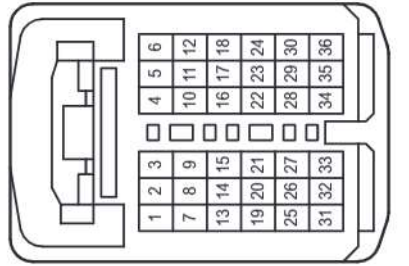


C63  
White

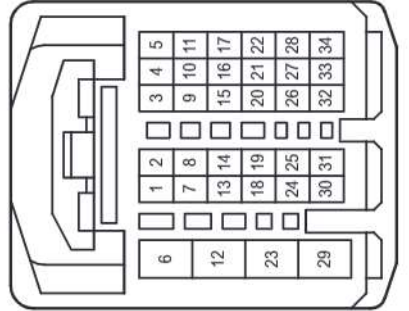


Position of Parts in Instrument Panel <RHD Front Separate Seat>


C64  
White

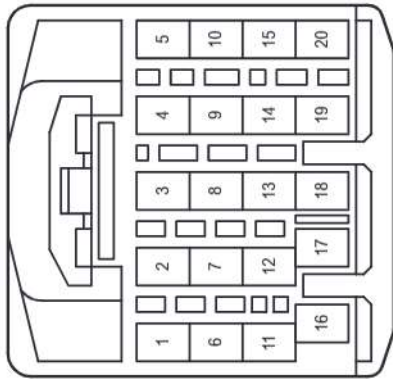


C90  
White

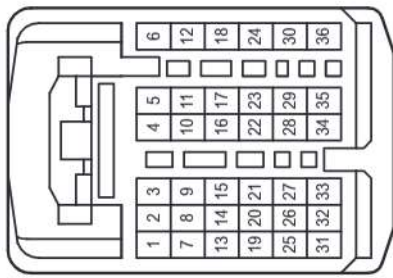


C91  
White

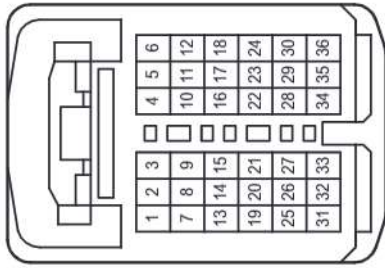


C92  
White

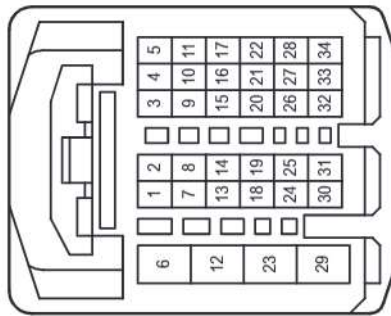


C93  
White

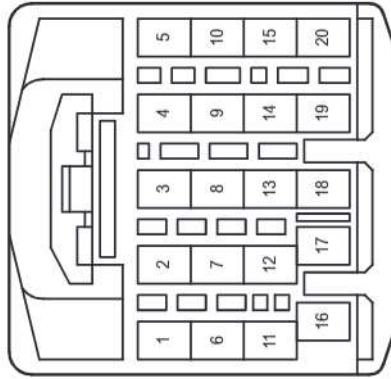


C101  
White

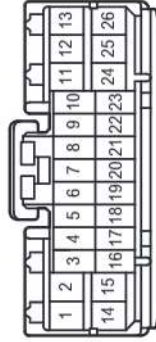


C102  
White

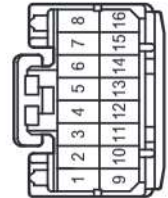

C136  
White

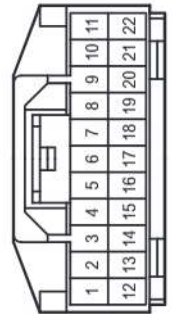

F1  
Orange

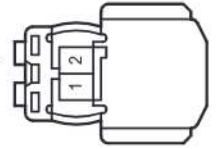





- H 1 Radio Receiver Assembly
- H 2 Display & Navigation Module Display
- H 3 Display & Navigation Module Display
- H 4 Display & Navigation Module Display
- H 5 Display & Navigation Module Display
- H 6 Stereo Component Amplifier Assembly
- H 7 Stereo Component Amplifier Assembly
- H 8 Display & Navigation Module Display
- H 9 Display & Navigation Module Display
- H 10 Front No. 1 Speaker Assembly RH
- H 11 Stereo Component Amplifier Assembly
- H 12 Stereo Component Amplifier Assembly
- H 13 Front No. 1 Speaker Assembly LH
- H 14 Front No. 4 Speaker Assembly
- H 15 Display & Navigation Module Display
- H 16 Multi-Media Module Navigation Assembly
- H 17 Multi-Media Interface ECU
- H 18 Multi-Media Interface ECU
- H 19 Automatic Light Control Sensor
- H 21 Front No. 3 Speaker Assembly RH
- H 22 Front No. 3 Speaker Assembly LH
- H 23 Theft Warning Indicator Light Assembly
- H 24 Junction Connector
- H 25 Junction Connector
- H 26 Junction Connector
- H 27 Radio Receiver Assembly
- H 28 Radio Receiver Assembly
- H 29 Radio Receiver Assembly
- H 30 Radio Receiver Assembly
- H 31 Stereo Component Amplifier Assembly
- H 32 Accessory Meter Assembly
- H 33 Multi-Media Interface ECU
- H 34 Front No. 2 Speaker Assembly RH
- H 35 Front No. 2 Speaker Assembly LH
- H 36 Radio Receiver Assembly
- H 37 Amplifier Antenna Assembly
- H 38 Radio Receiver Assembly
- H 39 No. 1 Stereo Jack Adapter Assembly

Position of Parts in Instrument Panel <RHD Front Separate Seat>


H1  
White

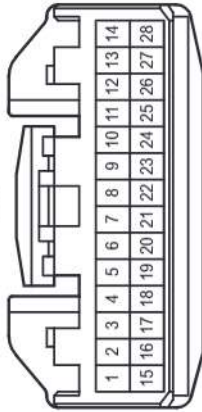


H2  
White

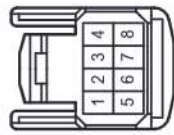


H3  
White

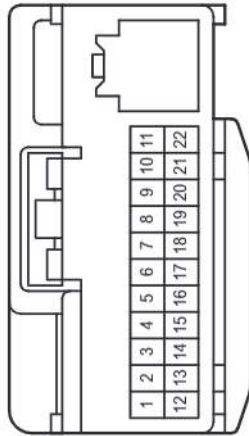


H4  
White

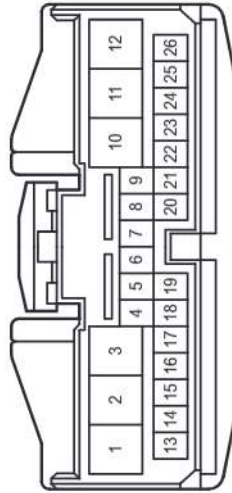


H5  
White

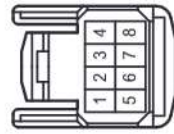


H6  
White

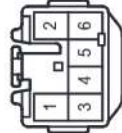


H7  
White

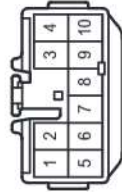


H8  
Blue

 


H9  
White

 


H10  
White

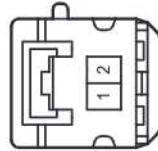


H11  
White

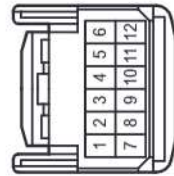


H12  
White

 


H13  
White

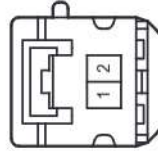


H14  
White

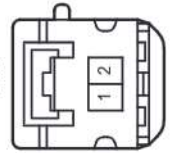


H15  
White

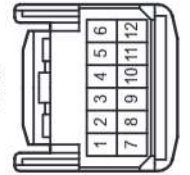


H16  
White

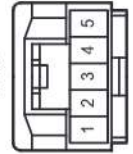

H17  
White

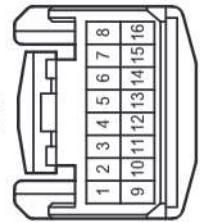

H18  
Black

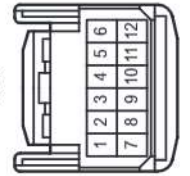

cardiagn.com

H19  
Blue

 
H21  
White

H22  
White


H23  
White

Position of Parts in Instrument Panel <RHD Front Separate Seat>


H24  
White




H25  
White

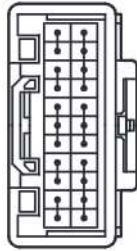


H26  
White

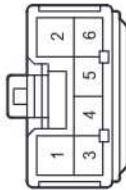


H27  
White

 


H28  
White

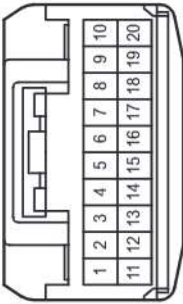


H29  
White

 


H30  
White

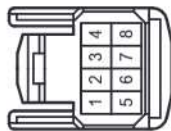


H31  
White

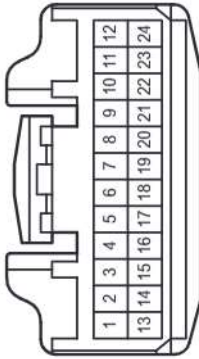


H32  
White

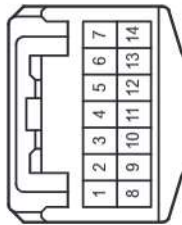


H33  
White

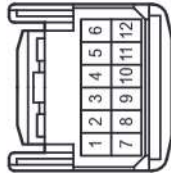


H34  
White

 

H35  
White

 


H36  
White

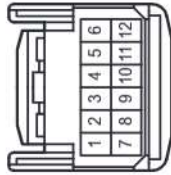


H37  
White




H38  
White

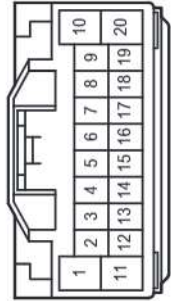


H39  
Black

 


H40  
Brown

 


H41  
Gray

 


H42  
Gray

 


H43  
Gray

 

H44  
Gray

 

Position of Parts in Instrument Panel <RHD Front Separate Seat>















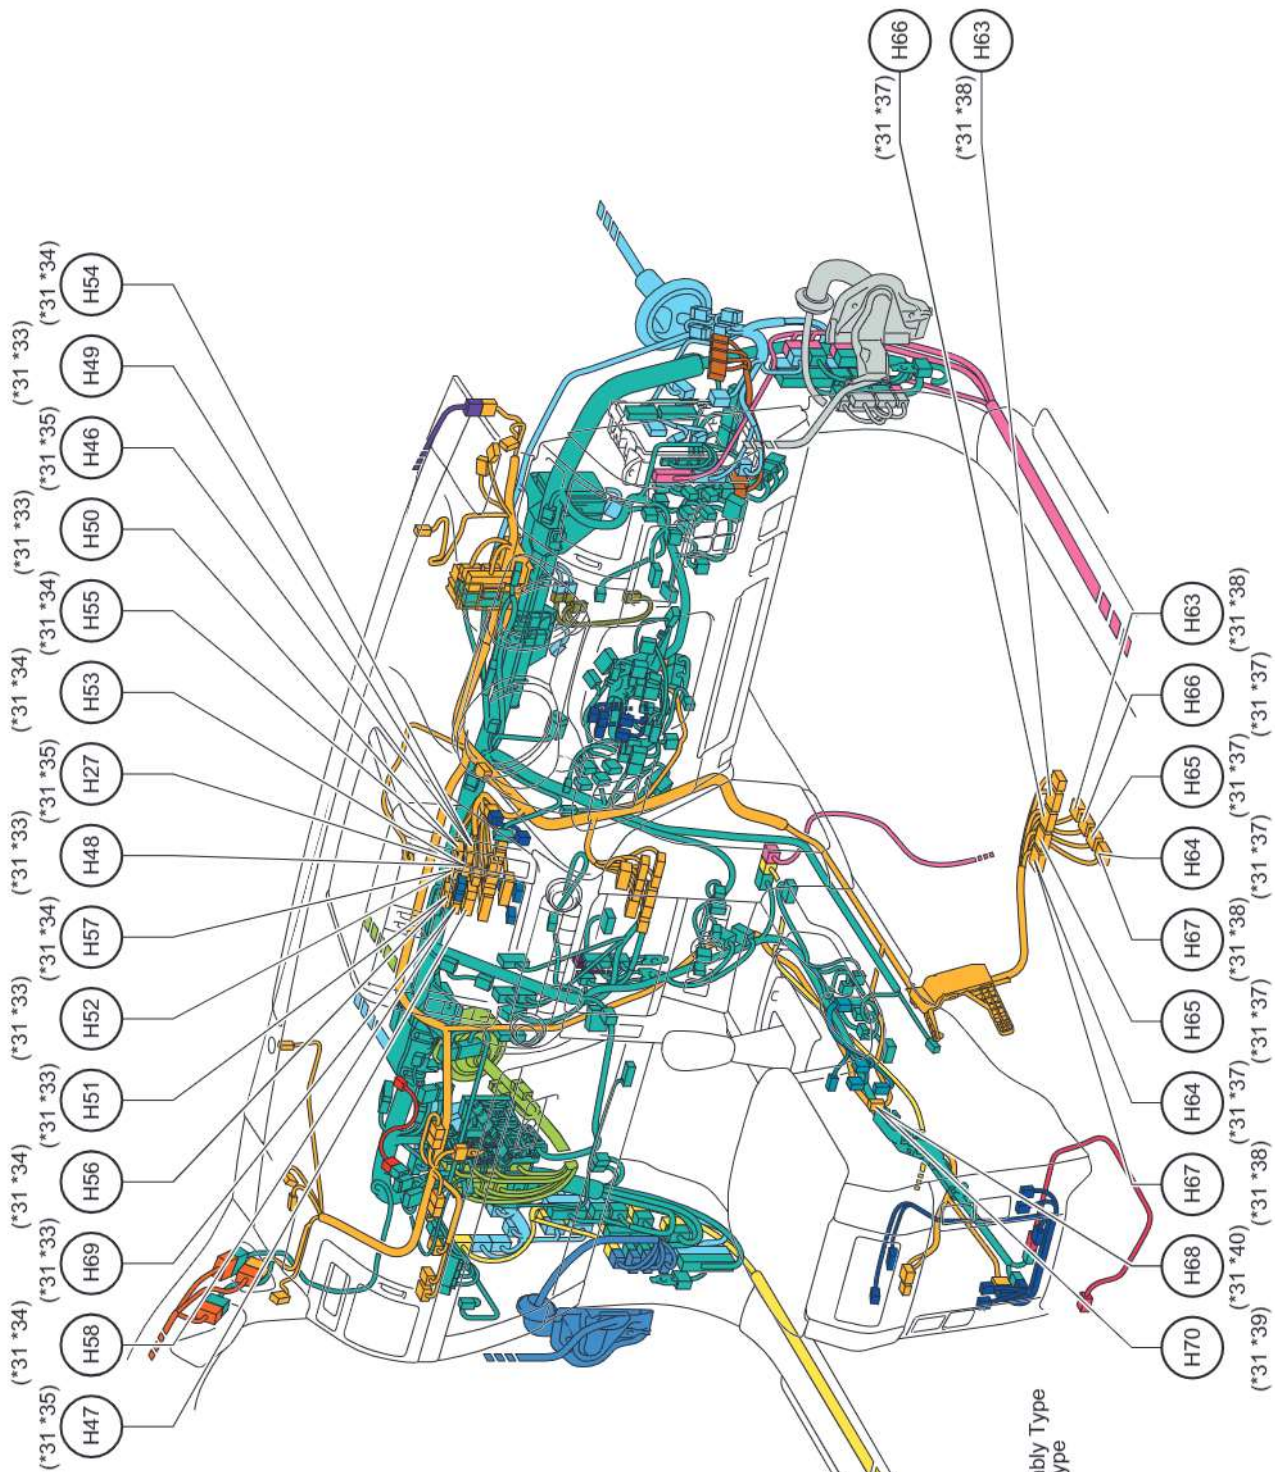


- \* 31: From Aug. 2013 Production
- \* 33: Radio & Display Receiver Assembly Type
- \* 34: Navigation Receiver Assembly Type
- \* 35: Radio Receiver Assembly Type
- \* 37: JBL Type
- \* 38: PIONEER Type
- \* 39: 1GR-FE Australia
- \* 40: Except \*39



- H 27 Radio Receiver Assembly
- H 46 Radio Receiver Assembly
- H 47 Radio Receiver Assembly
- H 48 Radio & Display Receiver Assembly
- H 49 Radio & Display Receiver Assembly
- H 50 Radio & Display Receiver Assembly
- H 51 Radio & Display Receiver Assembly
- H 52 Radio & Display Receiver Assembly
- H 53 Navigation Receiver Assembly
- H 54 Navigation Receiver Assembly
- H 55 Navigation Receiver Assembly
- H 56 Navigation Receiver Assembly
- H 57 Navigation Receiver Assembly
- H 58 Navigation Receiver Assembly
- H 63 Stereo Component Amplifier Assembly
- H 64 Stereo Component Amplifier Assembly
- H 65 Stereo Component Amplifier Assembly
- H 66 Stereo Component Amplifier Assembly
- H 67 Stereo Component Amplifier Assembly
- H 68 No. 1 Stereo Jack Adapter Assembly
- H 69 Radio & Display Receiver Assembly
- H 70 No. 1 Stereo Jack Adapter Assembly


Position of Parts in Instrument Panel <RHD Front Separate Seat>

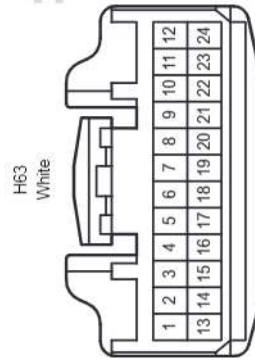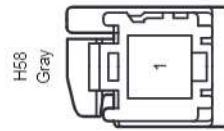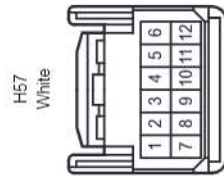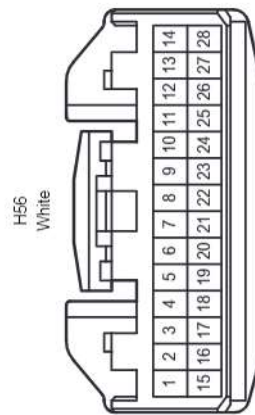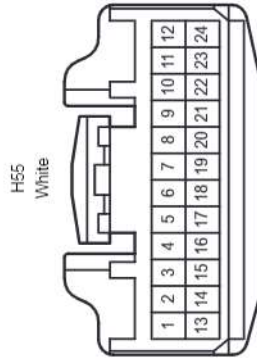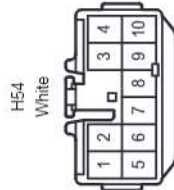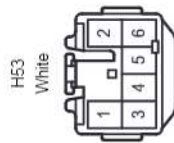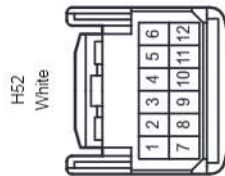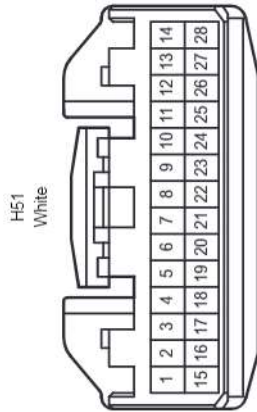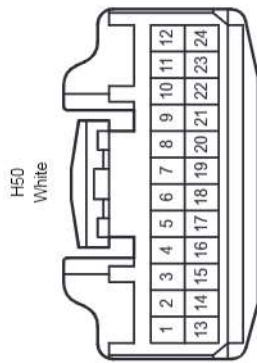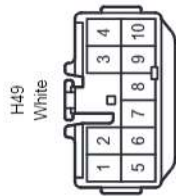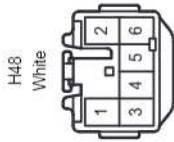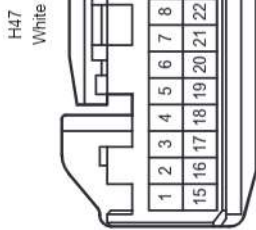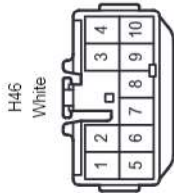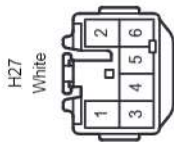


cardiagn.com

Position of Parts in Instrument Panel <RHD Front Separate Seat>


H69  
Gray

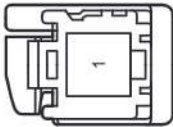

H70  
Black

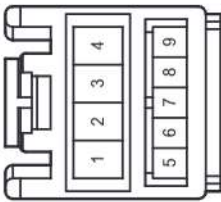

Position of Parts in Instrument Panel <RHD Front Separate Seat>

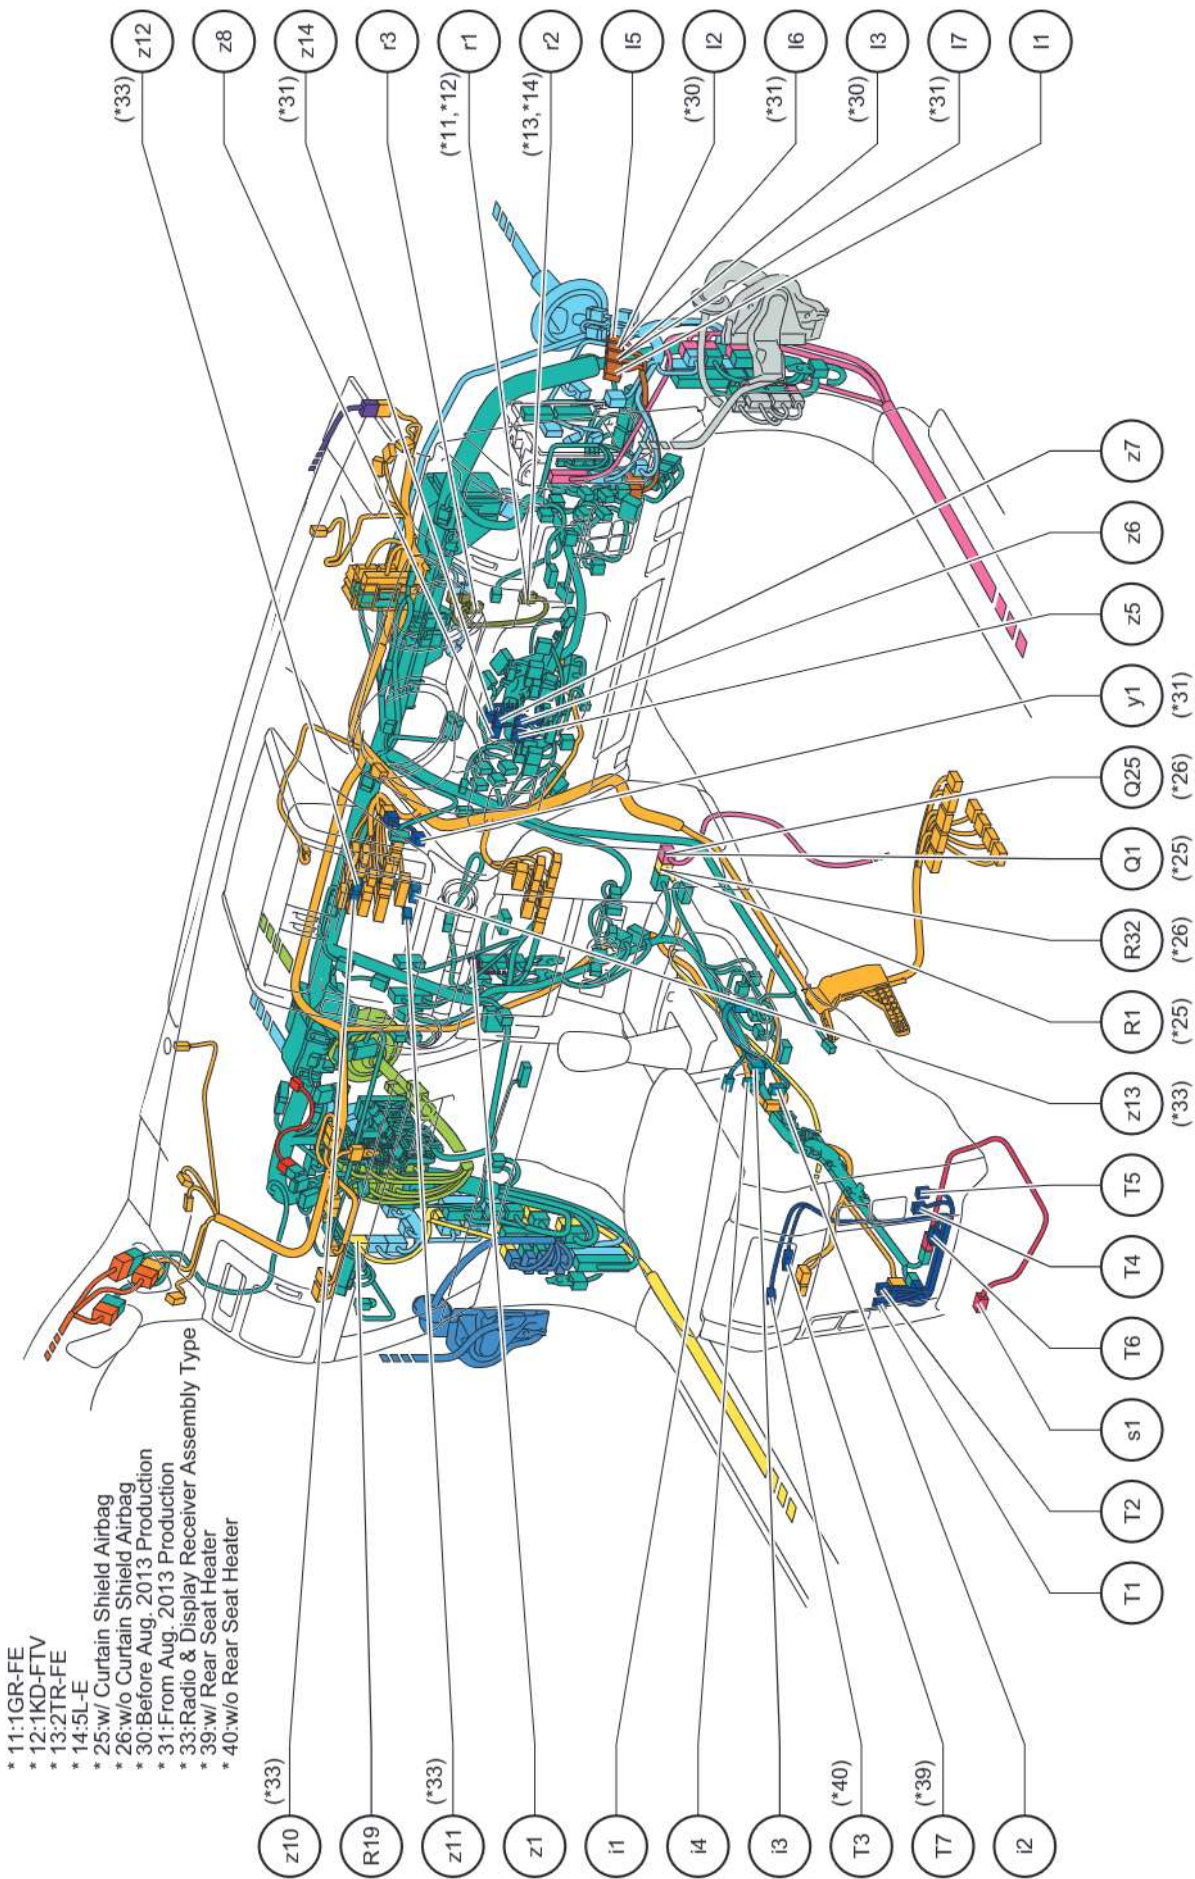


- \* 11:1GR-FE
- \* 12:1KD-FTV
- \* 13:2TR-FE
- \* 14:5L-E
- \* 25:w/ Curtain Shield Airbag
- \* 26:w/o Curtain Shield Airbag
- \* 30:Before Aug. 2013 Production
- \* 31:From Aug. 2013 Production
- \* 33:Radio & Display Receiver Assembly Type
- \* 39:w/ Rear Seat Heater
- \* 40:w/o Rear Seat Heater


I	1	Clearance Warning ECU Assembly
I	2	Parking Assist ECU
I	3	Parking Assist ECU
I	5	Parking Assist ECU
I	6	Parking Assist ECU
I	7	Parking Assist ECU
Q	1	Airbag Sensor Assembly
Q	25	Airbag Sensor Assembly
R	1	Airbag Sensor Assembly
R	19	Suspension Control ECU
R	32	Airbag Sensor Assembly
T	1	Video Adapter Terminal
T	2	Headphone Terminal RH
T	3	A/C Control Assembly
T	4	Headphone Terminal LH
T	5	Power Outlet Socket Assembly
T	6	Cooling Box Assembly
T	7	A/C Control Assembly
i	1	No. 1 Indoor Electrical Key Antenna Assembly
i	2	Power Point Socket Assembly
i	3	Seat Heater Switch RH
i	4	Seat Heater Switch LH
r	1	Clutch Start Switch Assembly
r	2	Clutch Start Switch Assembly
r	3	Clutch Switch Assembly
s	1	No. 2 Indoor Electrical Key Antenna Assembly
y	1	Hazard Warning Signal Switch Assembly
z	1	A/C Amplifier Assembly , A/C Blower Assembly
z	5	Driver Side Squib Circuit , Spiral Cable Sub-Assembly
z	6	Driver Side Squib 2nd Step Circuit , Spiral Cable Sub-Assembly
z	7	Cruise Control Main Switch , Spiral Cable Sub-Assembly , Steering Pad Switch Assembly
z	8	Spiral Cable Sub-Assembly , Steering Pad Switch Assembly
z	10	Radio & Display Receiver Assembly
z	11	Navigation ECU Assembly
z	12	Radio & Display Receiver Assembly
z	13	Navigation ECU Assembly
z	14	Steering Wheel Heater Control Assembly

Position of Parts in Instrument Panel <RHD Front Separate Seat>


11  
White

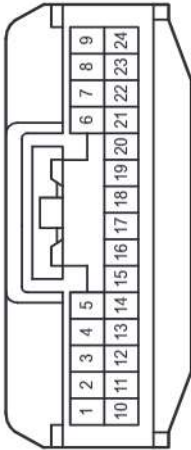


12  
White

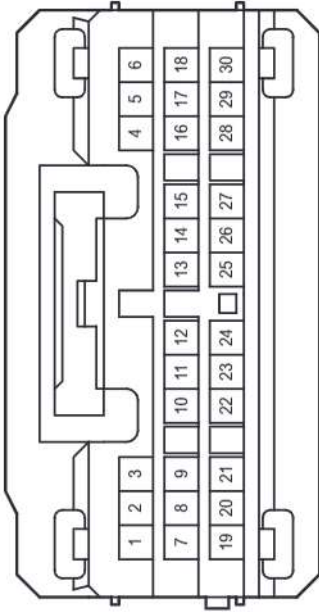


13  
White

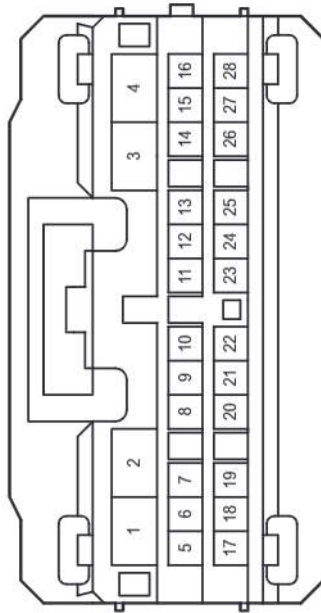


15  
White

 

16  
White

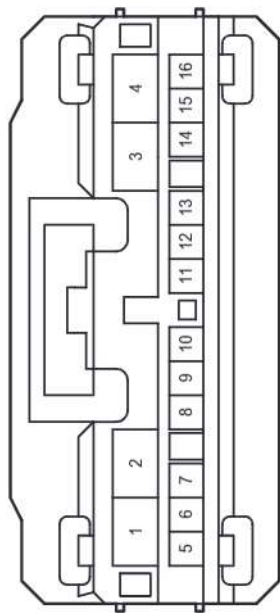

17  
Black

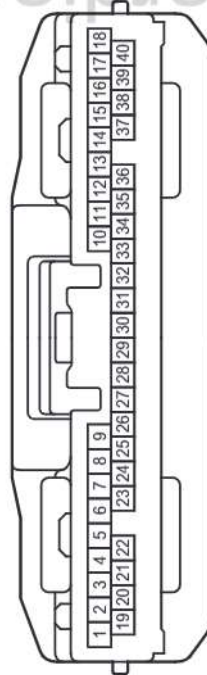





Q1  
Yellow

Q25  
Yellow

R1  
Yellow

R19  
Black


Position of Parts in Instrument Panel <RHD Front Separate Seat>

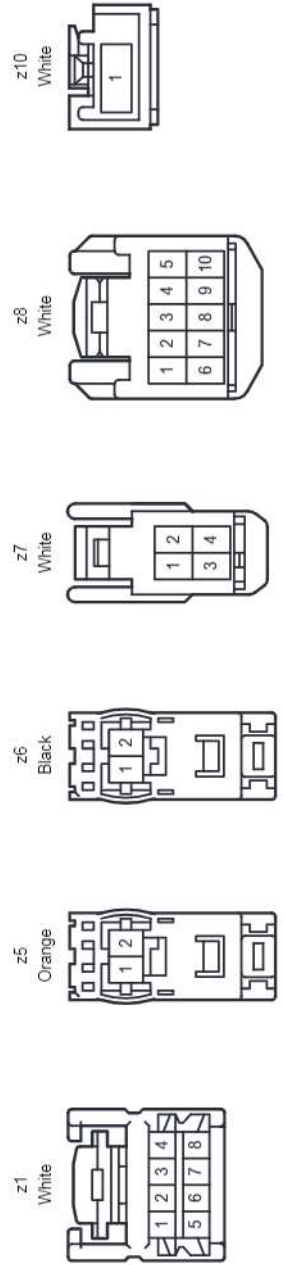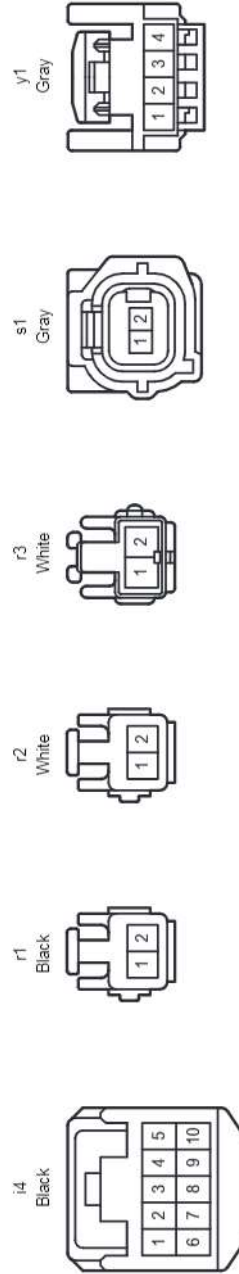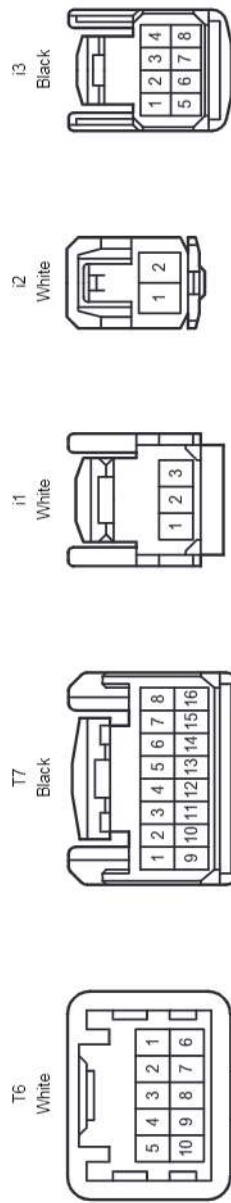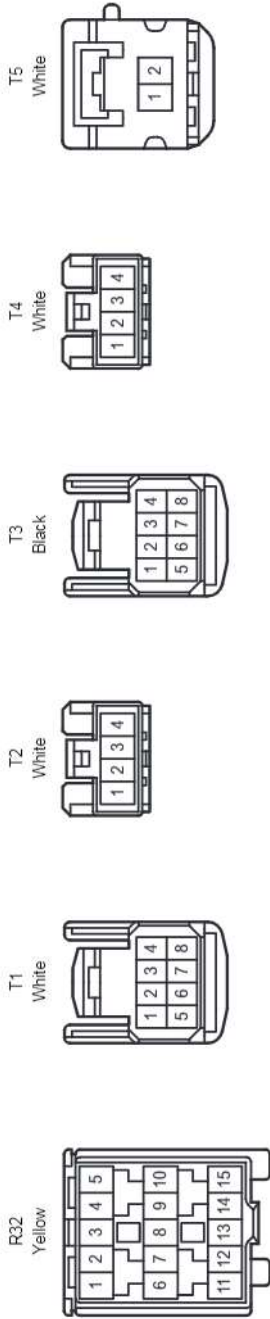

cardiagn.com

**z11**  
White  
**z12**  
White  
**z13**  
Black  
**z14**  
White




Wire and Wire in Instrument Panel <RHD Front Separate Seat>

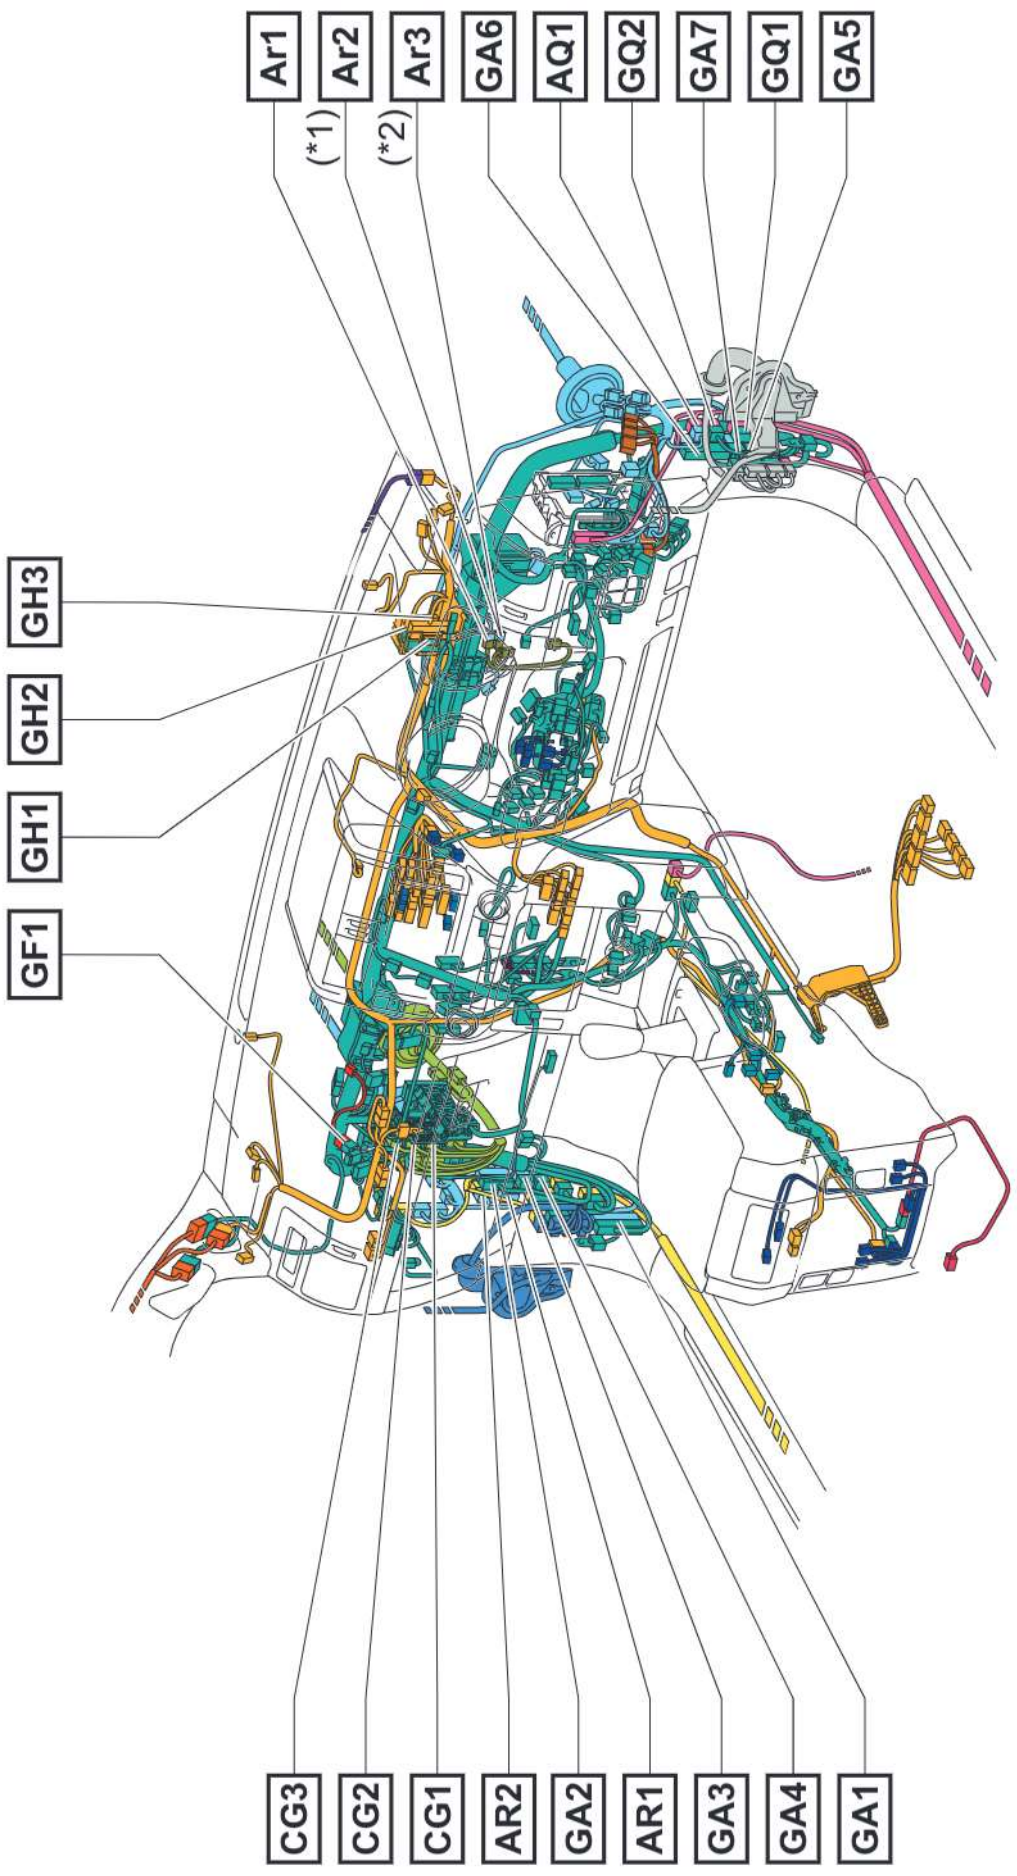

\* 1: Before Oct. 2010 Production  
\* 2: From Oct. 2010 Production




Wire and Wire in Instrument Panel <RHD Front Separate Seat>

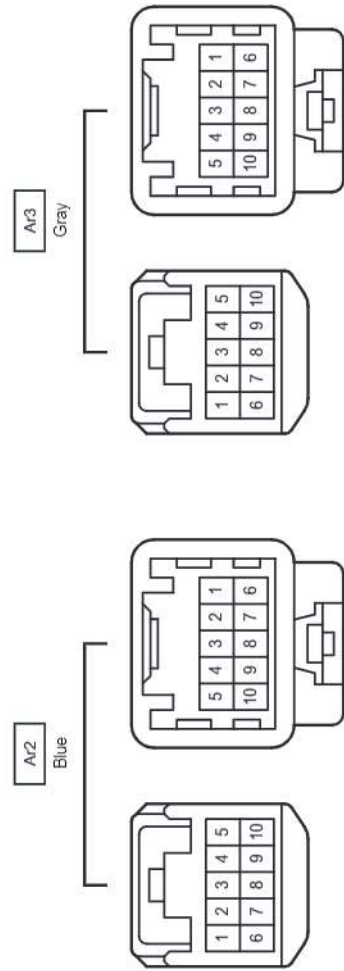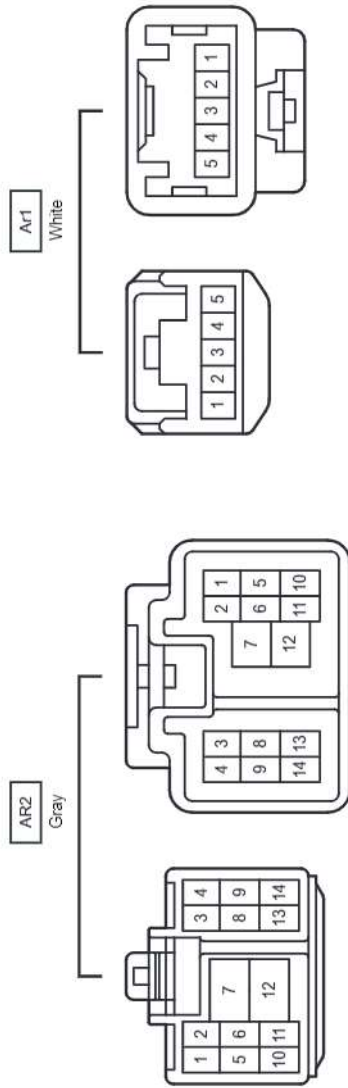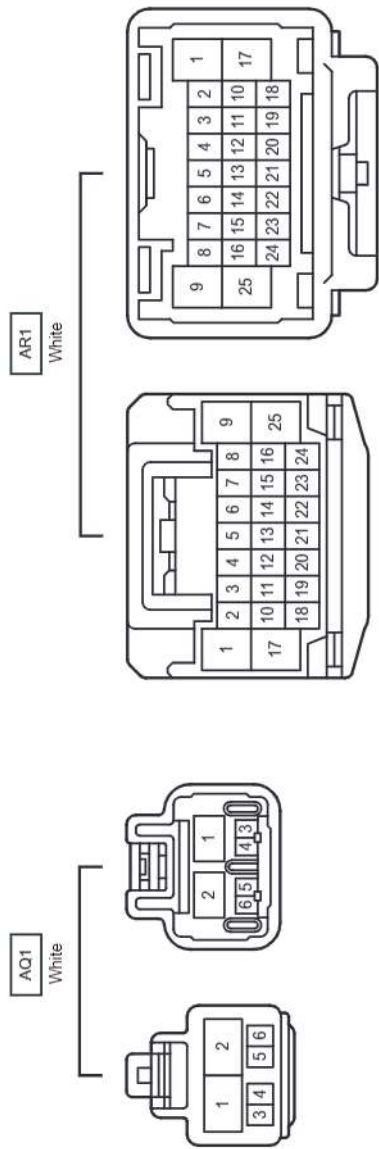


cardiagn.com

Wire and Wire in Instrument Panel <RHD Front Separate Seat>


CG3  
White

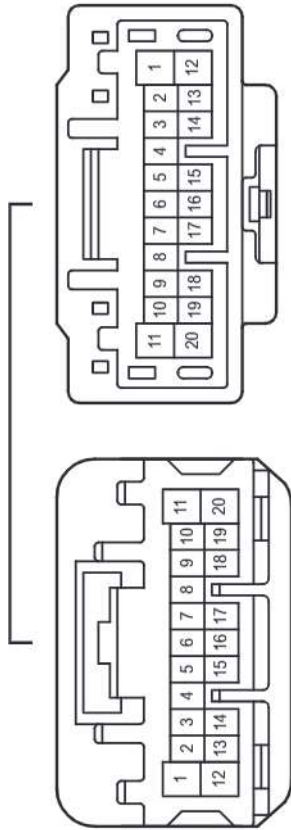

GA1  
White

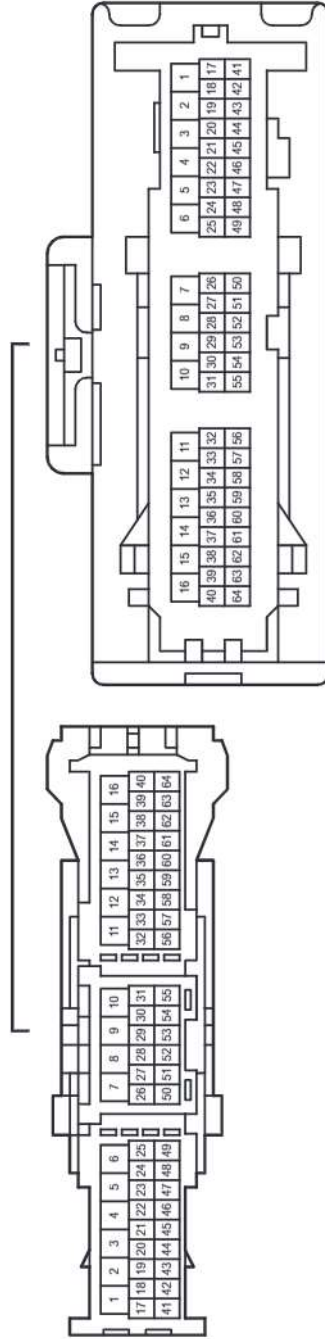

GA2  
White

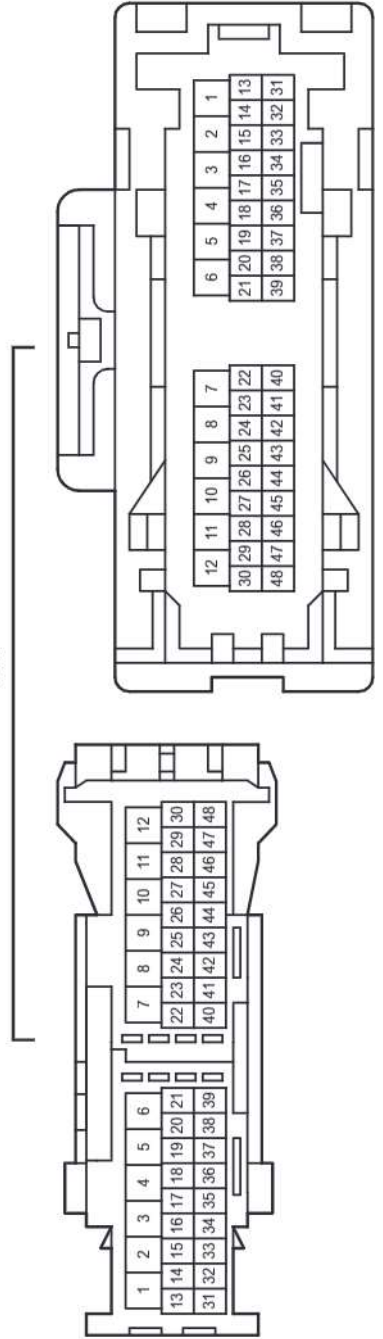


GA3  
Black

GA4  
White


GA5  
Yellow

Wire and Wire in Instrument Panel <RHD Front Separate Seat>


GA6  
White

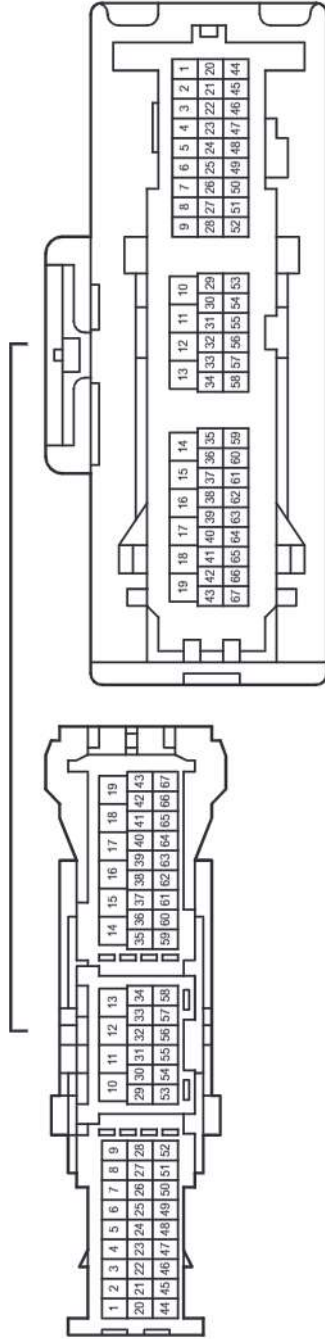


GA7  
Black

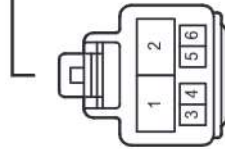


GF1  
Yellow

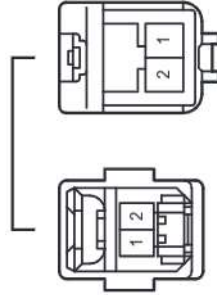


GH1  
White

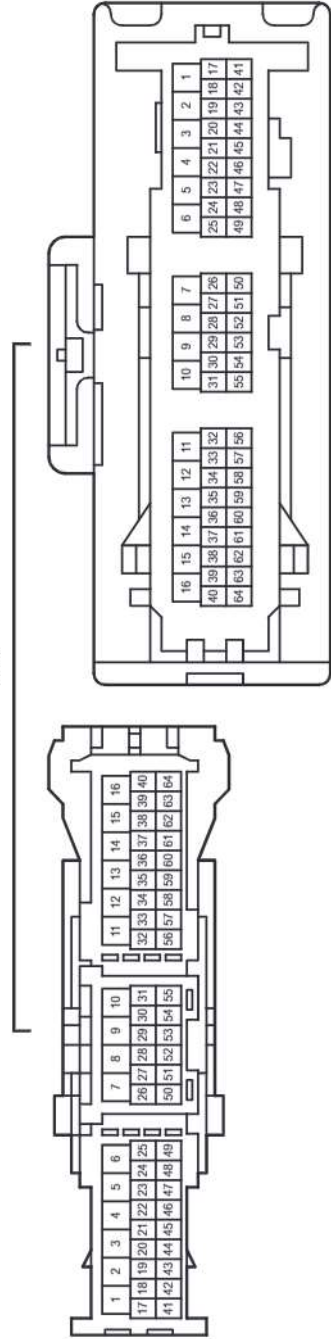

GH2  
White

 


GH3  
Gray

 

cardiagn.com




Wire and Wire in Instrument Panel <RHD Front Separate Seat>

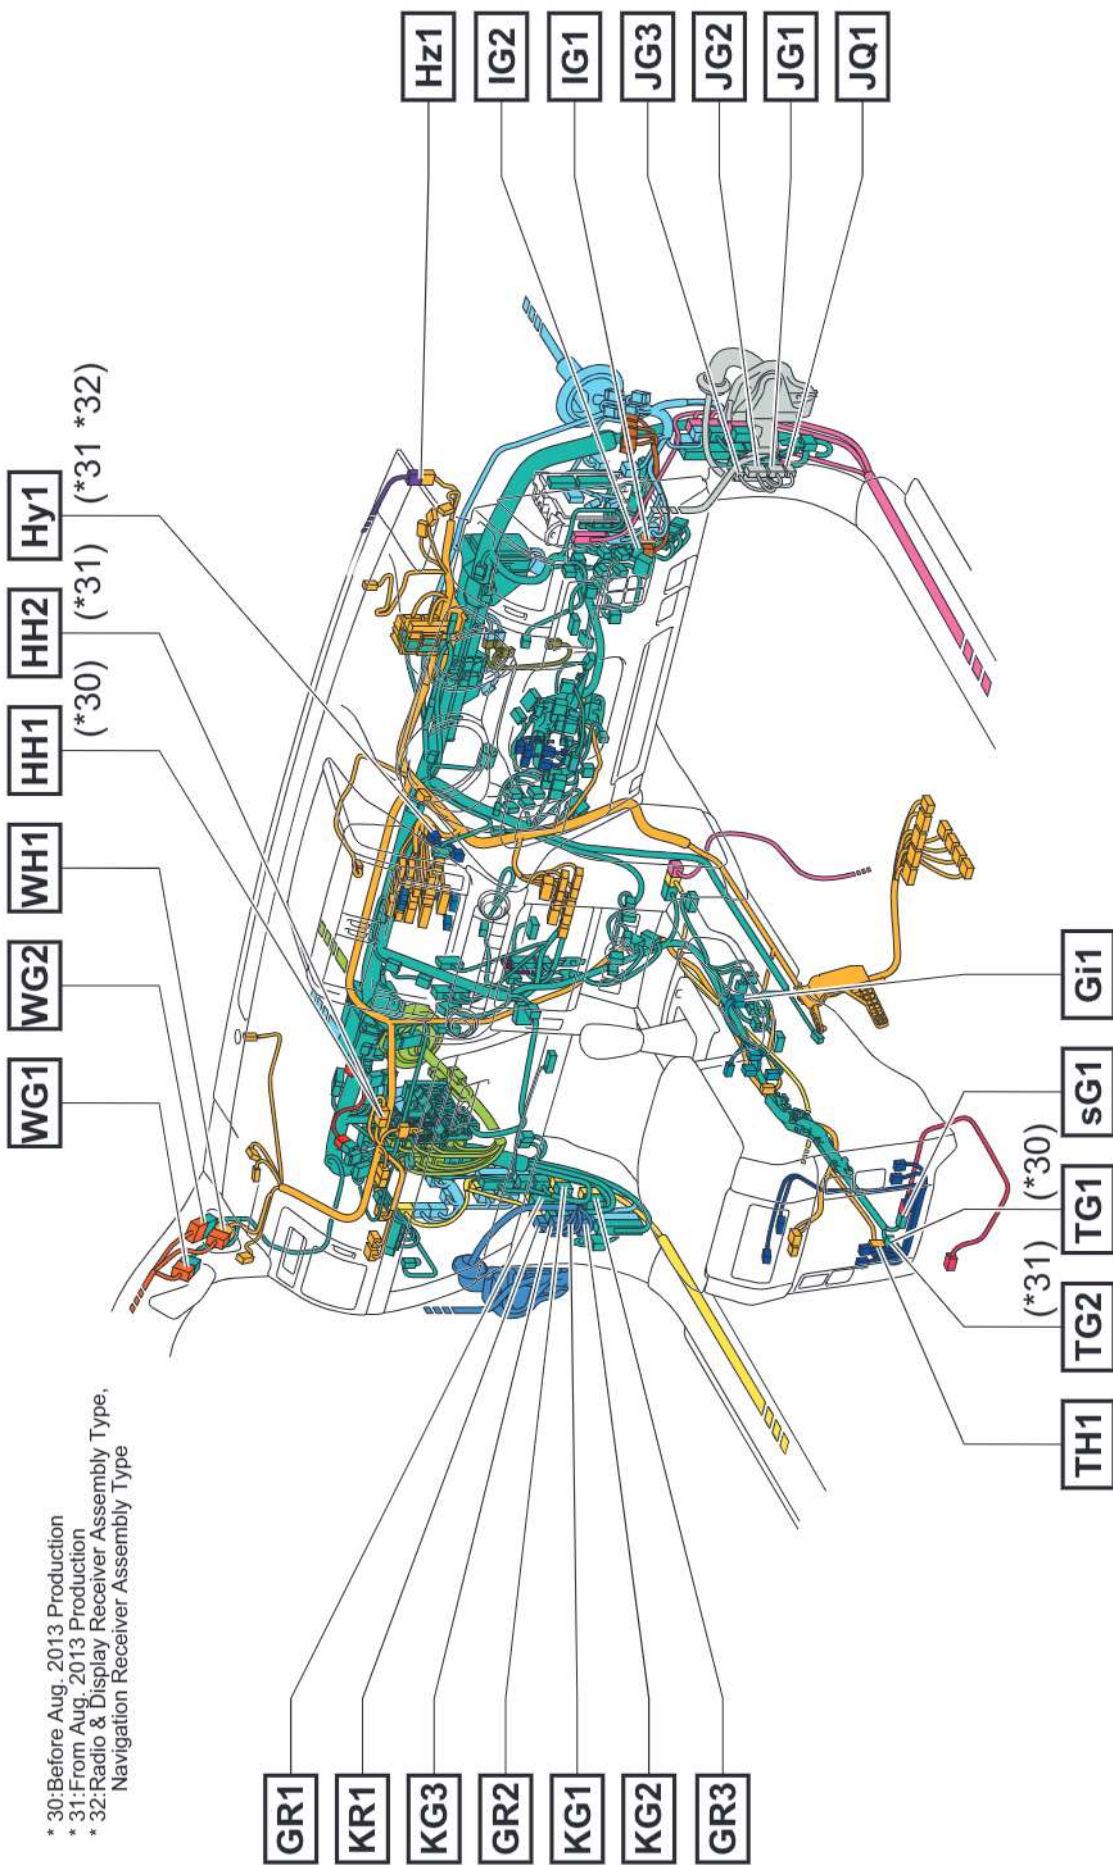


\* 30: Before Aug. 2013 Production  
 \* 31: From Aug. 2013 Production  
 \* 32: Radio & Display Receiver Assembly Type,  
 Navigation Receiver Assembly Type

Wire and Wire in Instrument Panel <RHD Front Separate Seat>


GR1  
White

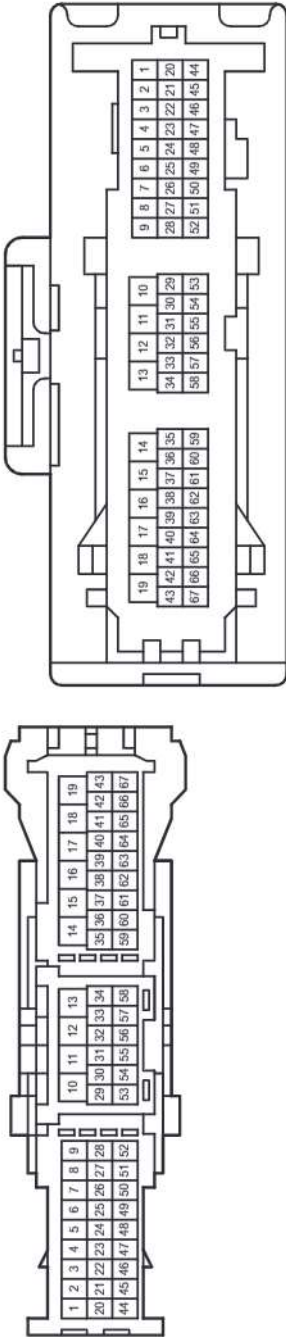

GR2  
Gray

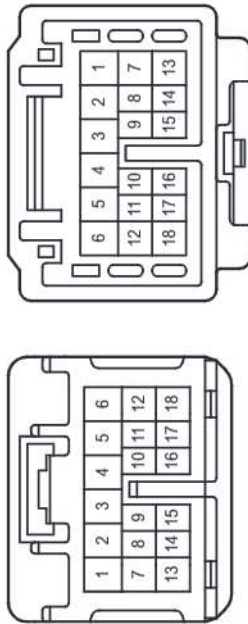


GR3  
Blue

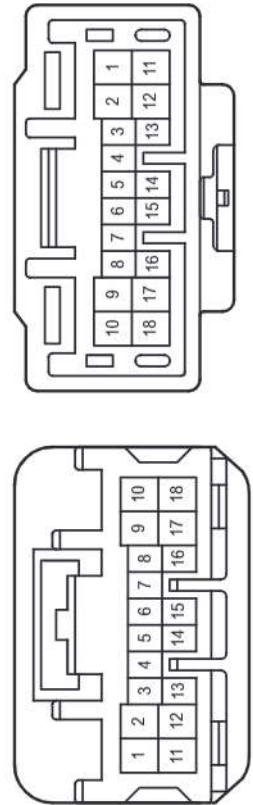

GR1  
White





HH1  
White

Wire and Wire in Instrument Panel <RHD Front Separate Seat>

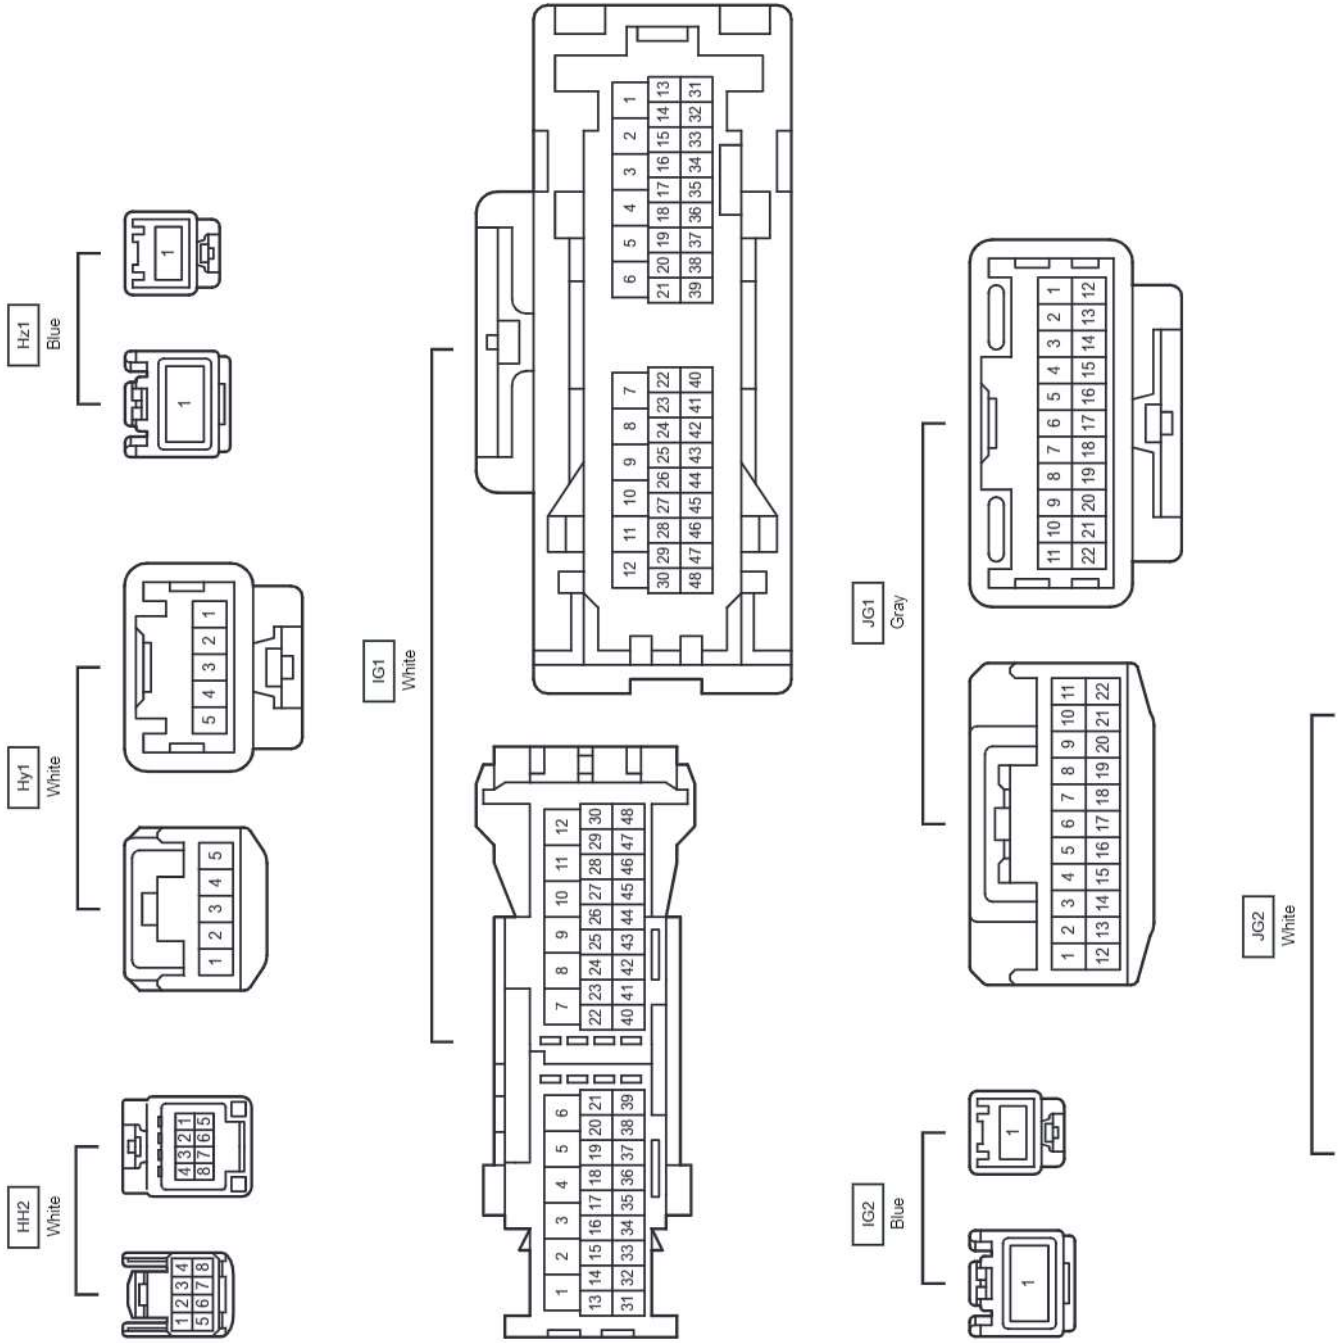




cardiagn.com

Wire and Wire in Instrument Panel <RHD Front Separate Seat>

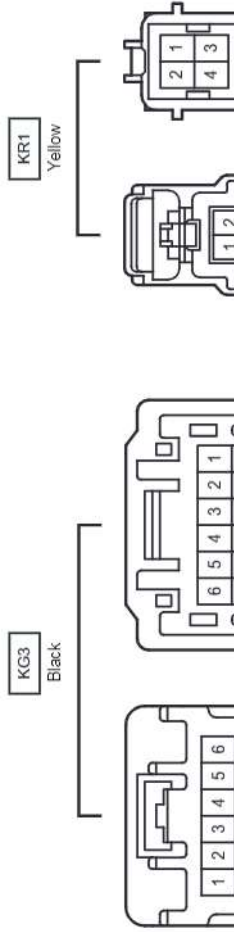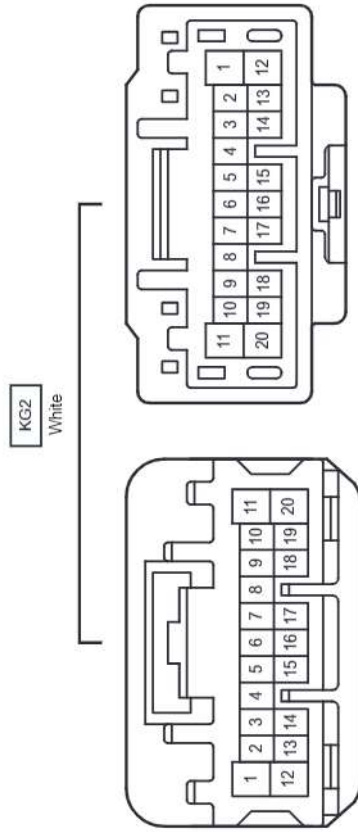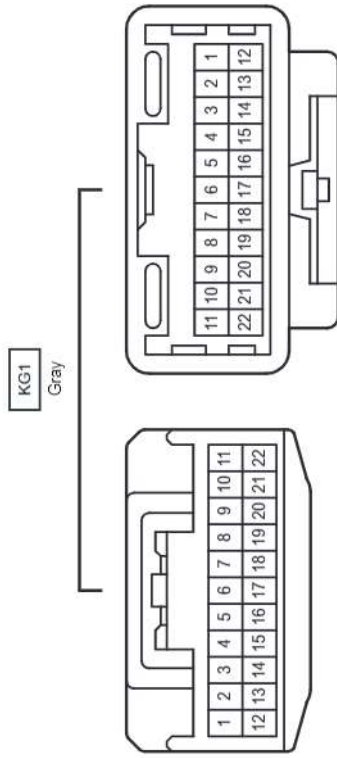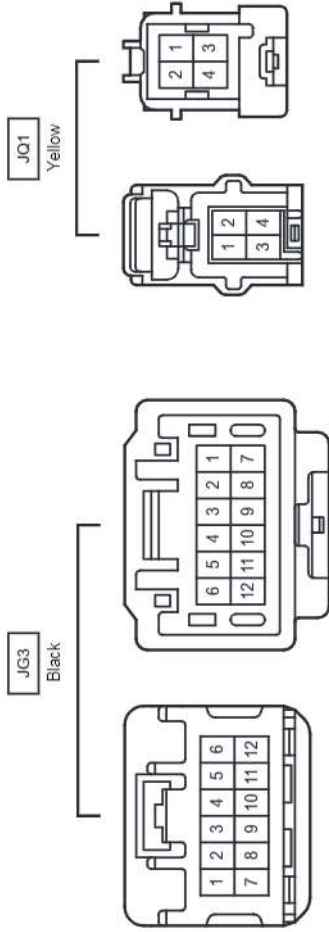





Wire and Wire in Instrument Panel <RHD Front Separate Seat>

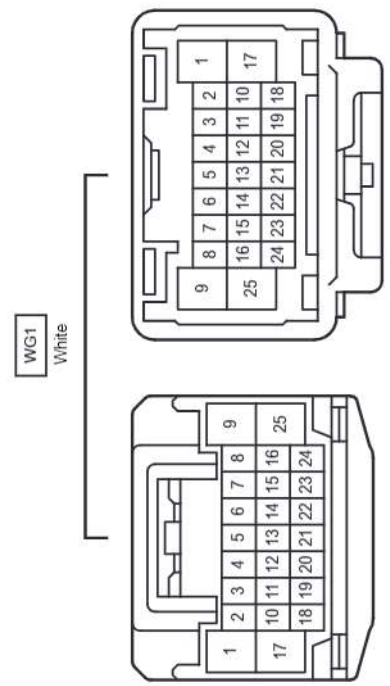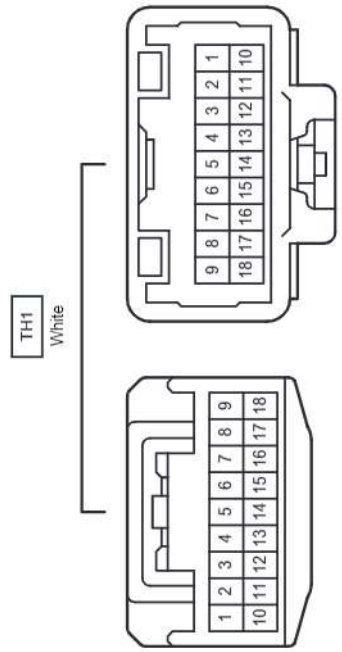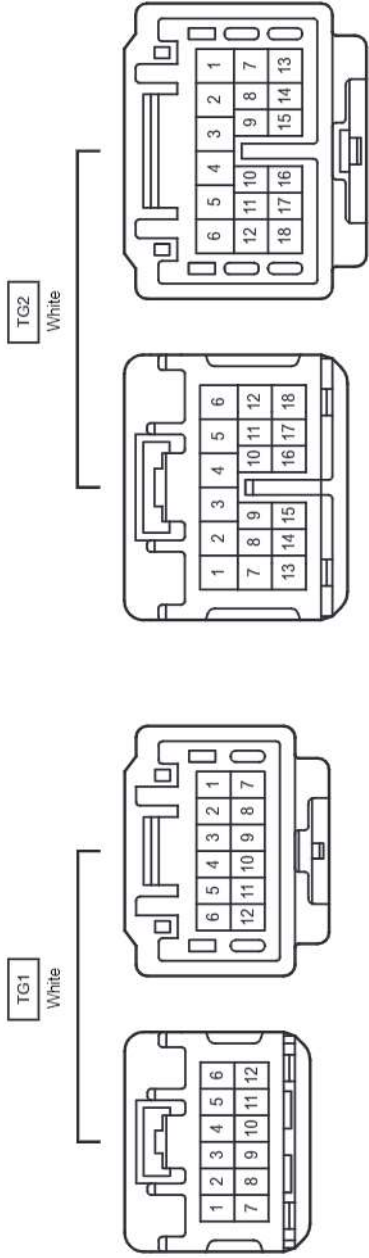



cardiagn.com

Wire and Wire in Instrument Panel <RHD Front Separate Seat>


WH1  
Gray

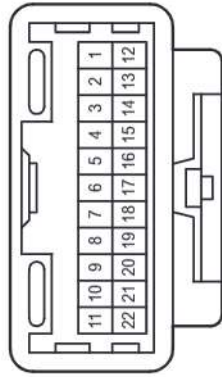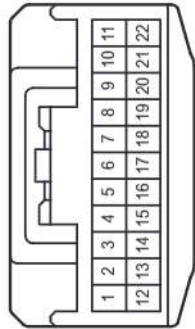

sG1  
White

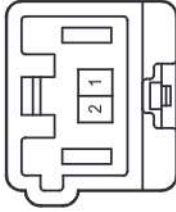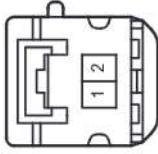

Position of Parts in Seat <LHD Front Separate Seat w/o Power Seat>









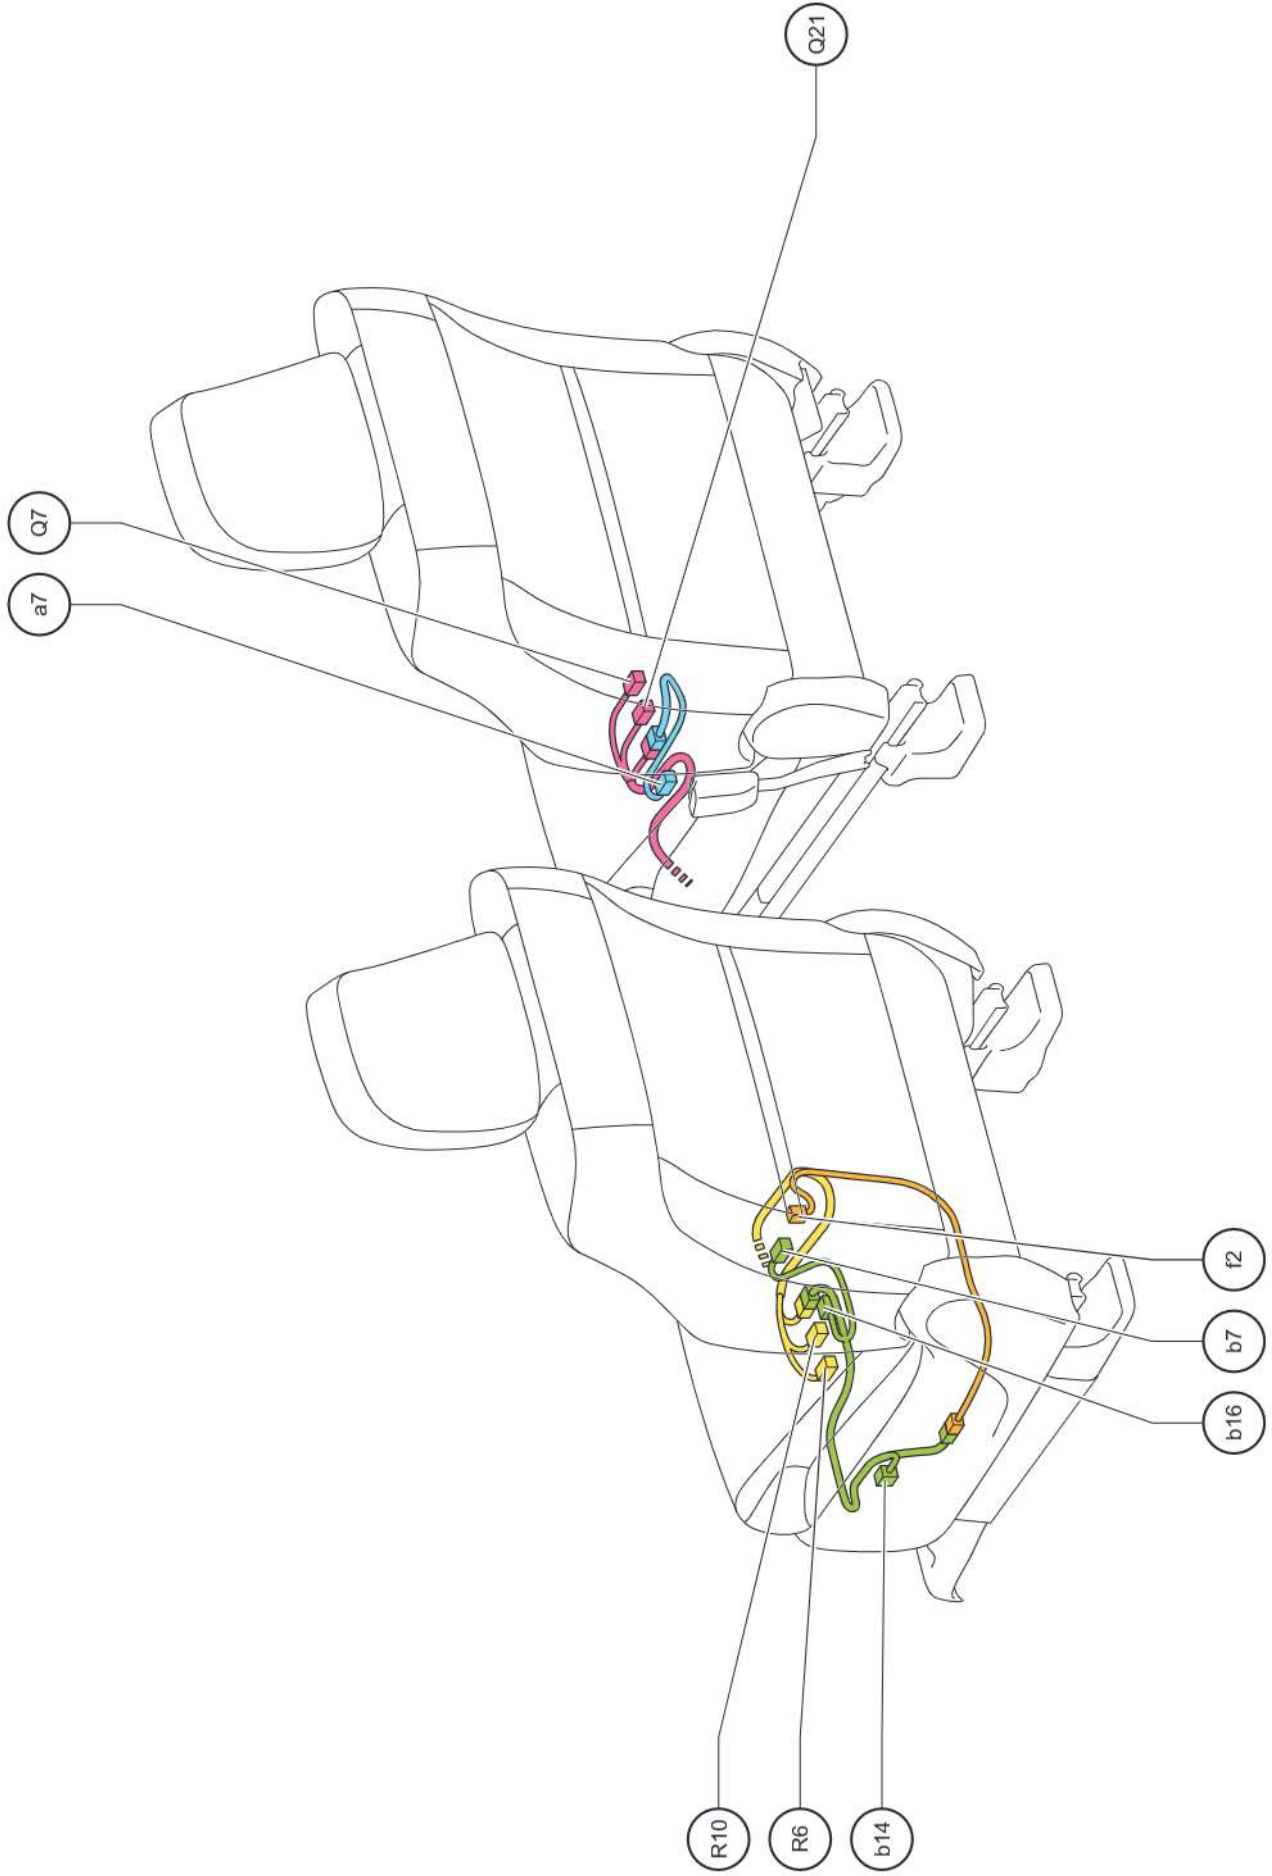


Position of Parts in Seat <LHD Front Separate Seat w/o Power Seat>


---

- R 6 Front Side Airbag Squib Circuit LH
- R 10 Front Seat Inner Belt Assembly LH
- Q 7 Front Side Airbag Squib Circuit RH
- Q 21 Front Seat Inner Belt Assembly RH
  - a 7 Front Seat Heater Assembly RH
  - b 7 Front Seat Heater Assembly LH
  - b 14 Front Power Seat Switch Assembly LH
  - b 16 Junction Connector
  - f 2 Separate Type Front Seat Back Assembly LH

  
 
Position of Parts in Seat <LHD Front Separate Seat w/o Power Seat>

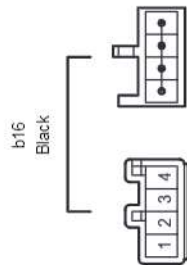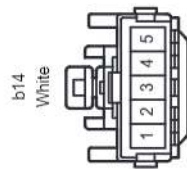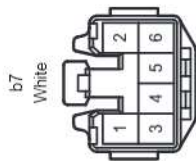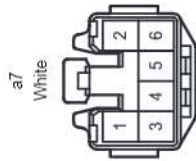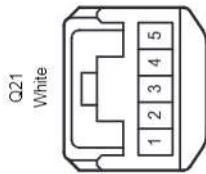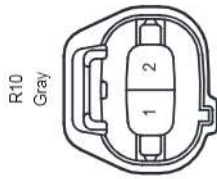


Wire and Wire in Seat <LHD Front Separate Seat w/o Power Seat>

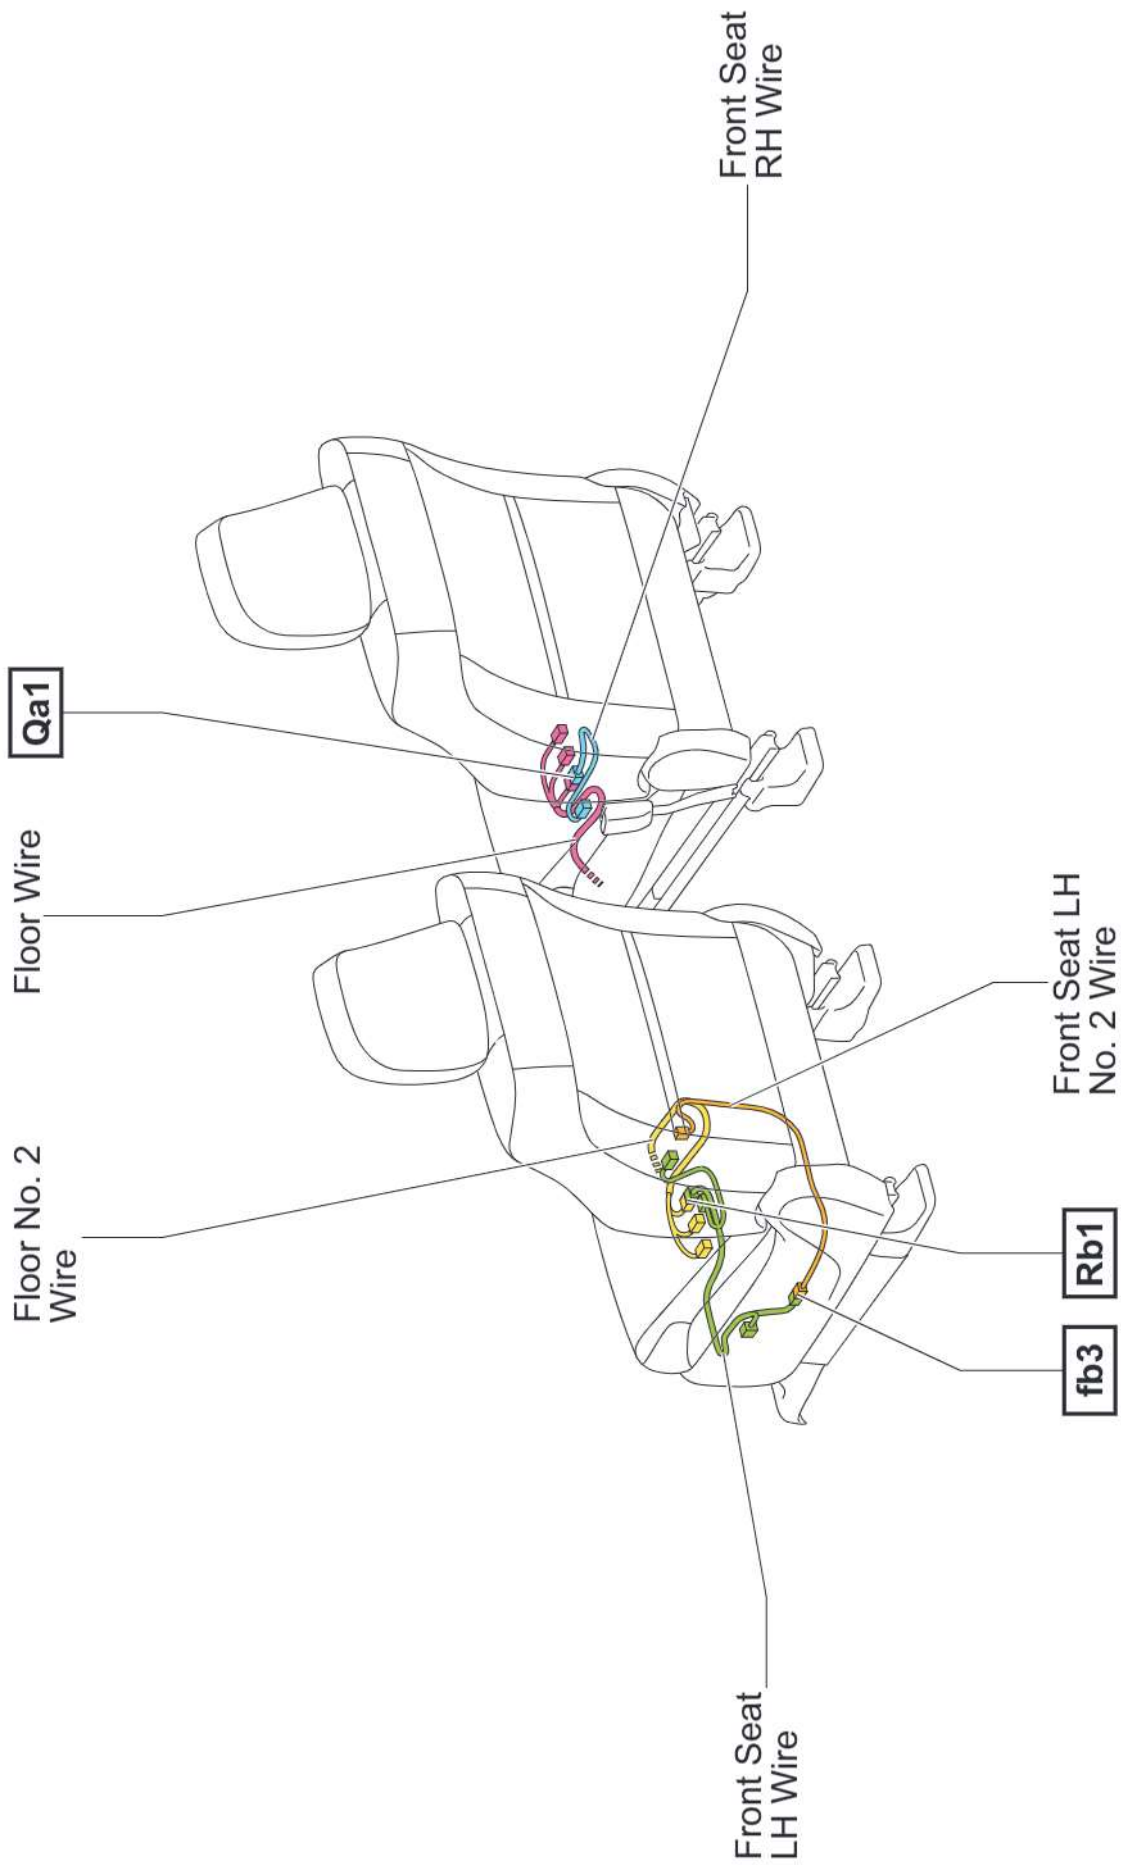

Wire and Wire in Seat <LHD Front Separate Seat w/o Power Seat>

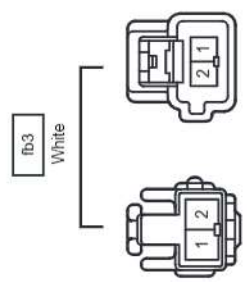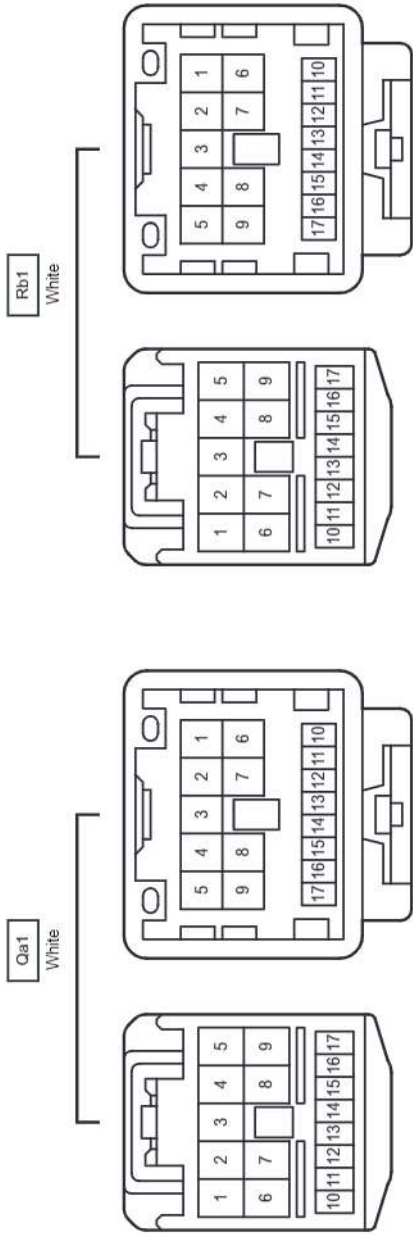

Position of Parts in Seat <RHD Front Separate Seat w/o Power Seat>

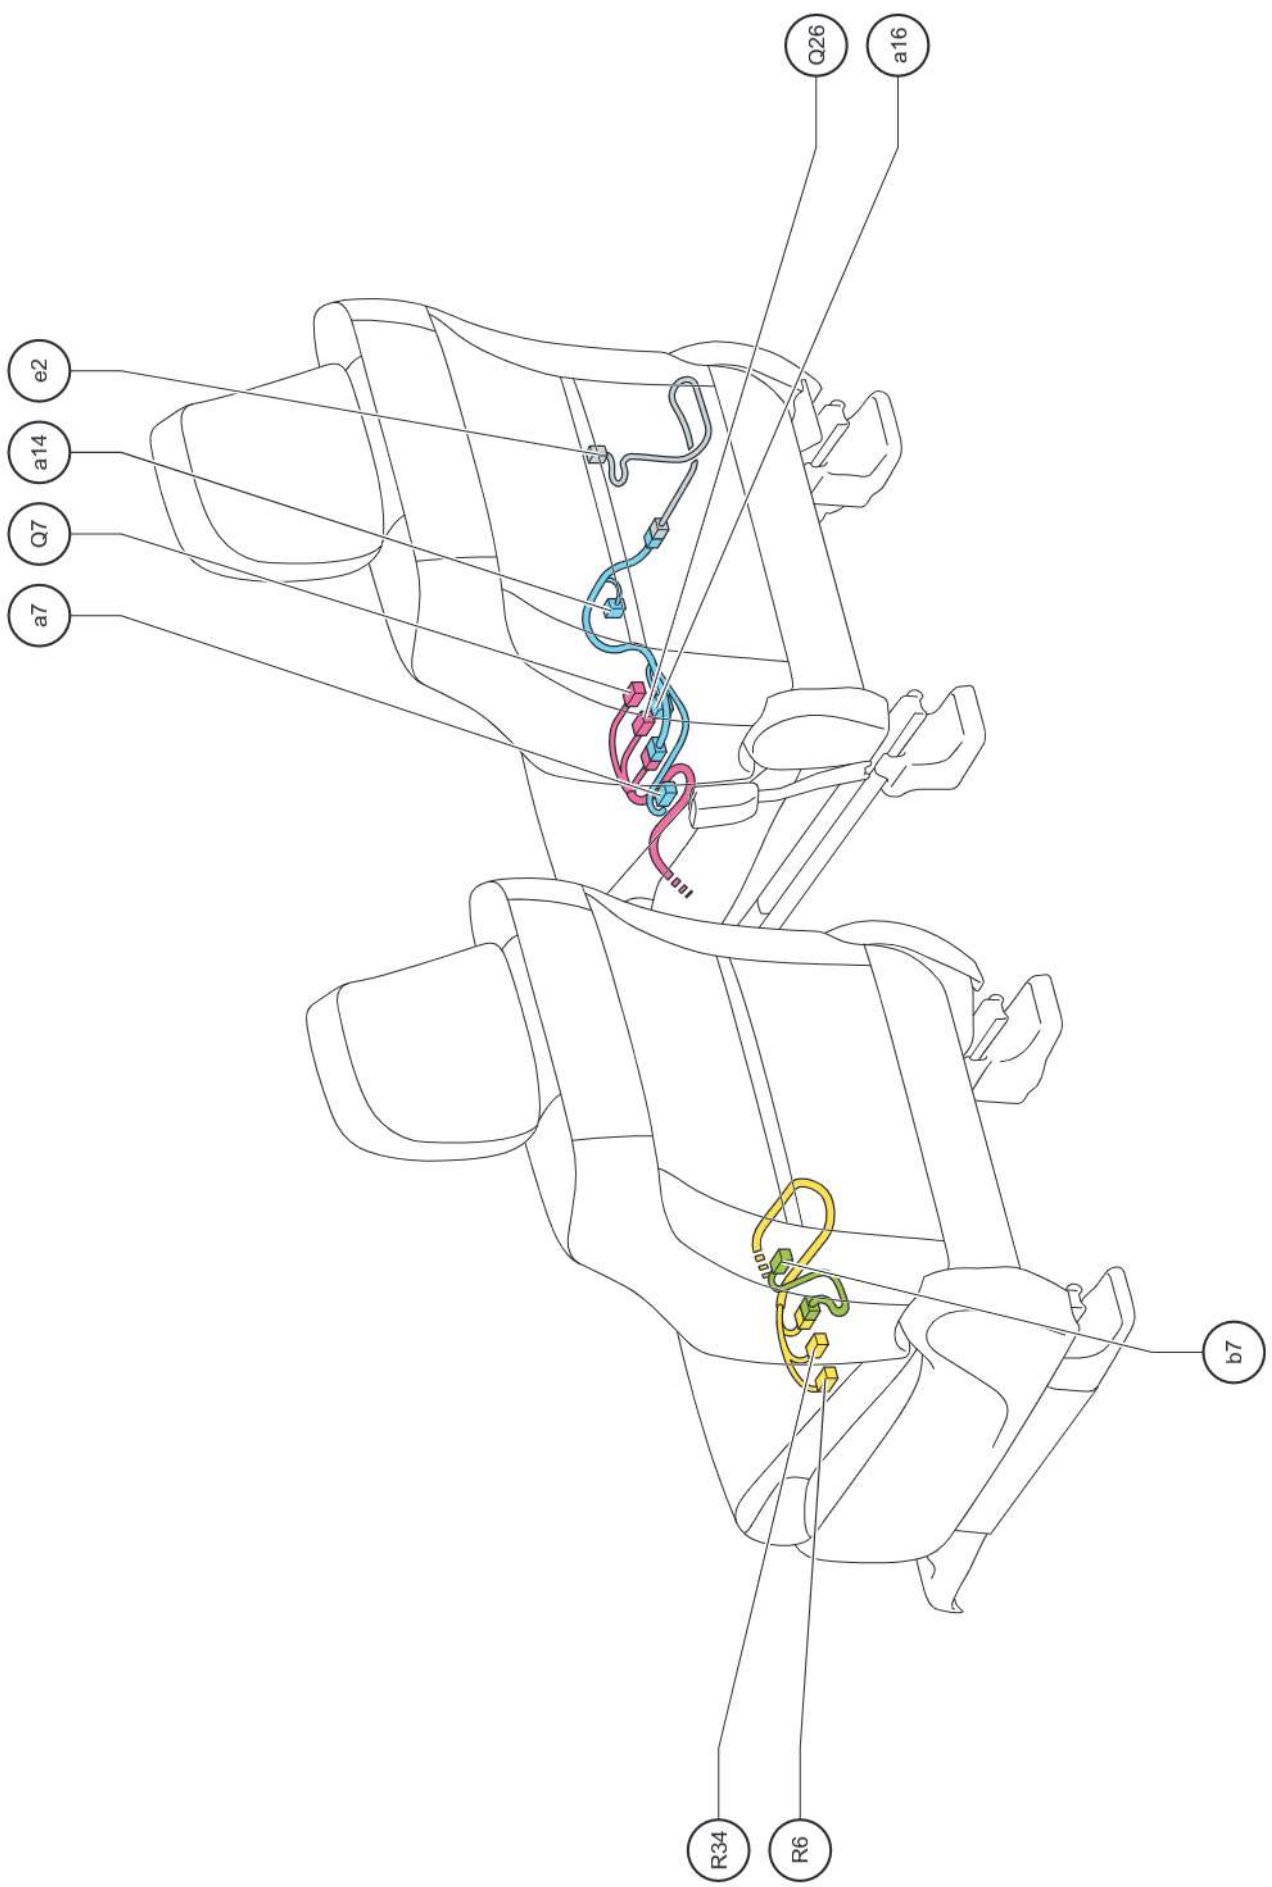












Position of Parts in Seat <RHD Front Separate Seat w/o Power Seat>


---

- Q 7 Front Side Airbag Squib Circuit RH
- Q 26 Front Seat Inner Belt Assembly RH
- R 6 Front Side Airbag Squib Circuit LH
- R 34 Front Seat Inner Belt Assembly LH
- a 7 Front Seat Heater Assembly RH
- a 14 Front Power Seat Switch Assembly RH
- a 16 Junction Connector
- b 7 Front Seat Heater Assembly LH
- e 2 Separate Type Front Seat Back Assembly RH

  
 
Position of Parts in Seat <RHD Front Separate Seat w/o Power Seat>

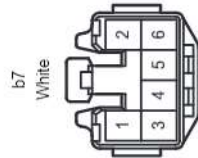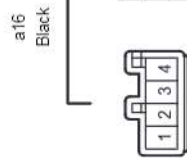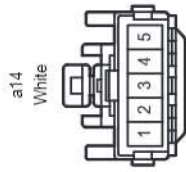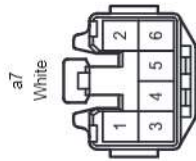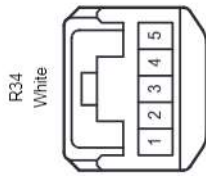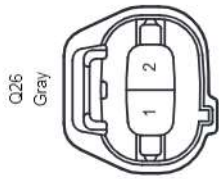

Wire and Wire in Seat <RHD Front Separate Seat w/o Power Seat>

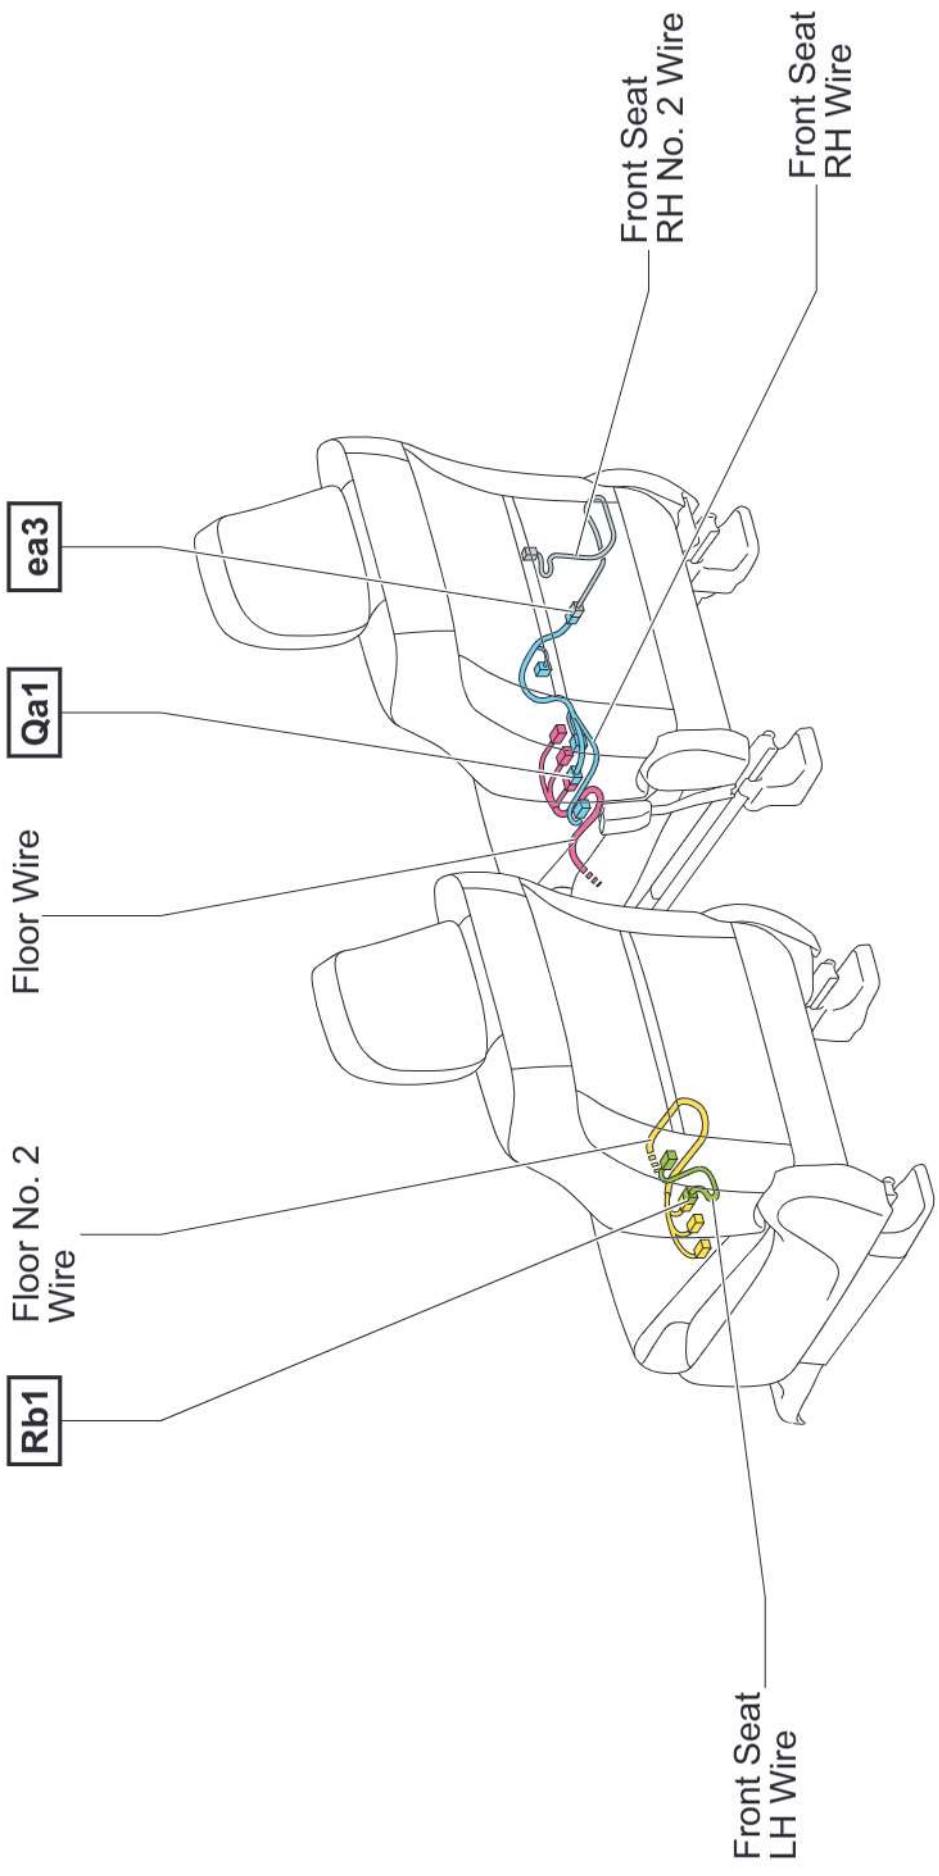

Wire and Wire in Seat <RHD Front Separate Seat w/o Power Seat>

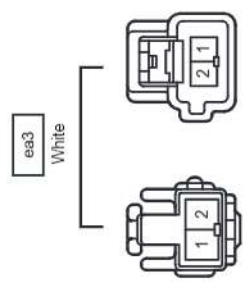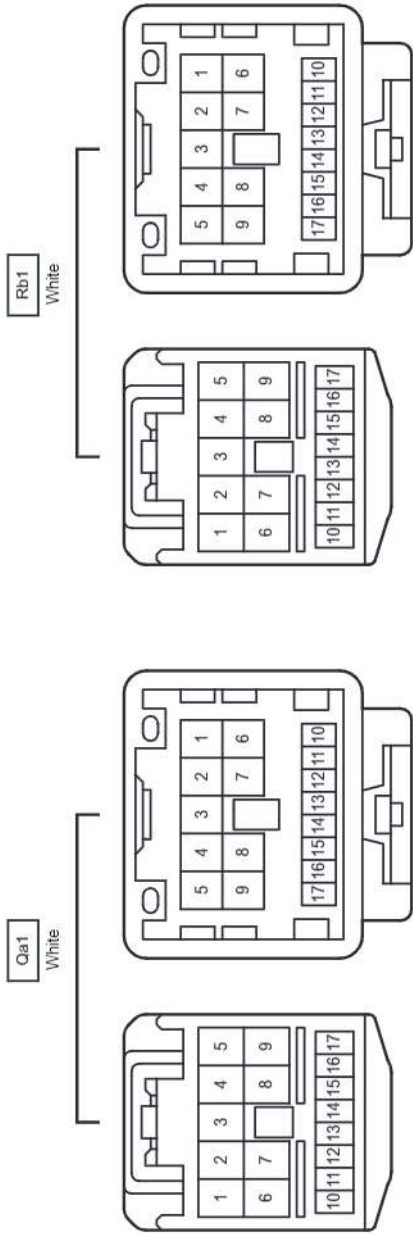



















Position of Parts in Seat <LHD Front Separate Seat w/ Power Seat>

---

- Q 7 Front Side Airbag Squib Circuit RH
- Q 21 Front Seat Inner Belt Assembly RH
- R 6 Front Side Airbag Squib Circuit LH
- R 10 Front Seat Inner Belt Assembly LH
- a 7 Front Seat Heater Assembly RH
- a 9 Junction Connector
- a 10 Separate Type Front Seat Cushion Spring Assembly RH
- a 13 Front Power Seat Switch RH
- a 17 Junction Connector
- a 18 Seat Cushion Climate Control Blower Assembly RH
- b 1 Separate Type Front Seat Cushion Spring Assembly LH
- b 2 Separate Type Front Seat Cushion Spring Assembly LH
- b 3 Separate Type Front Seat Cushion Spring Assembly LH
- b 4 Front Position Control ECU and Switch Assembly LH (Front Power Seat Switch LH)
- b 5 Front Position Control ECU and Switch Assembly LH (Front Power Seat Switch LH)
- b 6 Front Power Seat Switch Assembly LH
- b 7 Front Seat Heater Assembly LH
- b 9 Junction Connector
- b 10 Separate Type Front Seat Cushion Spring Assembly LH
- b 11 Separate Type Front Seat Cushion Spring Assembly LH
- b 12 Separate Type Front Seat Cushion Spring Assembly LH
- b 13 Front Power Seat Switch LH
- b 17 Junction Connector
- b 18 Seat Cushion Climate Control Blower Assembly LH
- e 3 Separate Type Front Seat Back Assembly RH
- e 4 Seat Back Climate Control Blower RH
- f 1 Separate Type Front Seat Back Assembly LH
- f 2 Separate Type Front Seat Back Assembly LH
- f 3 Separate Type Front Seat Back Assembly LH
- f 4 Seat Back Climate Control Blower LH

  
Position of Parts in Seat <LHD Front Separate Seat w/ Power Seat>

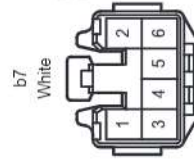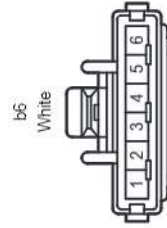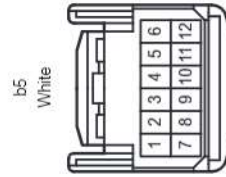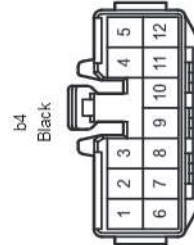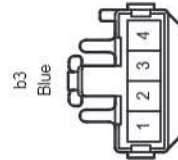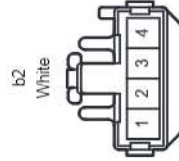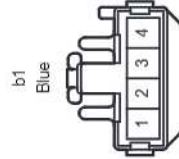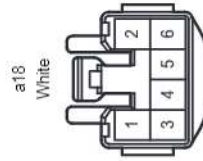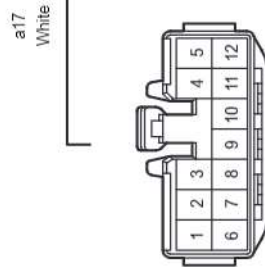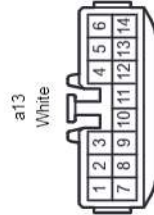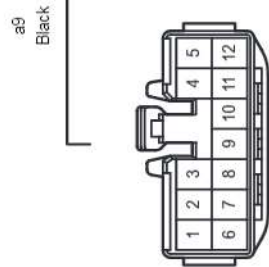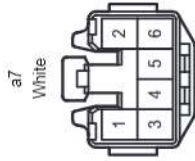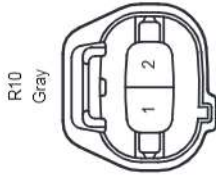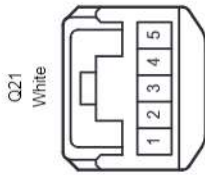


cardiagn.com

Position of Parts in Seat <LHD Front Separate Seat w/ Power Seat>


b17  
White

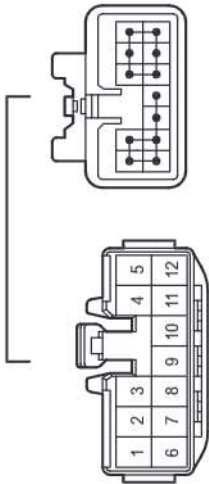


b18  
White

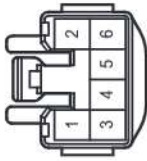


e3  
White

 


e4  
White

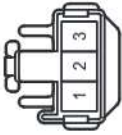


f1  
White

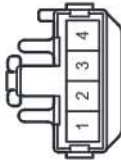


f2  
Blue

 

f3  
White

 


f4  
White

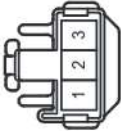



Wire and Wire in Seat <LHD Front Separate Seat w/ Power Seat>

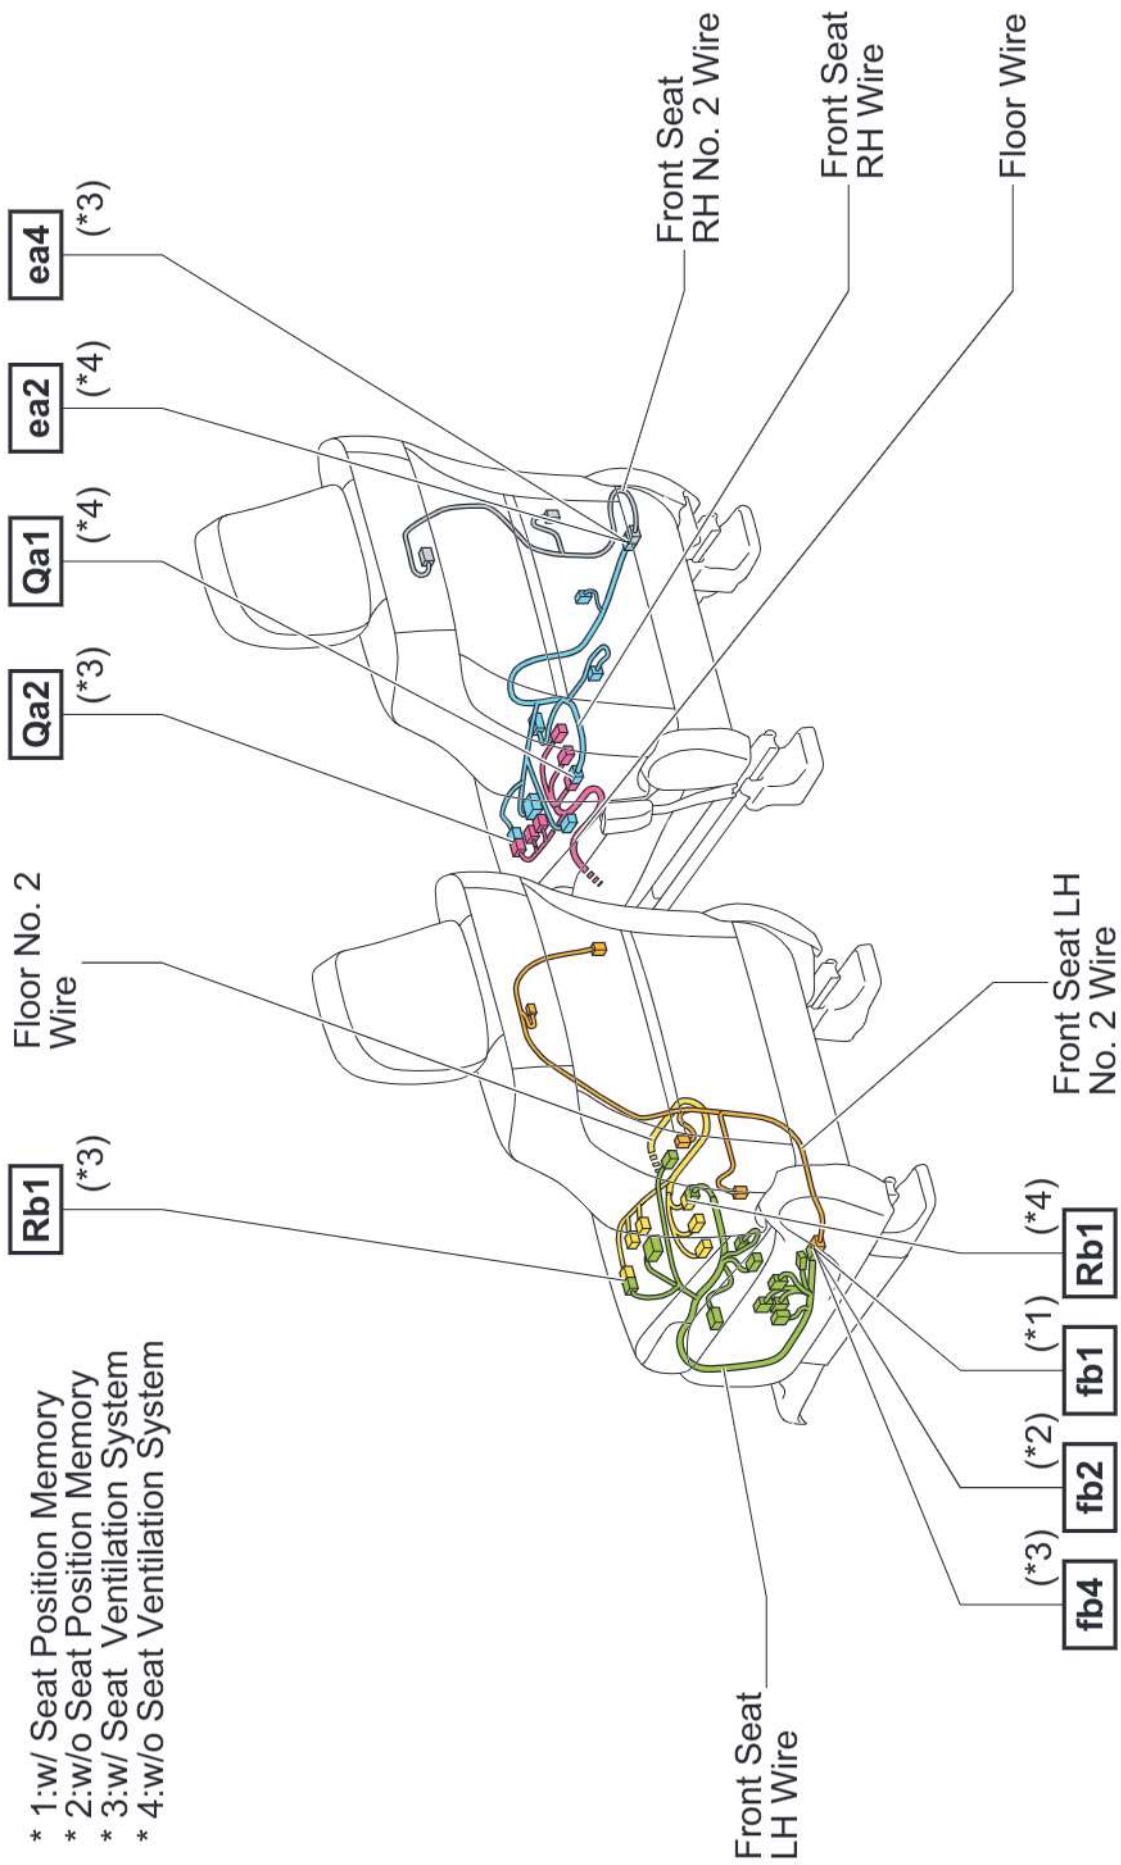

- \* 1:w/ Seat Position Memory
- \* 2:w/o Seat Position Memory
- \* 3:w/ Seat Ventilation System
- \* 4:w/o Seat Ventilation System

Front Seat LH Wire

Front Seat RH No. 2 Wire

Front Seat RH Wire

Floor Wire

Floor No. 2 Wire

Front Seat LH No. 2 Wire

Rb1 (\*3)

Qa2 (\*3)

Qa1 (\*4)

ea2 (\*4)

ea4 (\*3)




fb4 (\*3)

fb2 (\*2)

fb1 (\*1)


Rb1 (\*4)

Wire and Wire in Seat <LHD Front Separate Seat w/ Power Seat>

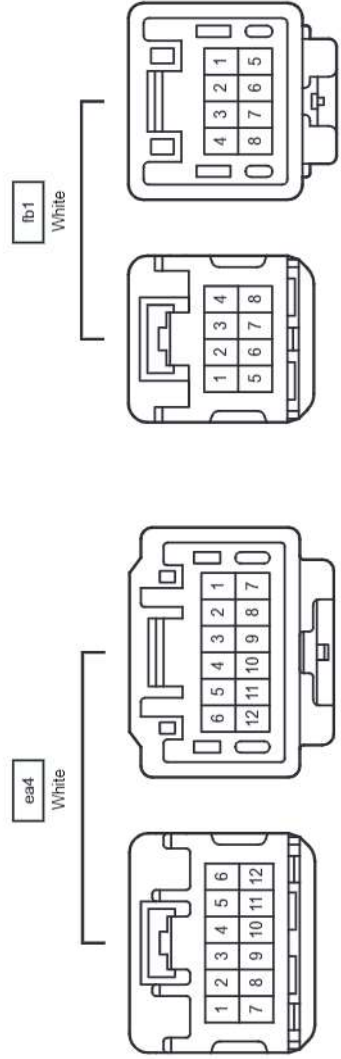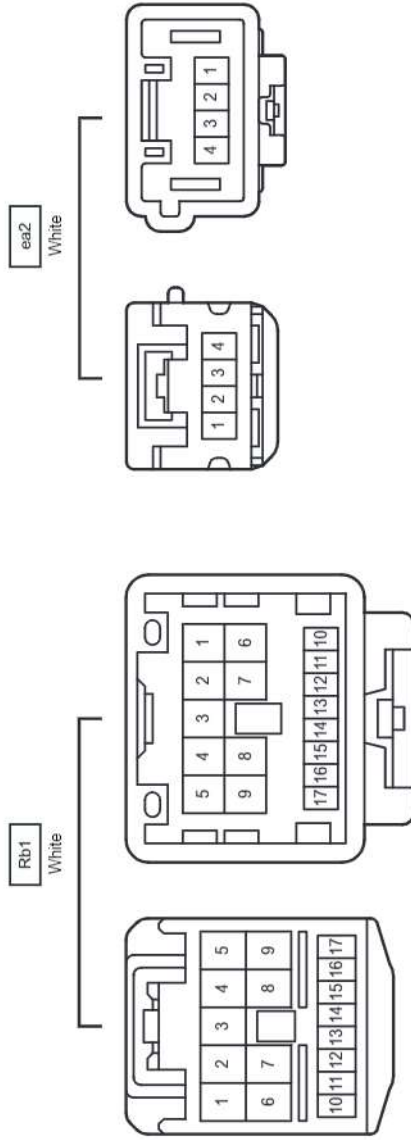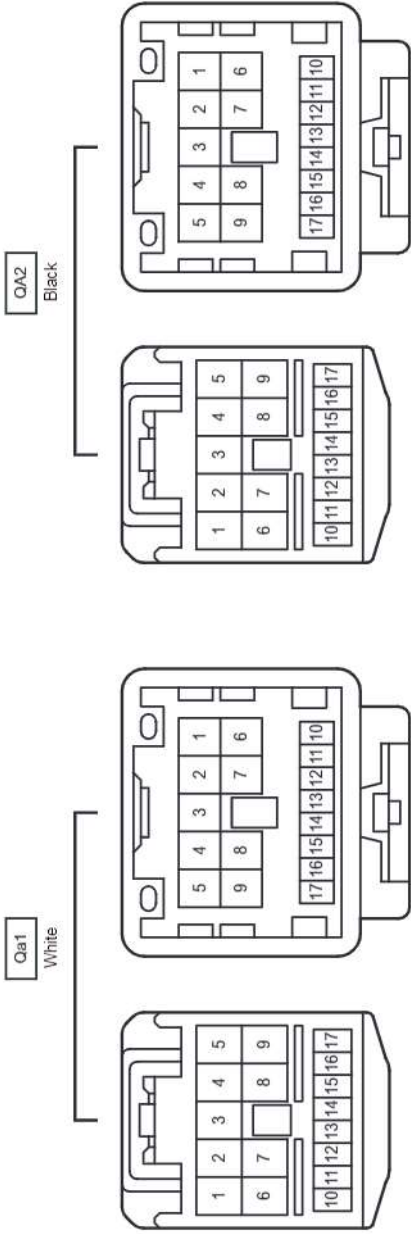

Position of Parts in Seat <RHD Front Separate Seat w/ Power Seat>

- \* 1:w/ Seat Position Memory
- \* 2:w/o Seat Position Memory
- \* 3:Before Oct. 2010 Production
- \* 4:From Oct. 2010 Production




















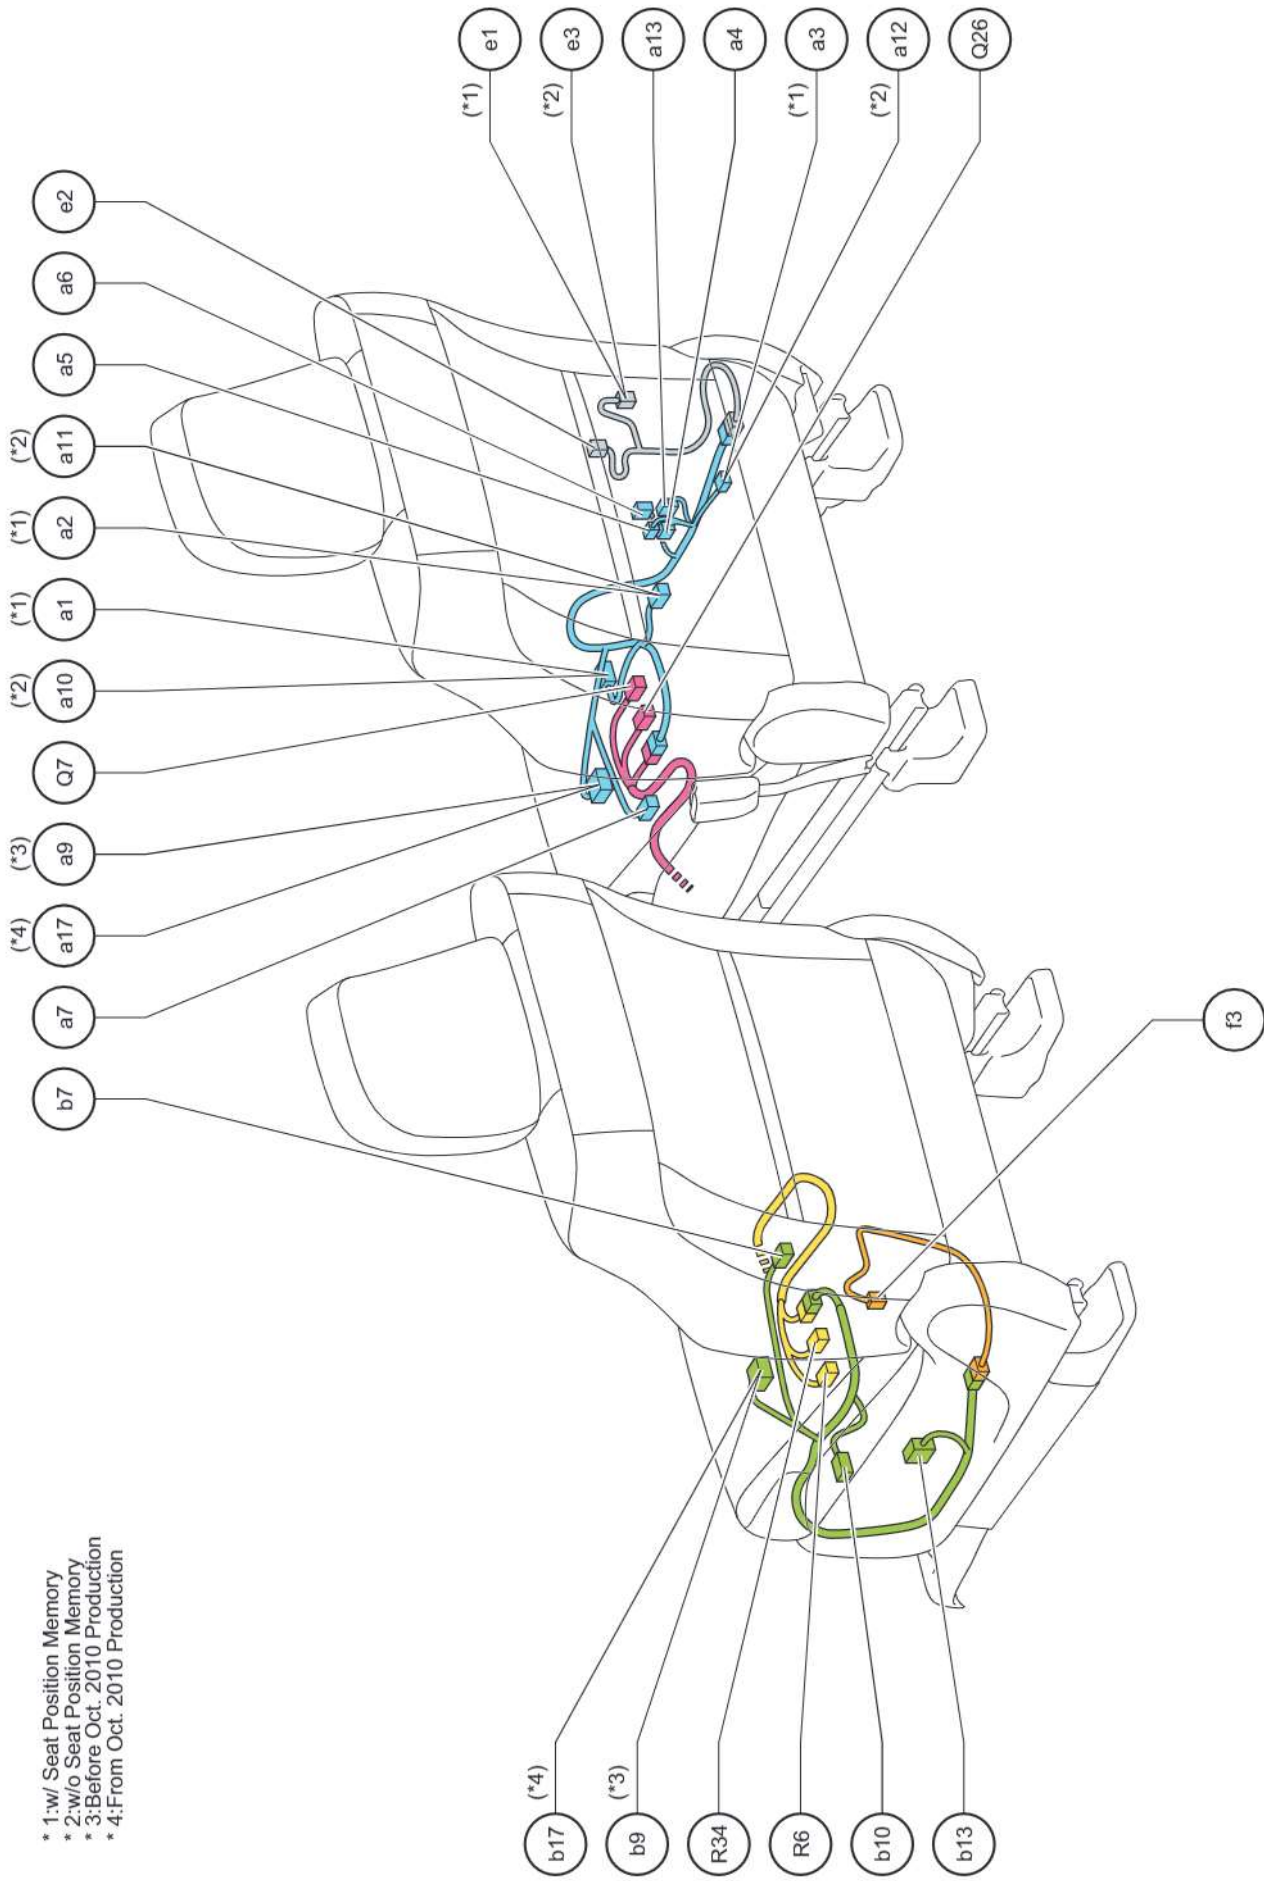


Position of Parts in Seat <RHD Front Separate Seat w/ Power Seat>

---

- Q 7 Front Side Airbag Squib Circuit RH
- Q 26 Front Seat Inner Belt Assembly RH
- R 6 Front Side Airbag Squib Circuit LH
- R 34 Front Seat Inner Belt Assembly LH
- a 1 Separate Type Front Seat Cushion Spring Assembly RH
- a 2 Separate Type Front Seat Cushion Spring Assembly RH
- a 3 Separate Type Front Seat Cushion Spring Assembly RH
- a 4 Front Position Control ECU and Switch Assembly RH (Front Power Seat Switch RH)
- a 5 Front Position Control ECU and Switch Assembly RH (Front Power Seat Switch RH)
- a 5 Front Position Control ECU and Switch Assembly RH (Front Power Seat Switch RH)
- a 6 Front Power Seat Switch Assembly RH
- a 7 Front Seat Heater Assembly RH
- a 9 Junction Connector
- a 10 Separate Type Front Seat Cushion Spring Assembly RH
- a 11 Separate Type Front Seat Cushion Spring Assembly RH
- a 12 Separate Type Front Seat Cushion Spring Assembly RH
- a 13 Front Power Seat Switch RH
- a 17 Junction Connector
- b 7 Front Seat Heater Assembly LH
- b 9 Junction Connector
- b 10 Separate Type Front Seat Cushion Spring Assembly LH
- b 13 Front Power Seat Switch LH
- b 17 Junction Connector
- e 1 Separate Type Front Seat Back Assembly RH
- e 2 Separate Type Front Seat Back Assembly RH
- e 3 Separate Type Front Seat Back Assembly RH
- f 3 Separate Type Front Seat Back Assembly LH

     
Position of Parts in Seat <RHD Front Separate Seat w/ Power Seat>

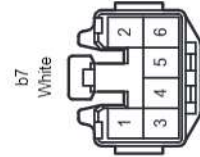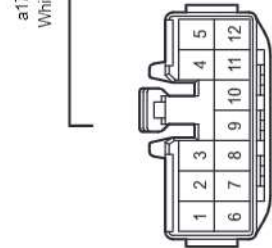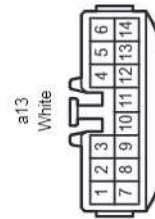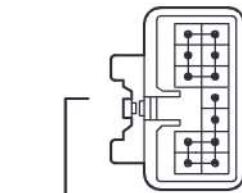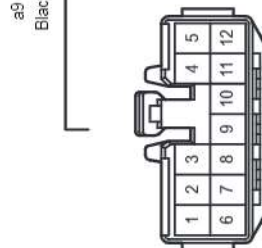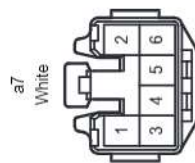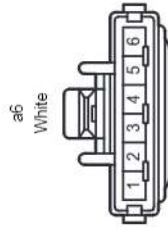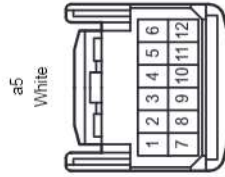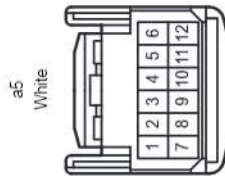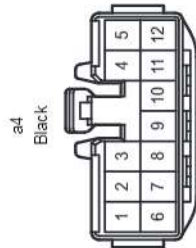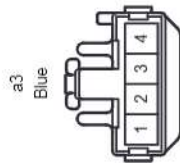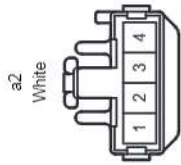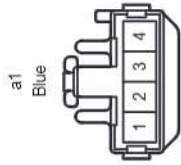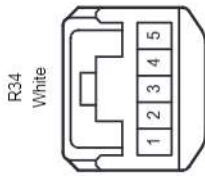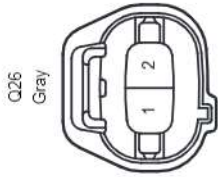

b9  
Black


b10  
Blue

 b13  
White




Position of Parts in Seat <RHD Front Separate Seat w/ Power Seat>


b17  
White

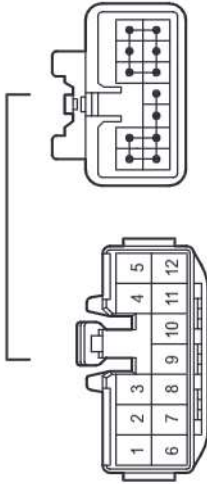


e1  
White

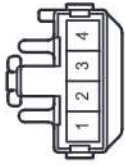


e2  
Blue

 


e3  
White

 

f3  
White

 

Wire and Wire in Seat <RHD Front Separate Seat w/ Power Seat>

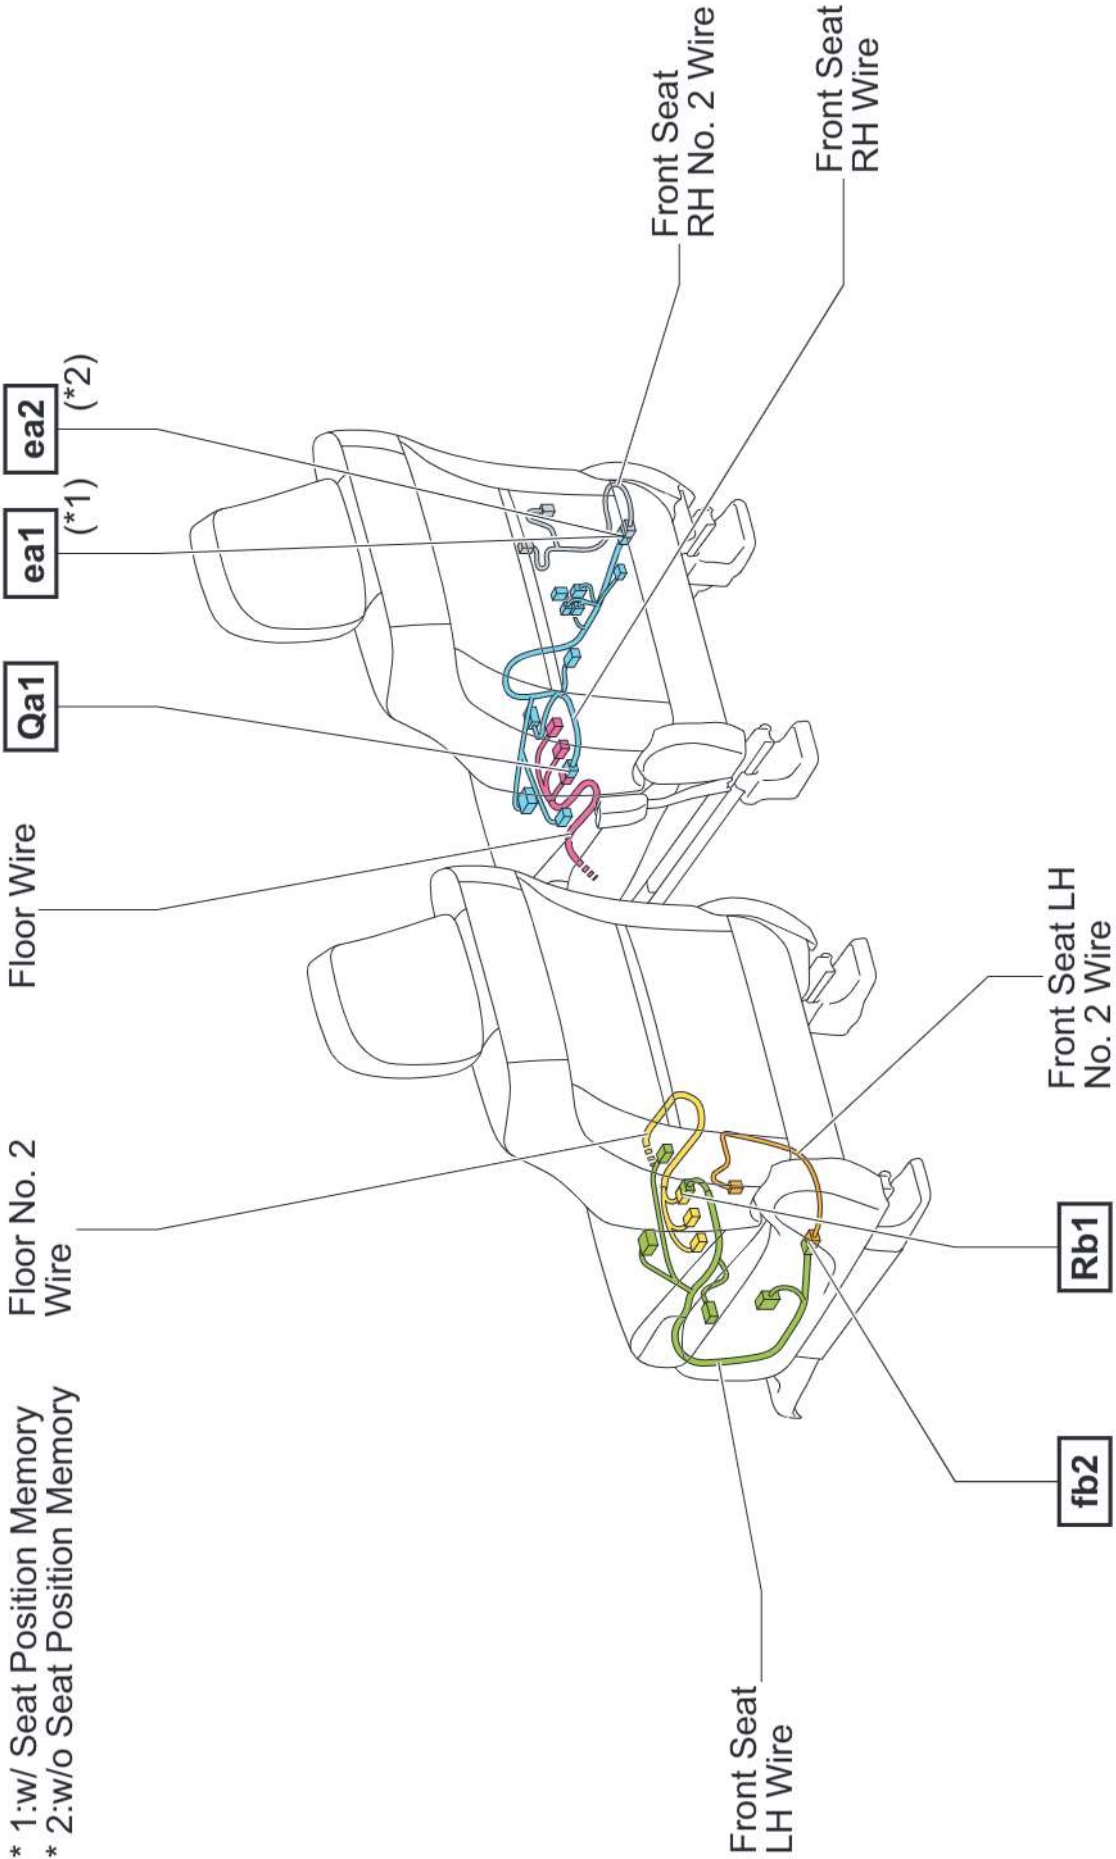

Wire and Wire in Seat <RHD Front Separate Seat w/ Power Seat>

