



Ground Points in Engine Compartment <LHD 1GR-FE>























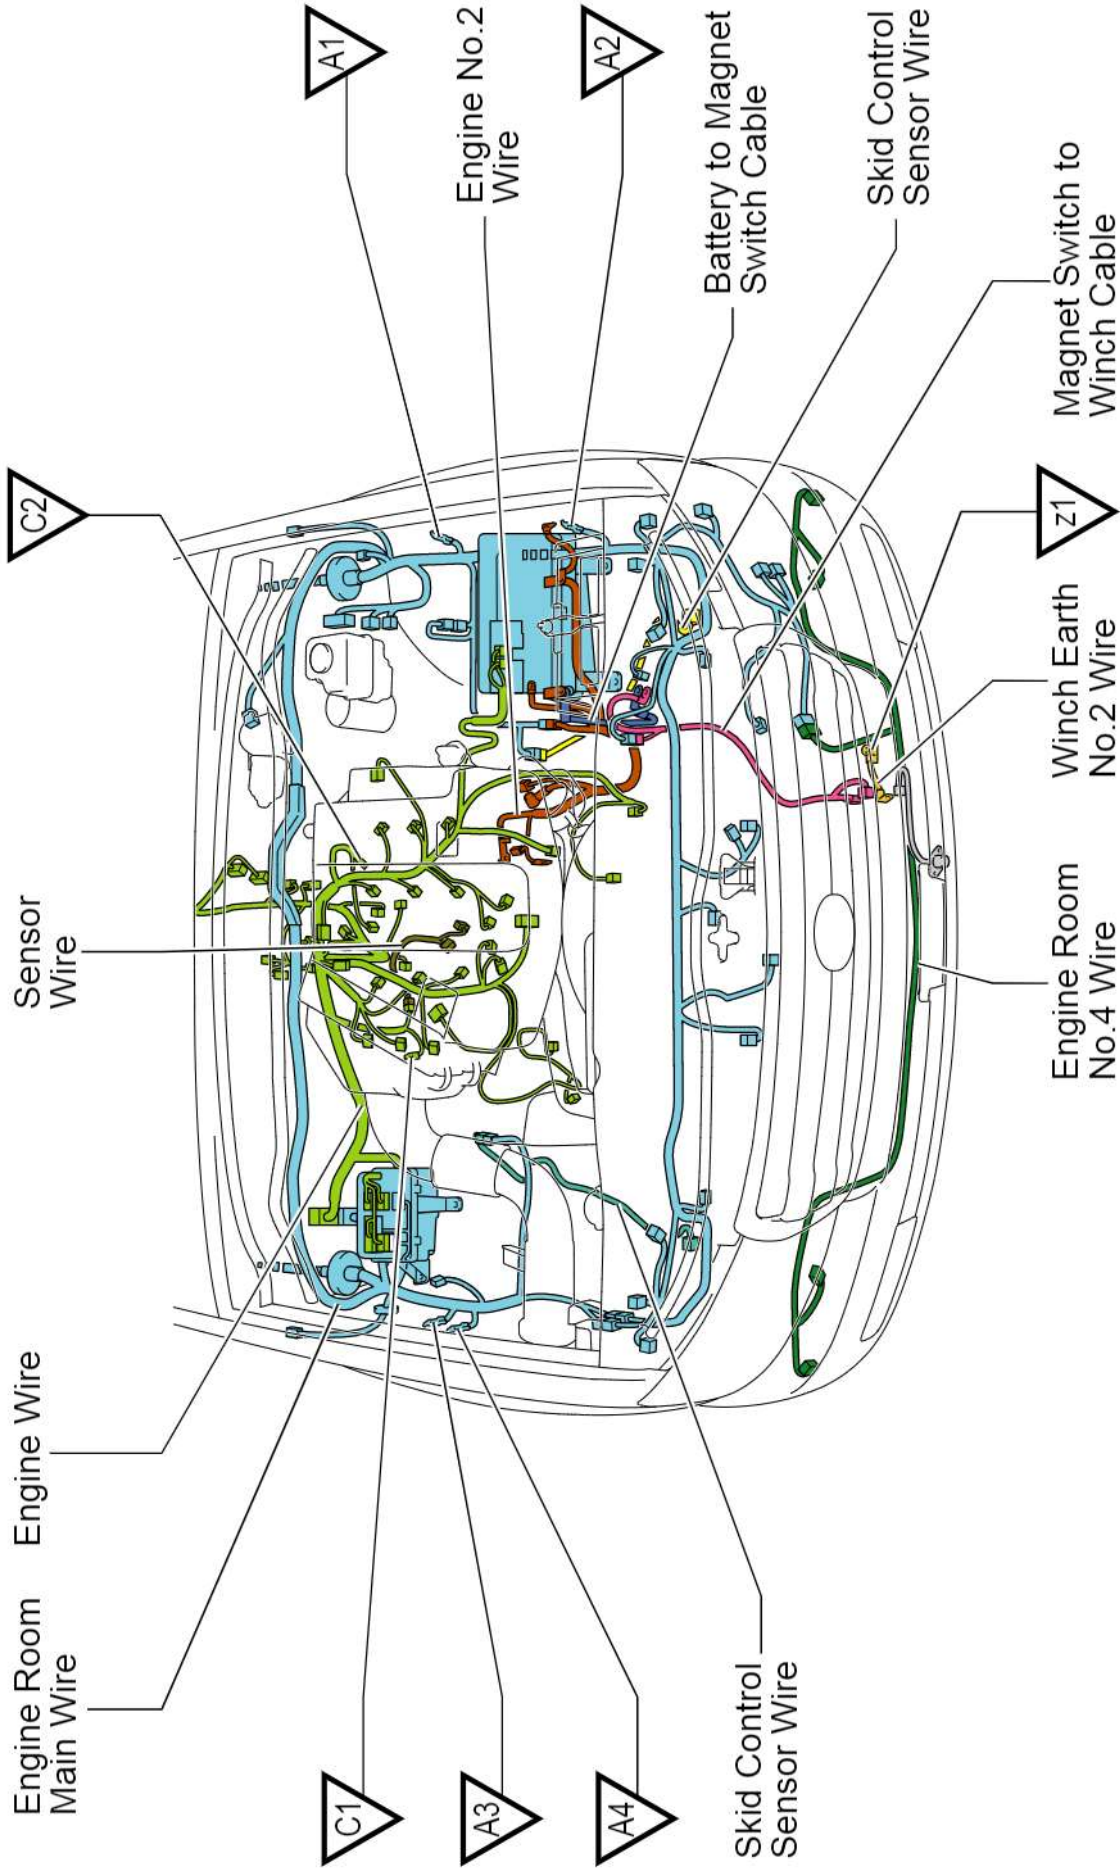


Position of Parts in Engine Compartment <LHD 1GR-FE>






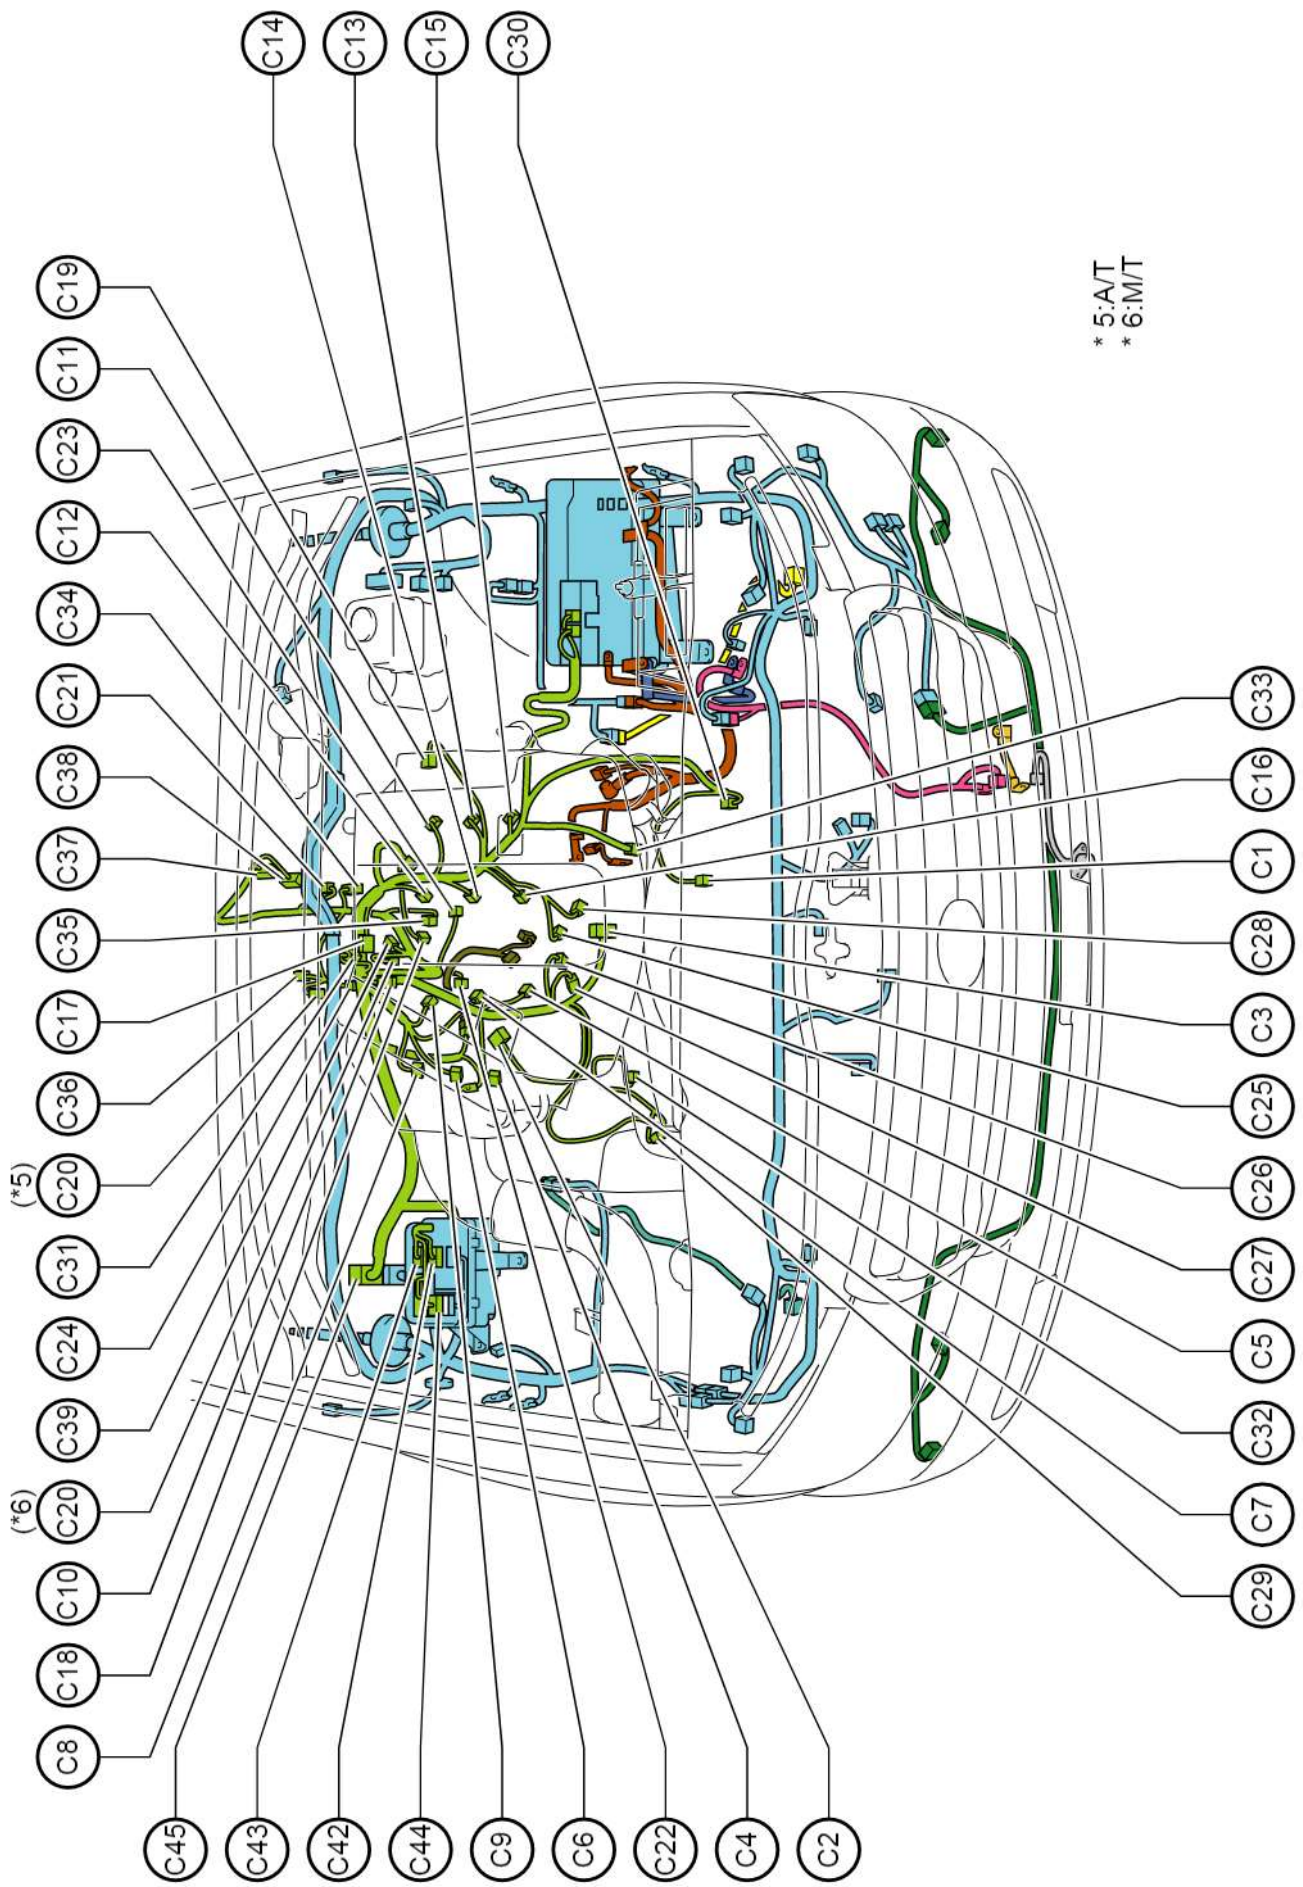


C 1	Crankshaft Position Sensor
C 2	Mass Air Flow Meter
C 3	Throttle Body Assembly
C 4	Ignition Coil Assembly No.1
C 5	Fuel Injector Assembly No.1
C 6	Ignition Coil Assembly No.3
C 7	Fuel Injector Assembly No.3
C 8	Ignition Coil Assembly No.5
C 9	Fuel Injector Assembly No.5
C 10	Noise Filter (Ignition Bank 1)
C 11	Ignition Coil Assembly No.6
C 12	Fuel Injector Assembly No.6
C 13	Ignition Coil Assembly No.4
C 14	Fuel Injector Assembly No.4
C 15	Ignition Coil Assembly No.2
C 16	Fuel Injector Assembly No.2
C 17	Noise Filter (Ignition Bank 2)
C 18	E.F.I. Engine Coolant Temperature Sensor
C 19	Purge VSV
C 20	Oxygen Sensor (Bank 1 Sensor 2)
C 21	Oxygen Sensor (Bank 2 Sensor 2)
C 22	Air Fuel Ratio Sensor (Bank 1 Sensor 1)
C 23	Air Fuel Ratio Sensor (Bank 2 Sensor 1)
C 24	Park/Neutral Position Switch
C 25	WT Sensor (Bank 2)
C 26	WT Sensor (Bank 1)
C 27	Camshaft Timing Oil Control Valve (Bank 1)
C 28	Camshaft Timing Oil Control Valve (Bank 2)
C 29	Power Steering Oil Pressure Switch
C 30	Cooler Compressor Assembly
C 31	VSV (ACIS)
C 32	Engine Oil Level Sensor
C 33	Oil Pressure Sender Gage Assembly
C 34	Electronically Controlled Transmission Solenoid
C 35	Transmission Revolution Sensor (Turbine)
C 36	Transmission Revolution Sensor (Counter Gear)
C 37	Transfer Shift Actuator Assembly
C 38	Transfer Shift Actuator Assembly
C 39	Back-Up Light Switch Assembly
C 42	Junction Connector
C 43	Junction Connector
C 44	Junction Connector
C 45	ECM

  
Position of Parts in Engine Compartment <LHD 1GR-FE>

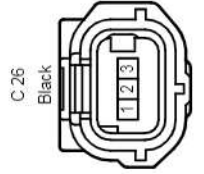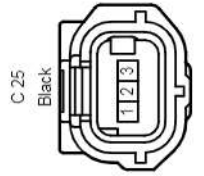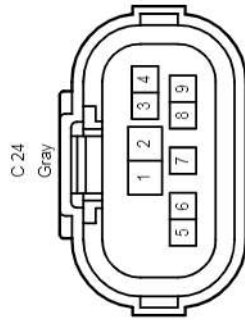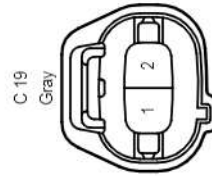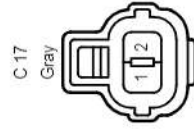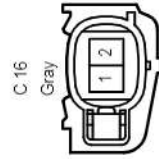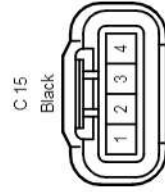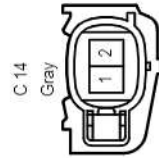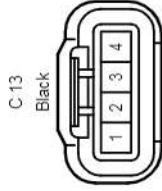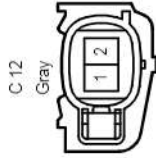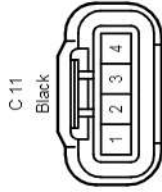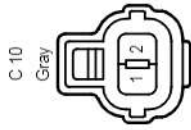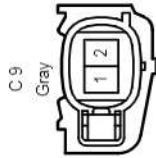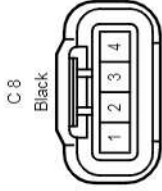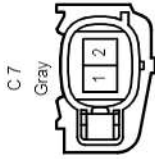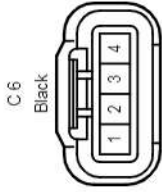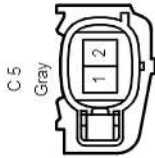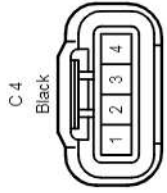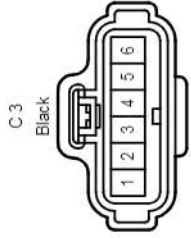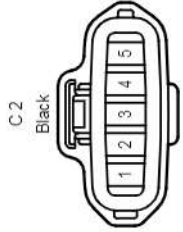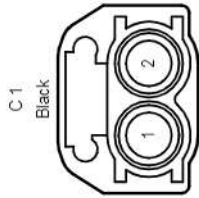

Position of Parts in Engine Compartment <LHD 1GR-FE>

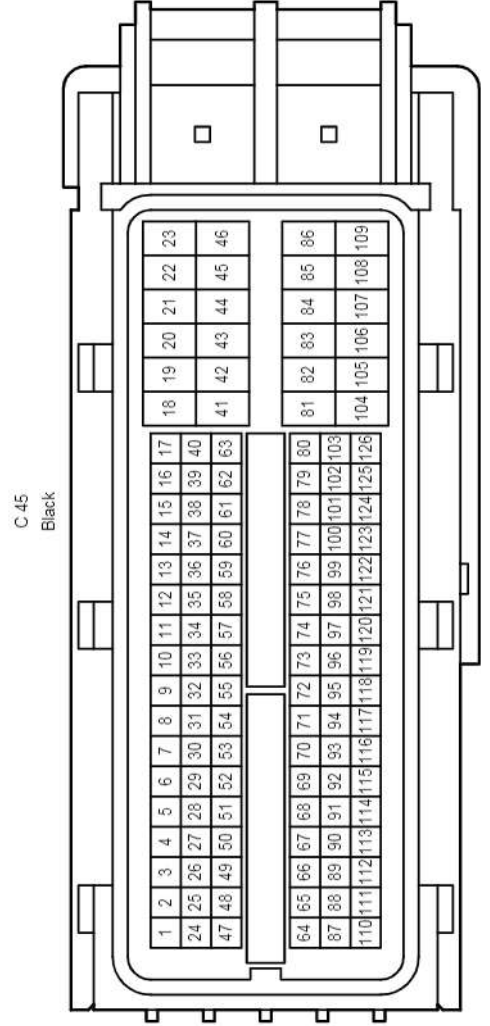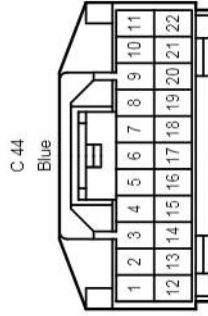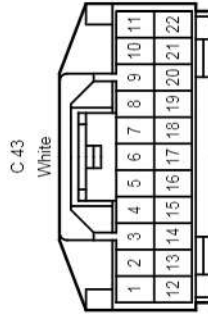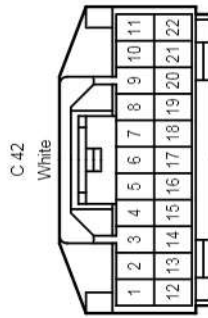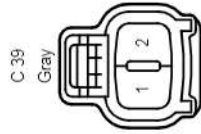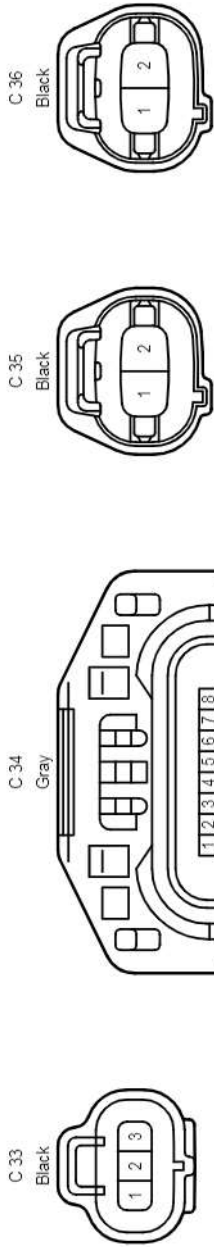


















Position of Parts in Engine Compartment <LHD 1GR-FE>

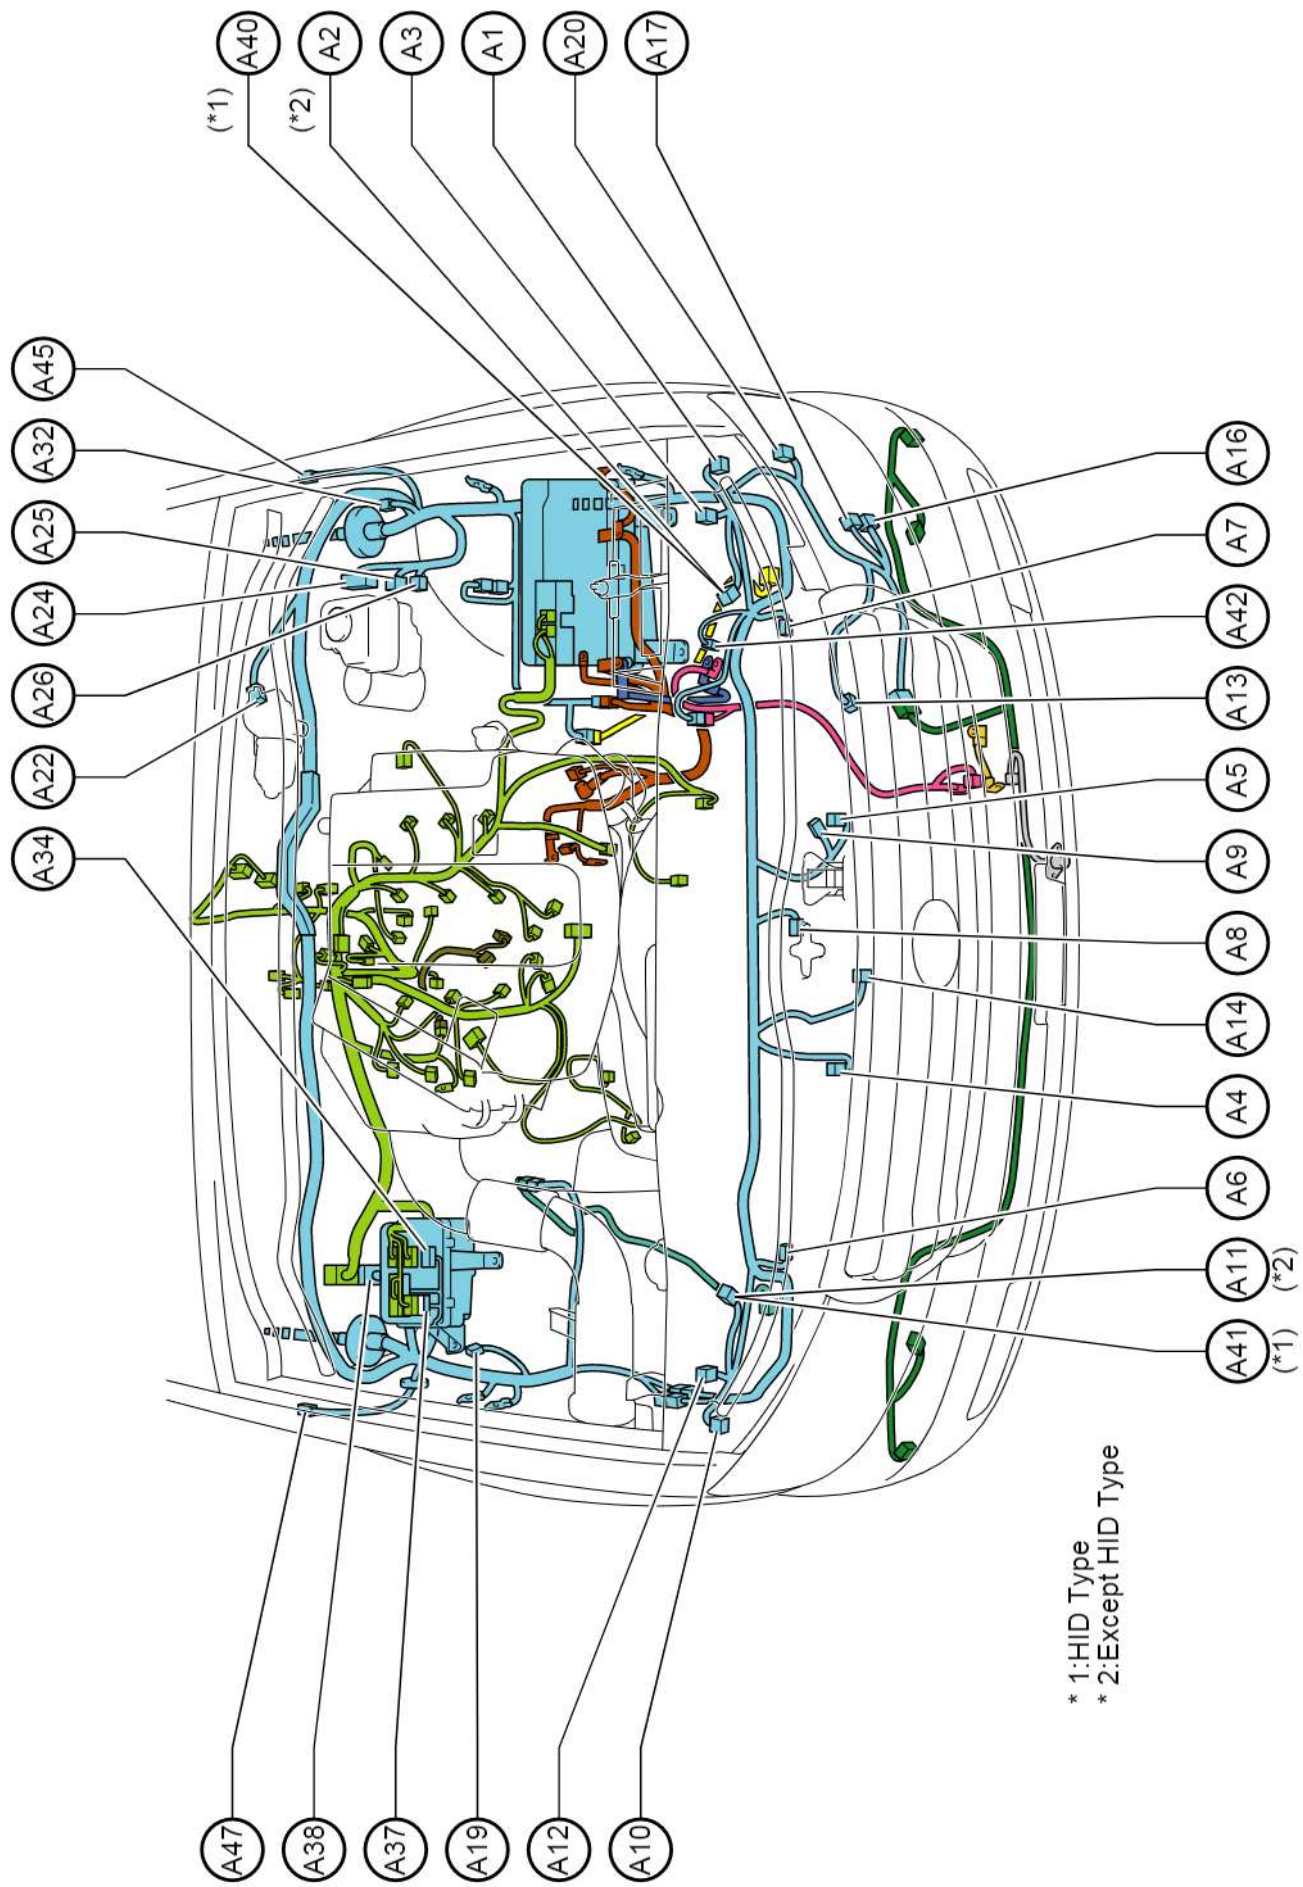

\* 1:HID Type  
\* 2:Except HID Type






- A 1 Headlight Assembly LH
- A 2 Headlight Assembly LH
- A 3 Headlight Assembly LH
- A 4 High Pitched Horn Assembly
- A 5 Low Pitched Horn Assembly
- A 6 Front Airbag Sensor RH
- A 7 Front Airbag Sensor LH
- A 8 Engine Hood Courtesy Switch
- A 9 Condenser Blower Motor Assembly
- A 10 Headlight Assembly RH
- A 11 Headlight Assembly RH
- A 12 Headlight Assembly RH
- A 13 A/C Pressure Sensor
- A 14 Ambient Temperature Sensor
- A 16 Windshield Washer Motor and Pump Assembly
- A 17 Headlight Cleaner Control Relay and Motor
- A 19 Security Horn Assembly
- A 20 Wireless Door Lock Buzzer
- A 22 Windshield Wiper Motor Assembly
- A 24 Skid Control ECU with Actuator Assembly
- A 25 Skid Control ECU with Actuator Assembly
- A 26 Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Assembly)
- A 32 Noise Filter (Ghost Buster)
- A 34 Junction Connector
- A 37 Junction Connector
- A 38 ECM
- A 40 Headlight Assembly LH
- A 41 Headlight Assembly RH
- A 42 Winch Main Relay (No.1 Magnet Switch Assembly)
- A 45 Side Turn Signal Light Assembly LH
- A 47 Side Turn Signal Light Assembly RH

  Position of Parts in Engine Compartment <LHD 1GR-FE>

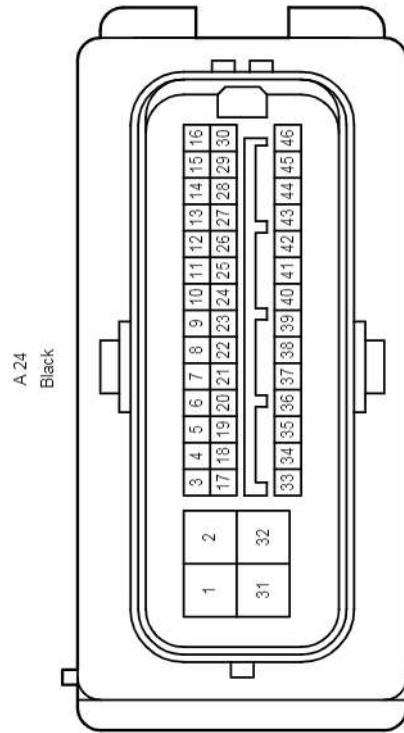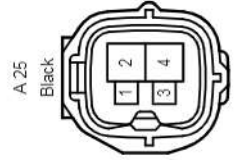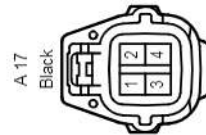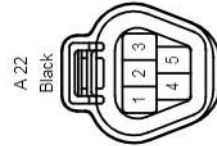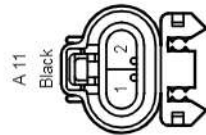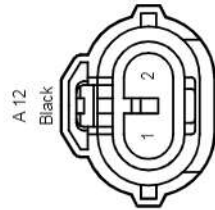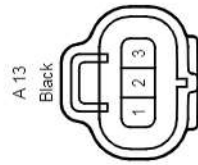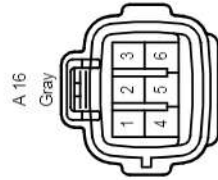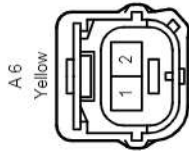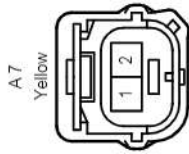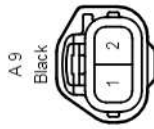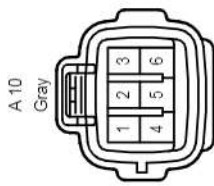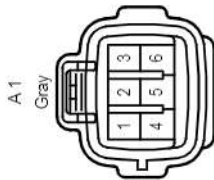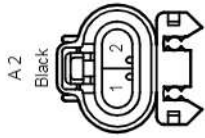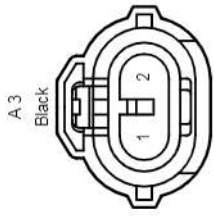




Position of Parts in Engine Compartment <LHD 1GR-FE>

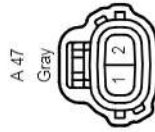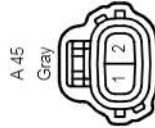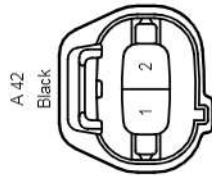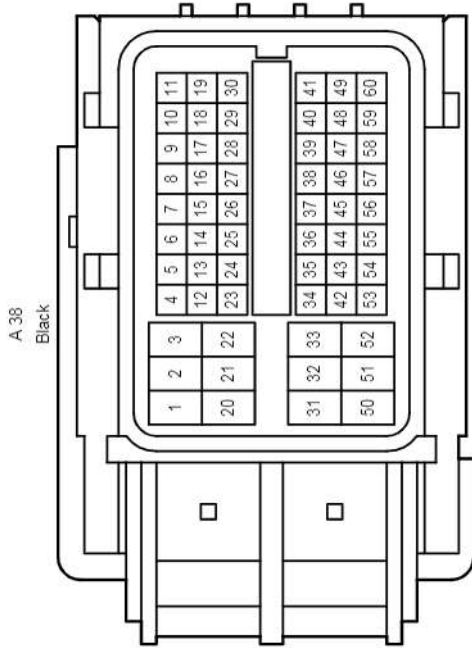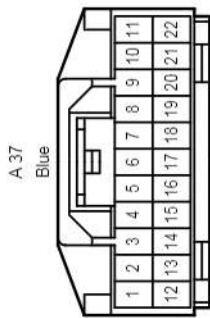

Position of Parts in Engine Compartment <LHD 1GR-FE>

- (\*)3) D14
- (\*)4) D3
- D2
- D1
- D4

\* 3: Cold Area Spec.  
\* 4: Except Cold Area Spec.





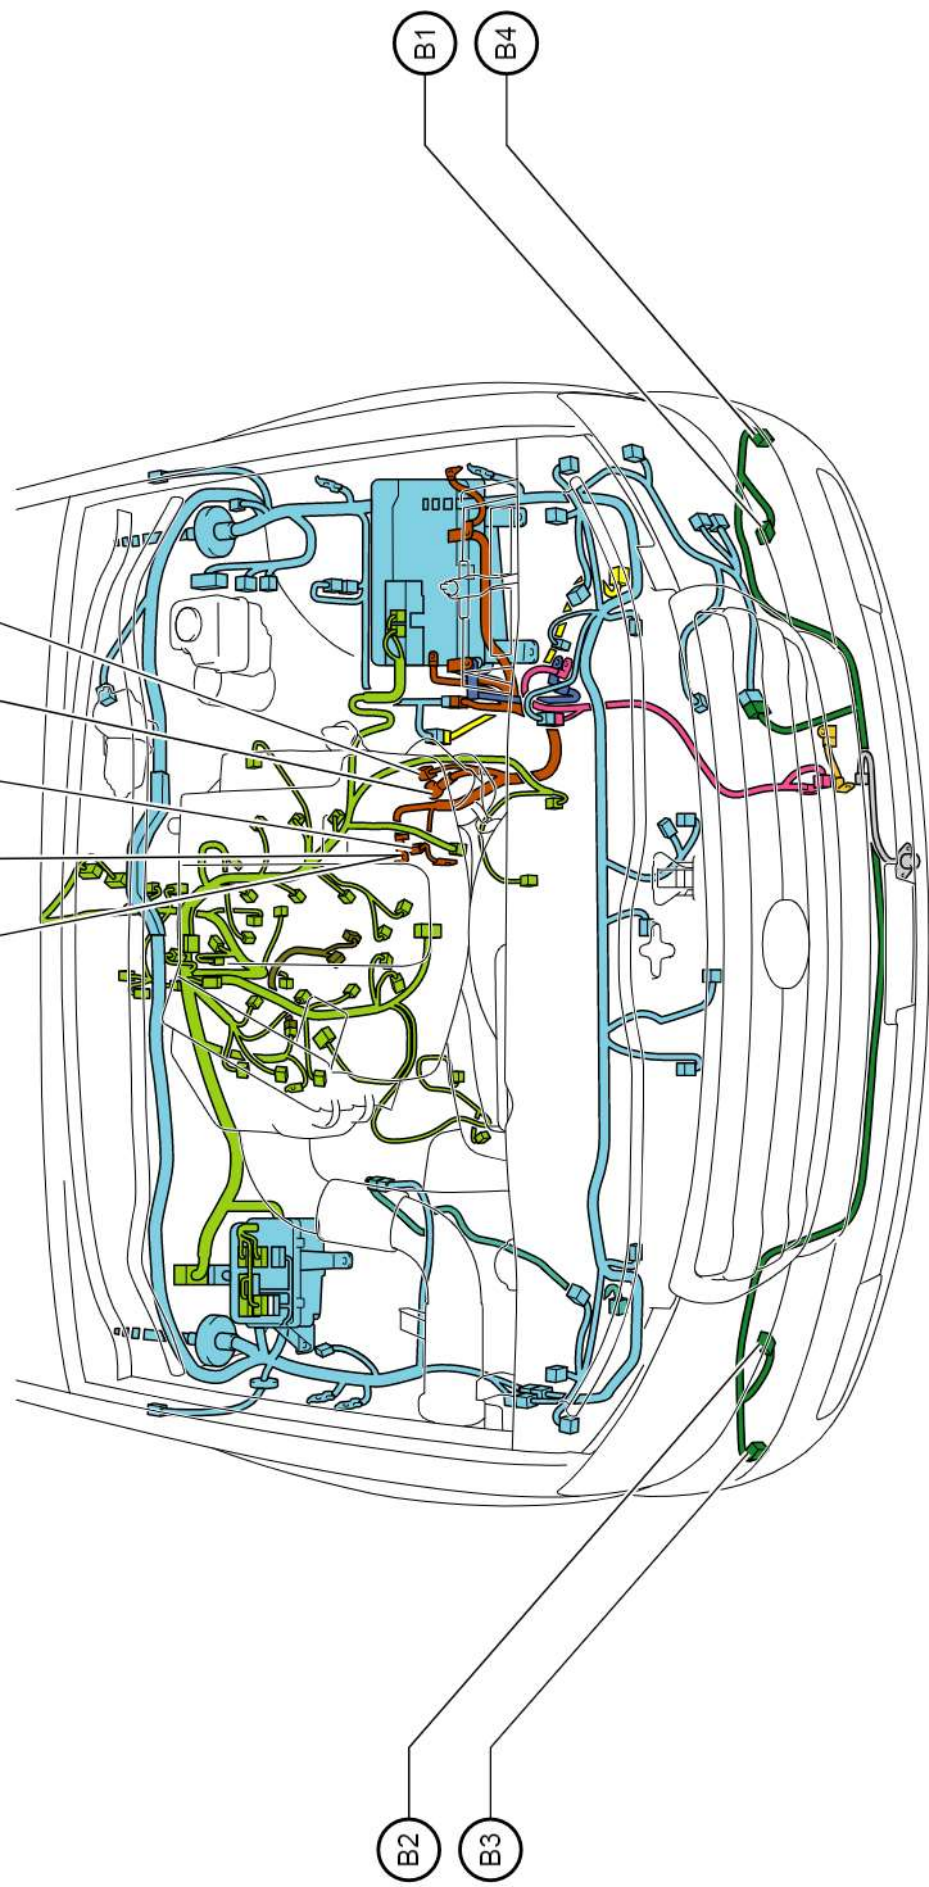


Position of Parts in Engine Compartment <LHD 1GR-FE>


---

- B 1 Fog Light Assembly LH
- B 2 Fog Light Assembly RH
- B 3 No.1 Ultrasonic Sensor RH
- B 4 No.1 Ultrasonic Sensor LH
  
- D 1 Generator Assembly
- D 2 Starter Assembly
- D 3 Starter Assembly
- D 4 Generator Assembly
- D 14 Starter Assembly

Position of Parts in Engine Compartment <LHD 1GR-FE>

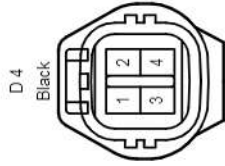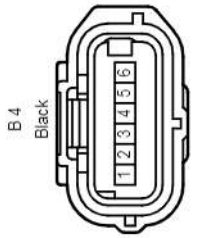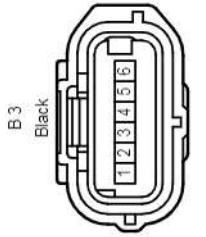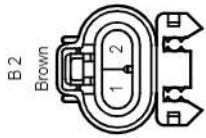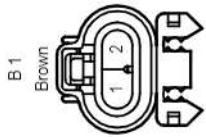

Position of Parts in Engine Compartment <LHD 1GR-FE>




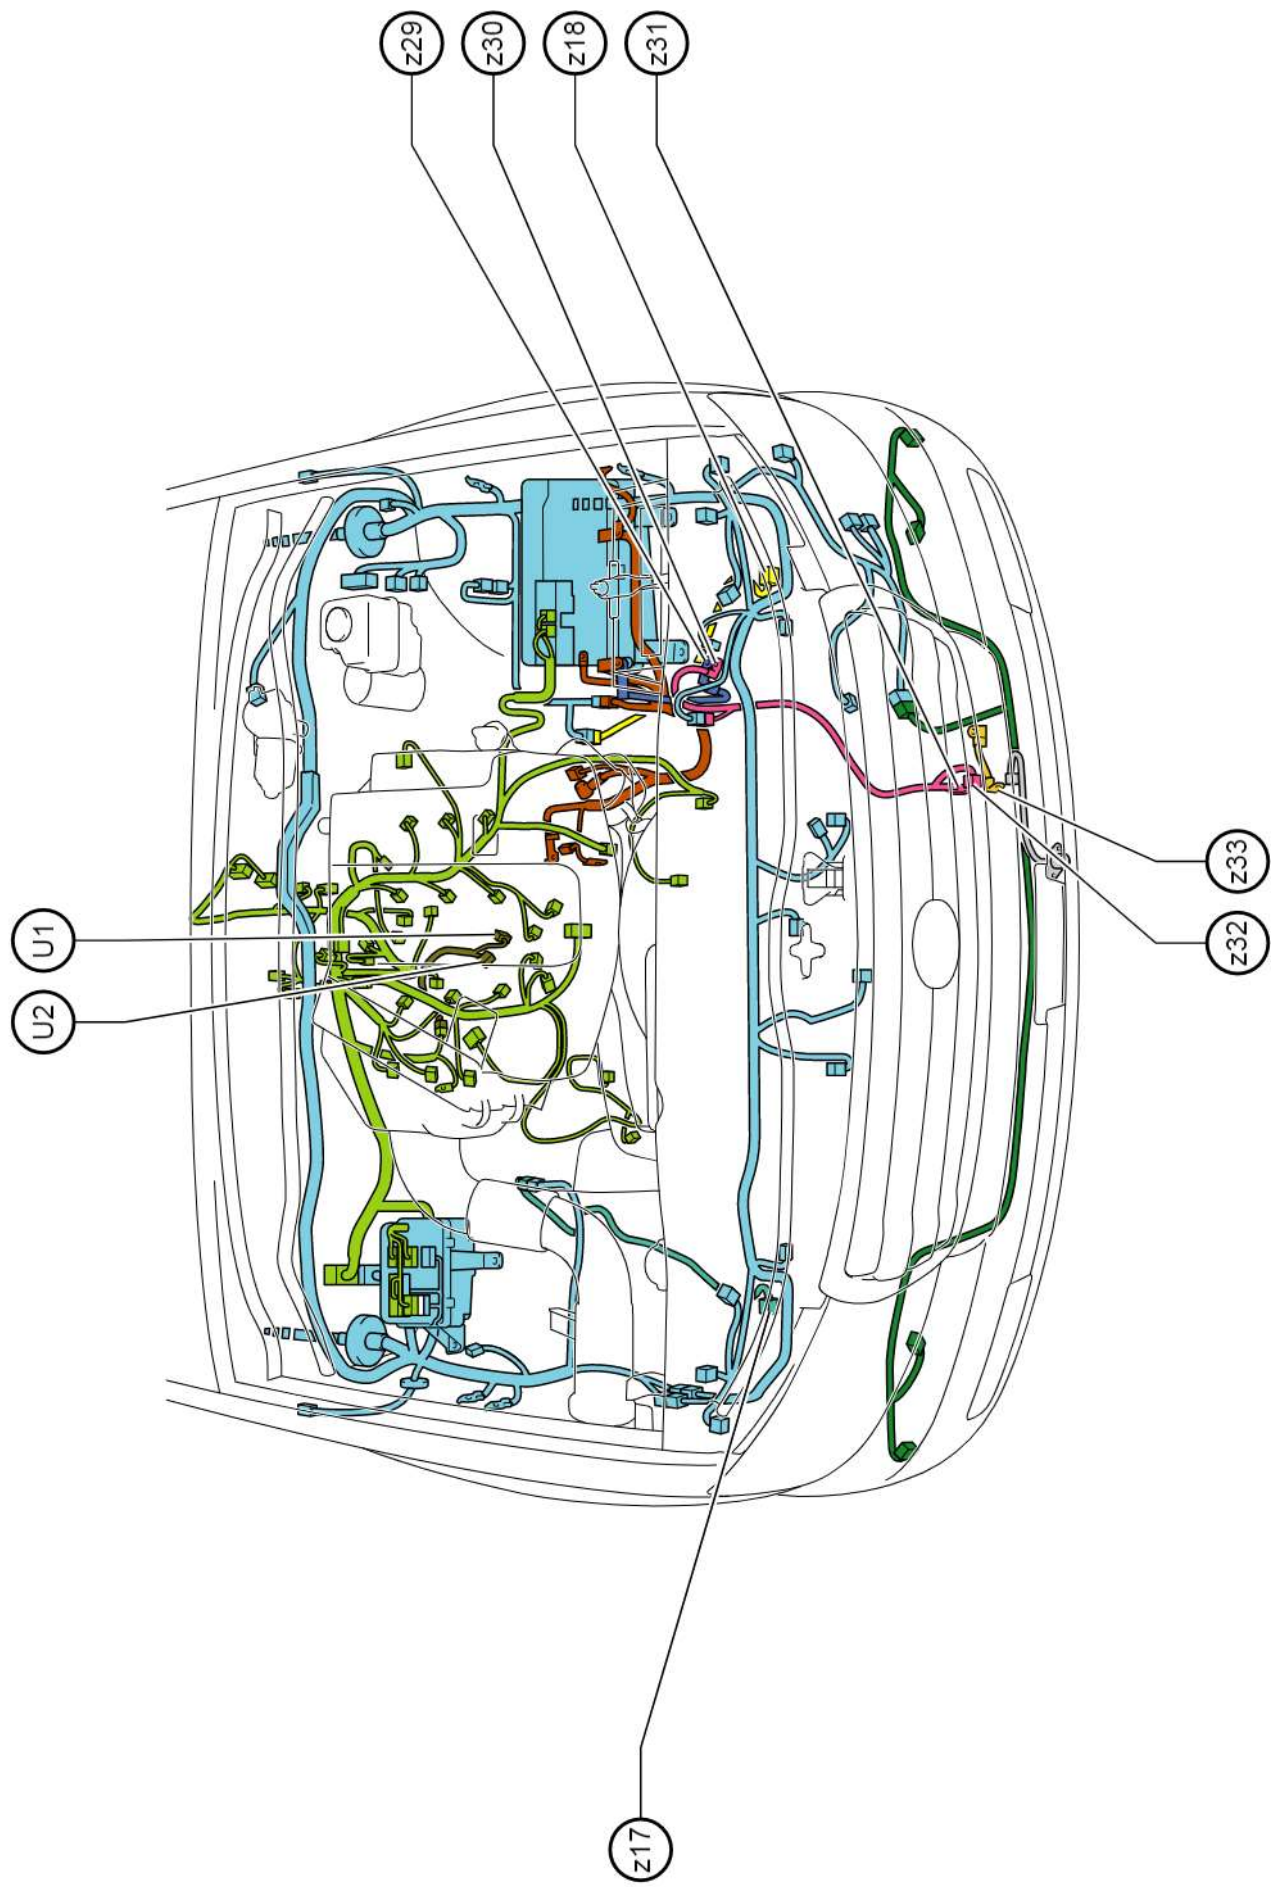


Position of Parts in Engine Compartment <LHD 1GR-FE>


---

- U 1 Knock Control Sensor (Bank 2)
- U 2 Knock Control Sensor (Bank 1)
  
- Z 17 Front Speed Sensor RH
- Z 18 Front Speed Sensor LH
- Z 29 Winch Main Relay (No.1 Magnet Switch Assembly)
- Z 30 Winch Main Relay (No.1 Magnet Switch Assembly)
- Z 31 With Magnet Switch Winch Motor Assembly
- Z 32 With Magnet Switch Winch Motor Assembly
- Z 33 With Magnet Switch Winch Motor Assembly

Position of Parts in Engine Compartment <LHD 1GR-FE>

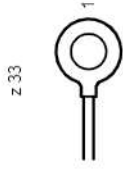
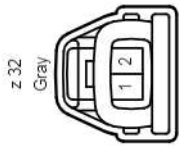
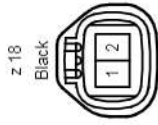
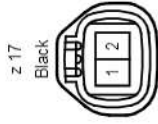


Wire and Wire in Engine Compartment <LHD 1GR-FE>

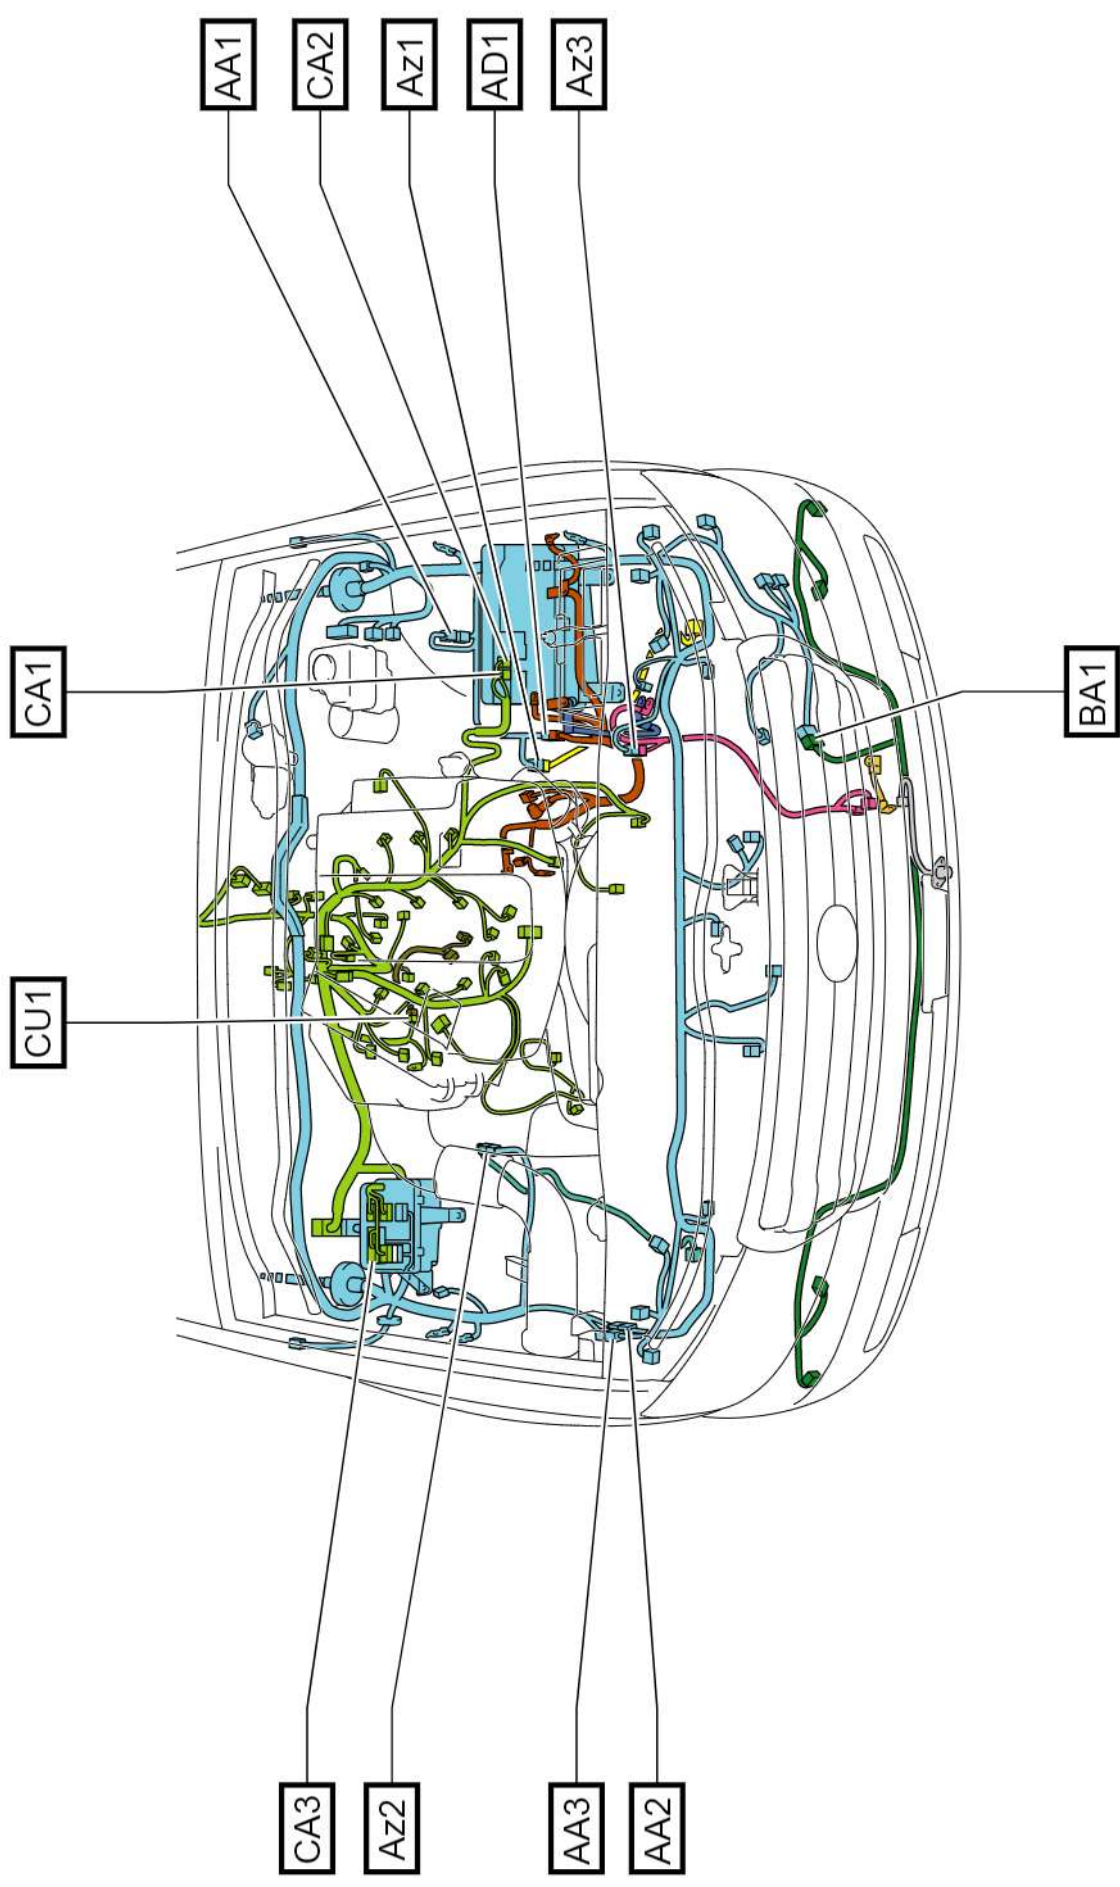





Wire and Wire in Engine Compartment <LHD 1GR-FE>

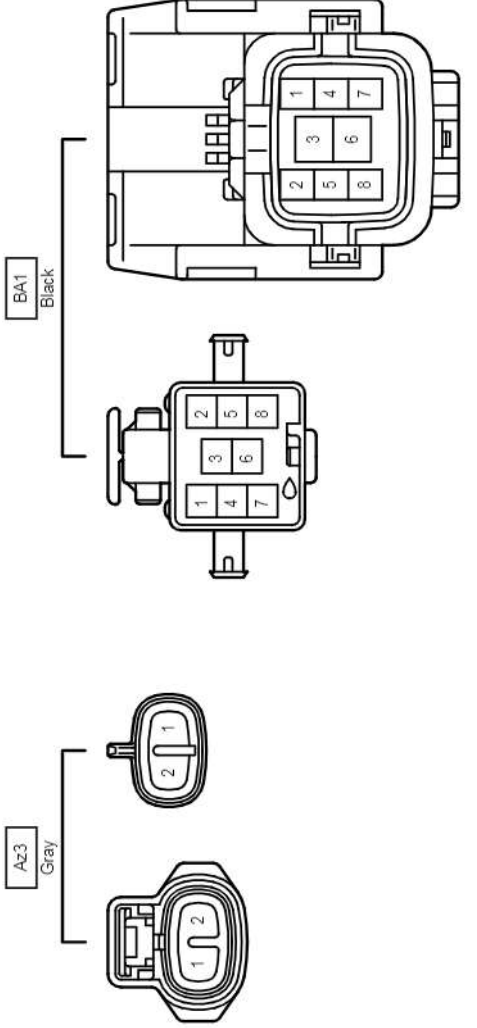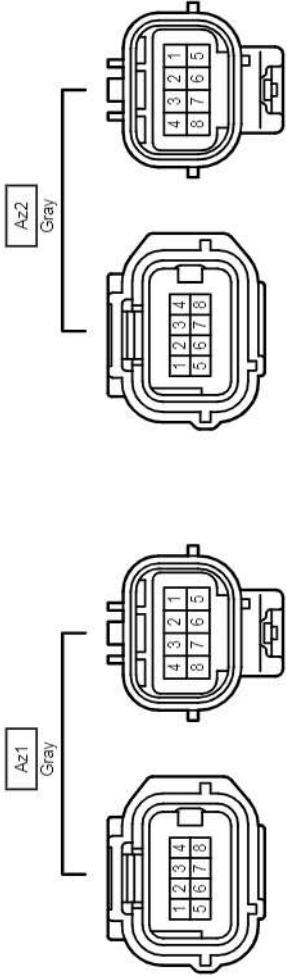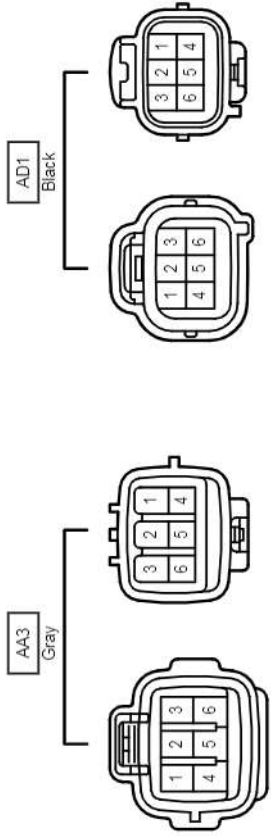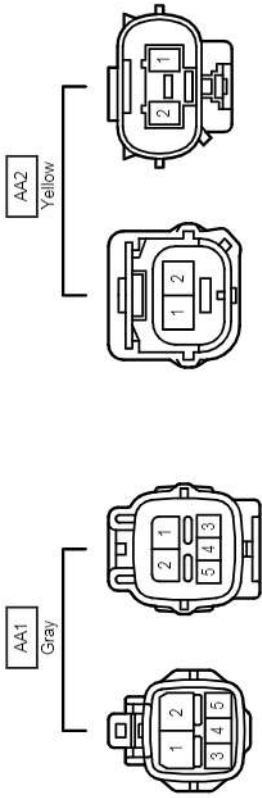


Wire and Wire in Engine Compartment <LHD 1GR-FE>

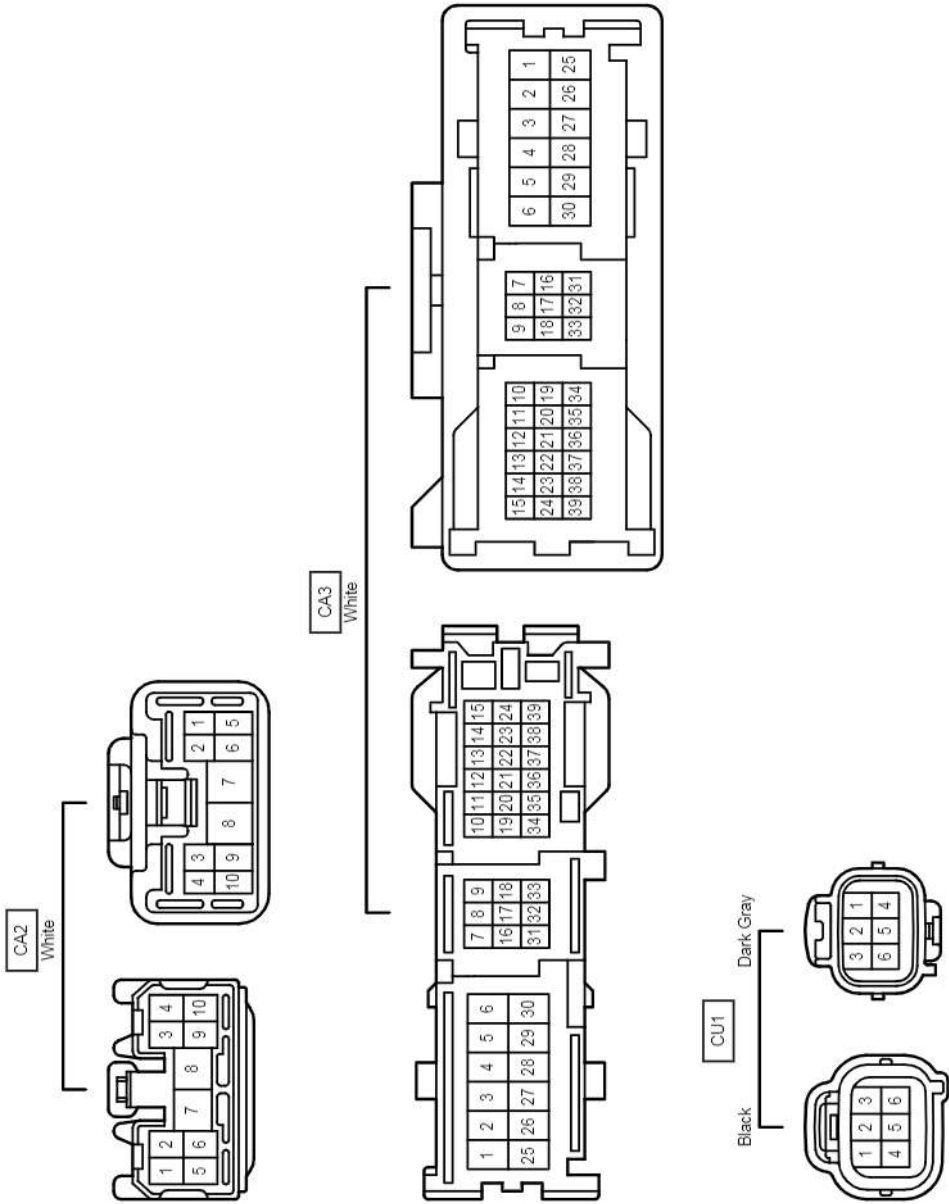

Ground Points in Engine Compartment <RHD 1GR-FE>





















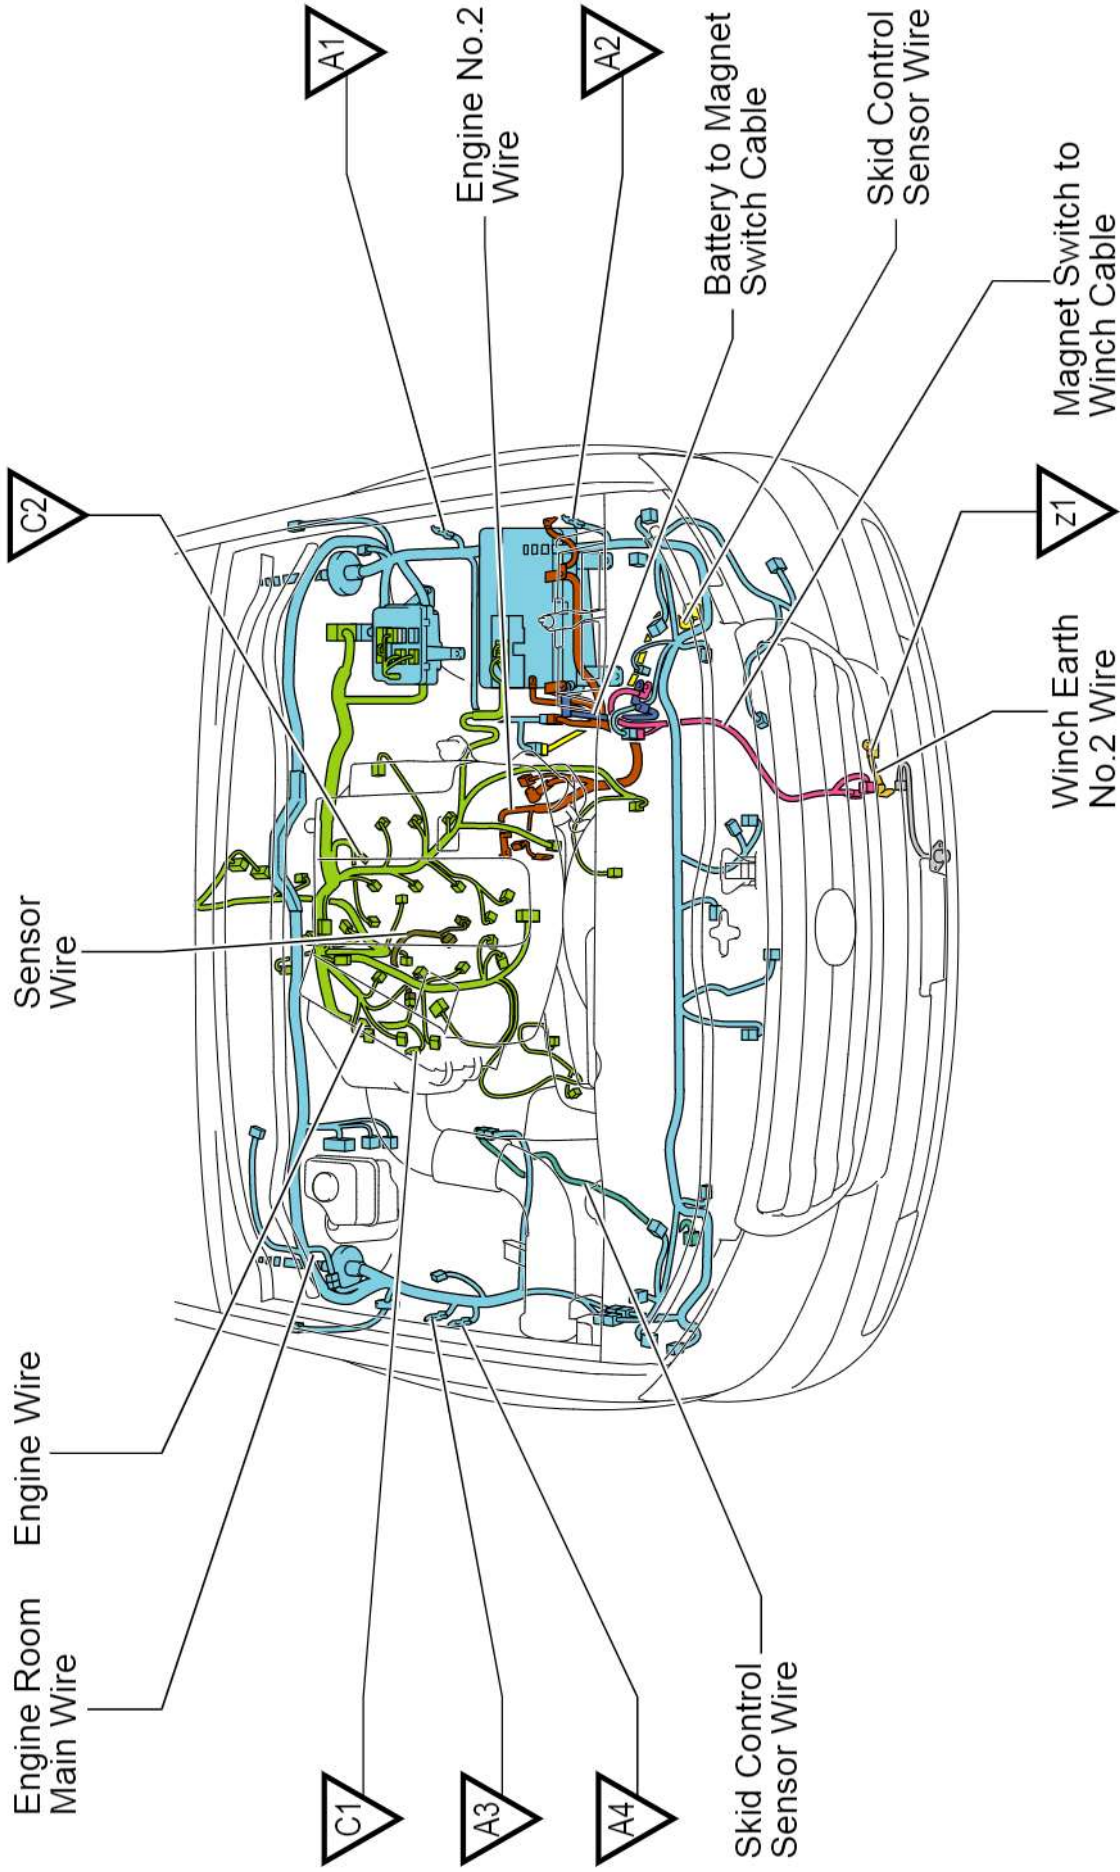


Position of Parts in Engine Compartment <RHD 1GR-FE>

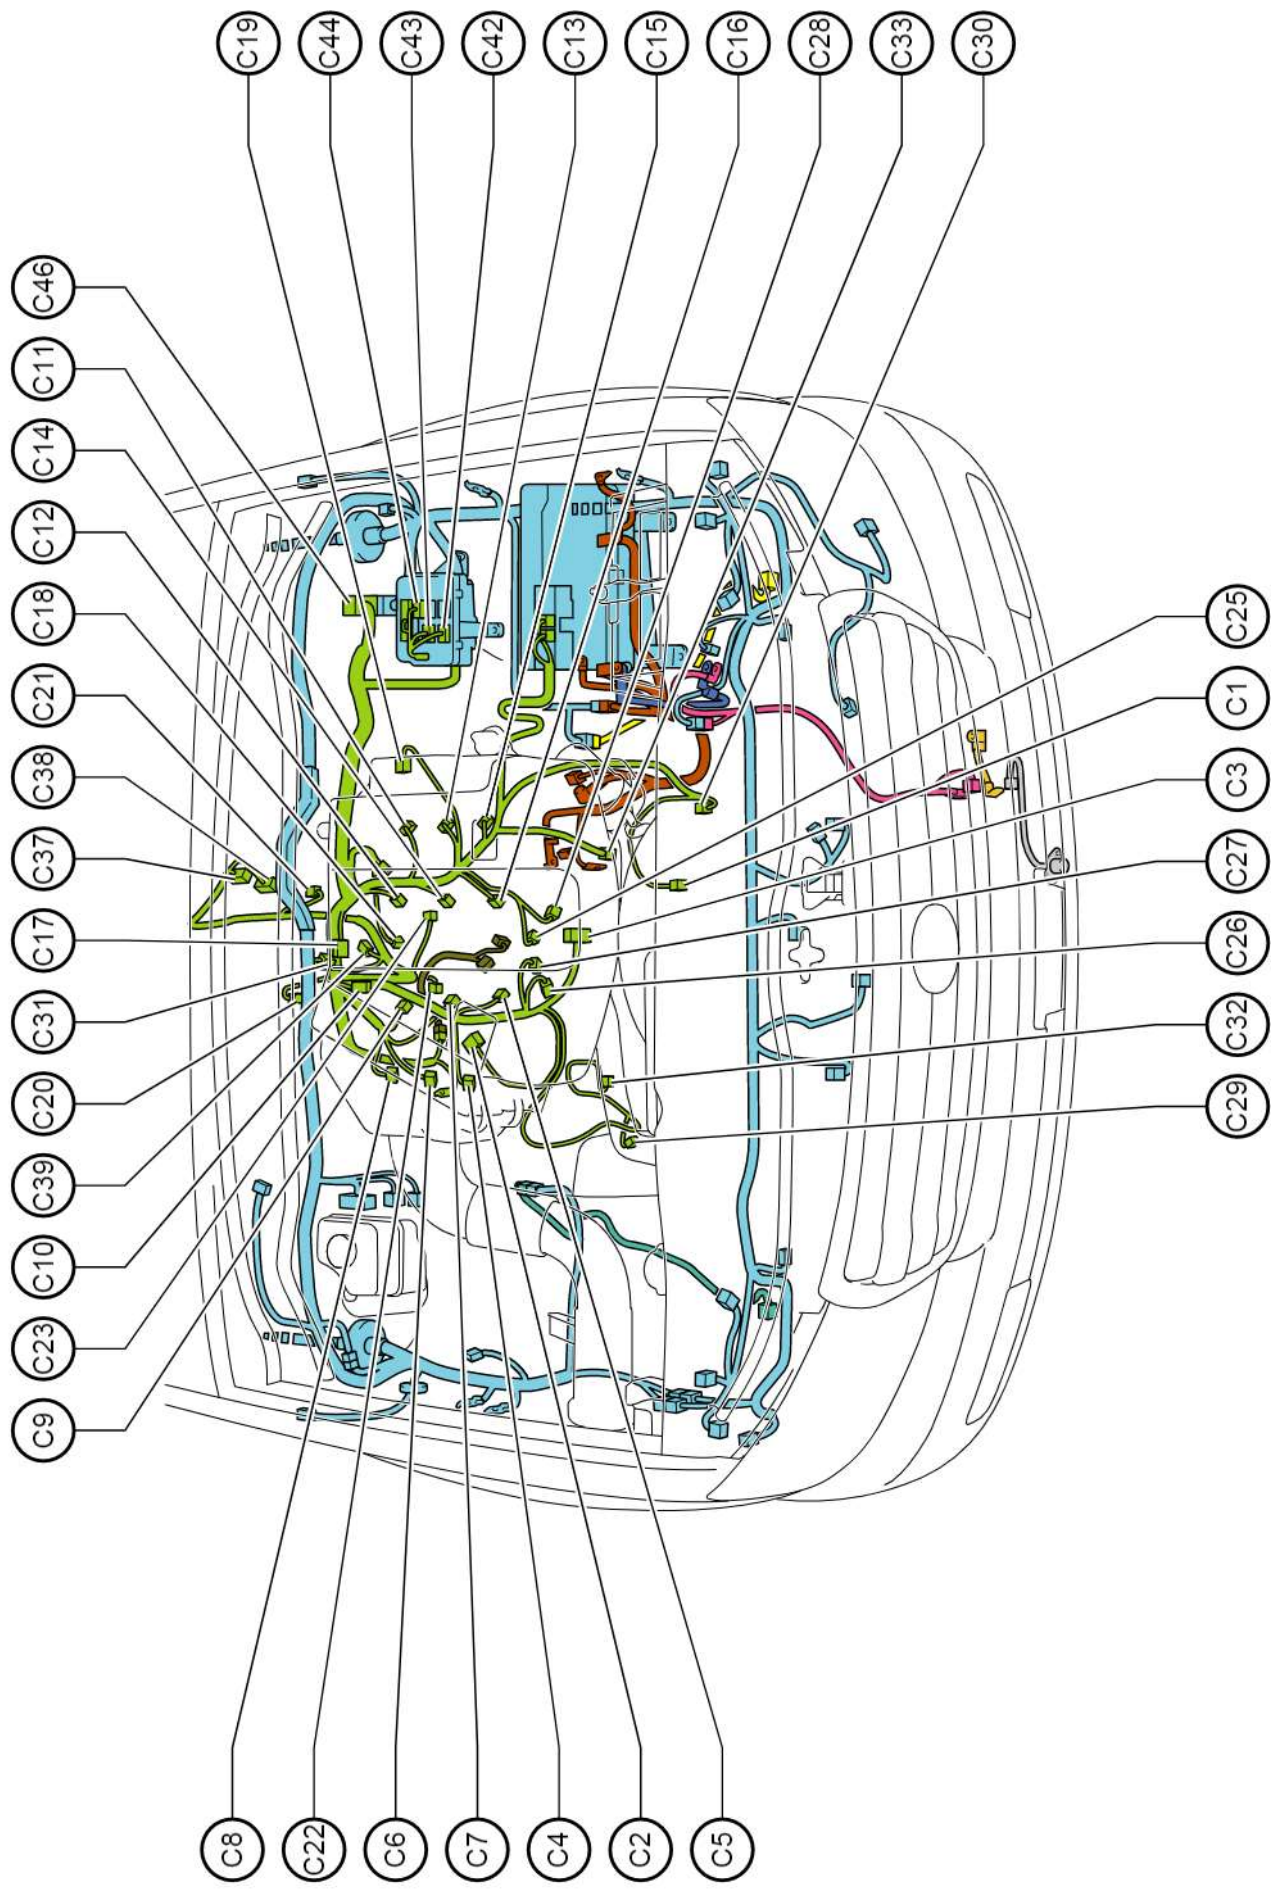

- C 1 Crankshaft Position Sensor
- C 2 Mass Air Flow Meter
- C 3 Throttle Body Assembly
- C 4 Ignition Coil Assembly No.1
- C 5 Fuel Injector Assembly No.1
- C 6 Ignition Coil Assembly No.3
- C 7 Fuel Injector Assembly No.3
- C 8 Ignition Coil Assembly No.5
- C 9 Fuel Injector Assembly No.5
- C 10 Noise Filter (Ignition Bank 1)
- C 11 Ignition Coil Assembly No.6
- C 12 Fuel Injector Assembly No.6
- C 13 Ignition Coil Assembly No.4
- C 14 Fuel Injector Assembly No.4
- C 15 Ignition Coil Assembly No.2
- C 16 Fuel Injector Assembly No.2
- C 17 Noise Filter (Ignition Bank 2)
- C 18 E.F.I. Engine Coolant Temperature Sensor
- C 19 Purge VSV
- C 20 Oxygen Sensor (Bank 1 Sensor 2)
- C 21 Oxygen Sensor (Bank 2 Sensor 2)
- C 22 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- C 23 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
- C 25 WT Sensor (Bank 2)
- C 26 WT Sensor (Bank 1)
- C 27 Camshaft Timing Oil Control Valve (Bank 1)
- C 28 Camshaft Timing Oil Control Valve (Bank 2)
- C 29 Power-Steering Oil Pressure Switch
- C 30 Cooler Compressor Assembly
- C 31 VSV (ACIS)
- C 32 Engine Oil Level Sensor
- C 33 Oil Pressure Sender Gage Assembly
- C 37 Transfer Shift Actuator Assembly
- C 38 Transfer Shift Actuator Assembly
- C 39 Back-Up Light Switch Assembly
- C 42 Junction Connector
- C 43 Junction Connector
- C 44 Junction Connector
- C 46 ECM

  Position of Parts in Engine Compartment <RHD 1GR-FE>

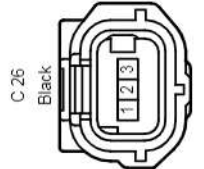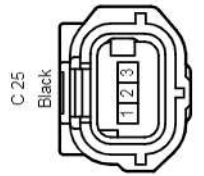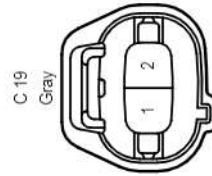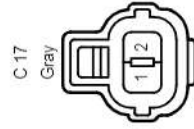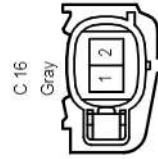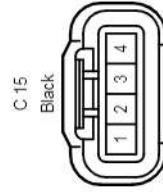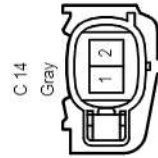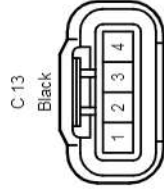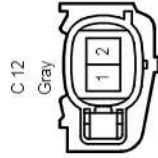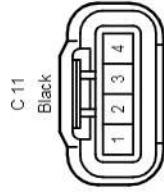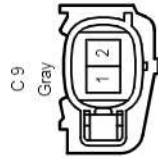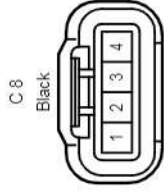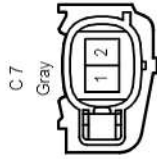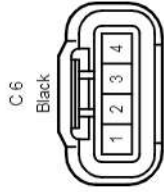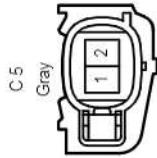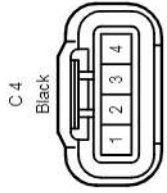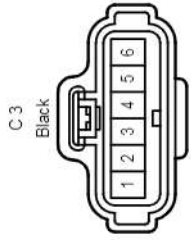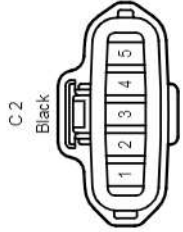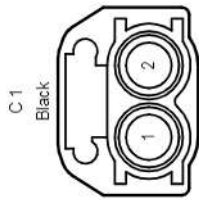


C 30

C 32


C 33

Position of Parts in Engine Compartment <RHD 1GR-FE>


C 42  
White

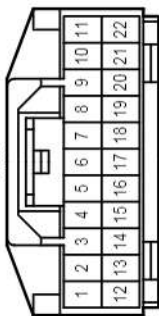


C 43  
White

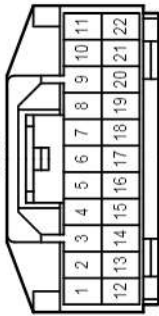


C 44  
Blue

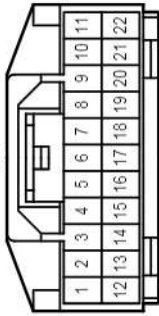

C 46  
Black

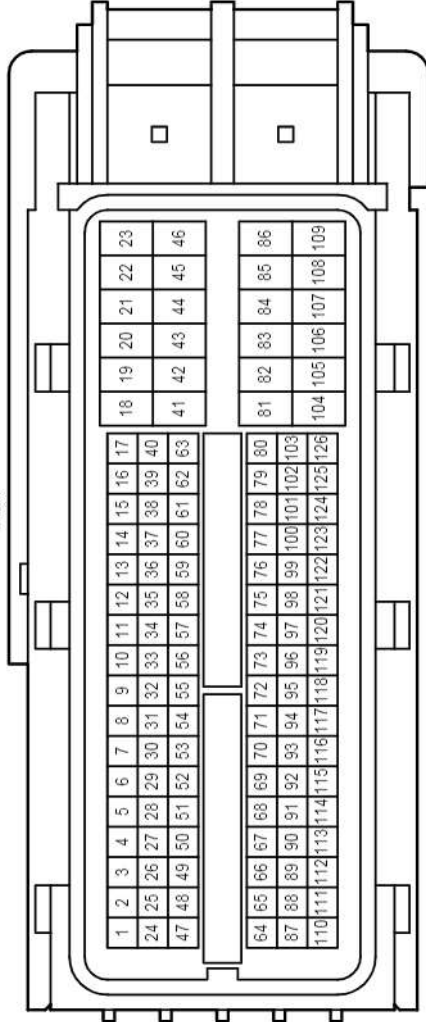
















Position of Parts in Engine Compartment <RHD 1GR-FE>

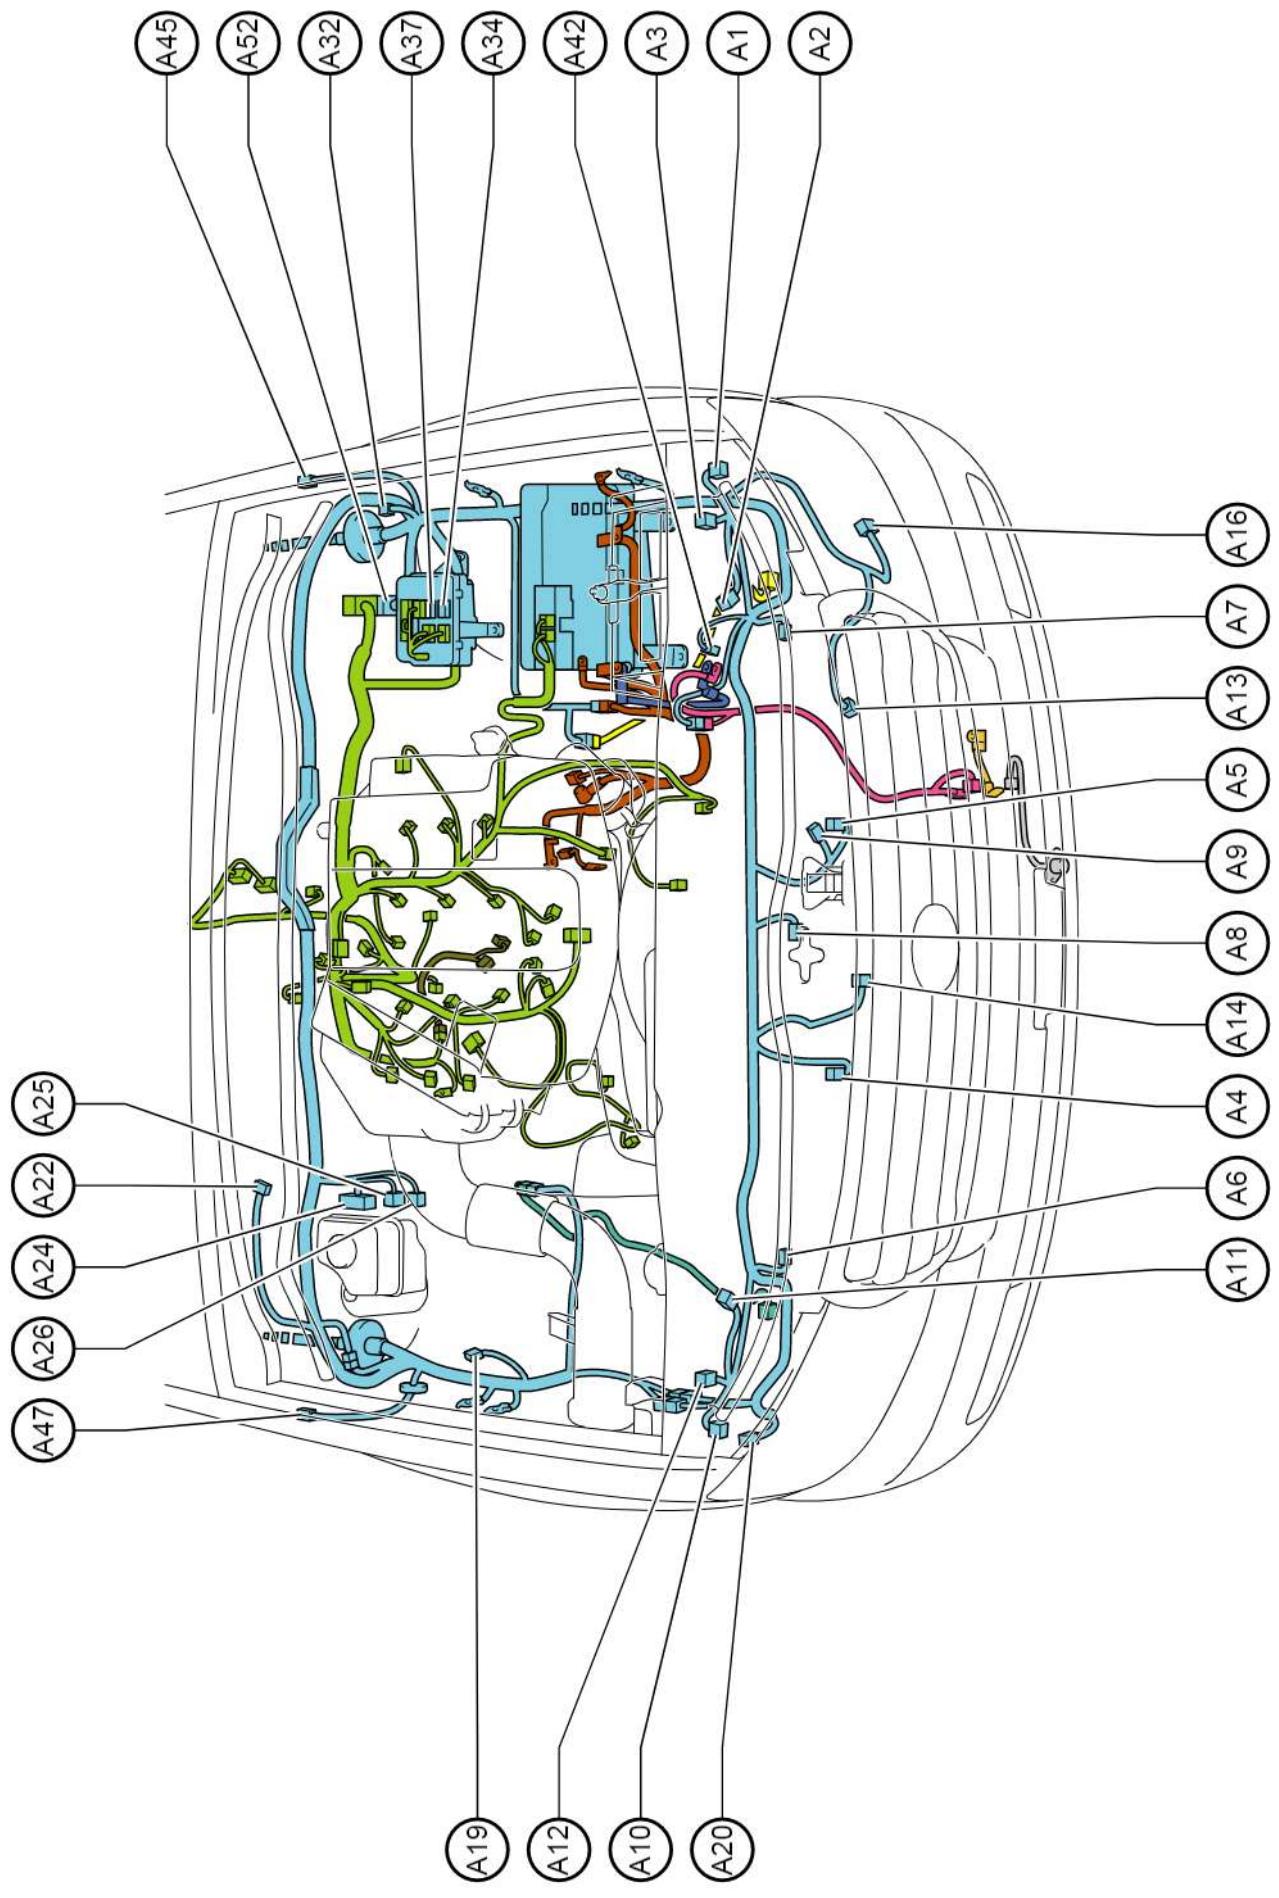




- A 1 Headlight Assembly LH
- A 2 Headlight Assembly LH
- A 3 Headlight Assembly LH
- A 4 High Pitched Horn Assembly
- A 5 Low Pitched Horn Assembly
- A 6 Front Airbag Sensor RH
- A 7 Front Airbag Sensor LH
- A 8 Engine Hood Courtesy Switch
- A 9 Condenser Blower Motor Assembly
- A 10 Headlight Assembly RH
- A 11 Headlight Assembly RH
- A 12 Headlight Assembly RH
- A 13 A/C Pressure Sensor
- A 14 Ambient Temperature Sensor
- A 16 Windshield Washer Motor and Pump Assembly
- A 19 Security Horn Assembly
- A 20 Wireless Door Lock Buzzer
- A 22 Windshield Wiper Motor Assembly
- A 24 Skid Control ECU with Actuator Assembly
- A 25 Skid Control ECU with Actuator Assembly
- A 26 Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Assembly)
- A 32 Noise Filter (Ghost Buster)
- A 34 Junction Connector
- A 37 Junction Connector
- A 42 Winch Main Relay (No.1 Magnet Switch Assembly)
- A 45 Side Turn Signal Light Assembly LH
- A 47 Side Turn Signal Light Assembly RH
- A 52 ECM

 Position of Parts in Engine Compartment <RHD 1GR-FE>

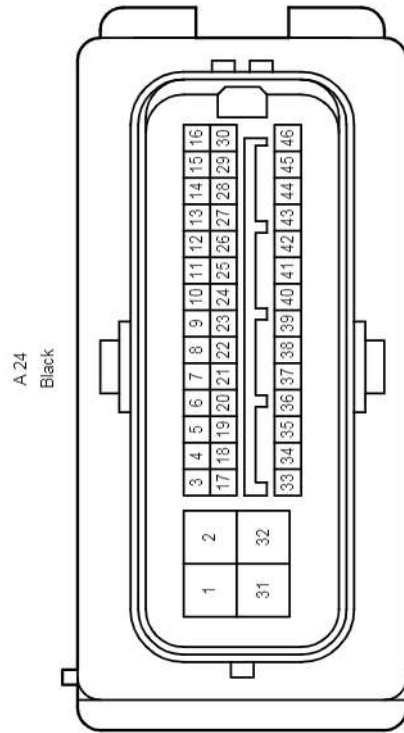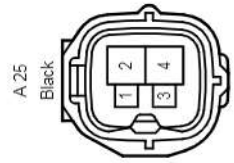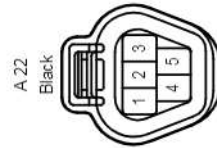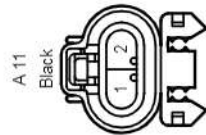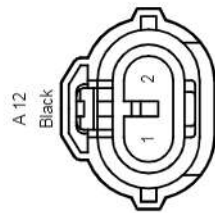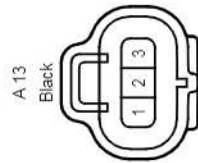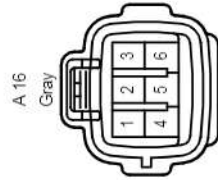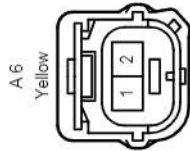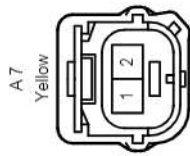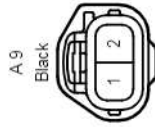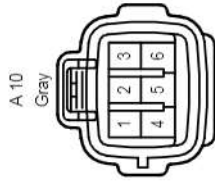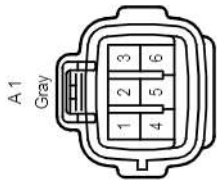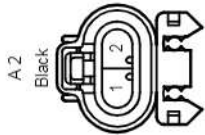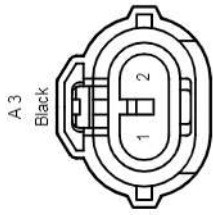

Position of Parts in Engine Compartment <RHD 1GR-FE>

A 37  
Blue

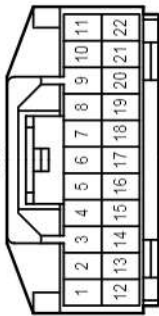

A 42  
Black




A 45  
Gray



A 47  
Gray




A 52  
Black

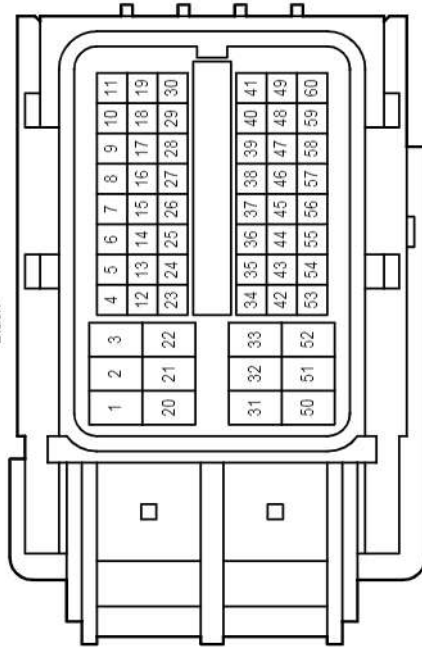

Position of Parts in Engine Compartment <RHD 1GR-FE>

- (U2)
- (U1)
- (D14) (\*1)
- (D3) (\*2)
- (D2)
- (D1)
- (D4)

\* 1: Cold Area Spec.  
\* 2: Except Cold Area Spec.

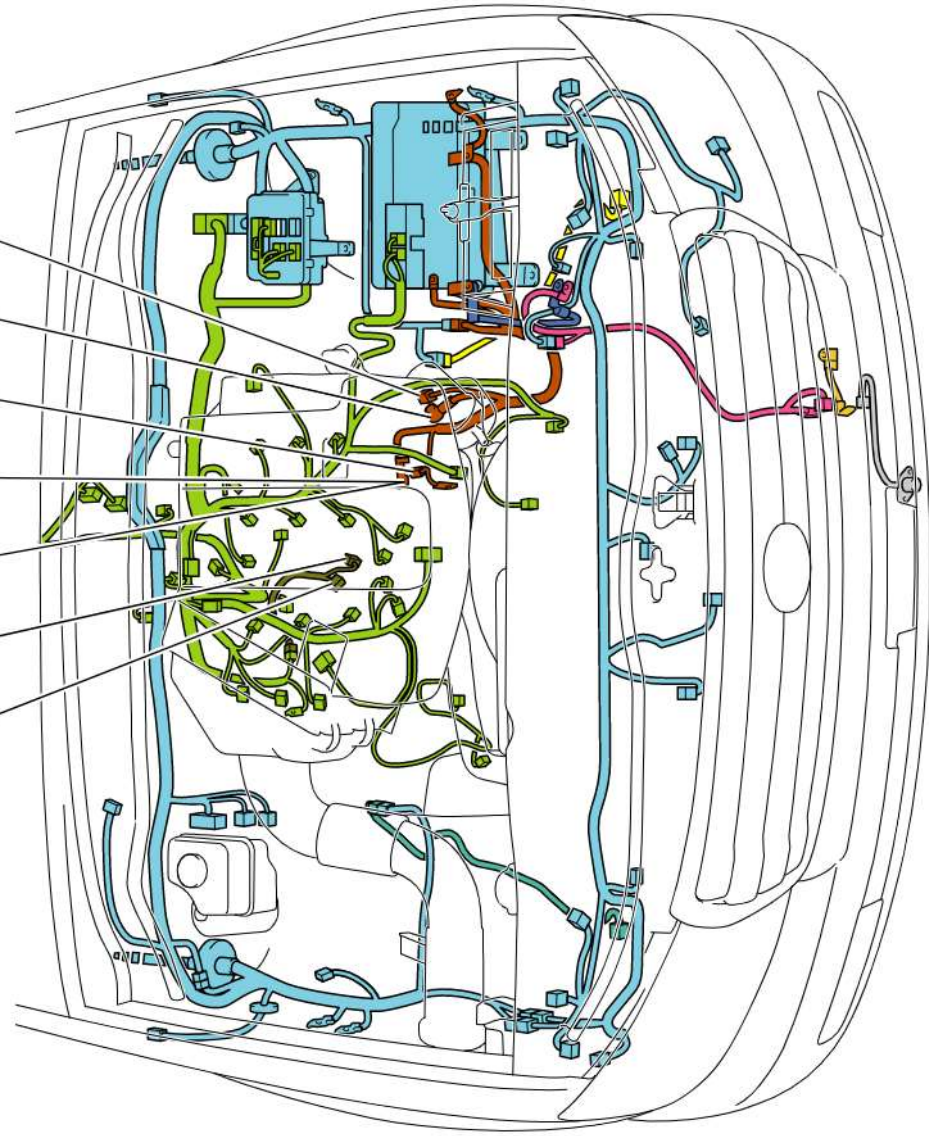




Position of Parts in Engine Compartment <RHD 1GR-FE>

---


- D 1 Generator Assembly
- D 2 Starter Assembly
- D 3 Starter Assembly
- D 4 Generator Assembly
- D 14 Starter Assembly

- U 1 Knock Control Sensor (Bank 2)
- U 2 Knock Control Sensor (Bank 1)

 Position of Parts in Engine Compartment <RHD 1GR-FE>

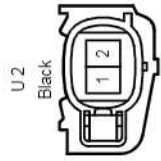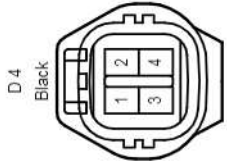

Position of Parts in Engine Compartment <RHD 1GR-FE>

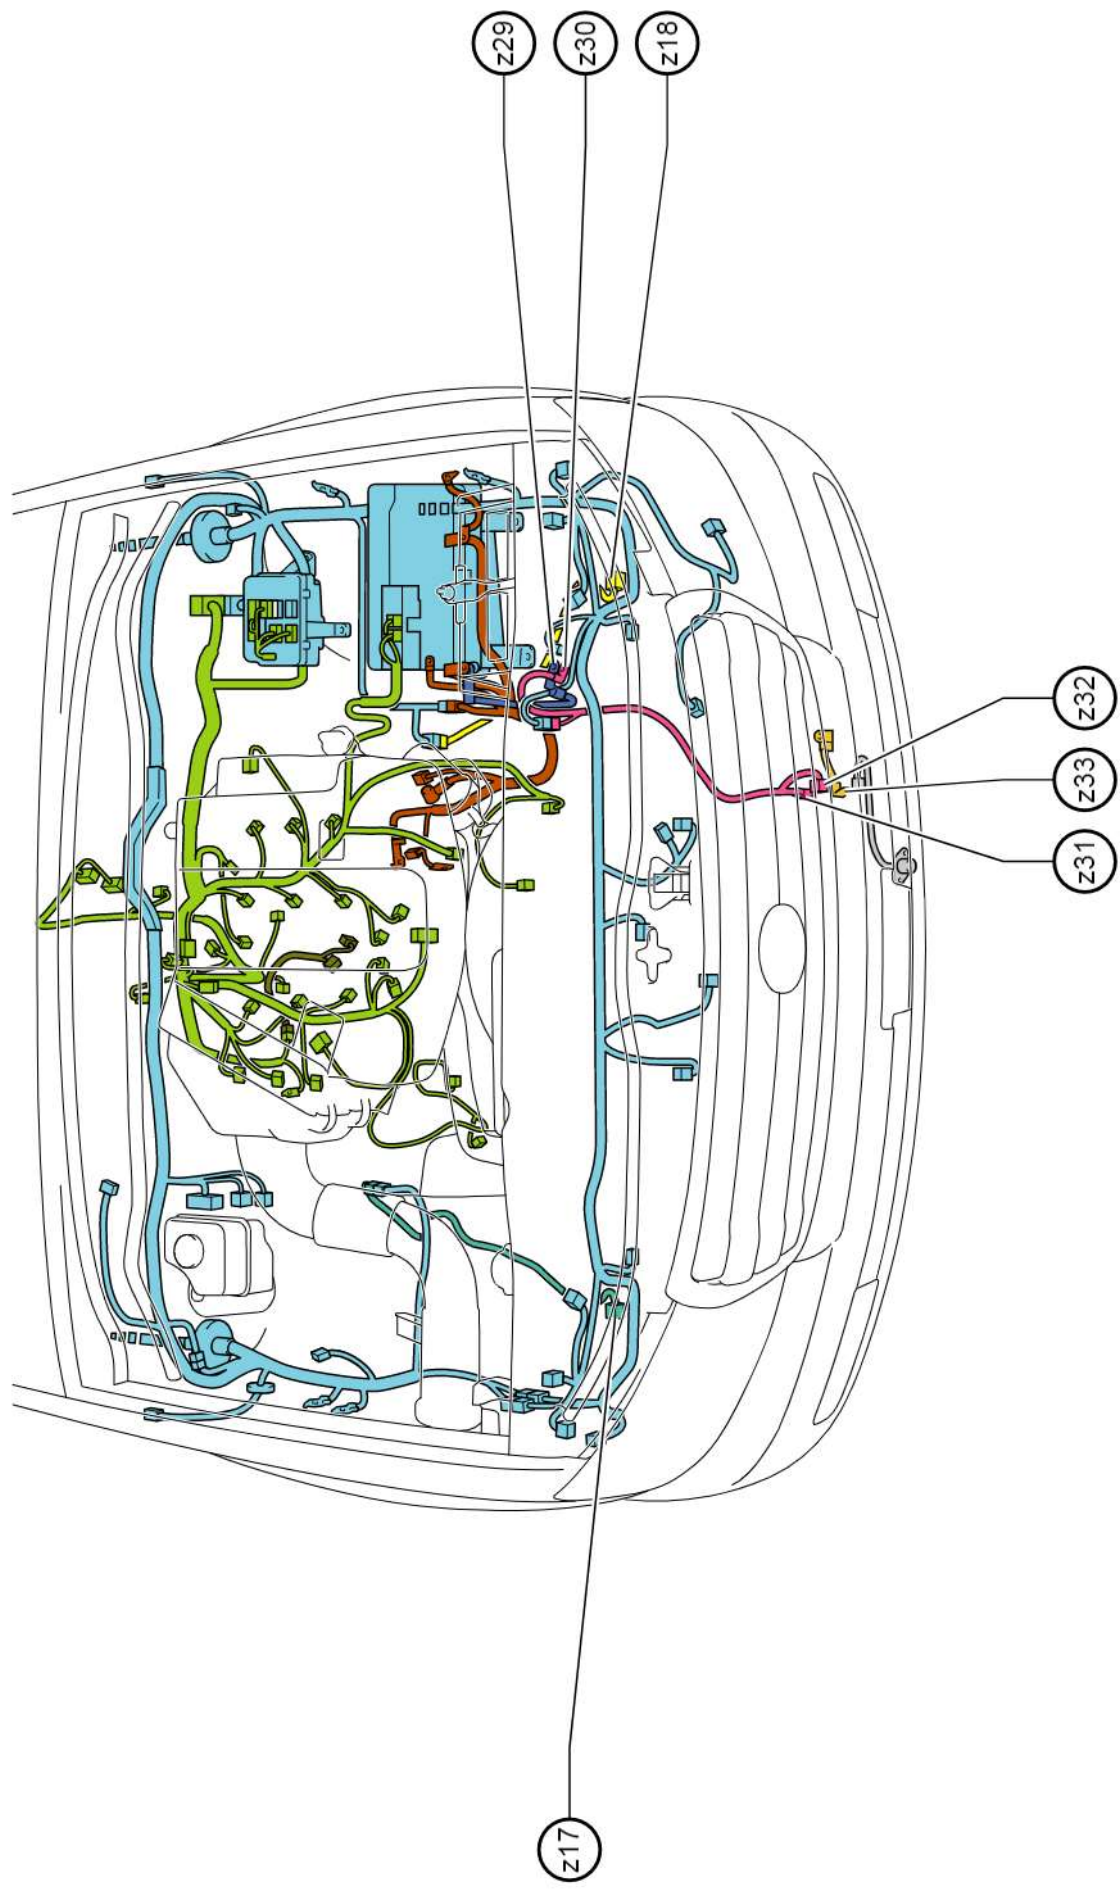



Position of Parts in Engine Compartment <RHD 1GR-FE>

---


- Z 17 Front Speed Sensor RH
- Z 18 Front Speed Sensor LH
- Z 29 Winch Main Relay (No.1 Magnet Switch Assembly)
- Z 30 Winch Main Relay (No.1 Magnet Switch Assembly)
- Z 31 With Magnet Switch Winch Motor Assembly
- Z 32 With Magnet Switch Winch Motor Assembly
- Z 33 With Magnet Switch Winch Motor Assembly







Position of Parts in Engine Compartment <RHD 1GR-FE>

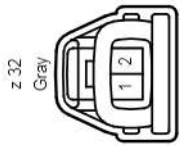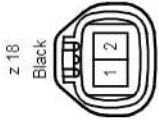

Wire and Wire in Engine Compartment <RHD 1GR-FE>

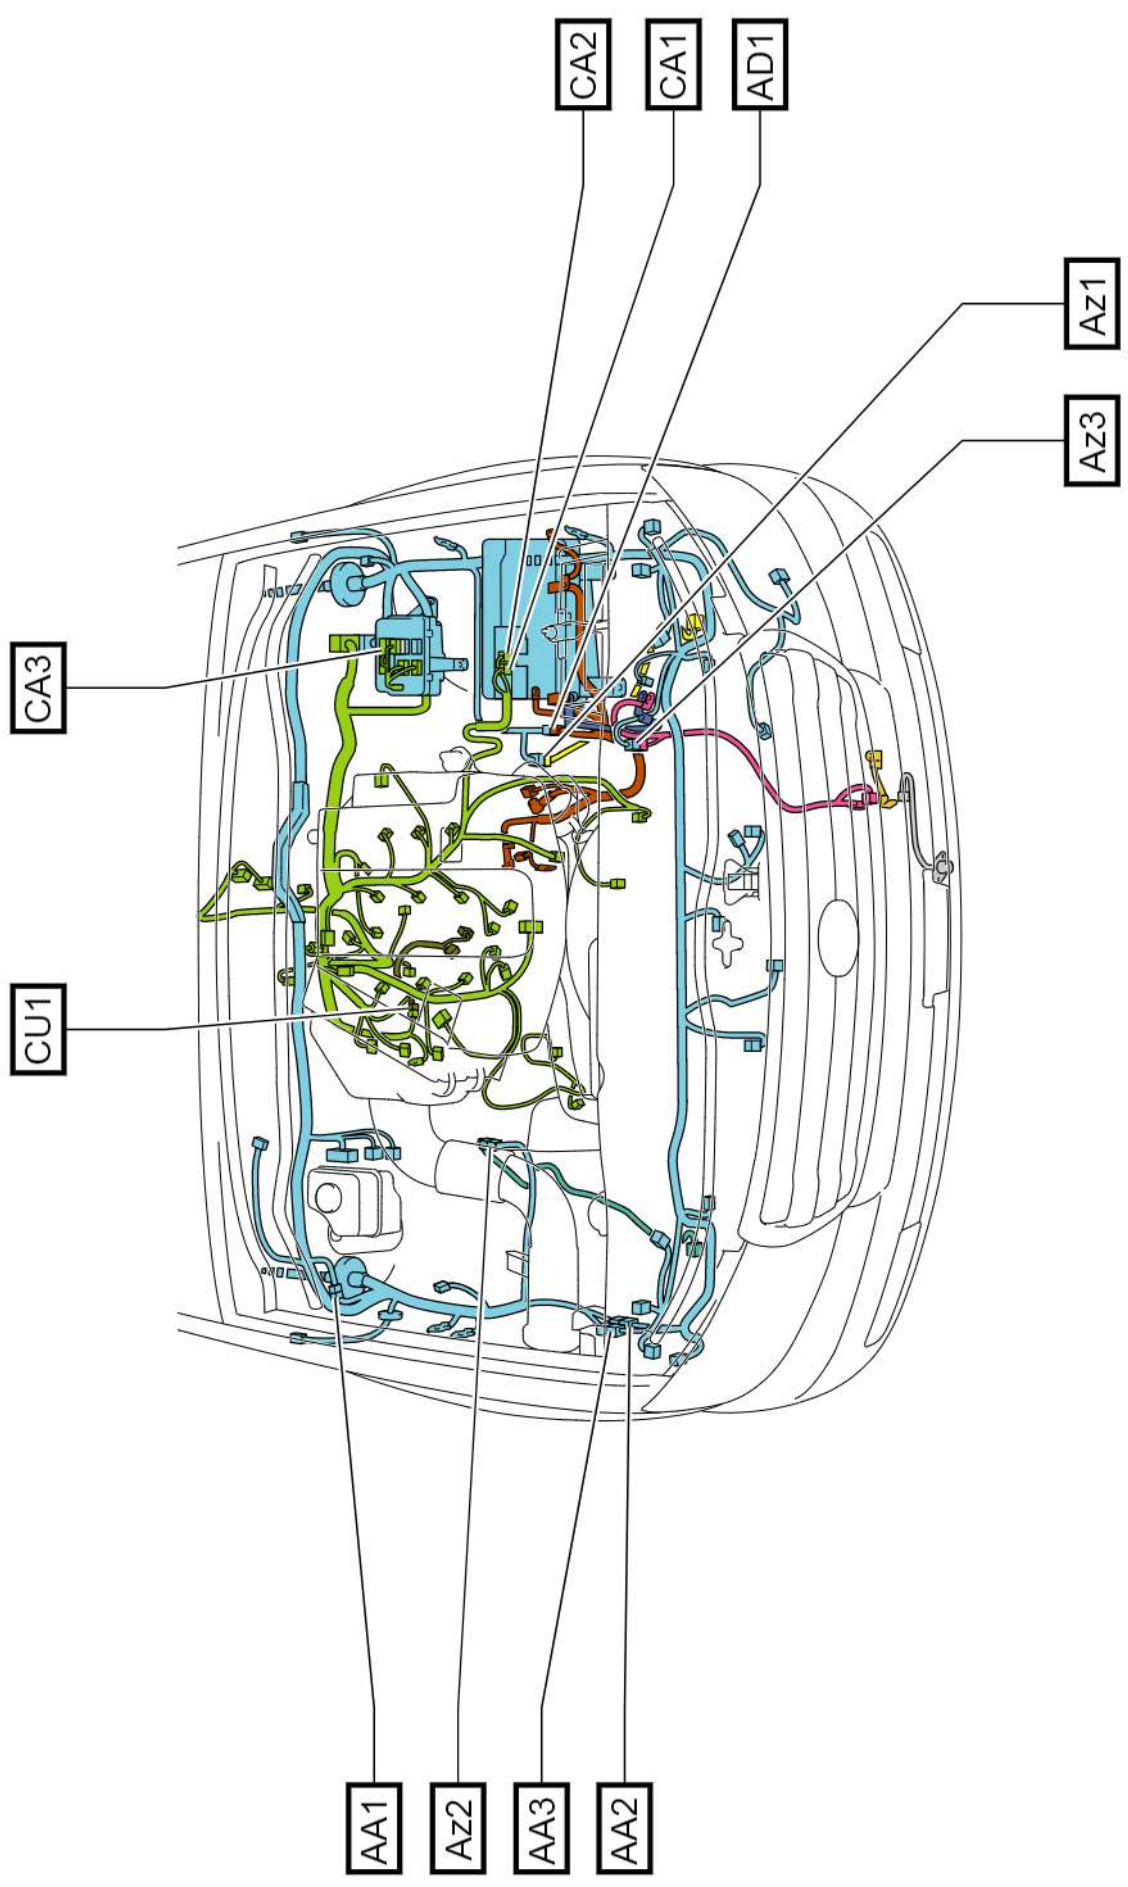


Wire and Wire in Engine Compartment <RHD 1GR-FE>

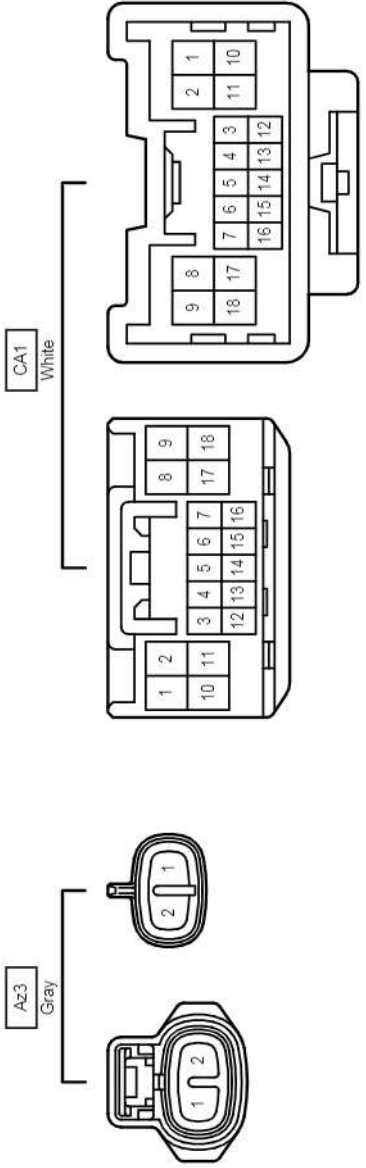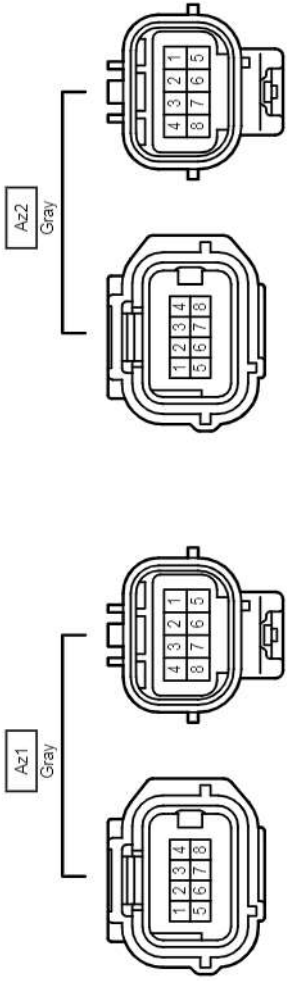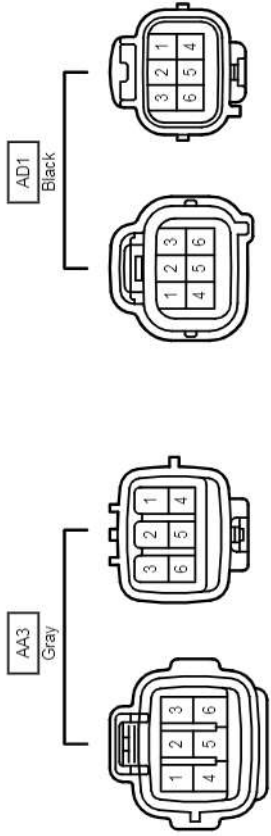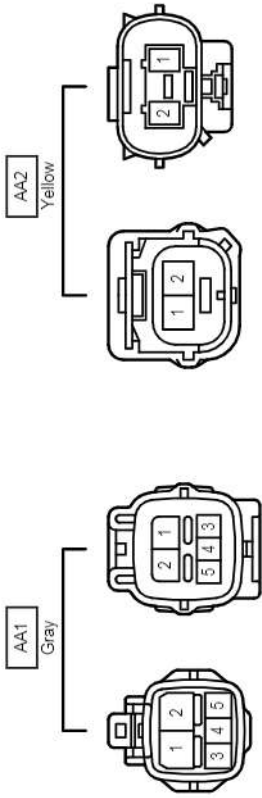


Wire and Wire in Engine Compartment <RHD 1GR-FE>


CA3  
White

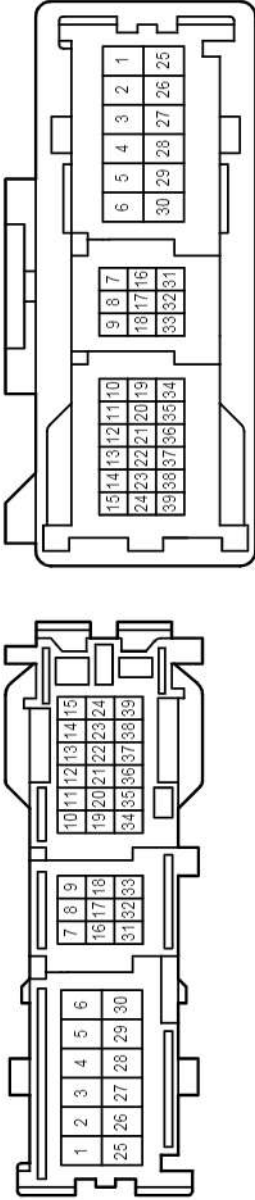


CU1  
Black  
Dark Gray

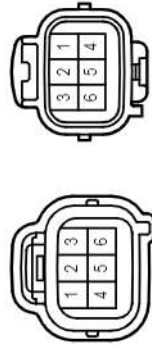

Ground Points in Engine Compartment <LHD 1VD-FTV>













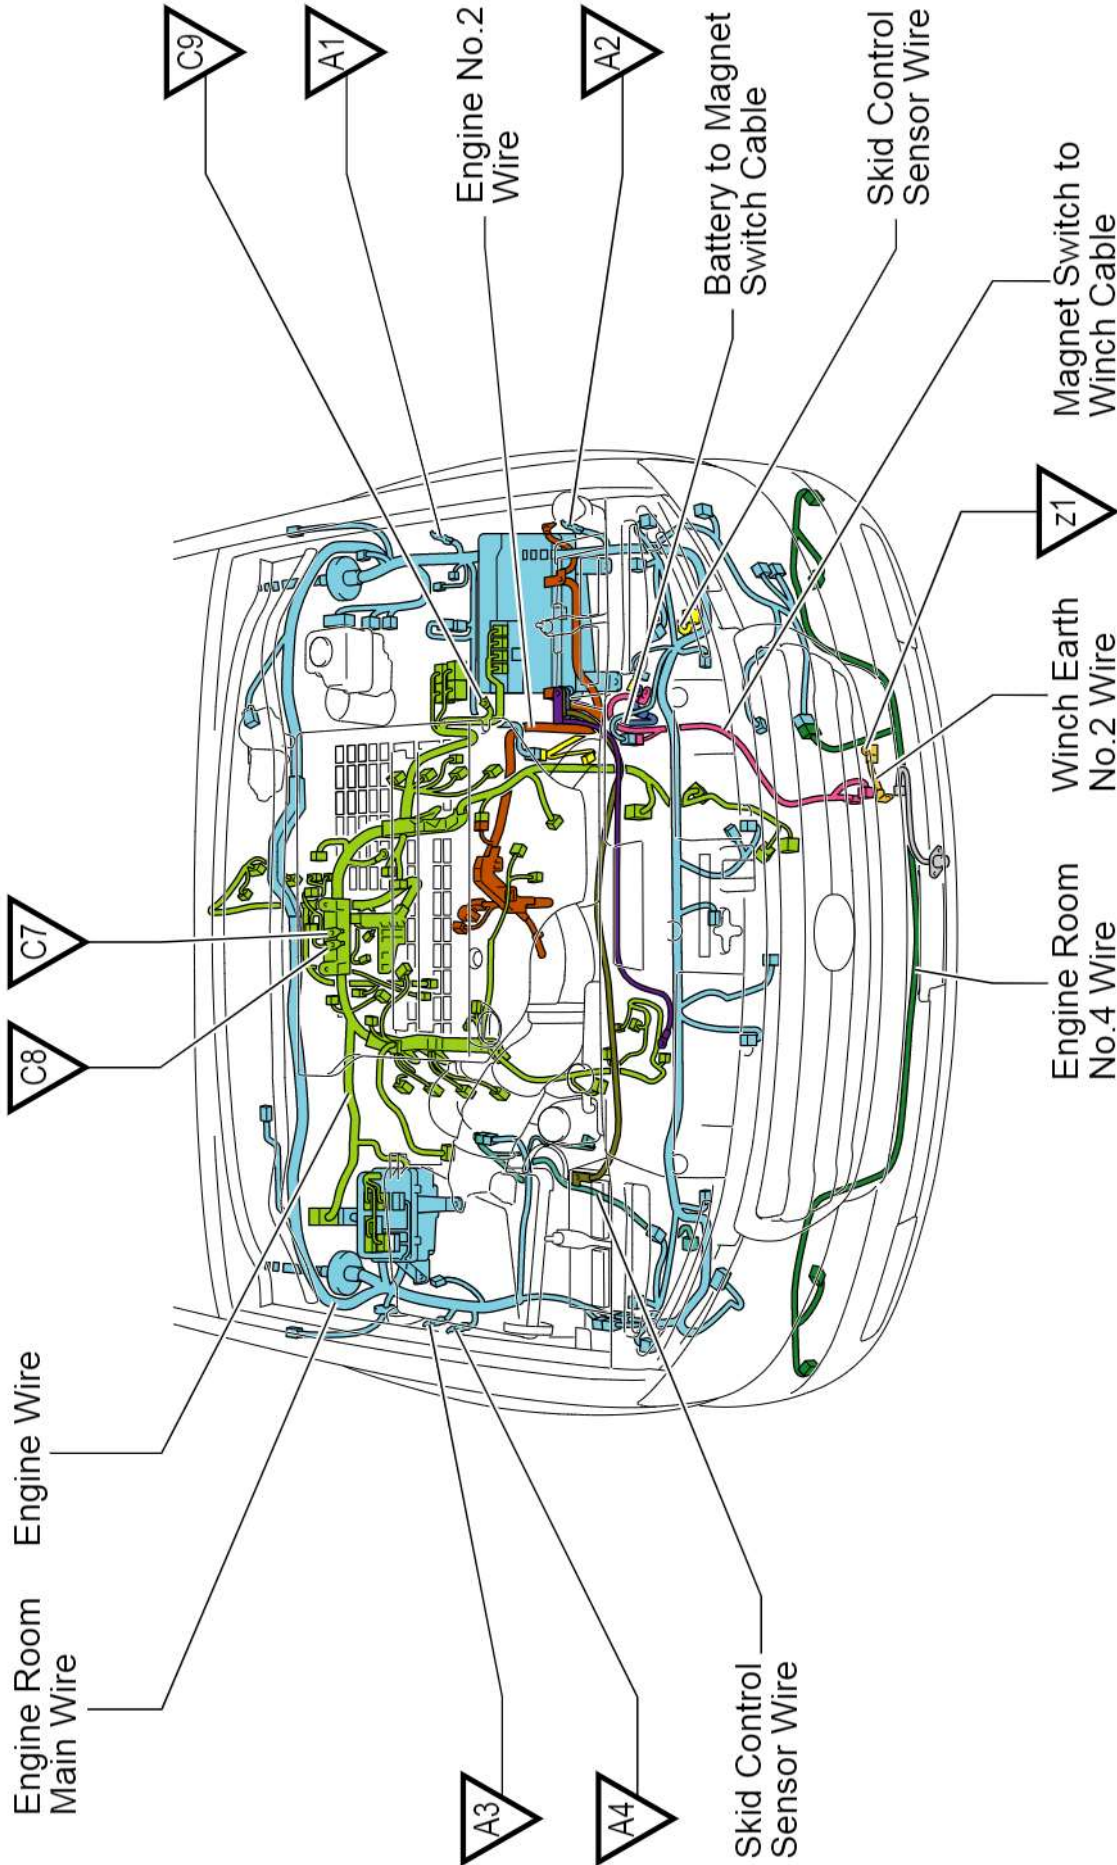


Position of Parts in Engine Compartment <LHD 1VD-FTV>

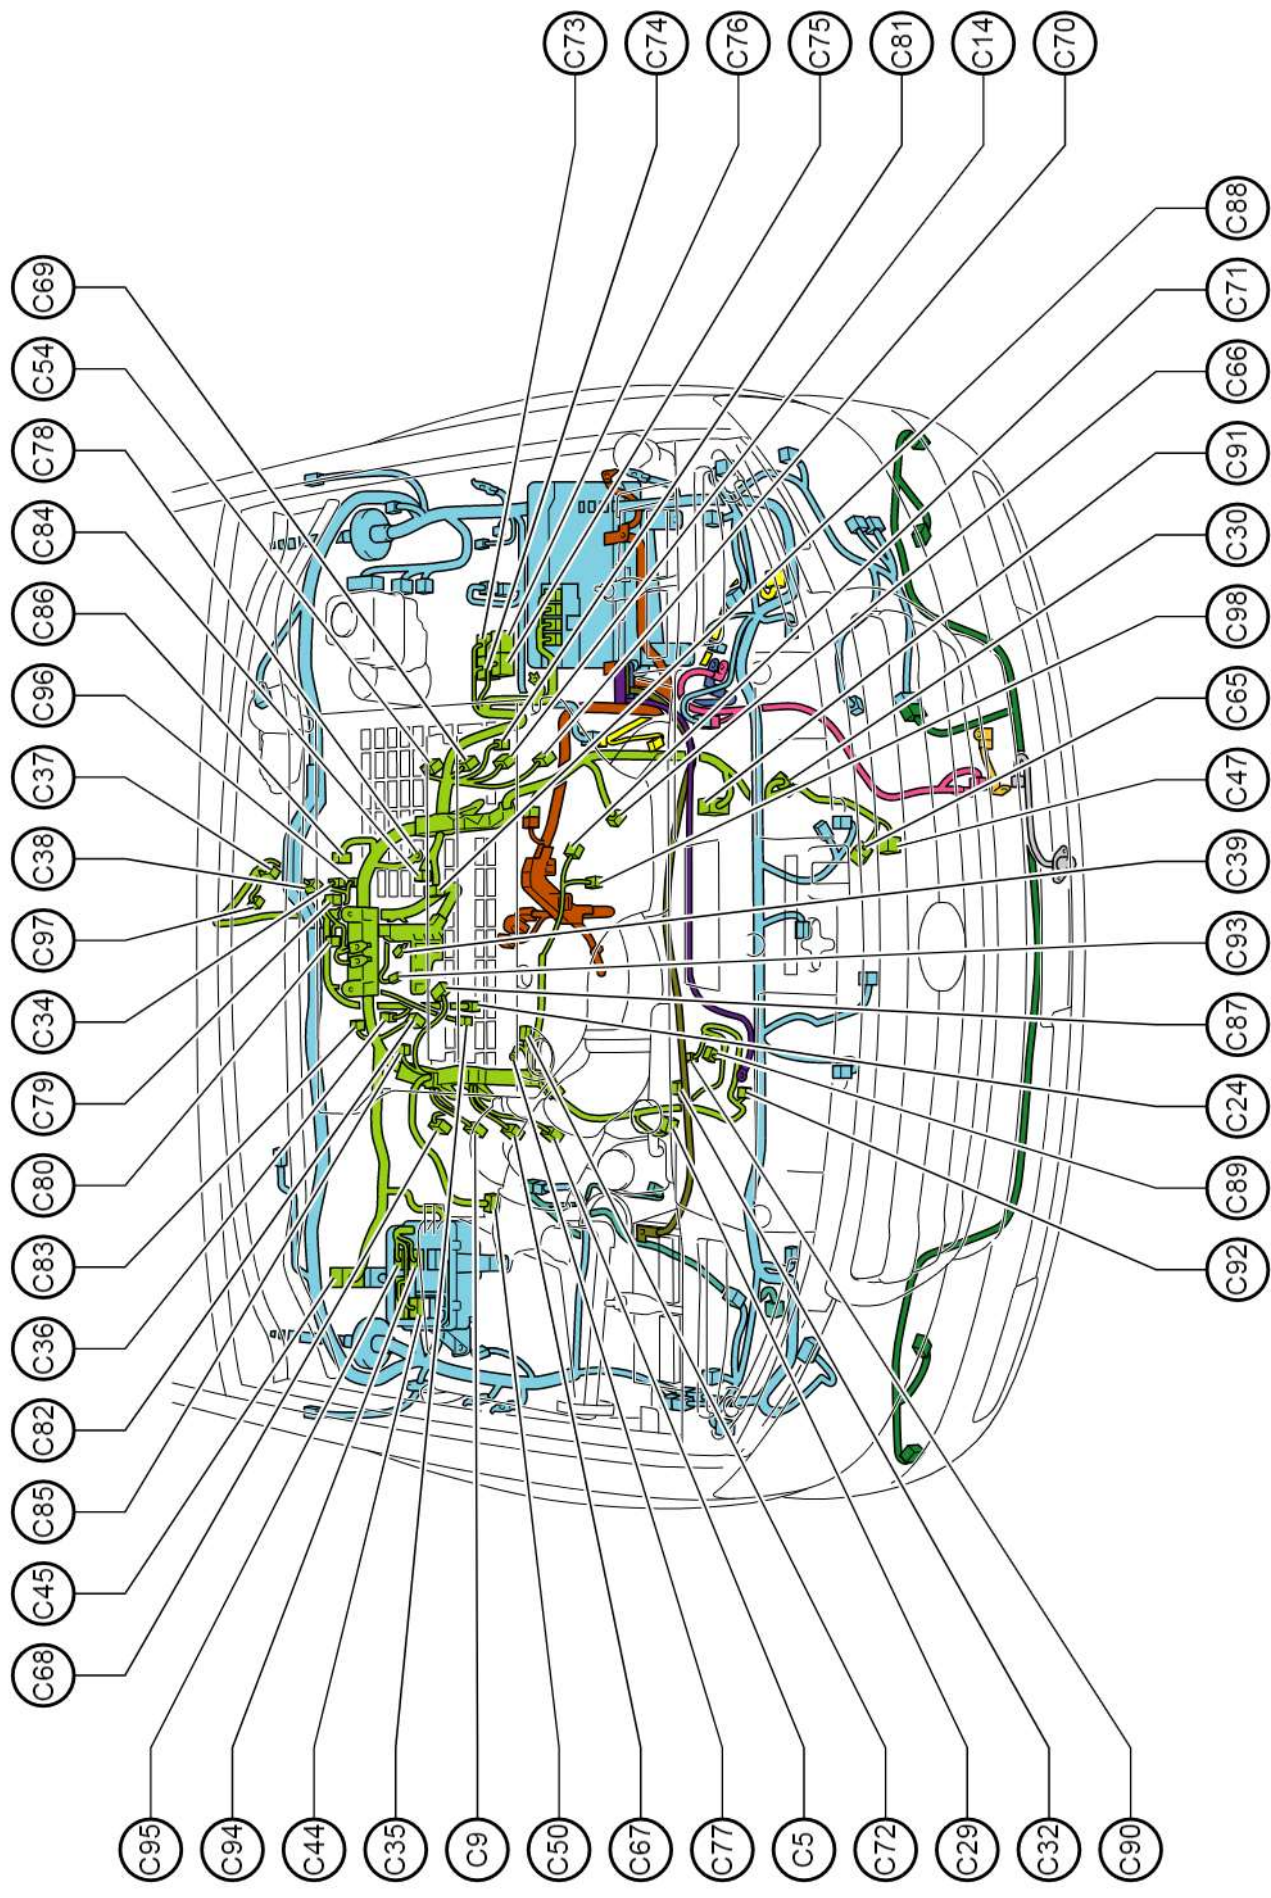


C 5	Fuel Injector Assembly No.1
C 9	Fuel Injector Assembly No.5
C 14	Fuel Injector Assembly No.4
C 24	Park/Neutral Position Switch
C 29	Power Steering Oil Pressure Switch
C 30	Cooler Compressor Assembly
C 32	Engine Oil Level Sensor
C 34	Electronically Controlled Transmission Solenoid
C 35	Transmission Revolution Sensor (Turbine)
C 36	Transmission Revolution Sensor (Counter Gear)
C 37	Transfer Shift Actuator Assembly
C 38	Transfer Shift Actuator Assembly
C 39	Back-Up Light Switch Assembly
C 44	Junction Connector
C 45	ECM
C 47	Oil Pressure Sender Gage Assembly
C 50	Mass Air Flow Meter
C 54	Fuel Injector Assembly No.8
C 65	Crankshaft Position Sensor
C 66	Camshaft Position Sensor
C 67	Fuel Injector Assembly No.3
C 68	Fuel Injector Assembly No.7
C 69	Fuel Injector Assembly No.6
C 70	Fuel Injector Assembly No.2
C 71	E.F.I. Engine Coolant Temperature Sensor
C 72	Injection or Supply Pump Assembly
C 73	Injector Driver (No.1)
C 74	Injector Driver (No.1)
C 75	Injector Driver (No.2)
C 76	Injector Driver (No.2)
C 77	Glow Plug Assembly
C 78	Glow Plug Assembly
C 79	Intake Air Temperature Sensor
C 80	Diesel Turbo Pressure Sensor
C 81	VSV (ACM)
C 82	Fuel Pressure Sensor
C 83	Diesel Throttle Body Assembly RH
C 84	Diesel Throttle Body Assembly LH
C 85	Diesel Throttle Body Assembly RH
C 86	Diesel Throttle Body Assembly LH
C 87	No.1 EGR Valve Assembly
C 88	No.2 EGR Valve Assembly
C 89	DC Motor and Nozzle Vane Position Sensor RH
C 90	DC Motor and Nozzle Vane Position Sensor RH

Position of Parts in Engine Compartment <LHD 1VD-FTV>







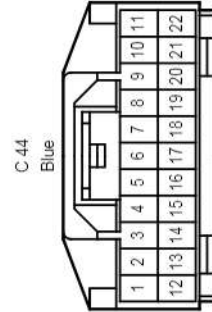
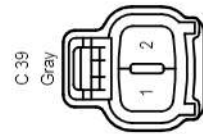
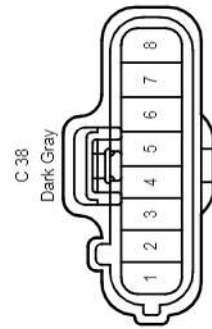
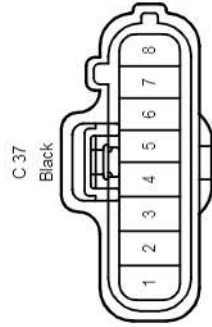
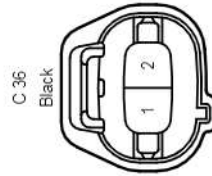
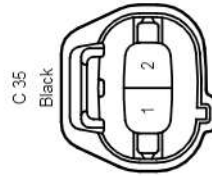
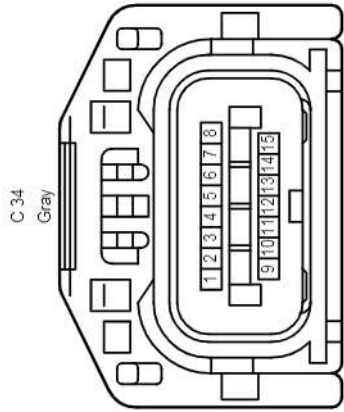
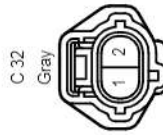
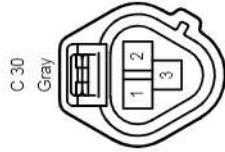
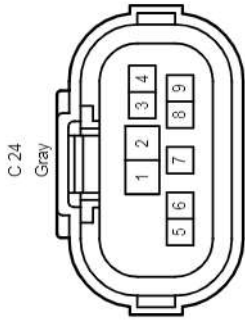
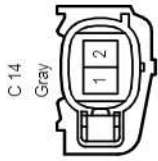
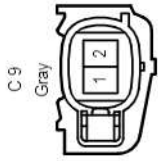
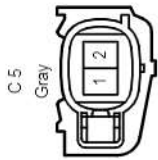


C 45  
Black

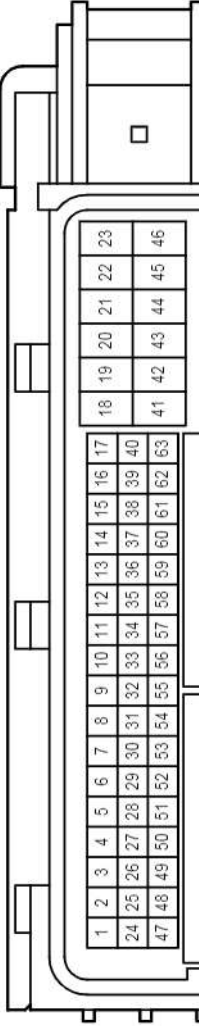




 
Position of Parts in Engine Compartment <LHD 1VD-FTV>

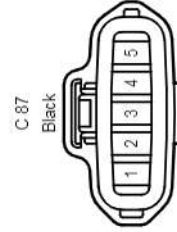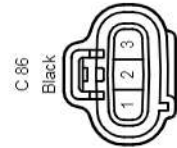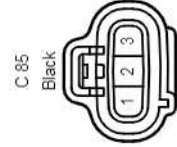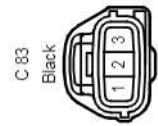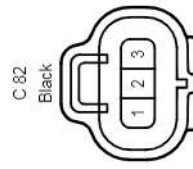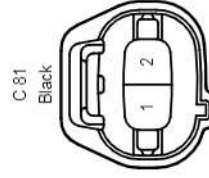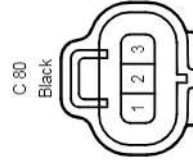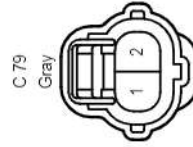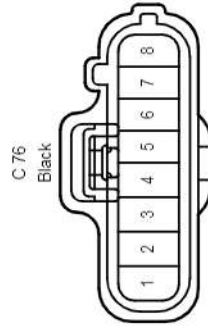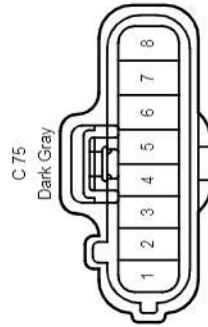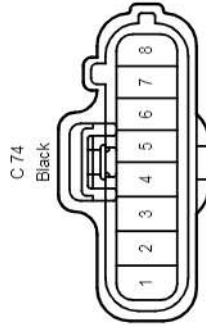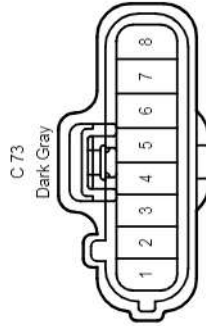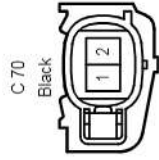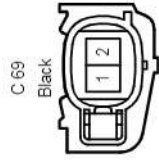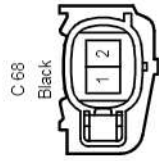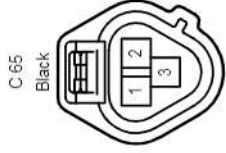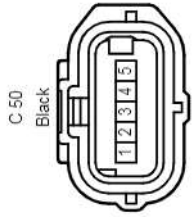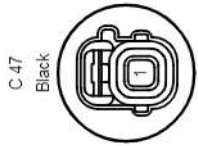

Position of Parts in Engine Compartment <LHD 1VD-F-TV>

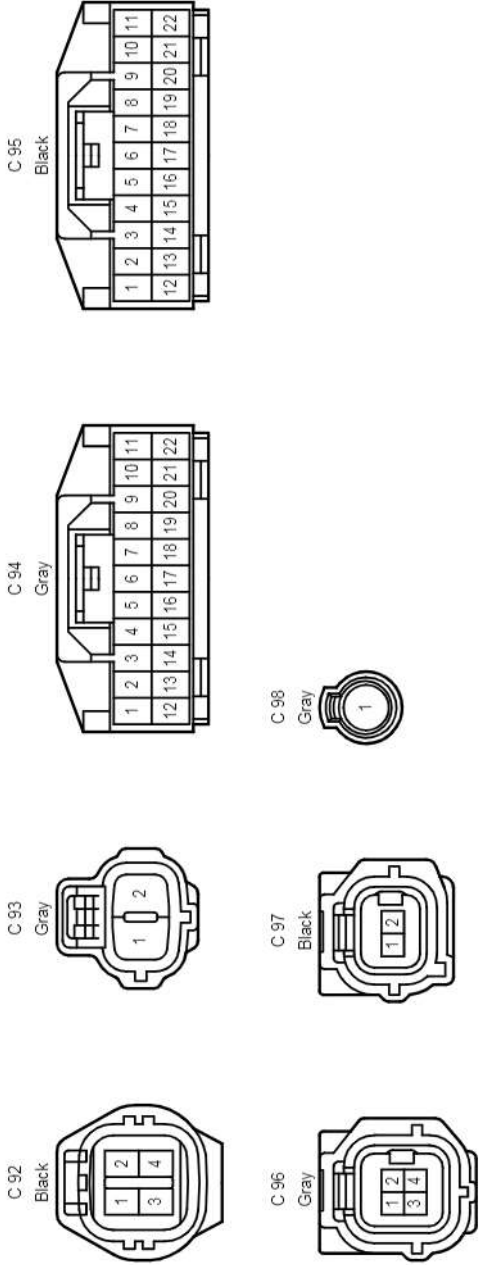


















Position of Parts in Engine Compartment <LHD 1VD-FTV>

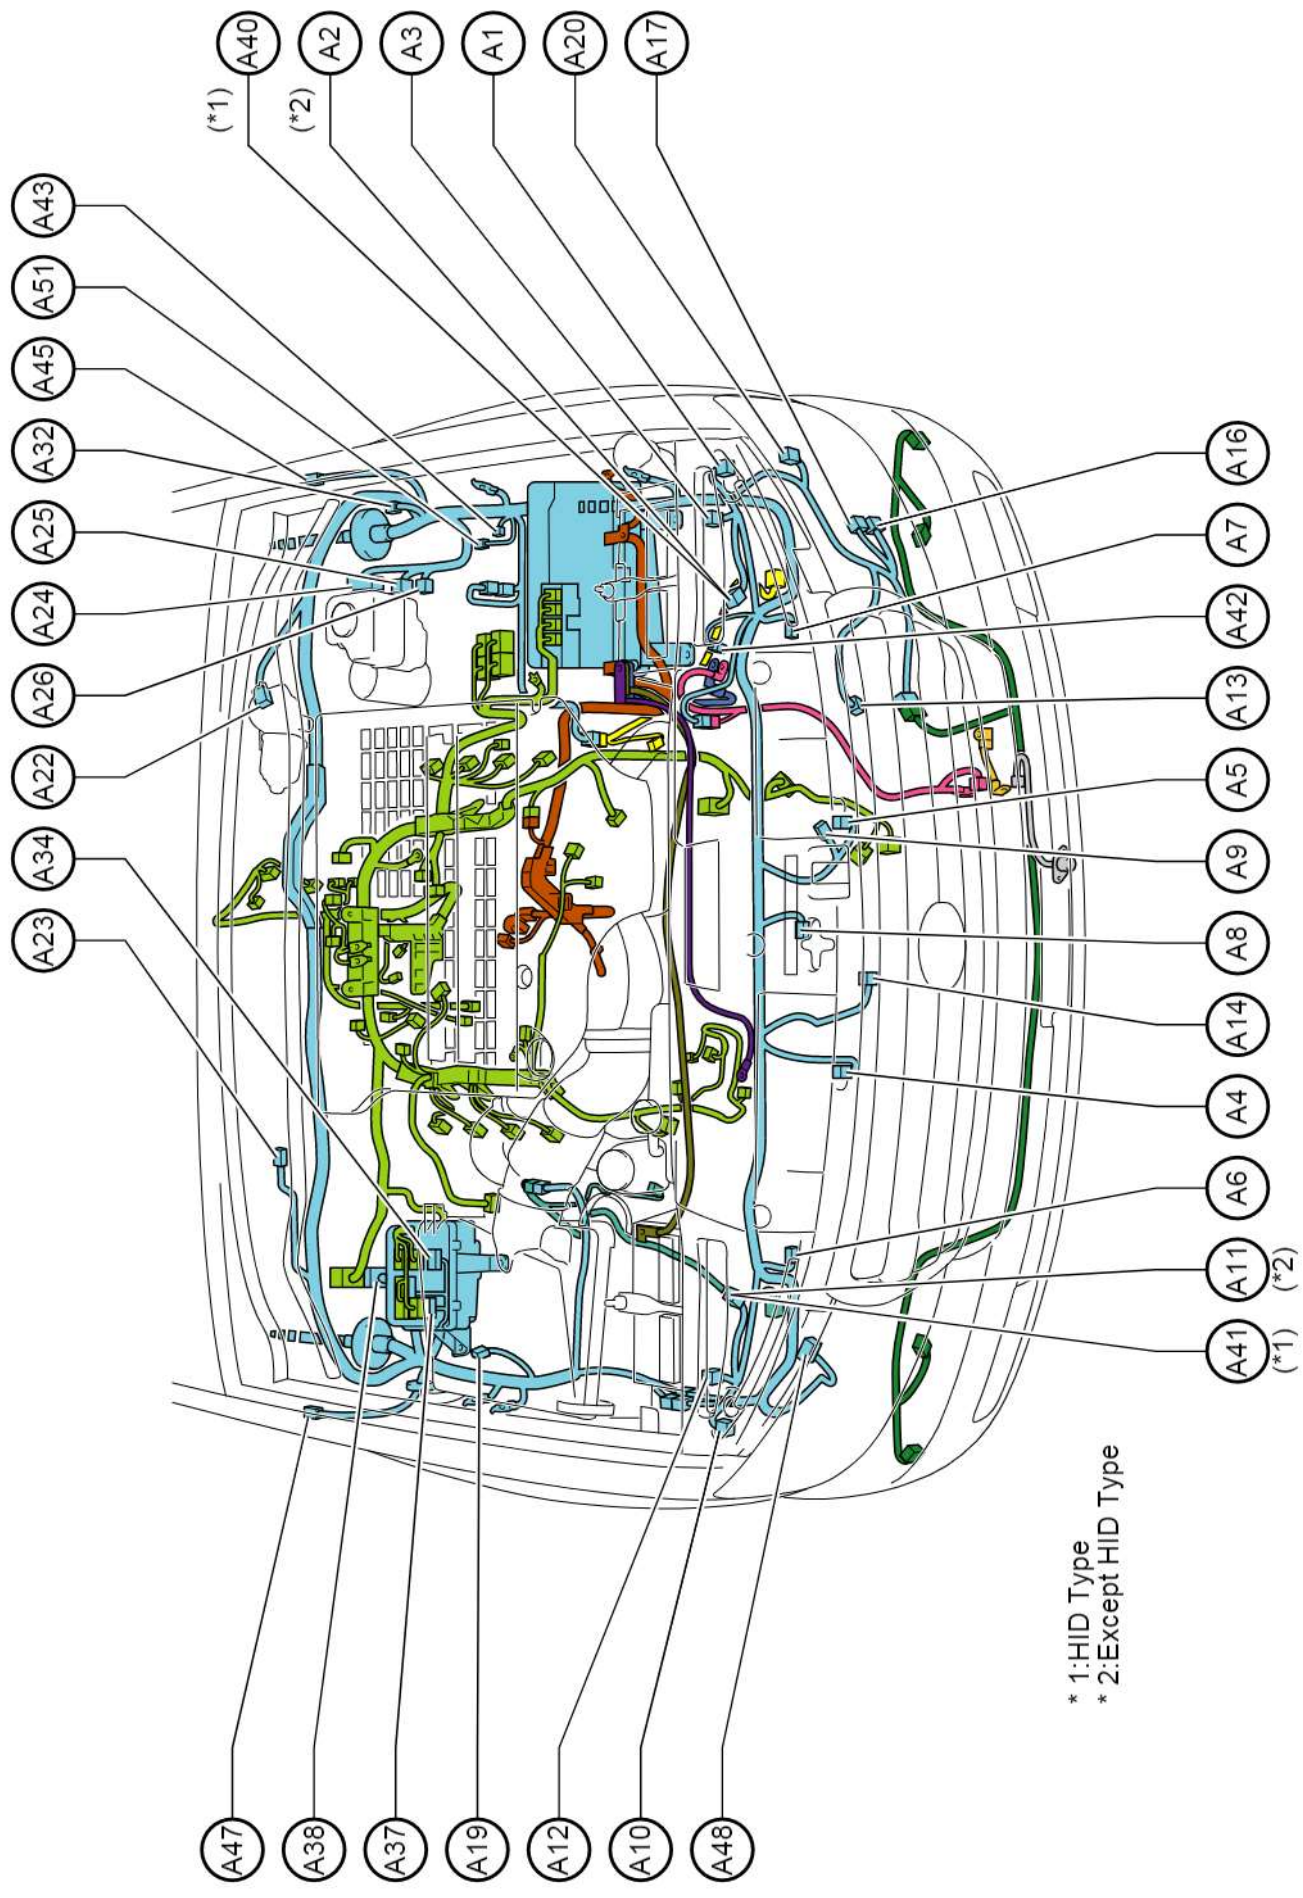

\* 1: HID Type  
 \* 2: Except HID Type


A 1	Headlight Assembly LH
A 2	Headlight Assembly LH
A 3	Headlight Assembly LH
A 4	High Pitched Horn Assembly
A 5	Low Pitched Horn Assembly
A 6	Front Airbag Sensor RH
A 7	Front Airbag Sensor LH
A 8	Engine Hood Courtesy Switch
A 9	Condenser Blower Motor Assembly
A 10	Headlight Assembly RH
A 11	Headlight Assembly RH
A 12	Headlight Assembly RH
A 13	A/C Pressure Sensor
A 14	Ambient Temperature Sensor
A 16	Windshield Washer Motor and Pump Assembly
A 17	Headlight Cleaner Control Relay and Motor
A 19	Security Horn Assembly
A 20	Wireless Door Lock Buzzer
A 22	Windshield Wiper Motor Assembly
A 23	Front Wiper Deicer (Windshield Glass)
A 24	Skid Control ECU with Actuator Assembly
A 25	Skid Control ECU with Actuator Assembly
A 26	Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Assembly)
A 32	Noise Filter (Ghost Buster)
A 34	Junction Connector
A 37	Junction Connector
A 38	ECM
A 40	Headlight Assembly LH
A 41	Headlight Assembly RH
A 42	Winch Main Relay (No.1 Magnet Switch Assembly)
A 43	Level Warning Switch (Fuel Filter Assembly)
A 45	Side Turn Signal Light Assembly LH
A 47	Side Turn Signal Light Assembly RH
A 48	Turbo Motor Driver
A 51	Clogging Switch (Fuel Filter Assembly)

    Position of Parts in Engine Compartment <LHD 1VD-F-TV>

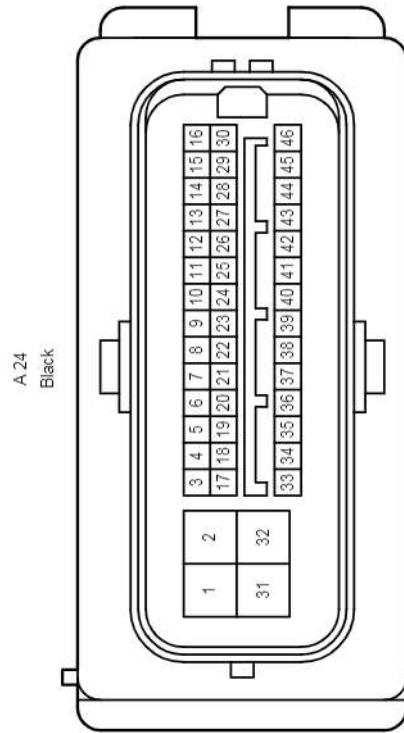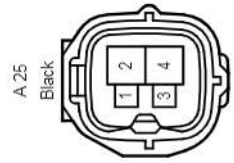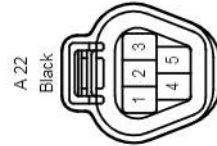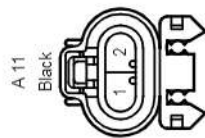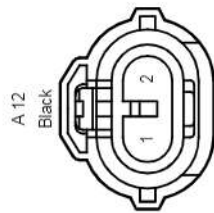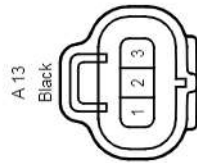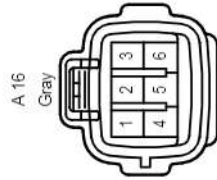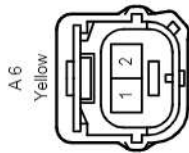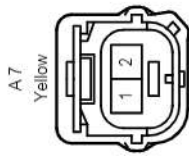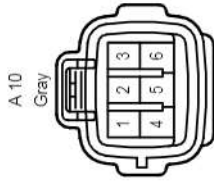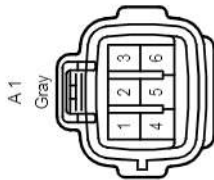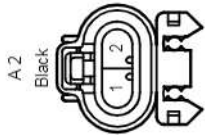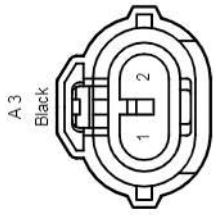


Position of Parts in Engine Compartment <LHD 1VD-F-TV>

A 37  
Blue

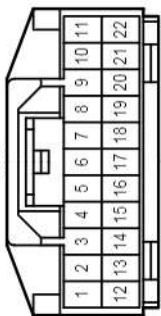

A 38  
Black

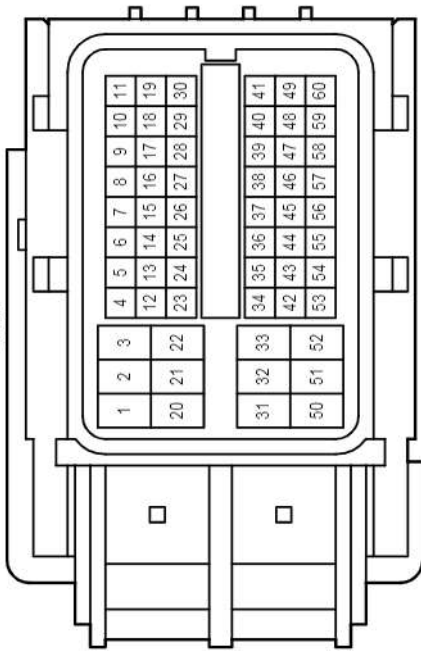

A 40  
Gray



A 41  
Gray



A 42  
Black



A 43  
Gray




A 45  
Gray




A 47  
Gray




A 48  
Black

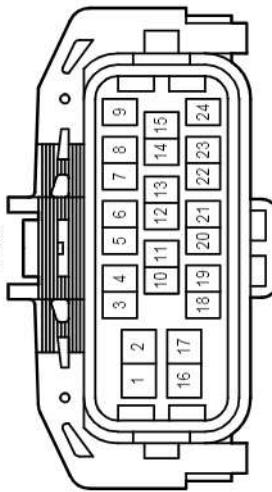

A 51  
Black

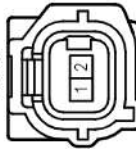

Position of Parts in Engine Compartment <LHD 1VD-FTV>

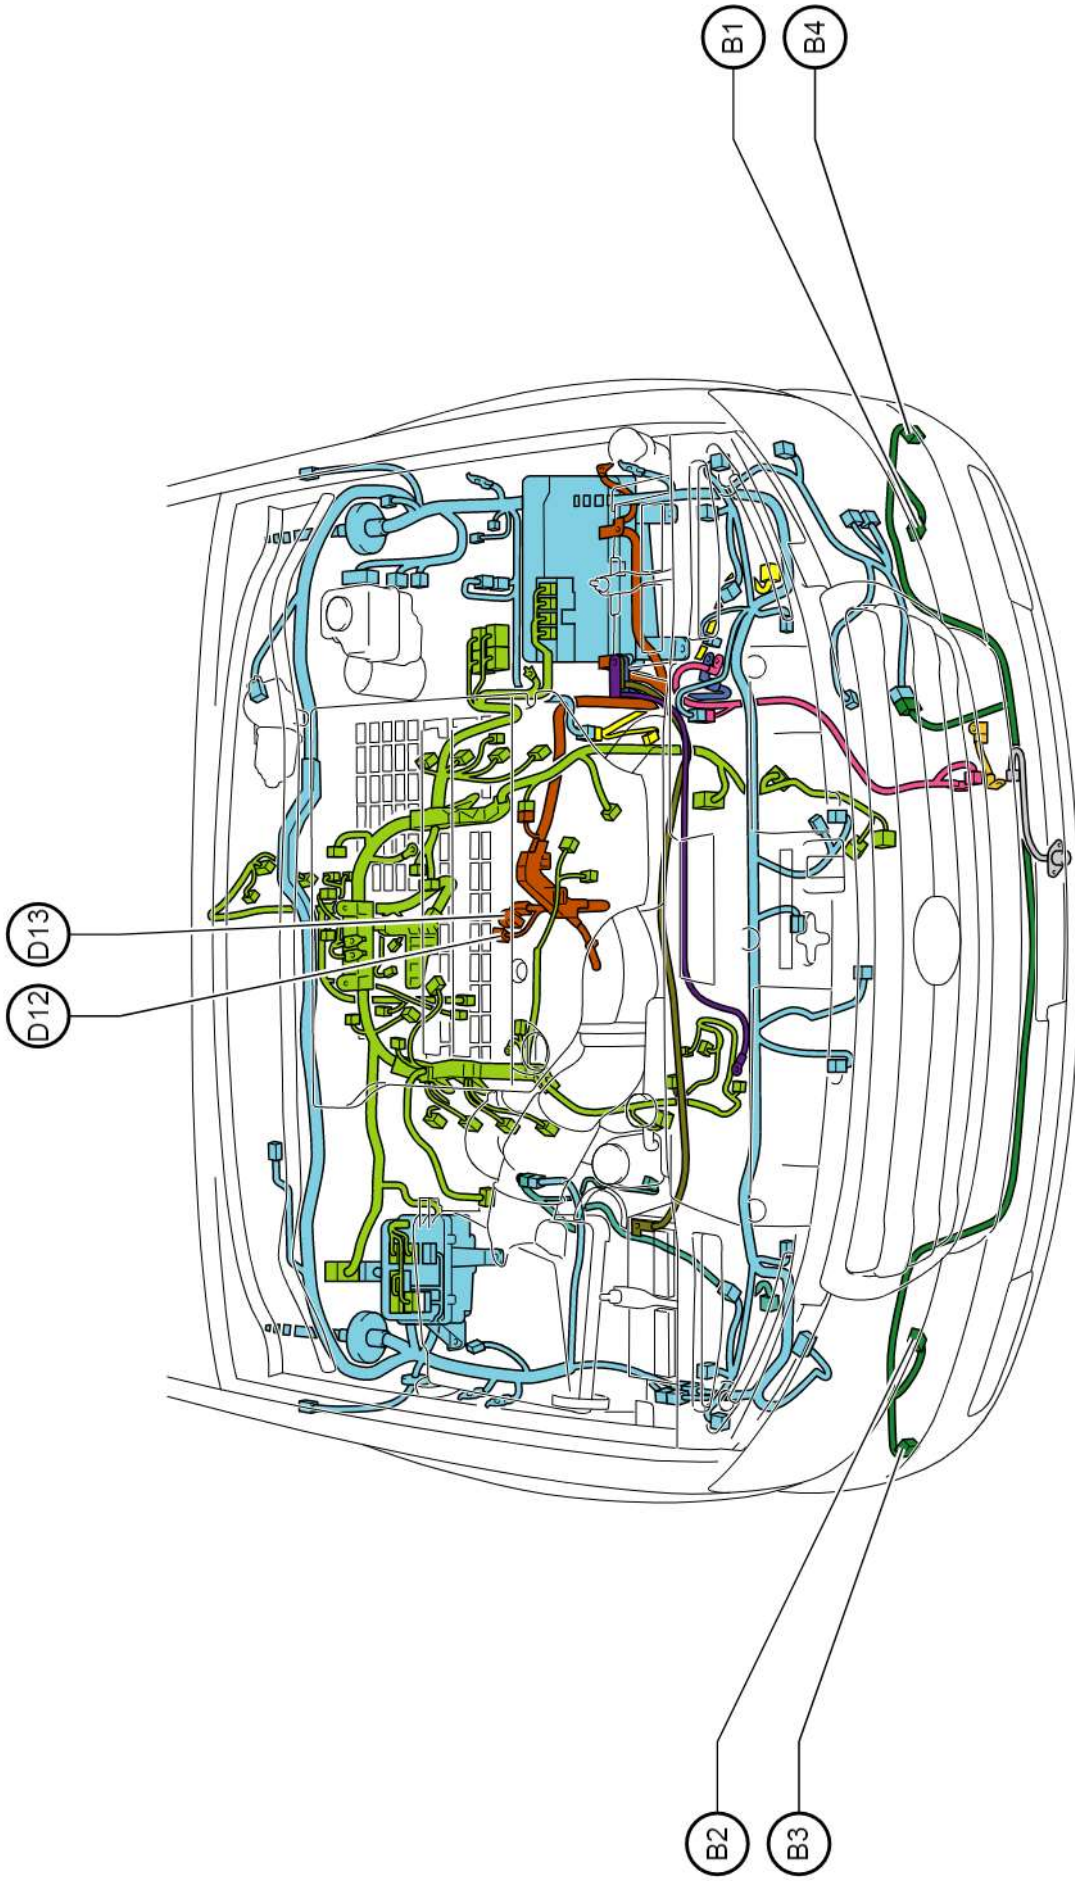





Position of Parts in Engine Compartment <LHD 1VD-F.TV>

---


- B 1 Fog Light Assembly LH
- B 2 Fog Light Assembly RH
- B 3 No.1 Ultrasonic Sensor RH
- B 4 No.1 Ultrasonic Sensor LH
  
- D 12 Starter Assembly
- D 13 Starter Assembly



Position of Parts in Engine Compartment <LHD 1VD-F-TV>

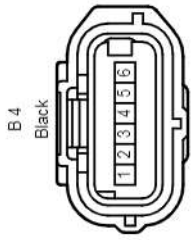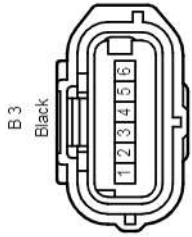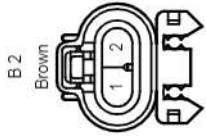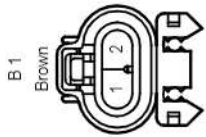

Position of Parts in Engine Compartment <LHD 1VD-FTV>

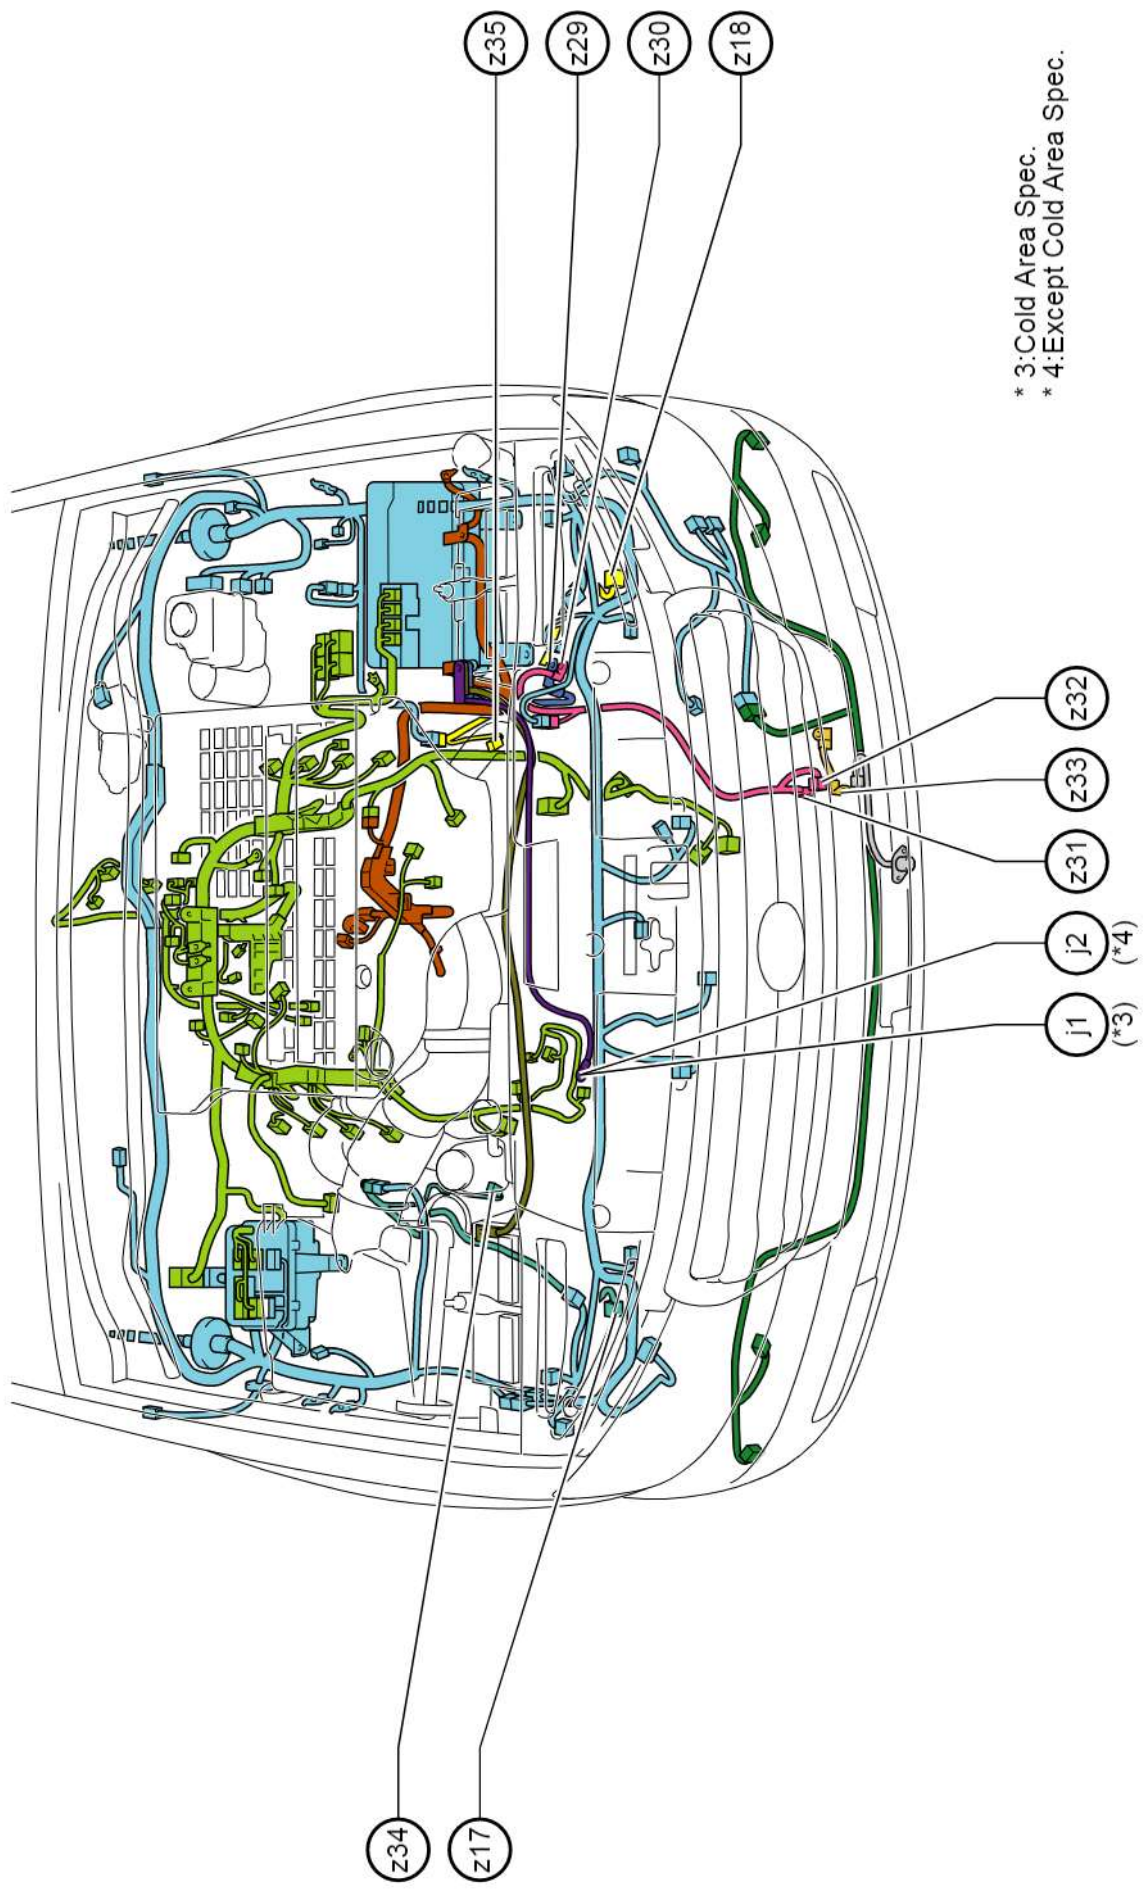






\* 3: Cold Area Spec.  
\* 4: Except Cold Area Spec.

Position of Parts in Engine Compartment <LHD 1VD-F.TV>


---

- j 1 Generator Assembly
- j 2 Generator Assembly
  
- z 17 Front Speed Sensor RH
- z 18 Front Speed Sensor LH
- z 29 Winch Main Relay (No.1 Magnet Switch Assembly)
- z 30 Winch Main Relay (No.1 Magnet Switch Assembly)
- z 31 With Magnet Switch Winch Motor Assembly
- z 32 With Magnet Switch Winch Motor Assembly
- z 33 With Magnet Switch Winch Motor Assembly
- z 34 Front Height Control Sensor Sub-Assembly RH
- z 35 Front Height Control Sensor Sub-Assembly LH


Position of Parts in Engine Compartment <LHD 1VD-F-TV>

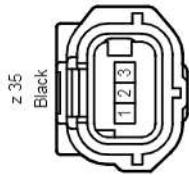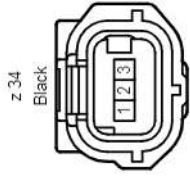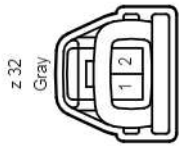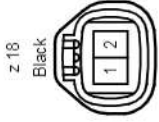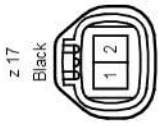


Wire and Wire in Engine Compartment <LHD 1VD-FTV>

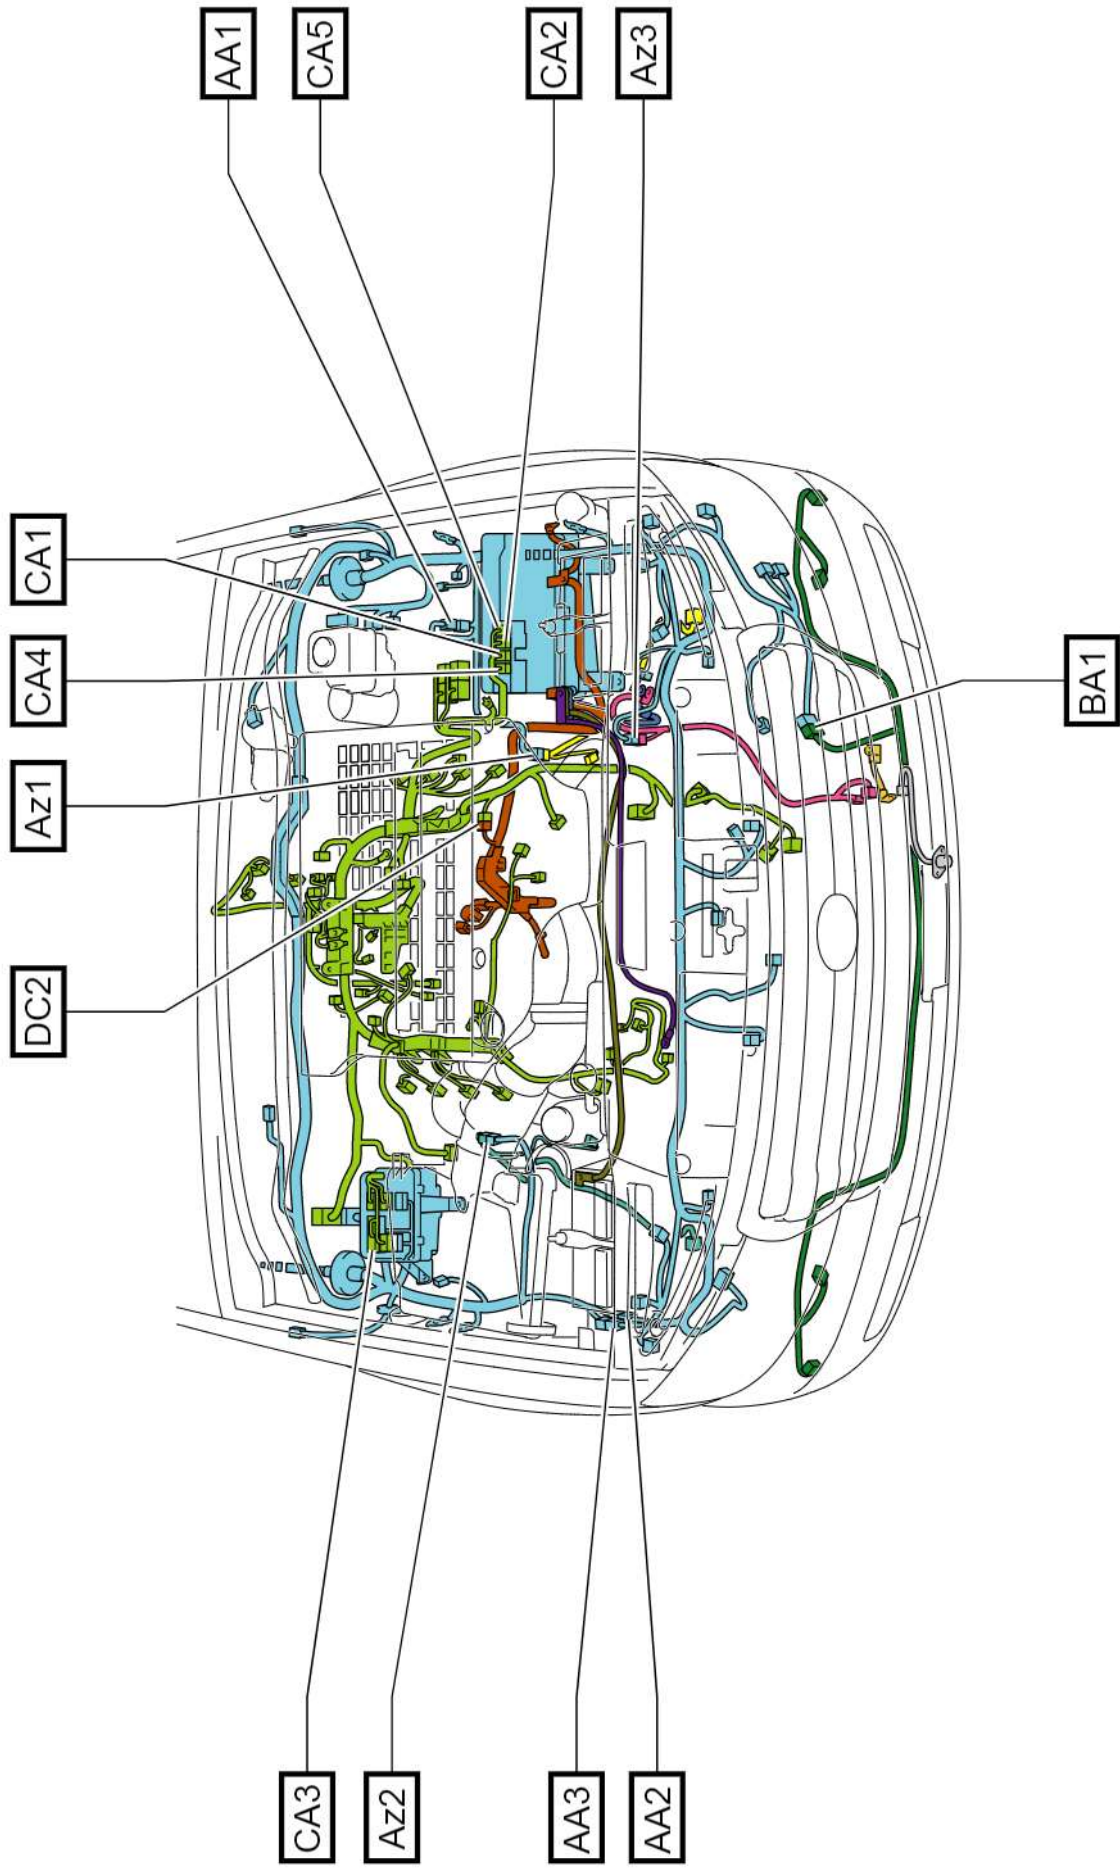


Wire and Wire in Engine Compartment <LHD 1VD-F TV>

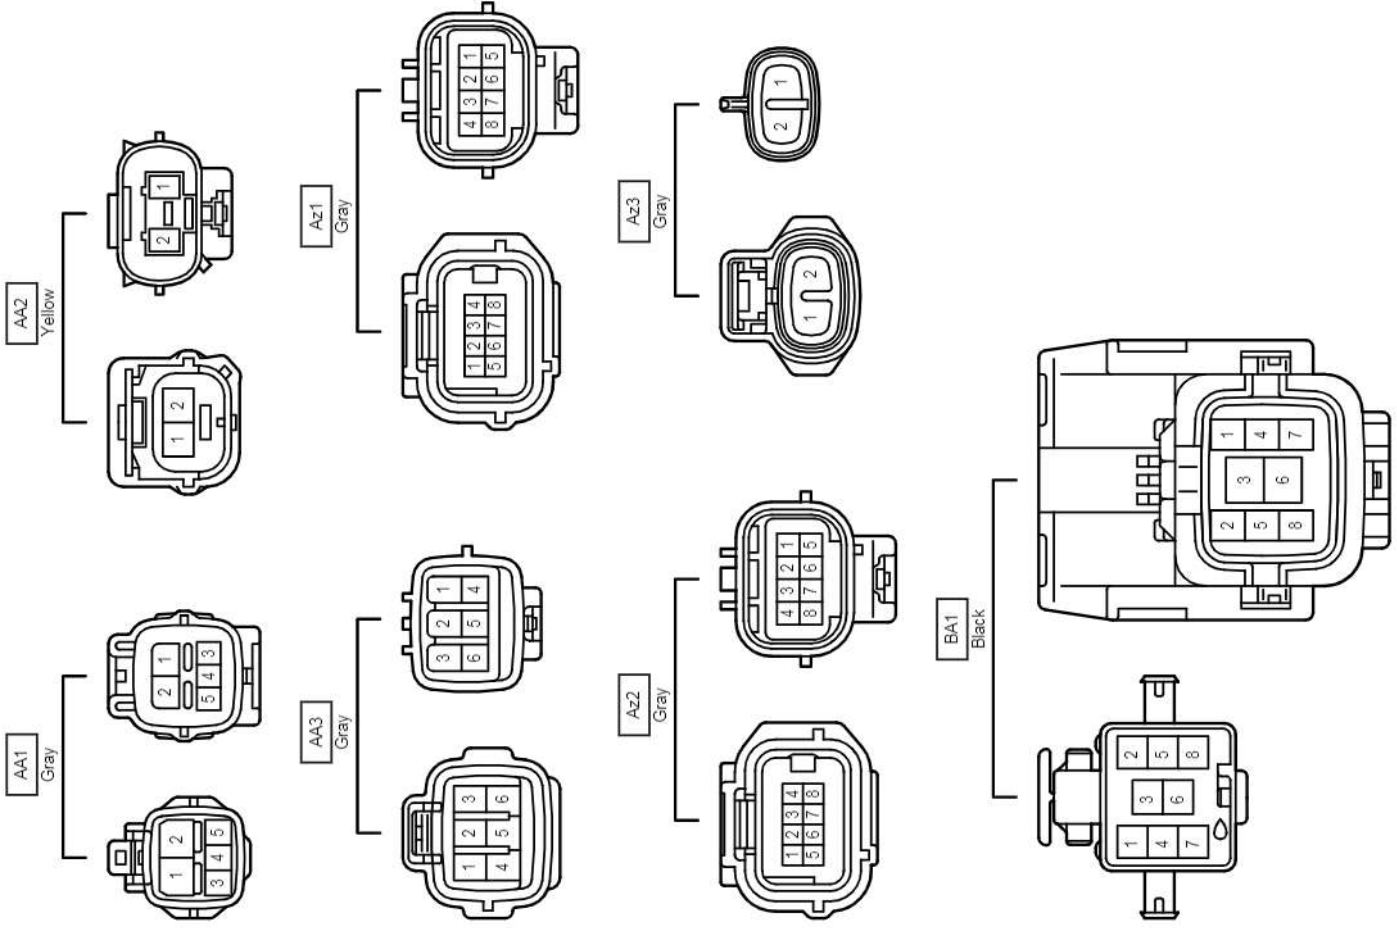


CA2  
White

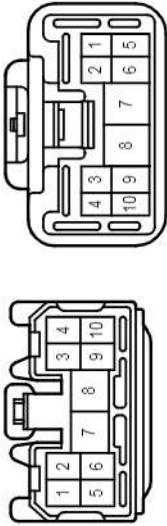


CA3  
White

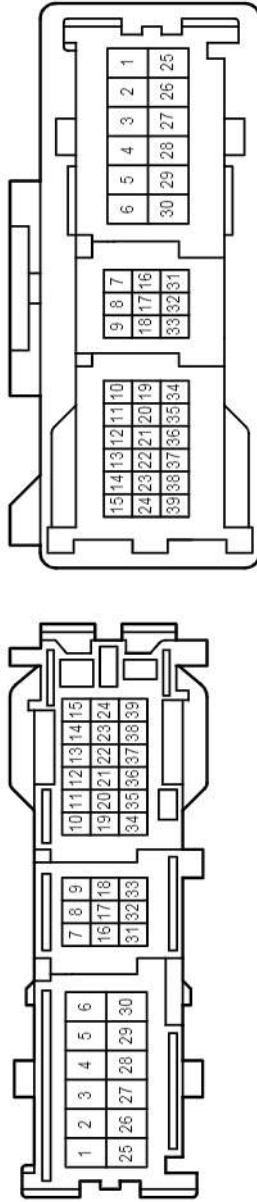


CA4  
White

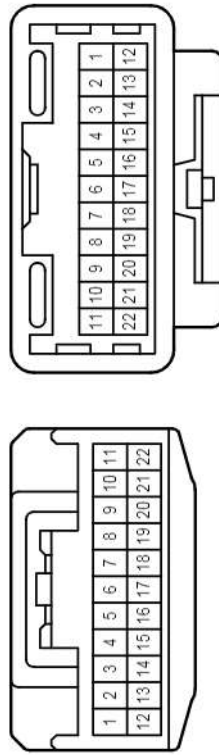


CA5  
White

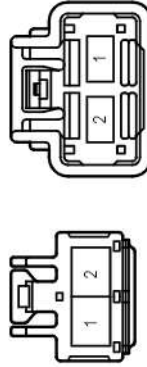

DC2  
Gray

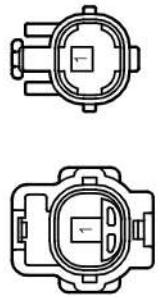


Ground Points in Engine Compartment <RHD 1VD-FTV>

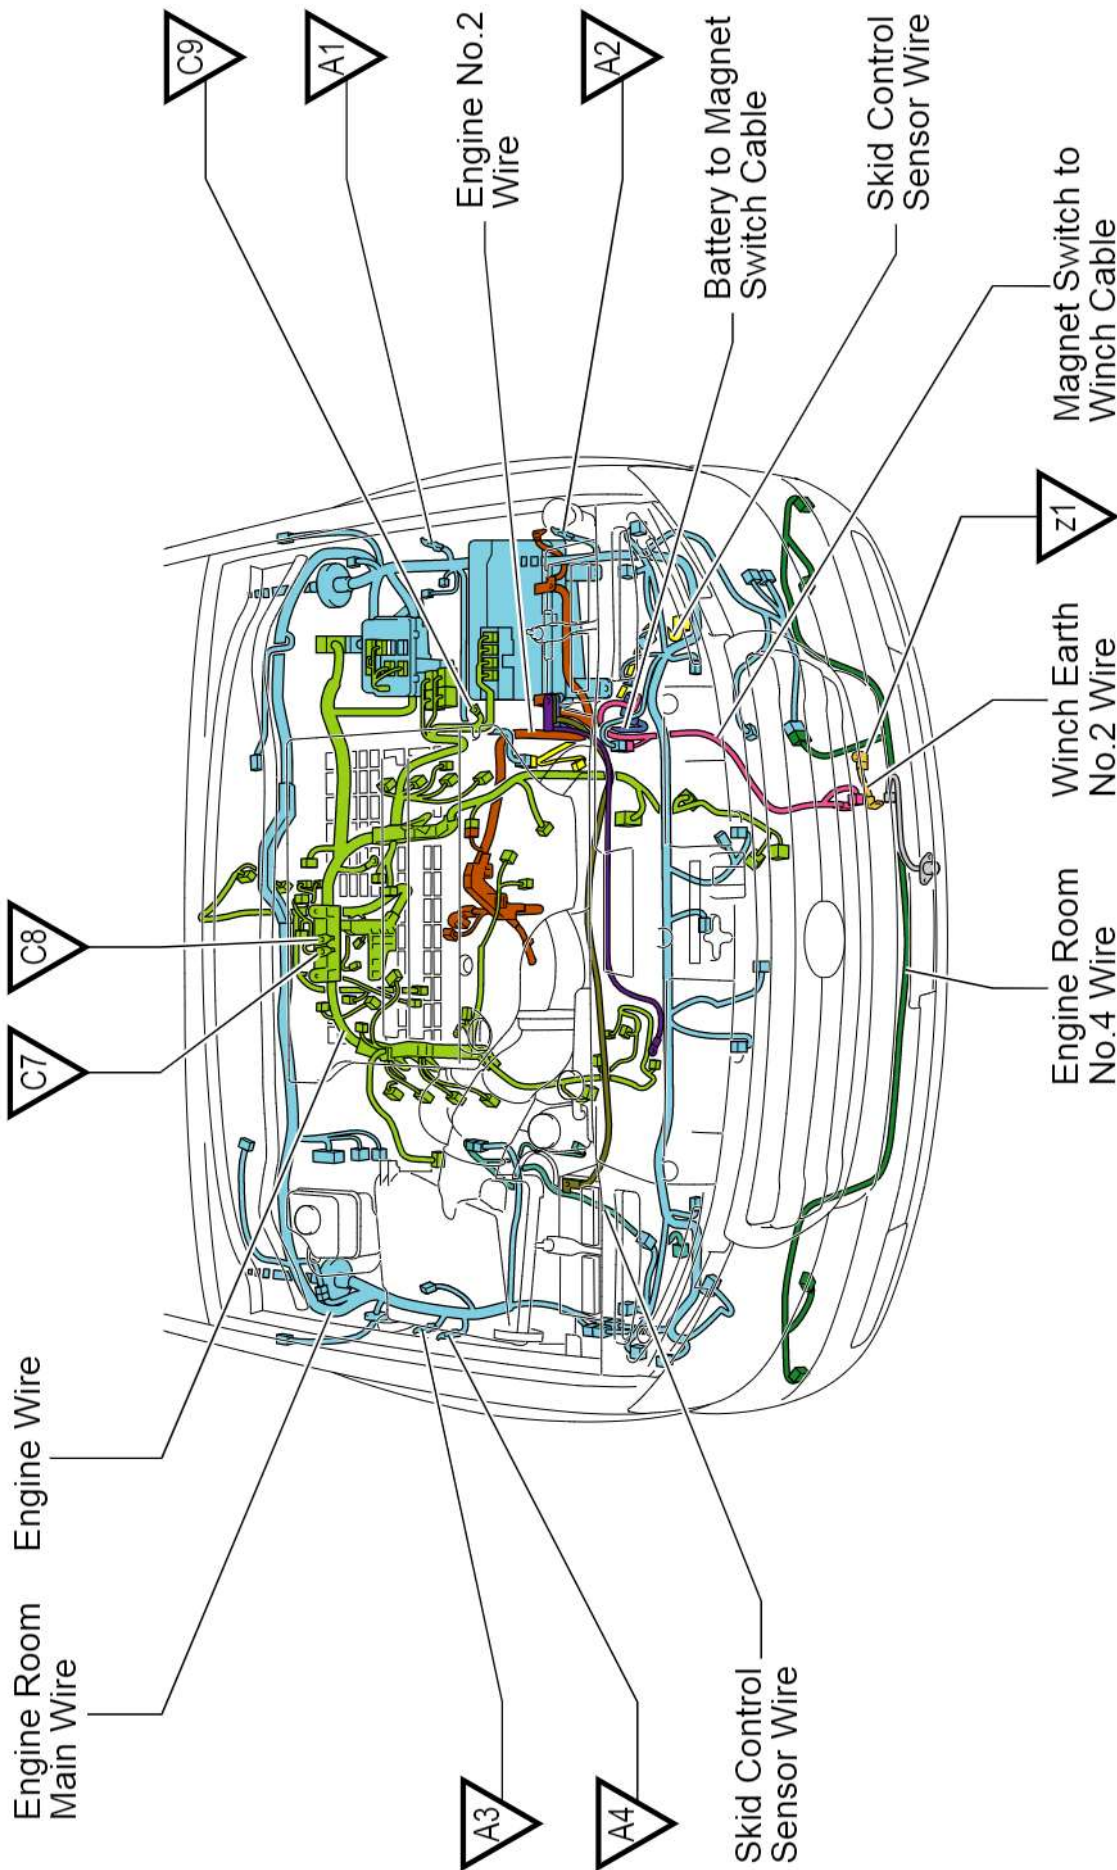
















Position of Parts in Engine Compartment <RHD 1VD-FTV>

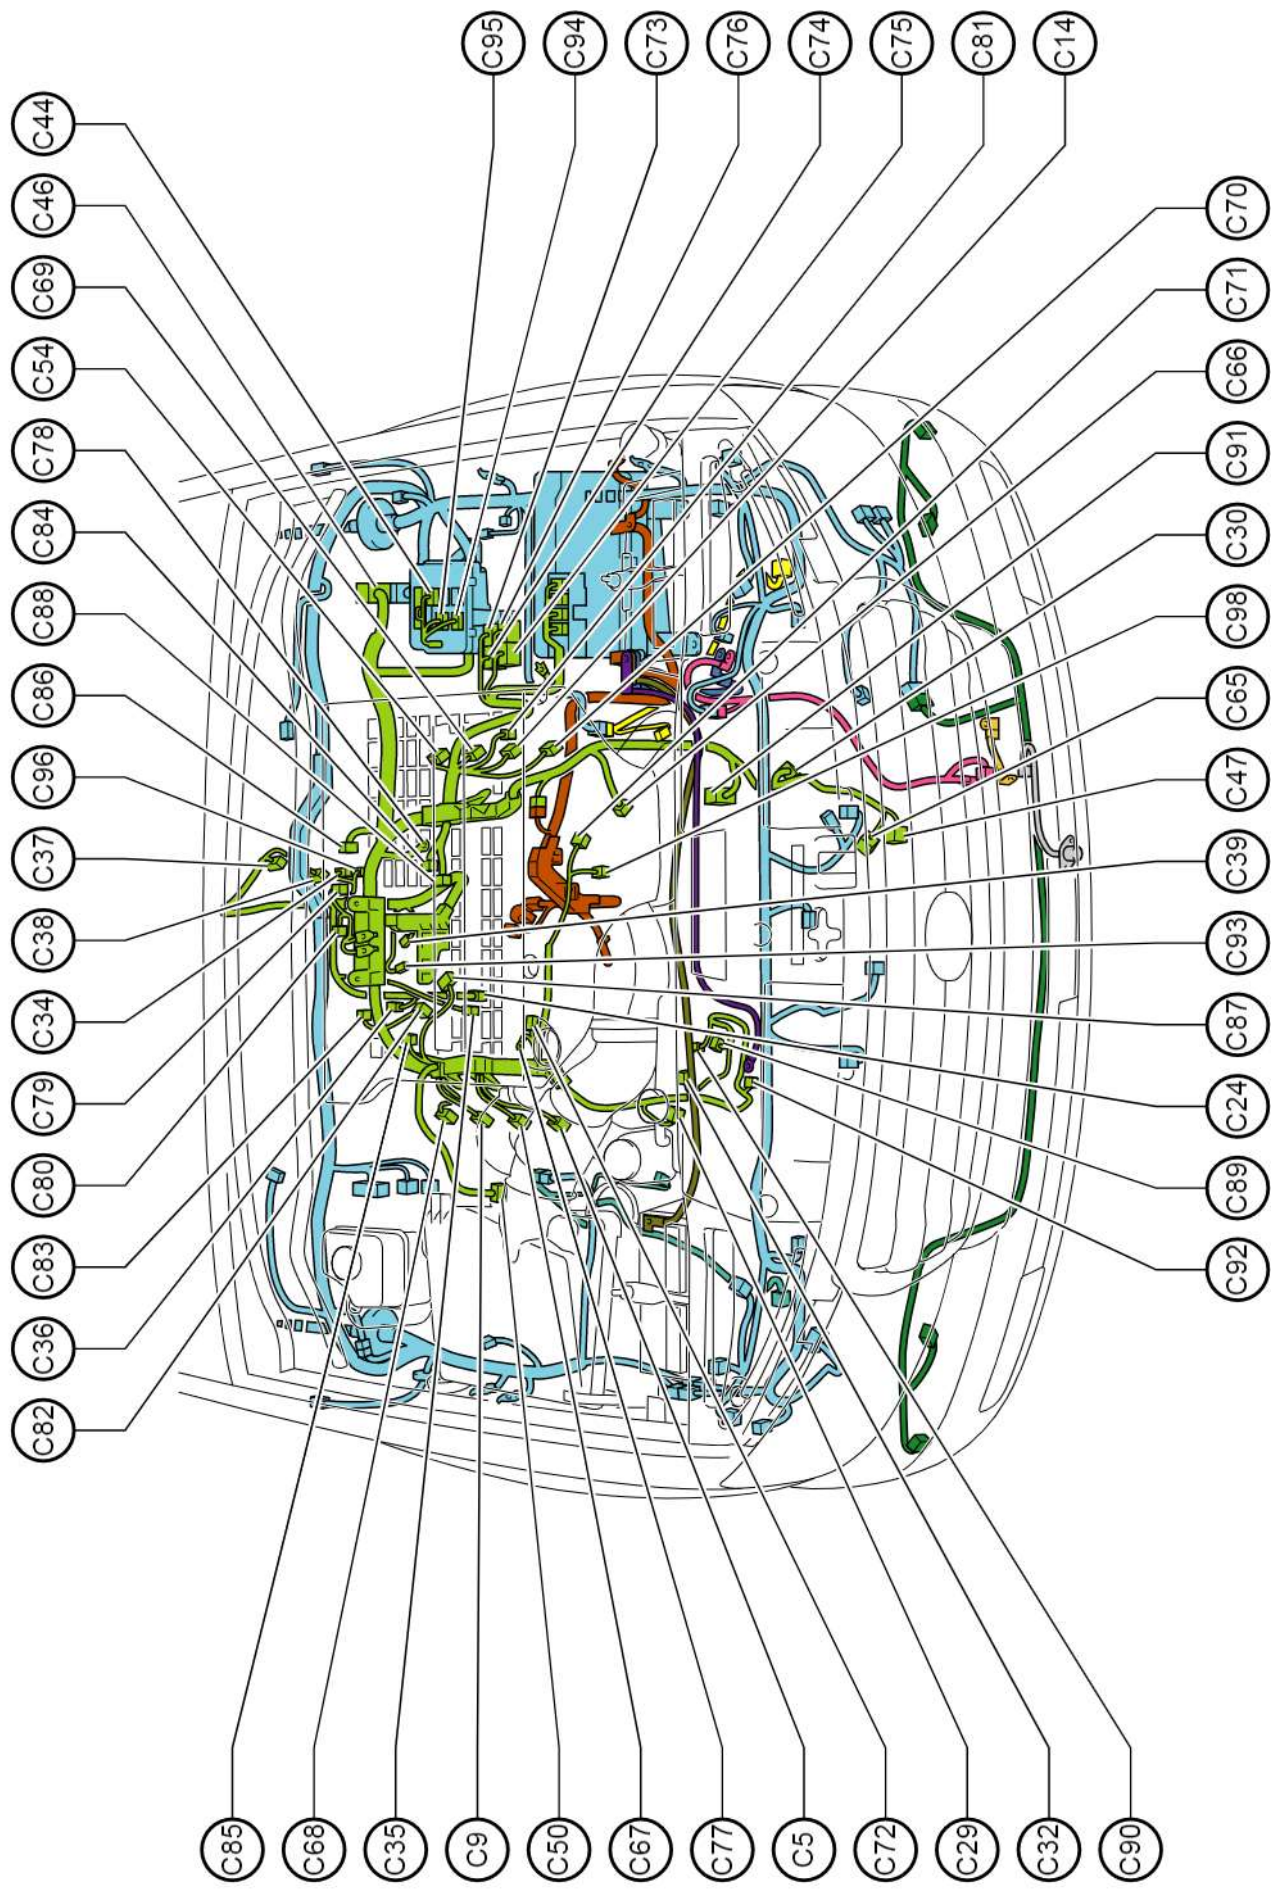


- C 5 Fuel Injector Assembly No.1
- C 9 Fuel Injector Assembly No.5
- C 14 Fuel Injector Assembly No.4
- C 24 Park/Neutral Position Switch
- C 29 Power Steering Oil Pressure Switch
- C 30 Cooler Compressor Assembly
- C 32 Engine Oil Level Sensor
- C 34 Electronically Controlled Transmission Solenoid
- C 35 Transmission Revolution Sensor (Turbine)
- C 36 Transmission Revolution Sensor (Counter Gear)
- C 37 Transfer Shift Actuator Assembly
- C 38 Transfer Shift Actuator Assembly
- C 39 Back-Up Light Switch Assembly
- C 44 Junction Connector
- C 46 ECM
- C 47 Oil Pressure Sender Gage Assembly
- C 50 Mass Air Flow Meter
- C 54 Fuel Injector Assembly No.8
- C 65 Crankshaft Position Sensor
- C 66 Camshaft Position Sensor
- C 67 Fuel Injector Assembly No.3
- C 68 Fuel Injector Assembly No.7
- C 69 Fuel Injector Assembly No.6
- C 70 Fuel Injector Assembly No.2
- C 71 E.F.I. Engine Coolant Temperature Sensor
- C 72 Injection or Supply Pump Assembly
- C 73 Injector Driver (No.1)
- C 74 Injector Driver (No.1)
- C 75 Injector Driver (No.2)
- C 76 Injector Driver (No.2)
- C 77 Glow Plug Assembly
- C 78 Glow Plug Assembly
- C 79 Intake Air Temperature Sensor
- C 80 Diesel Turbo Pressure Sensor
- C 81 VSV (ACM)
- C 82 Fuel Pressure Sensor
- C 83 Diesel Throttle Body Assembly RH
- C 84 Diesel Throttle Body Assembly LH
- C 85 Diesel Throttle Body Assembly RH
- C 86 Diesel Throttle Body Assembly LH
- C 87 No.1 EGR Valve Assembly
- C 88 No.2 EGR Valve Assembly
- C 89 DC Motor and Nozzle Vane Position Sensor RH
- C 90 DC Motor and Nozzle Vane Position Sensor RH




















Position of Parts in Engine Compartment <RHD 1VD-F-TV>

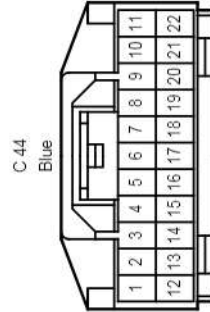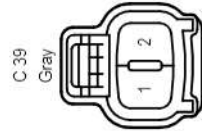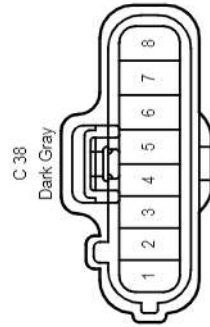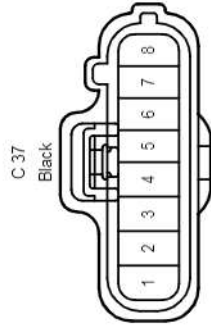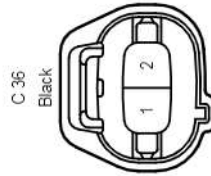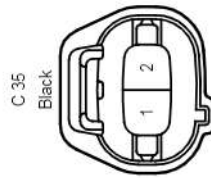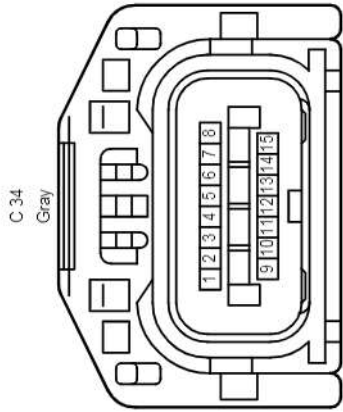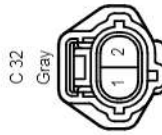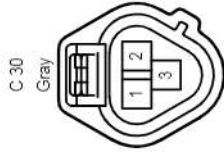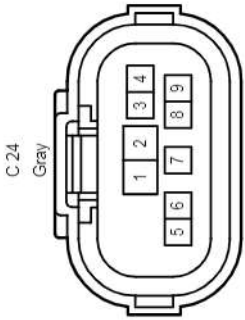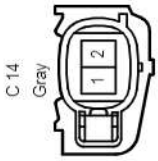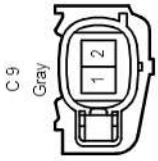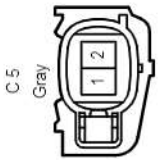

C.46  
Black

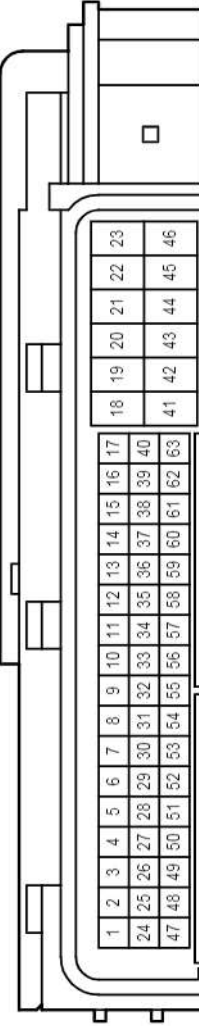


 Position of Parts in Engine Compartment <RHD 1VD-F-TV>

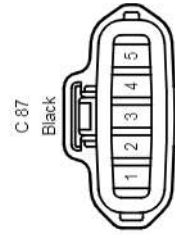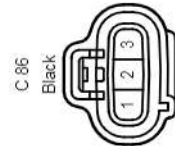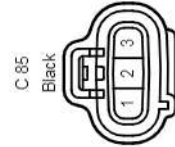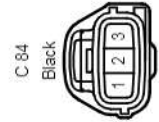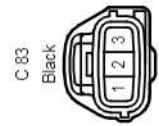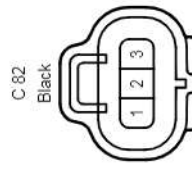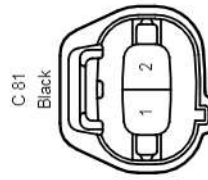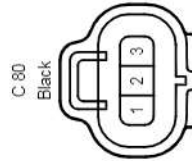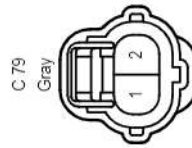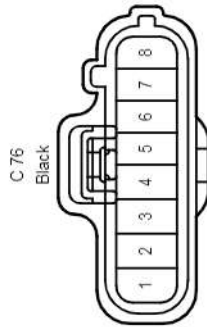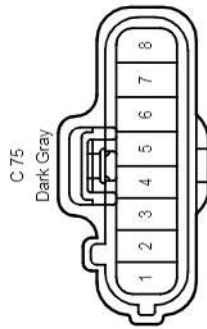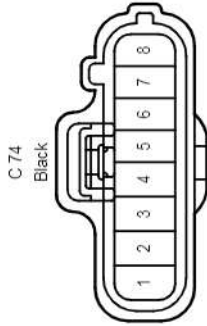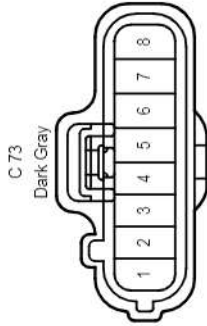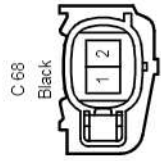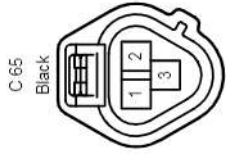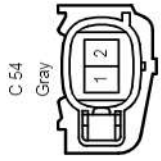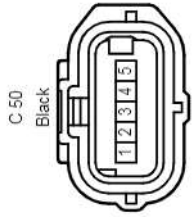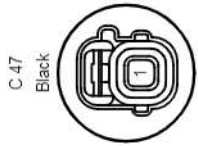

Position of Parts in Engine Compartment <RHD 1VD-F-TV>


C 92  
Black

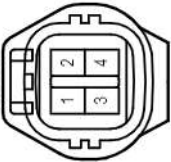


C 93  
Gray




C 94  
Gray

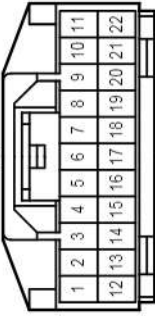

C 95  
Black

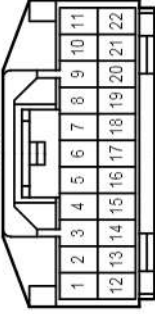

C 96  
Gray

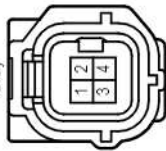

C 98  
Gray




 

 






 






Position of Parts in Engine Compartment <RHD 1VD-FTV>



- A 1 Headlight Assembly LH
- A 2 Headlight Assembly LH
- A 3 Headlight Assembly LH
- A 4 High Pitched Horn Assembly
- A 5 Low Pitched Horn Assembly
- A 6 Front Airbag Sensor RH
- A 7 Front Airbag Sensor LH
- A 8 Engine Hood Courtesy Switch
- A 9 Condenser Blower Motor Assembly
- A 10 Headlight Assembly RH
- A 11 Headlight Assembly RH
- A 12 Headlight Assembly RH
- A 13 A/C Pressure Sensor
- A 14 Ambient Temperature Sensor
- A 16 Windshield Washer Motor and Pump Assembly
- A 17 Headlight Cleaner Control Relay and Motor
- A 19 Security Horn Assembly
- A 20 Wireless Door Lock Buzzer
- A 22 Windshield Wiper Motor Assembly
- A 23 Front Wiper Deicer (Windshield Glass)
- A 24 Skid Control ECU with Actuator Assembly
- A 25 Skid Control ECU with Actuator Assembly
- A 26 Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Assembly)
- A 32 Noise Filter (Ghost Buster)
- A 34 Junction Connector
- A 37 Junction Connector
- A 42 Winch Main Relay (No.1 Magnet Switch Assembly)
- A 43 Level Warning Switch (Fuel Filter Assembly)
- A 45 Side Turn Signal Light Assembly LH
- A 47 Side Turn Signal Light Assembly RH
- A 48 Turbo Motor Driver
- A 51 Clogging Switch (Fuel Filter Assembly)
- A 52 ECM


Position of Parts in Engine Compartment <RHD 1VD-F-TV>

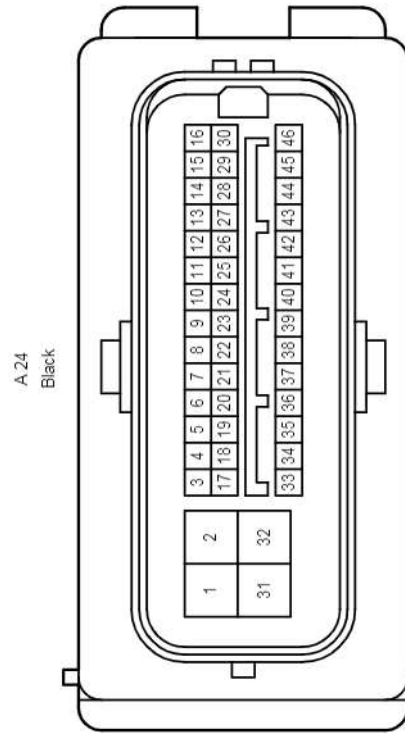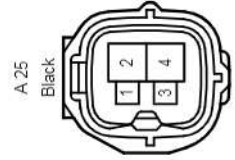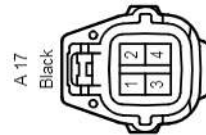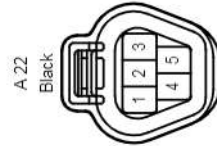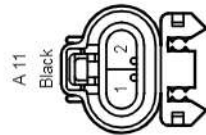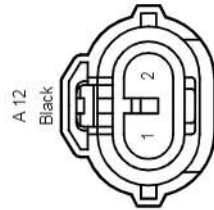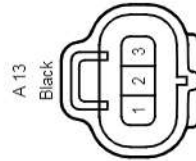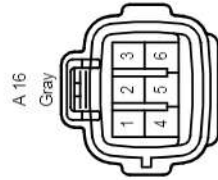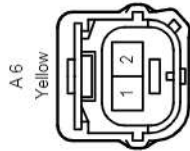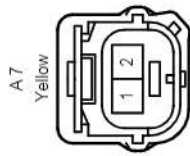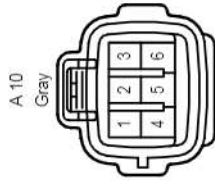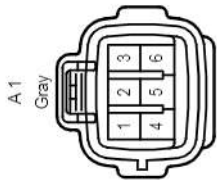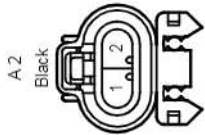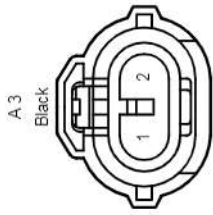



Position of Parts in Engine Compartment <RHD 1VD-F-TV>

A 37  
Blue

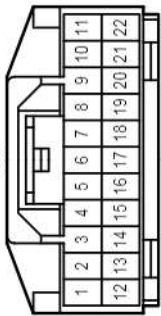

A 42  
Black



A 43  
Gray




A 45  
Gray




A 47  
Gray




A 48  
Black

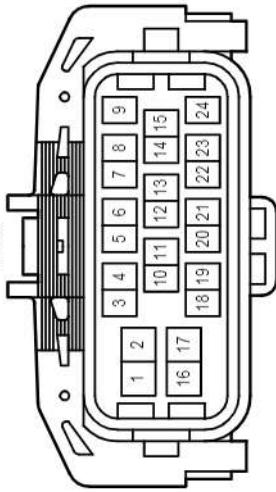


A 51  
Black

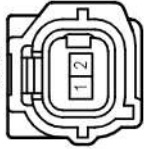

A 52  
Black

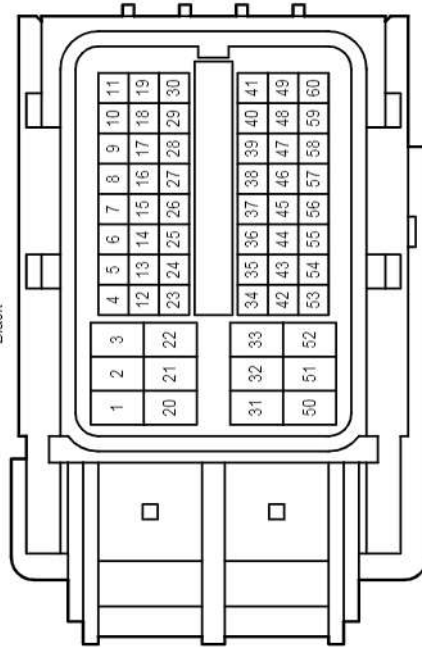

Position of Parts in Engine Compartment <RHD 1VD-FTV>




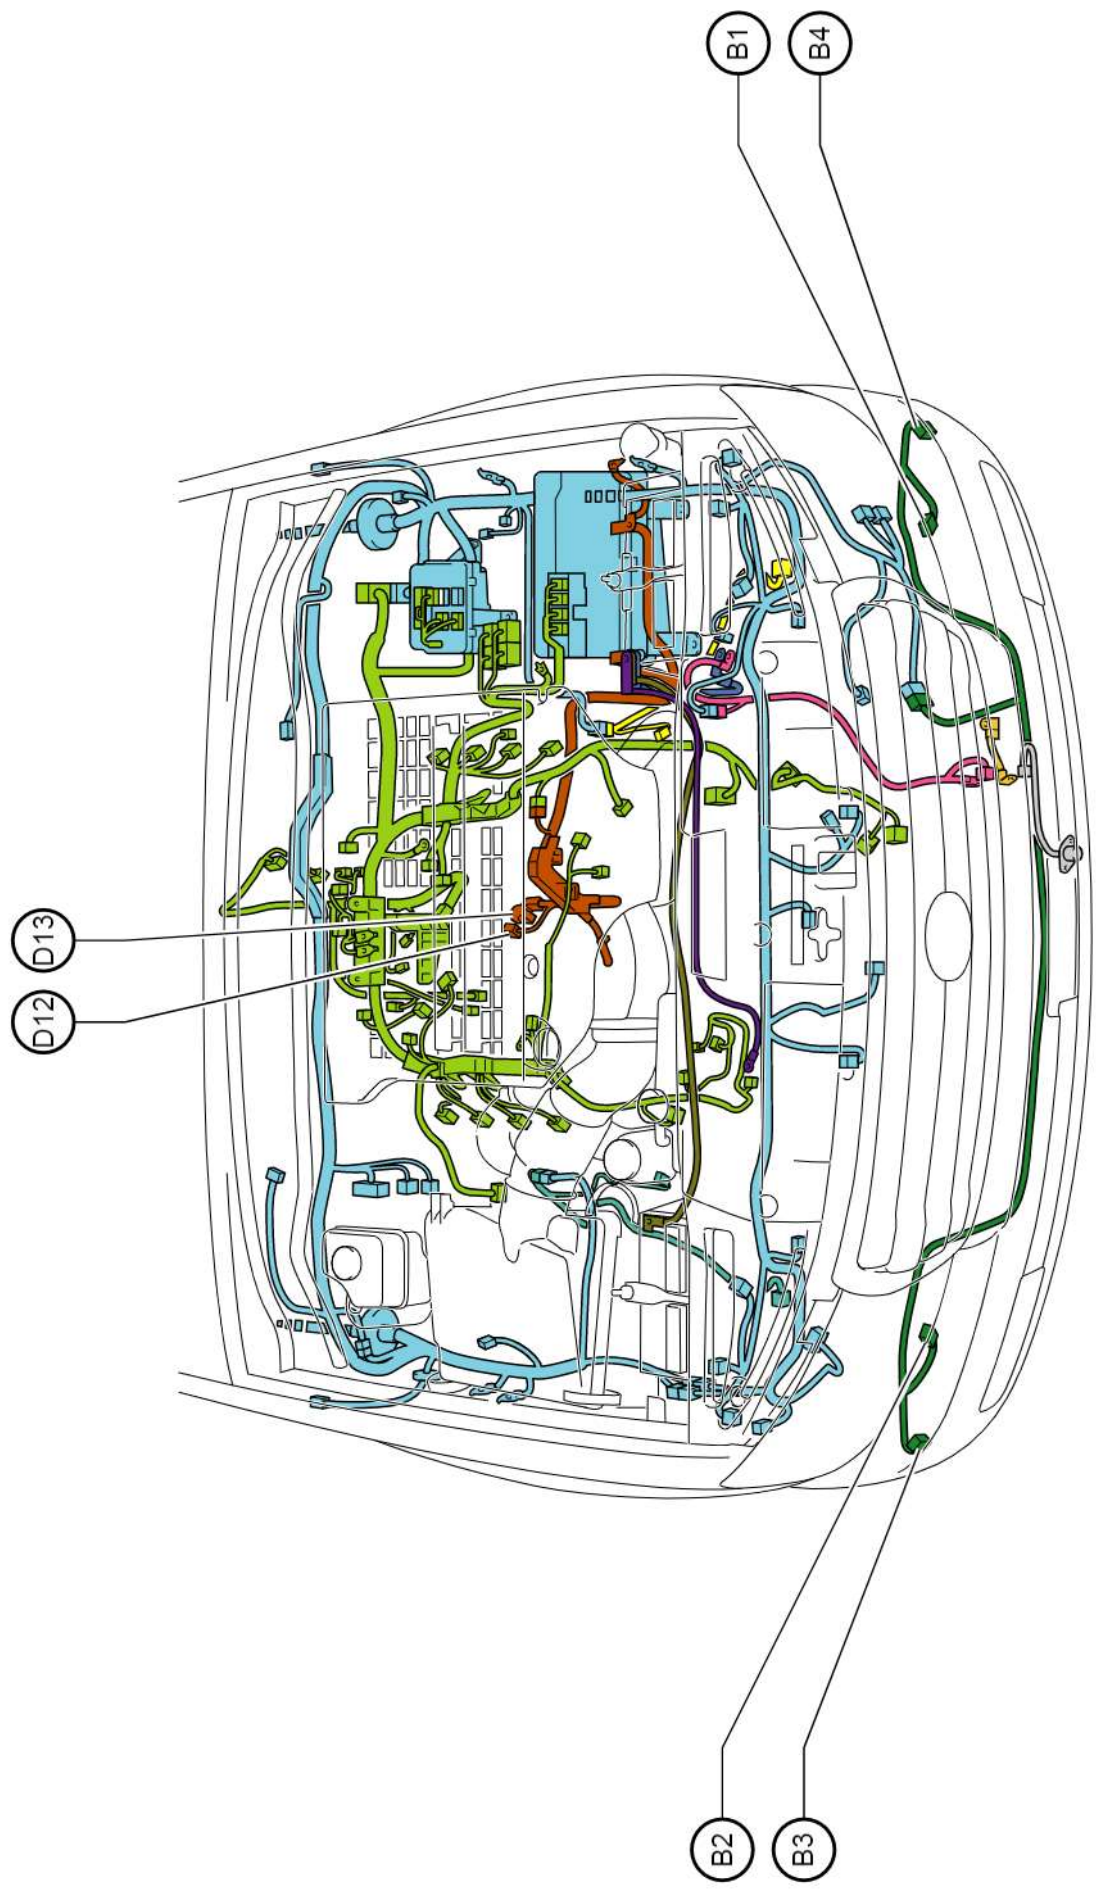


Position of Parts in Engine Compartment <RHD 1VD-F-TV>


---

- B 1 Fog Light Assembly LH
- B 2 Fog Light Assembly RH
- B 3 No.1 Ultrasonic Sensor RH
- B 4 No.1 Ultrasonic Sensor LH
  
- D 12 Starter Assembly
- D 13 Starter Assembly

Position of Parts in Engine Compartment <RHD 1VD-F-TV>

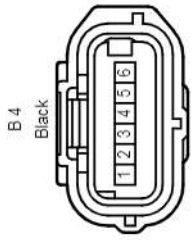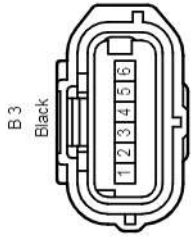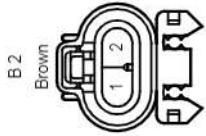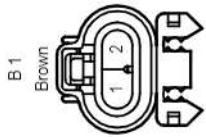

Position of Parts in Engine Compartment <RHD 1VD-FTV>

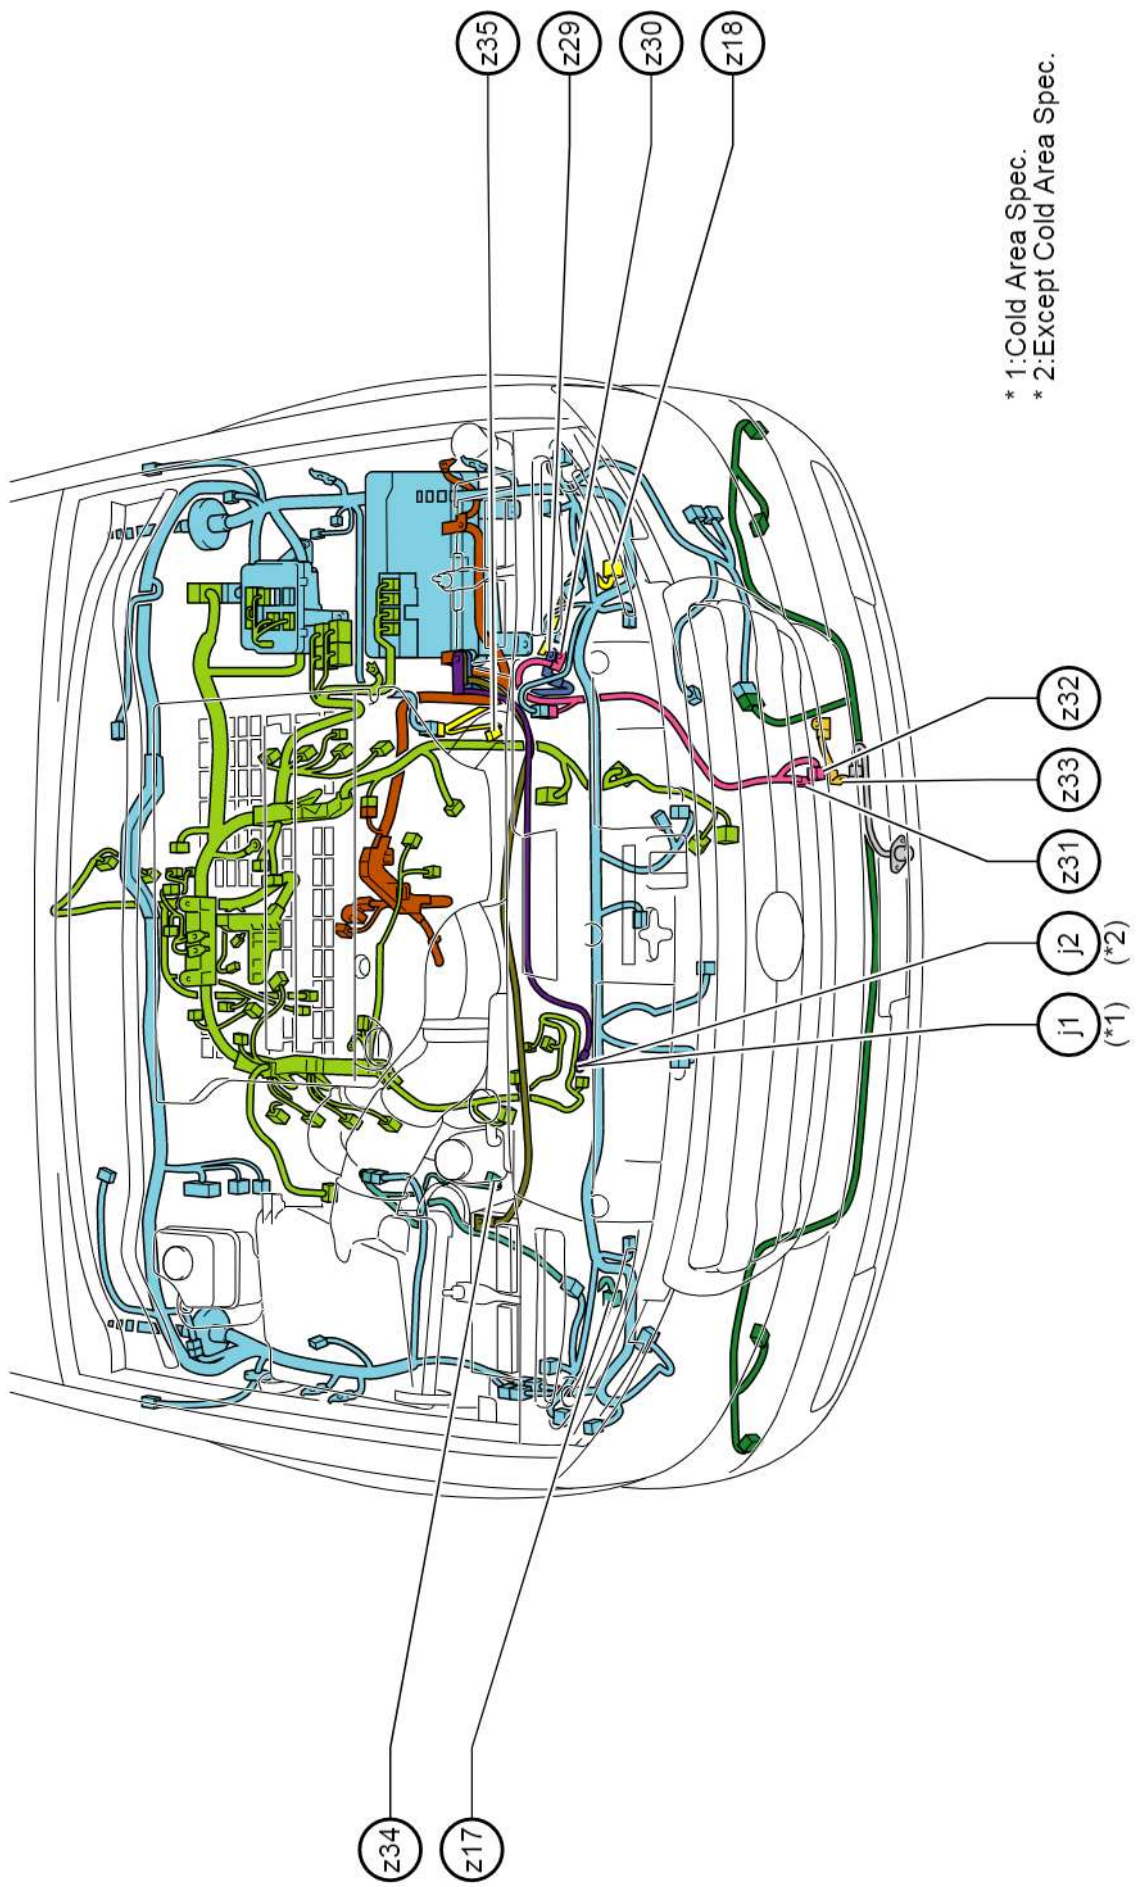







\* 1: Cold Area Spec.  
\* 2: Except Cold Area Spec.

Position of Parts in Engine Compartment <RHD 1VD-F-TV>


---

- j 1 Generator Assembly
- j 2 Generator Assembly
  
- z 17 Front Speed Sensor RH
- z 18 Front Speed Sensor LH
- z 29 Winch Main Relay (No.1 Magnet Switch Assembly)
- z 30 Winch Main Relay (No.1 Magnet Switch Assembly)
- z 31 With Magnet Switch Winch Motor Assembly
- z 32 With Magnet Switch Winch Motor Assembly
- z 33 With Magnet Switch Winch Motor Assembly
- z 34 Front Height Control Sensor Sub-Assembly RH
- z 35 Front Height Control Sensor Sub-Assembly LH

Position of Parts in Engine Compartment <RHD 1VD-F-TV>

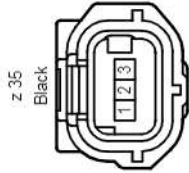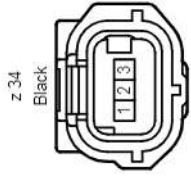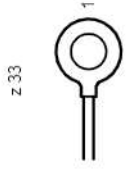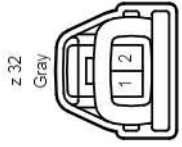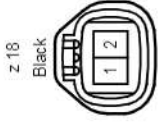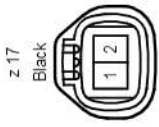


Wire and Wire in Engine Compartment <RHD 1VD-FTV>

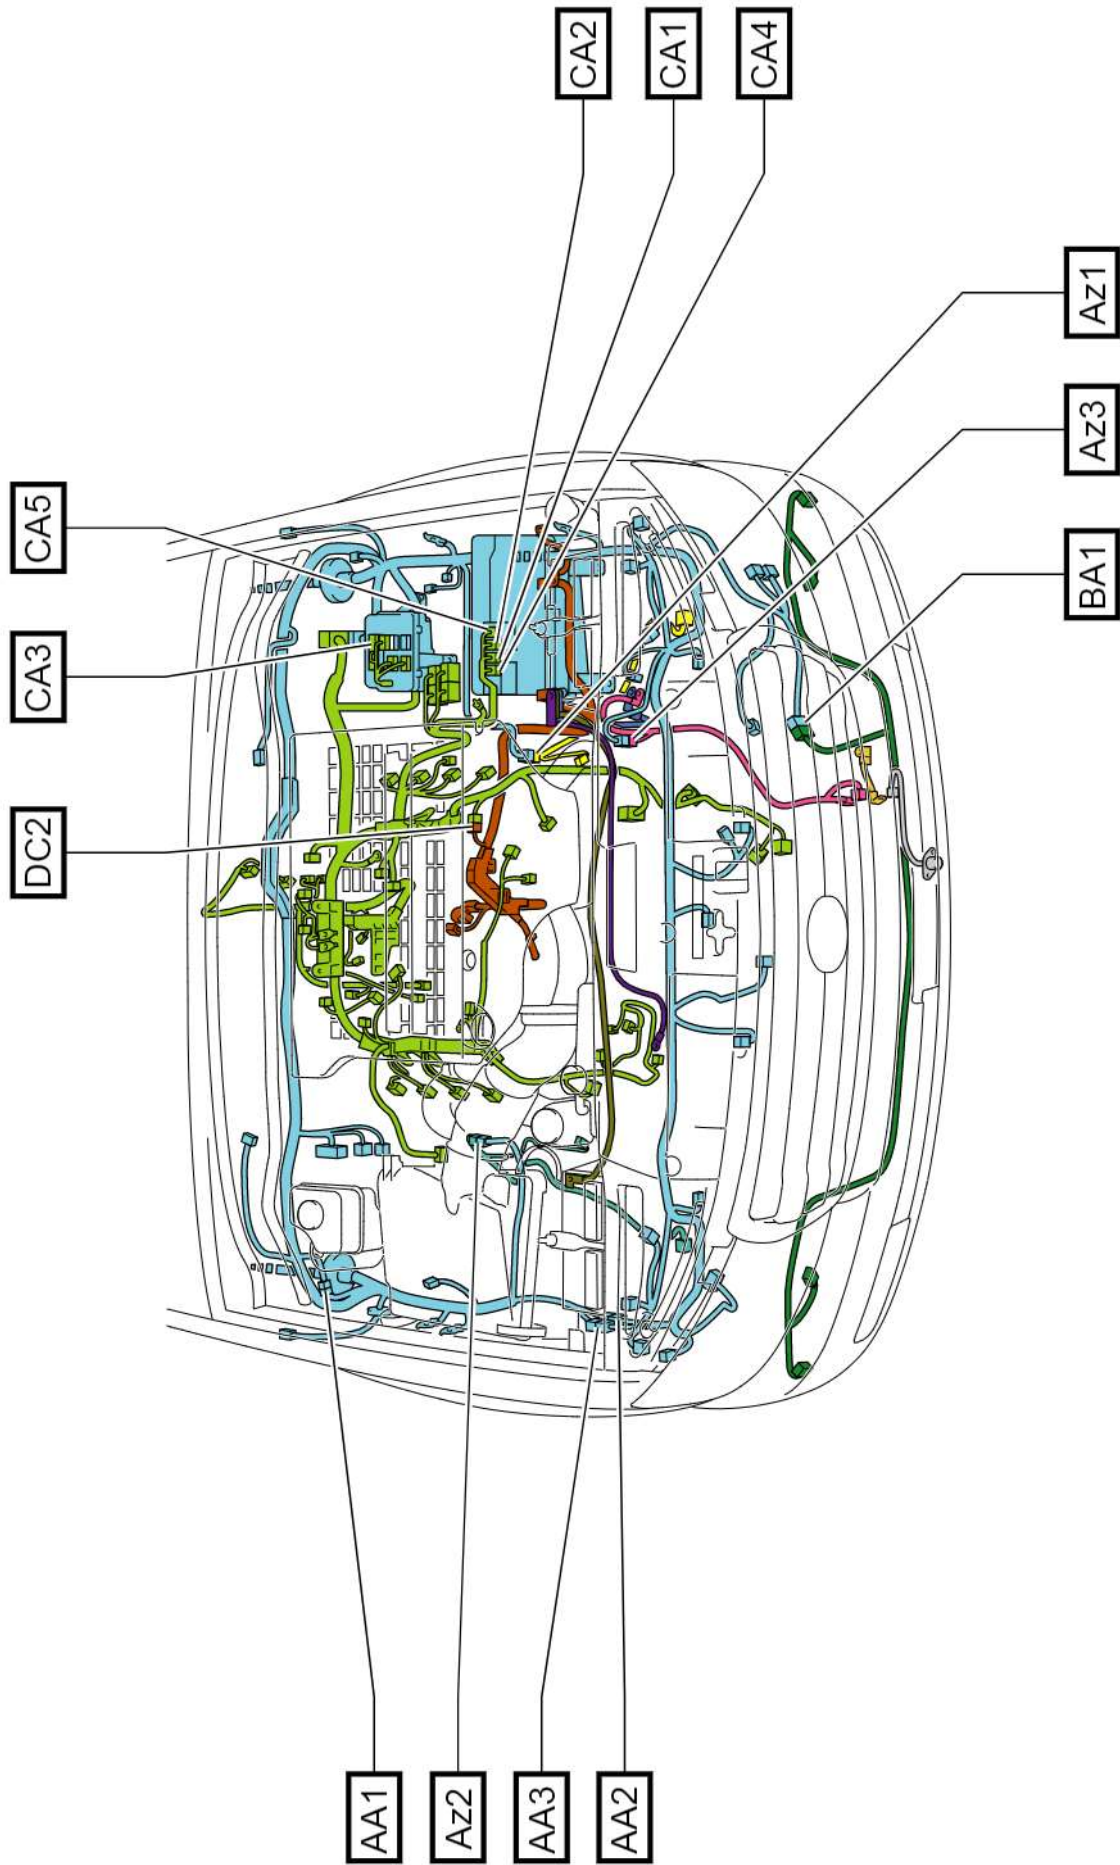





Wire and Wire in Engine Compartment <RHD 1VD-FTV>

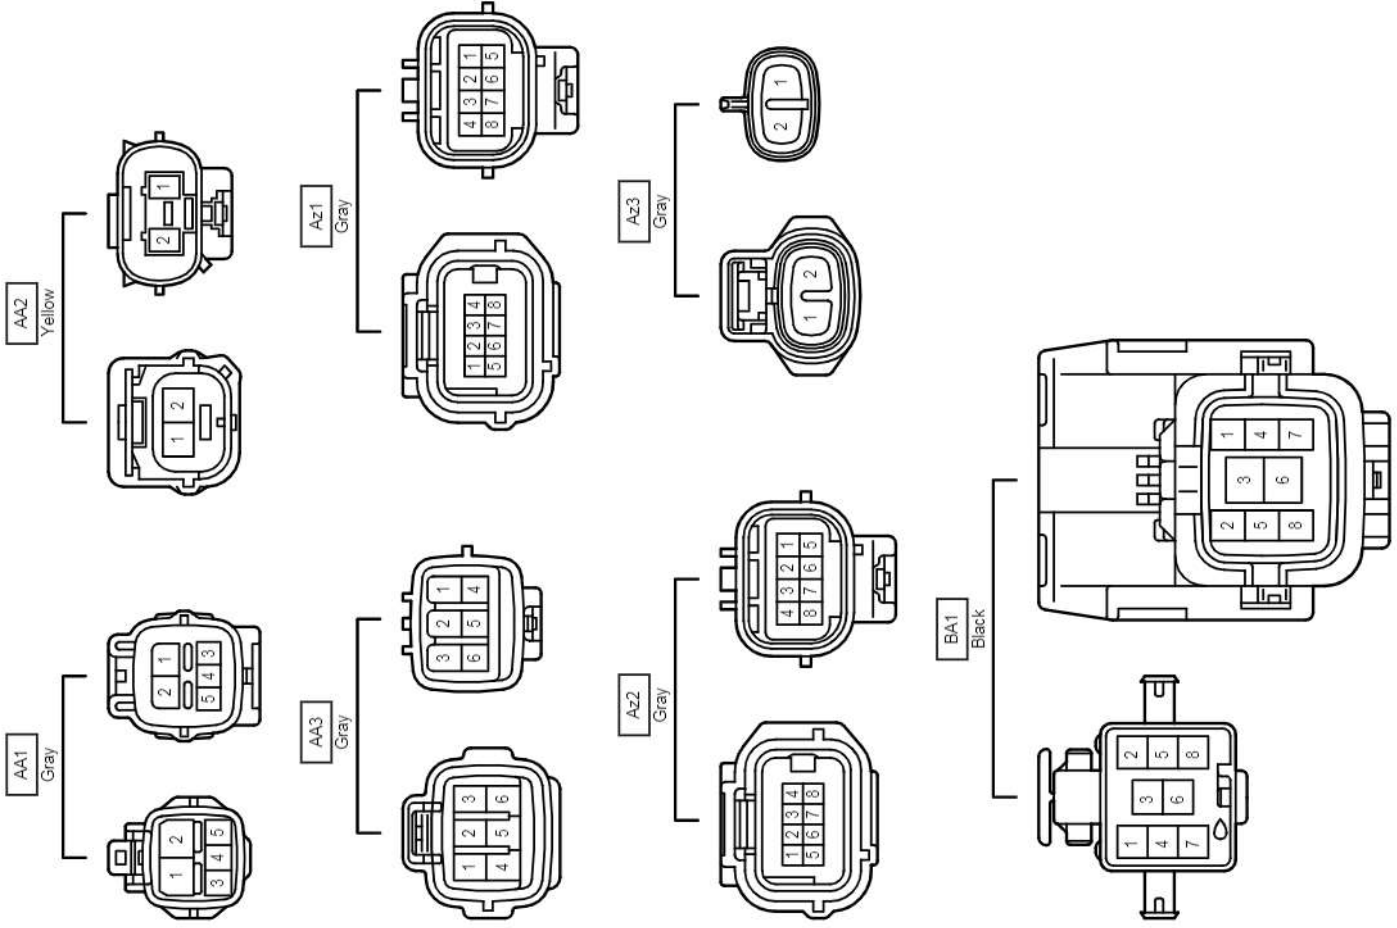


CA2  
White

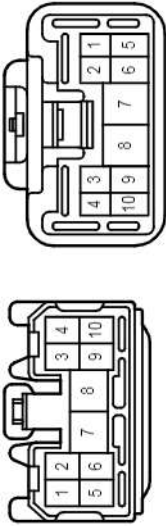


CA3  
White

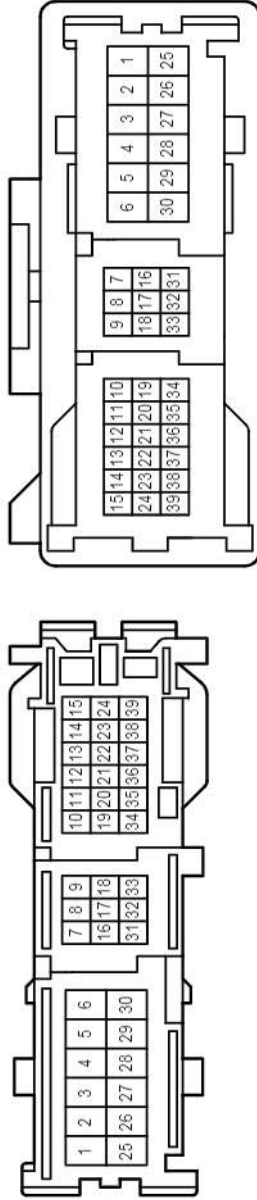


CA4  
White

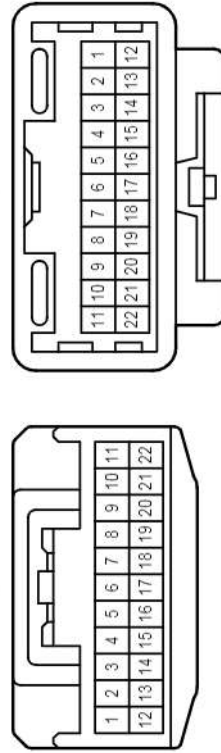


CA5  
White

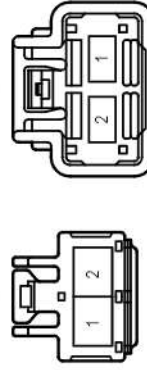


DC2  
Gray

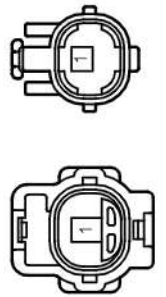

Ground Points in Engine Compartment <LHD 2UZ-FE>














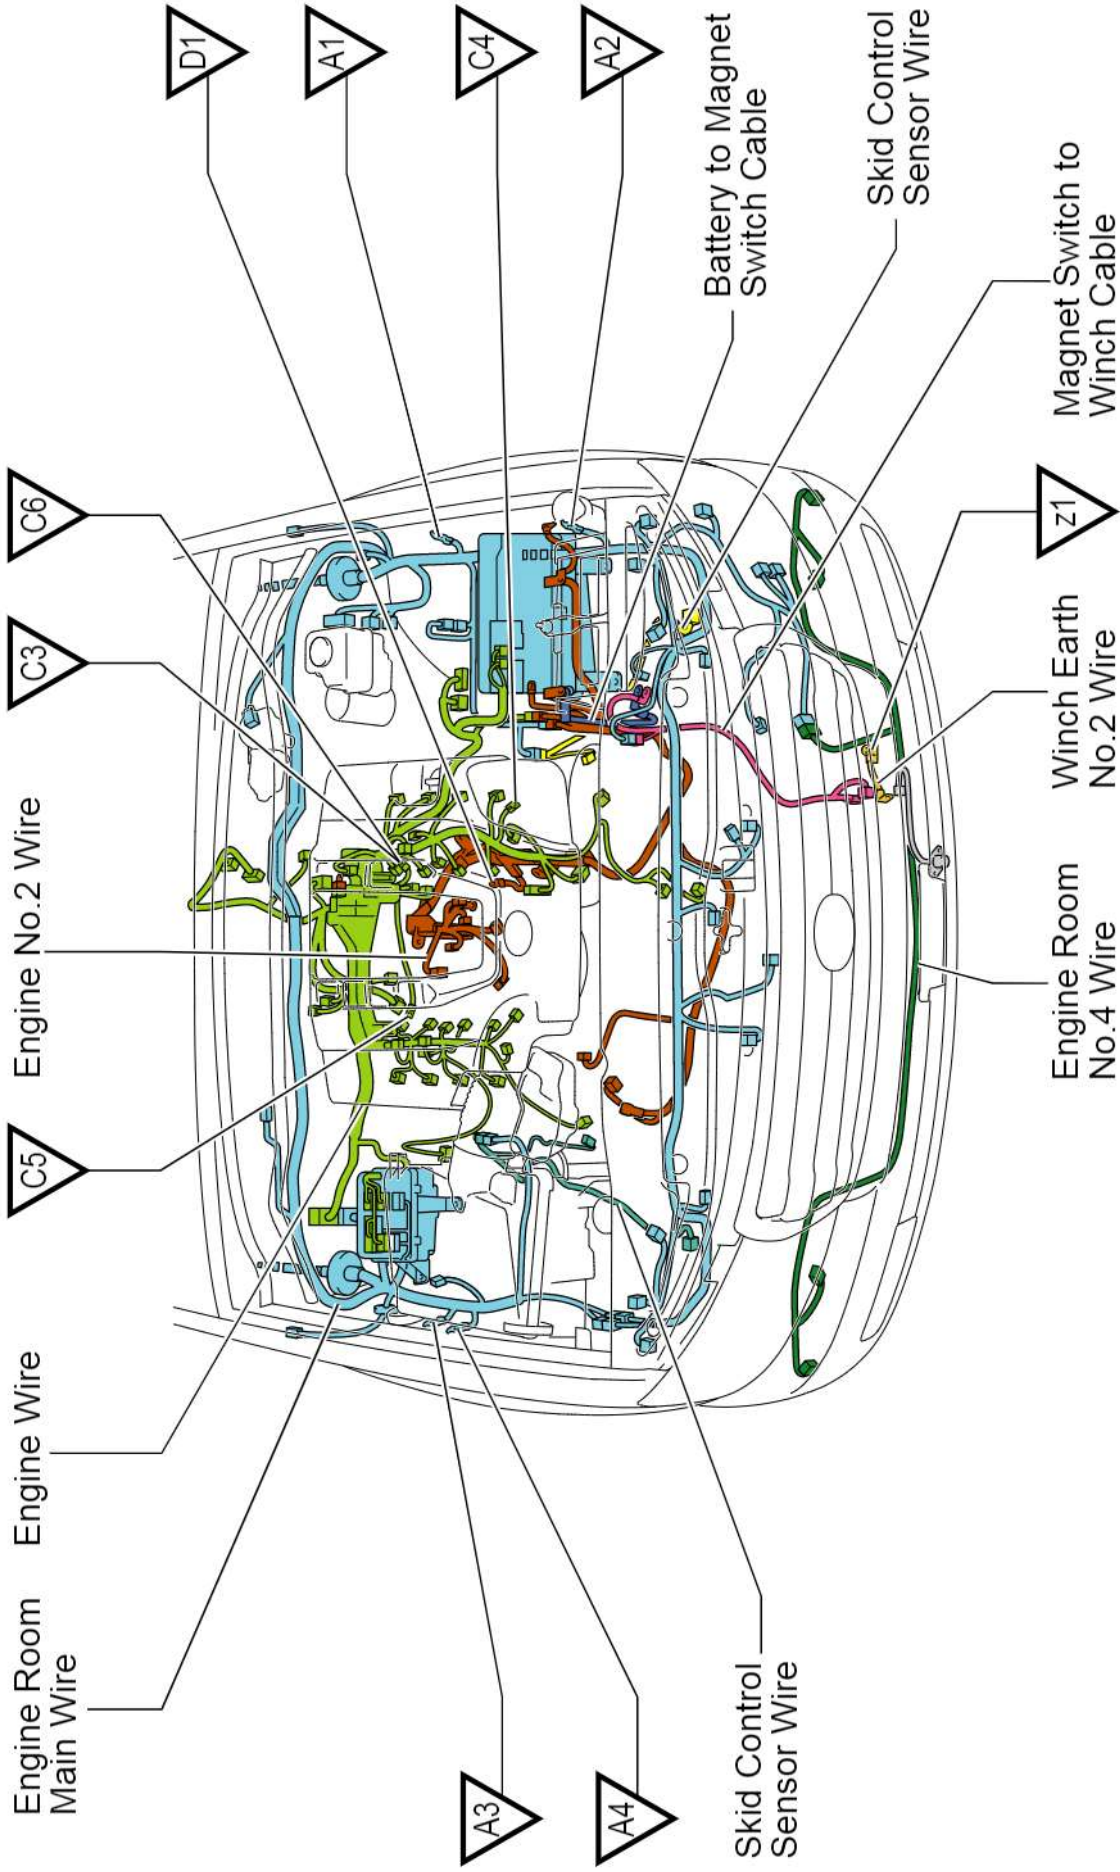


Position of Parts in Engine Compartment <LHD 2UZ-FE>


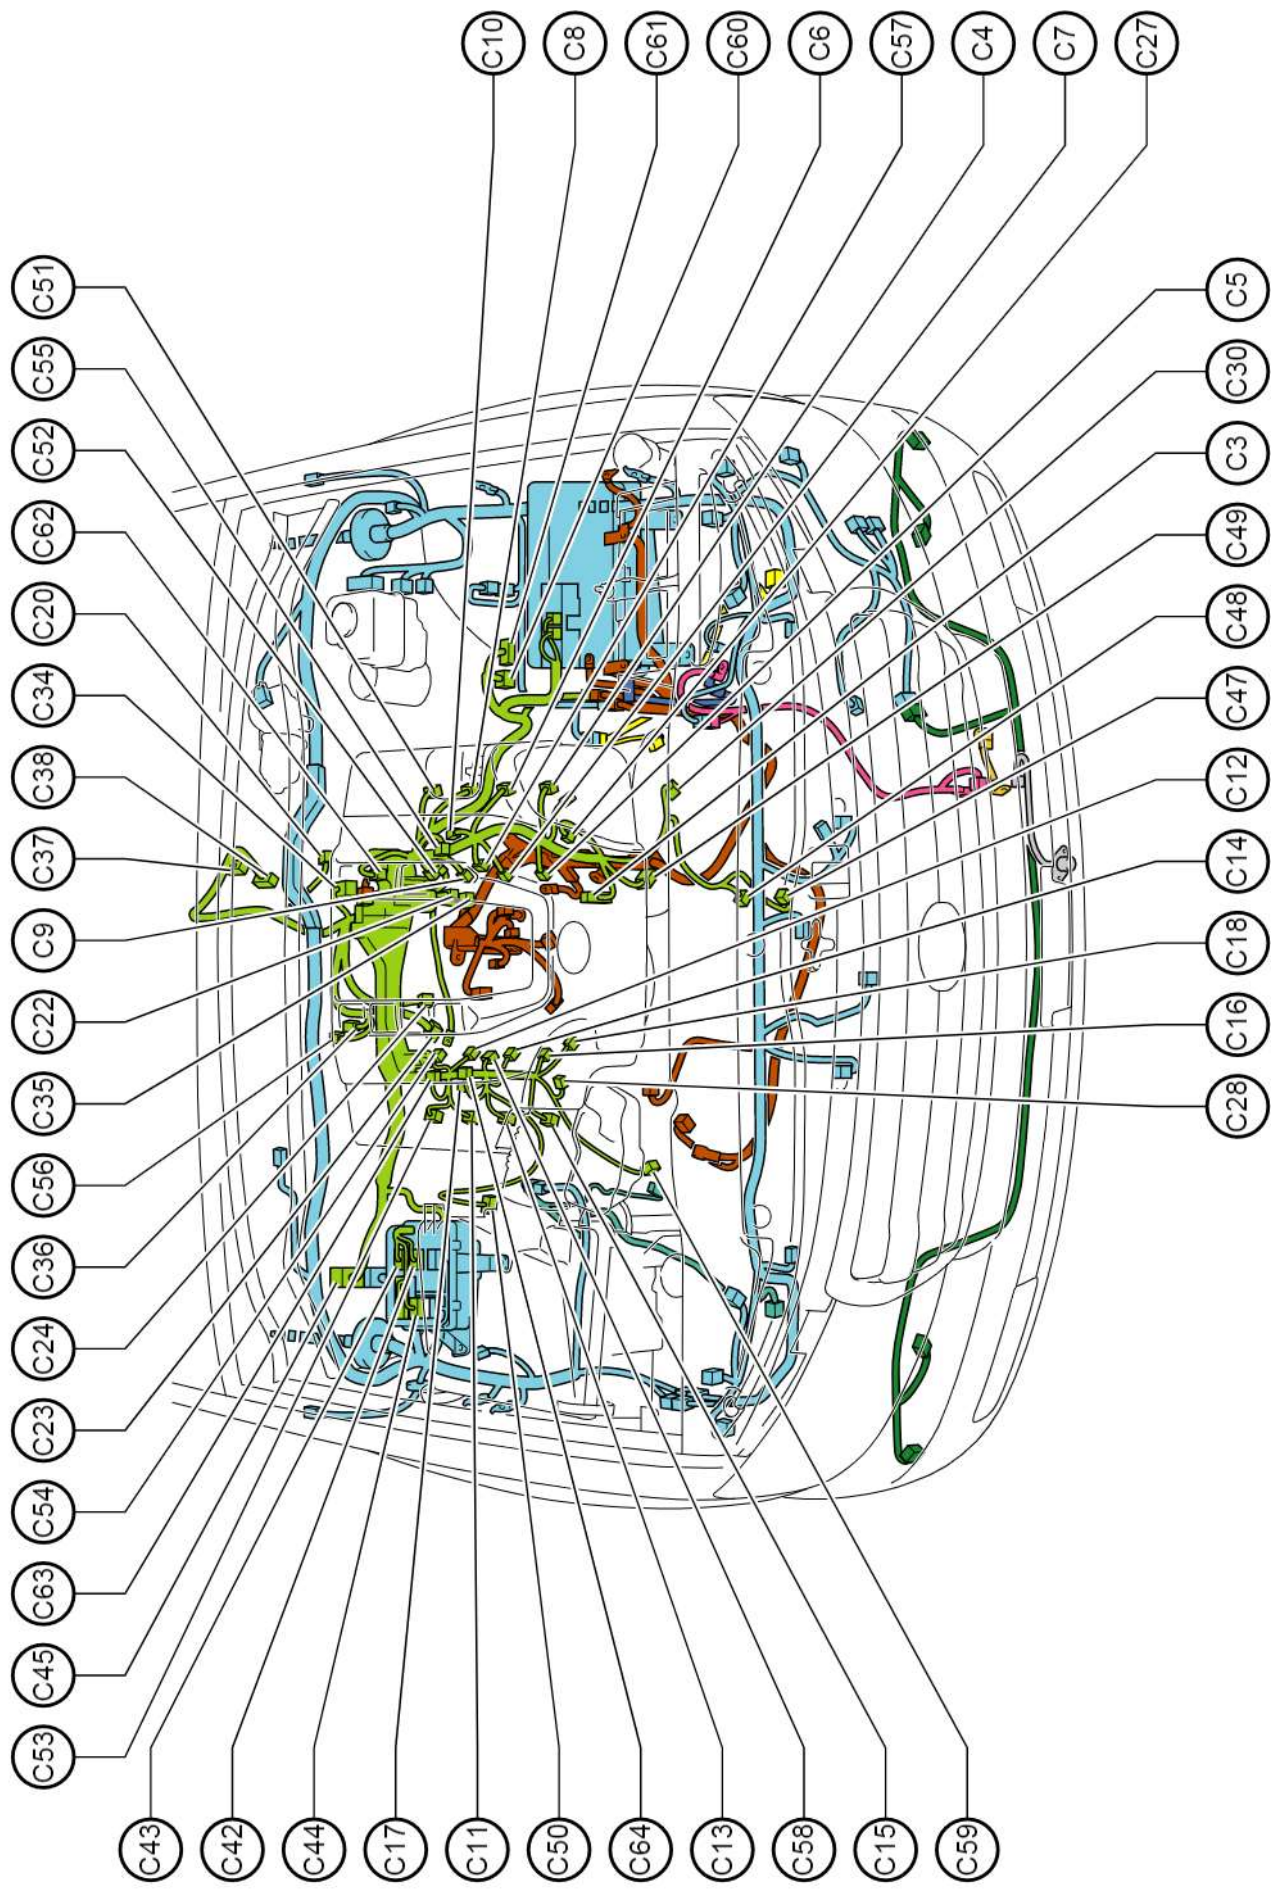


- C 3 Throttle Body Assembly
- C 4 Ignition Coil Assembly No.1
- C 5 Fuel Injector Assembly No.1
- C 6 Ignition Coil Assembly No.3
- C 7 Fuel Injector Assembly No.3
- C 8 Ignition Coil Assembly No.5
- C 9 Fuel Injector Assembly No.5
- C 10 Noise Filter (Ignition Bank 1)
- C 11 Ignition Coil Assembly No.6
- C 12 Fuel Injector Assembly No.6
- C 13 Ignition Coil Assembly No.4
- C 14 Fuel Injector Assembly No.4
- C 15 Ignition Coil Assembly No.2
- C 16 Fuel Injector Assembly No.2
- C 17 Noise Filter (Ignition Bank 2)
- C 18 E.F.I. Engine Coolant Temperature Sensor
- C 20 Oxygen Sensor (Bank 1 Sensor 2)
- C 22 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- C 23 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
- C 24 Park/Neutral Position Switch
- C 27 Camshaft Timing Oil Control Valve (Bank 1)
- C 28 Camshaft Timing Oil Control Valve (Bank 2)
- C 30 Cooler Compressor Assembly
- C 34 Electronically Controlled Transmission Solenoid
- C 35 Transmission Revolution Sensor (Turbine)
- C 36 Transmission Revolution Sensor (Counter Gear)
- C 37 Transfer Shift Actuator Assembly
- C 38 Transfer Shift Actuator Assembly
- C 42 Junction Connector
- C 43 Junction Connector
- C 44 Junction Connector
- C 45 ECM
- C 47 Oil Pressure Sender Gage Assembly
- C 48 Crankshaft Position Sensor
- C 49 Camshaft Position Sensor
- C 50 Mass Air Flow Meter
- C 51 Ignition Coil Assembly No.7
- C 52 Fuel Injector Assembly No.7
- C 53 Ignition Coil Assembly No.8
- C 54 Fuel Injector Assembly No.8
- C 55 Purge VSV
- C 56 Oxygen Sensor (Bank 2 Sensor 2)
- C 57 VVT Sensor (Bank 1)
- C 58 VVT Sensor (Bank 2)

 Position of Parts in Engine Compartment <LHD 2UZ-FE>

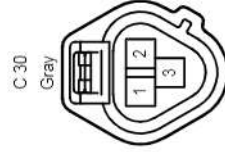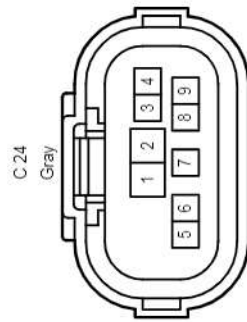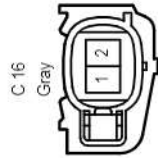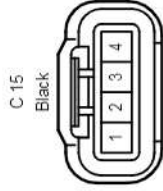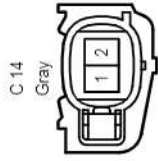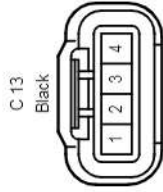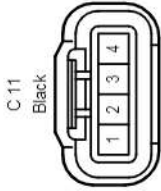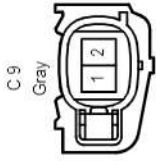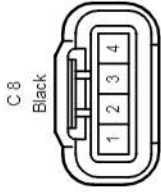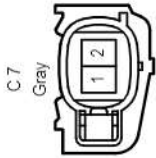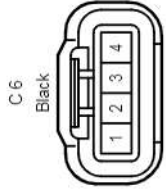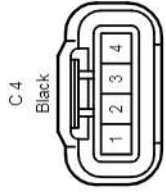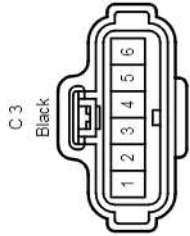


C 34  
Gray

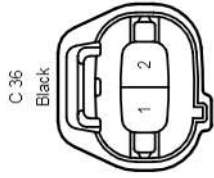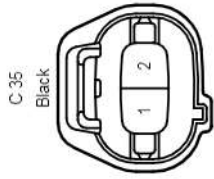


Position of Parts in Engine Compartment <LHD 2UZ-FE>


C 43  
White

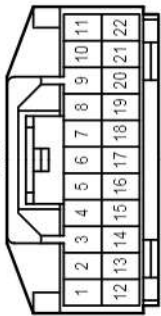

C 44  
Blue

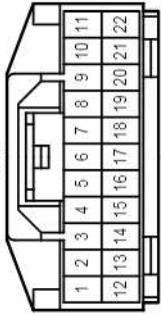

C 45  
Black

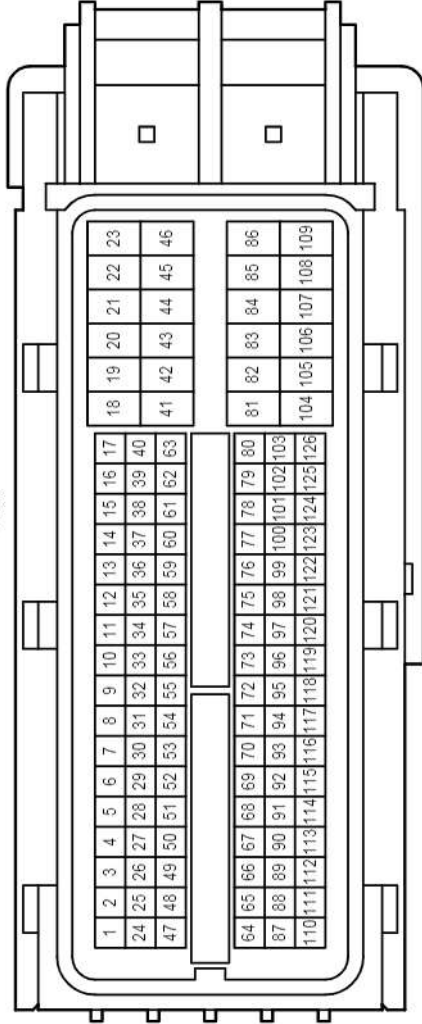


C 47  
Black




C 48  
Dark Gray




C 49  
Gray

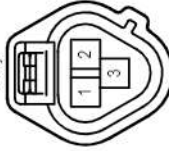

C 50  
Black

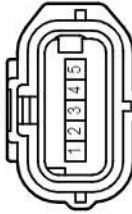


C 51  
Black

 

C 52  
Gray



 C 53  
Black



C 54  
Gray



C 55  
Black



C 56  
Dark Gray



C 57  
Dark Gray



C 58  
Dark Gray




C 59  
Gray



C 60  
Black



Position of Parts in Engine Compartment <LHD 2UZ-FE>


















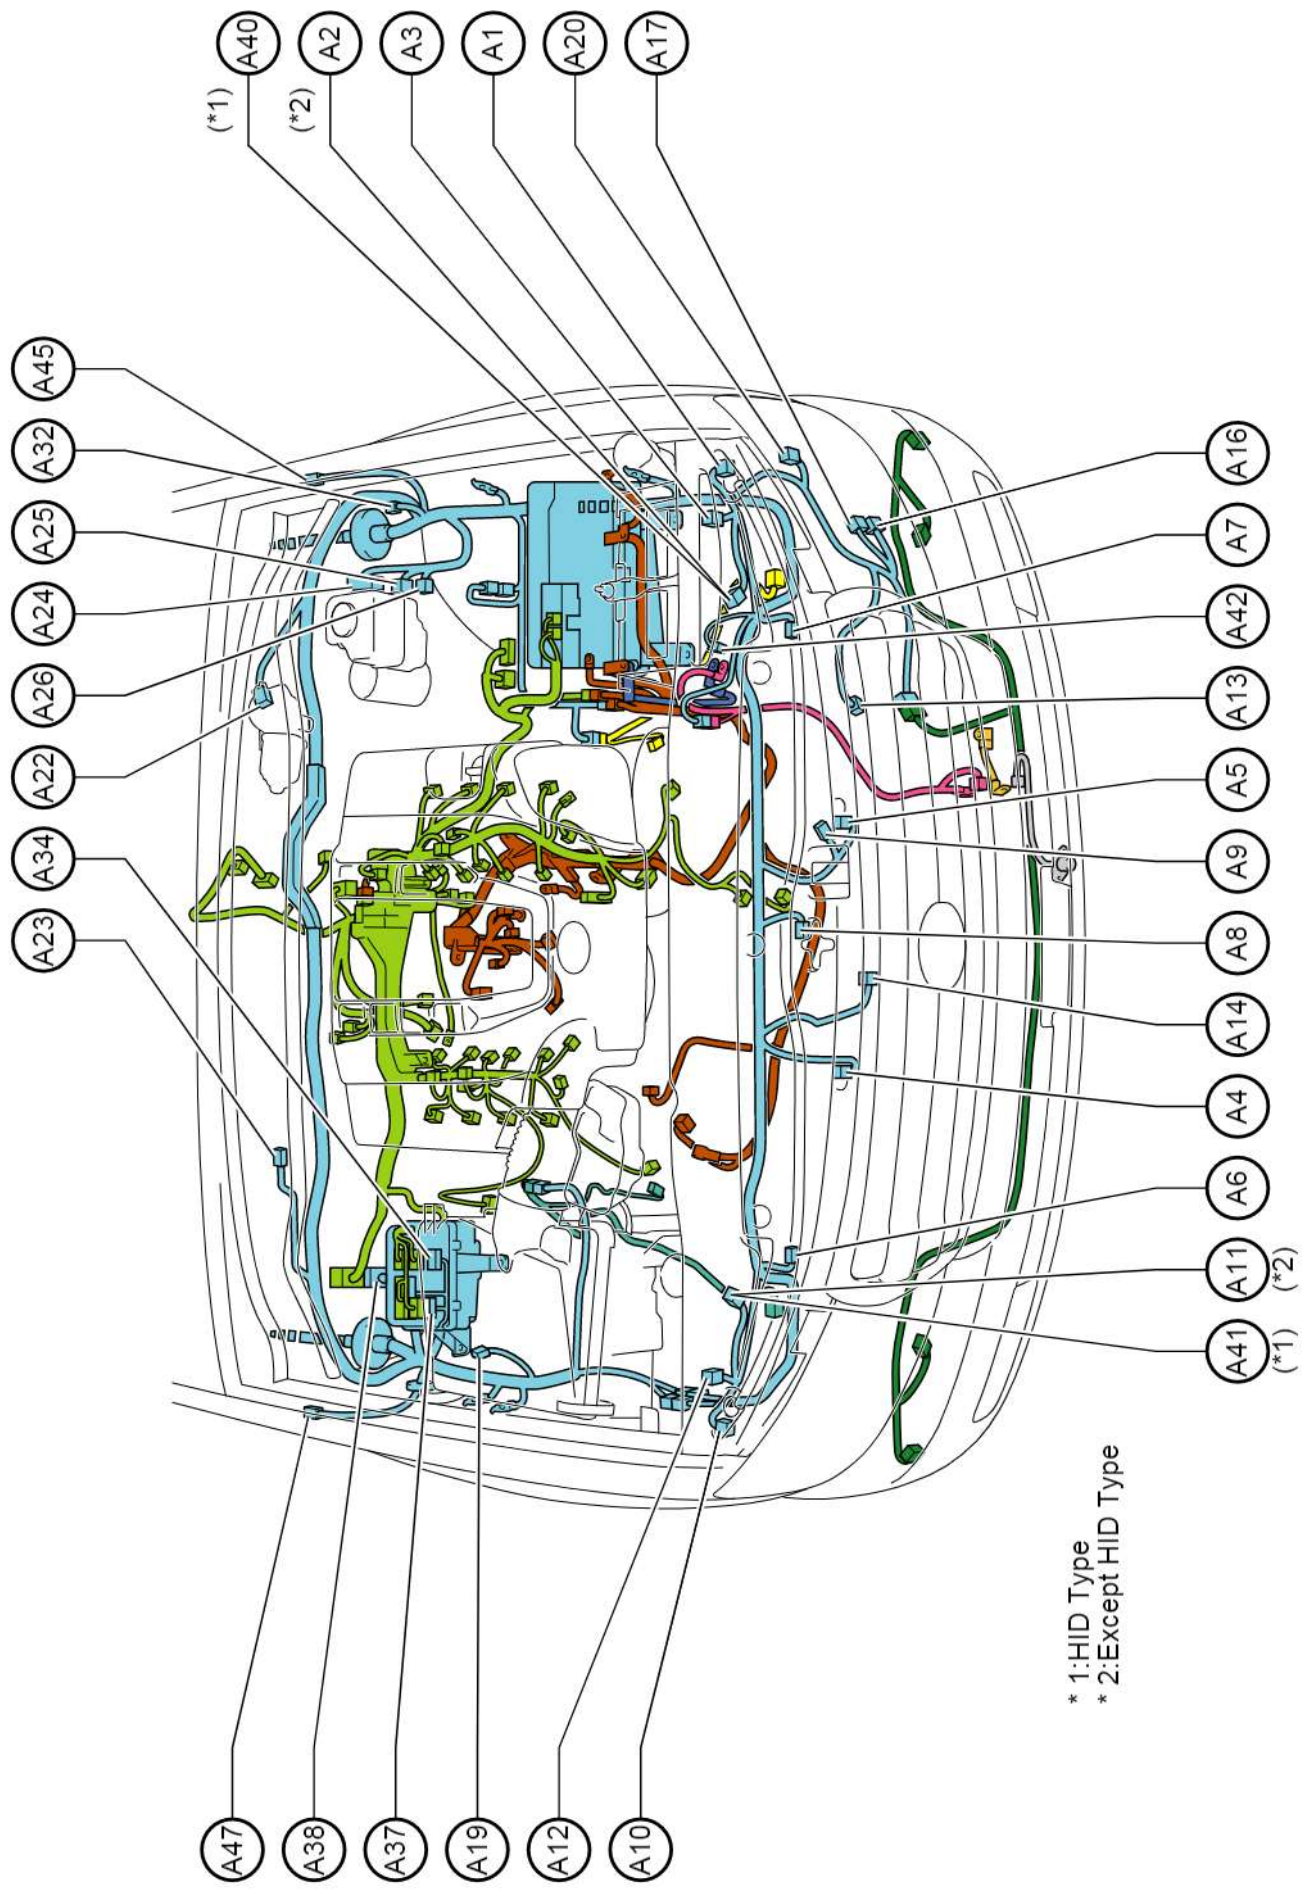


\* 1: HID Type  
 \* 2: Except HID Type









- A 1 Headlight Assembly LH
- A 2 Headlight Assembly LH
- A 3 Headlight Assembly LH
- A 4 High Pitched Horn Assembly
- A 5 Low Pitched Horn Assembly
- A 6 Front Airbag Sensor RH
- A 7 Front Airbag Sensor LH
- A 8 Engine Hood Courtesy Switch
- A 9 Condenser Blower Motor Assembly
- A 10 Headlight Assembly RH
- A 11 Headlight Assembly RH
- A 12 Headlight Assembly RH
- A 13 A/C Pressure Sensor
- A 14 Ambient Temperature Sensor
- A 16 Windshield Washer Motor and Pump Assembly
- A 17 Headlight Cleaner Control Relay and Motor
- A 19 Security Horn Assembly
- A 20 Wireless Door Lock Buzzer
- A 22 Windshield Wiper Motor Assembly
- A 23 Front Wiper Deicer (Windshield Glass)
- A 24 Skid Control ECU with Actuator Assembly
- A 25 Skid Control ECU with Actuator Assembly
- A 26 Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Assembly)
- A 32 Noise Filter (Ghost Buster)
- A 34 Junction Connector
- A 37 Junction Connector
- A 38 ECM
- A 40 Headlight Assembly LH
- A 41 Headlight Assembly RH
- A 42 Winch Main Relay (No.1 Magnet Switch Assembly)
- A 45 Side Turn Signal Light Assembly LH
- A 47 Side Turn Signal Light Assembly RH

   
Position of Parts in Engine Compartment <LHD 2UZ-FE>

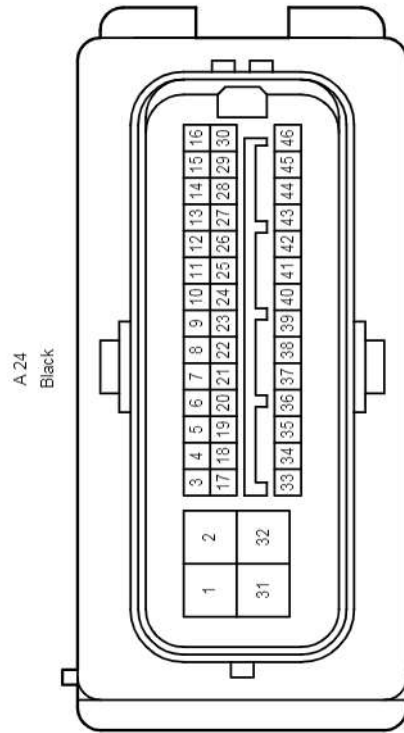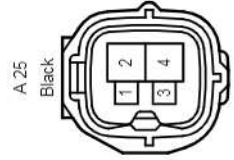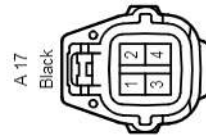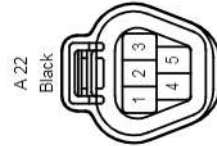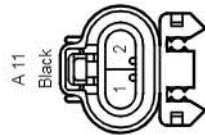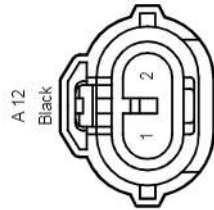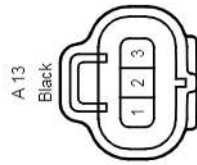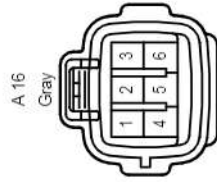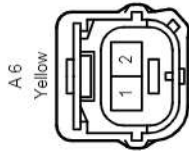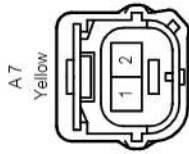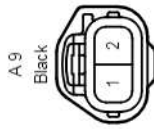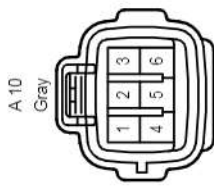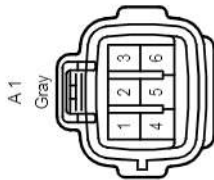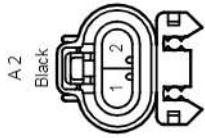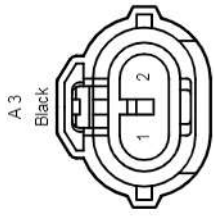

Position of Parts in Engine Compartment <LHD 2UZ-FE>





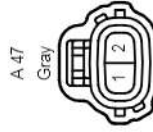
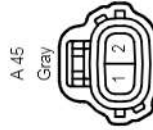
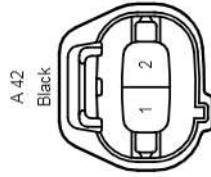
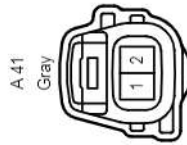
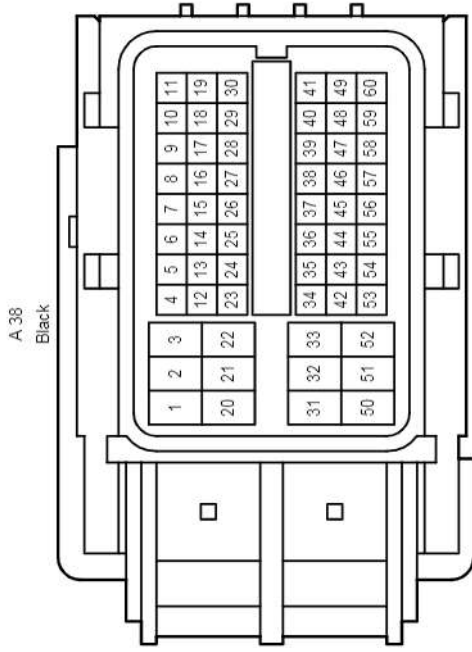
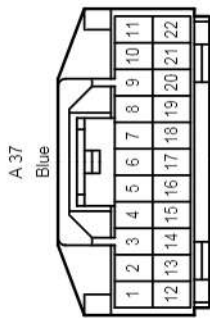


Position of Parts in Engine Compartment <LHD 2UZ-FE>

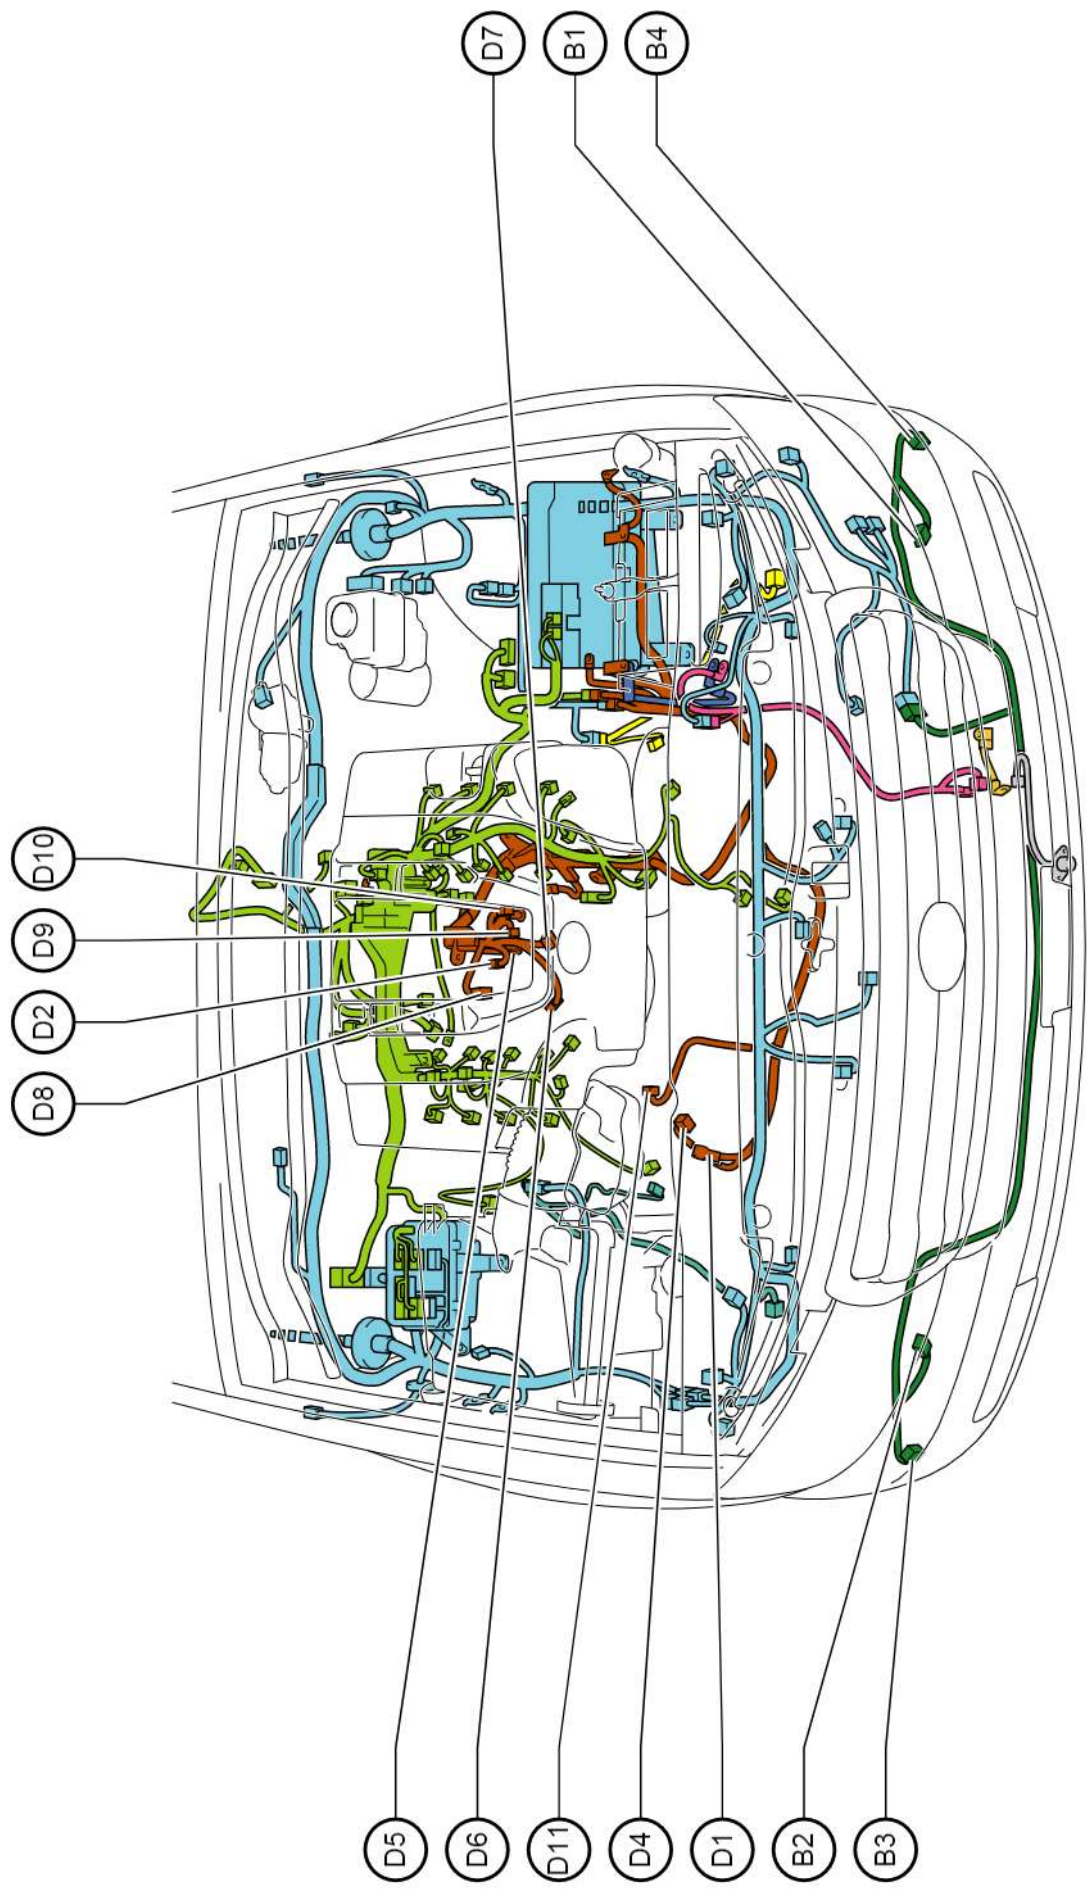


- B 1 Fog Light Assembly LH
- B 2 Fog Light Assembly RH
- B 3 No.1 Ultrasonic Sensor RH
- B 4 No.1 Ultrasonic Sensor LH
  
- D 1 Generator Assembly
- D 2 Starter Assembly
- D 4 Generator Assembly
- D 5 Starter Assembly
- D 6 Knock Control Sensor (Bank 2)
- D 7 Knock Control Sensor (Bank 1)
- D 8 Air Pump Assembly
- D 9 Air Pressure Sensor
- D 10 Air Switching Valve
- D 11 Engine Oil Level Sensor

Position of Parts in Engine Compartment <LHD 2UZ-FE>

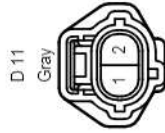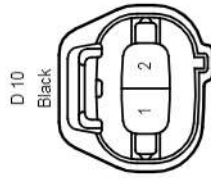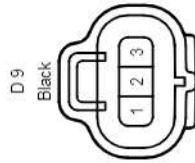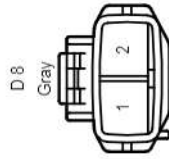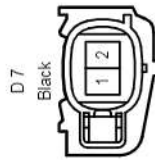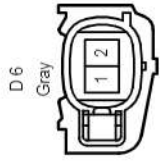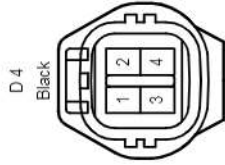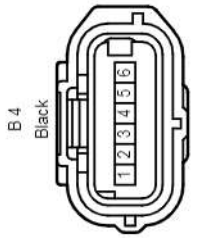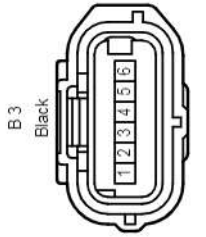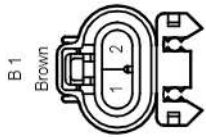

Position of Parts in Engine Compartment <LHD 2UZ-FE>

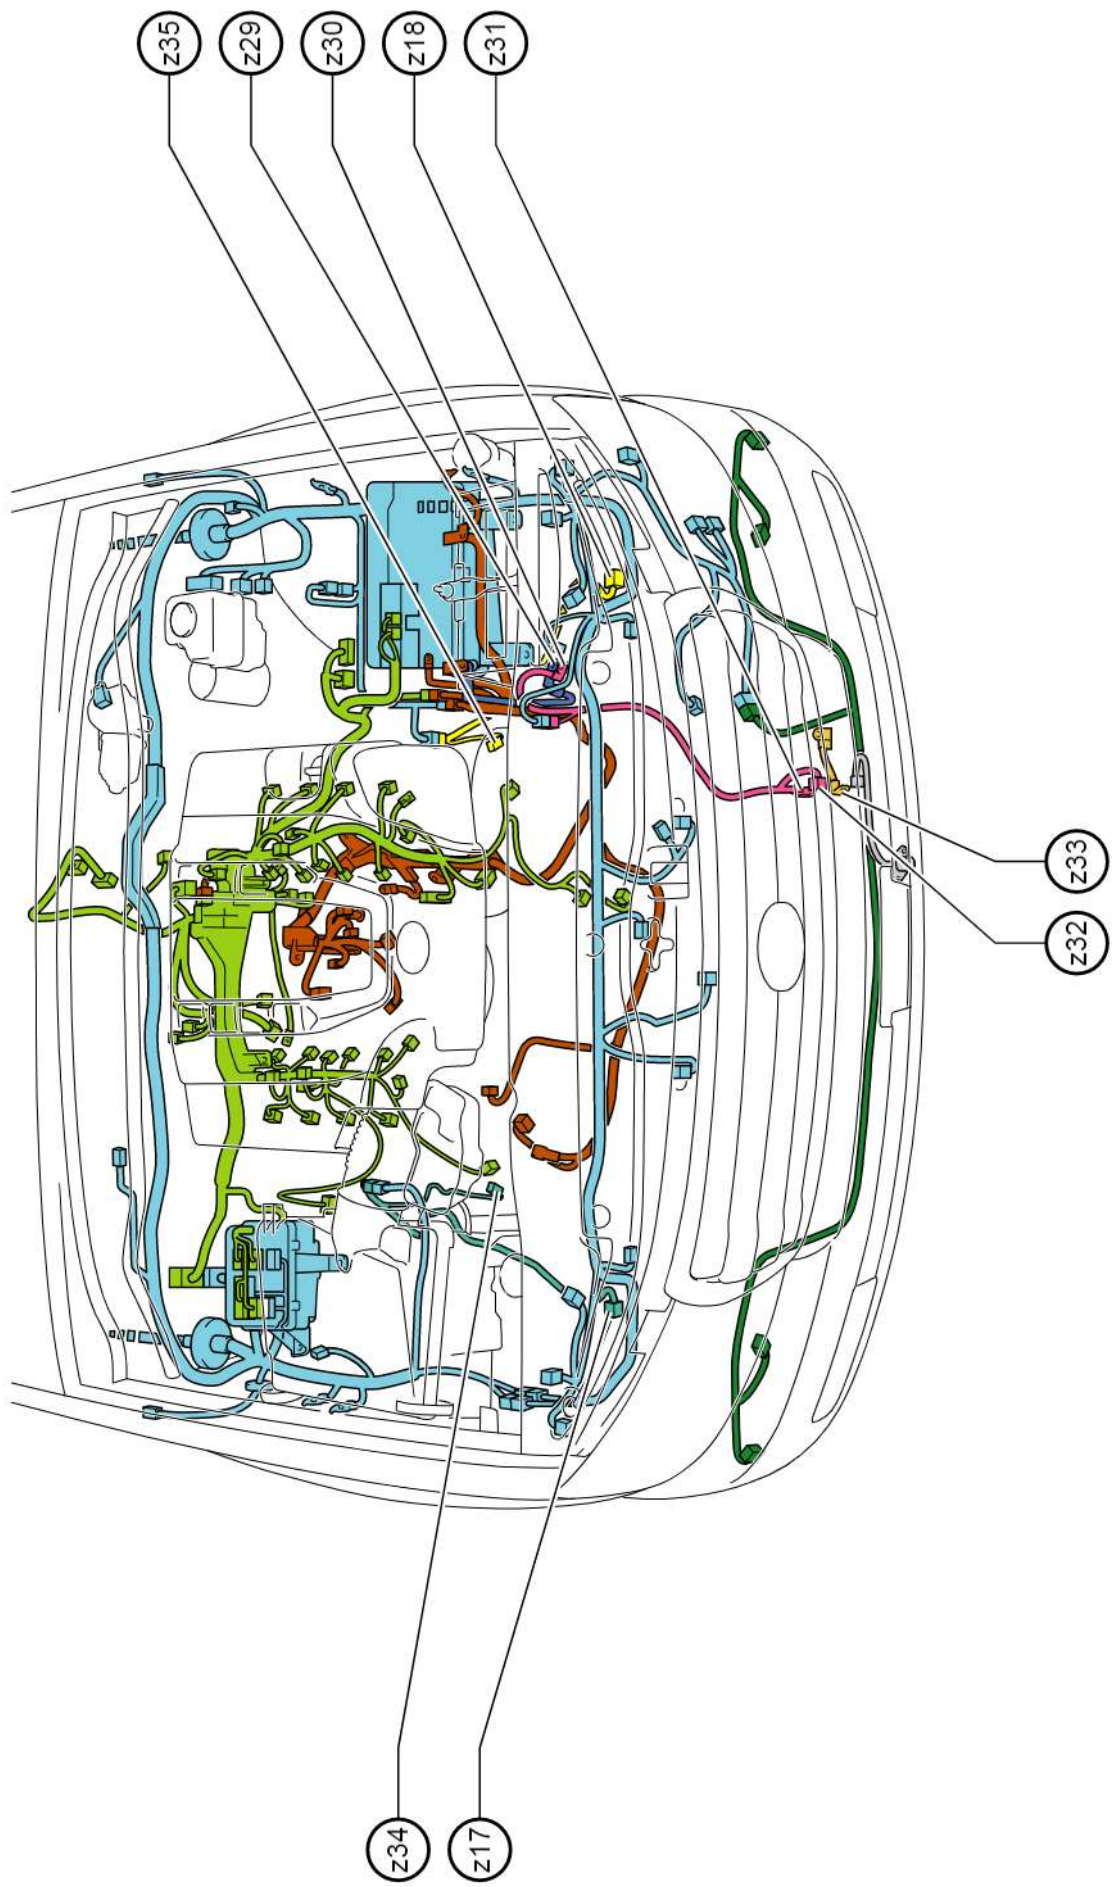





Position of Parts in Engine Compartment <LHD 2UZ-FE>

---


- z 17 Front Speed Sensor RH
- z 18 Front Speed Sensor LH
- z 29 Winch Main Relay (No.1 Magnet Switch Assembly)
- z 30 Winch Main Relay (No.1 Magnet Switch Assembly)
- z 31 With Magnet Switch Winch Motor Assembly
- z 32 With Magnet Switch Winch Motor Assembly
- z 33 With Magnet Switch Winch Motor Assembly
- z 34 Front Height Control Sensor Sub-Assembly RH
- z 35 Front Height Control Sensor Sub-Assembly LH







Position of Parts in Engine Compartment <LHD 2UZ-FE>

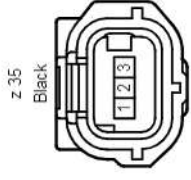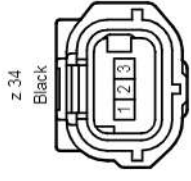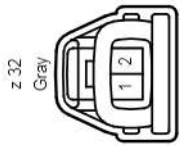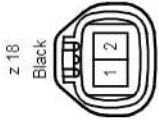


Wire and Wire in Engine Compartment <LHD 2UZ-FE>

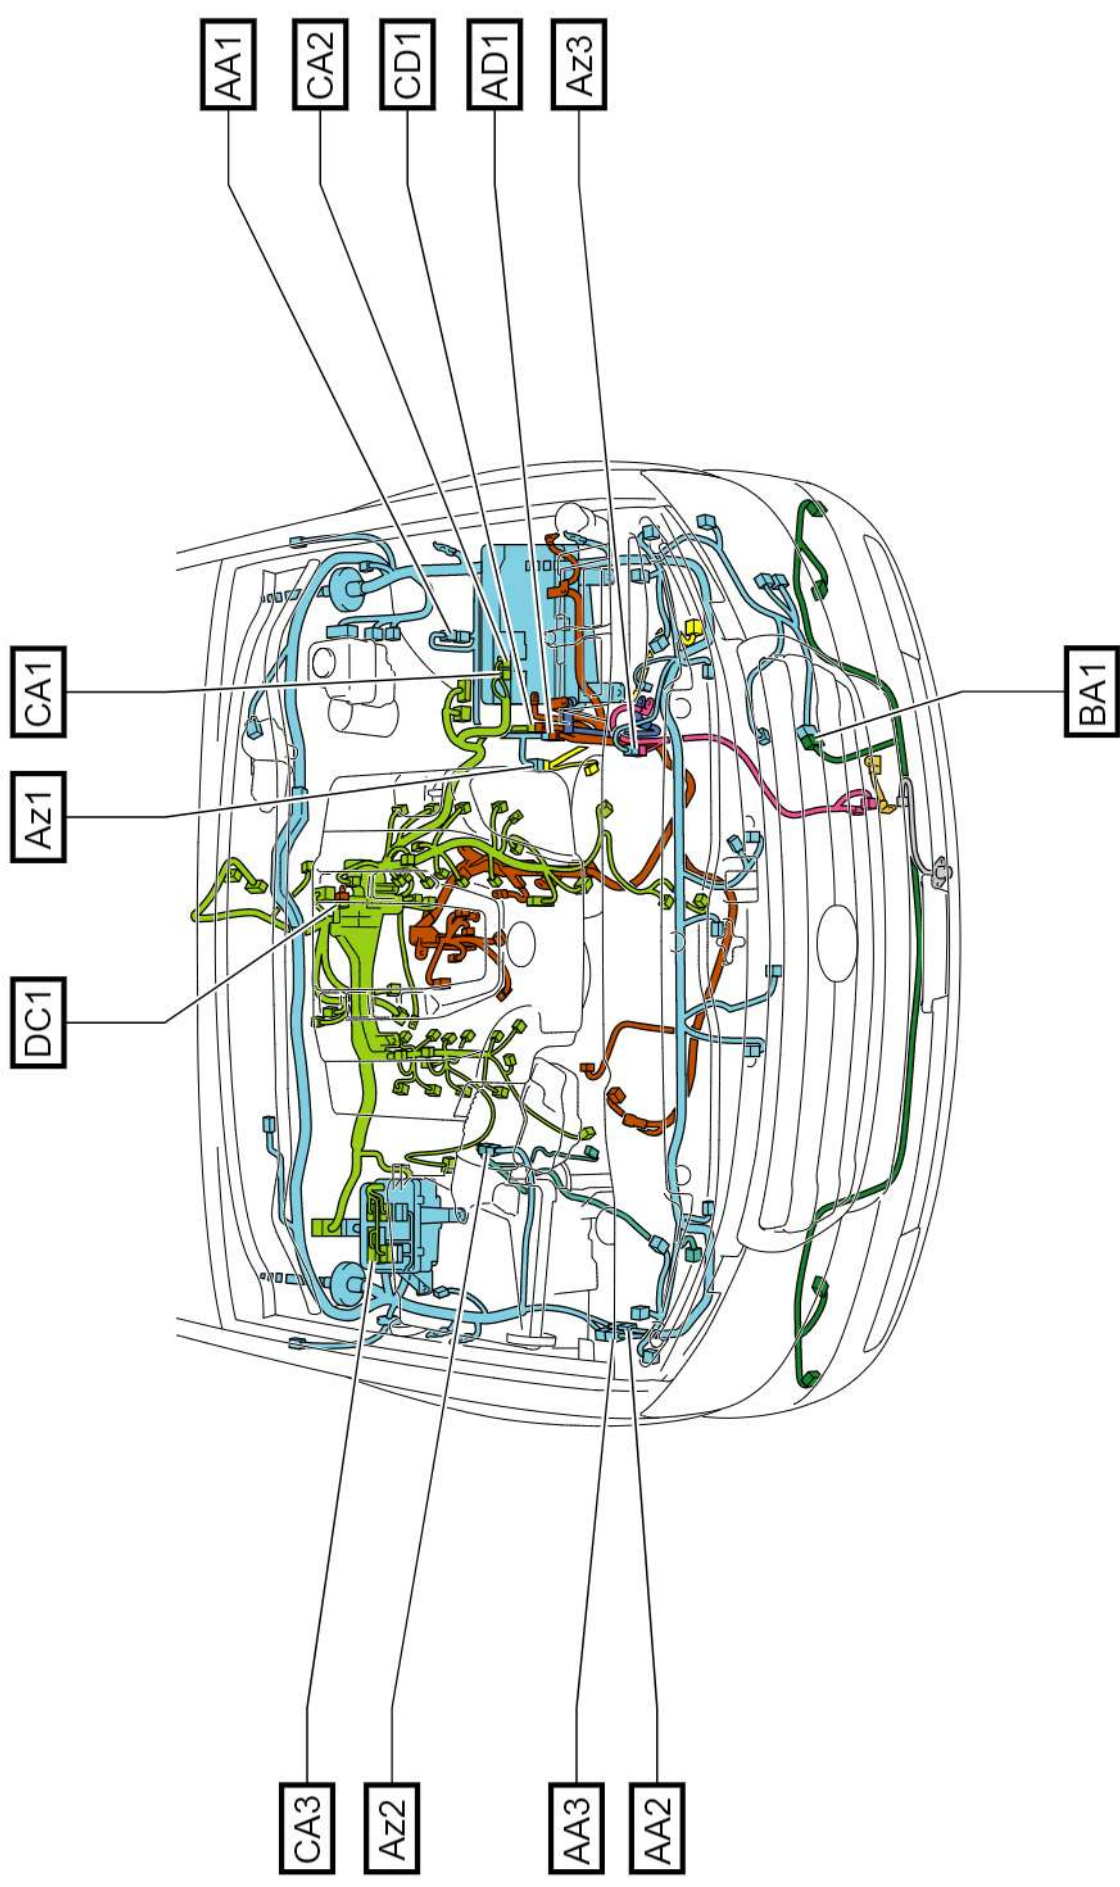


Wire and Wire in Engine Compartment <LHD 2UZ-FE>

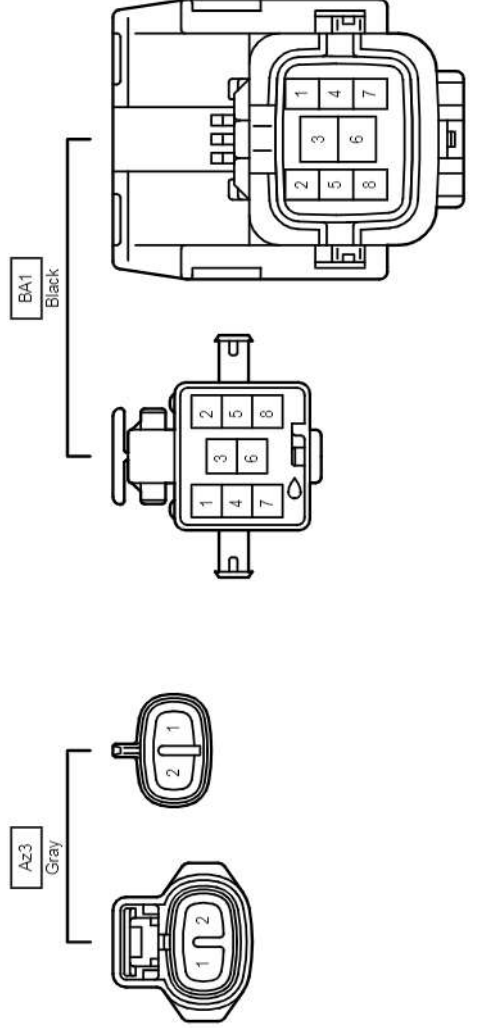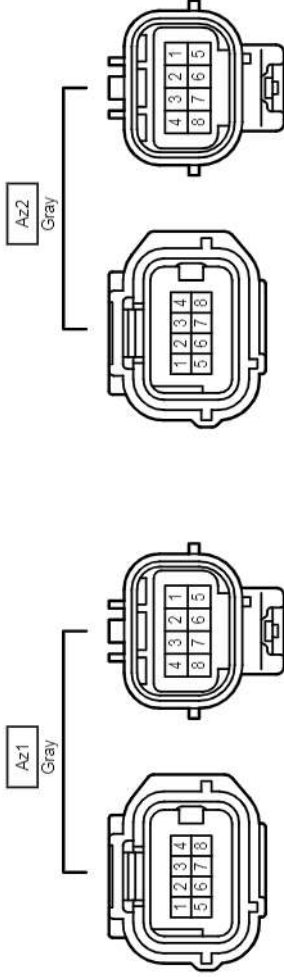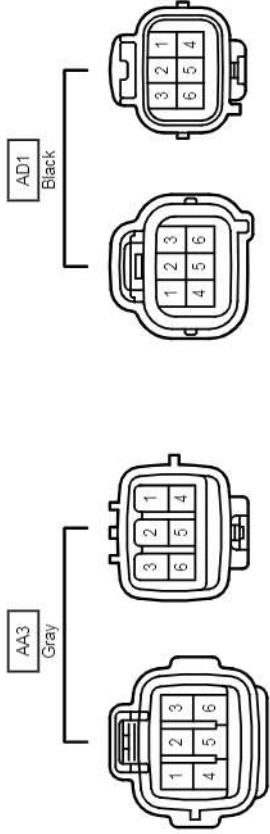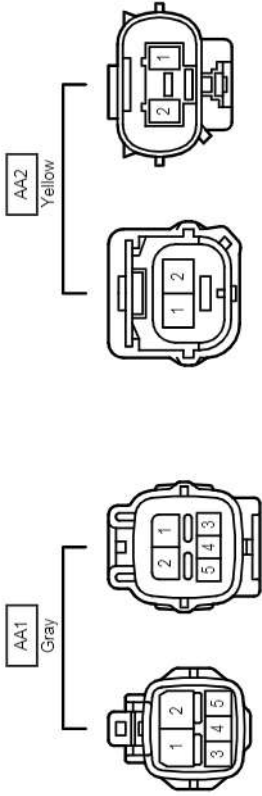


Wire and Wire in Engine Compartment <LHD 2UZ-FE>

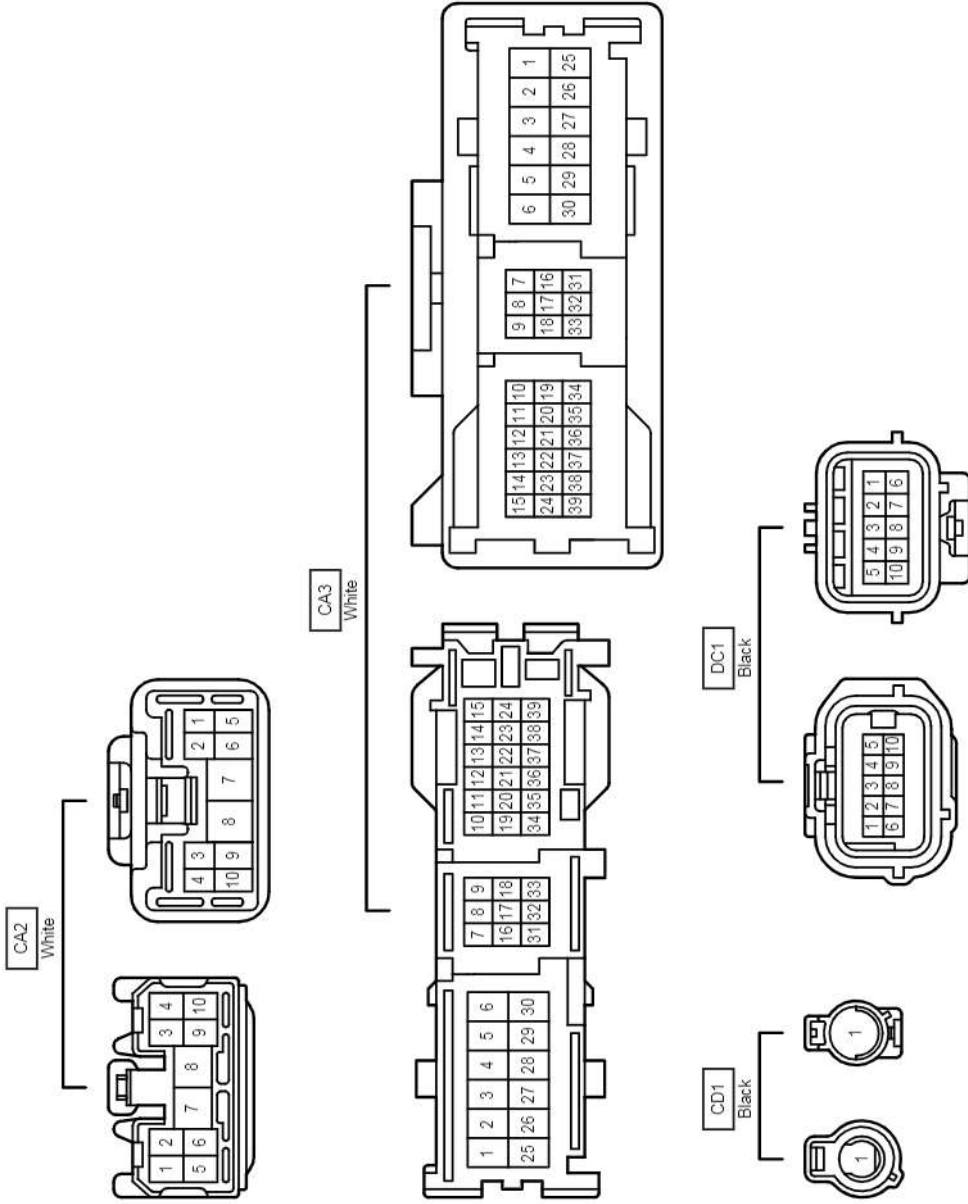

Ground Points in Engine Compartment <RHD 2UZ-FE>

















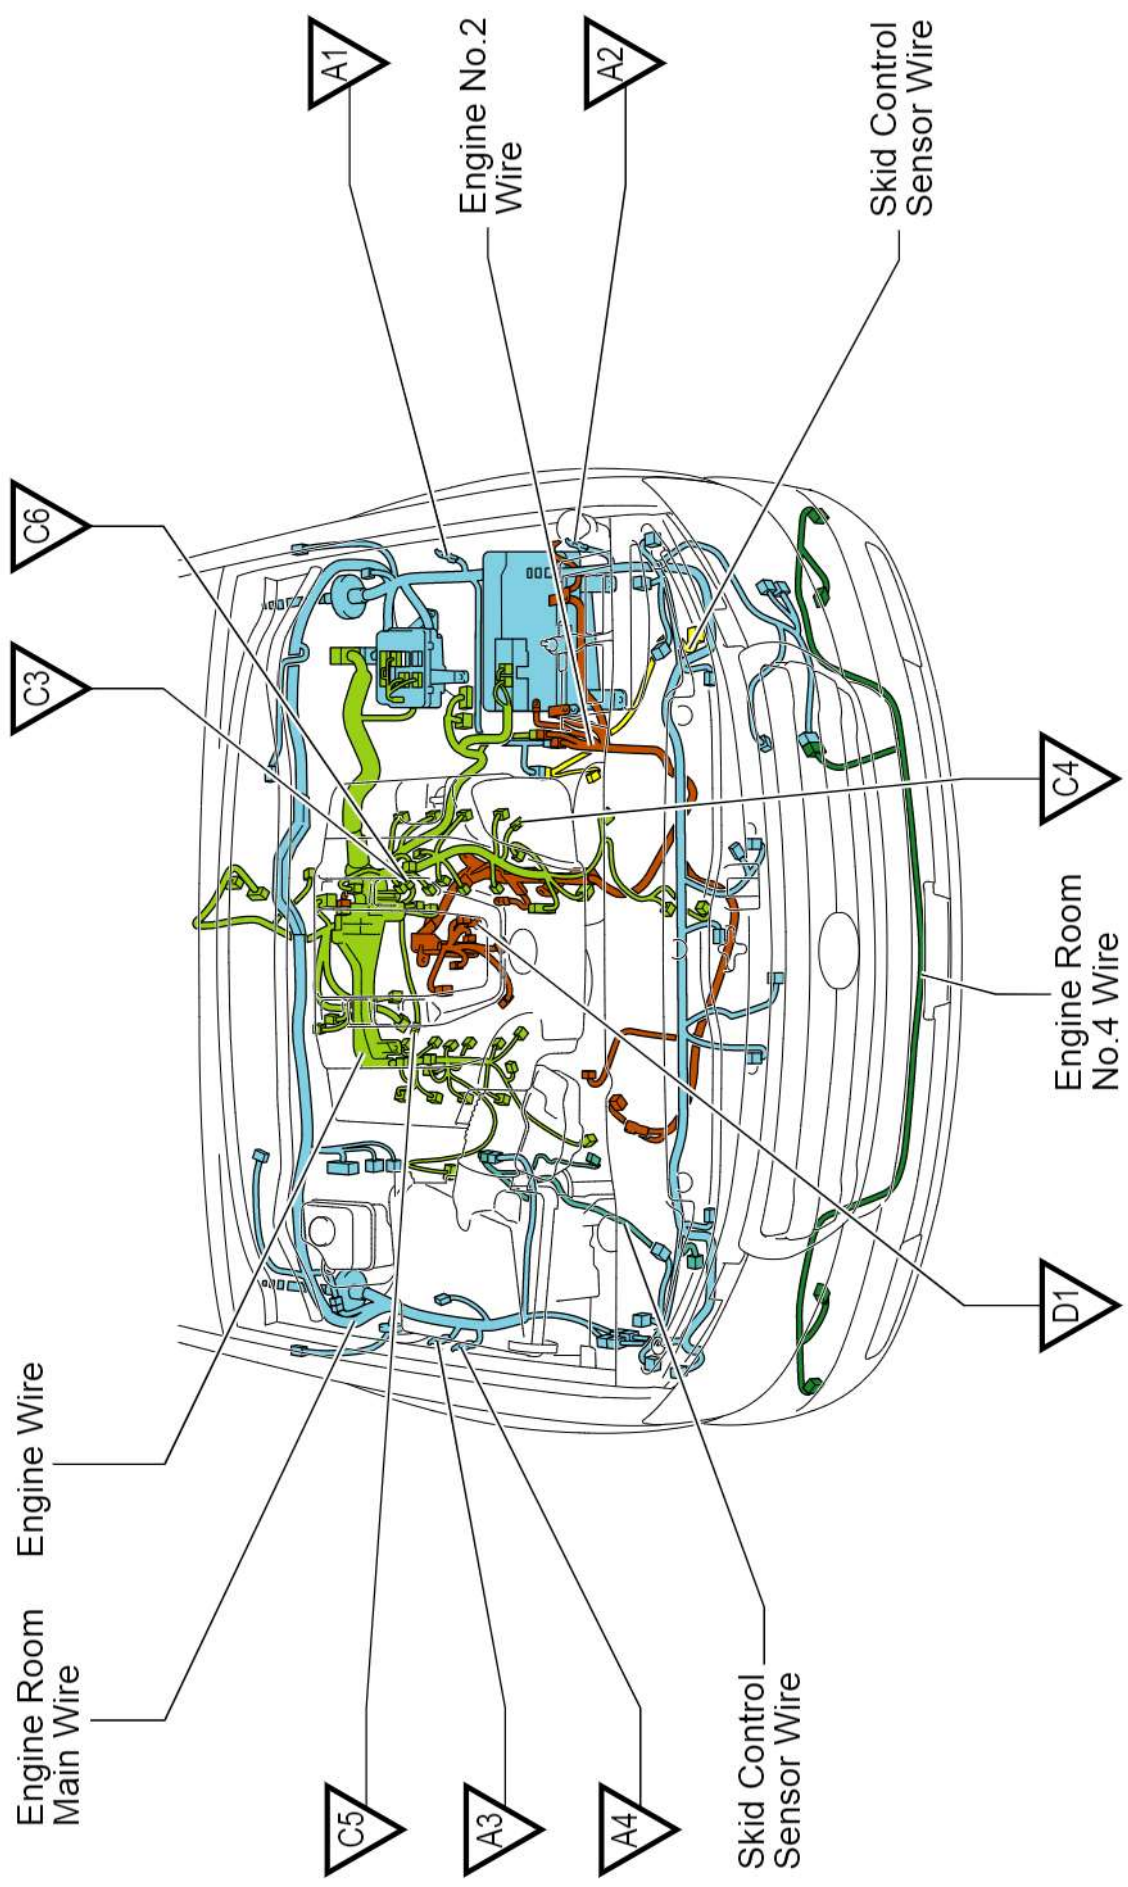


Position of Parts in Engine Compartment <RHD 2UZ-FE>

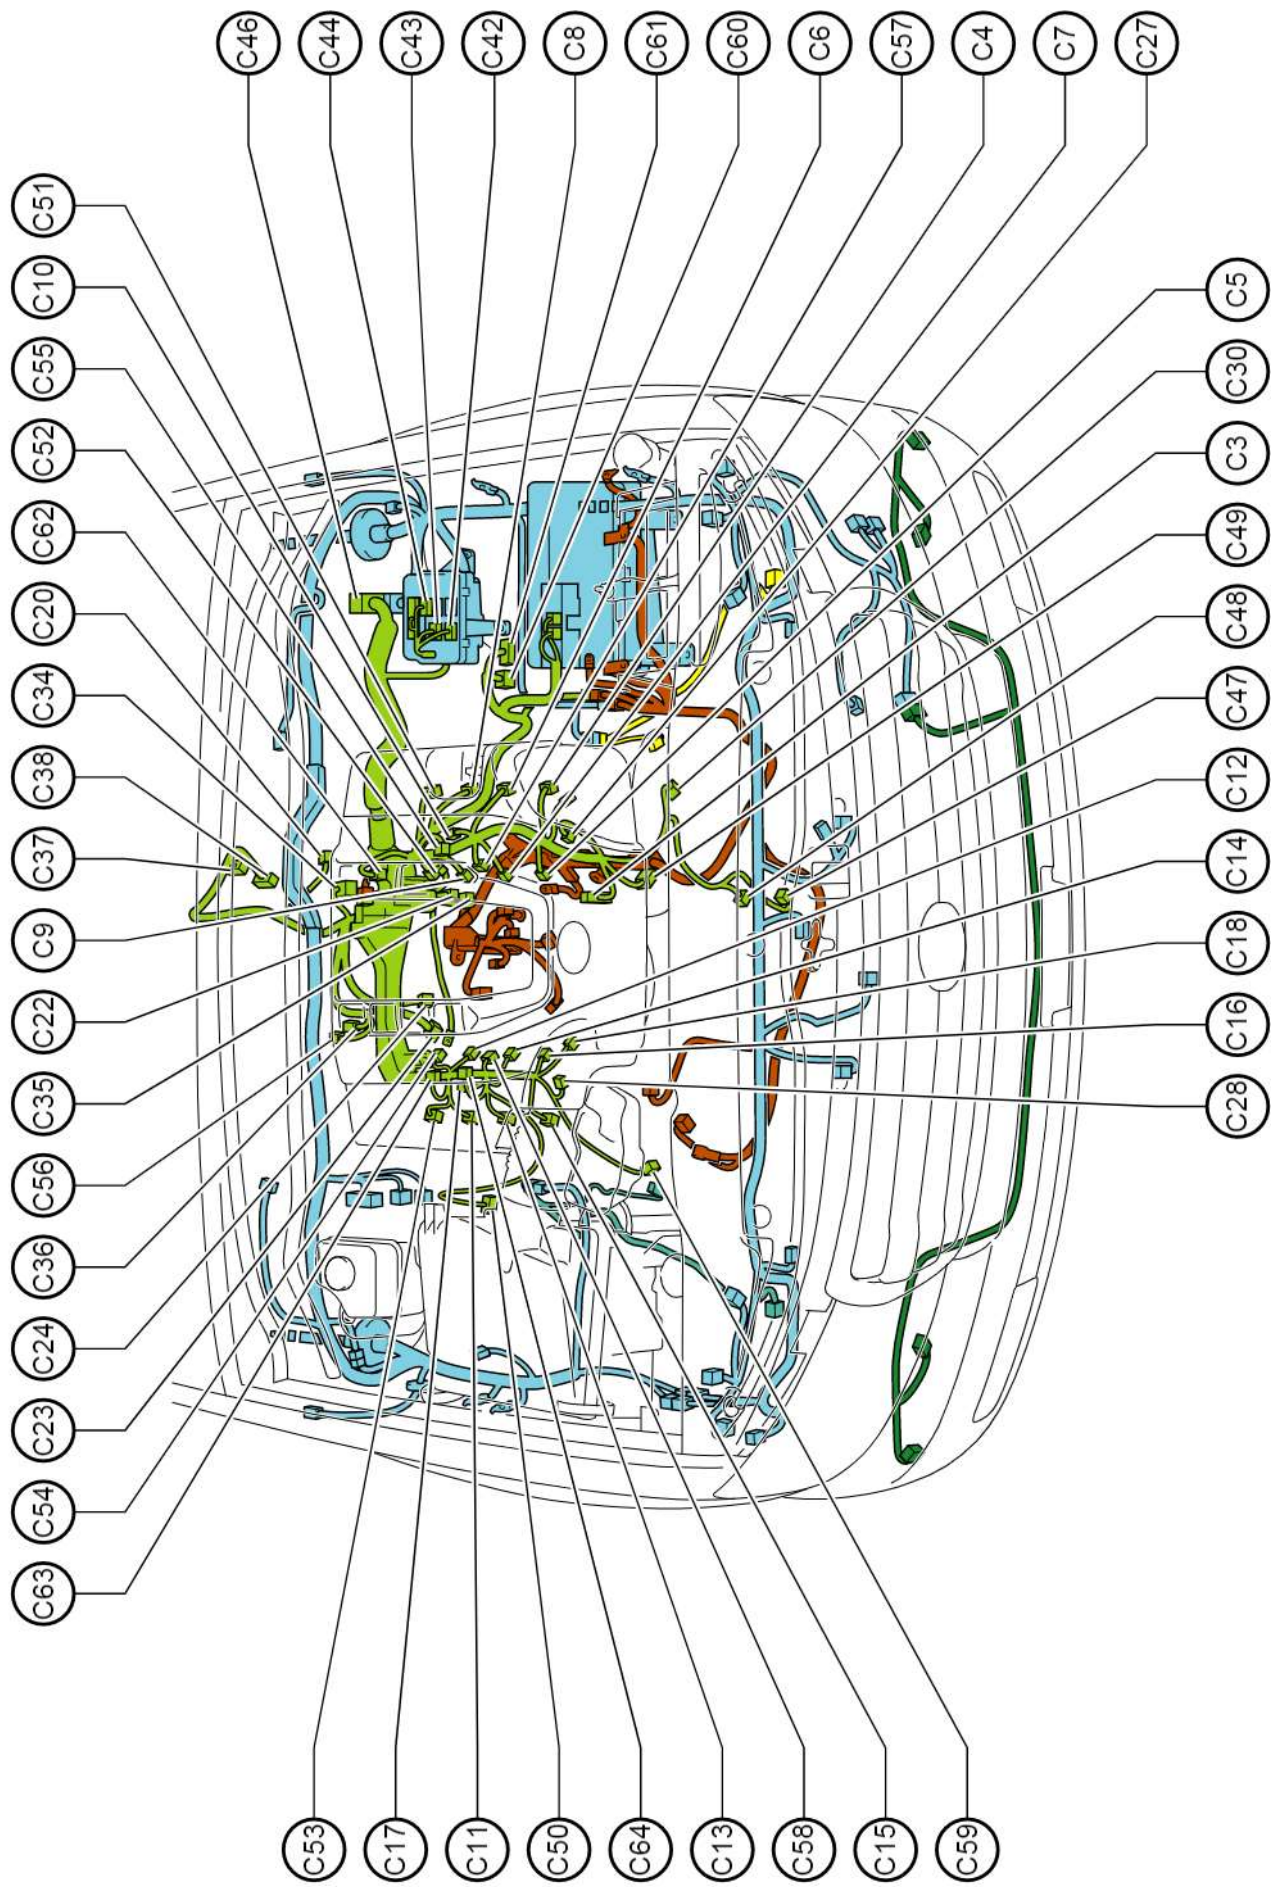

- C 3 Throttle Body Assembly
- C 4 Ignition Coil Assembly No.1
- C 5 Fuel Injector Assembly No.1
- C 6 Ignition Coil Assembly No.3
- C 7 Fuel Injector Assembly No.3
- C 8 Ignition Coil Assembly No.5
- C 9 Fuel Injector Assembly No.5
- C 10 Noise Filter (Ignition Bank 1)
- C 11 Ignition Coil Assembly No.6
- C 12 Fuel Injector Assembly No.6
- C 13 Ignition Coil Assembly No.4
- C 14 Fuel Injector Assembly No.4
- C 15 Ignition Coil Assembly No.2
- C 16 Fuel Injector Assembly No.2
- C 17 Noise Filter (Ignition Bank 2)
- C 18 E.F.I. Engine Coolant Temperature Sensor
- C 20 Oxygen Sensor (Bank 1 Sensor 2)
- C 22 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- C 23 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
- C 24 Park/Neutral Position Switch
- C 27 Camshaft Timing Oil Control Valve (Bank 1)
- C 28 Camshaft Timing Oil Control Valve (Bank 2)
- C 30 Cooler Compressor Assembly
- C 34 Electronically Controlled Transmission Solenoid
- C 35 Transmission Revolution Sensor (Turbine)
- C 36 Transmission Revolution Sensor (Counter Gear)
- C 37 Transfer Shift Actuator Assembly
- C 38 Transfer Shift Actuator Assembly
- C 42 Junction Connector
- C 43 Junction Connector
- C 44 Junction Connector
- C 46 ECM
- C 47 Oil Pressure Sender Gage Assembly
- C 48 Crankshaft Position Sensor
- C 49 Camshaft Position Sensor
- C 50 Mass Air Flow Meter
- C 51 Ignition Coil Assembly No.7
- C 52 Fuel Injector Assembly No.7
- C 53 Ignition Coil Assembly No.8
- C 54 Fuel Injector Assembly No.8
- C 55 Purge VSV
- C 56 Oxygen Sensor (Bank 2 Sensor 2)
- C 57 VVT Sensor (Bank 1)
- C 58 VVT Sensor (Bank 2)

 
Position of Parts in Engine Compartment <RHD 2UZ-FE>

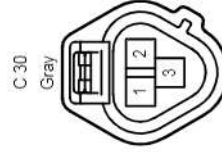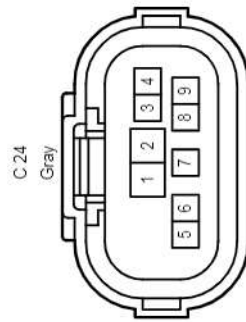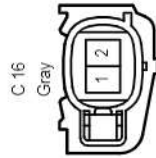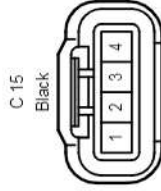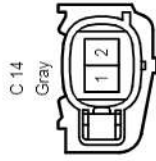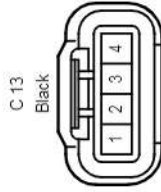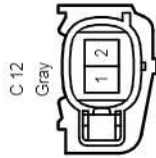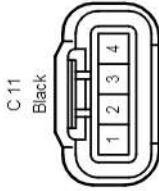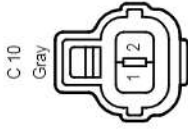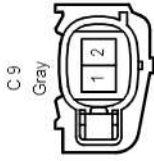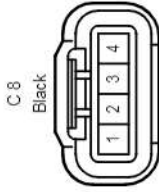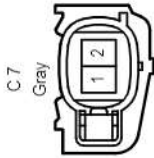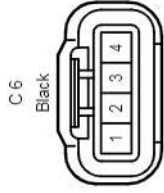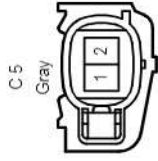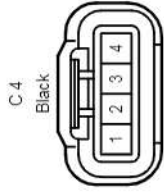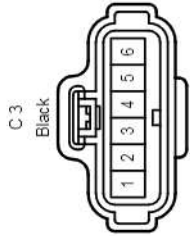

C.34  
Gray

C.35  
Black


C.36  
Black

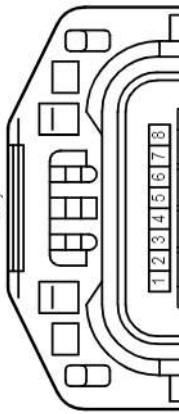




Position of Parts in Engine Compartment <RHD 2UZ-FE>


C 43  
White

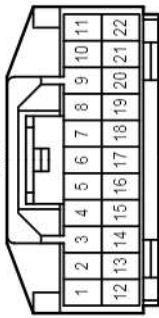

C 44  
Blue

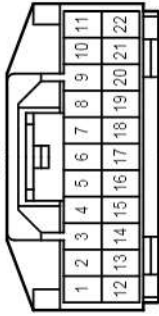

C 46  
Black

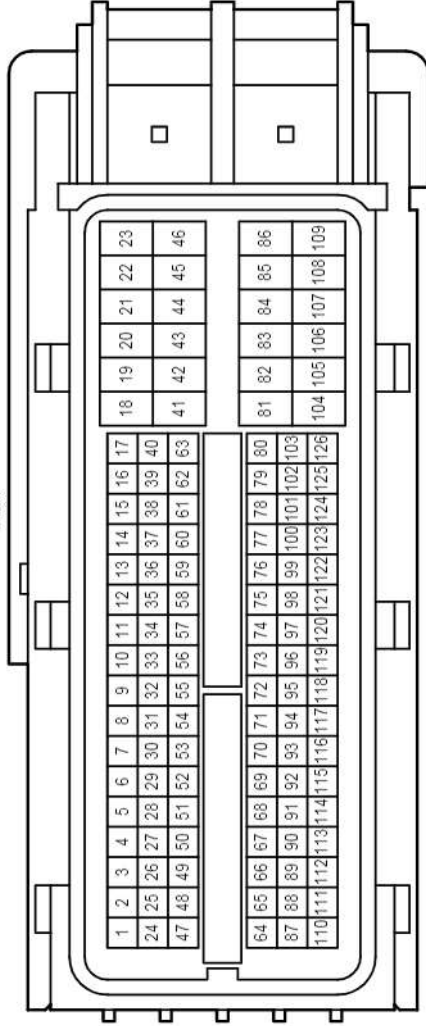


C 47  
Black




C 48  
Dark Gray




C 49  
Gray

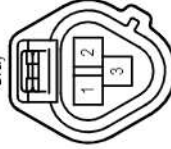

C 50  
Black

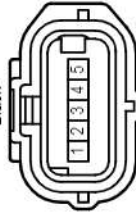


C 51  
Black

 

C 52  
Gray



 
C 53  
Black



C 54  
Gray



C 55  
Black

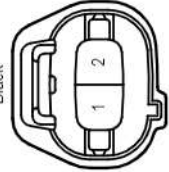

C 56  
Dark Gray



C 57  
Dark Gray



C 58  
Dark Gray




C 59  
Gray



C 60  
Black




















Position of Parts in Engine Compartment <RHD 2UZ-FE>

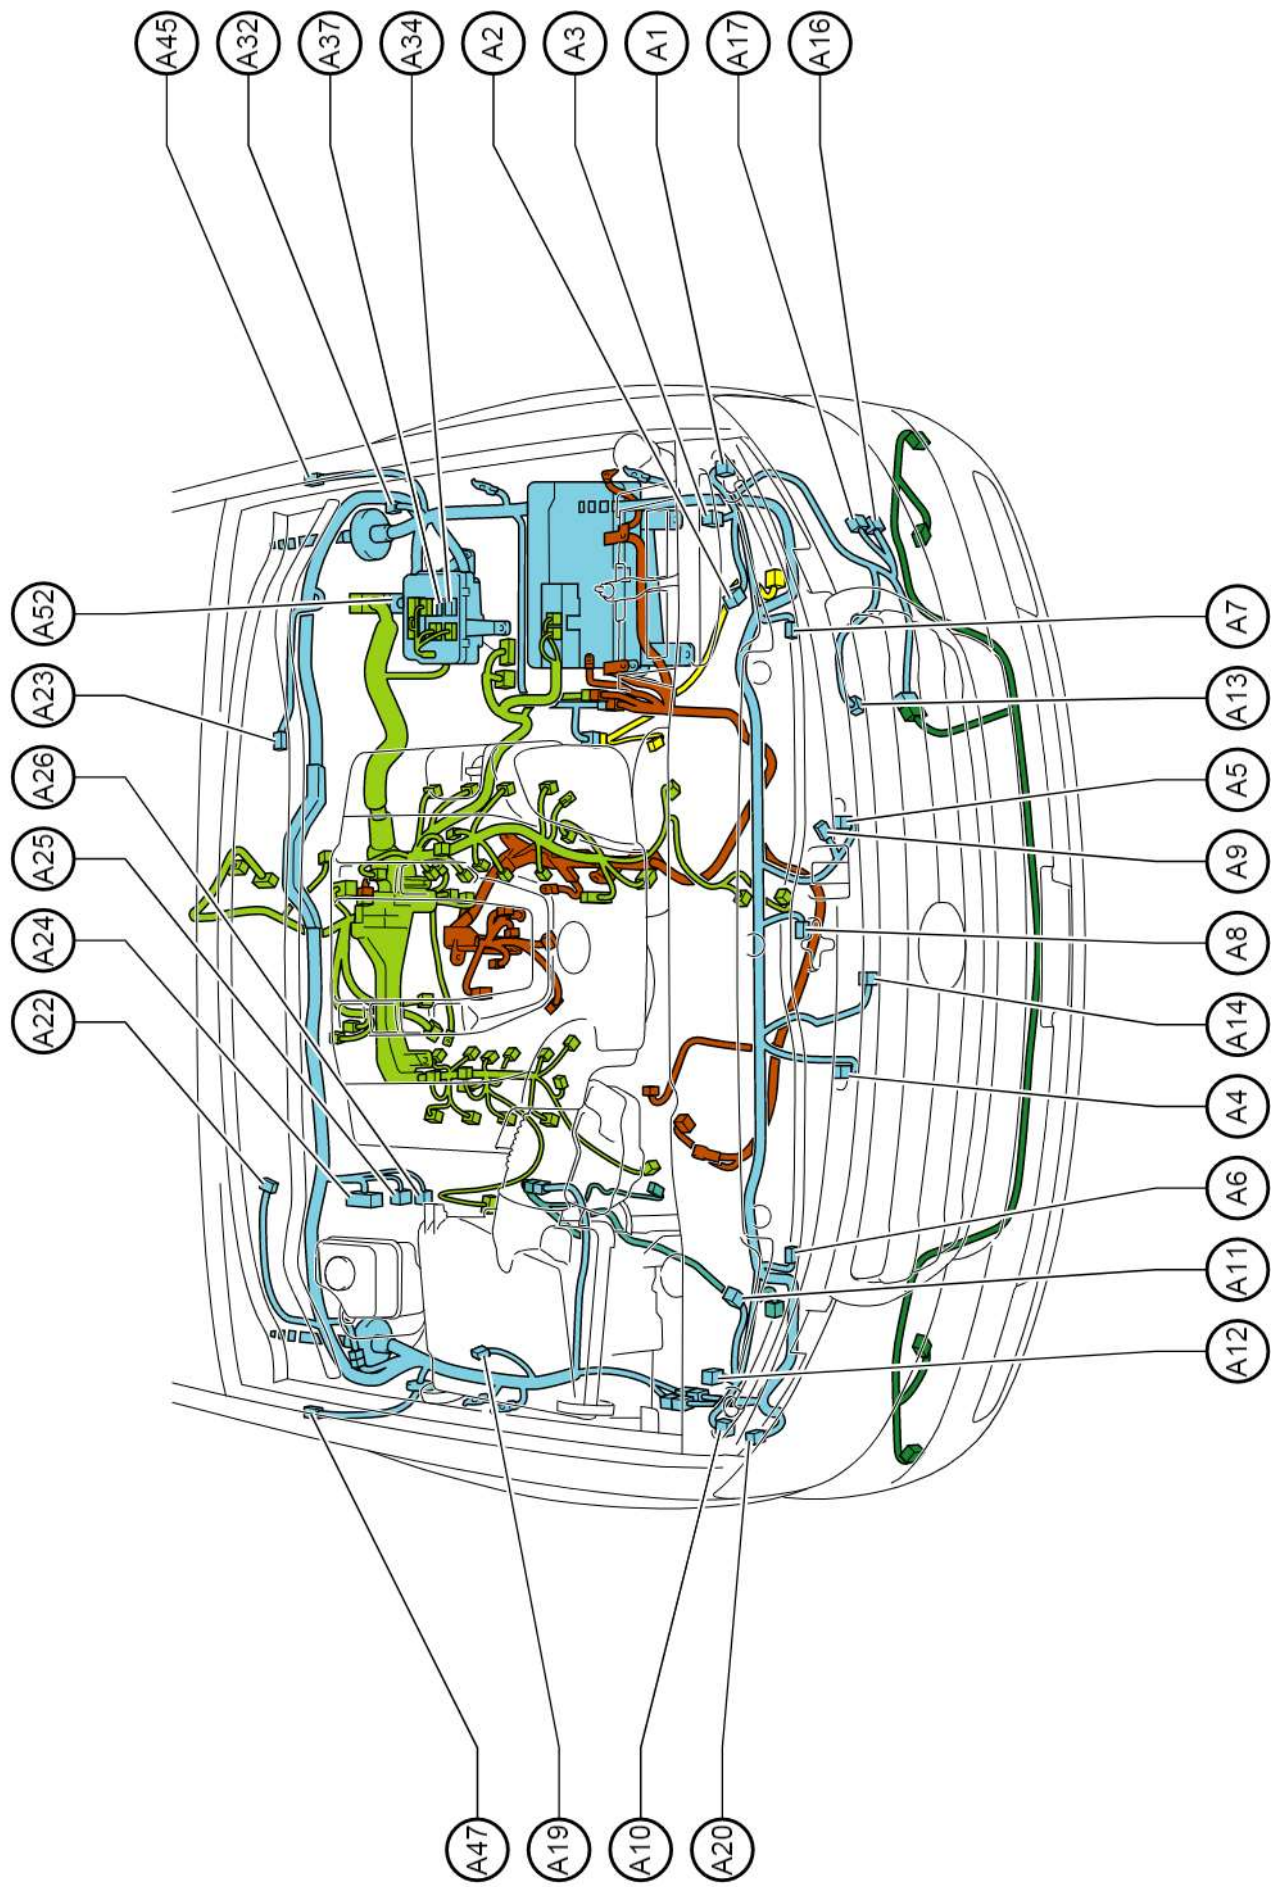


A	1	Headlight Assembly LH
A	2	Headlight Assembly LH
A	3	Headlight Assembly LH
A	4	High Pitched Horn Assembly
A	5	Low Pitched Horn Assembly
A	6	Front Airbag Sensor RH
A	7	Front Airbag Sensor LH
A	8	Engine Hood Courtesy Switch
A	9	Condenser Blower Motor Assembly
A	10	Headlight Assembly RH
A	11	Headlight Assembly RH
A	12	Headlight Assembly RH
A	13	A/C Pressure Sensor
A	14	Ambient Temperature Sensor
A	16	Windshield Washer Motor and Pump Assembly
A	17	Headlight Cleaner Control Relay and Motor
A	19	Security Horn Assembly
A	20	Wireless Door Lock Buzzer
A	22	Windshield Wiper Motor Assembly
A	23	Front Wiper Deicer (Windshield Glass)
A	24	Skid Control ECU with Actuator Assembly
A	25	Skid Control ECU with Actuator Assembly
A	26	Brake Fluid Level Warning Switch (Brake Master Cylinder Reservoir Assembly)
A	32	Noise Filter (Ghost Buster)
A	34	Junction Connector
A	37	Junction Connector
A	45	Side Turn Signal Light Assembly LH
A	47	Side Turn Signal Light Assembly RH
A	52	ECM

   Position of Parts in Engine Compartment <RHD 2UZ-FE>

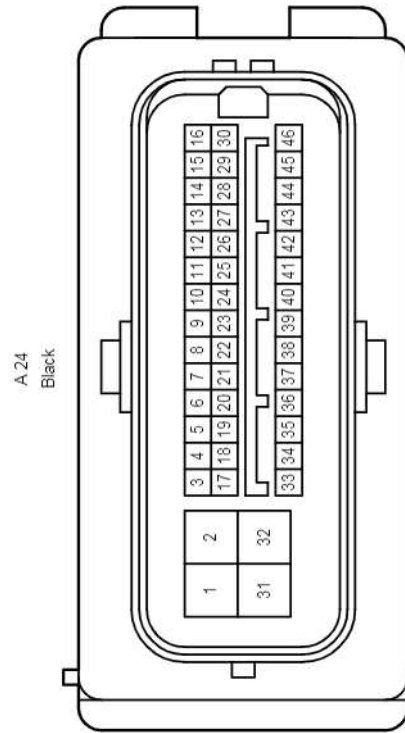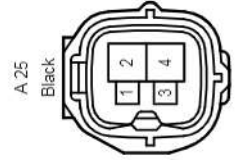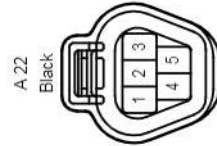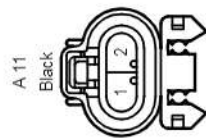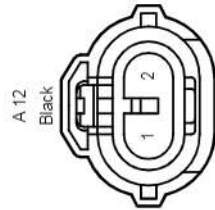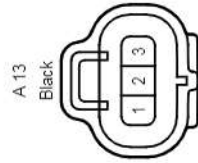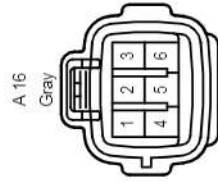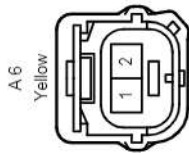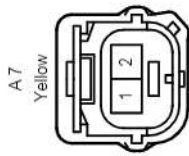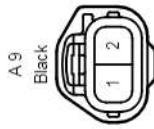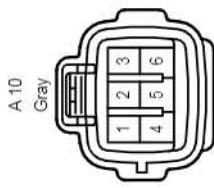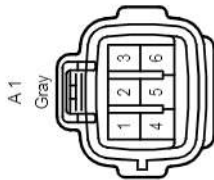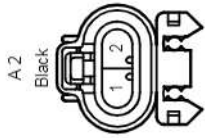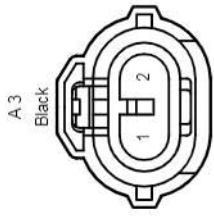

Position of Parts in Engine Compartment <RHD 2UZ-FE>

A 37  
Blue

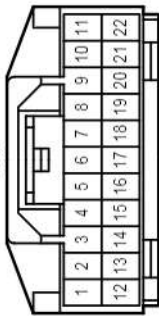


A 45  
Gray




A 47  
Gray



A 52  
Black

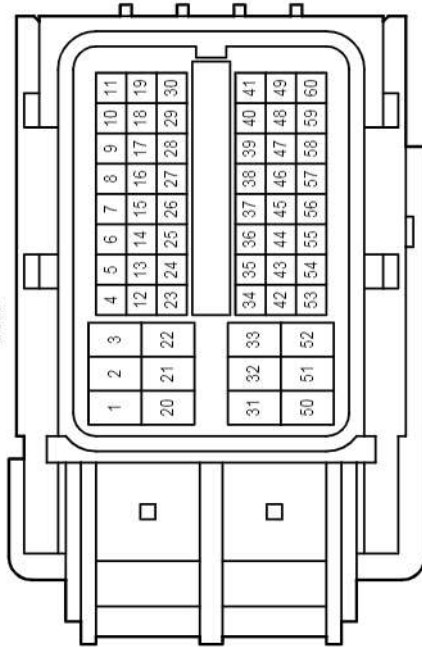

Position of Parts in Engine Compartment <RHD 2UZ-FE>







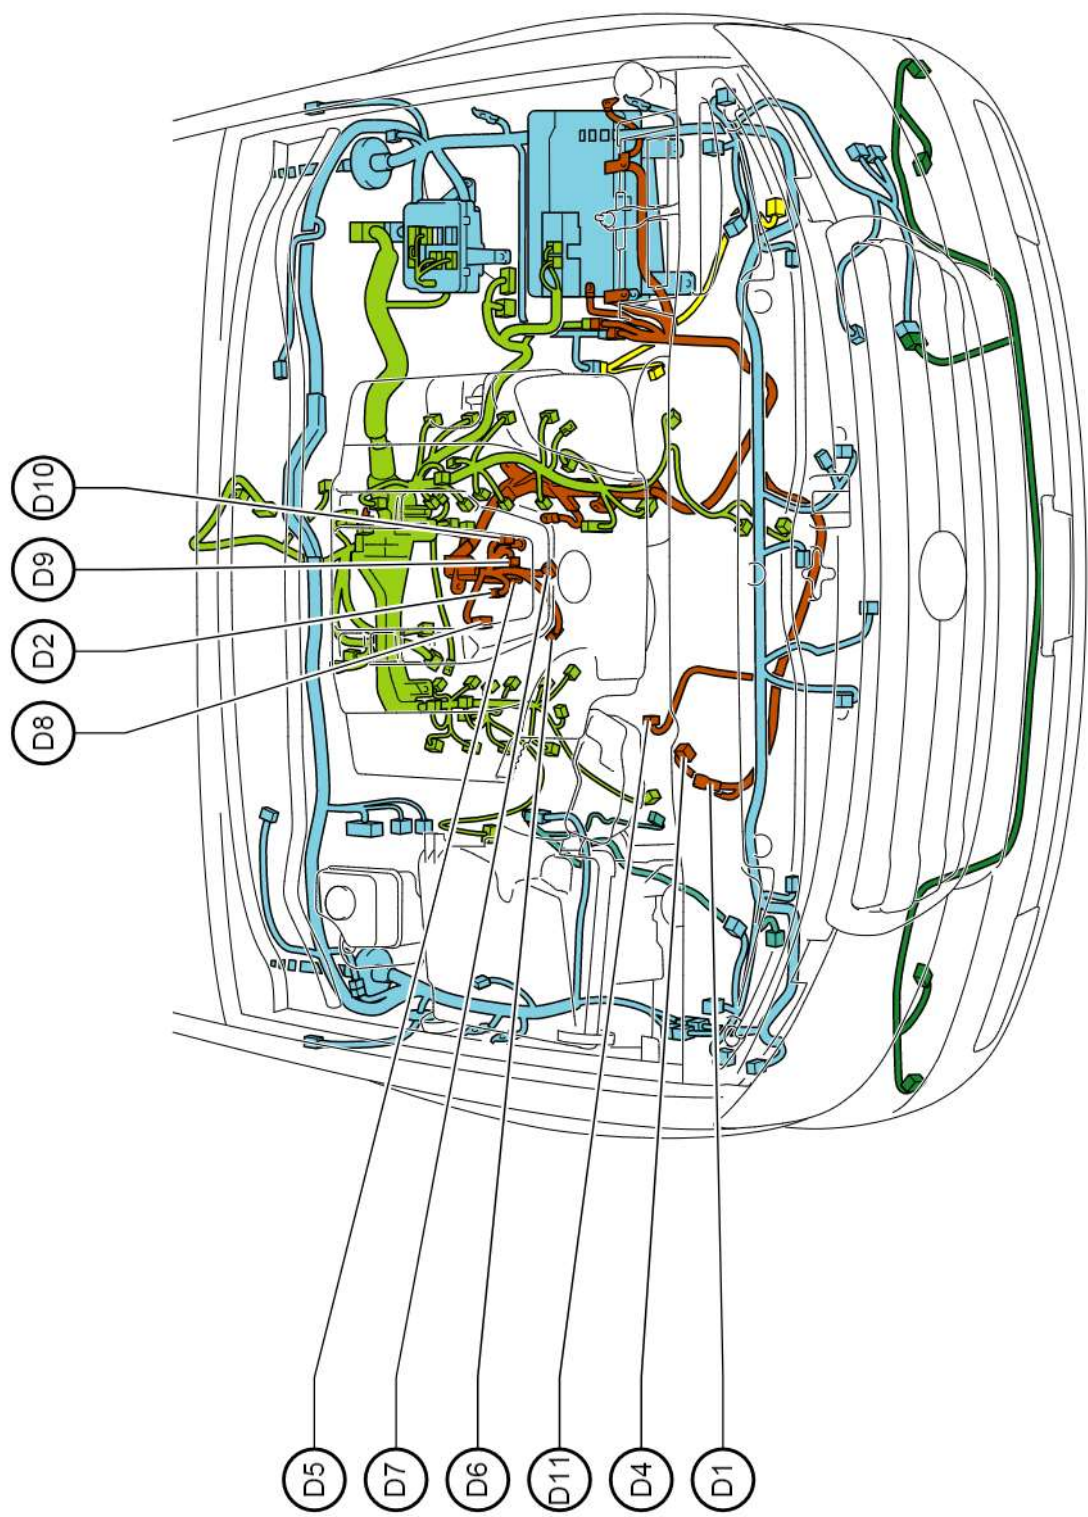


Position of Parts in Engine Compartment <RHD 2UZ-FE>

---


- D 1 Generator Assembly
- D 2 Starter Assembly
- D 4 Generator Assembly
- D 5 Starter Assembly
- D 6 Knock Control Sensor (Bank 2)
- D 7 Knock Control Sensor (Bank 1)
- D 8 Air Pump Assembly
- D 9 Air Pressure Sensor
- D 10 Air Switching Valve
- D 11 Engine Oil Level Sensor

 Position of Parts in Engine Compartment <RHD 2UZ-FE>

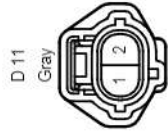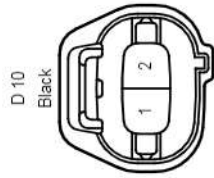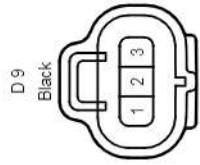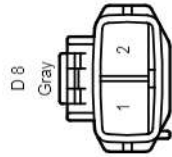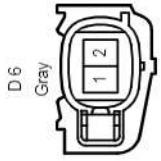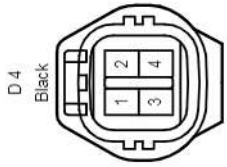



Position of Parts in Engine Compartment <RHD 2UZ-FE>







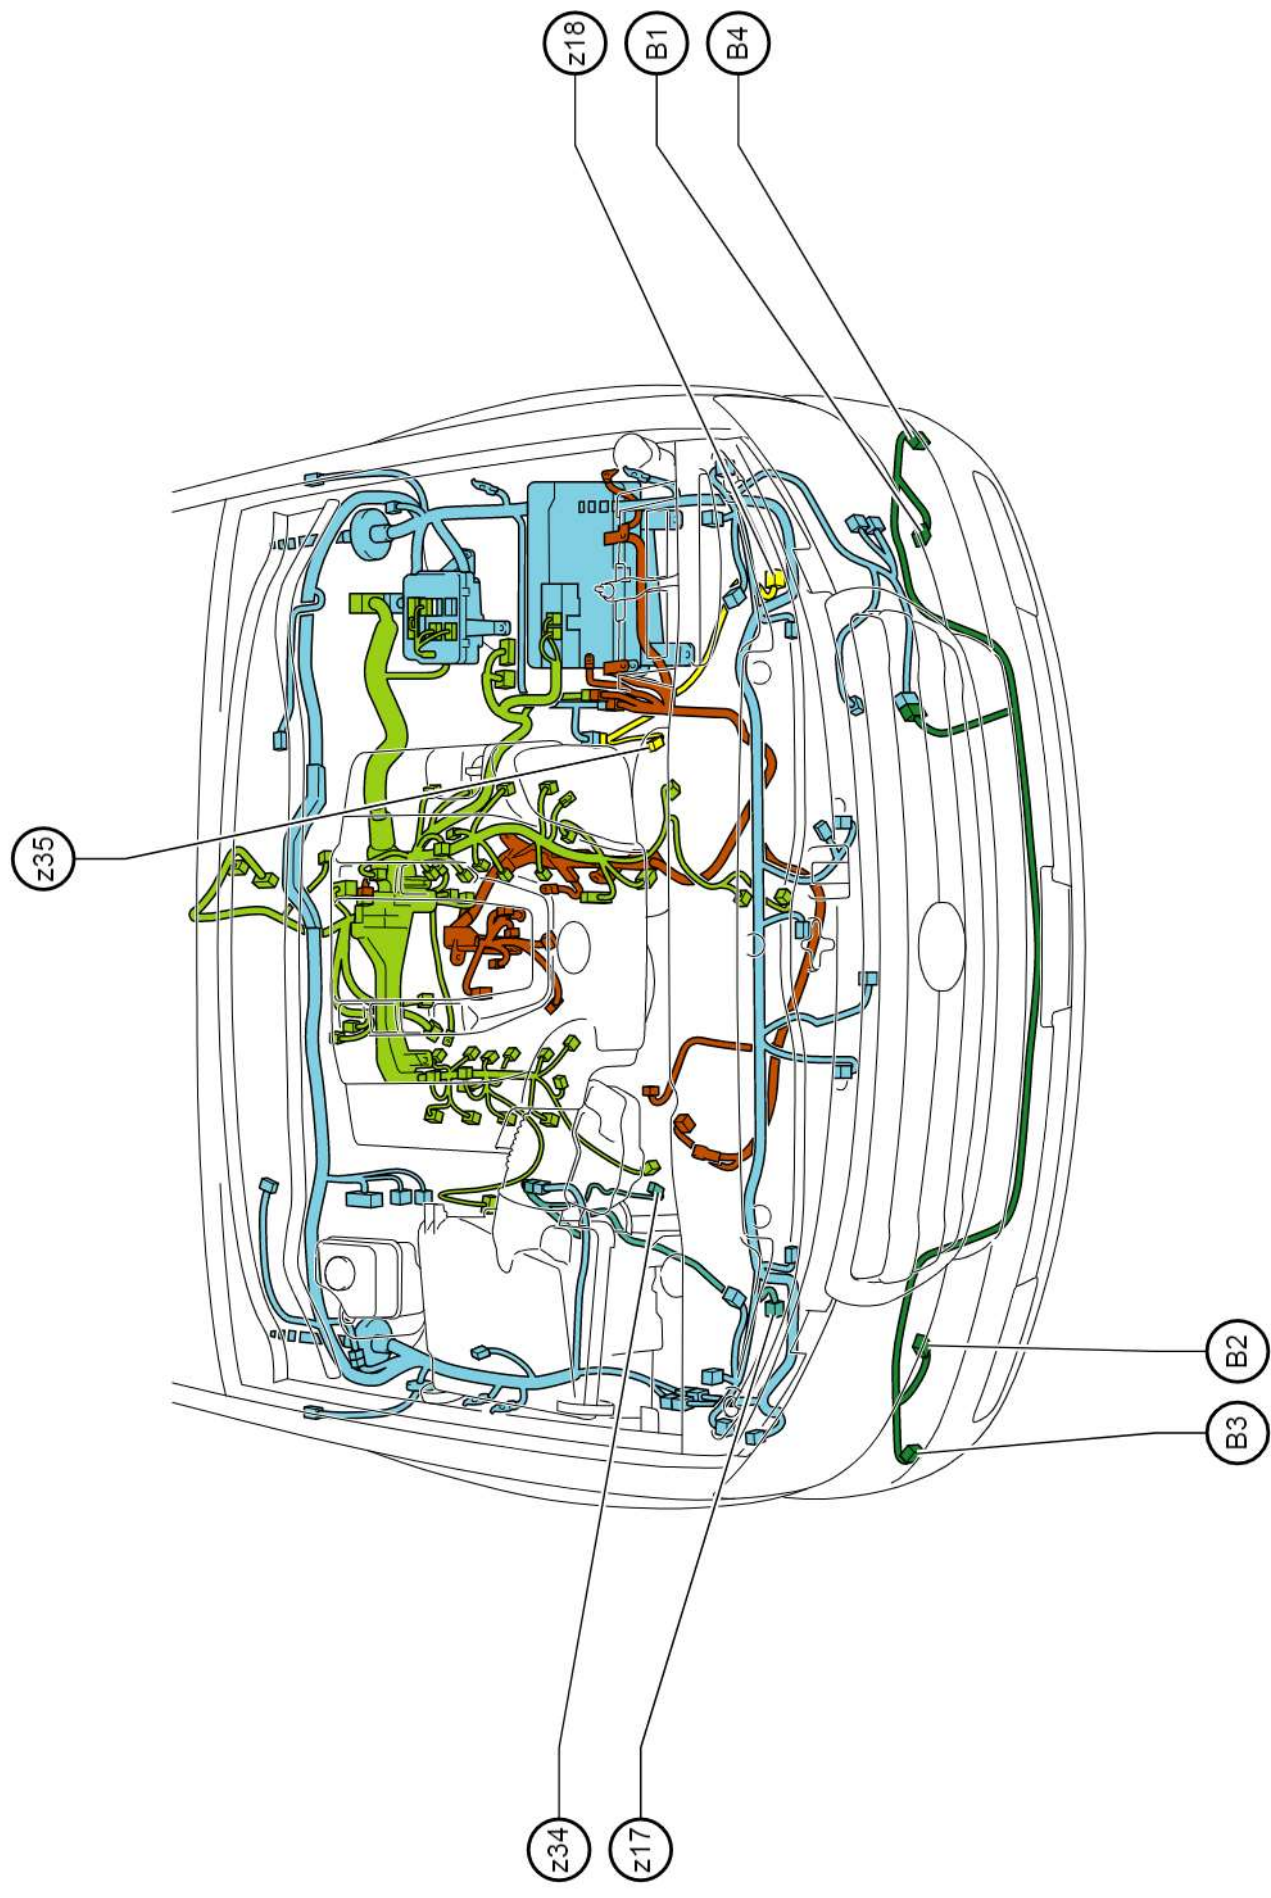


Position of Parts in Engine Compartment <RHD 2UZ-FE>


---

- B 1 Fog Light Assembly LH
- B 2 Fog Light Assembly RH
- B 3 No.1 Ultrasonic Sensor RH
- B 4 No.1 Ultrasonic Sensor LH
  
- Z 17 Front Speed Sensor RH
- Z 18 Front Speed Sensor LH
- Z 34 Front Height Control Sensor Sub-Assembly RH
- Z 35 Front Height Control Sensor Sub-Assembly LH





Position of Parts in Engine Compartment <RHD 2UZ-FE>

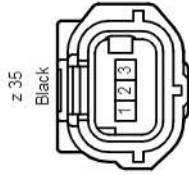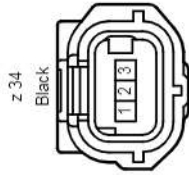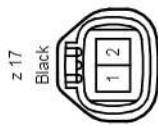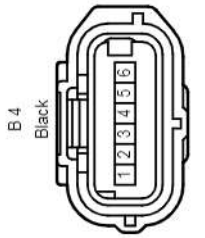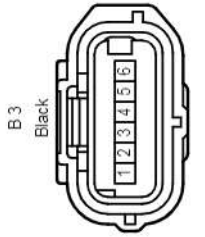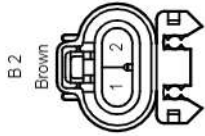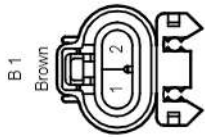


Wire and Wire in Engine Compartment <RHD 2UZ-FE>

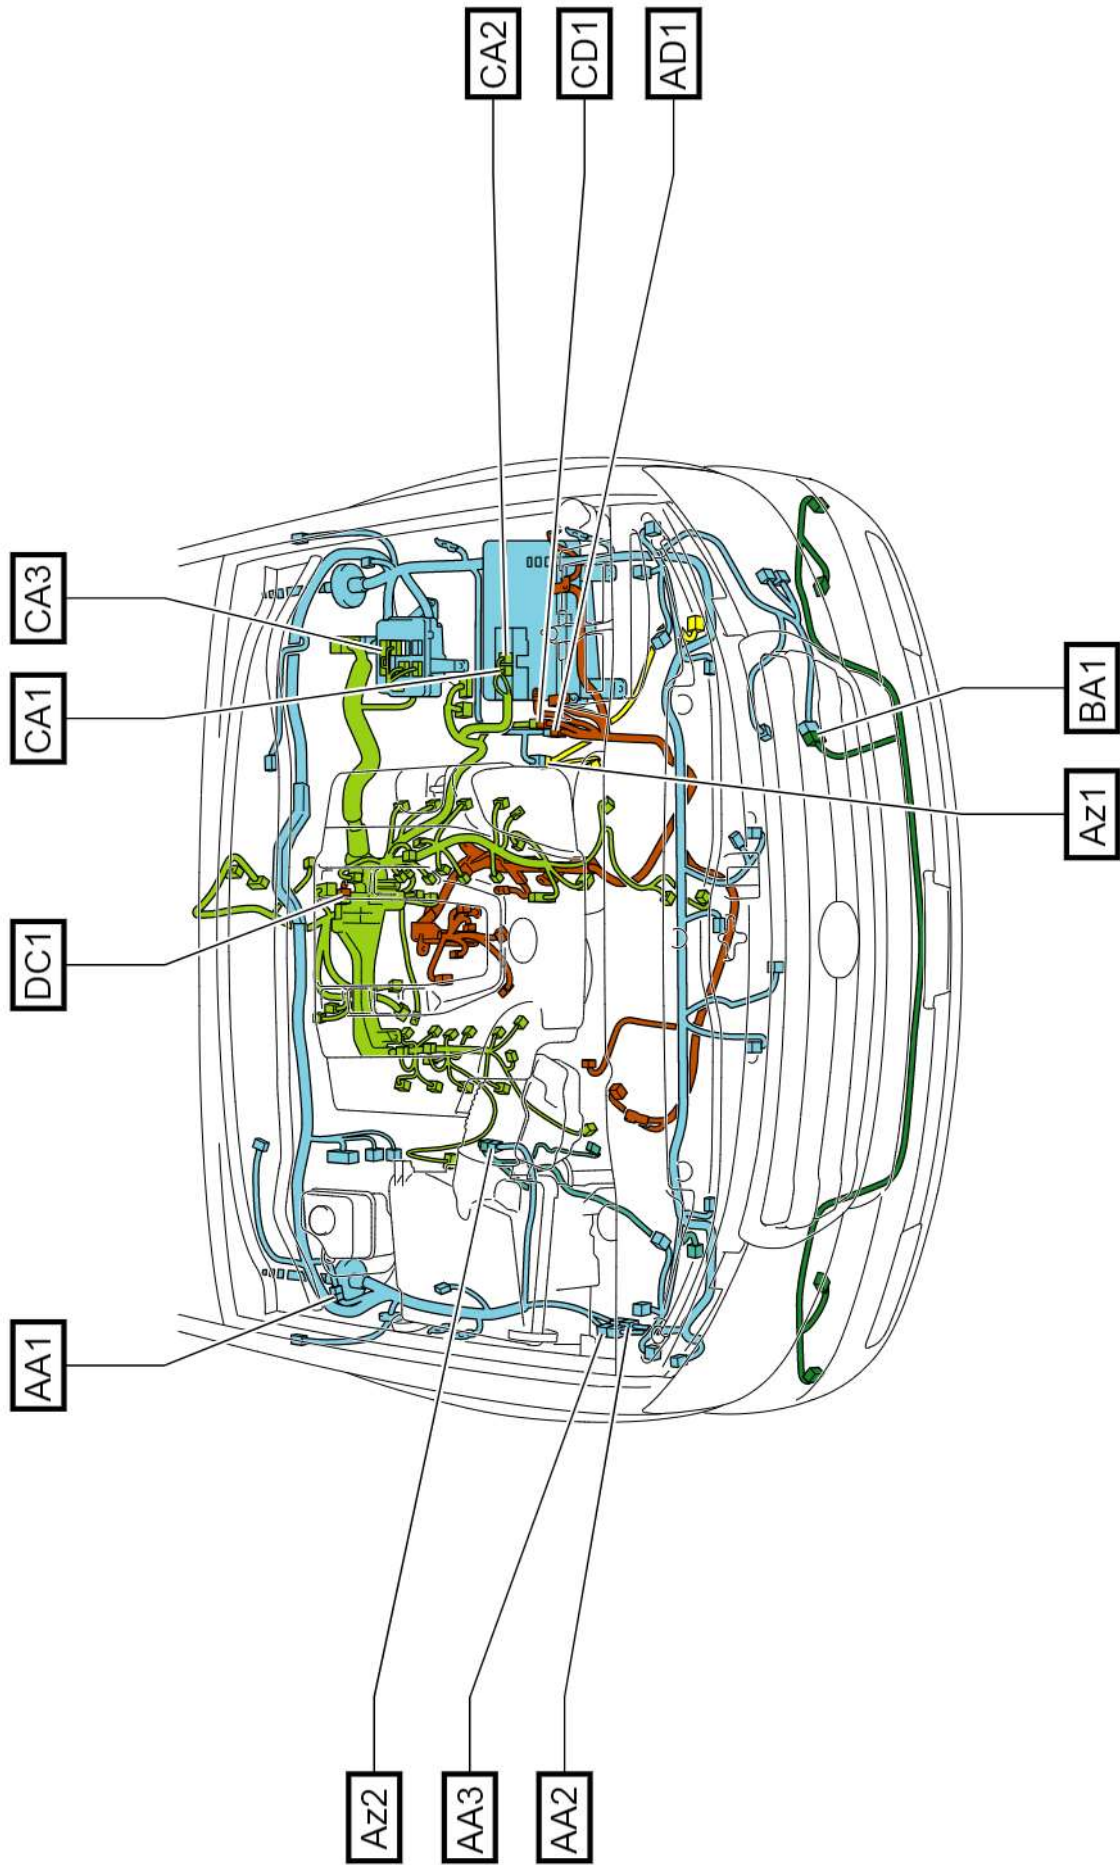

Wire and Wire in Engine Compartment <RHD 2UZ-FE>

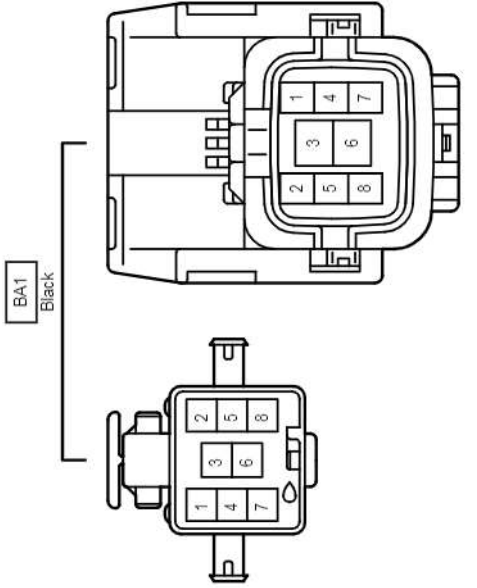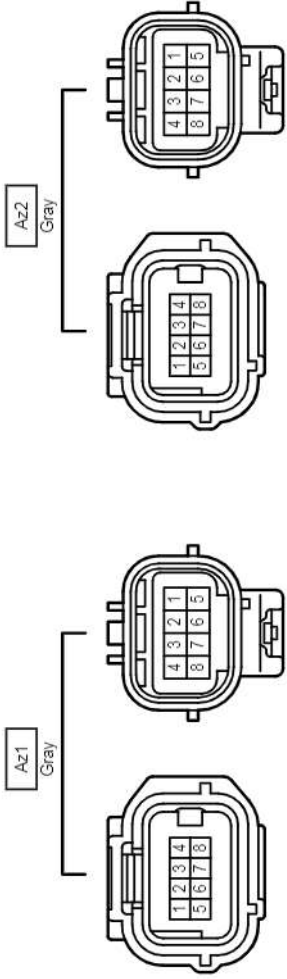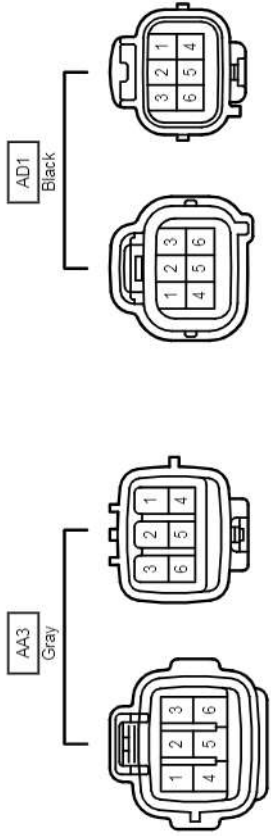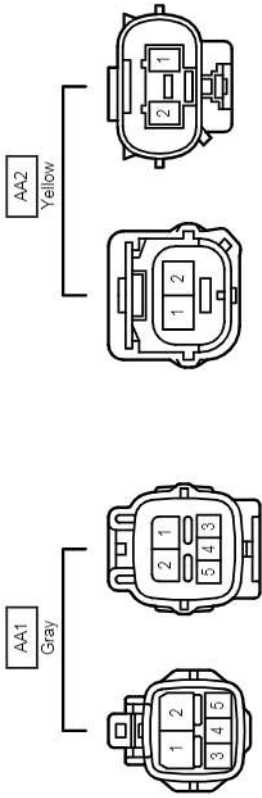


Wire and Wire in Engine Compartment <RHD 2UZ-FE>

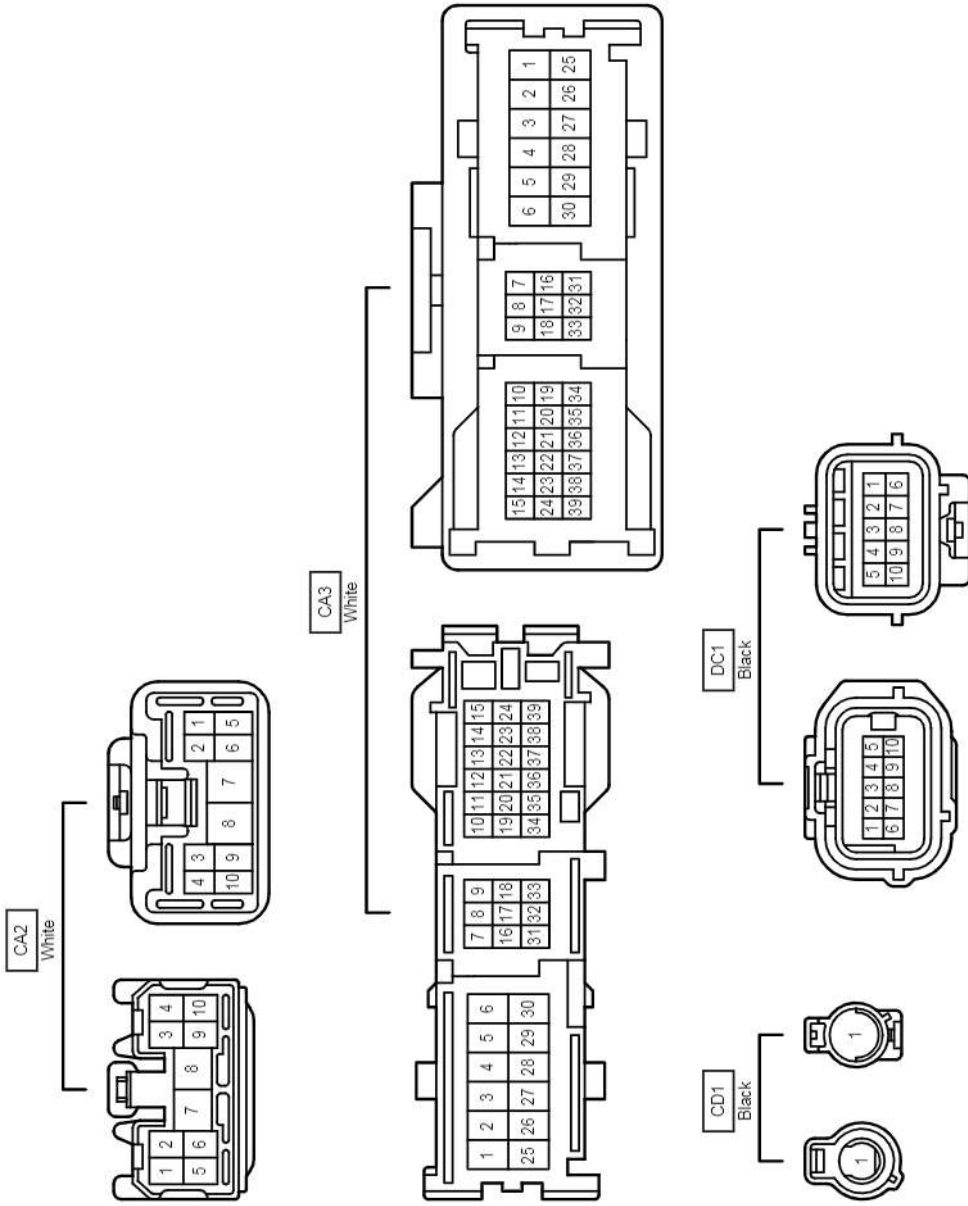


Antenna in Antenna <LHD>

Antenna Cord Sub-Assembly      Navigation Antenna Assembly      Antenna Cord Sub-Assembly

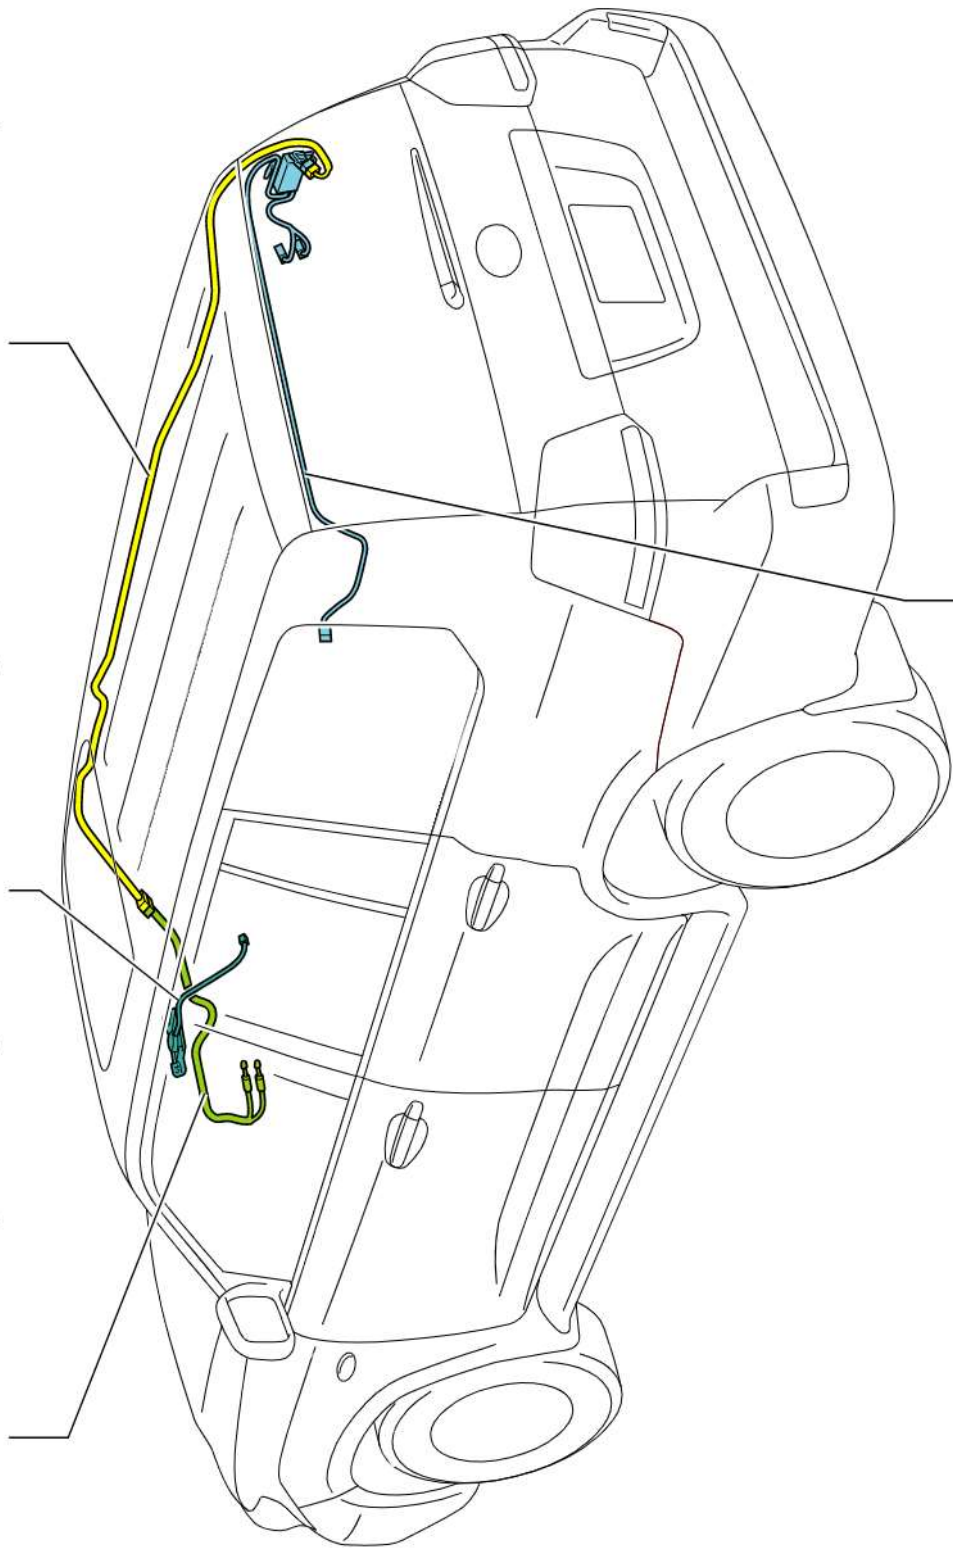

Amplifier Antenna Assembly

Navigation Antenna Assembly    Antenna Cord Sub-Assembly    Antenna Cord Sub-Assembly

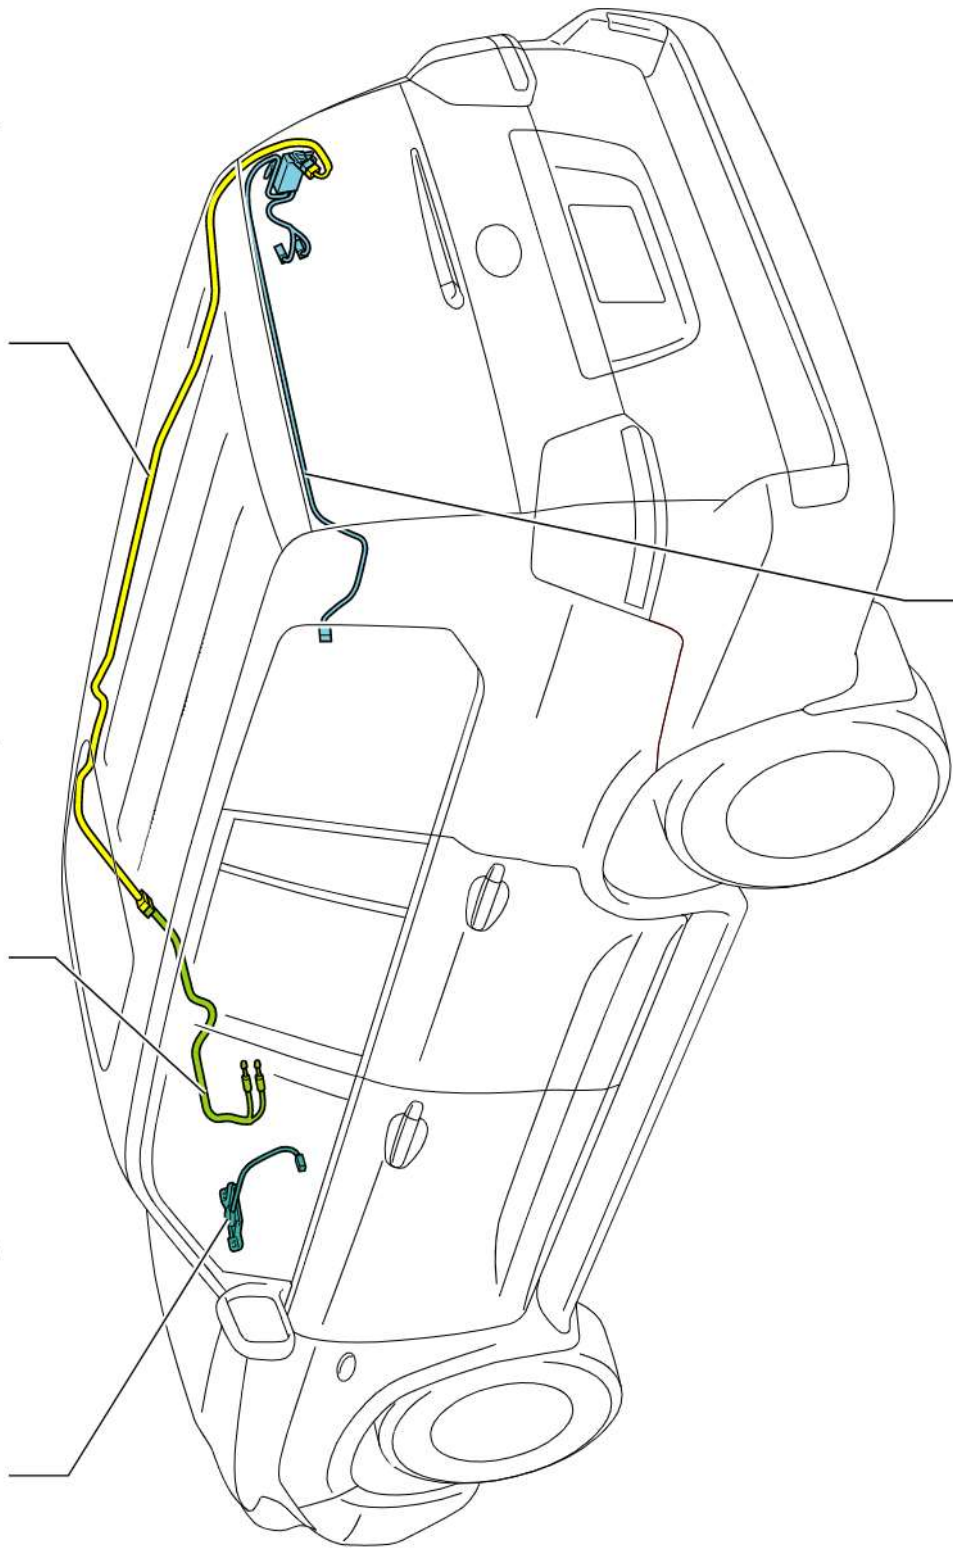


Amplifier Antenna Assembly






Position of Parts in Body <LHD>

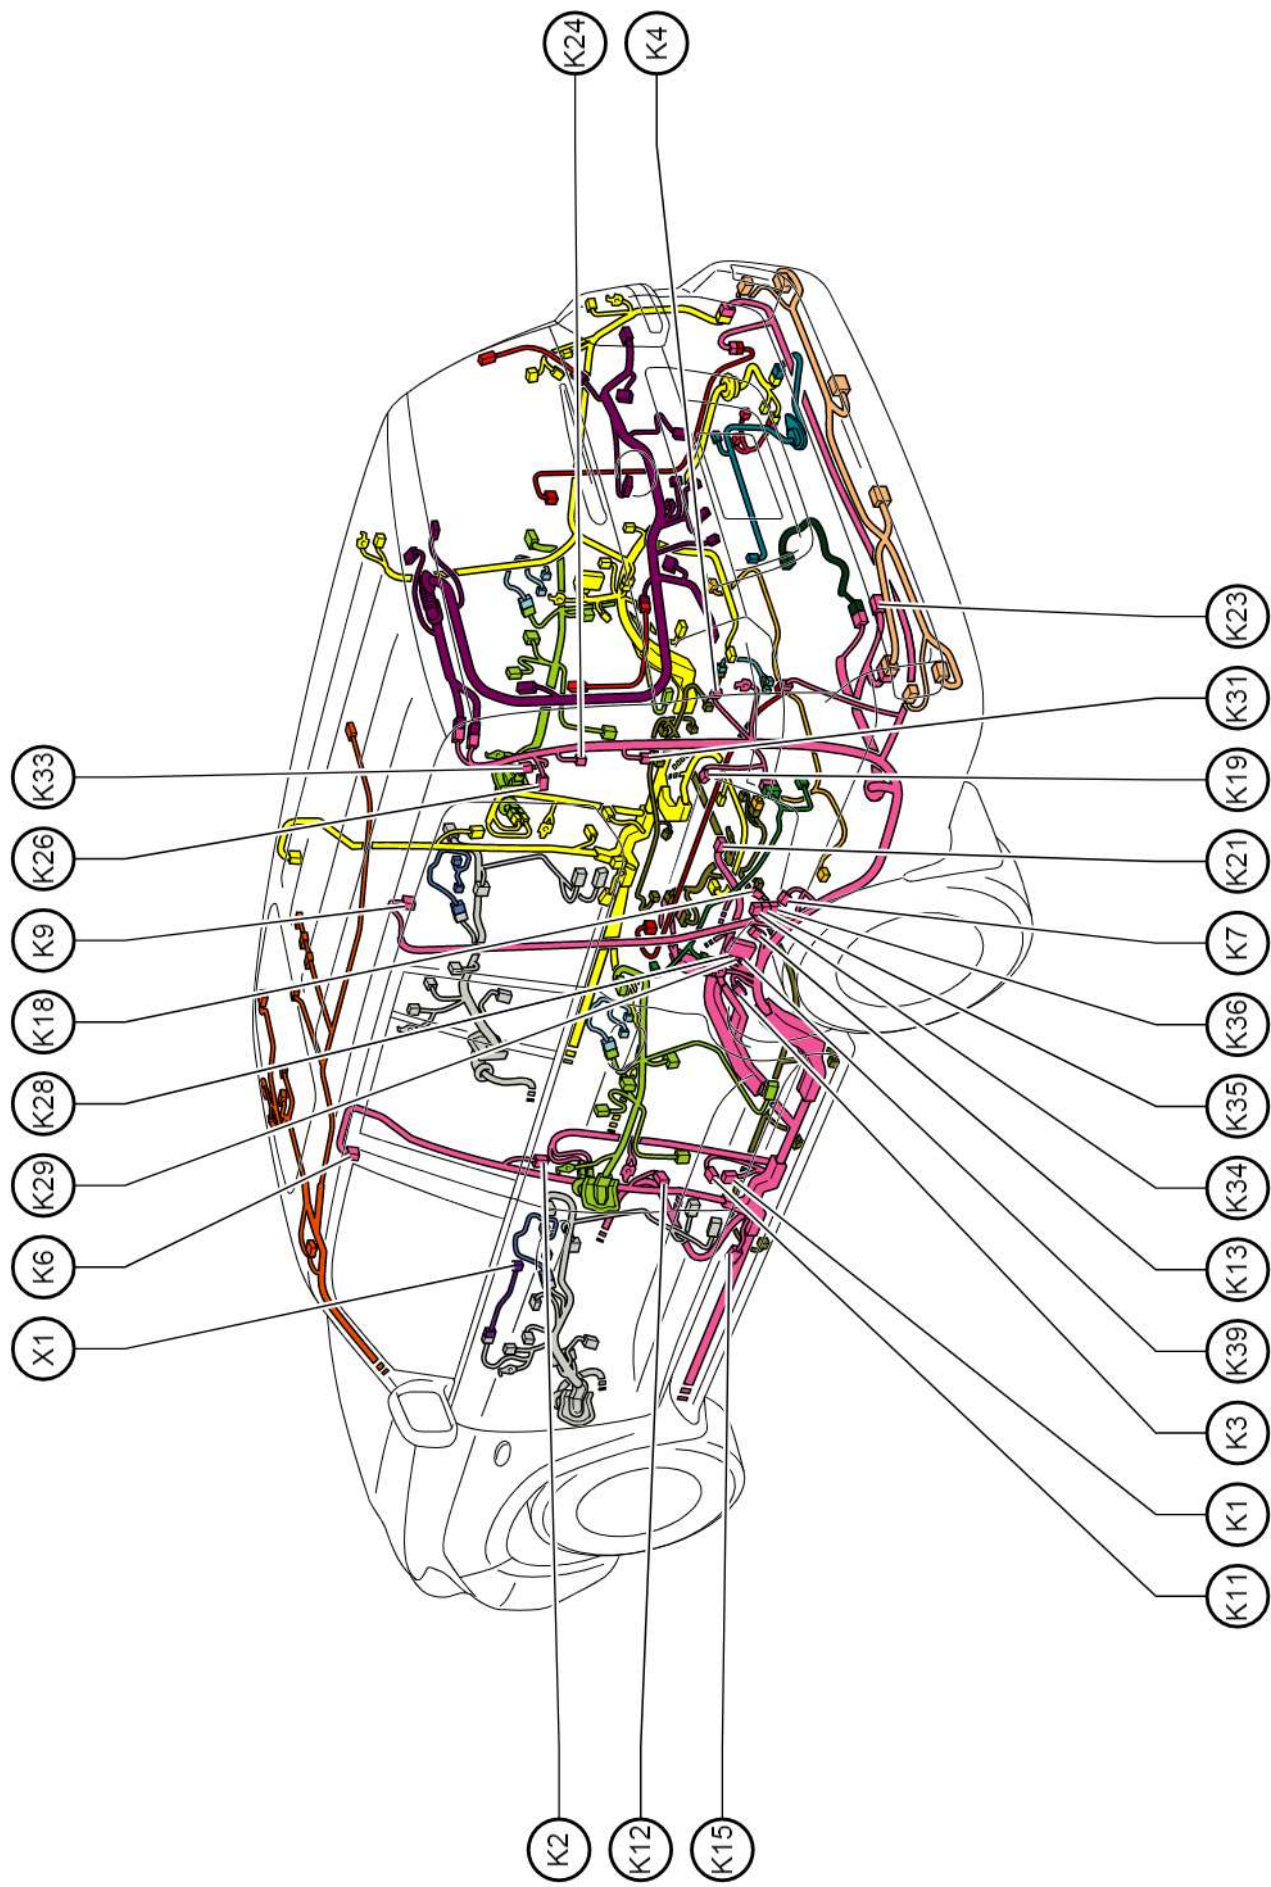

K	1	Front Pretensioner LH
K	2	Front Door Courtesy Light Switch Assembly LH
K	3	Rear Door Courtesy Light Switch Assembly LH
K	4	Rear Combination Light Assembly LH
K	6	Curtain Shield Airbag Assembly Circuit LH
K	7	Rear Side Airbag Sensor Assembly LH
K	9	Curtain Shield Airbag Assembly Circuit LH
K	11	Front Pre-Crash Seat Belt Motor LH
K	12	Front Tension Reducer LH
K	13	Rear Pretensioner LH
K	15	No.2 Interior Illumination Light Assembly
K	18	Theft Warning Siren Assembly
K	19	Rear A/C Blower Assembly
K	21	Cooler Thermistor LH
K	23	Outside Luggage Electrical Key Antenna
K	24	Towing Converter
K	26	Glass Breakage Sensor (Quarter Glass LH)
K	28	Junction Connector
K	29	Junction Connector
K	31	Diode (Rear Cooler)
K	33	Diode (High Mounted Stop Light)
K	34	Suspension Control ECU
K	35	Suspension Control ECU
K	36	Suspension Control ECU
K	39	Junction Connector
X	1	Seat Memory Switch LH

Position of Parts in Body <LHD>

K 1  
Yellow

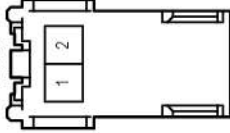


K 2  
White




K 3  
White




K 4  
White

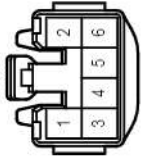


K 6  
Black

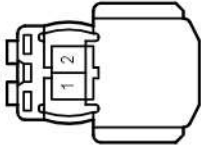


K 7  
Yellow

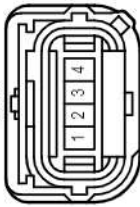

K 9  
Black

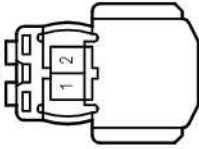


K 11  
White

 

K 12  
White



K 13  
Yellow

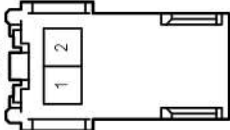


K 15  
White




K 18  
Gray




K 19  
White

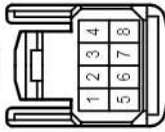


K 21  
Black

 


K 23  
White

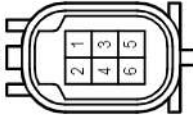

K 24  
White

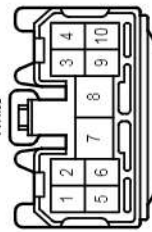


K 26  
White

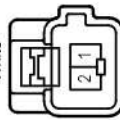

K 28  
White



 K 29  
White




K 31  
White




K 33  
White




K 34  
Black

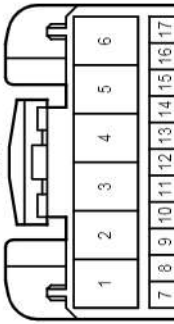

K 35  
Black

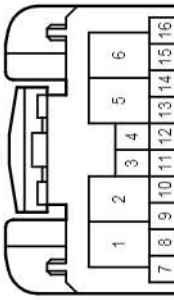






K 36  
Black

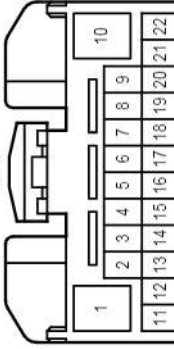











L	1	Front Door Courtesy Light Switch Assembly RH
L	2	Rear Door Courtesy Light Switch Assembly RH
L	3	Rear Combination Light Assembly RH
L	5	Front Pre-Crash Seat Belt Motor RH
L	6	Front Tension Reducer RH
L	8	Rear Indoor Electrical Key Oscillator
L	9	Indoor Luggage Compartment Electrical Key Oscillator
L	12	Cooler Thermistor RH
L	13	Front Pretensioner RH
L	14	Rear Pretensioner RH
L	17	Curtain Shield Airbag Assembly Circuit RH
L	18	Rear Side Airbag Sensor Assembly RH
L	19	Rear Floor Side Airbag Sensor
L	20	Curtain Shield Airbag Assembly Circuit RH
L	21	Door Control Receiver
L	29	Junction Connector
L	30	Junction Connector
L	32	No.1Interior Illumination Light Assembly RH
L	34	Glass Breakage Sensor (Quarter Glass RH)
L	36	Height Control Pump and Motor Assembly
L	37	Option Connector (Theft Warning Radar Sensor)
R	1	Visor Assembly □ H
R	2	Inner Rear View Mirror Assembly
R	3	Visor Assembly RH
R	4	No.2 Room Light Assembly
R	5	Sliding Roof Control ECU
R	6	No.3 Room Light Assembly
R	7	Overhead Module
R	8	No.2 Room Light Assembly
R	9	No.2 Room Light Assembly
R	11	Rain Sensor
R	12	No.1 Room Light Assembly
R	13	No.1 Room Light Assembly
R	15	No.3 Room Light Assembly
h	1	Tire Carrier Courtesy Light Switch
h	2	License Plate Light Assembly RH
i	1	Fuel Temperature Sensor
i	2	Pressure Accumulator Sensor

Position of Parts in Body <LHD>

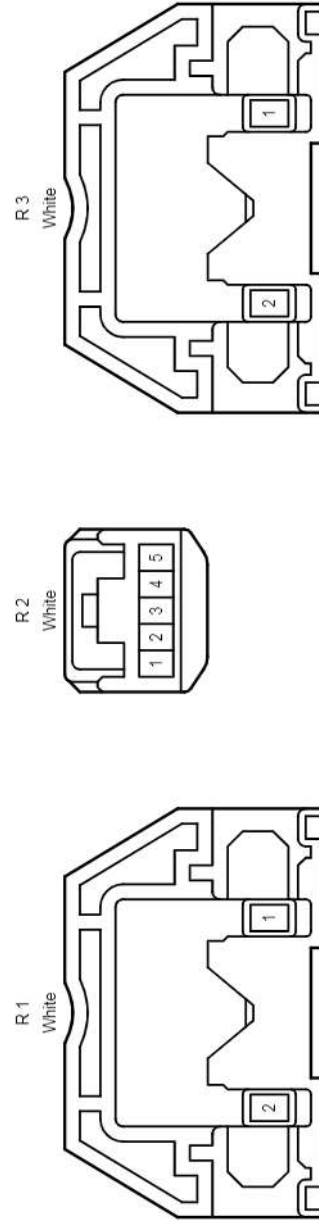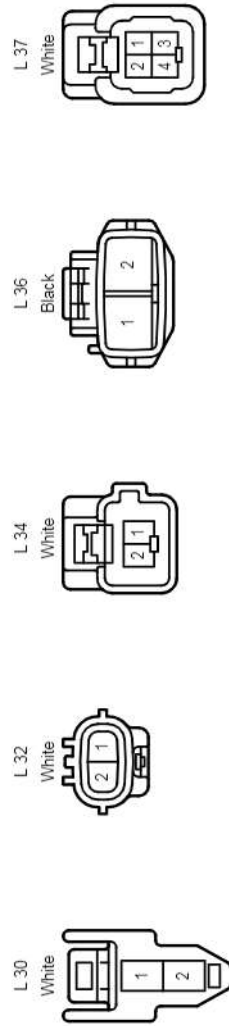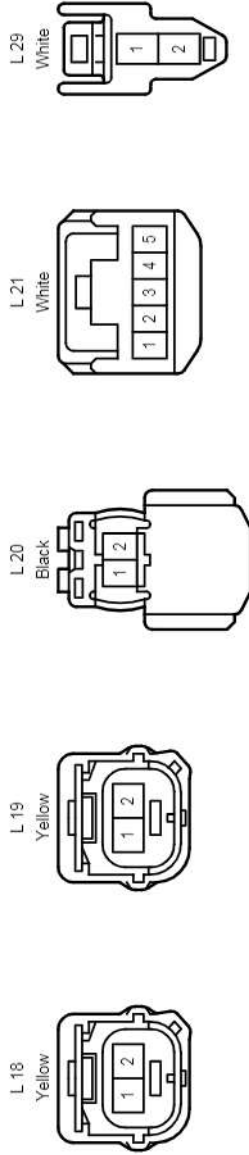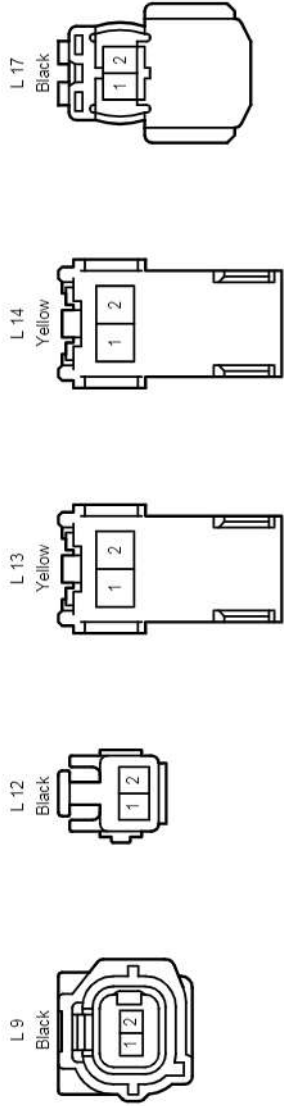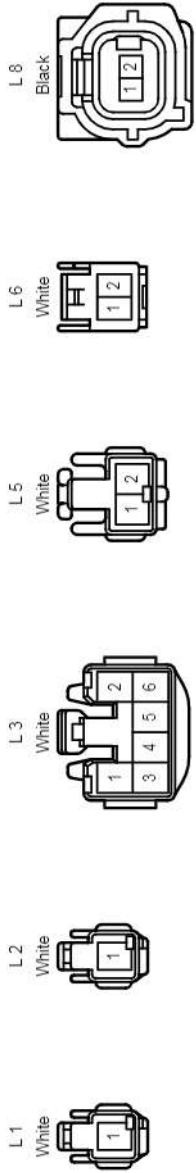


Position of Parts in Body <LHD>

     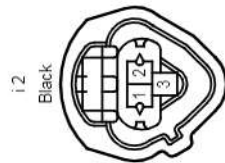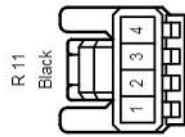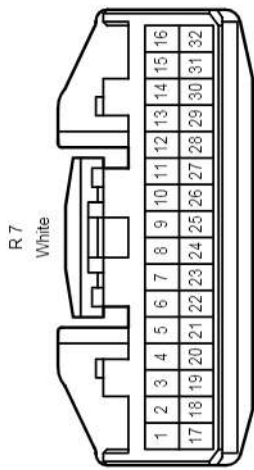



Position of Parts in Body <LHD>



















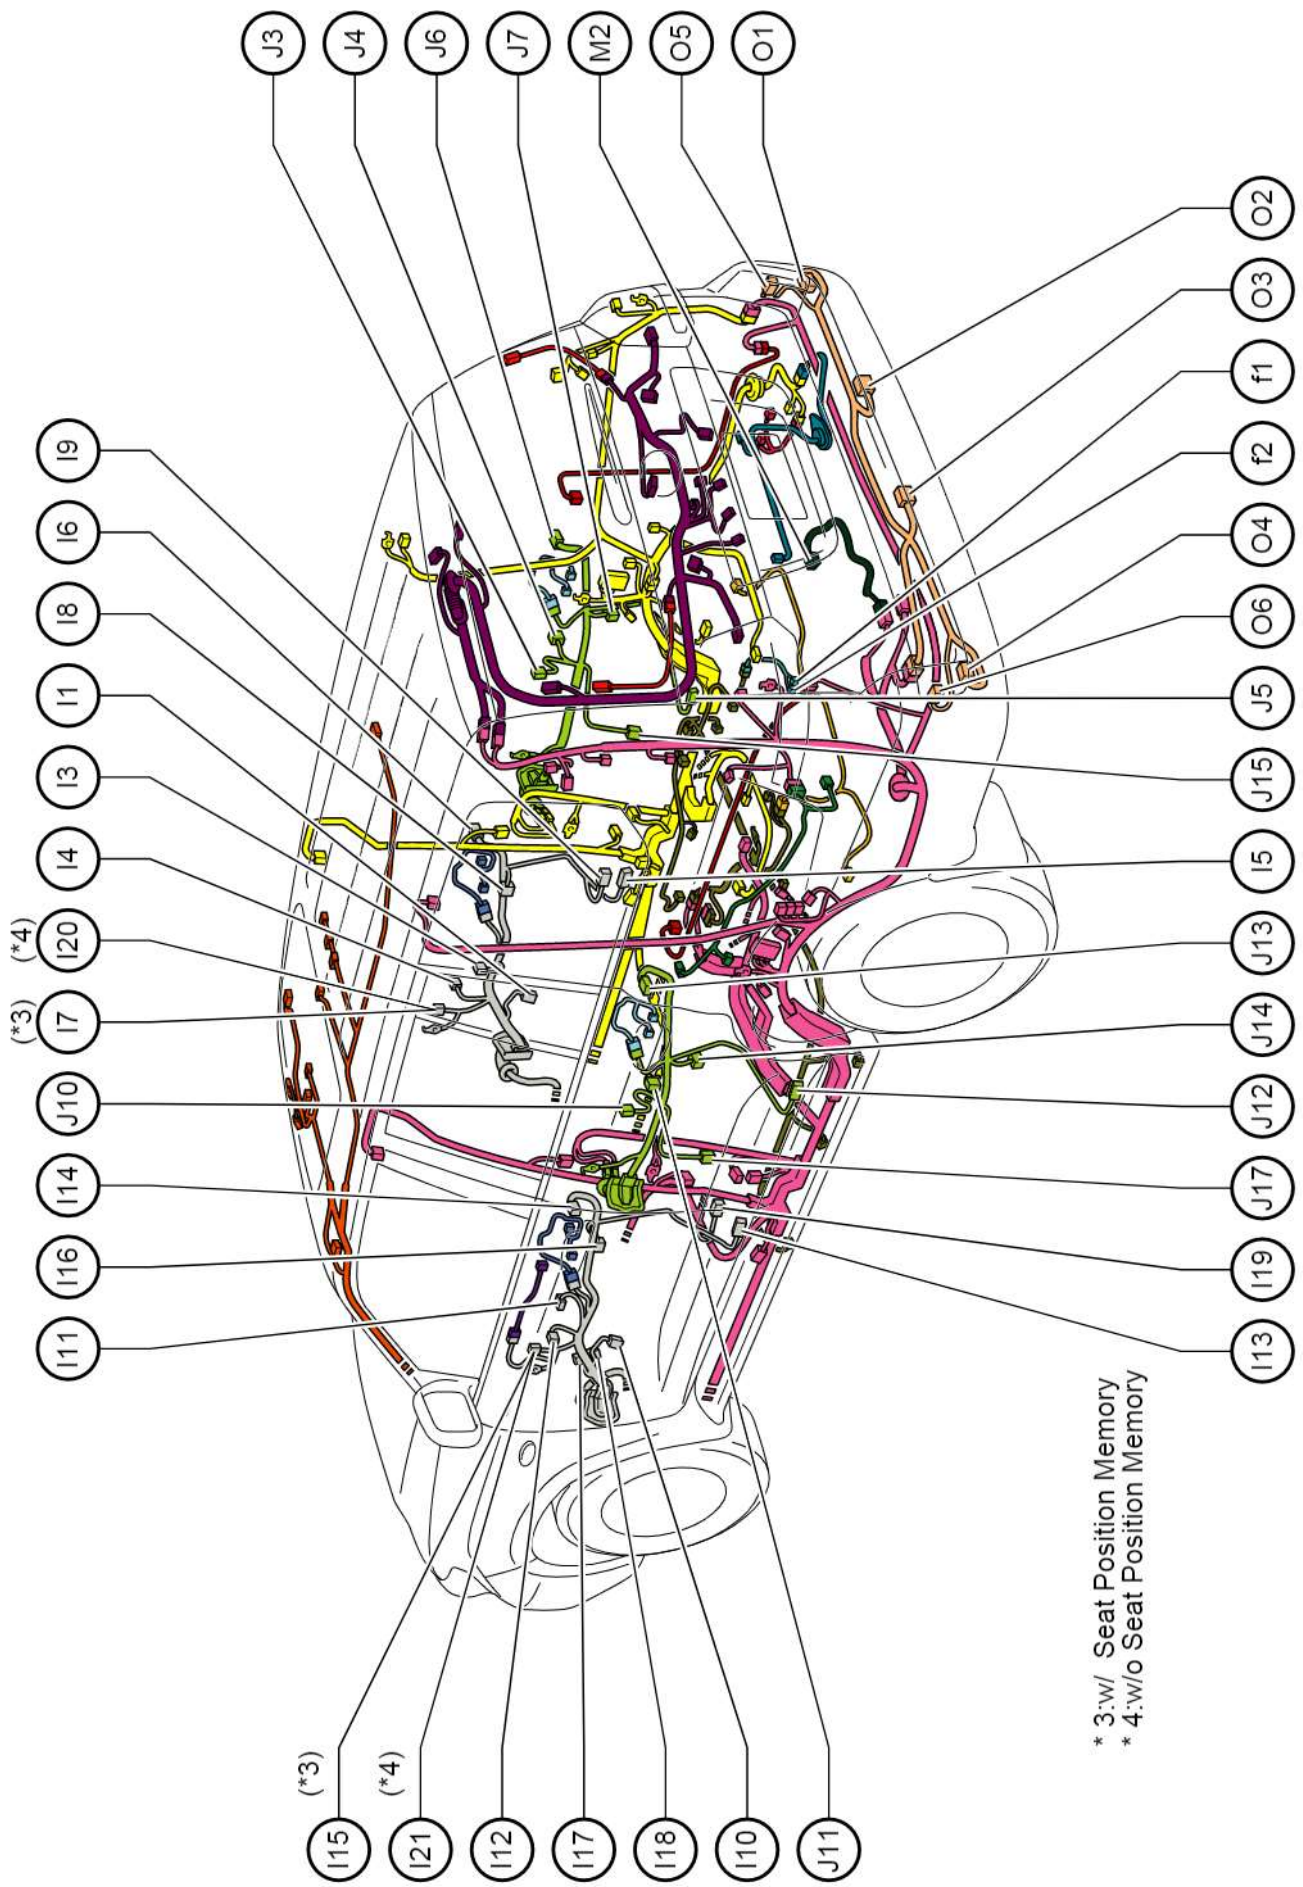


\* 3:w/ Seat Position Memory  
 \* 4:w/o Seat Position Memory






















Position of Parts in Body <LHD>

I	1	Front No.1 Speaker Assembly RH
I	3	Front Power Window Regulator Switch Assembly RH
I	4	Front Power Window Regulator Motor Assembly RH
I	5	Front Door Courtesy Light Assembly RH
I	6	Front Door Lock Assembly RH
I	7	Outer Rear View Mirror Assembly RH
I	8	Diode (Front Door Courtesy Switch RH)
I	9	Front Side Airbag Sensor Assembly RH
I	10	Front No.1 Speaker Assembly LH
I	11	Multiplex Network Master Switch Assembly
I	12	Front Power Window Regulator Motor Assembly LH
I	13	Front Door Courtesy Light Assembly LH
I	14	Front Door Lock Assembly LH
I	15	Outer Rear View Mirror Assembly LH
I	16	Diode (Front Door Courtesy Switch LH)
I	17	Outer Mirror Control ECU Assembly
I	18	Outer Mirror Control ECU Assembly
I	19	Front Side Airbag Sensor Assembly LH
I	20	Outer Rear View Mirror Assembly RH
I	21	Outer Rear View Mirror Assembly LH
J	3	Rear Power Window Regulator Switch Assembly RH
J	4	Rear Power Window Regulator Motor Assembly RH
J	5	Rear Door Courtesy Light Assembly RH
J	6	Rear Door Lock Assembly RH
J	7	Diode (Rear Door Courtesy Switch RH)
J	10	Rear Power Window Regulator Switch Assembly LH
J	11	Rear Power Window Regulator Motor Assembly LH
J	12	Rear Door Courtesy Light Assembly LH
J	13	Rear Door Lock Assembly LH
J	14	Diode (Rear Door Courtesy Switch LH)
J	15	Rear Speaker Set RH
J	17	Rear Speaker Set LH
M	2	Fuel Sender Gage Assembly (Sub)
O	1	No.2 Ultrasonic Sensor RH
O	2	No.3 Ultrasonic Sensor RH
O	3	No.3 Ultrasonic Sensor LH
O	4	No.2 Ultrasonic Sensor LH
O	5	Rear Fog Light Assembly RH
O	6	Rear Fog Light Assembly LH
f	1	Differential Lock Shift Actuator

      
Position of Parts in Body <LHD>

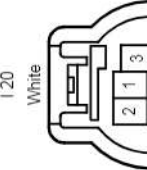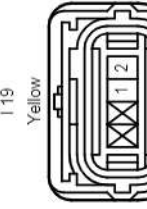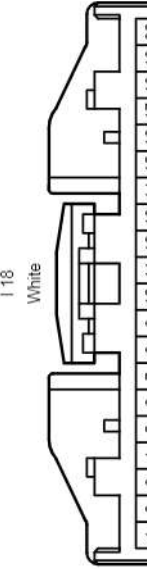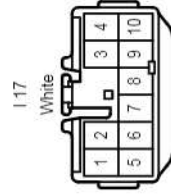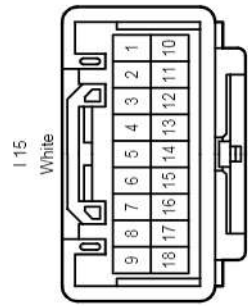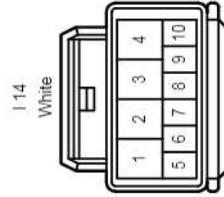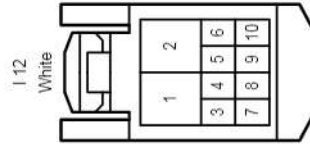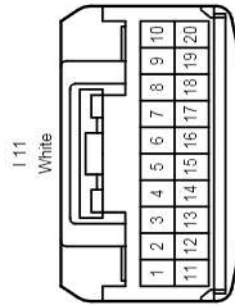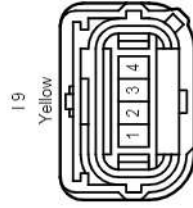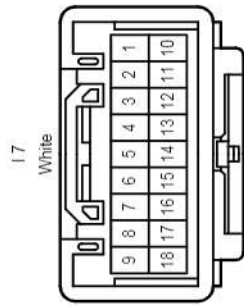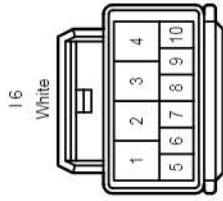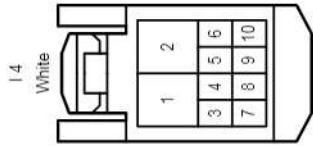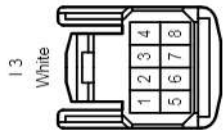

Position of Parts in Body <LHD>

     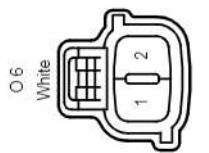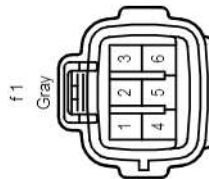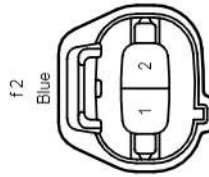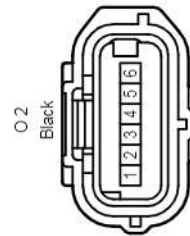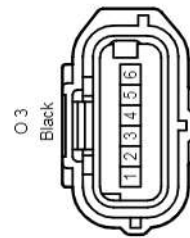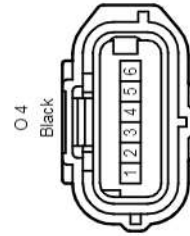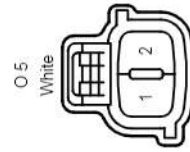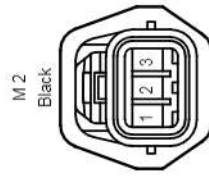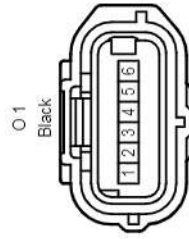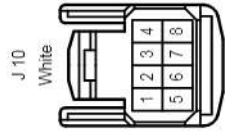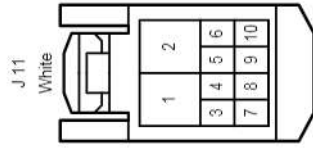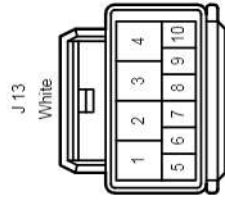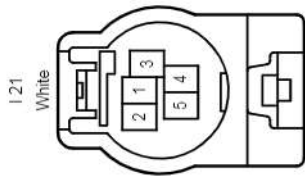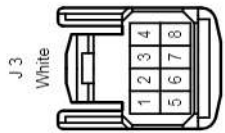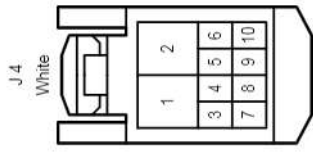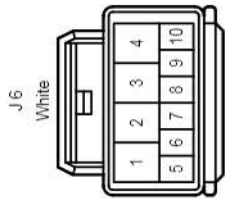

Position of Parts in Body <LHD>

























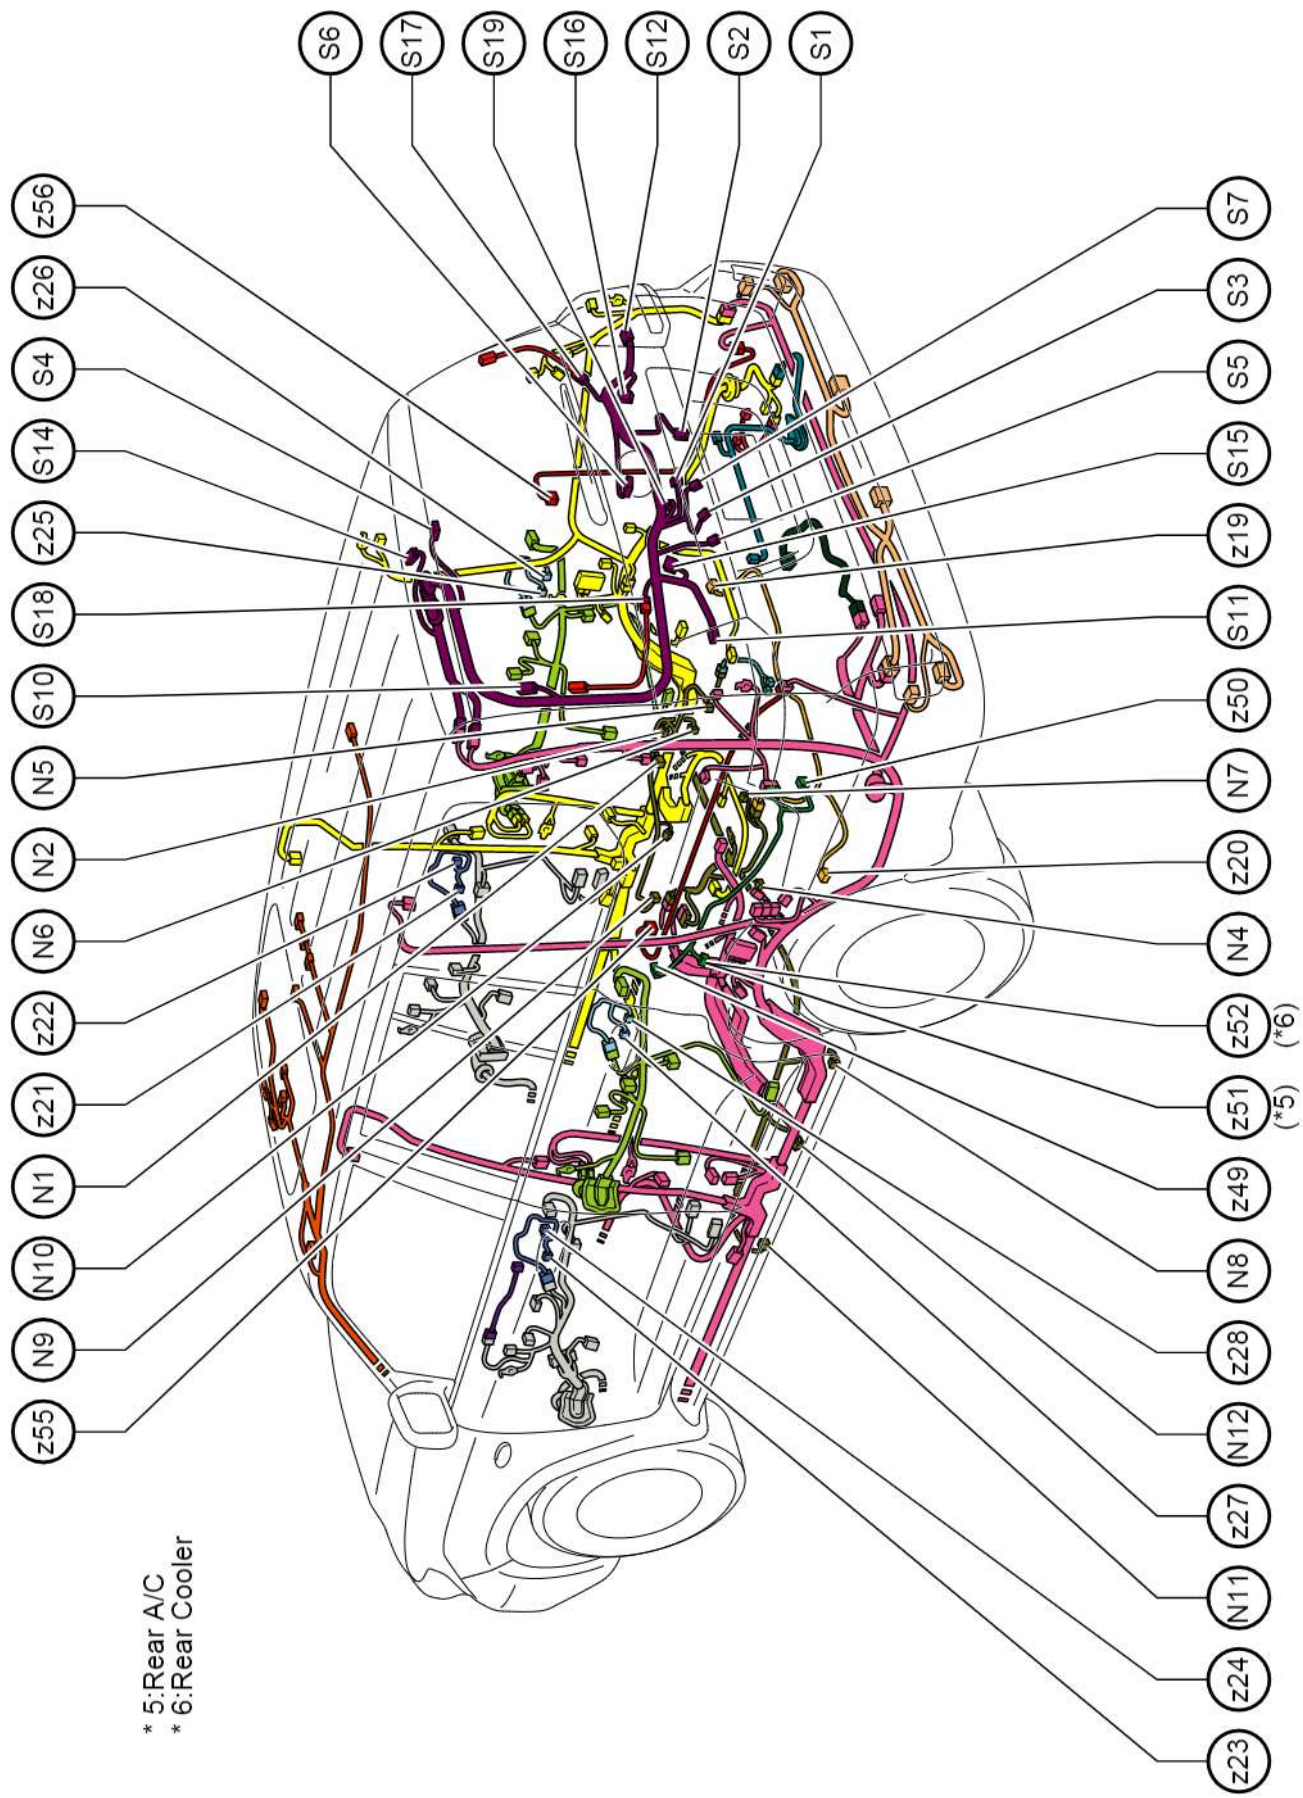


\* 5:Rear A/C  
 \* 6:Rear Cooler










Position of Parts in Body <LHD>

N	1	Fuel Sender Gage Assembly (Main)
N	2	Fuel Pump Control ECU Assembly
N	4	No.1 Height Control Valve Assembly
N	5	Rear Height Control Sensor Sub-Assembly RH
N	6	Rear Shock Absorber Assembly RH
N	7	Rear Height Control Sensor Sub-Assembly LH
N	8	Rear Shock Absorber Assembly LH
N	9	Front Shock Absorber Assembly RH
N	10	Front Shock Absorber Control Valve Assembly RH
N	11	Front Shock Absorber Assembly LH
N	12	Front Shock Absorber Control Valve Assembly LH
S	1	Back Door Lock Assembly
S	2	License Plate Light Assembly RH
S	3	License Plate Light Assembly LH
S	4	Center Stop Light Assembly
S	5	Rear Television Camera Assembly
S	6	Rear Wiper Motor Assembly
S	7	Back Door Opener Switch Assembly
S	10	Glass Breakage Sensor (Back Door Glass)
S	11	Rear Light Assembly LH
S	12	Rear Light Assembly RH
S	14	Noise Filter (Rear Window Defogger and Stop)
S	15	Junction Connector
S	16	Junction Connector
S	17	Rear Window Defogger (Back Door Glass)
S	18	Rear Window Defogger (Back Door Glass)
S	19	Power Back Door Main Switch
Z	19	Rear Speed Sensor RH
Z	20	Rear Speed Sensor LH
Z	21	Front Door Outside Handle Assembly RH
Z	22	Front Door Electrical Key Oscillator RH
Z	23	Front Door Outside Handle Assembly LH
Z	24	Front Door Electrical Key Oscillator LH
Z	25	Rear Door Outside Handle Assembly RH
Z	26	Rear Door Electrical Key Oscillator RH
Z	27	Rear Door Outside Handle Assembly LH
Z	28	Rear Door Electrical Key Oscillator LH
Z	49	Rear Blower with Fan Motor Sub-Assembly
Z	50	Rear Cooling Unit Expansion Valve
Z	51	Blower Motor Control
Z	52	Rear Blower Resistor
Z	55	Rear No.1 Cooler Thermistor LH

    Position of Parts in Body <LHD>

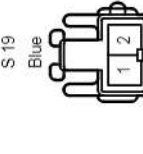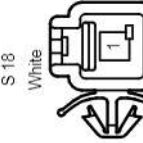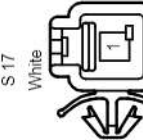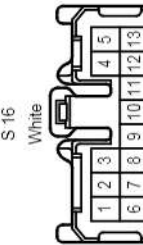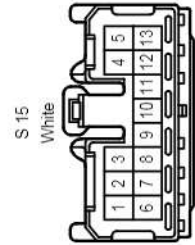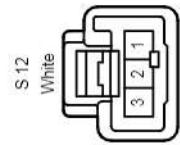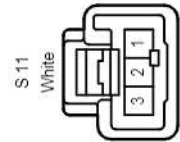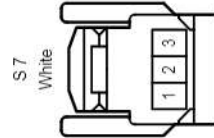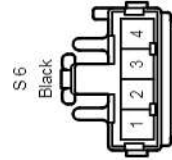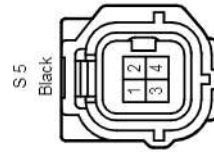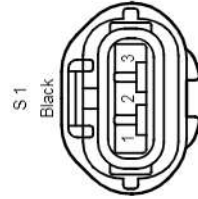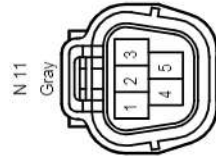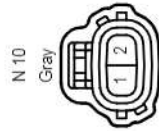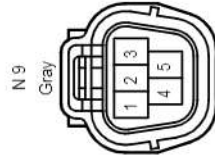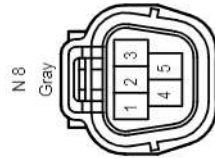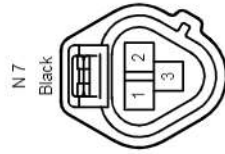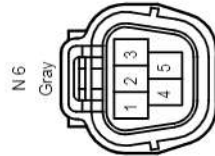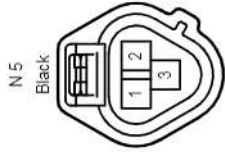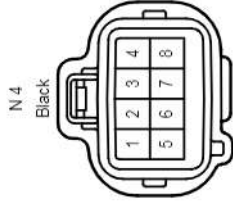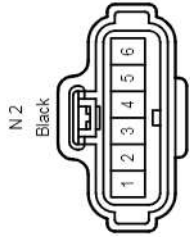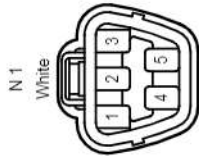


Position of Parts in Body <LHD>

 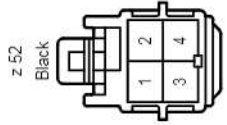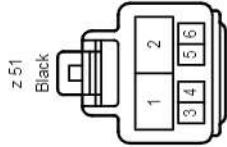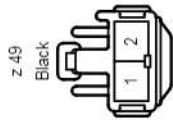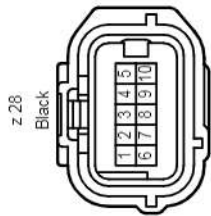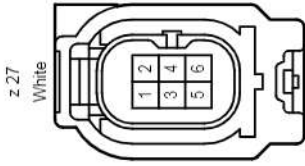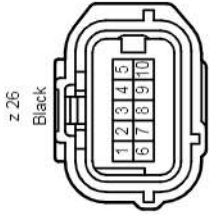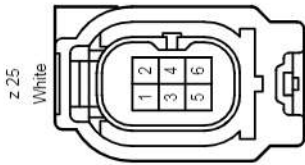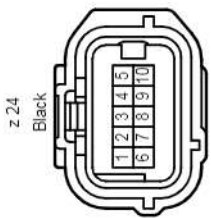





Wire and Wire in Body <LHD>


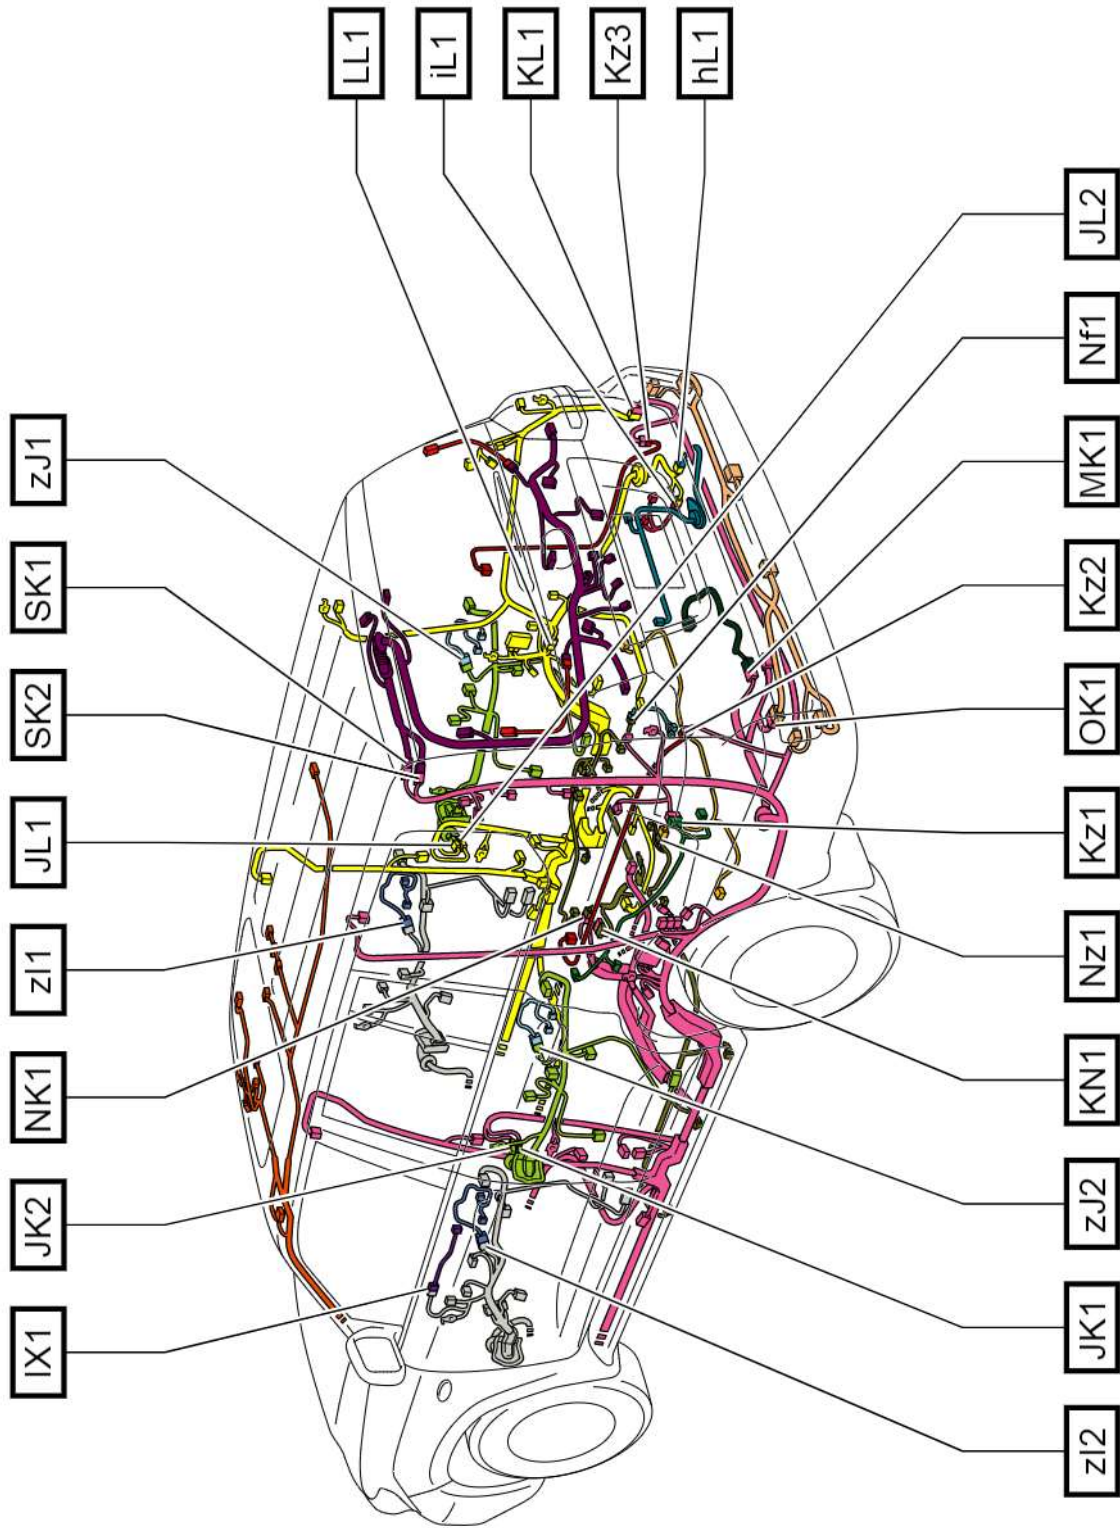


Wire and Wire in Body <LHD>



IX1  
White

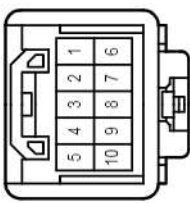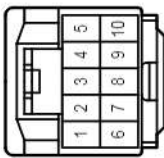



JK1  
White

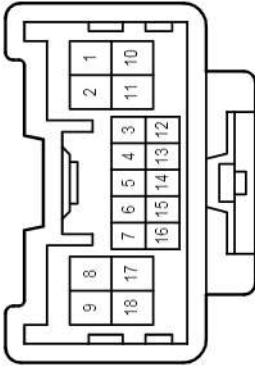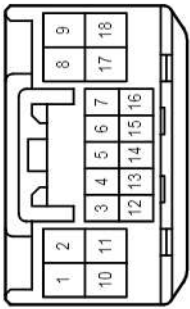



JK2  
White

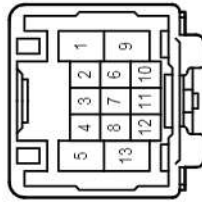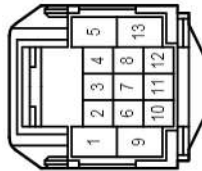



JL1  
White

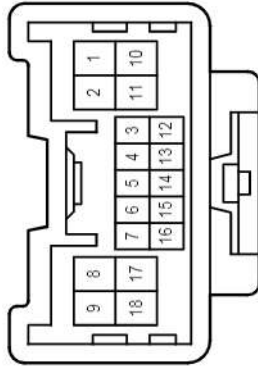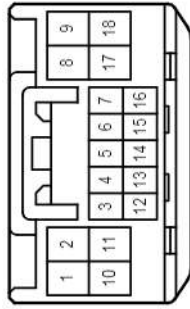

JL2  
White

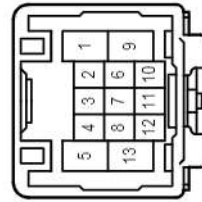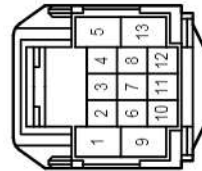



KL1  
White

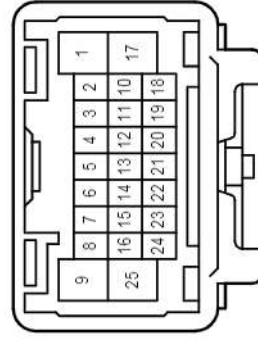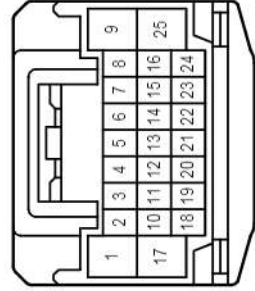


KN1  
White






Kz1  
Blue

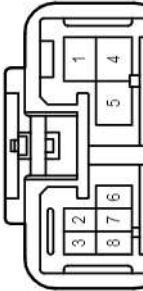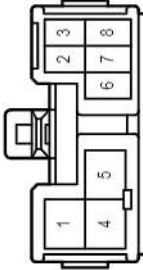


Wire and Wire in Body <LHD>

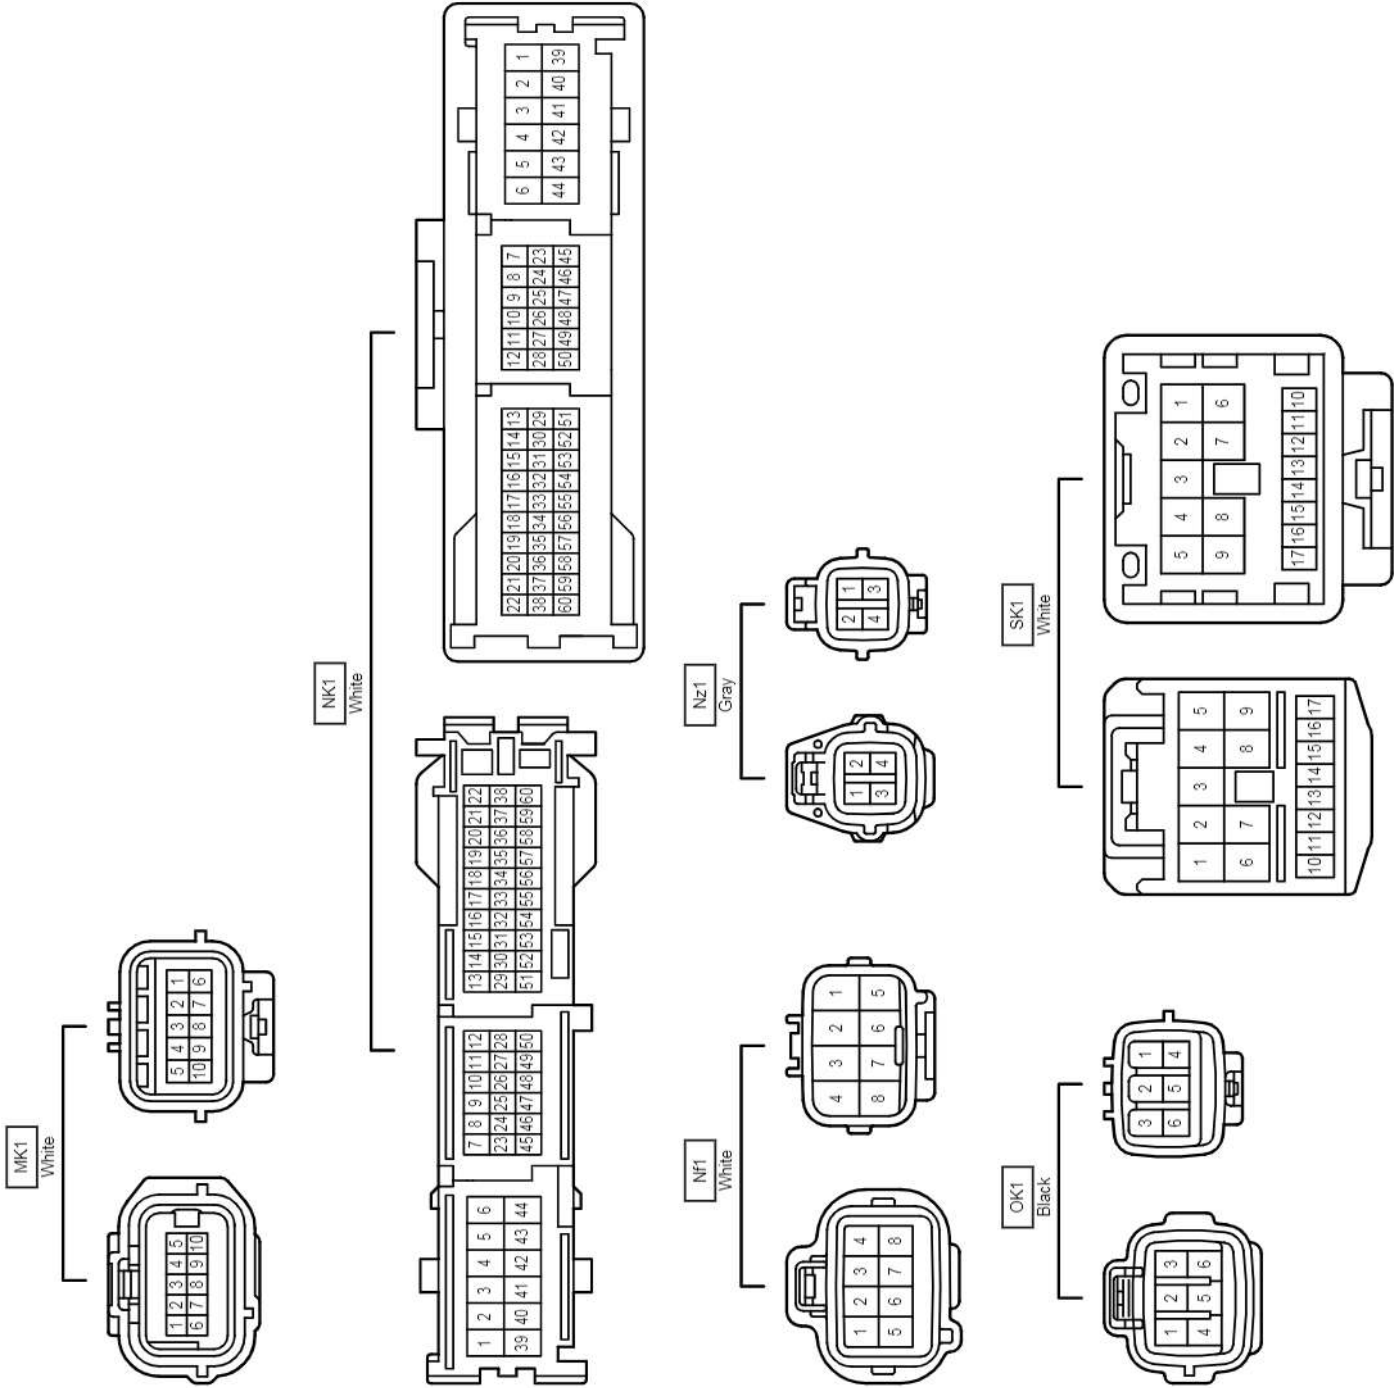


Wire and Wire in Body <LHD>

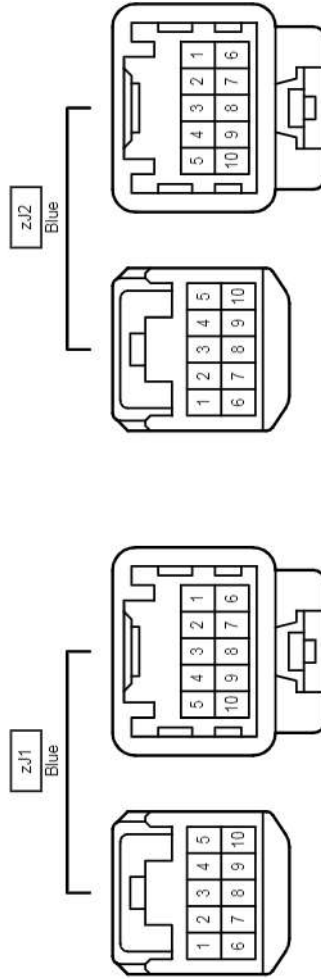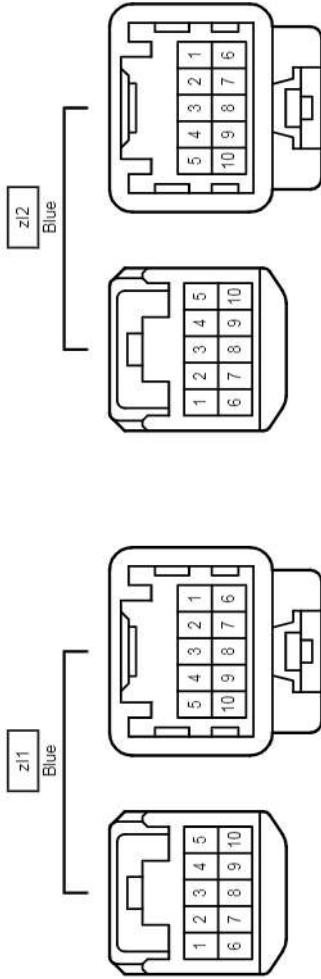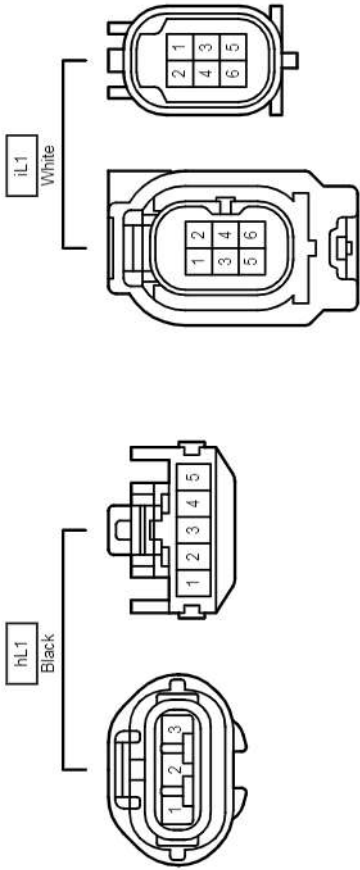

Ground Points in Body <RHD>

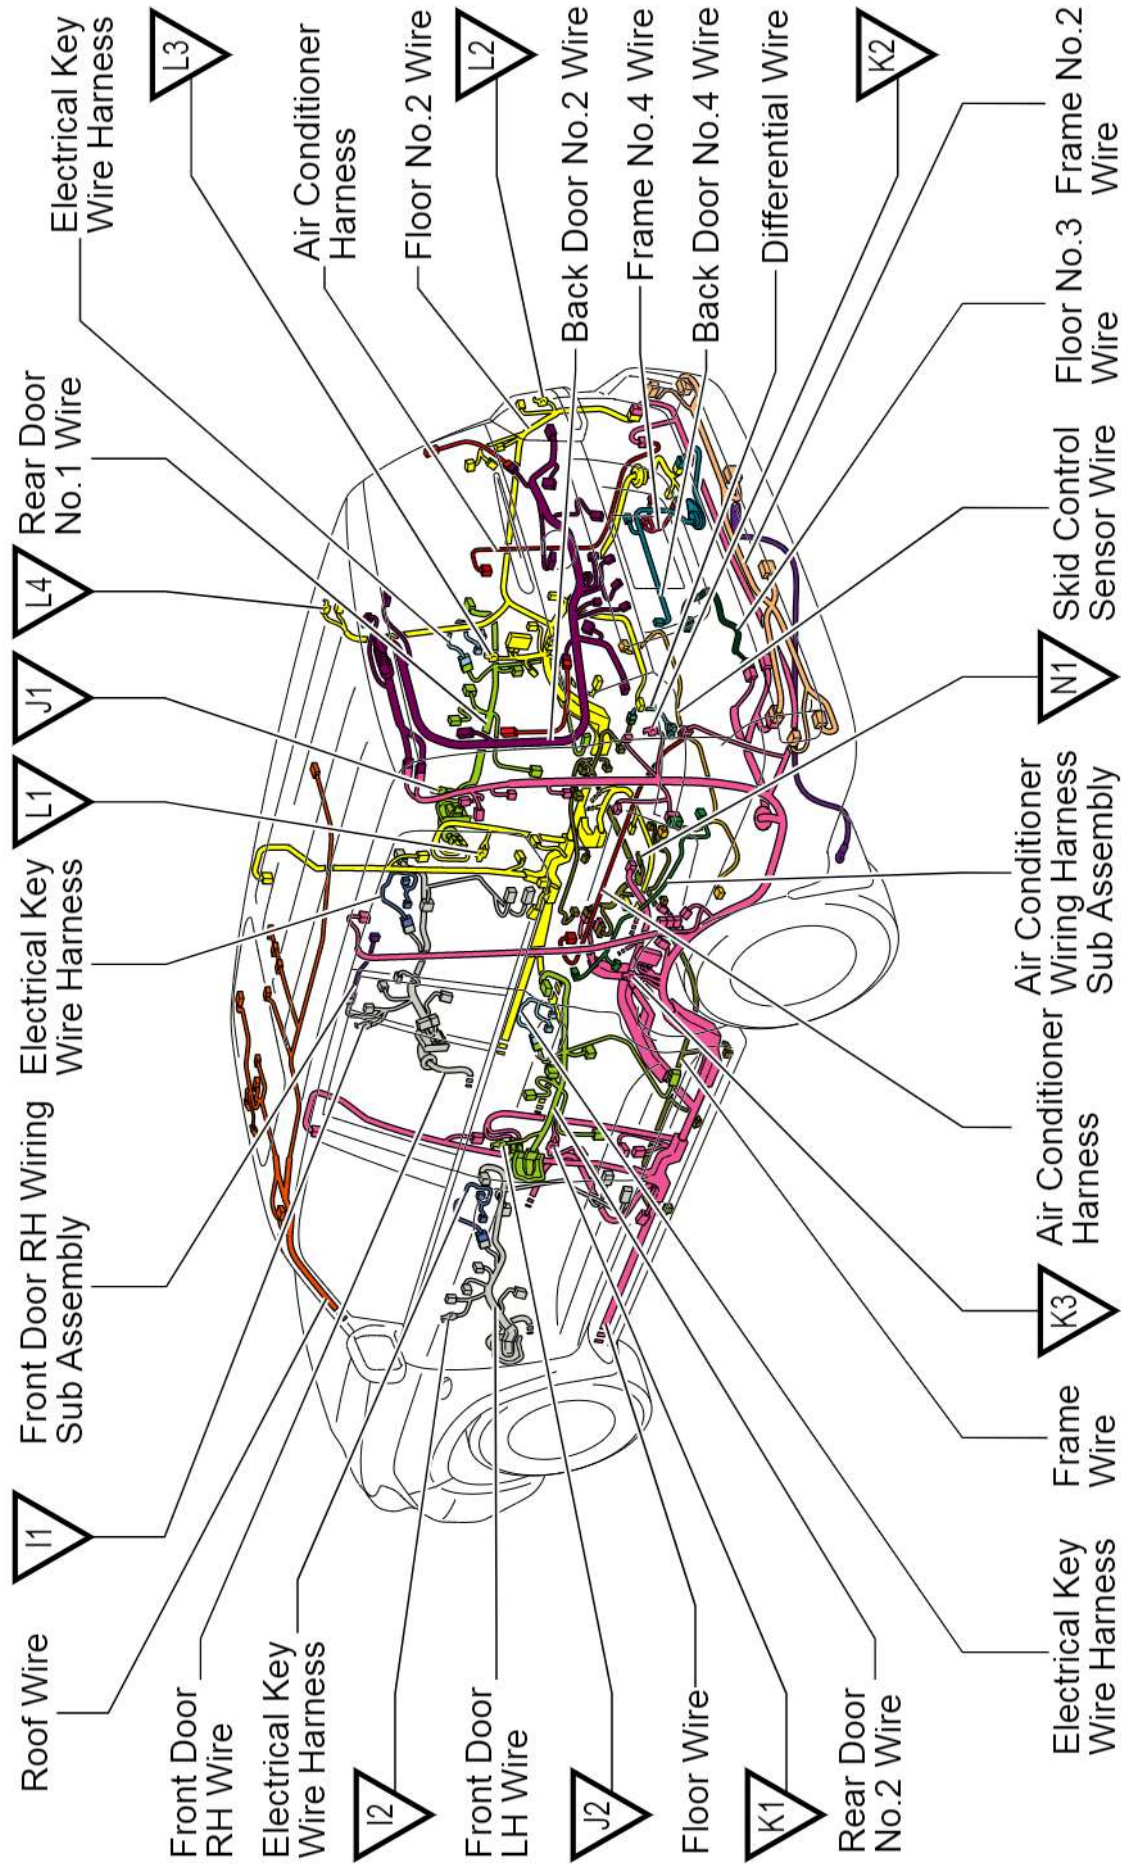


Position of Parts in Body <RHD>

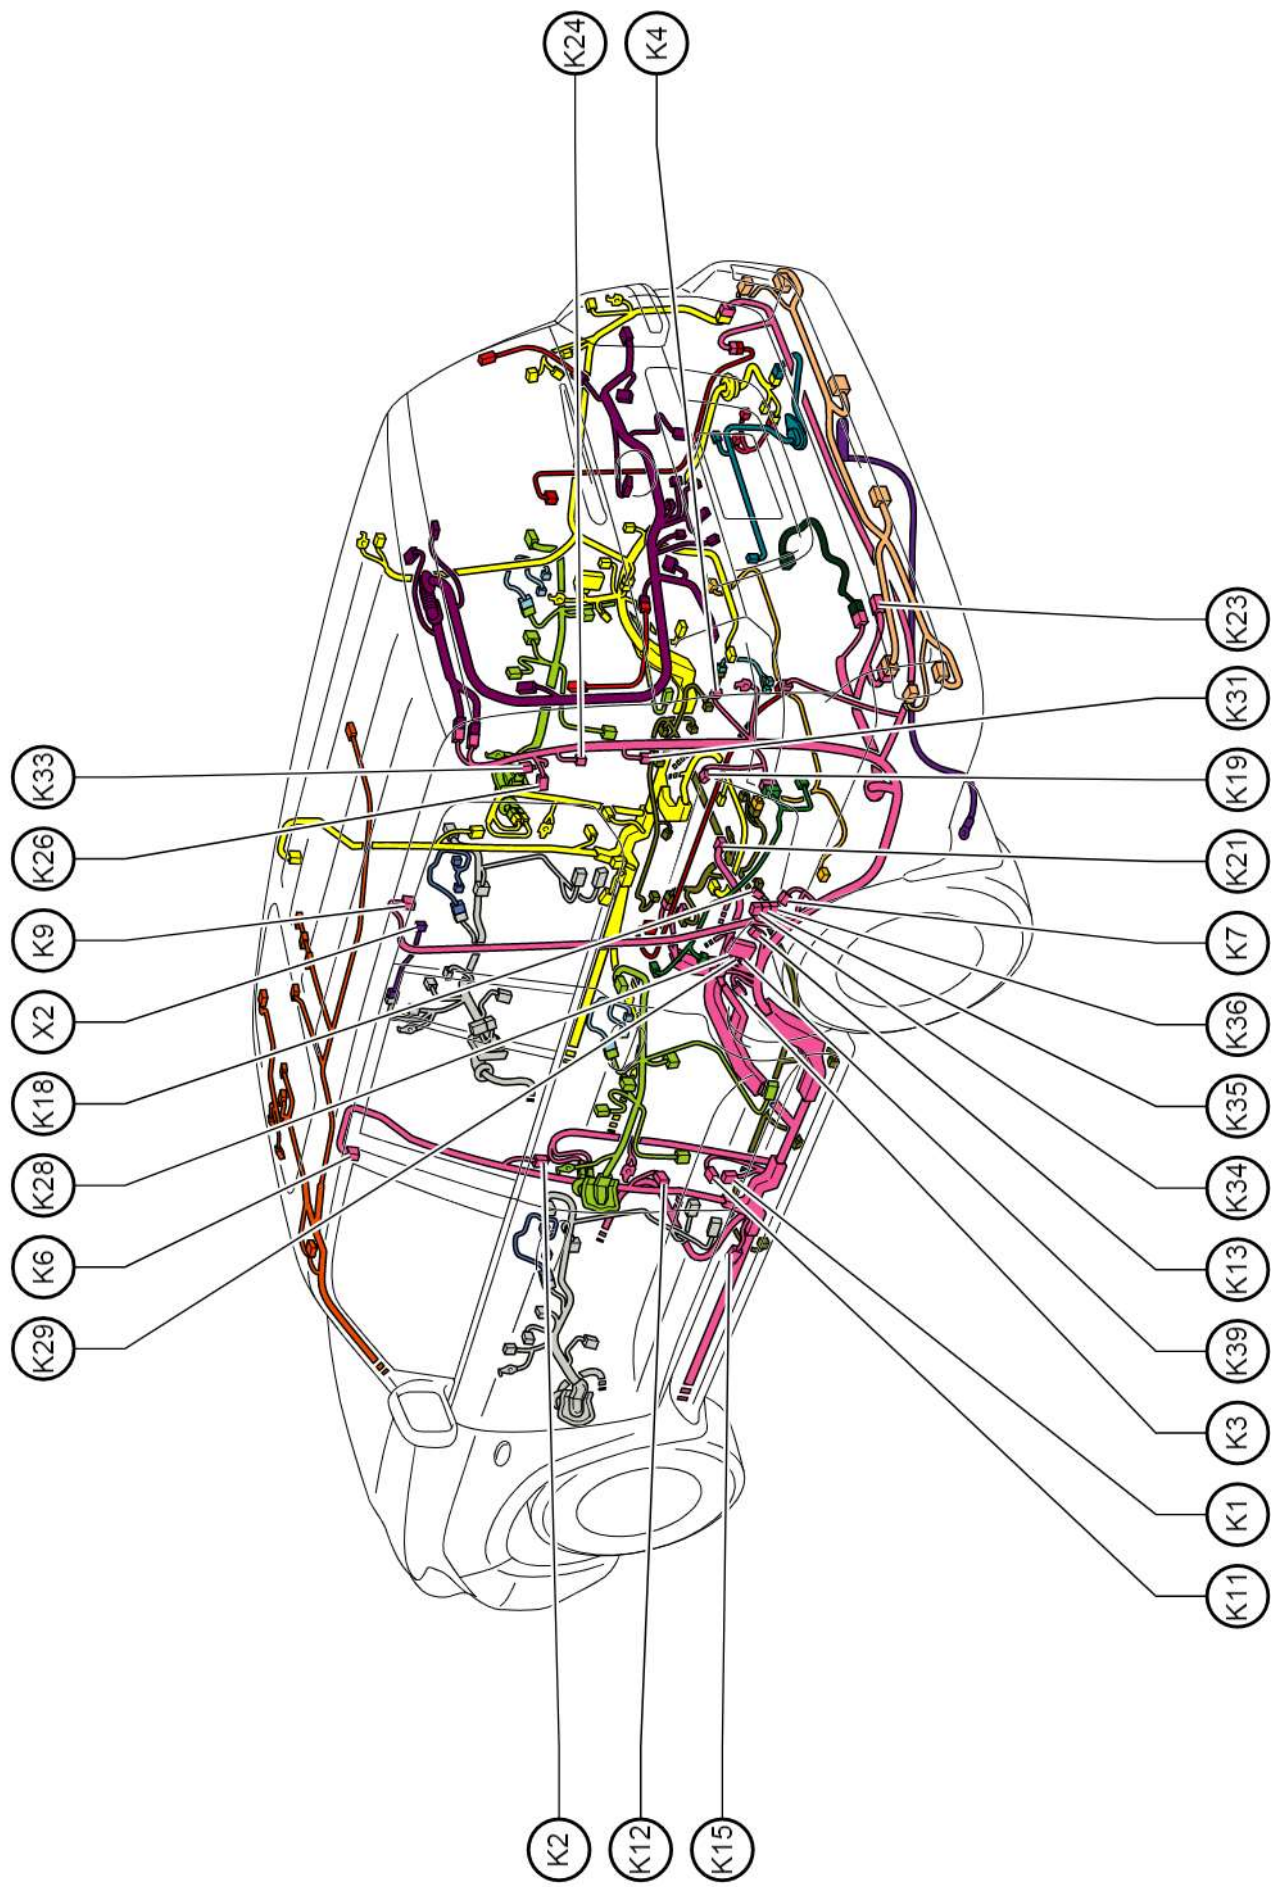

Position of Parts in Body <RHD>


- K 1 Front Pretensioner LH
- K 2 Front Door Courtesy Light Switch Assembly LH
- K 3 Rear Door Courtesy Light Switch Assembly LH
- K 4 Rear Combination Light Assembly LH
- K 6 Curtain Shield Airbag Assembly Circuit LH
- K 7 Rear Side Airbag Sensor Assembly LH
- K 9 Curtain Shield Airbag Assembly Circuit LH
- K 11 Front Pre-Crash Seat Belt Motor LH
- K 12 Front Tension Reducer LH
- K 13 Rear Pretensioner LH
- K 15 No.2 Interior Illumination Light Assembly
- K 18 Theft Warning Siren Assembly
- K 19 Rear A/C Blower Assembly
- K 21 Cooler Thermistor LH
- K 23 Outside Luggage Electrical Key Antenna
- K 24 Towing Converter
- K 26 Glass Breakage Sensor (Quarter Glass LH)
- K 28 Junction Connector
- K 29 Junction Connector
- K 31 Diode (Rear Cooler)
- K 33 Diode (High Mounted Stop Light)
- K 34 Suspension Control ECU
- K 35 Suspension Control ECU
- K 36 Suspension Control ECU
- K 39 Junction Connector
- X 2 Seat Memory Switch RH

Position of Parts in Body <RHD>

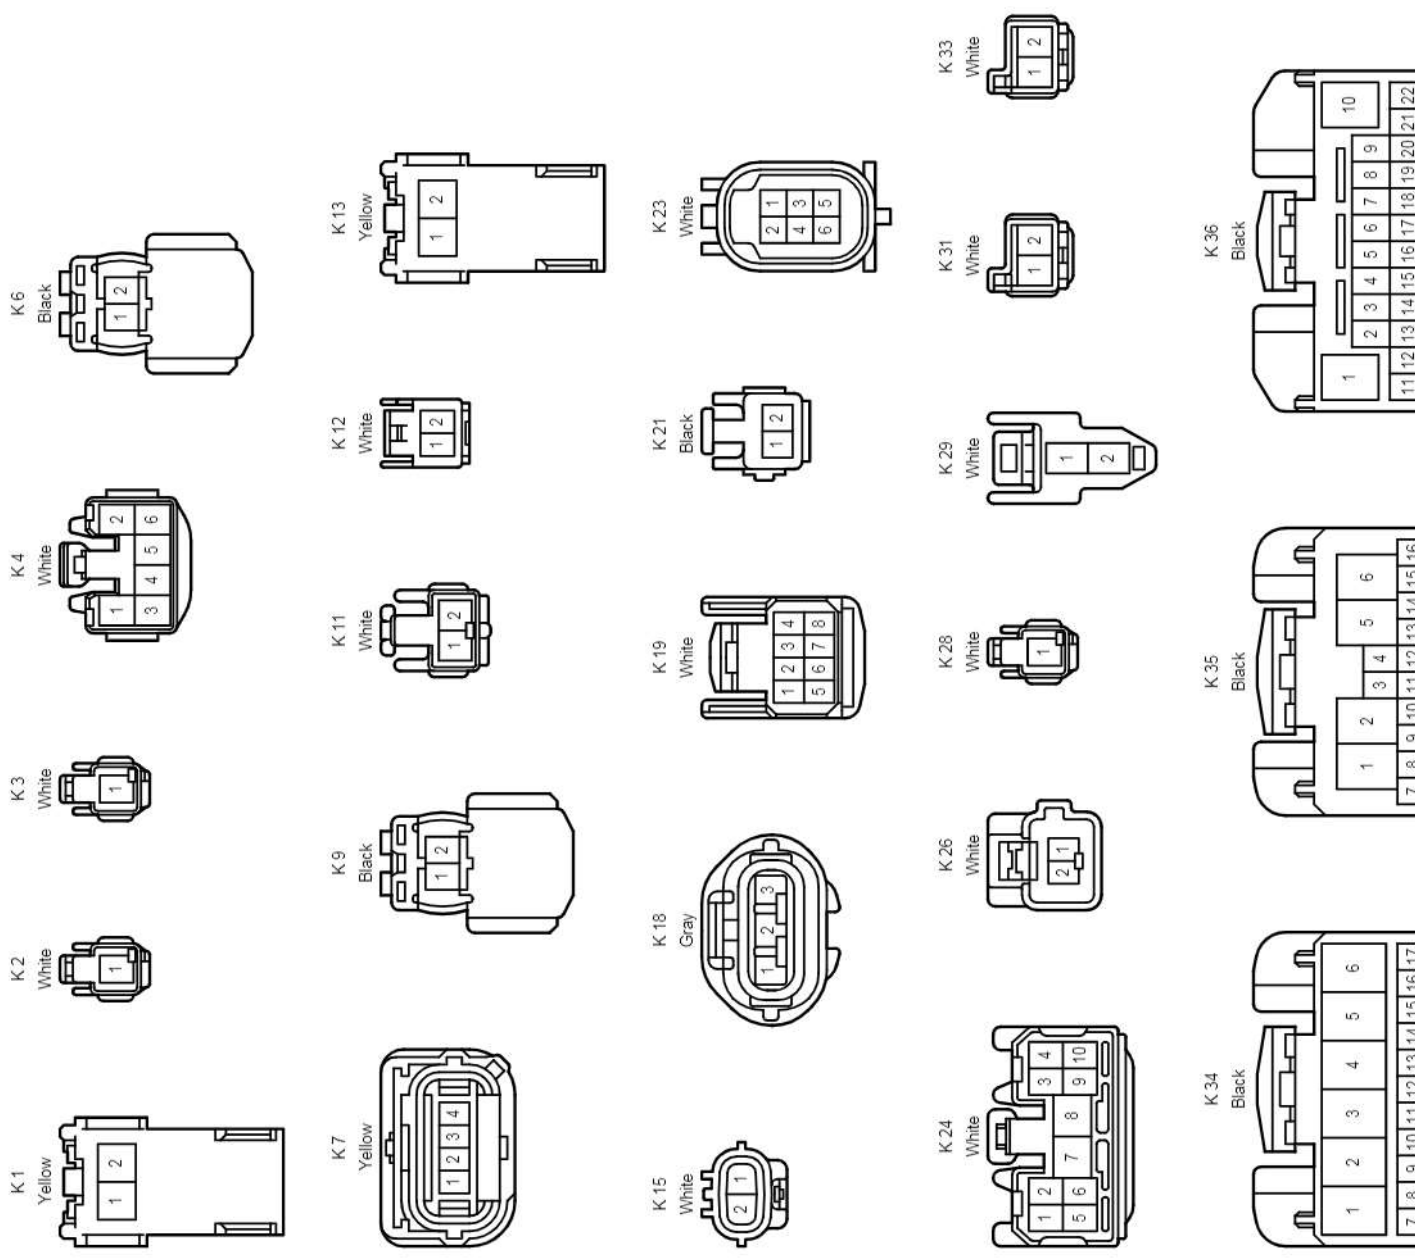








Position of Parts in Body <RHD>

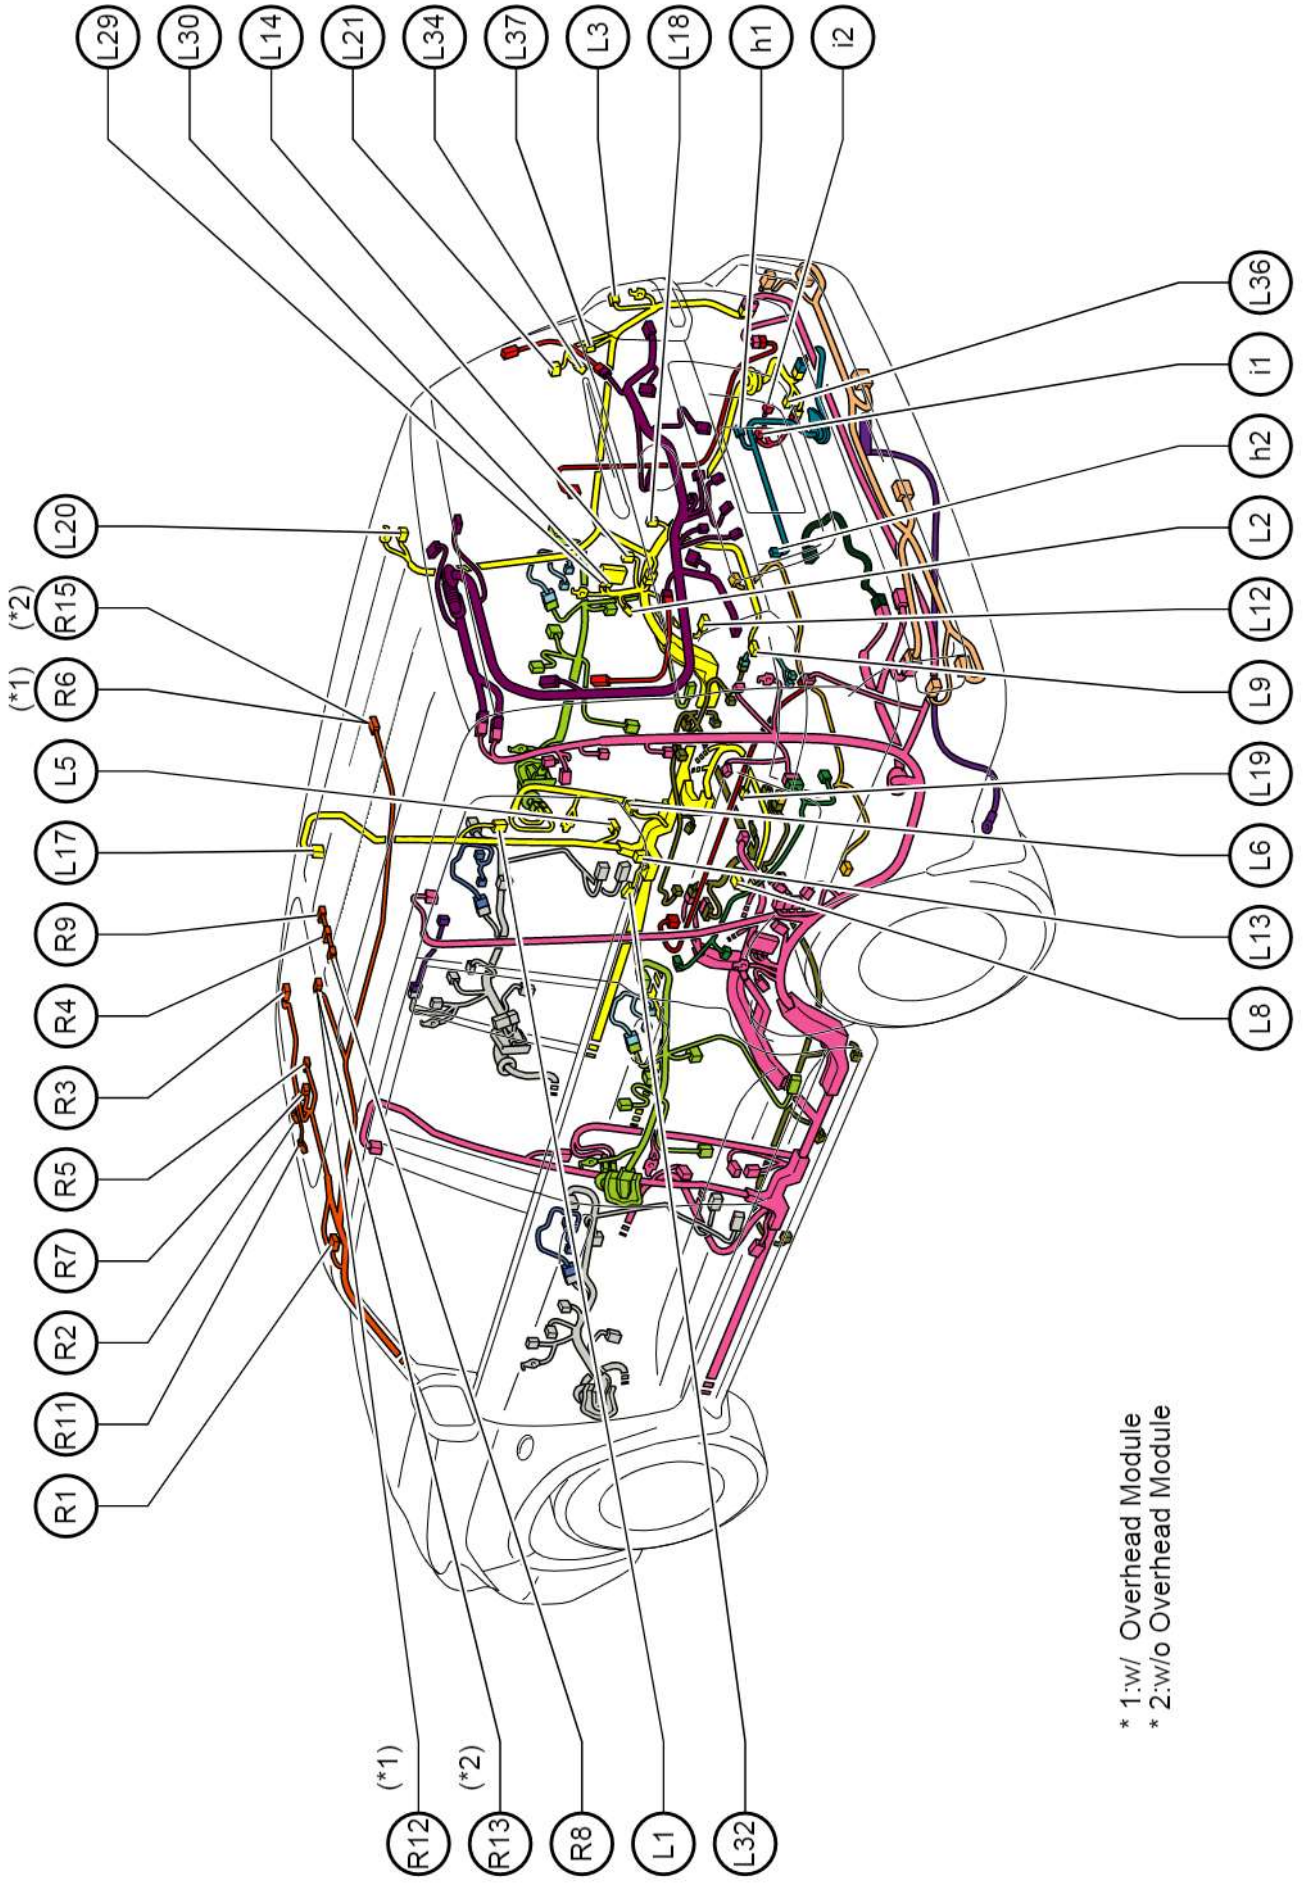









\* 1:w/ Overhead Module  
 \* 2:w/o Overhead Module

- L 1 Front Door Courtesy Light Switch Assembly RH
- L 2 Rear Door Courtesy Light Switch Assembly RH
- L 3 Rear Combination Light Assembly RH
- L 5 Front Pre-Crash Seat Belt Motor RH
- L 6 Front Tension Reducer RH
- L 8 Rear Indoor Electrical Key Oscillator
- L 9 Indoor Luggage Compartment Electrical Key Oscillator
- L 12 Cooler Thermistor RH
- L 13 Front Pretensioner RH
- L 14 Rear Pretensioner RH
- L 17 Curtain Shield Airbag Assembly Circuit RH
- L 18 Rear Side Airbag Sensor Assembly RH
- L 19 Rear Floor Side Airbag Sensor
- L 20 Curtain Shield Airbag Assembly Circuit RH
- L 21 Door Control Receiver
- L 29 Junction Connector
- L 30 Junction Connector
- L 32 No.1Interior Illumination Light Assembly RH
- L 34 Glass Breakage Sensor (Quarter Glass RH)
- L 36 Height Control Pump and Motor Assembly
- L 37 Option Connector (Theft Warning Radar Sensor)
  
- R 1 Visor Assembly □ H
- R 2 Inner Rear View Mirror Assembly
- R 3 Visor Assembly RH
- R 4 No.2 Room Light Assembly
- R 5 Sliding Roof Control ECU
- R 6 No.3 Room Light Assembly
- R 7 Overhead Module
- R 8 No.2 Room Light Assembly
- R 9 No.2 Room Light Assembly
- R 11 Rain Sensor
- R 12 No.1 Room Light Assembly
- R 13 No.1 Room Light Assembly
- R 15 No.3 Room Light Assembly
  
- h 1 Tire Carrier Courtesy Light Switch
- h 2 License Plate Light Assembly RH
  
- i 1 Fuel Temperature Sensor
- i 2 Pressure Accumulator Sensor


Position of Parts in Body <RHD>

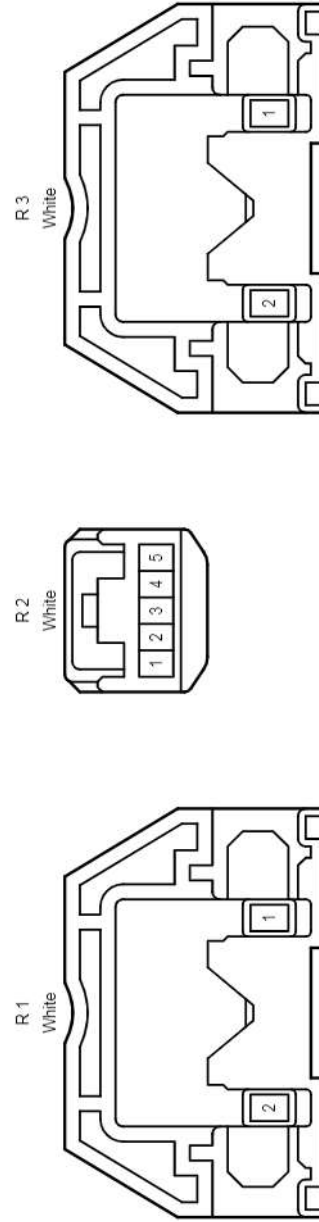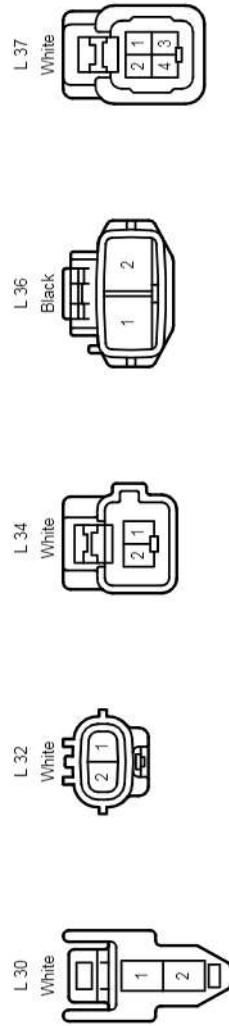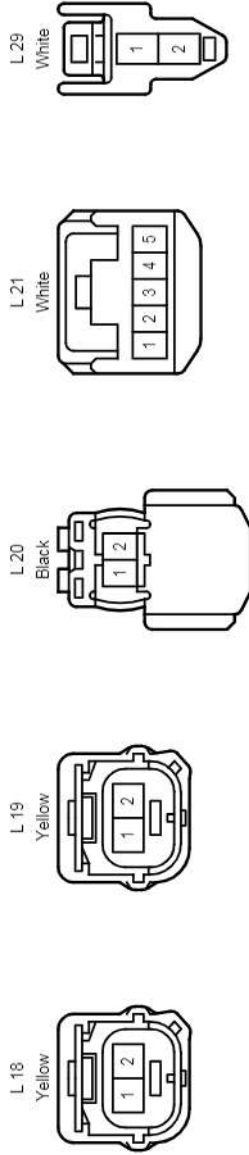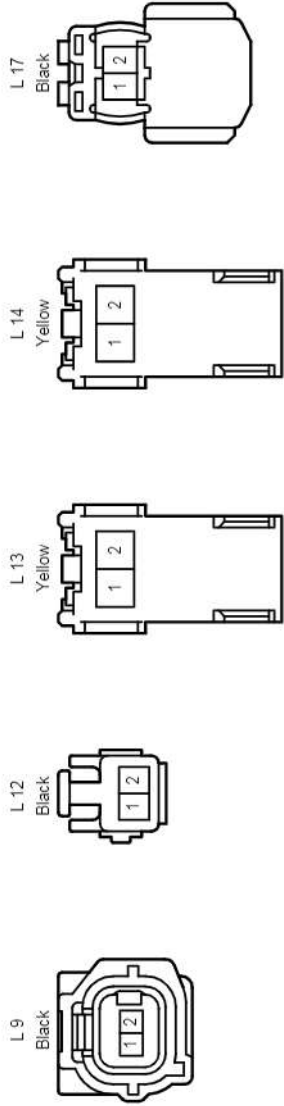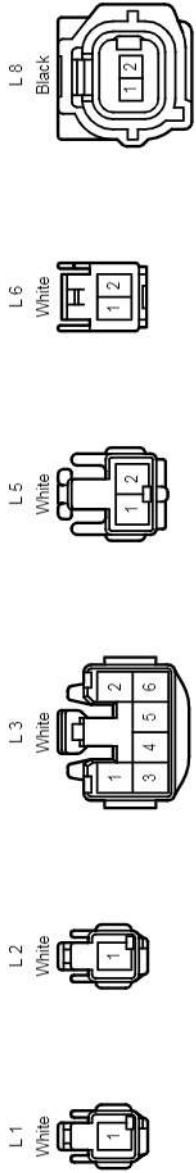

Position of Parts in Body <RHD>

     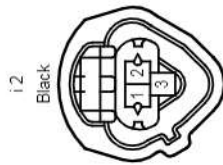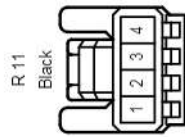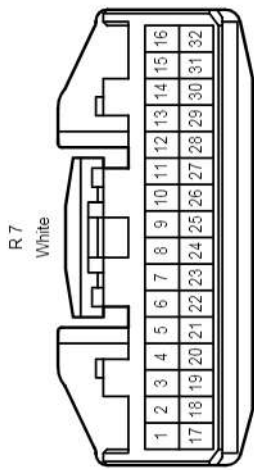

Position of Parts in Body <RHD>


















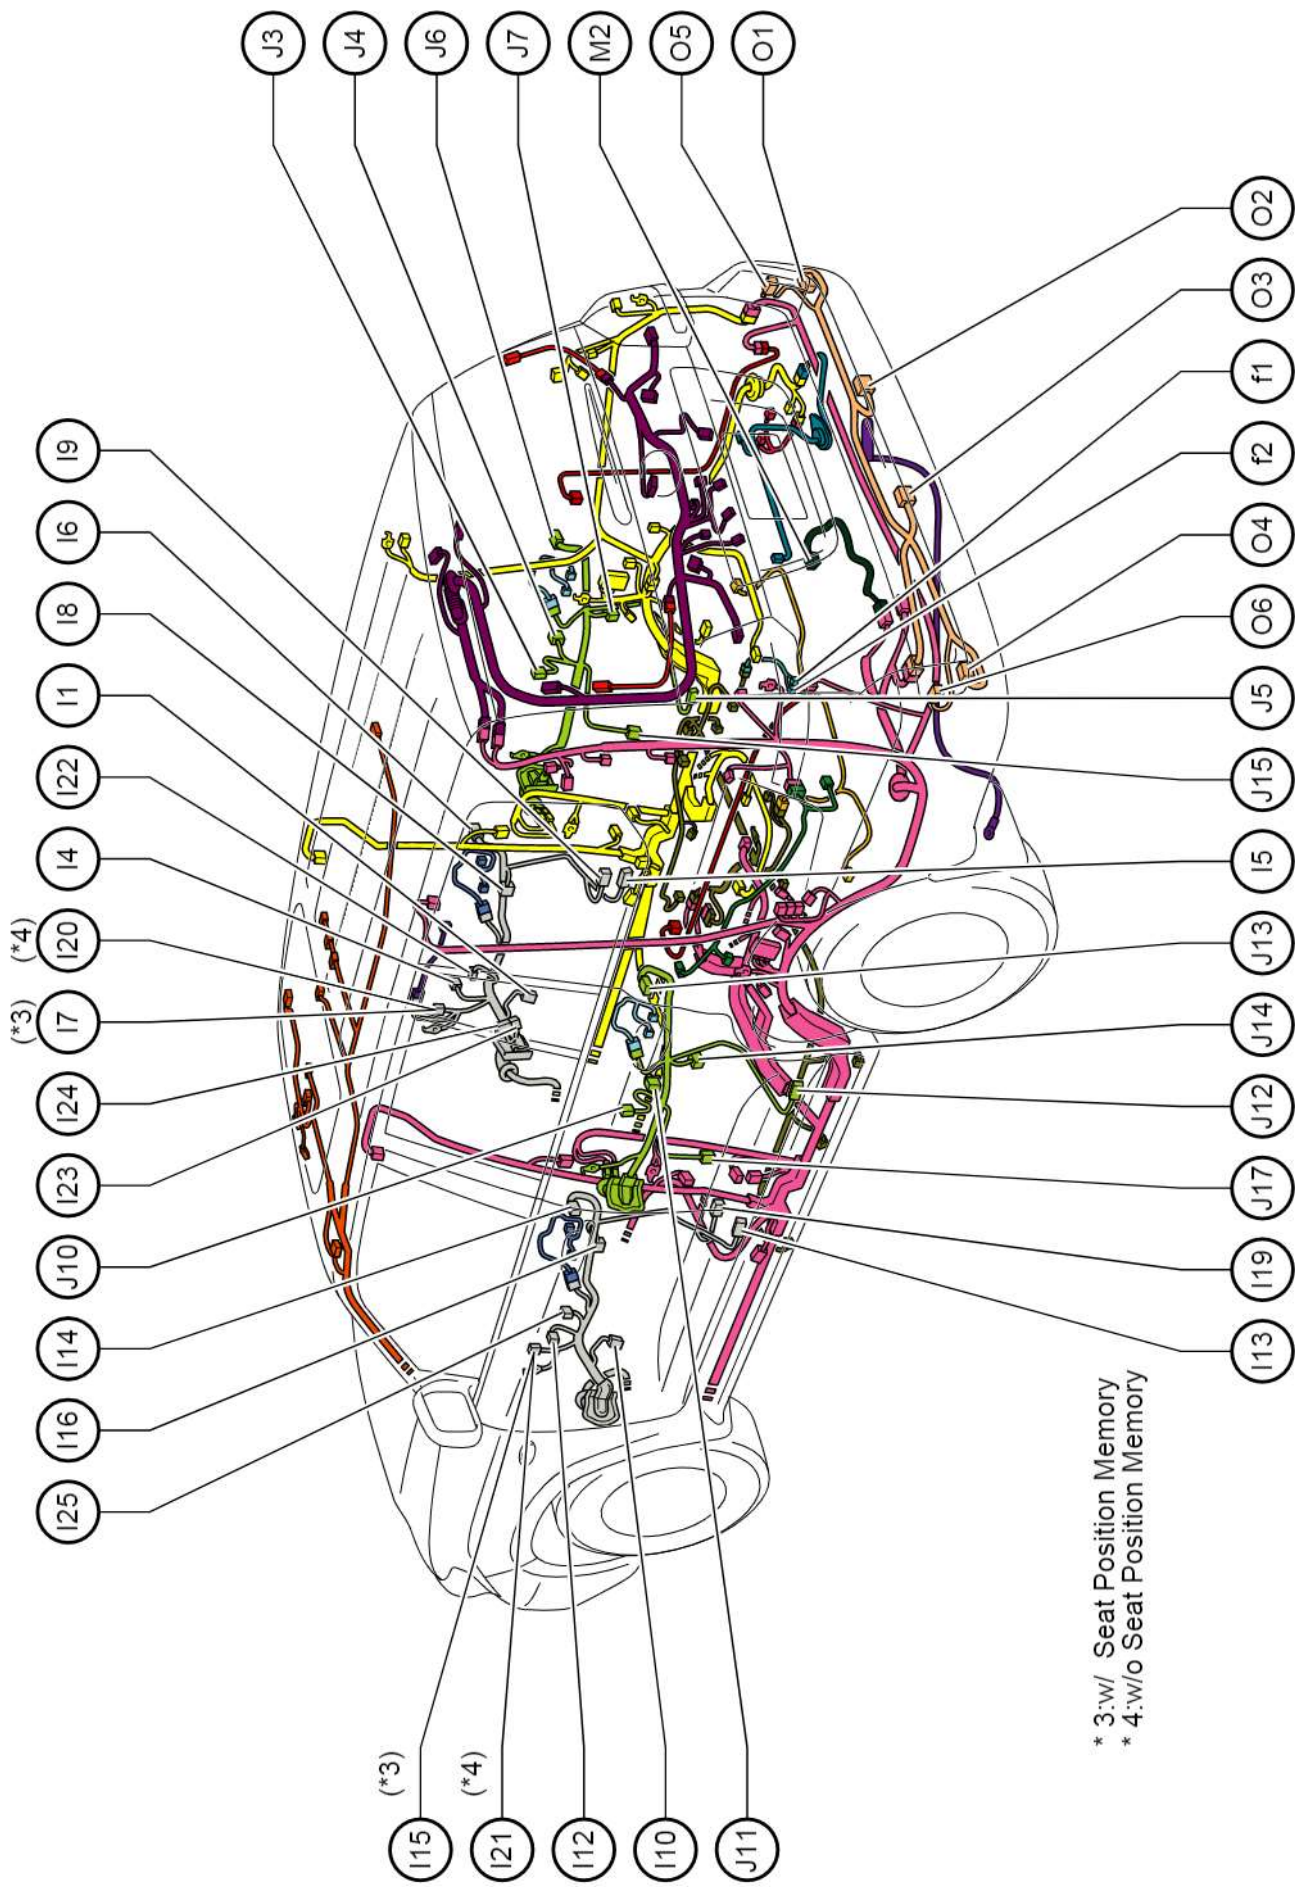


\* 3:w/ Seat Position Memory  
 \* 4:w/o Seat Position Memory


Position of Parts in Body <RHD>

I	1	Front No.1 Speaker Assembly RH
I	4	Front Power Window Regulator Motor Assembly RH
I	5	Front Door Courtesy Light Assembly RH
I	6	Front Door Lock Assembly RH
I	7	Outer Rear View Mirror Assembly RH
I	8	Diode (Front Door Courtesy Switch RH)
I	9	Front Side Airbag Sensor Assembly RH
I	10	Front No.1 Speaker Assembly LH
I	12	Front Power Window Regulator Motor Assembly LH
I	13	Front Door Courtesy Light Assembly LH
I	14	Front Door Lock Assembly LH
I	15	Outer Rear View Mirror Assembly LH
I	16	Diode (Front Door Courtesy Switch LH)
I	19	Front Side Airbag Sensor Assembly LH
I	20	Outer Rear View Mirror Assembly RH
I	21	Outer Rear View Mirror Assembly LH
I	22	Multiplex Network Master Switch Assembly
I	23	Outer Mirror Control ECU Assembly
I	24	Outer Mirror Control ECU Assembly
I	25	Front Power Window Regulator Switch Assembly LH
J	3	Rear Power Window Regulator Switch Assembly RH
J	4	Rear Power Window Regulator Motor Assembly RH
J	5	Rear Door Courtesy Light Assembly RH
J	6	Rear Door Lock Assembly RH
J	7	Diode (Rear Door Courtesy Switch RH)
J	10	Rear Power Window Regulator Switch Assembly LH
J	11	Rear Power Window Regulator Motor Assembly LH
J	12	Rear Door Courtesy Light Assembly LH
J	13	Rear Door Lock Assembly LH
J	14	Diode (Rear Door Courtesy Switch LH)
J	15	Rear Speaker Set RH
J	17	Rear Speaker Set LH
M	2	Fuel Sender Gage Assembly (Sub)
O	1	No.2 Ultrasonic Sensor RH
O	2	No.3 Ultrasonic Sensor RH
O	3	No.3 Ultrasonic Sensor LH
O	4	No.2 Ultrasonic Sensor LH
O	5	Rear Fog Light Assembly RH
O	6	Rear Fog Light Assembly LH
f	1	Differential Lock Shift Actuator

      Position of Parts in Body <RHD>

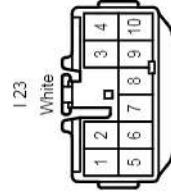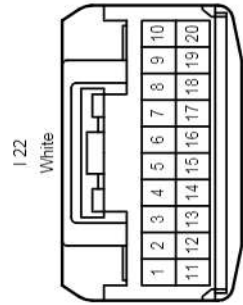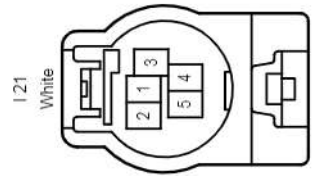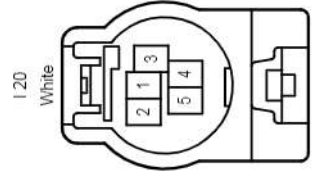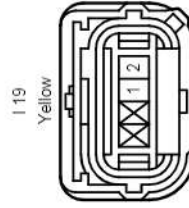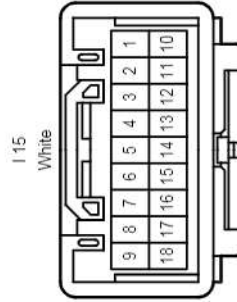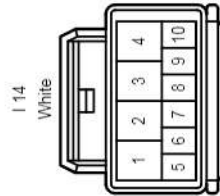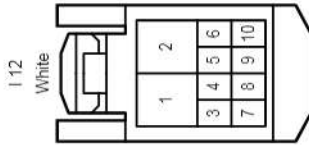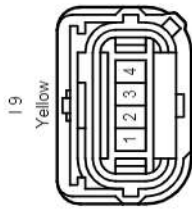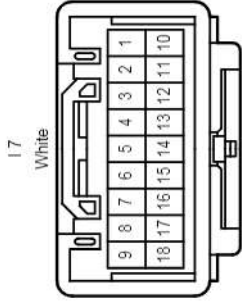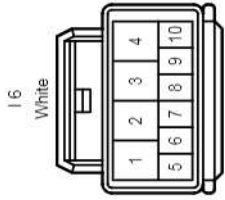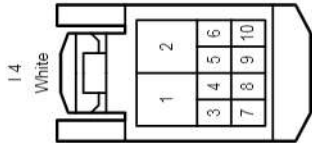


Position of Parts in Body <RHD>

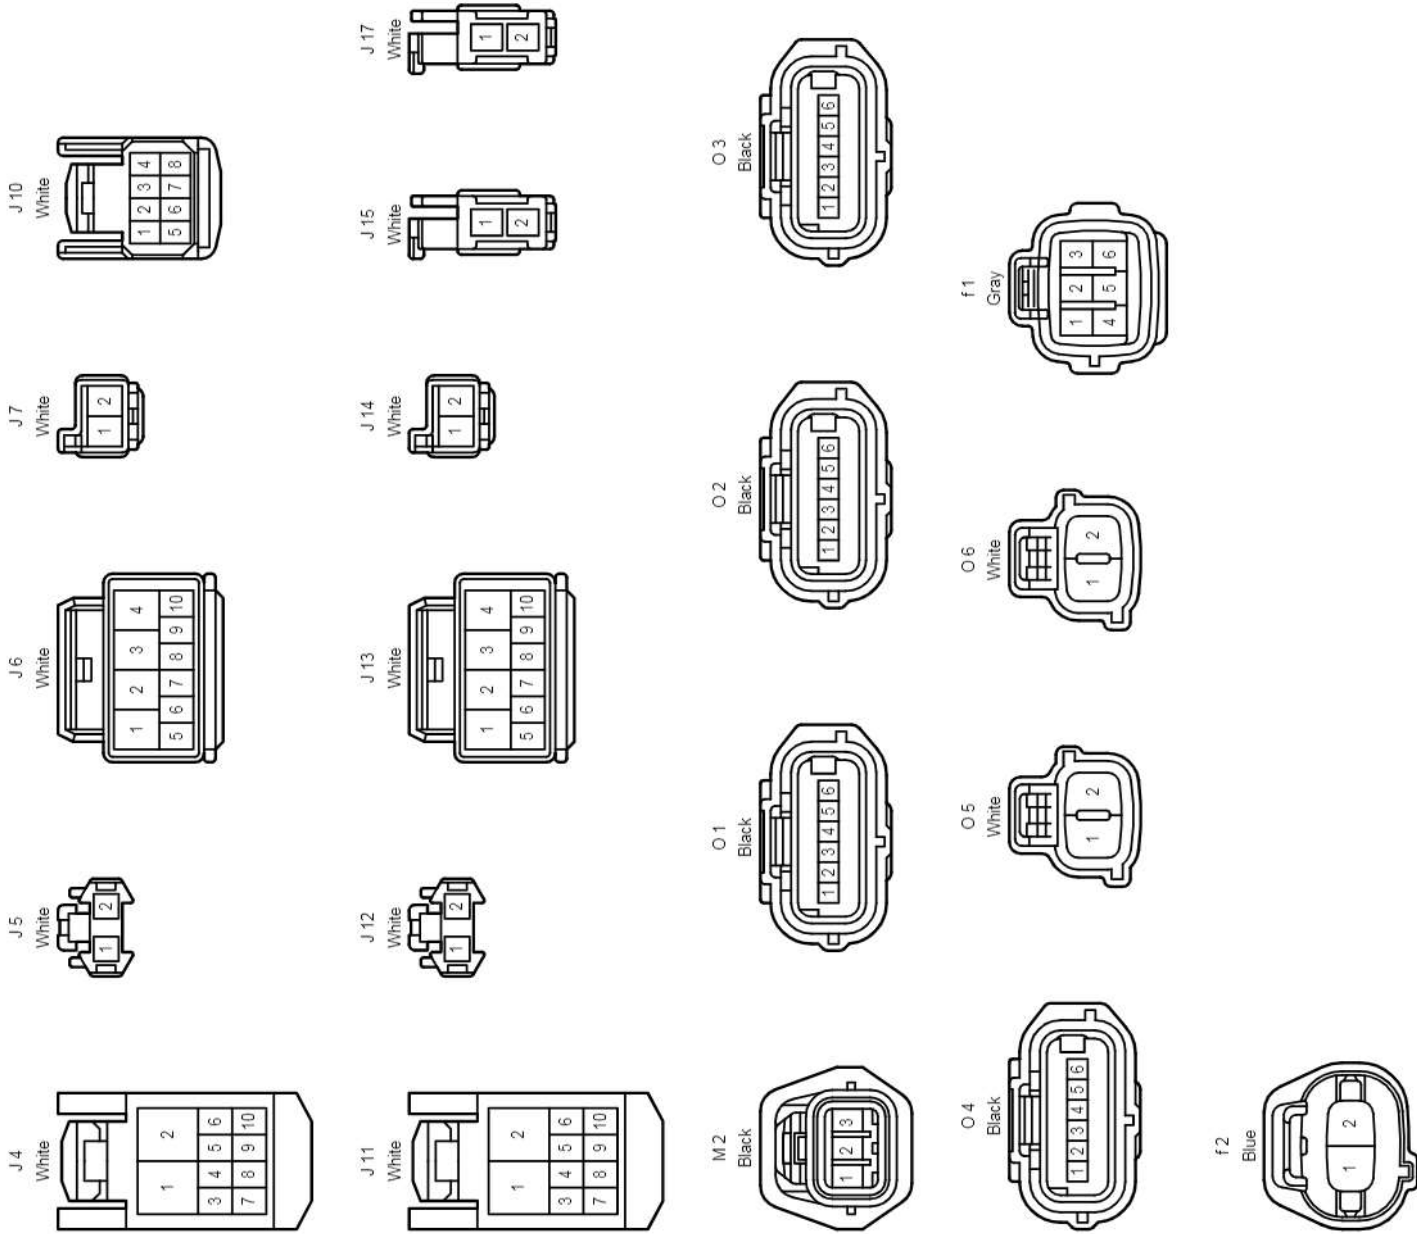



Position of Parts in Body <RHD>

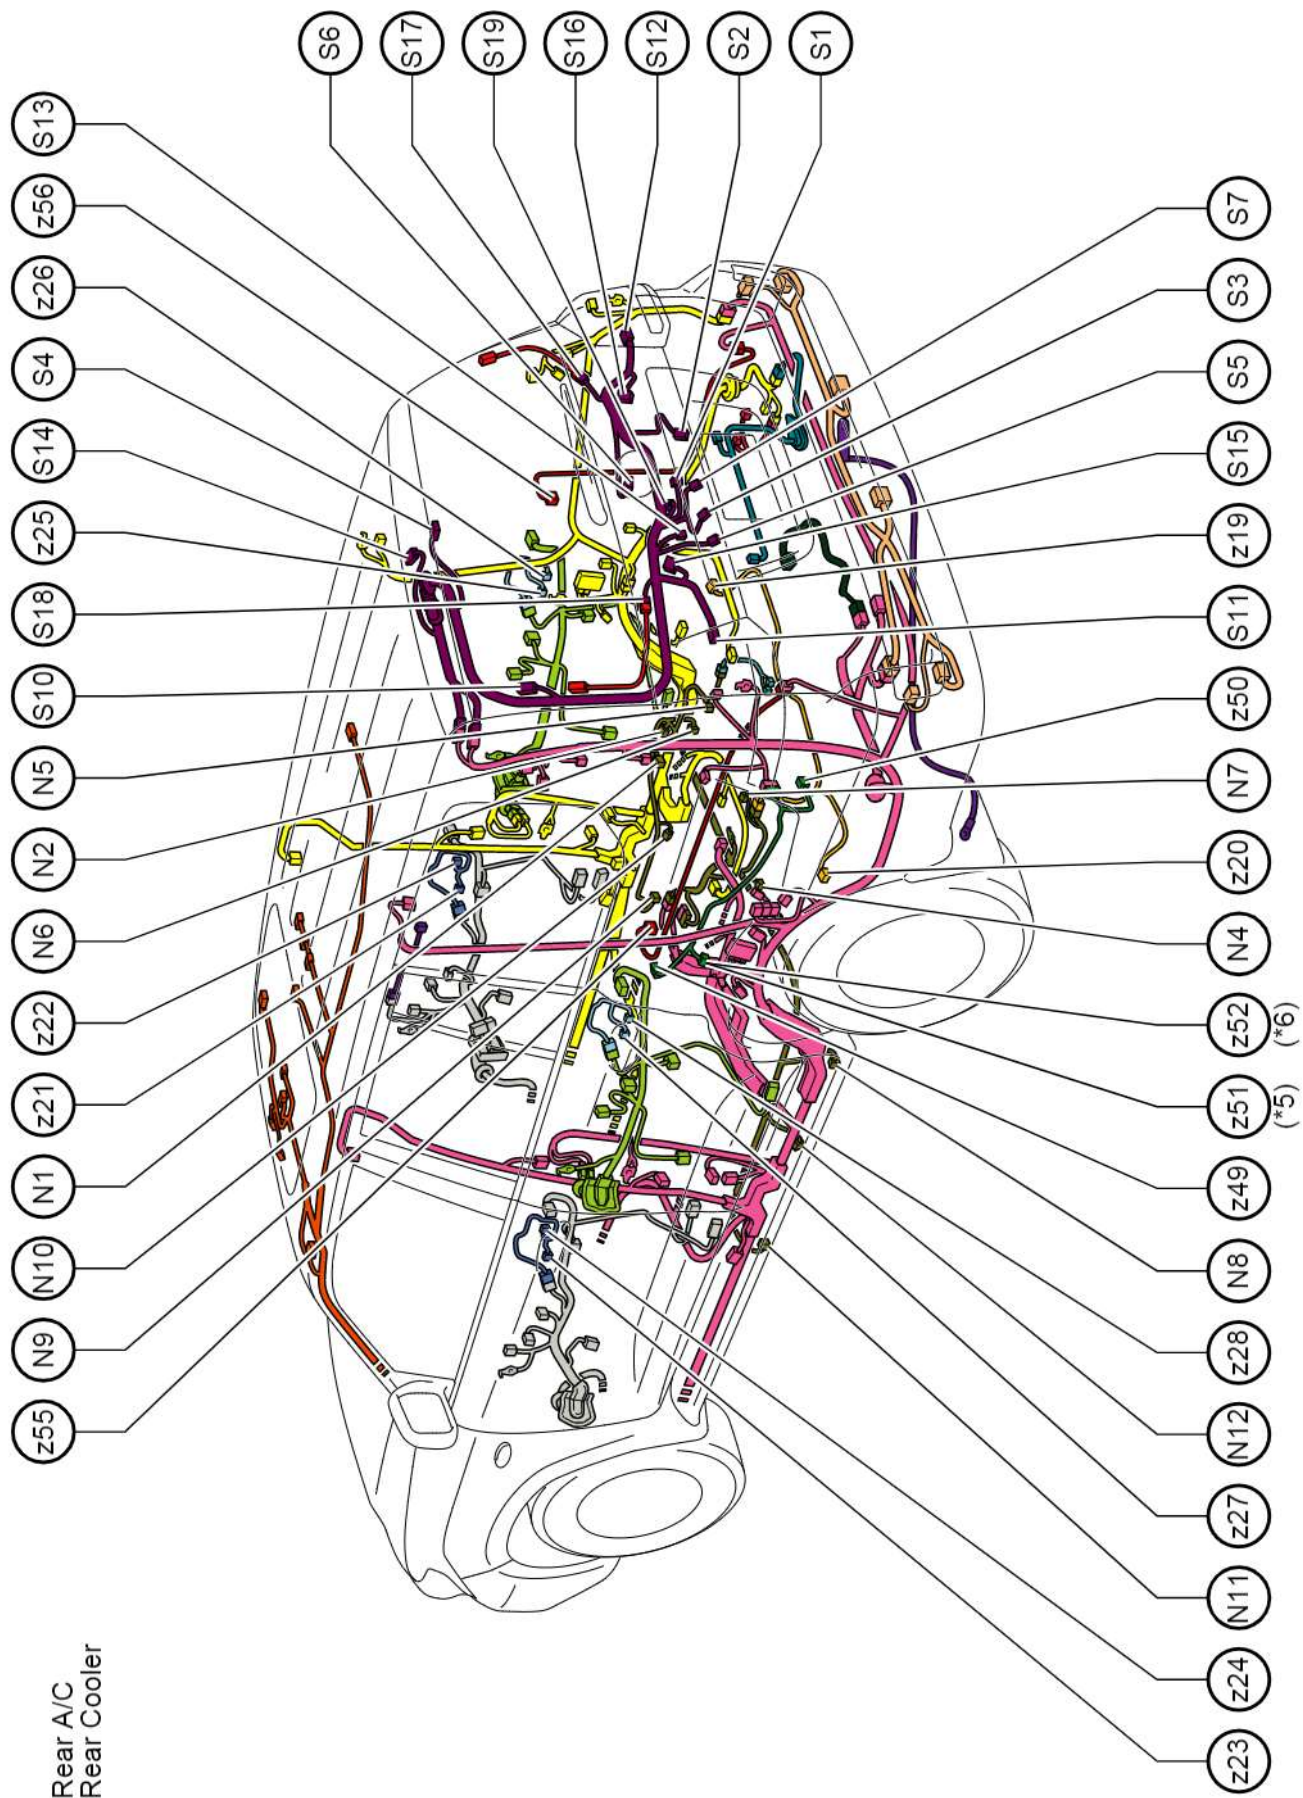

\* 5:Rear A/C  
 \* 6:Rear Cooler

(\*5)  
 (\*6)











 
 
 












Position of Parts in Body <RHD>

- N 1 Fuel Sender Gage Assembly (Main)
- N 2 Fuel Pump Control ECU Assembly
- N 4 No.1 Height Control Valve Assembly
- N 5 Rear Height Control Sensor Sub-Assembly RH
- N 6 Rear Shock Absorber Assembly RH
- N 7 Rear Height Control Sensor Sub-Assembly LH
- N 8 Rear Shock Absorber Assembly LH
- N 9 Front Shock Absorber Assembly RH
- N 10 Front Shock Absorber Control Valve Assembly RH
- N 11 Front Shock Absorber Assembly LH
- N 12 Front Shock Absorber Control Valve Assembly LH










- S 1 Back Door Lock Assembly
- S 2 License Plate Light Assembly RH
- S 3 License Plate Light Assembly LH
- S 4 Center Stop Light Assembly
- S 5 Rear Television Camera Assembly
- S 6 Rear Wiper Motor Assembly
- S 7 Back Door Opener Switch Assembly
- S 10 Glass Breakage Sensor (Back Door Glass)
- S 11 Rear Light Assembly LH
- S 12 Rear Light Assembly RH
- S 13 Option Connector (Back Guide Monitor)
- S 14 Noise Filter (Rear Window Defogger and Stop)
- S 15 Junction Connector
- S 16 Junction Connector
- S 17 Rear Window Defogger (Back Door Glass)
- S 18 Rear Window Defogger (Back Door Glass)
- S 19 Power Back Door Main Switch

- Z 19 Rear Speed Sensor RH
- Z 20 Rear Speed Sensor LH
- Z 21 Front Door Outside Handle Assembly RH
- Z 22 Front Door Electrical Key Oscillator RH
- Z 23 Front Door Outside Handle Assembly LH
- Z 24 Front Door Electrical Key Oscillator LH
- Z 25 Rear Door Outside Handle Assembly RH
- Z 26 Rear Door Electrical Key Oscillator RH
- Z 27 Rear Door Outside Handle Assembly LH
- Z 28 Rear Door Electrical Key Oscillator LH
- Z 49 Rear Blower with Fan Motor Sub-Assembly
- Z 50 Rear Cooling Unit Expansion Valve
- Z 51 Blower Motor Control
- Z 52 Rear Blower Resistor


Position of Parts in Body <RHD>

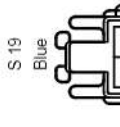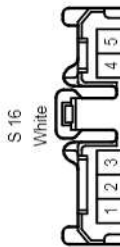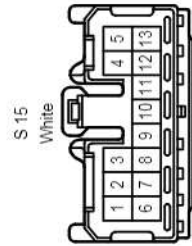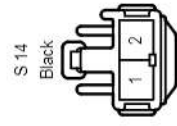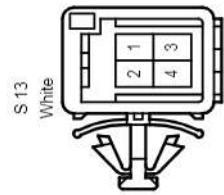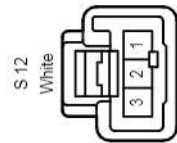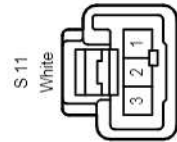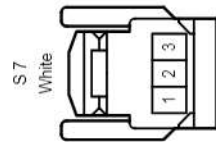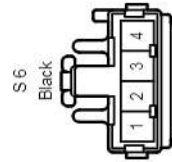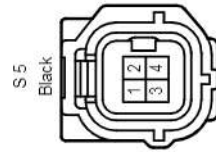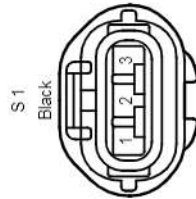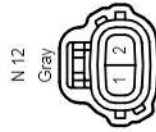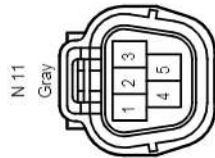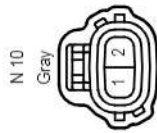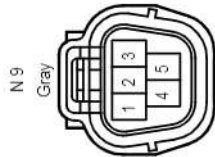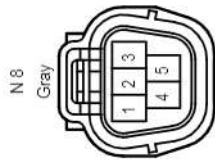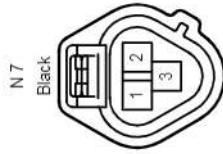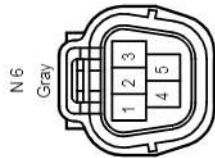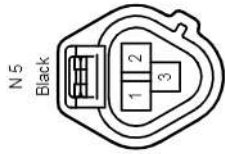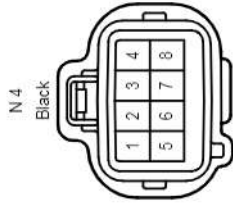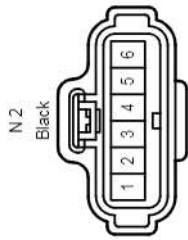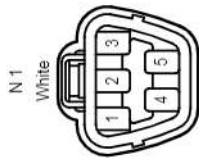

Position of Parts in Body <RHD>

 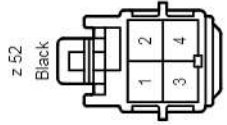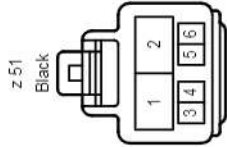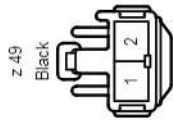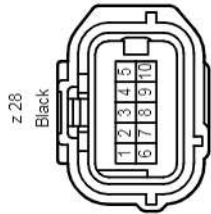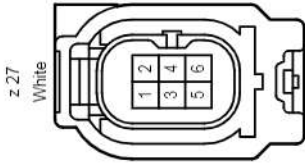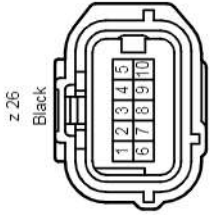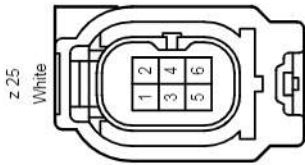
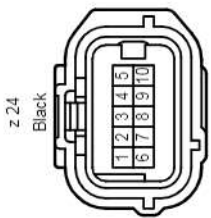


Wire and Wire in Body <RHD>


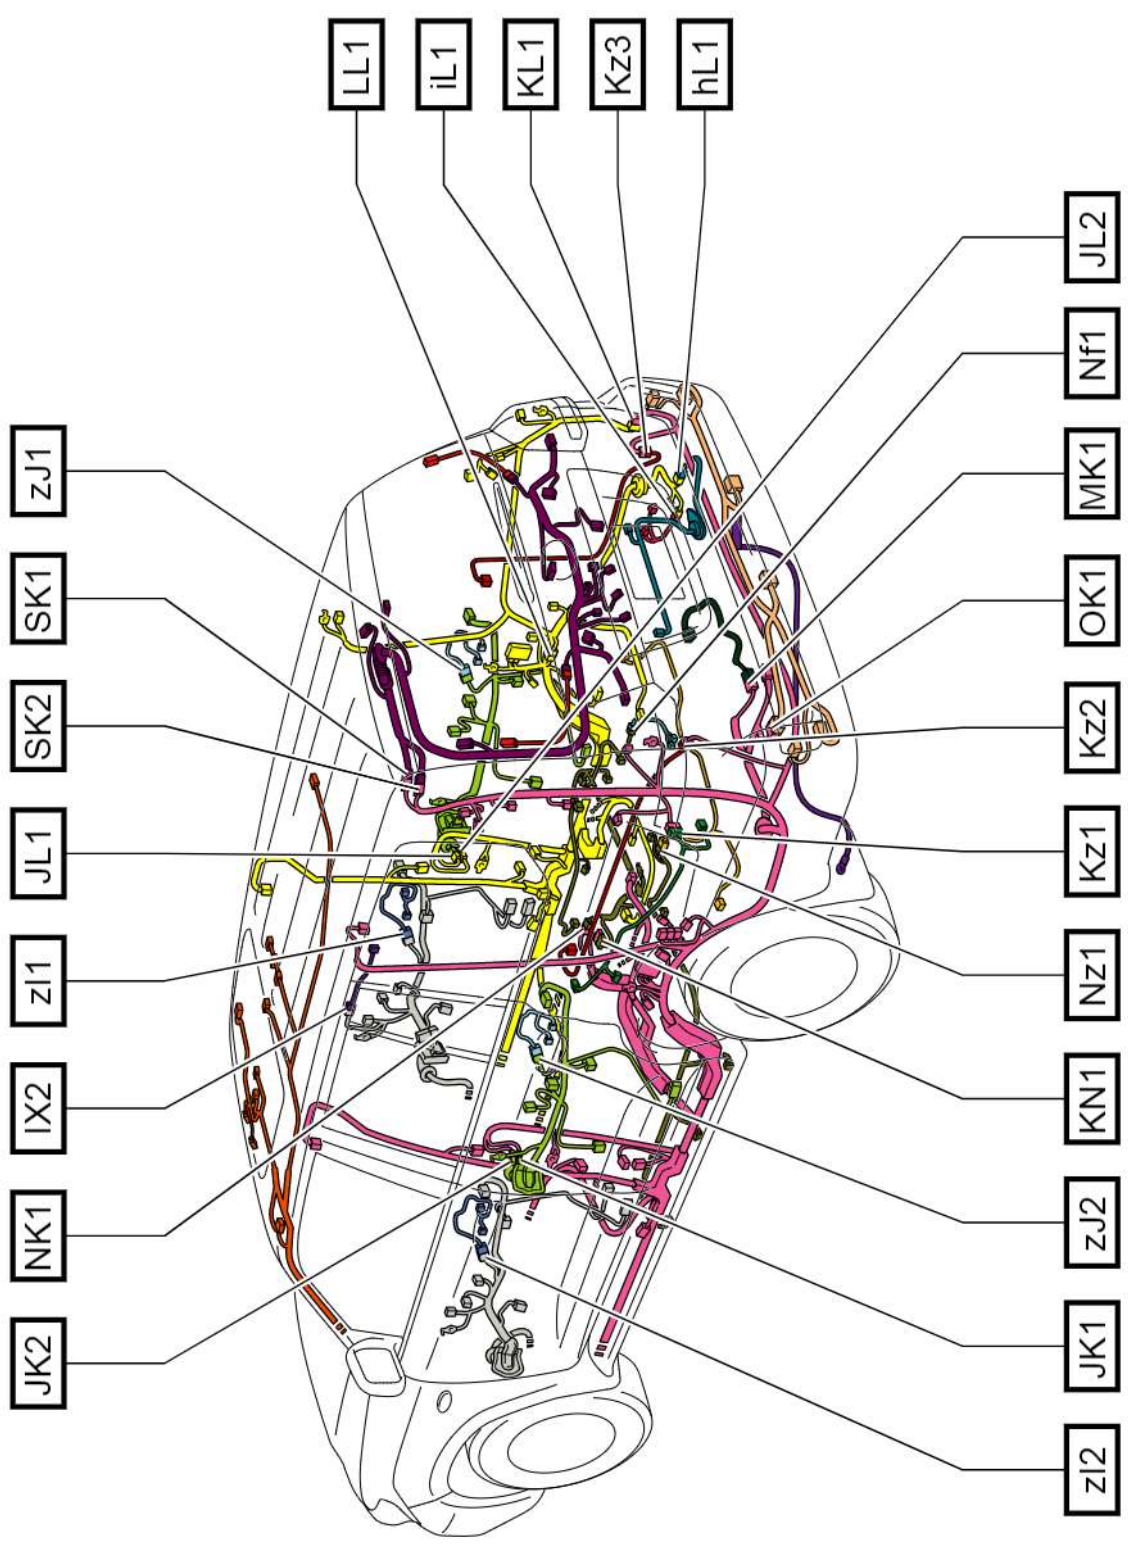


Wire and Wire in Body <RHD>



IX2  
White

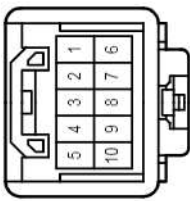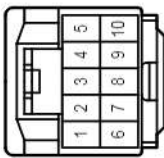



JK1  
White

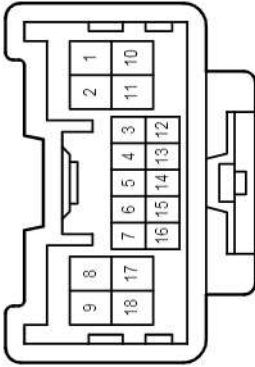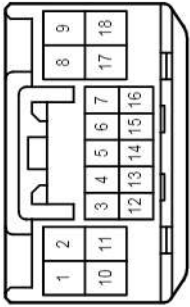



JK2  
White

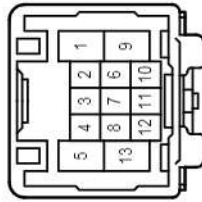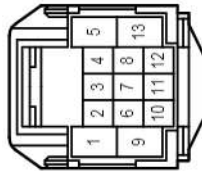



JL1  
White

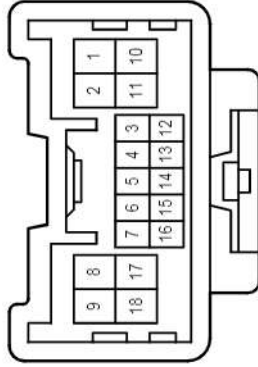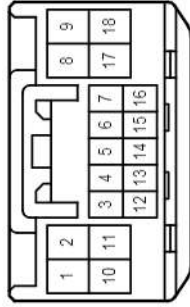

JL2  
White

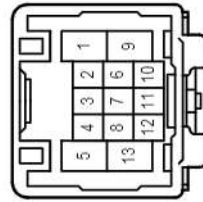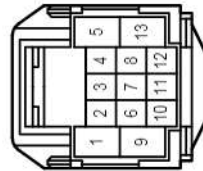



KL1  
White

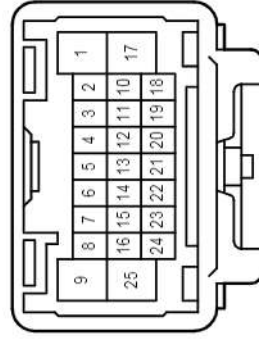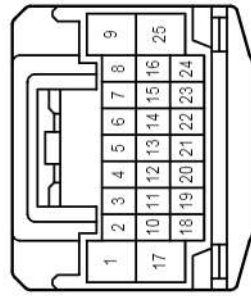


KN1  
White









Kz1  
Blue

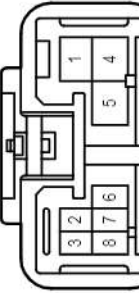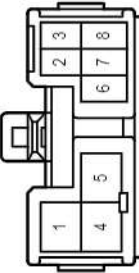

Wire and Wire in Body <RHD>

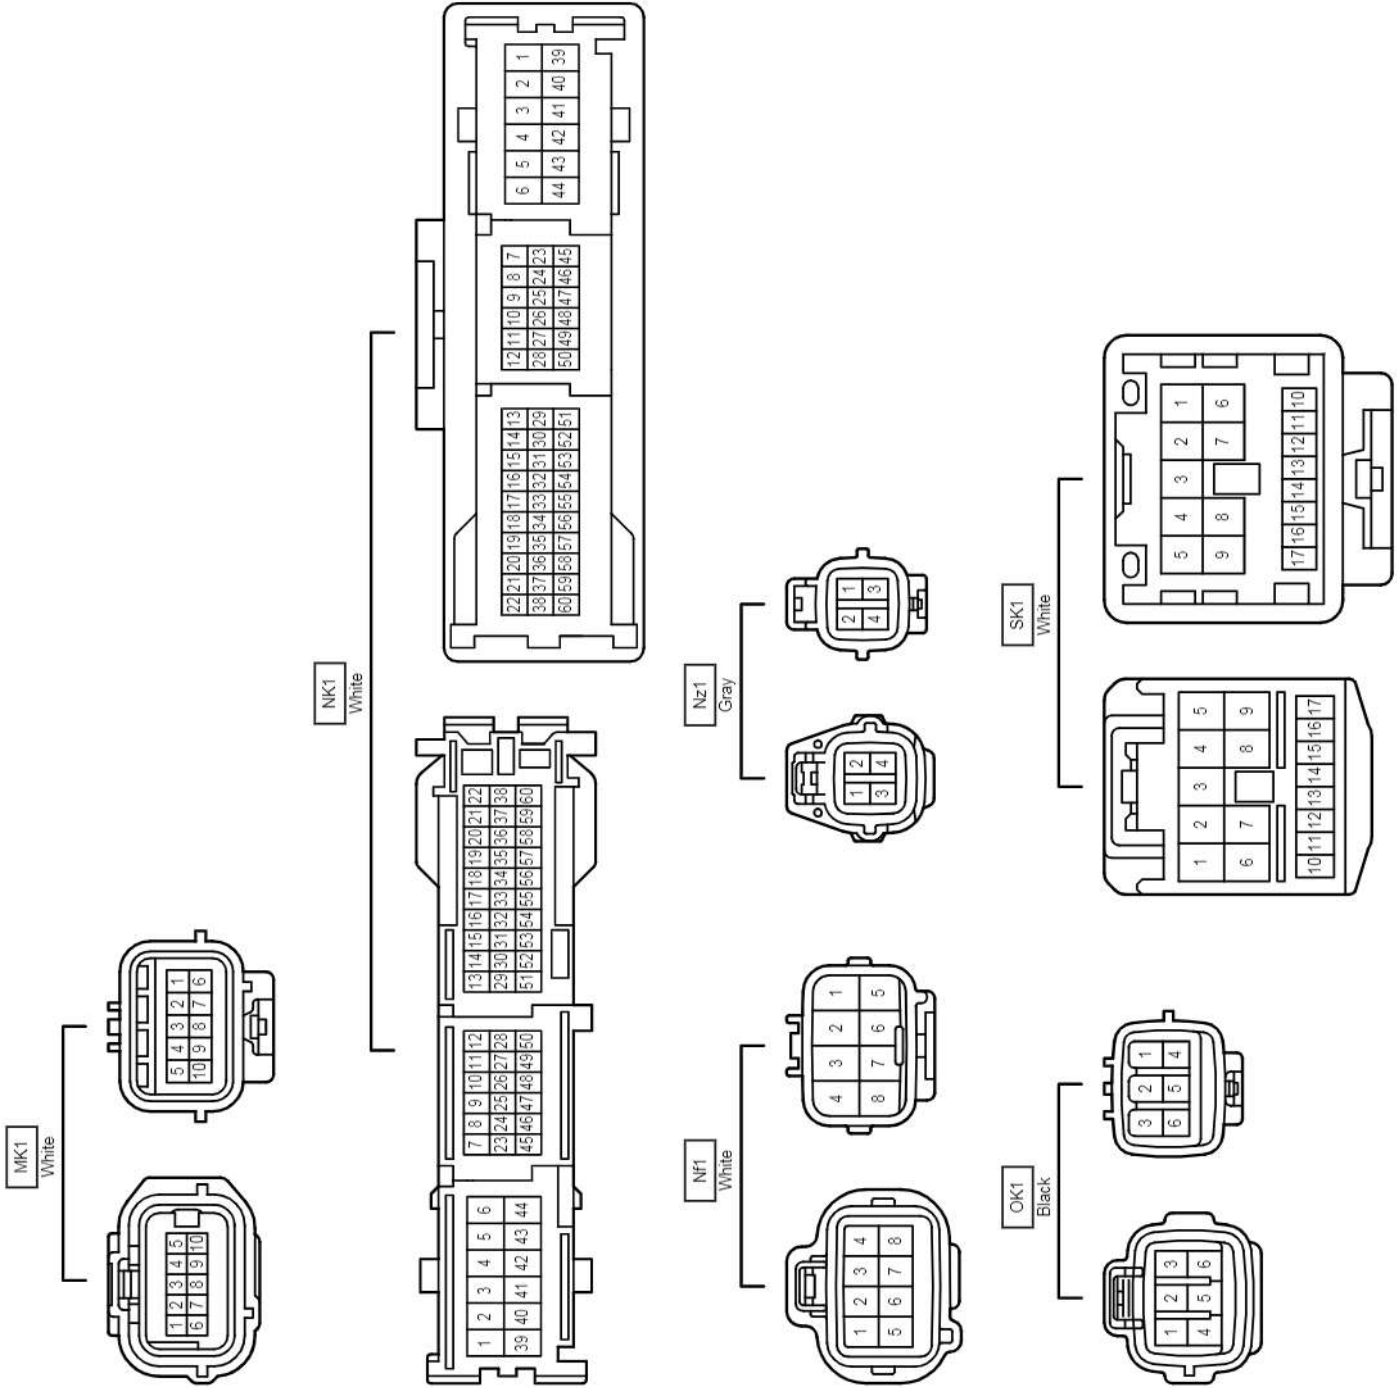


Wire and Wire in Body <RHD>

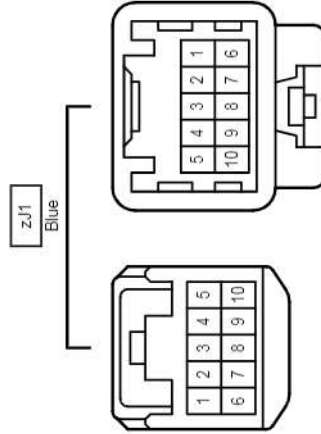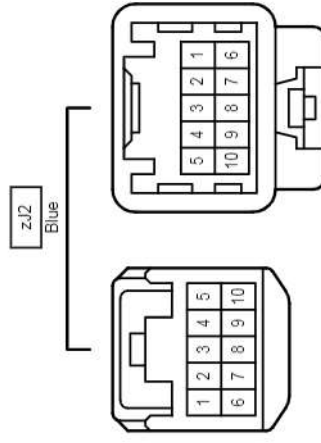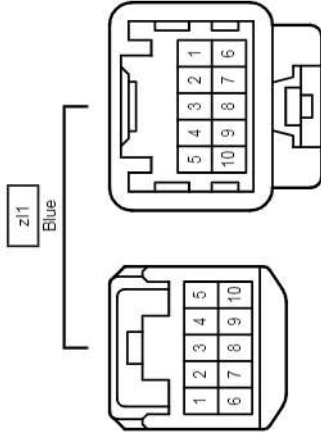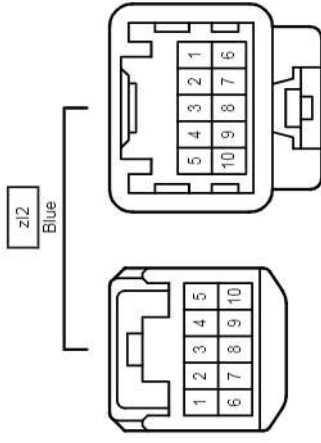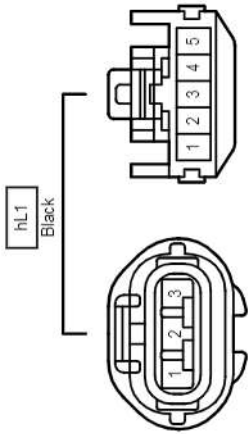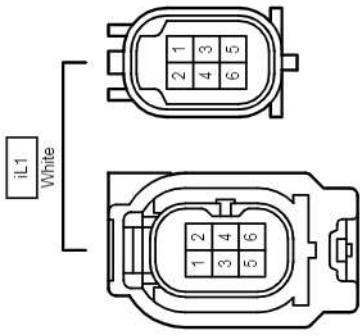


























Position of Parts in Seat <LHD Front Seat>

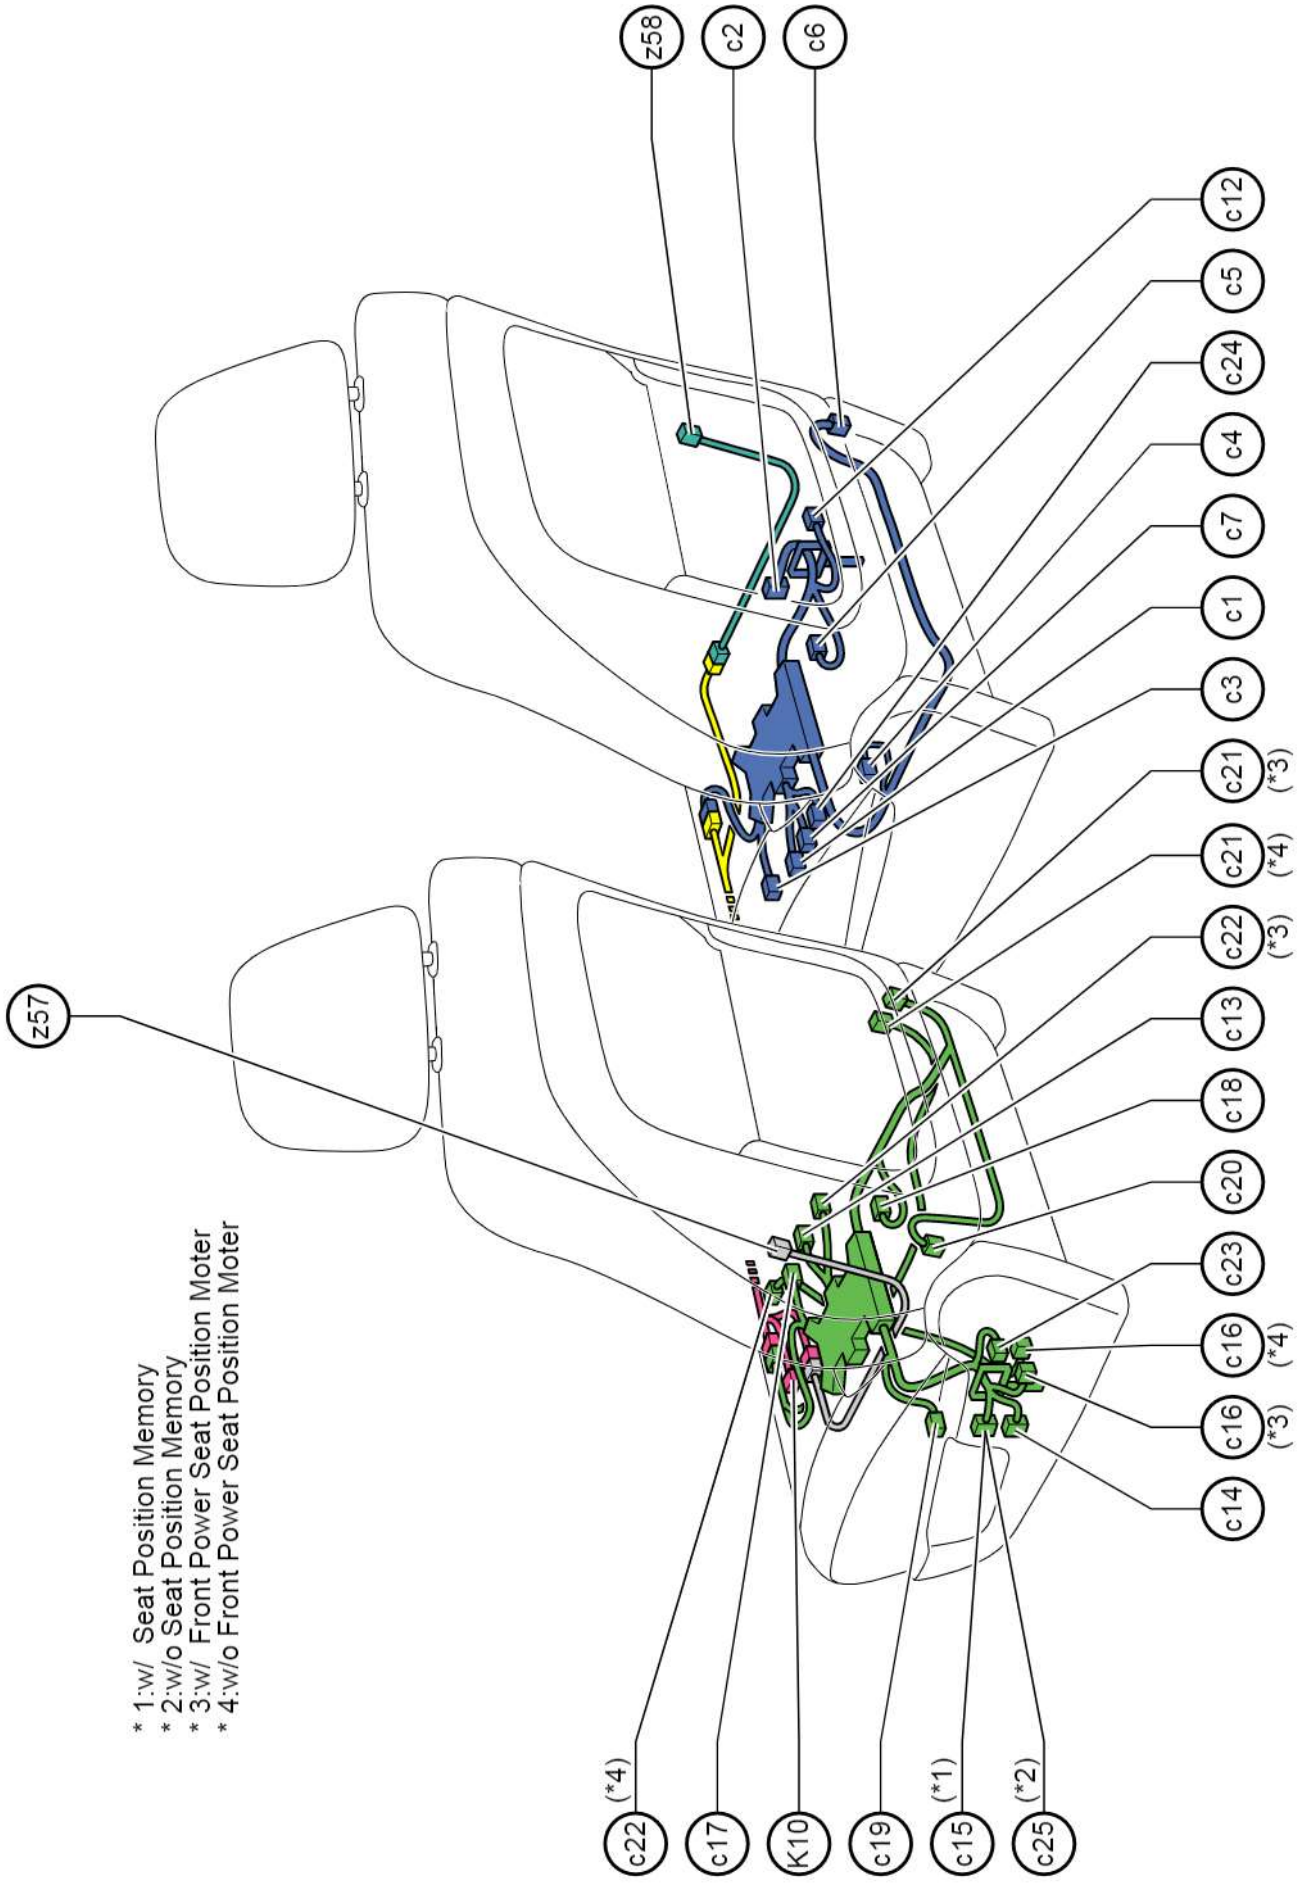


- \* 1:w/ Seat Position Memory
- \* 2:w/o Seat Position Memory
- \* 3:w/ Front Power Seat Position Moter
- \* 4:w/o Front Power Seat Position Moter

- K 10 Front Seat Inner Belt Assembly LH
- c 1 Front Seat Heater Assembly RH
- c 2 Front Power Seat Switch Assembly RH
- c 3 Front Power Seat Slide Position Motor Assembly RH
- c 4 Front Power Seat Lift Position Motor Assembly RH
- c 5 Front Power Seat Vertical Position Motor Assembly RH
- c 6 Front Power Seat Reclining Position Motor Assembly RH
- c 7 Front Seat Inner Belt Assembly RH
- c 12 Junction Connector
- c 13 Front Seat Heater Assembly LH
- c 14 Front Position Control ECU and Switch Assembly LH
- c 15 Front Position Control ECU and Switch Assembly LH
- c 16 Front Power Seat Switch Assembly LH
- c 17 Front Power Seat Slide Position Motor Assembly LH
- c 18 Front Power Seat Lift Position Motor Assembly LH
- c 19 Front Power Seat Vertical Position Motor Assembly LH
- c 20 Front Power Seat Reclining Position Motor Assembly LH
- c 21 Front Lumbar Support Forward and Back Motor Assembly LH
- c 22 Front Seat Inner Belt Assembly LH
- c 23 Junction Connector
- c 24 Front Seat Inner Belt Assembly RH
- c 25 Front Power Seat Switch Assembly LH
- z 57 Front Side Airbag Squib Circuit LH
- z 58 Front Side Airbag Squib Circuit RH

           
Position of Parts in Seat <LHD Front Seat>

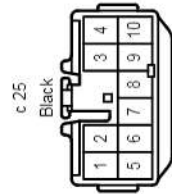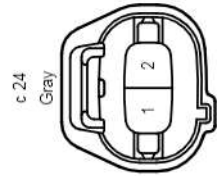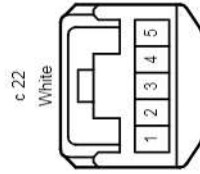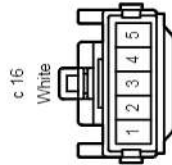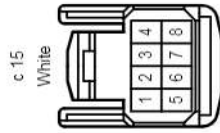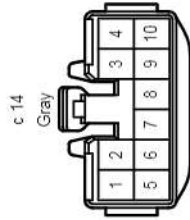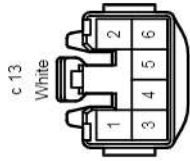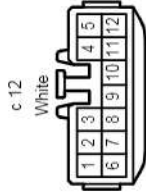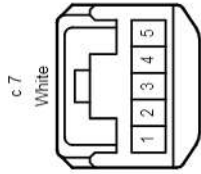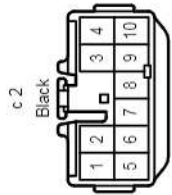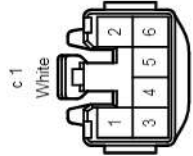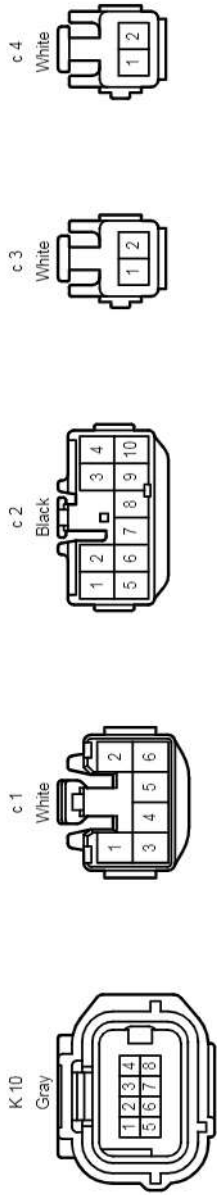


Wire and Wire in Seat <LHD Front Seat>

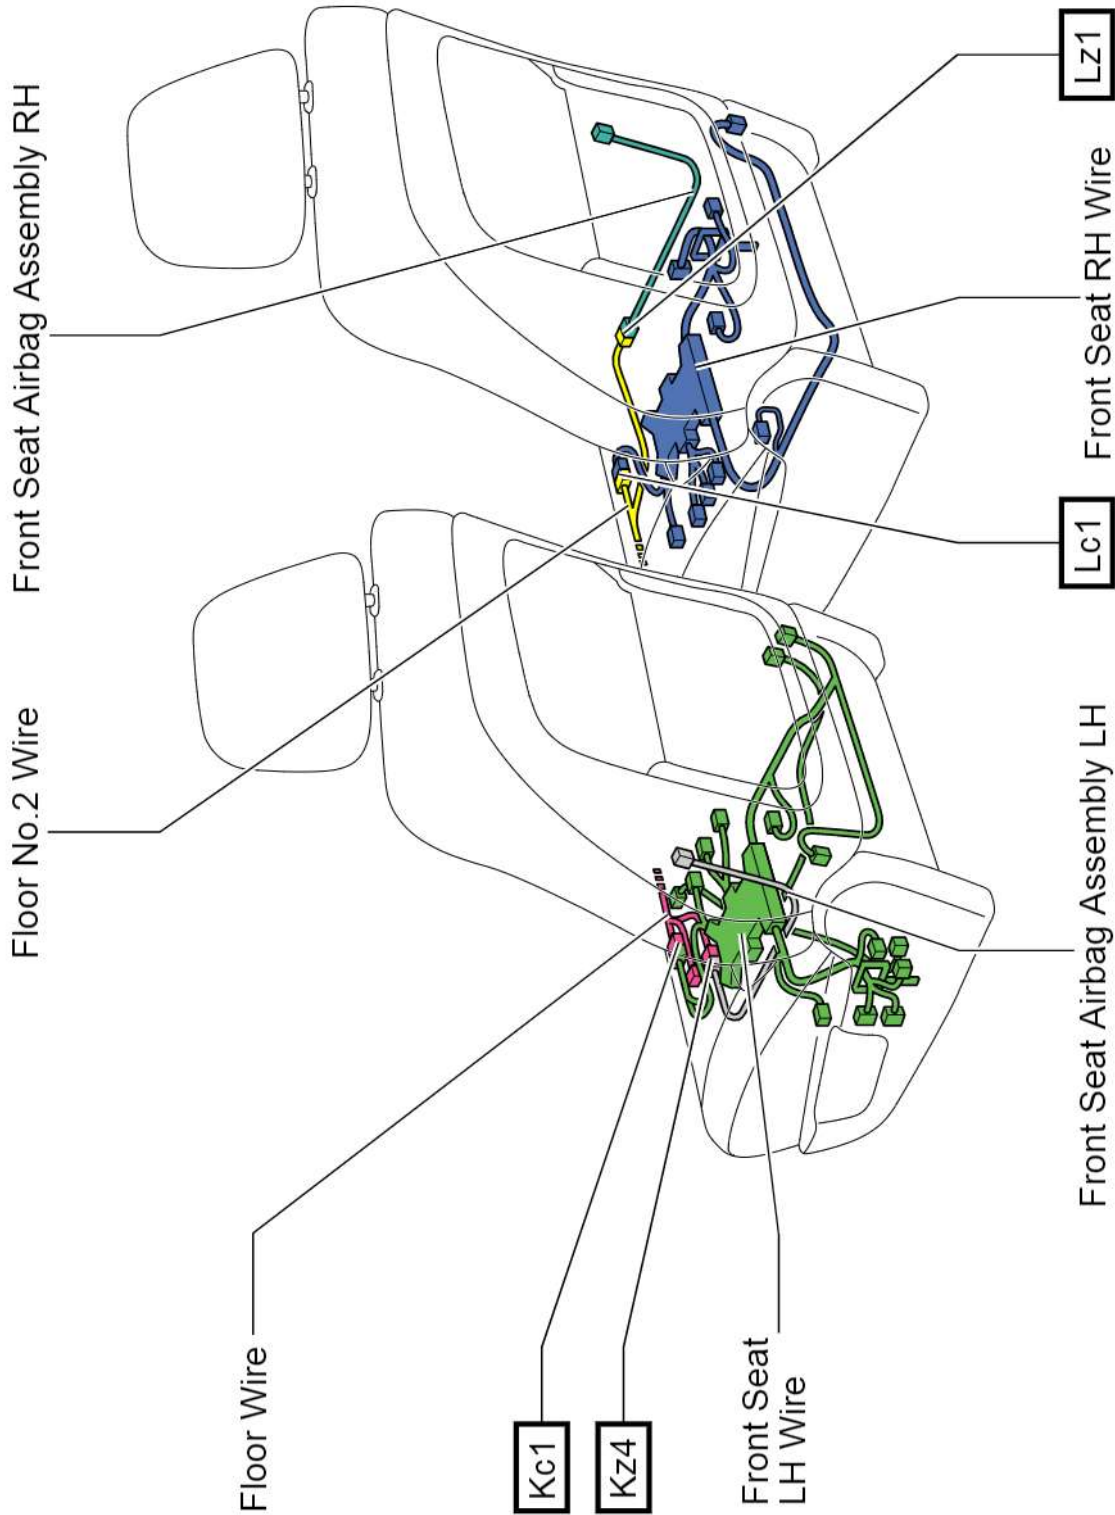

Wire and Wire in Seat <LHD Front Seat>

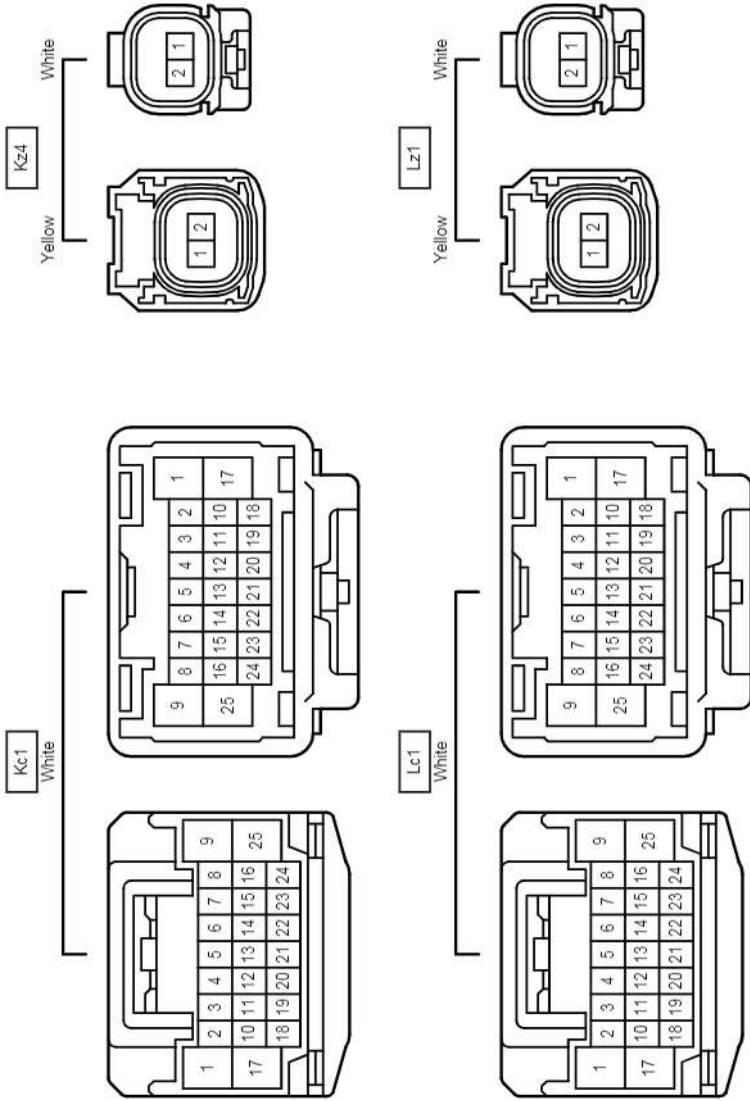























Position of Parts in Seat <RHD Front Seat>

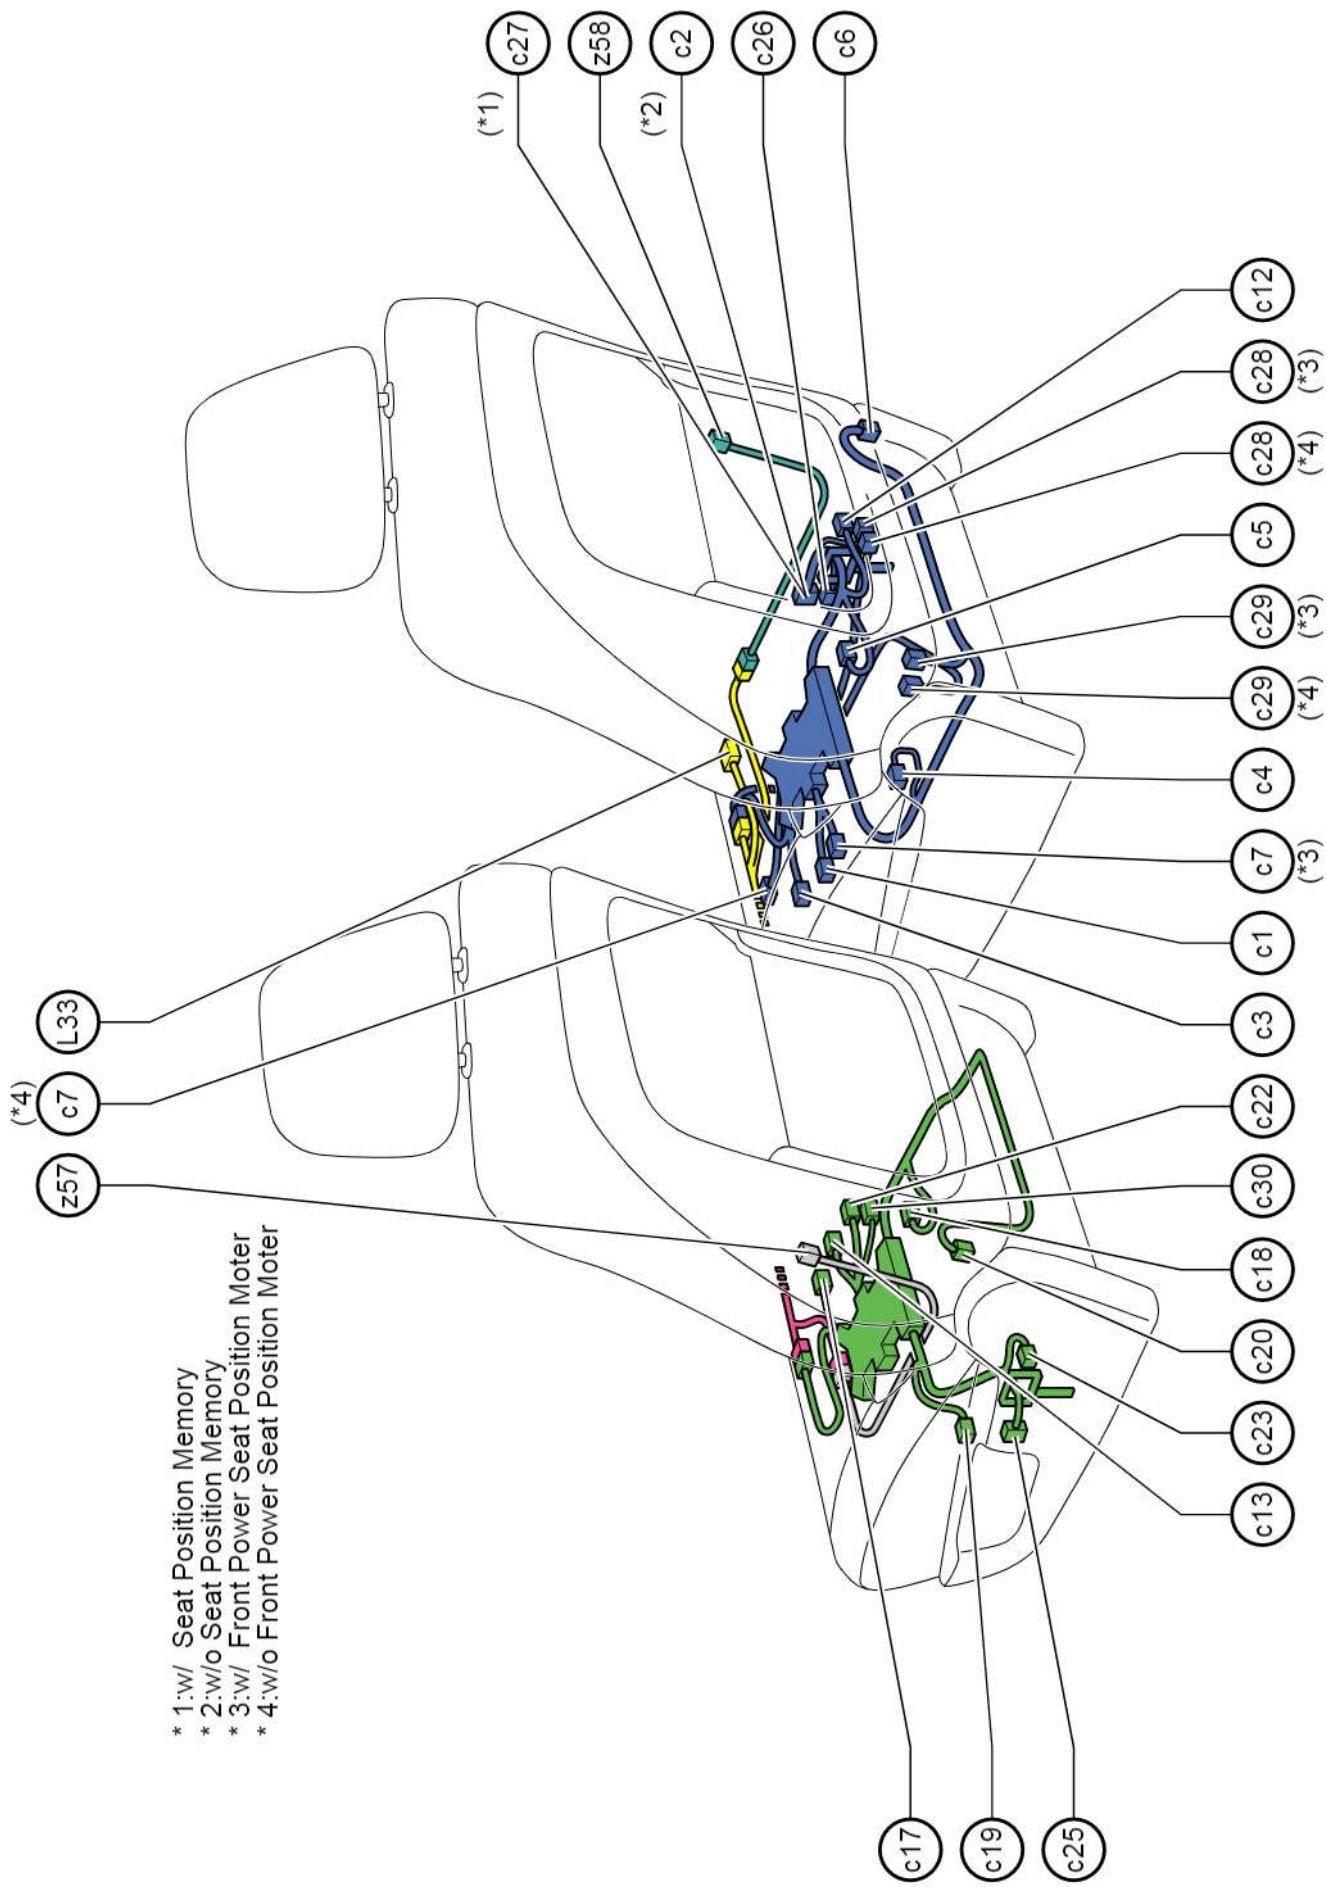

- \* 1:w/ Seat Position Memory
- \* 2:w/o Seat Position Memory
- \* 3:w/ Front Power Seat Position Moter
- \* 4:w/o Front Power Seat Position Moter


- L 33 Front Seat Inner Belt Assembly RH
- c 1 Front Seat Heater Assembly RH
- c 2 Front Power Seat Switch Assembly RH
- c 3 Front Power Seat Slide Position Motor Assembly RH
- c 4 Front Power Seat Lift Position Motor Assembly RH
- c 5 Front Power Seat Vertical Position Motor Assembly RH
- c 6 Front Power Seat Reclining Position Motor Assembly RH
- c 7 Front Seat Inner Belt Assembly RH
- c 12 Junction Connector
- c 13 Front Seat Heater Assembly LH
- c 17 Front Power Seat Slide Position Motor Assembly LH
- c 18 Front Power Seat Lift Position Motor Assembly LH
- c 19 Front Power Seat Vertical Position Motor Assembly LH
- c 20 Front Power Seat Reclining Position Motor Assembly LH
- c 22 Front Seat Inner Belt Assembly LH
- c 23 Junction Connector
- c 25 Front Power Seat Switch Assembly LH
- c 26 Front Position Control ECU and Switch Assembly RH
- c 27 Front Position Control ECU and Switch Assembly RH
- c 28 Front Power Seat Switch Assembly RH
- c 29 Front Lumbar Support Forward and Back Motor Assembly RH
- c 30 Front Seat Inner Belt Assembly LH
- z 57 Front Side Airbag Squib Circuit LH
- z 58 Front Side Airbag Squib Circuit RH

         Position of Parts in Seat <RHD Front Seat>

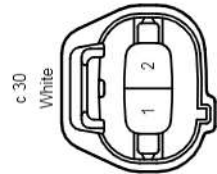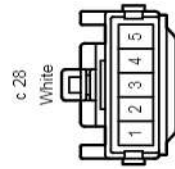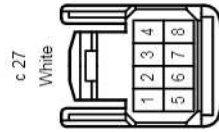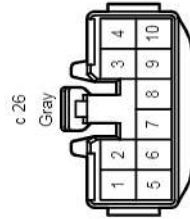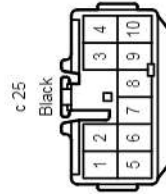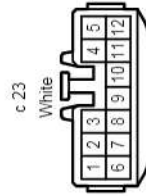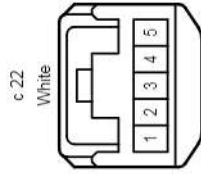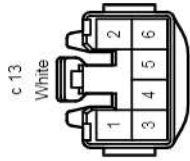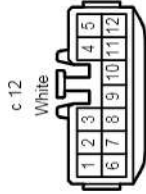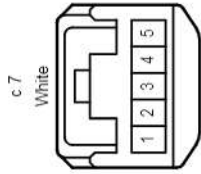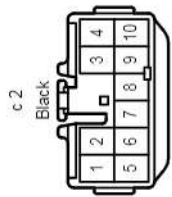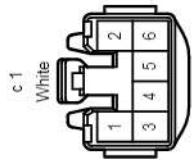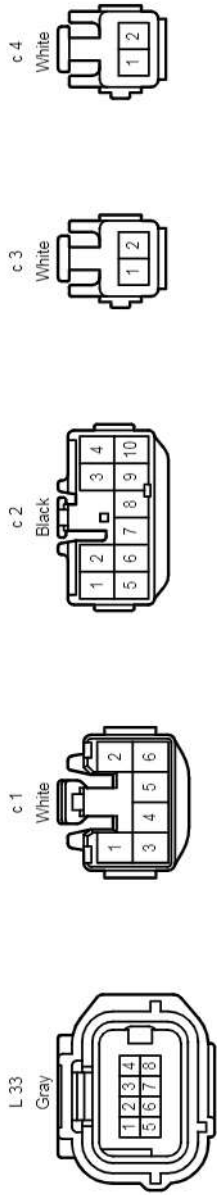





Wire and Wire in Seat <RHD Front Seat>

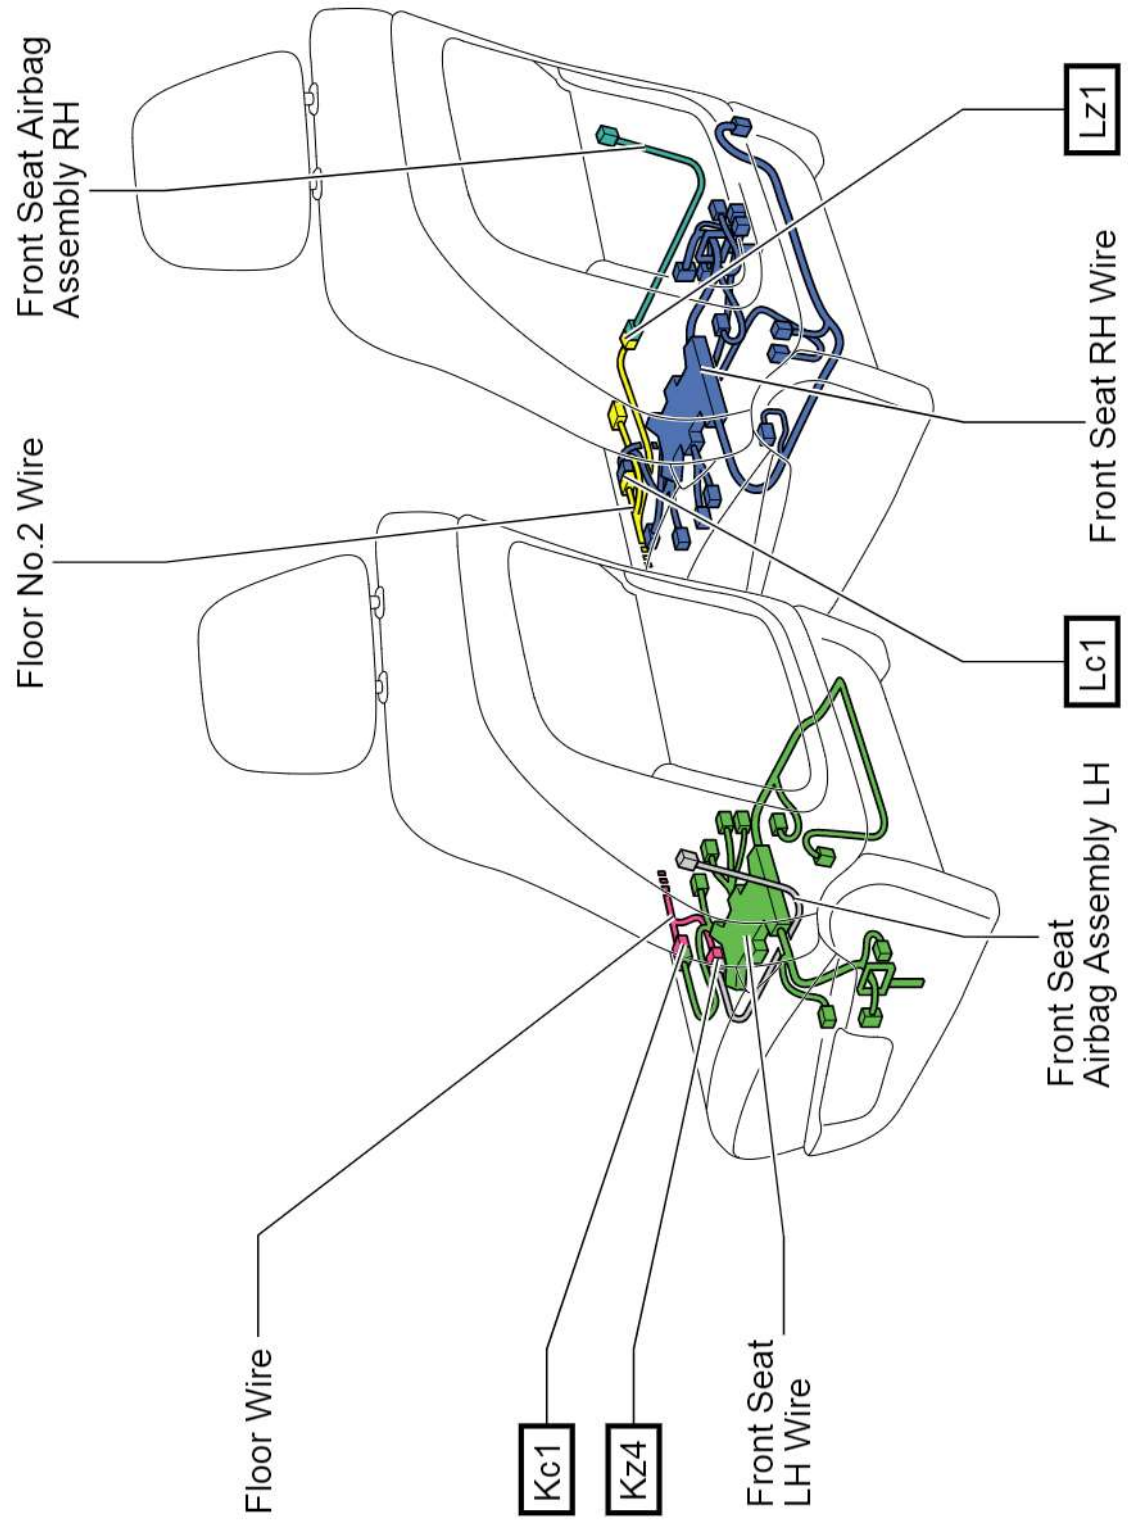


Wire and Wire in Seat <RHD Front Seat>

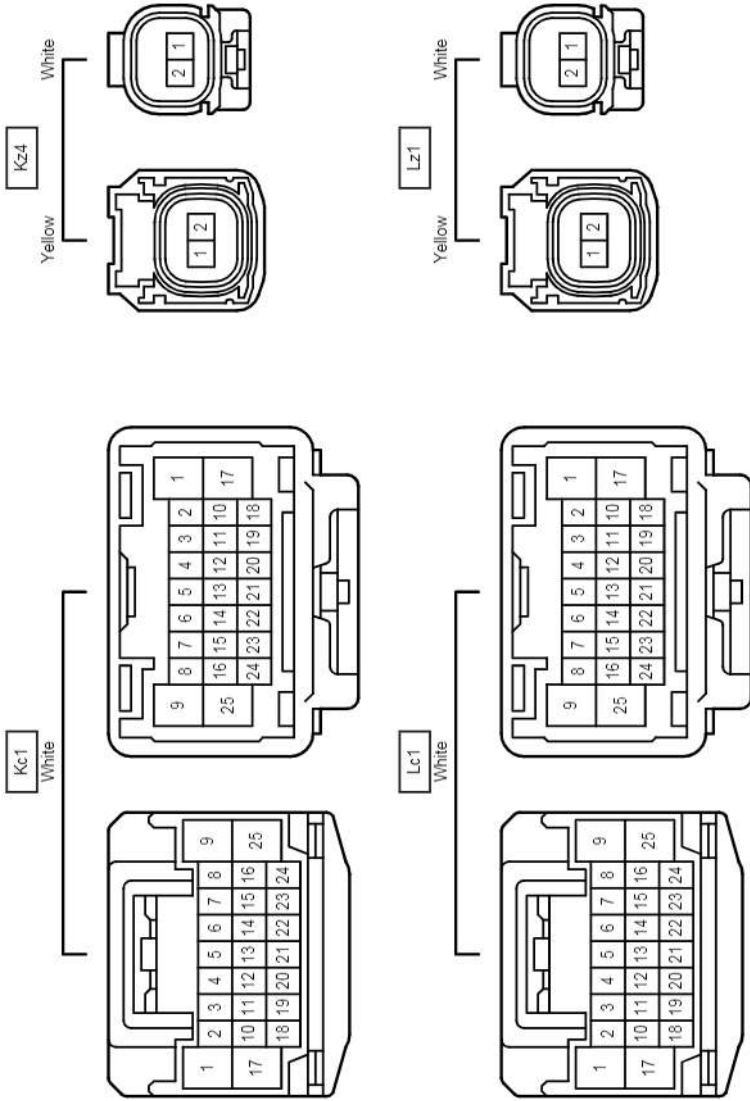

Ground Points in Instrument Panel <LHD>

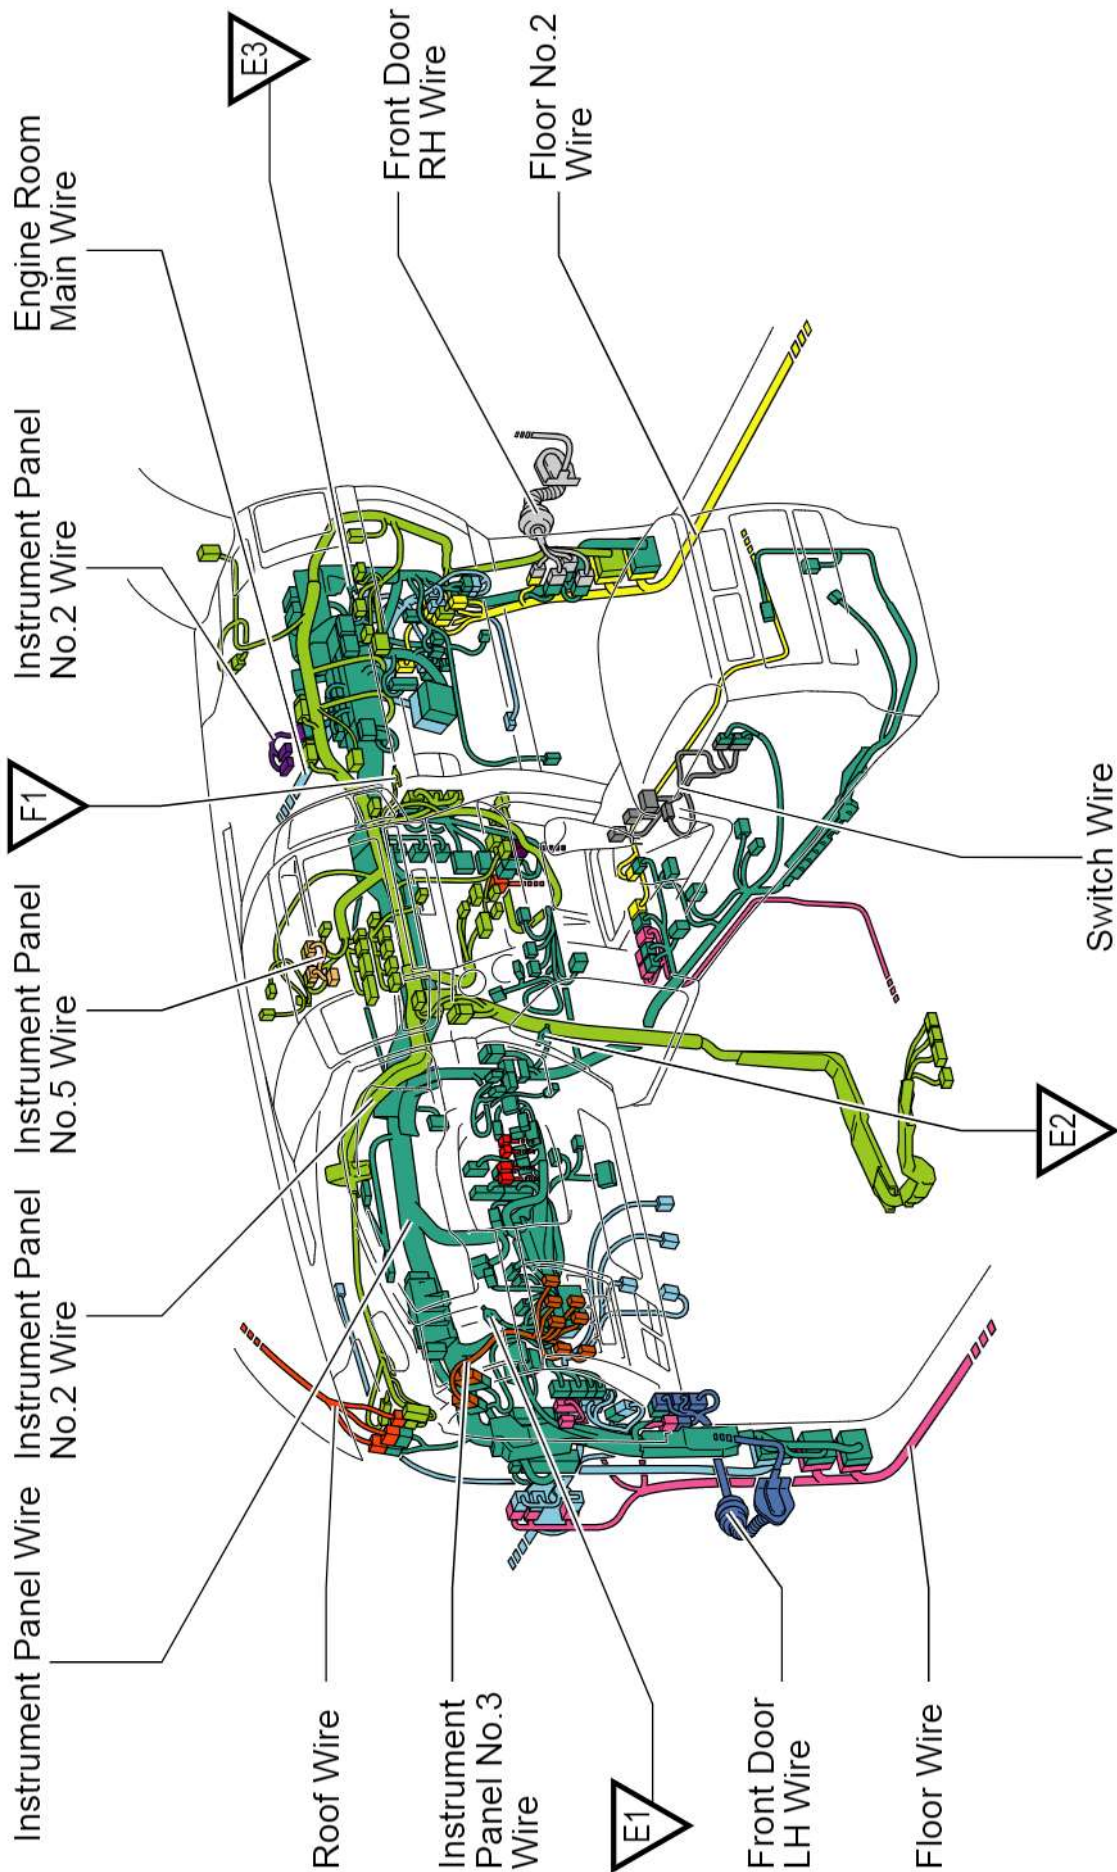


Position of Parts in Instrument Panel <LHD>

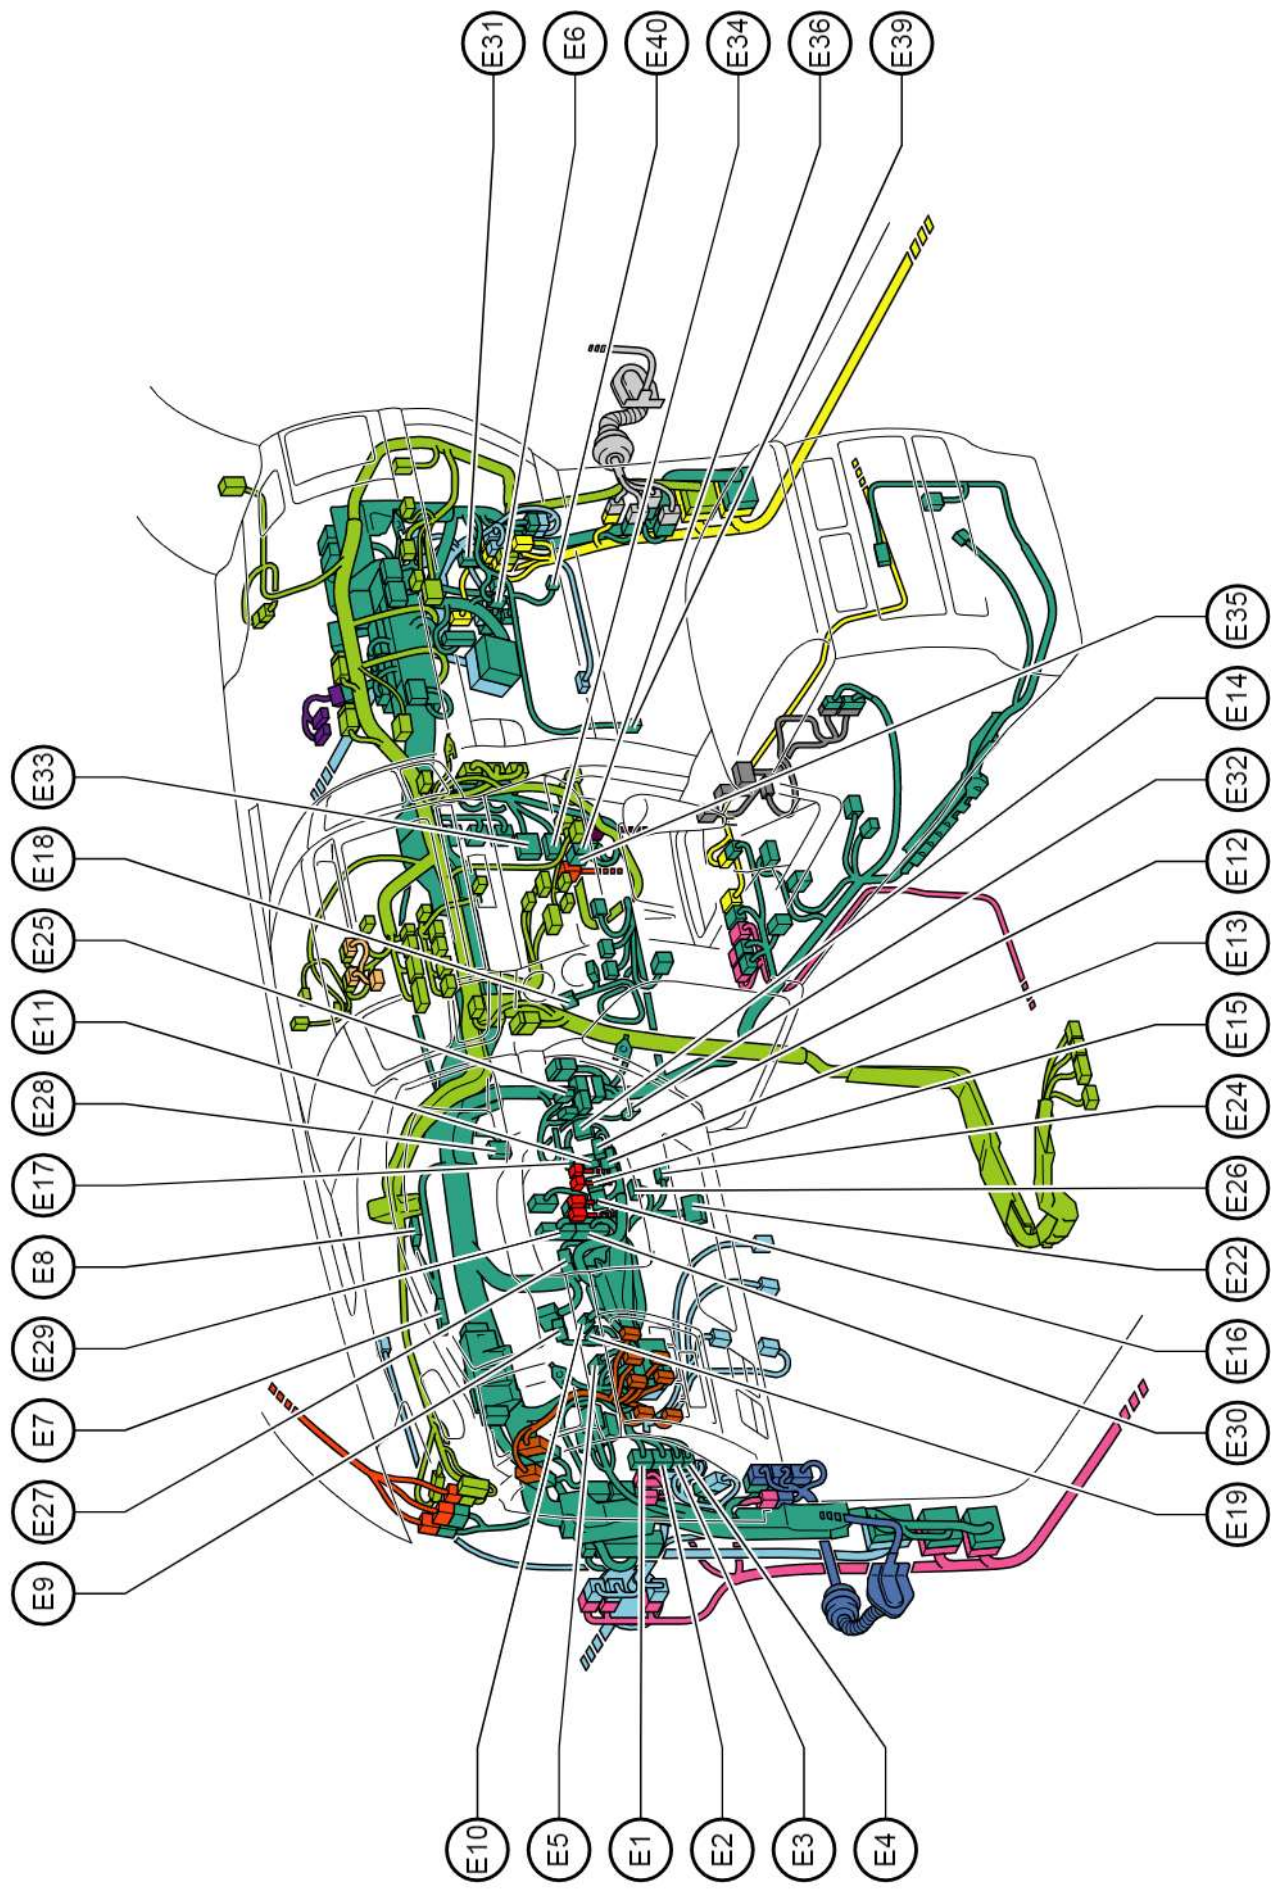


E 1	Main Body ECU
E 2	Main Body ECU
E 3	Main Body ECU
E 4	Main Body ECU
E 5	Skid Control Buzzer Assembly
E 6	Option Connector (Bus Buffer)
E 7	Combination Meter Assembly
E 8	Combination Meter Assembly
E 9	Light Control Rheostat
E 10	No.1 Clearance Warning Buzzer
E 11	Steering Sensor
E 12	Spiral Cable Sub-Assembly
E 13	Spiral Cable Sub-Assembly
E 14	Headlight Dimmer Switch Assembly
E 15	Windshield Wiper Switch Assembly
E 16	Windshield Wiper Switch Assembly
E 17	Power Tilt Motor
E 18	Engine Switch
E 19	Turn Signal Flasher Assembly
E 22	DLC3
E 24	Lower No.1 Instrument Panel Airbag Assembly
E 25	VSC Off Switch
E 26	Steering Lock Actuator Assembly
E 27	Multiplex Tilt and Telescopic ECU
E 28	ID Code Box
E 29	Certification ECU Assembly
E 30	Certification ECU Assembly
E 31	Network Gateway ECU
E 32	Room Temperature Sensor
E 33	Quick Heater Assembly
E 34	Quick Heater Assembly
E 35	A/C Amplifier Assembly
E 36	A/C Amplifier Assembly
E 39	Glove Box Light Assembly
E 40	Lower No.2 Instrument Panel Airbag Assembly

Position of Parts in Instrument Panel <LHD>


E 1  
White

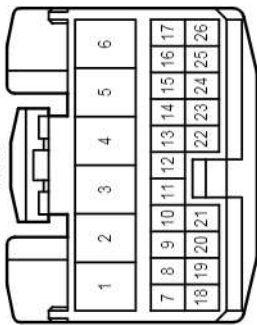


E 2  
White

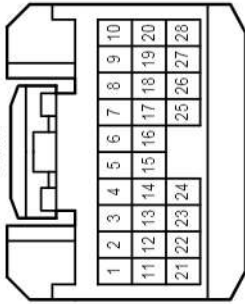


E 3  
White

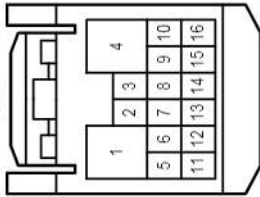


E 4  
White

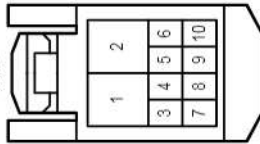


E 5  
Blue

 


E 6  
White

 


E 7  
White

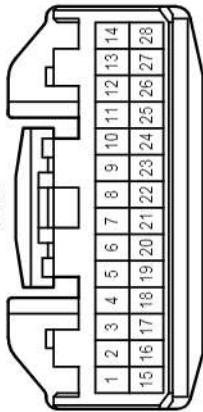


E 8  
Black

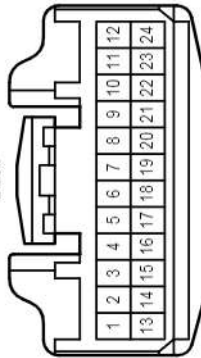


E 9  
White

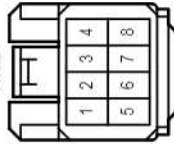


E 10  
Black

 


E 11  
Gray

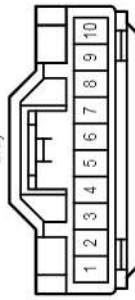


E 12  
Black

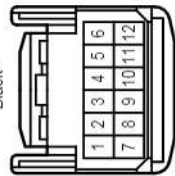


E 13  
Yellow

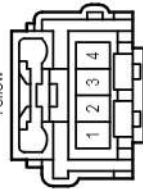


E 14  
White

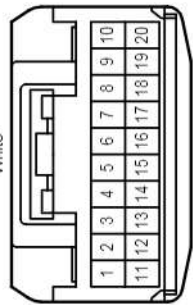


E 15  
White

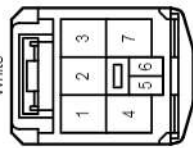


E 16  
White

 

E 17  
White

 
















E 18  
Black

 


E 19  
Black



  Position of Parts in Instrument Panel <LHD>

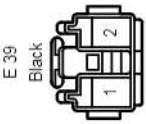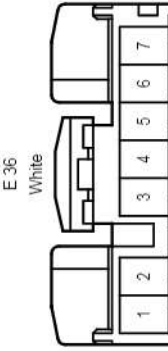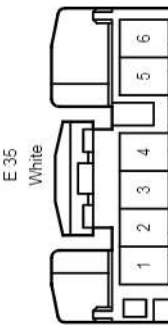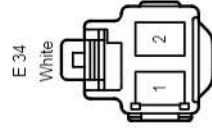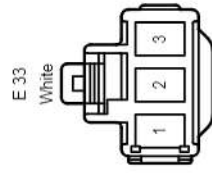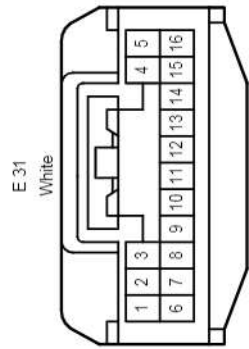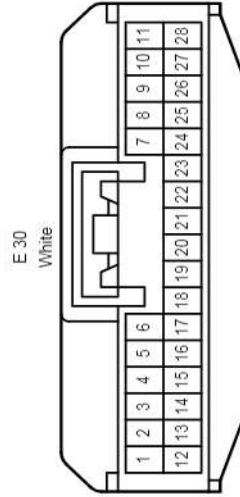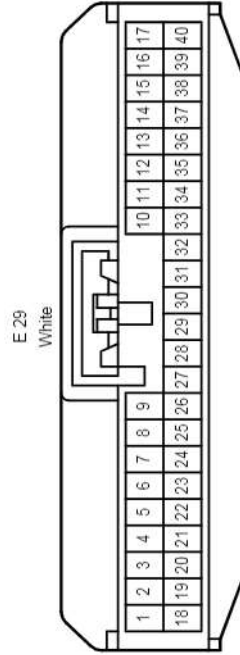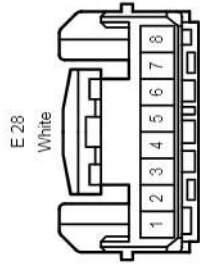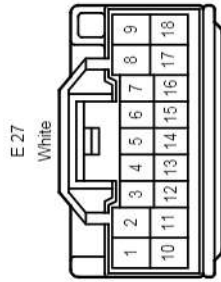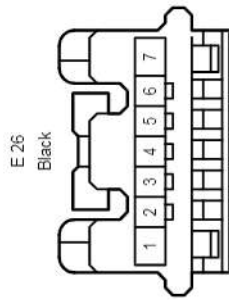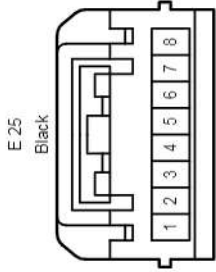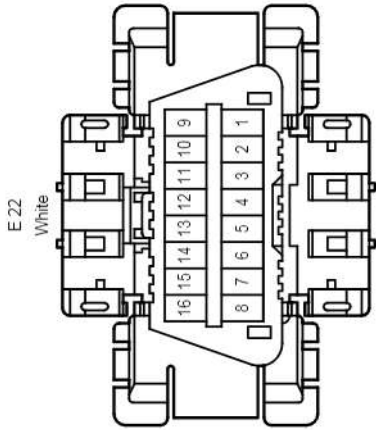














Position of Parts in Instrument Panel <LHD>

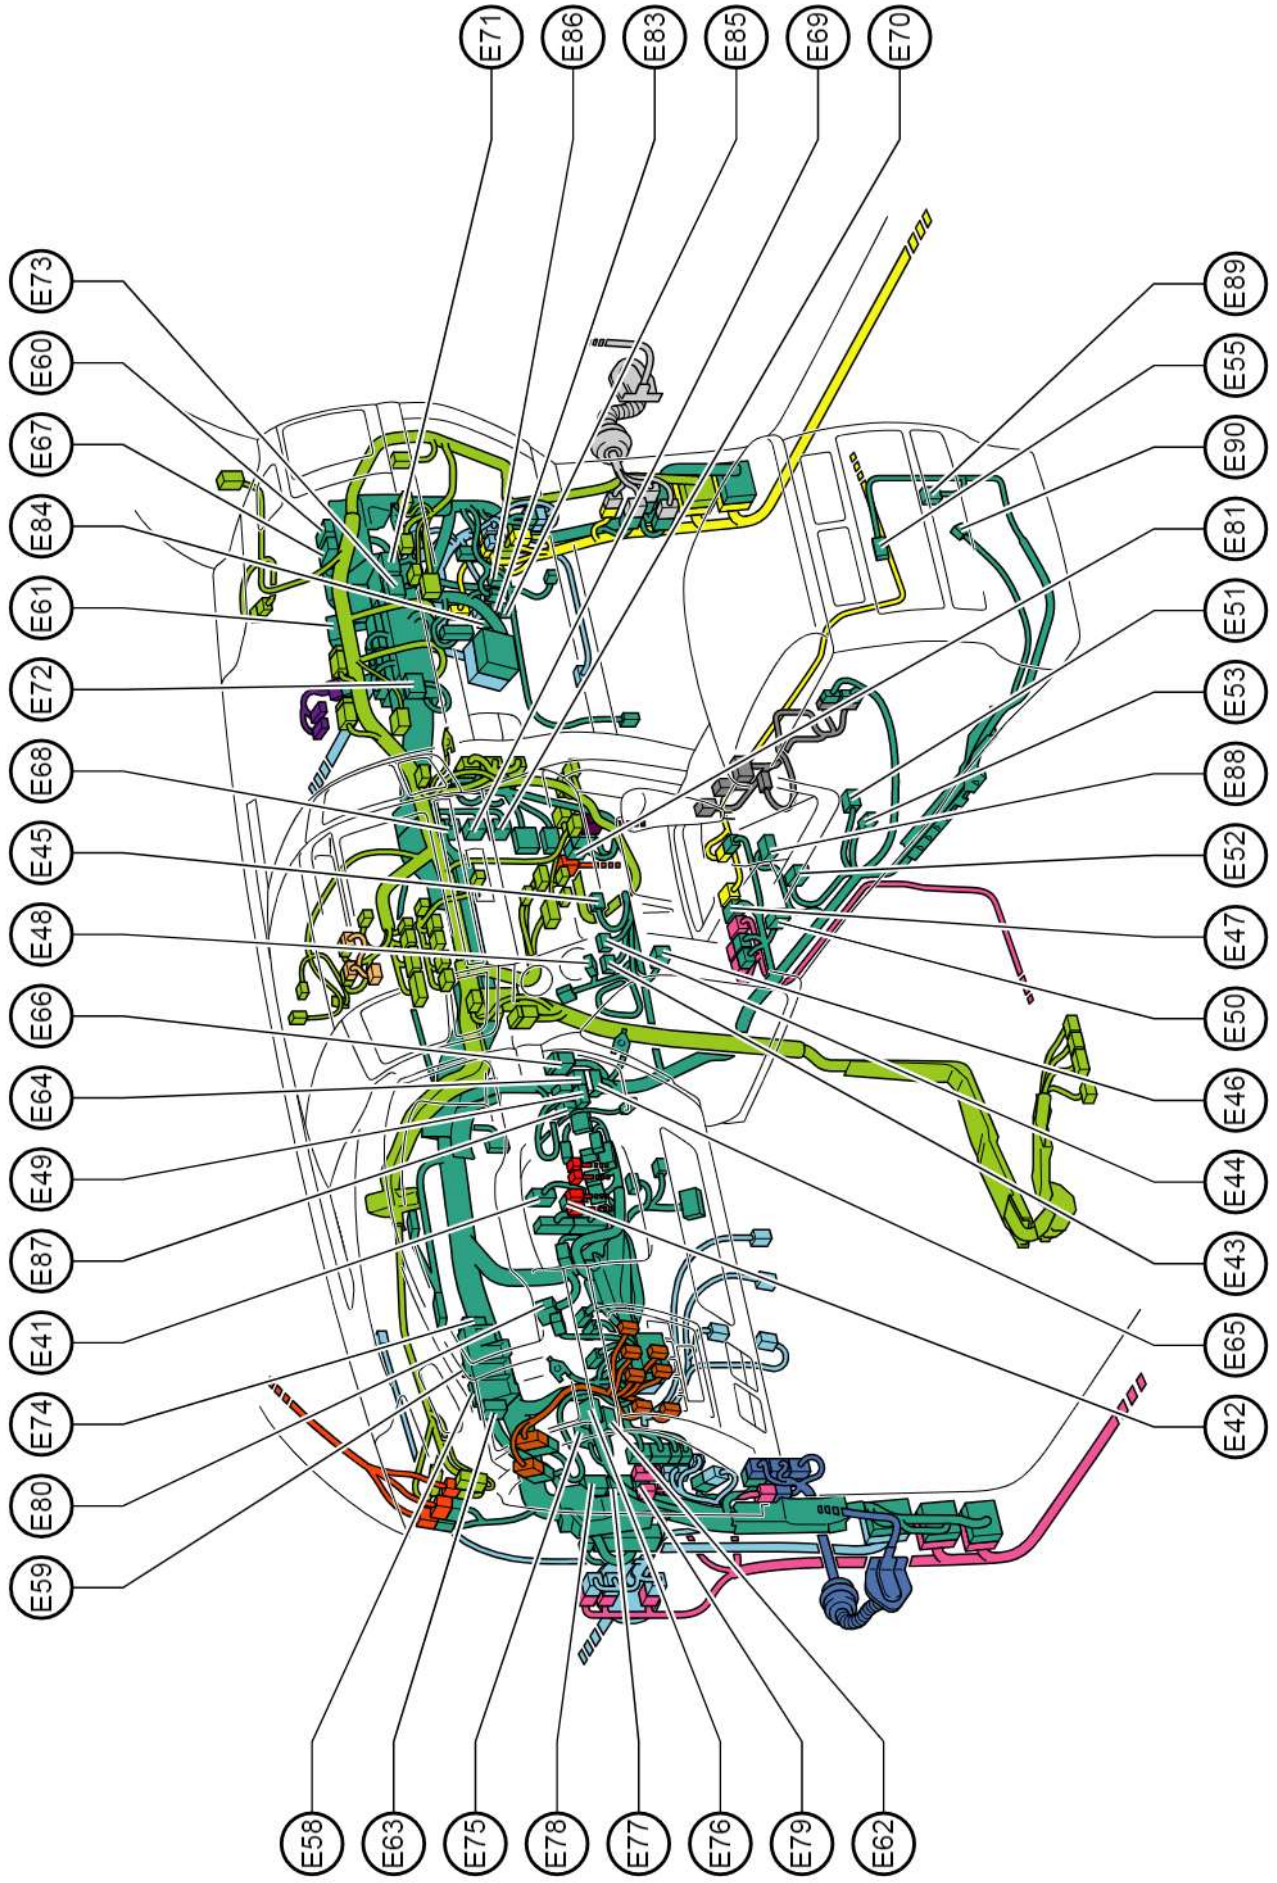




E 41	Seat Belt Control ECU
E 42	Seat Belt Control ECU
E 43	Cigarette Lighter Assembly
E 44	Cigarette Lighter Illumination Assembly
E 45	Ash Receptacle Light Sub-Assembly
E 46	Power Outlet Socket Assembly
E 47	Center Airbag Sensor Assembly
E 48	Transfer Position Switch
E 49	Center Differential Lock Switch
E 50	Yaw Rate Sensor Assembly
E 51	Shift Lock Control ECU Sub-Assembly
E 52	Transmission Control Switch
E 53	Parking Brake Switch Assembly
E 55	No.2 A/C Control Assembly
E 58	Junction Connector
E 59	Junction Connector
E 60	Junction Connector
E 61	Junction Connector
E 62	Junction Connector
E 63	Junction Connector
E 64	Junction Connector
E 65	Junction Connector
E 66	Junction Connector
E 67	Junction Connector
E 68	Junction Connector
E 69	Junction Connector
E 70	Junction Connector
E 71	Junction Connector
E 72	Junction Connector
E 73	Junction Connector
E 74	Junction Connector
E 75	Junction Connector
E 76	Junction Connector
E 77	Steering Control ECU
E 78	Steering Control ECU
E 79	Steering Control ECU
E 80	Steering Actuator Assembly
E 81	A/C Amplifier Assembly
E 83	Windshield Wiper ECU , Short Connector
E 84	Short Connector
E 85	Windshield Wiper ECU
E 86	Double Lock Door Control Relay Assembly
E 87	Differential Lock Switch
E 88	Deceleration Sensor

    
Position of Parts in Instrument Panel <LHD>

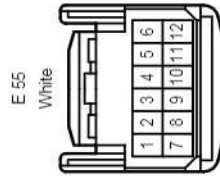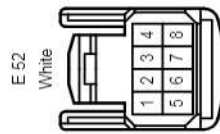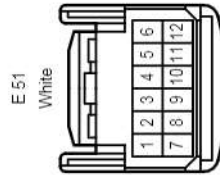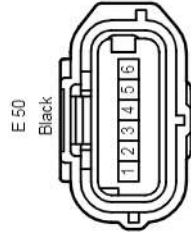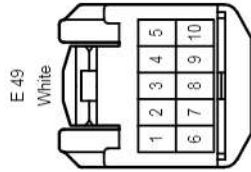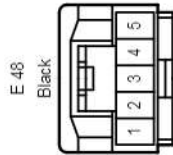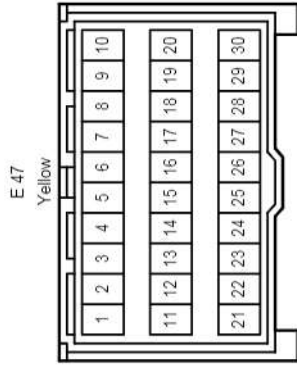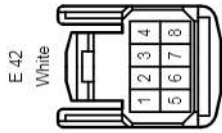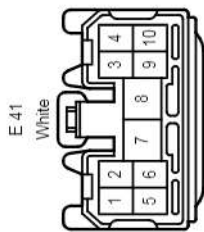

E 58

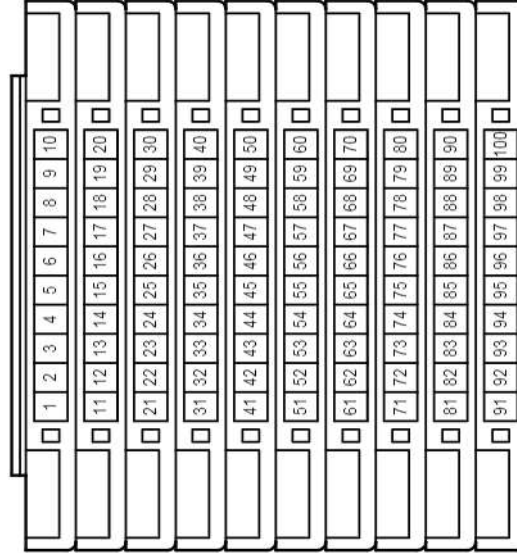


E 59

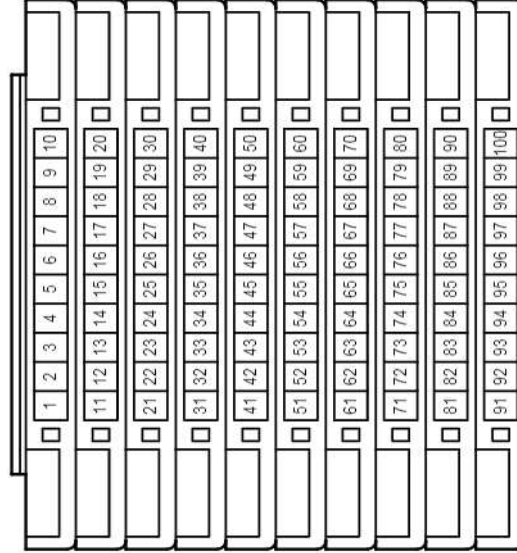


Position of Parts in Instrument Panel <LHD>


E 60

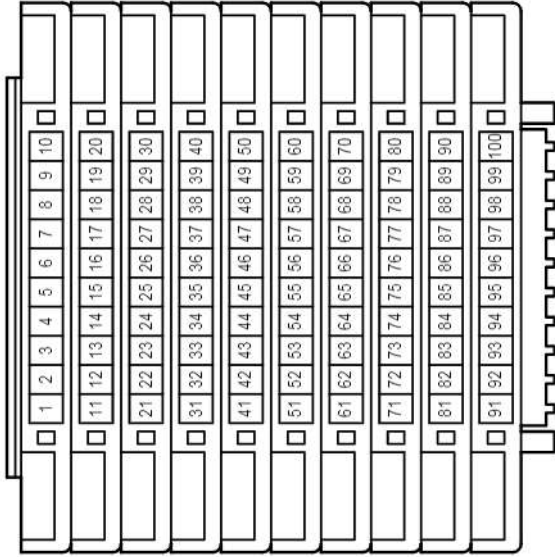


E 61

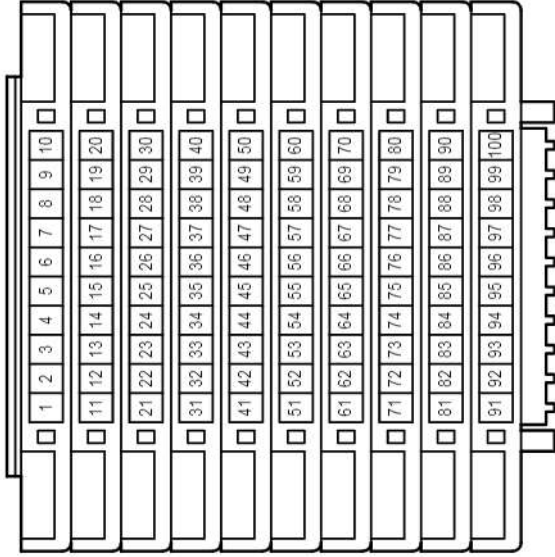


E 62  
White

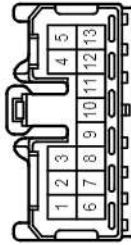


E 63  
Gray

 


E 64  
Black

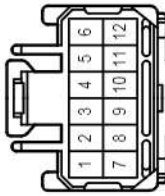


E 65  
Black

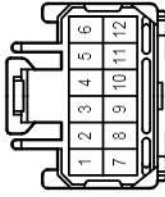


E 66  
White

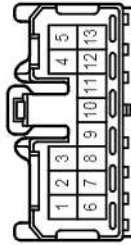


E 67  
White

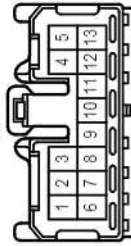


E 68  
Gray

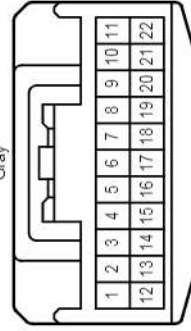


E 69  
Gray

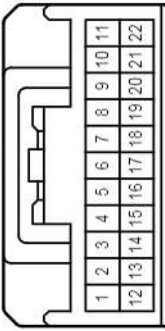

E 70  
Gray

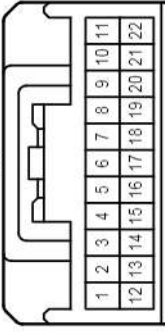


E 71  
Gray

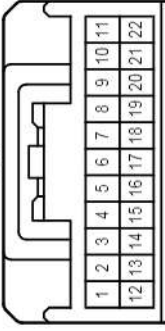


Position of Parts in Instrument Panel <LHD>


E 75  
Gray

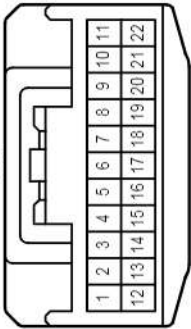


E 76  
Gray

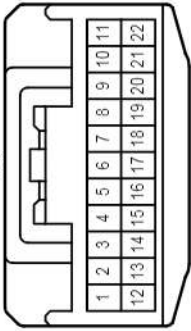


E 77  
White

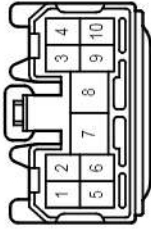


E 78  
White

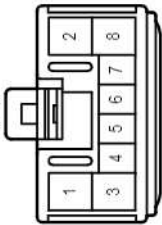


E 79  
White

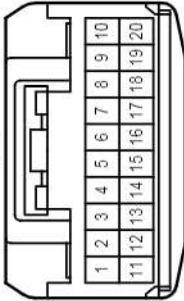


E 80  
White

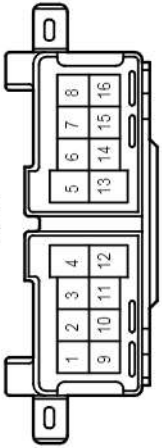


E 81  
White

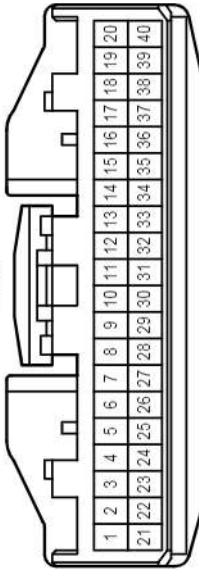


E 83  
Blue

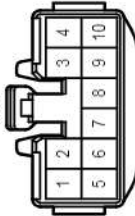


E 84  
Blue

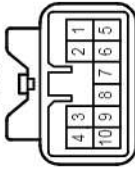


E 85  
White

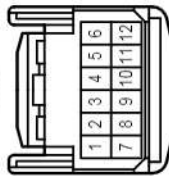

E 86  
White

 


E 87  
White

 


E 88  
Black




E 89  
Black

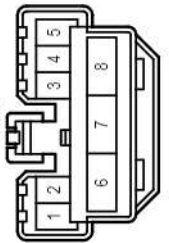

E 90  
White

 





Position of Parts in Instrument Panel <LHD>

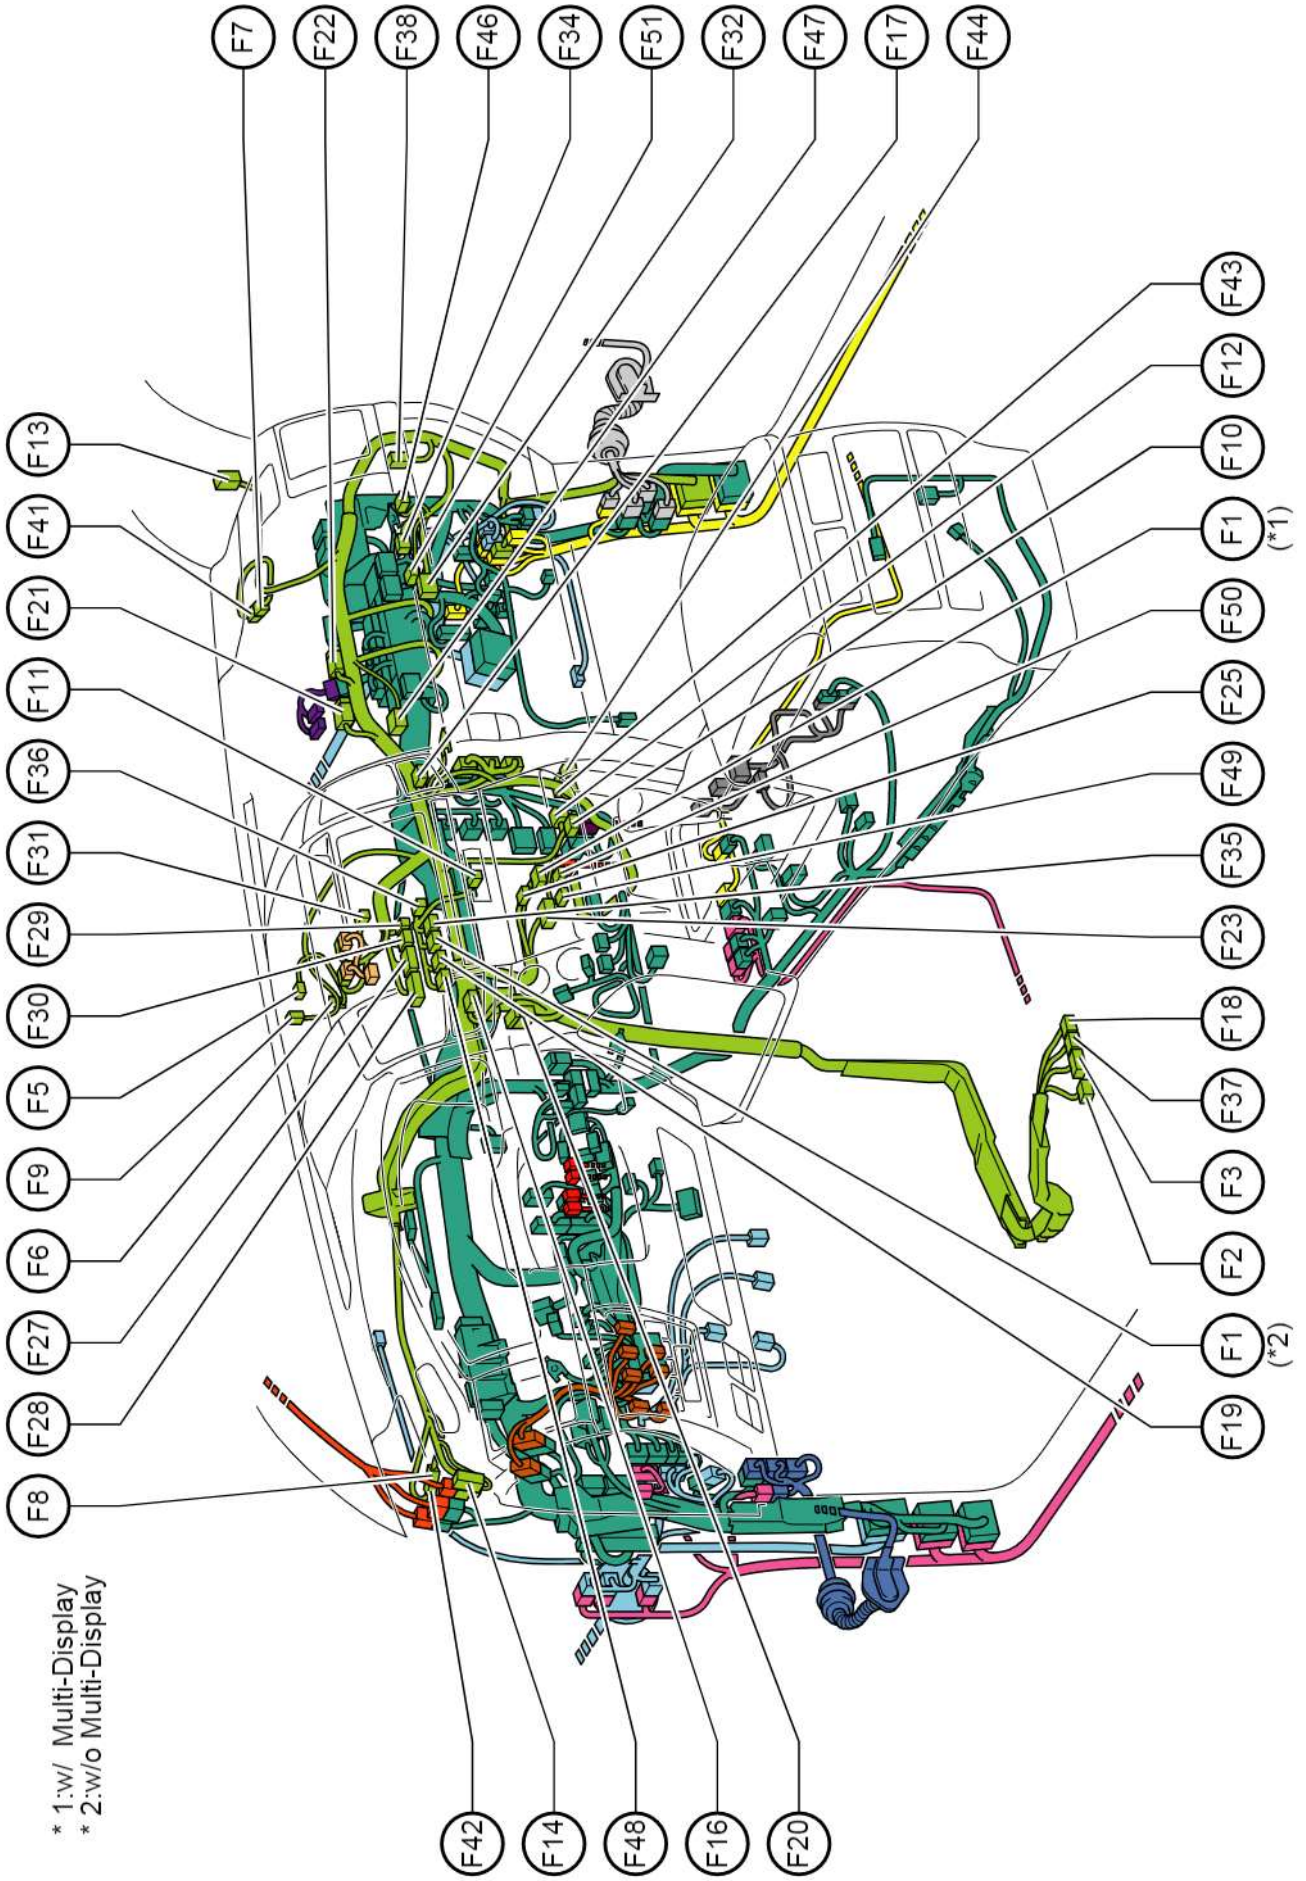

\* 1:w/ Multi-Display  
 \* 2:w/o Multi-Display

F 1	Radio Receiver Assembly
F 2	Stereo Component Amplifier Assembly
F 3	Stereo Component Amplifier Assembly
F 5	Amplifier Antenna Assembly
F 6	Front No.4 Speaker Assembly
F 7	Front No.2 Speaker Assembly RH , Short Connector
F 8	Front No.2 Speaker Assembly LH , Short Connector
F 9	Automatic Light Control Sensor
F 10	A/C Control Assembly
F 11	Hazard Warning Signal Switch Assembly
F 12	Clearance Warning ECU Assembly
F 13	Front No.3 Speaker Assembly RH
F 14	Front No.3 Speaker Assembly LH
F 16	Temperature Control Switch Assembly LH
F 17	Temperature Control Switch Assembly RH
F 18	Stereo Component Amplifier Assembly
F 19	Radio Receiver Assembly
F 20	Junction Connector
F 21	Junction Connector
F 22	Junction Connector
F 23	Radio Receiver Assembly
F 25	Radio Receiver Assembly
F 27	Multi-Display
F 28	Multi-Display
F 29	Multi-Display
F 30	Multi-Display
F 31	Multi-Display
F 32	Navigation ECU
F 34	Navigation ECU
F 35	Radio Receiver Assembly
F 36	Radio Receiver Assembly
F 37	Stereo Component Amplifier Assembly
F 38	Airbag Cut Off Switch Cylinder Sub-Assembly
F 41	Short Connector
F 42	Short Connector
F 43	Parking Assist ECU
F 44	Parking Assist ECU
F 46	Navigation ECU
F 47	Navigation Antenna Assembly
F 48	Multi-Display
F 49	Parking Assist ECU
F 50	Parking Assist ECU
F 51	Navigation ECU

Position of Parts in Instrument Panel <LHD>

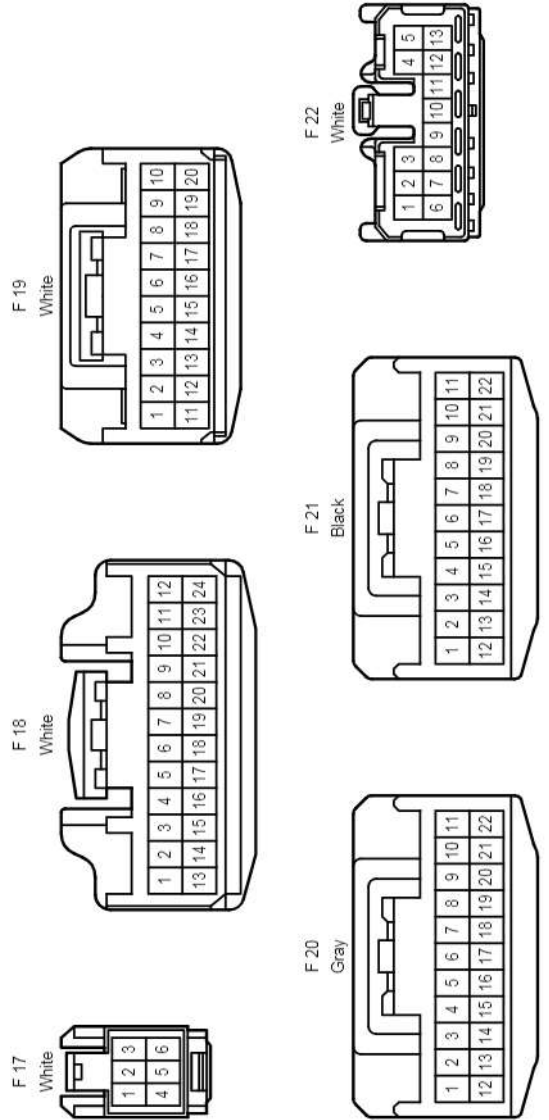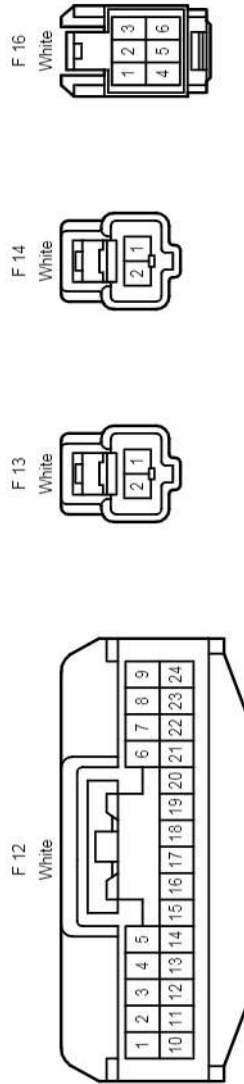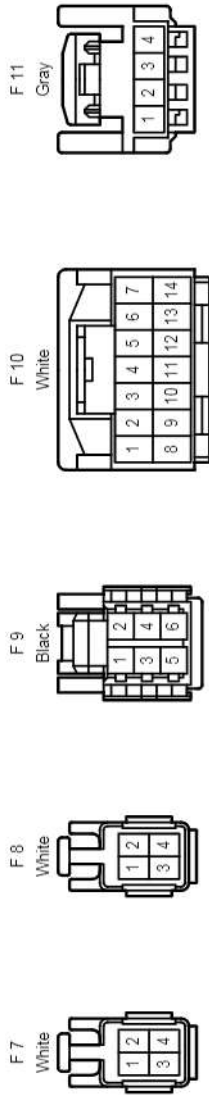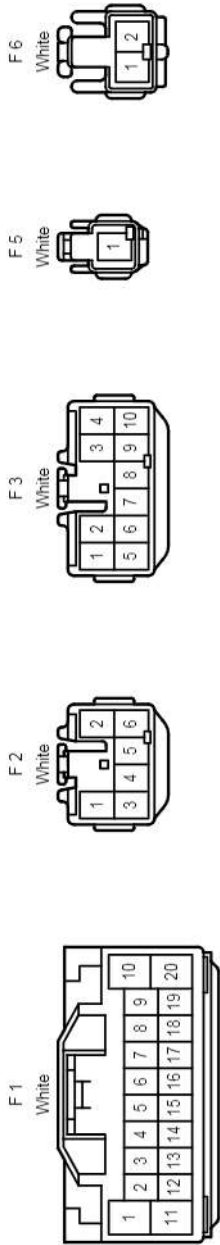


F 27 White

F 25 White


F 23 White

Position of Parts in Instrument Panel <LHD>


F 28  
White

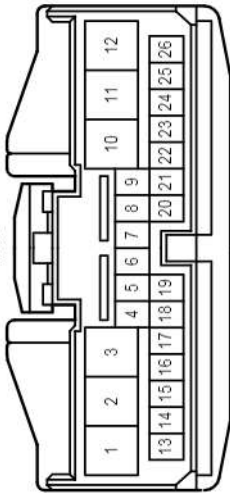


F 29  
Blue

 


F 30  
White

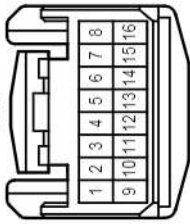


F 31  
White

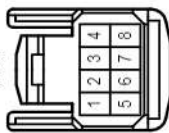


F 32  
White

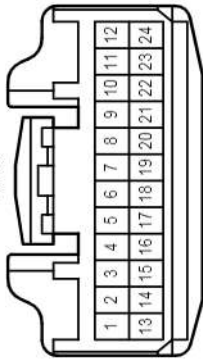

F 34  
White

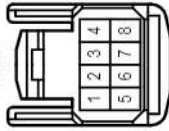


F 35  
White

 

F 36  
White




F 37  
White

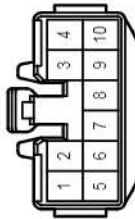


F 38  
White



 
F 41  
White




F 42  
White

 


F 43  
White

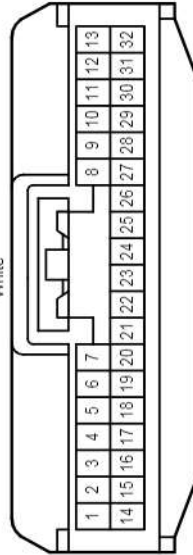


F 44  
White

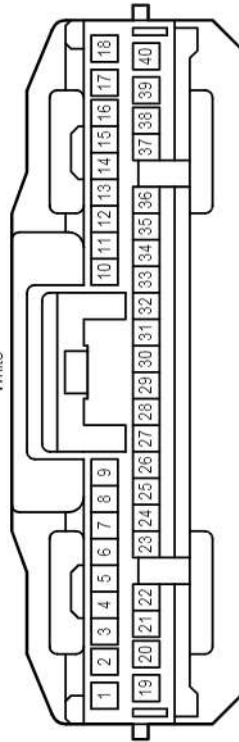

F 46  
Gray

 


F 47  
Gray

 






















Position of Parts in Instrument Panel <LHD>

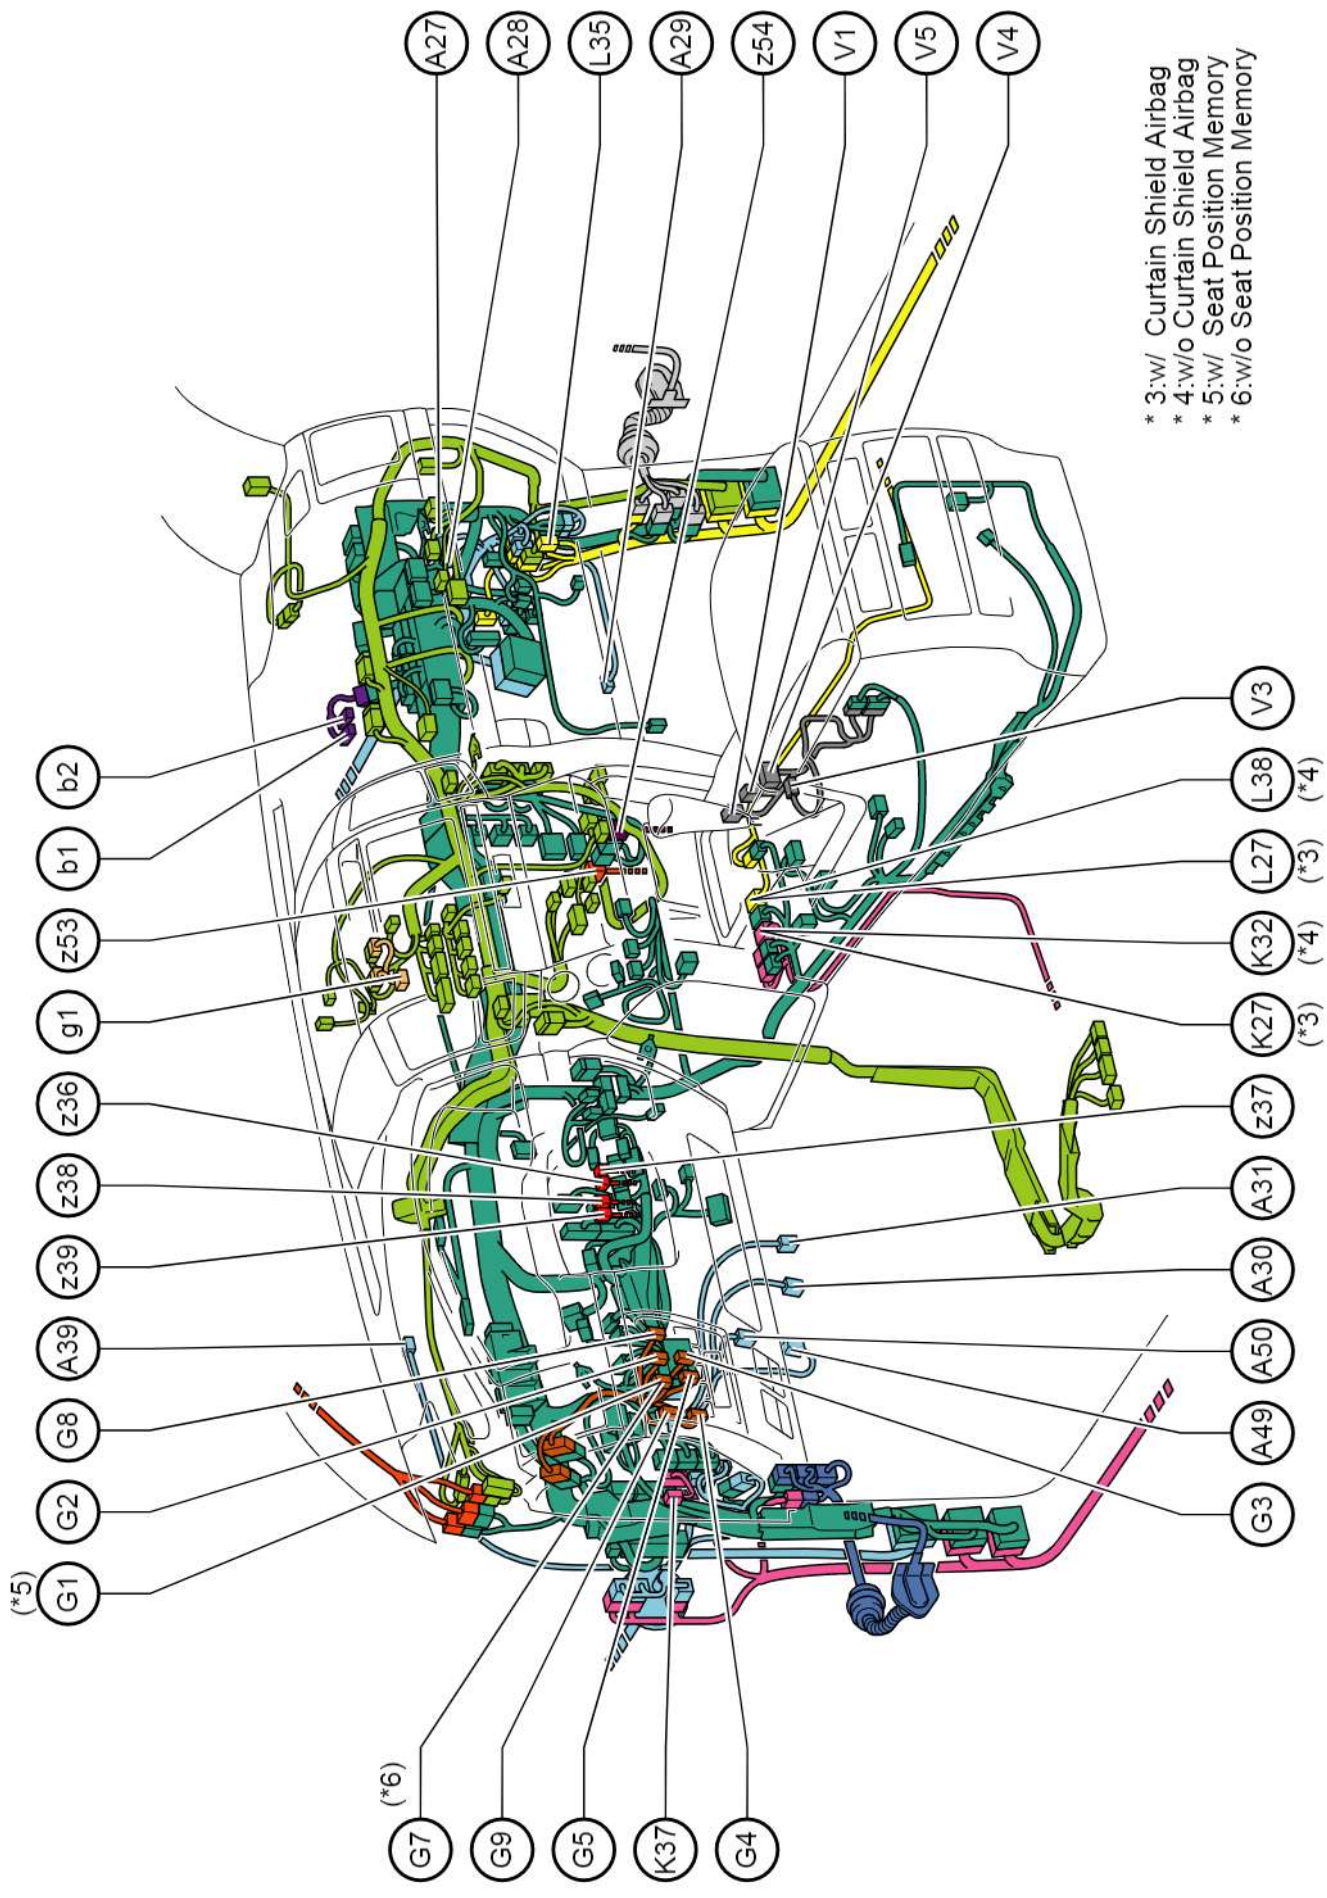

- \* 3: w/ Curtain Shield Airbag
- \* 4: w/o Curtain Shield Airbag
- \* 5: w/ Seat Position Memory
- \* 6: w/o Seat Position Memory












A 27	Four Wheel Drive Control ECU
A 28	Four Wheel Drive Control ECU
A 29	Front Blower with Fan Motor Sub-Assembly
A 30	Stop Light Switch Assembly
A 31	Accelerator Pedal Sensor Assembly
A 39	Stop Light Control Relay Assembly
A 49	Clutch Start Switch Assembly
A 50	Clutch Switch Assembly
G 1	Outer Mirror Switch Assembly
G 2	Outer Mirror Switch Assembly
G 3	Curtain Airbag Cutoff Switch
G 4	Headlight Cleaner Switch Assembly
G 5	Back Sonar or Clearance Sonar Switch Assembly
G 7	Outer Mirror Switch Assembly
G 8	Idle Up Switch
G 9	Headlight Leveling Switch
K 27	Center Airbag Sensor Assembly
K 32	Center Airbag Sensor Assembly
K 37	Acceleration Sensor LH
L 27	Center Airbag Sensor Assembly
L 35	Acceleration Sensor RH
L 38	Center Airbag Sensor Assembly
V 1	Seat Heater Switch
V 3	Front Indoor Electrical Key Oscillator
V 4	Suspension Control Switch
V 5	Suspension Control Switch
b 1	Front Passenger Side Squib Circuit
b 2	Front Passenger Side Squib Circuit
g 1	Clock Assembly
z 36	Spiral Cable Sub-Assembly , Steering Pad Switch
z 37	Cruise Control Main Switch , Spiral Cable Sub-Assembly
z 38	Driver Side Squib 2nd Step Circuit , Spiral Cable Sub-Assembly
z 39	Driver Side Squib Circuit , Spiral Cable Sub-Assembly
z 53	A/C Blower Assembly , A/C Amplifier Assembly
z 54	A/C Blower Assembly , A/C Amplifier Assembly

  Position of Parts in Instrument Panel <LHD>

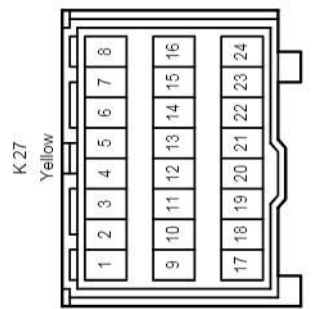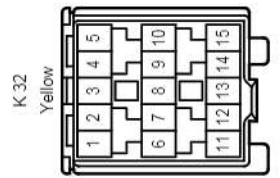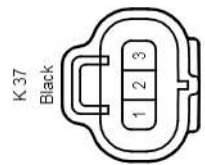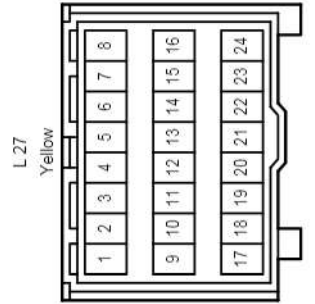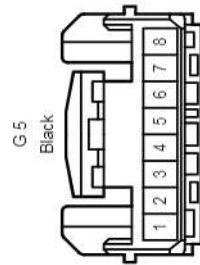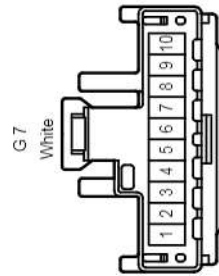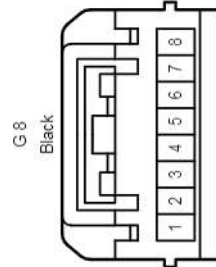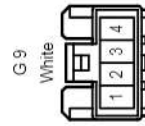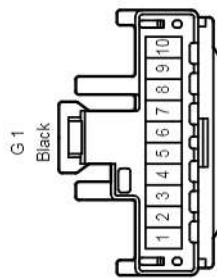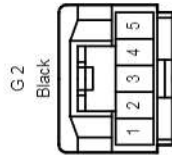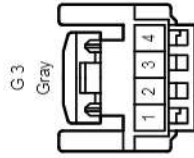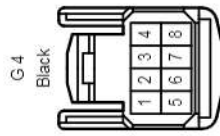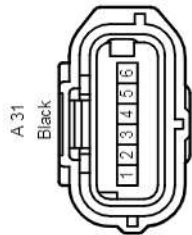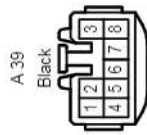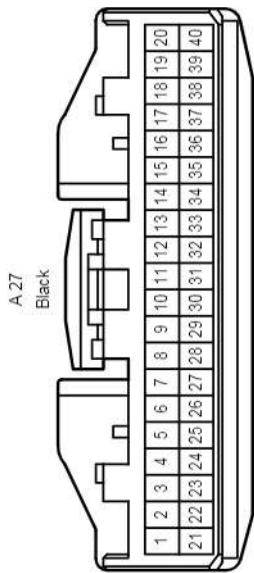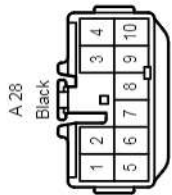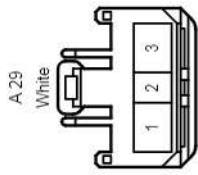






cardiagn.com

     Position of Parts in Instrument Panel <LHD>

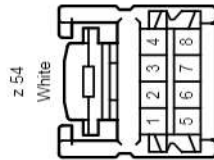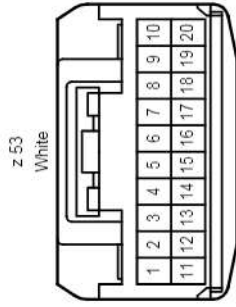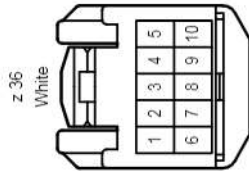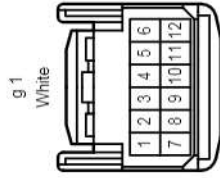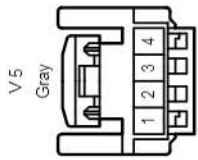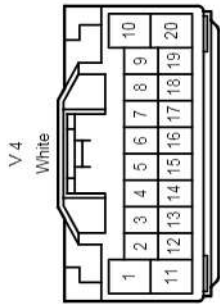



Wire and Wire in Instrument Panel <LHD>

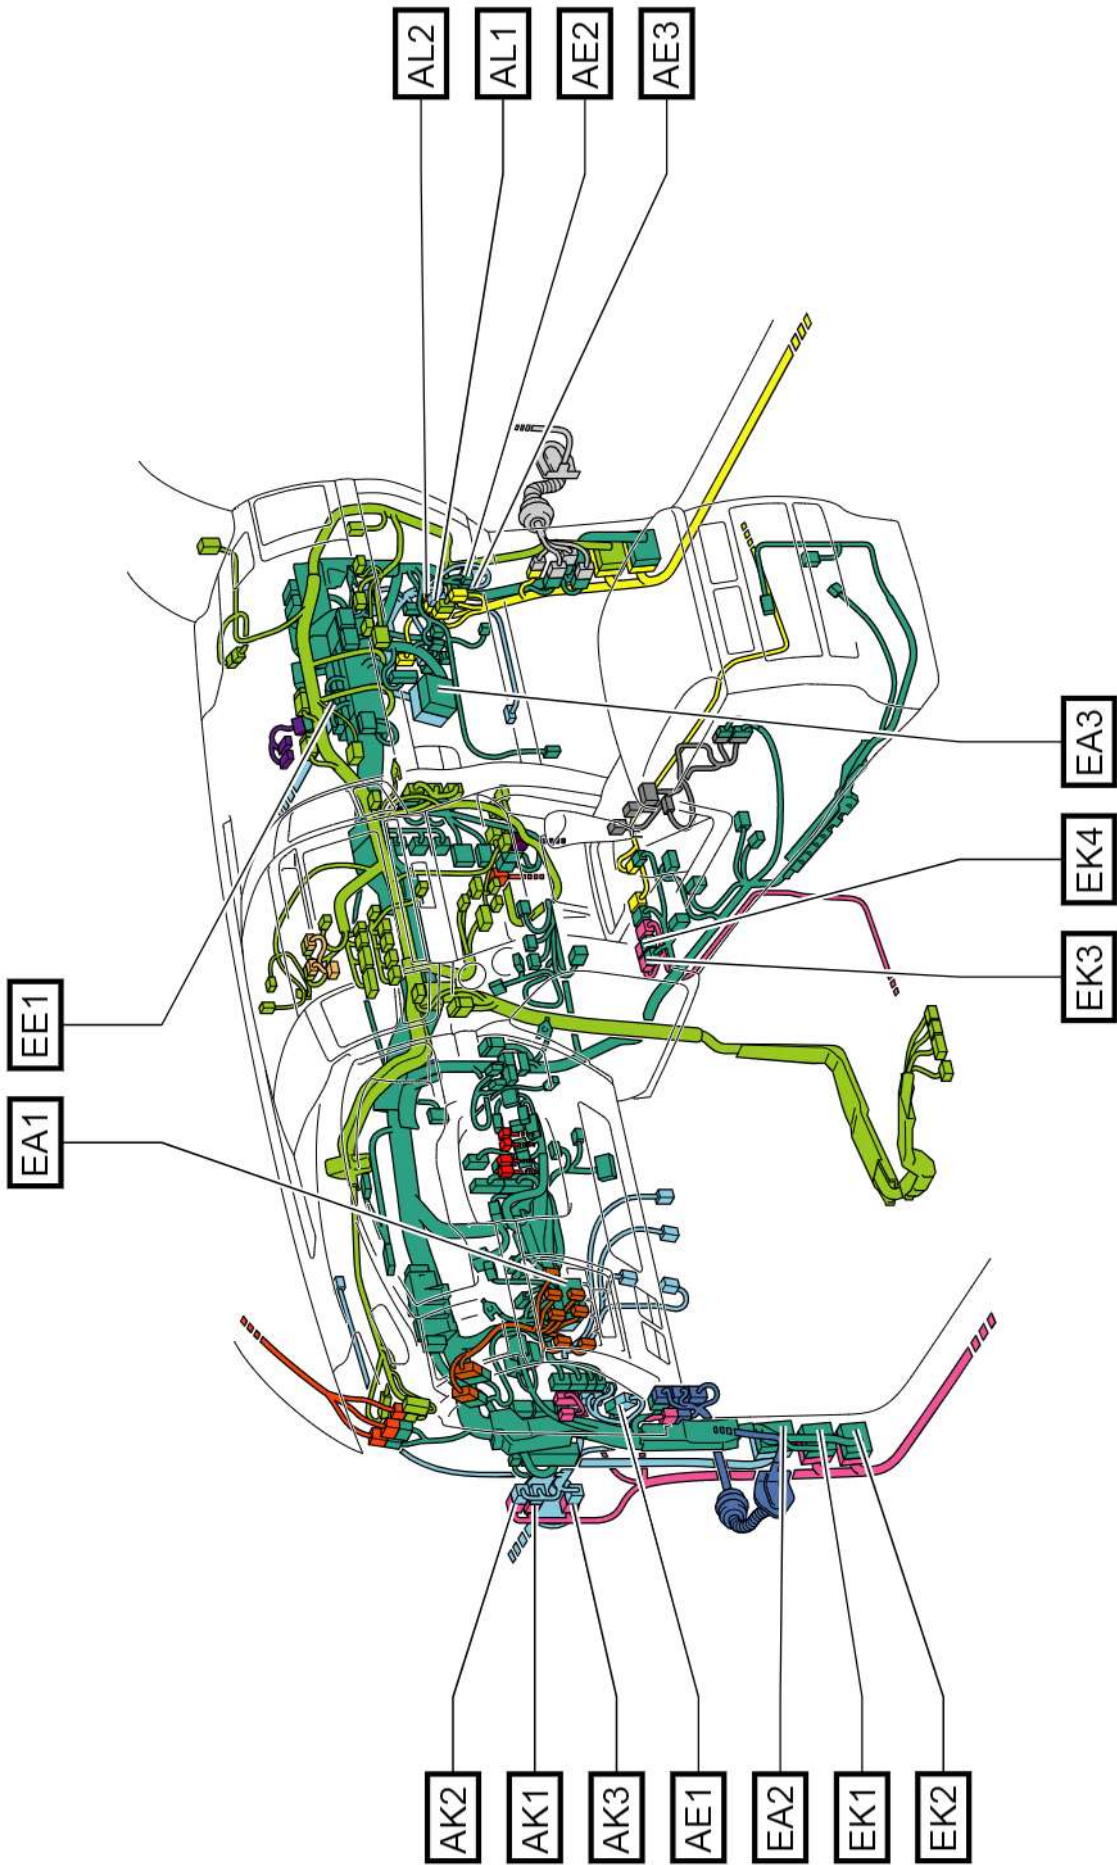

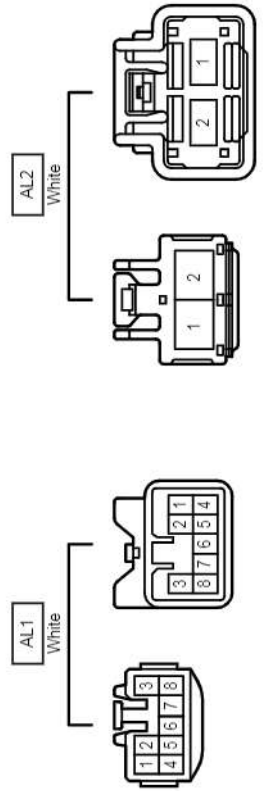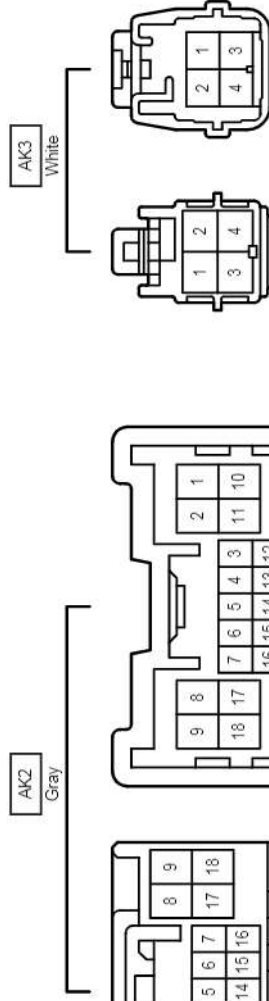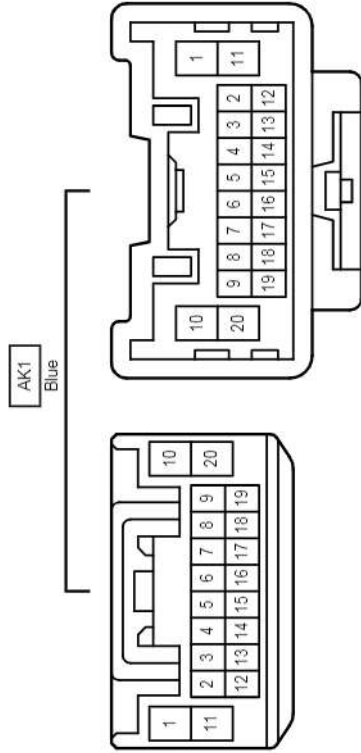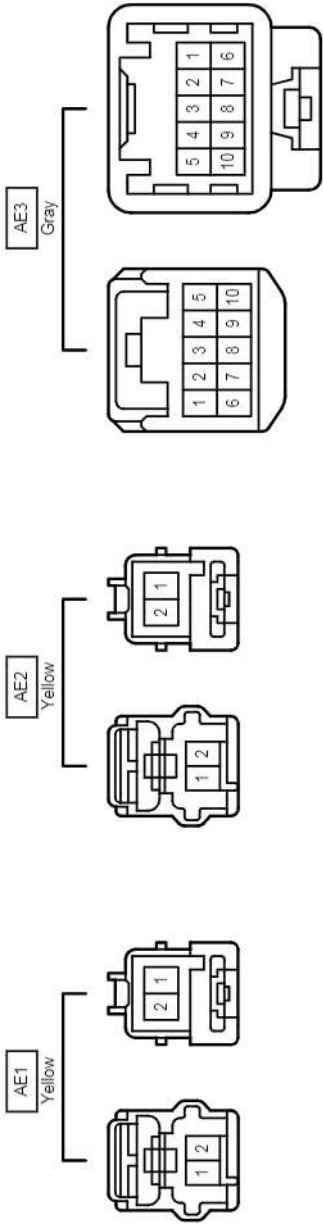


Wire and Wire in Instrument Panel <LHD>


EA1  
White

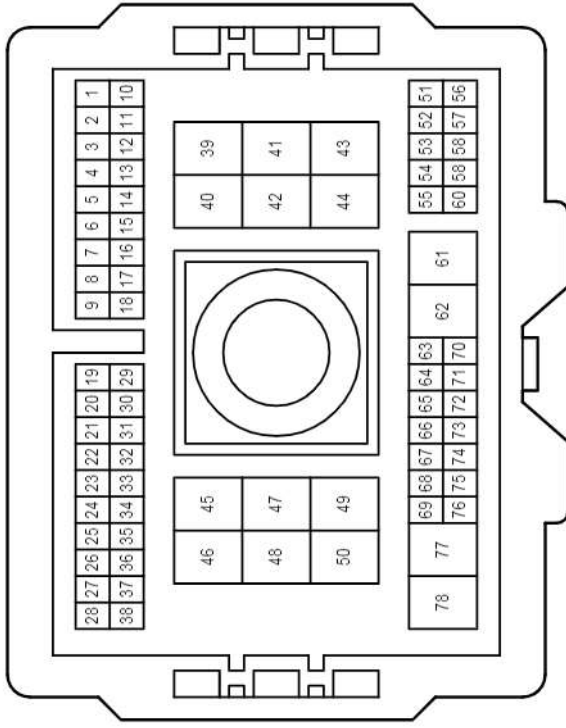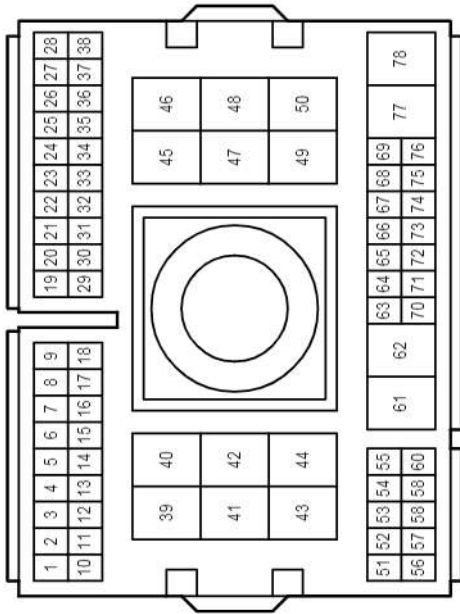


EA2  
Gray

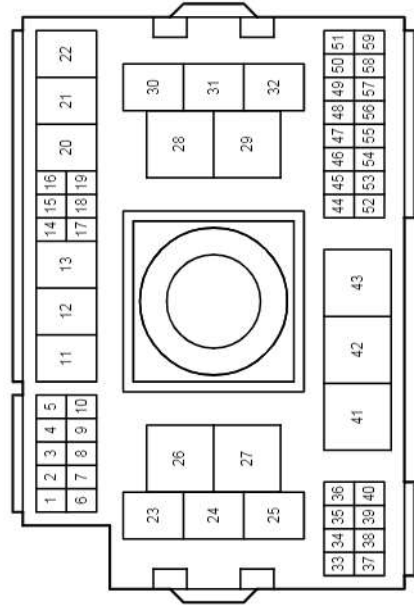

EA2  
Gray

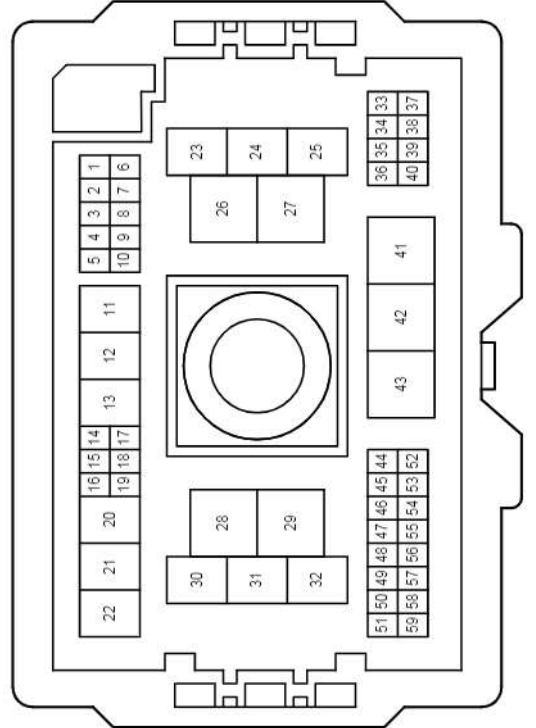


Wire and Wire in Instrument Panel <LHD>

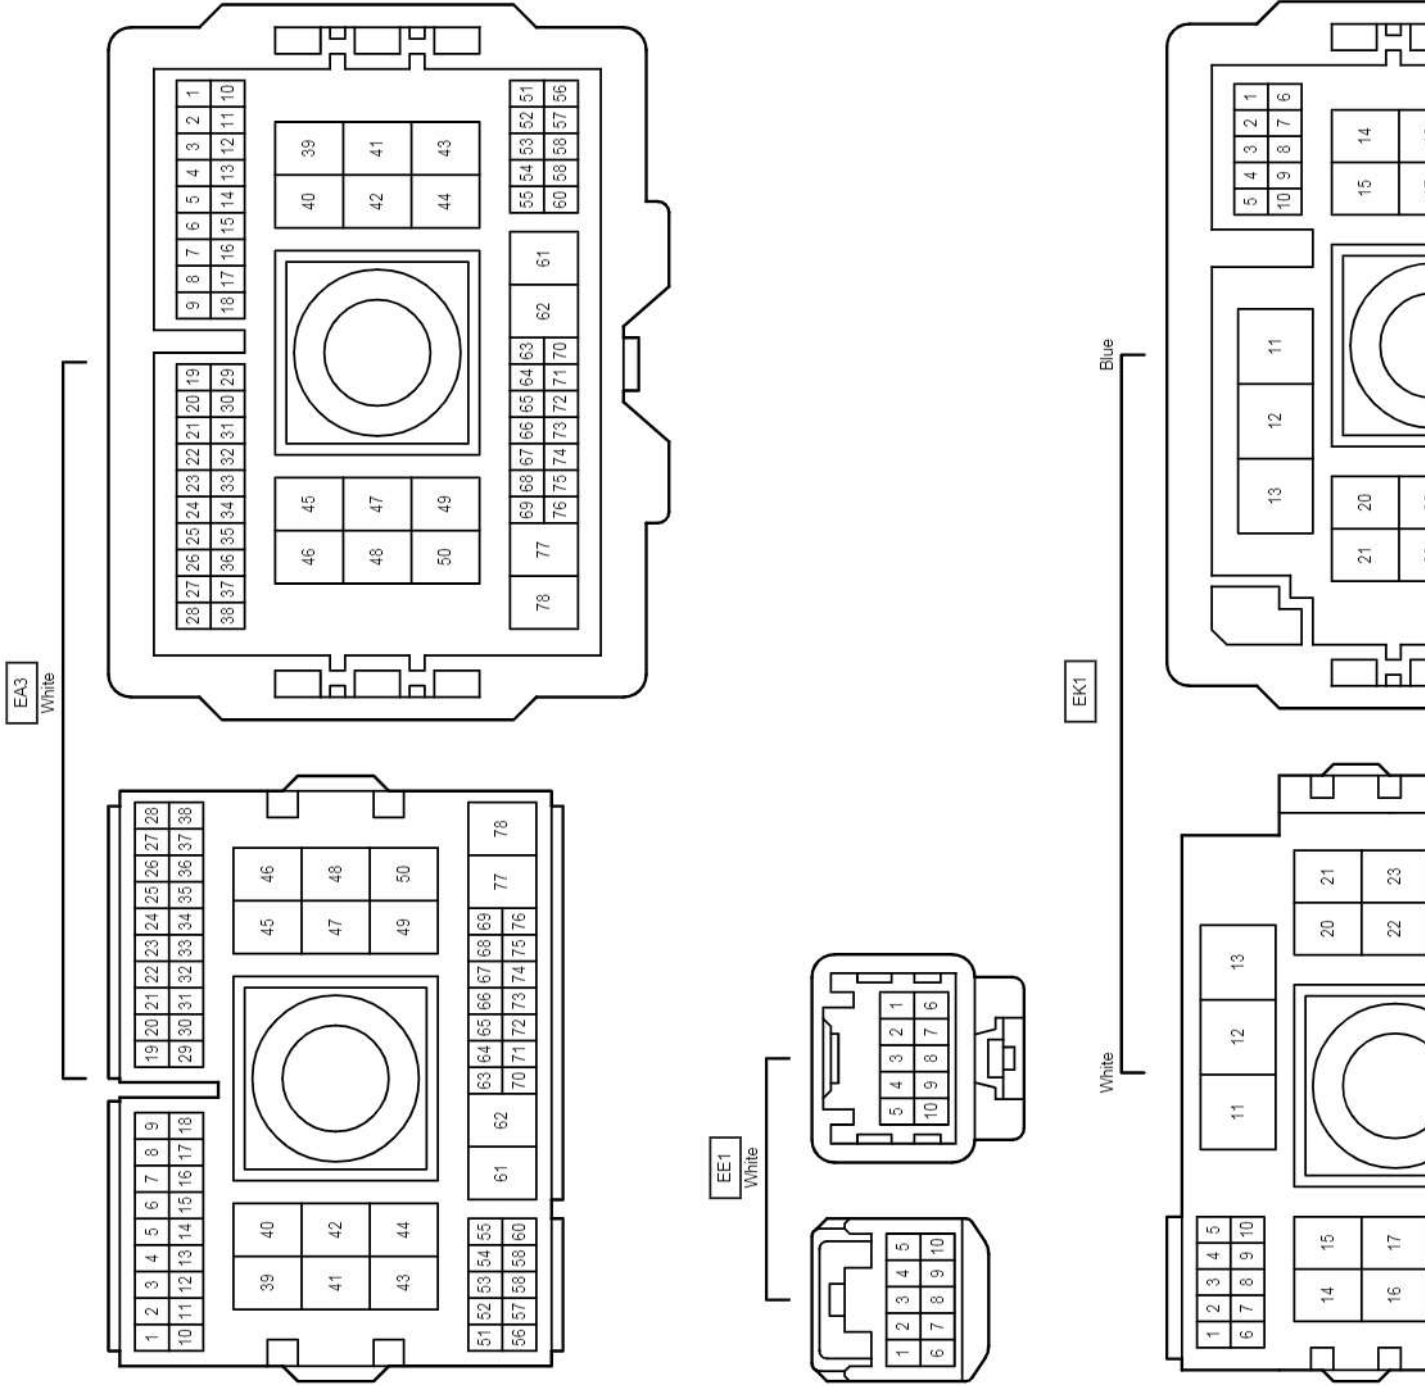





Wire and Wire in Instrument Panel <LHD>

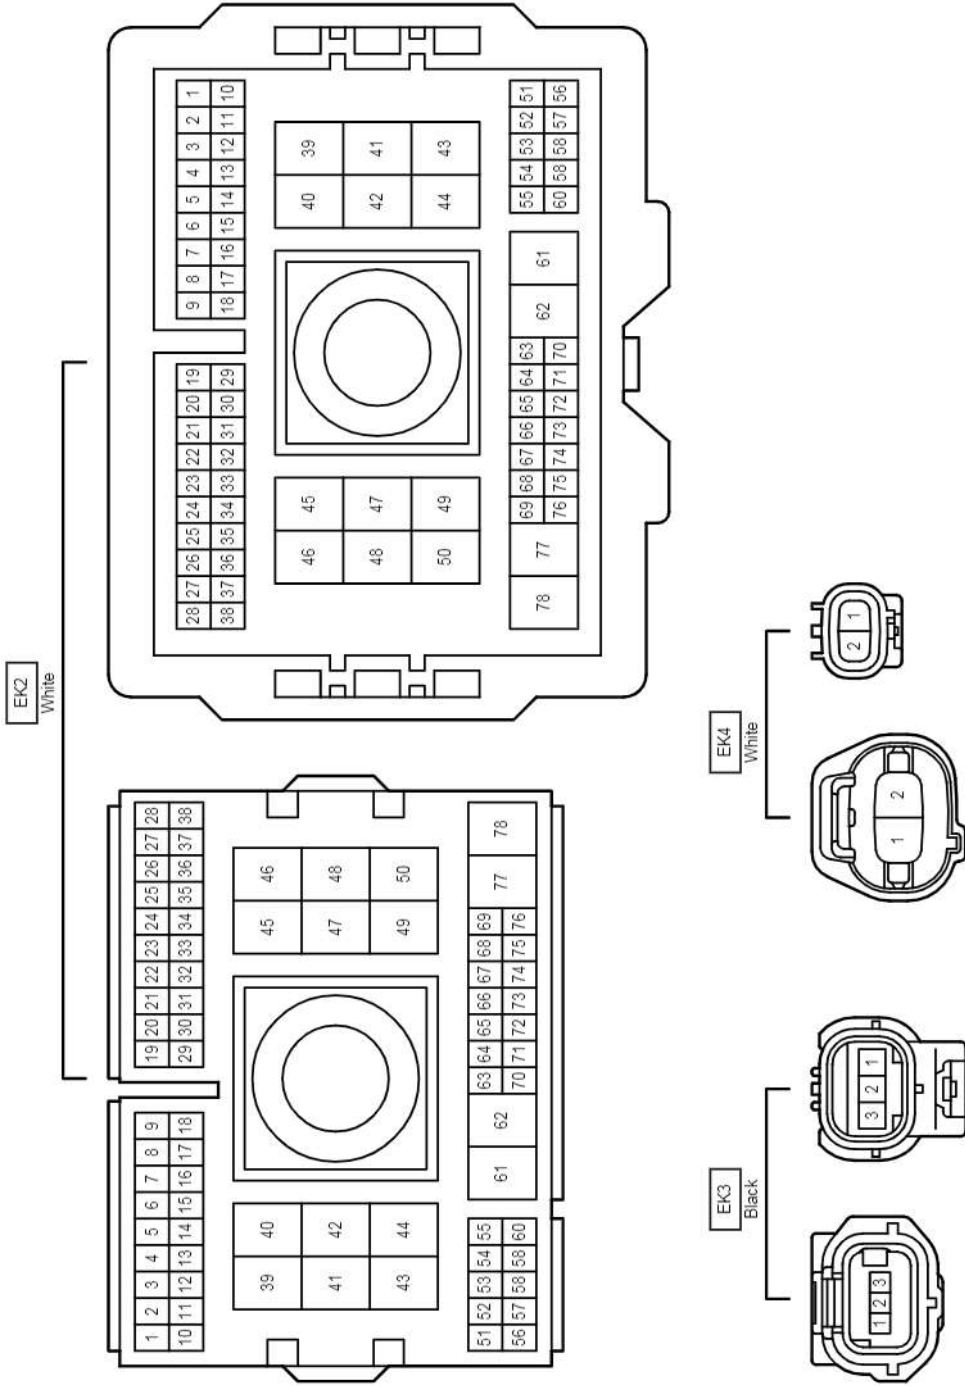

Wire and Wire in Instrument Panel <LHD>

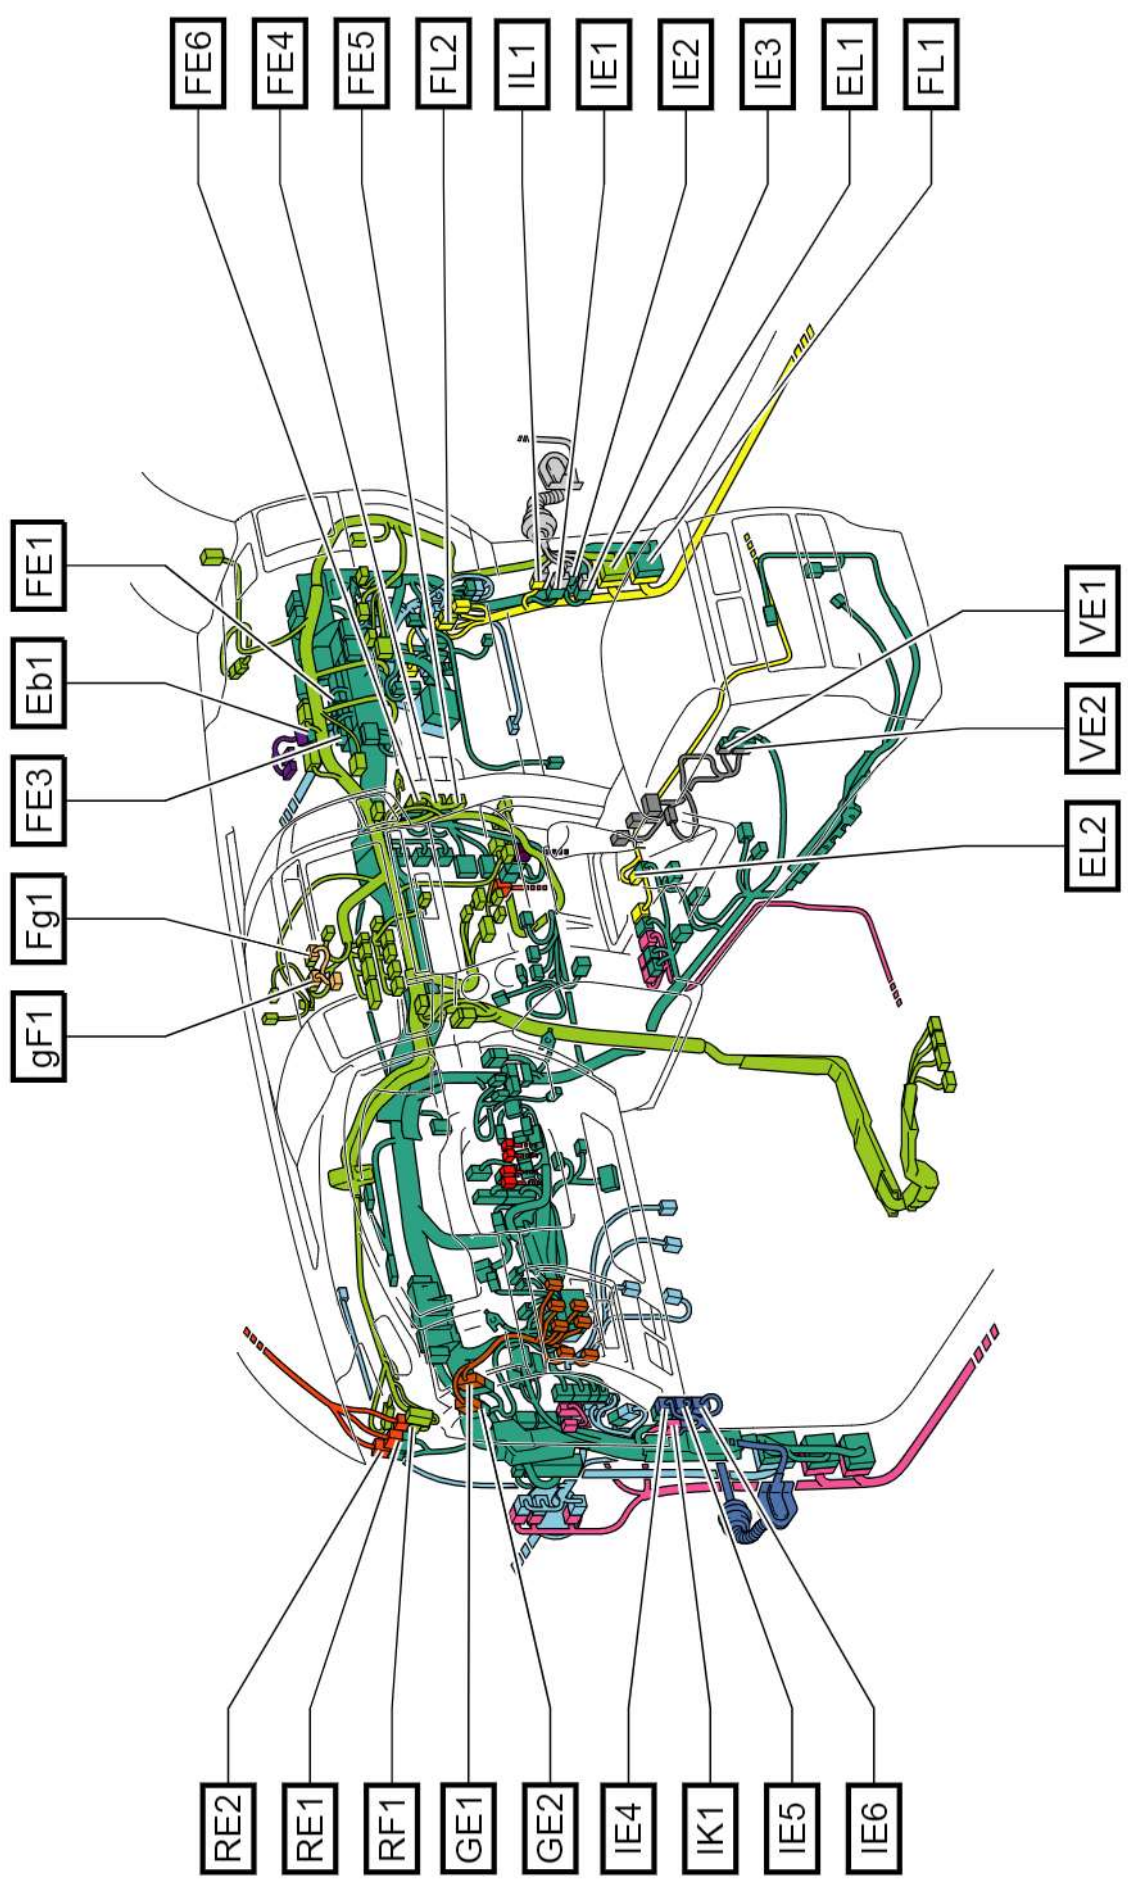


Wire and Wire in Instrument Panel <LHD>

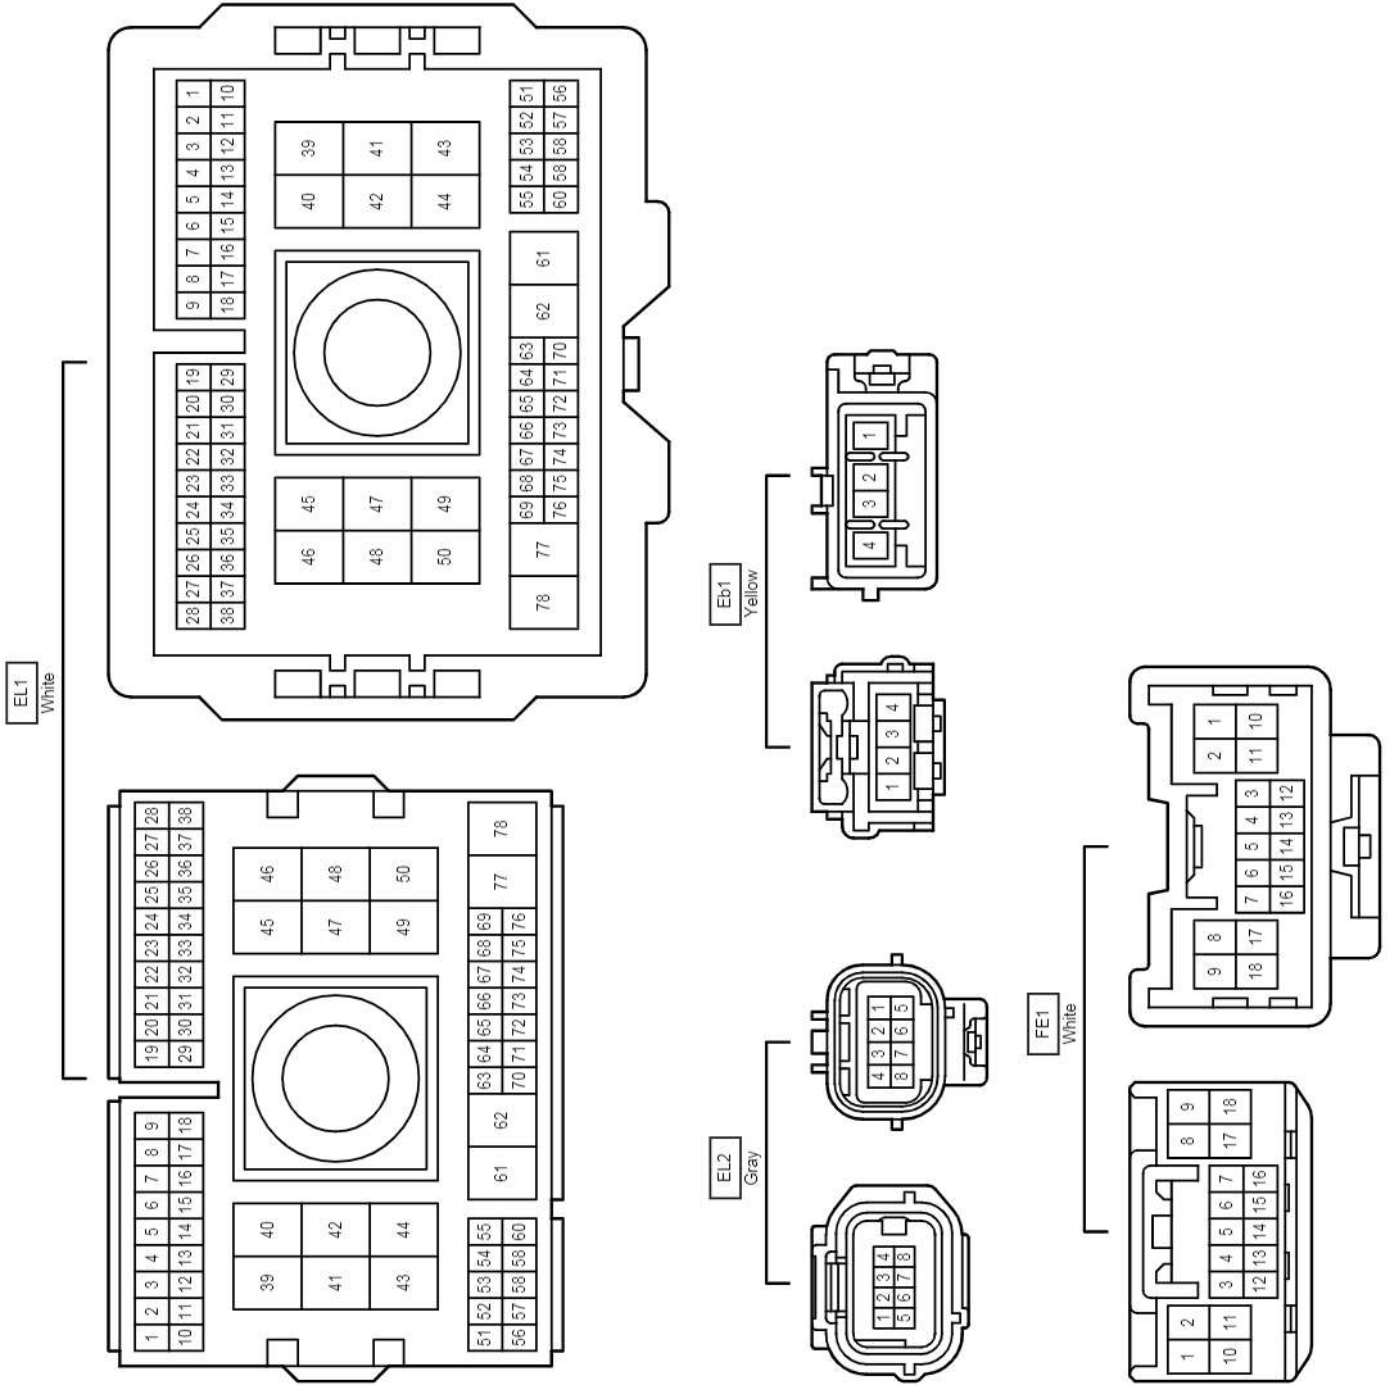


Wire and Wire in Instrument Panel <LHD>



FE4  
White

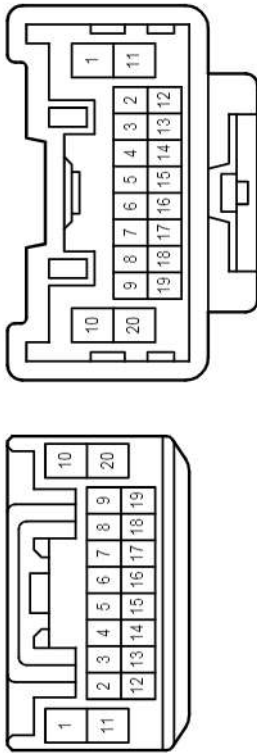

FE5  
White

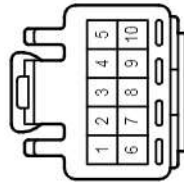


FE6  
White

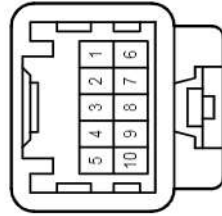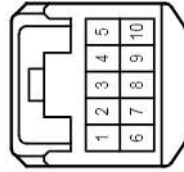


FL1



Blue

White


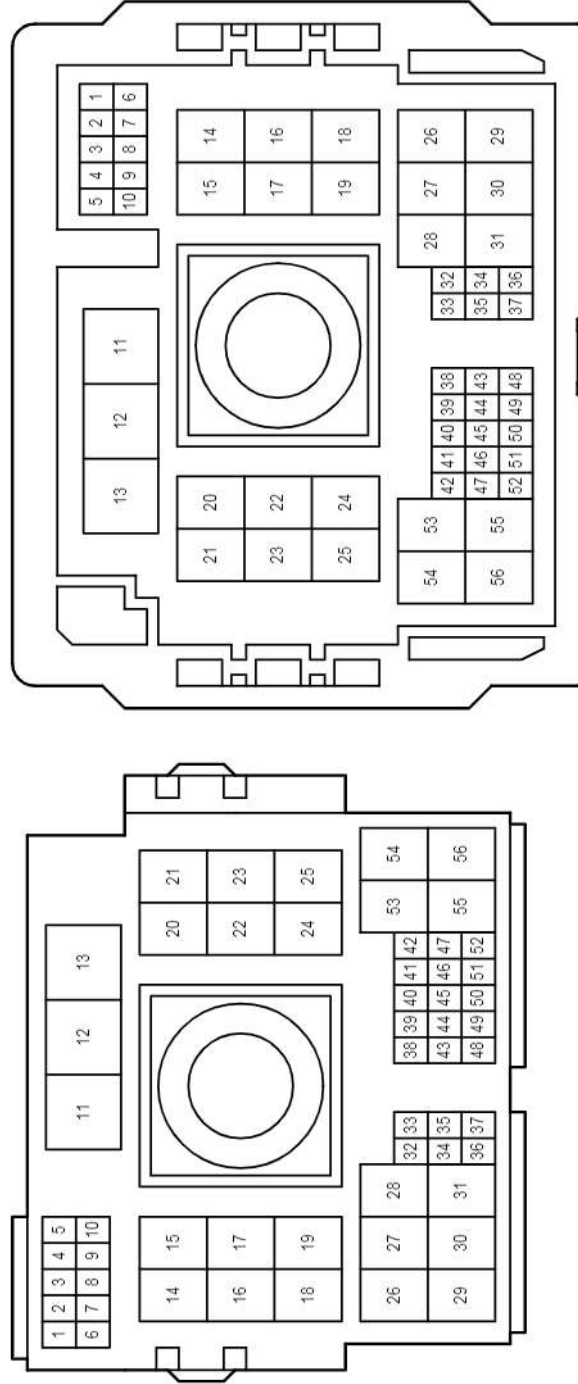


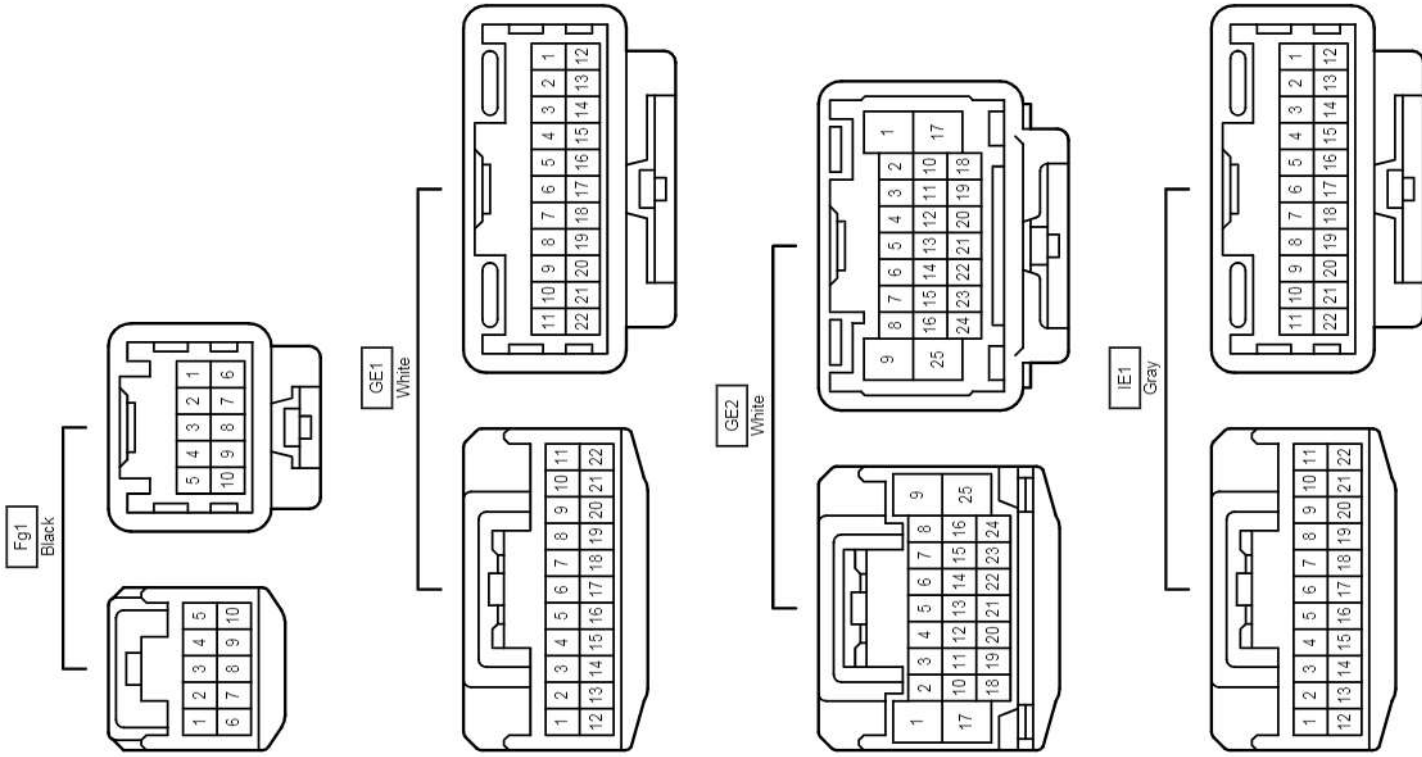



IE3  
White

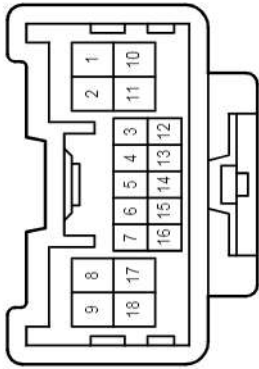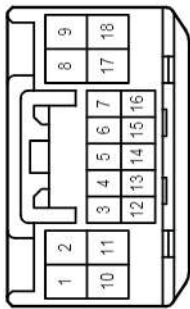



IE4  
Gray

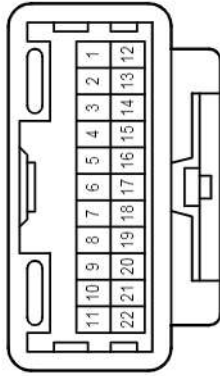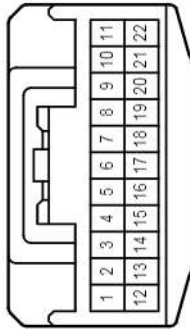



IE5  
Blue

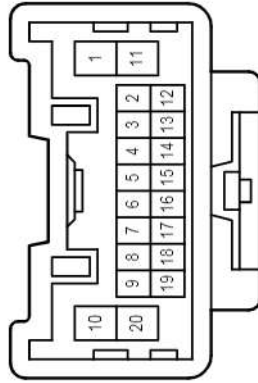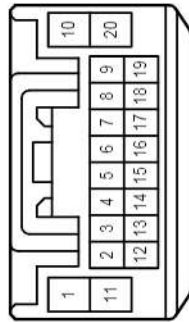


IE6  
White

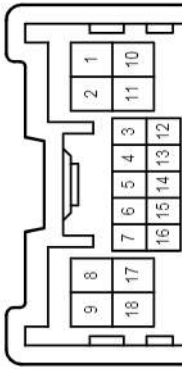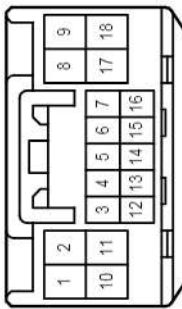


IK1  
Yellow

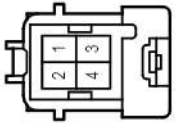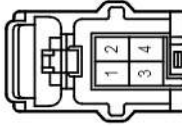

Wire and Wire in Instrument Panel <LHD>

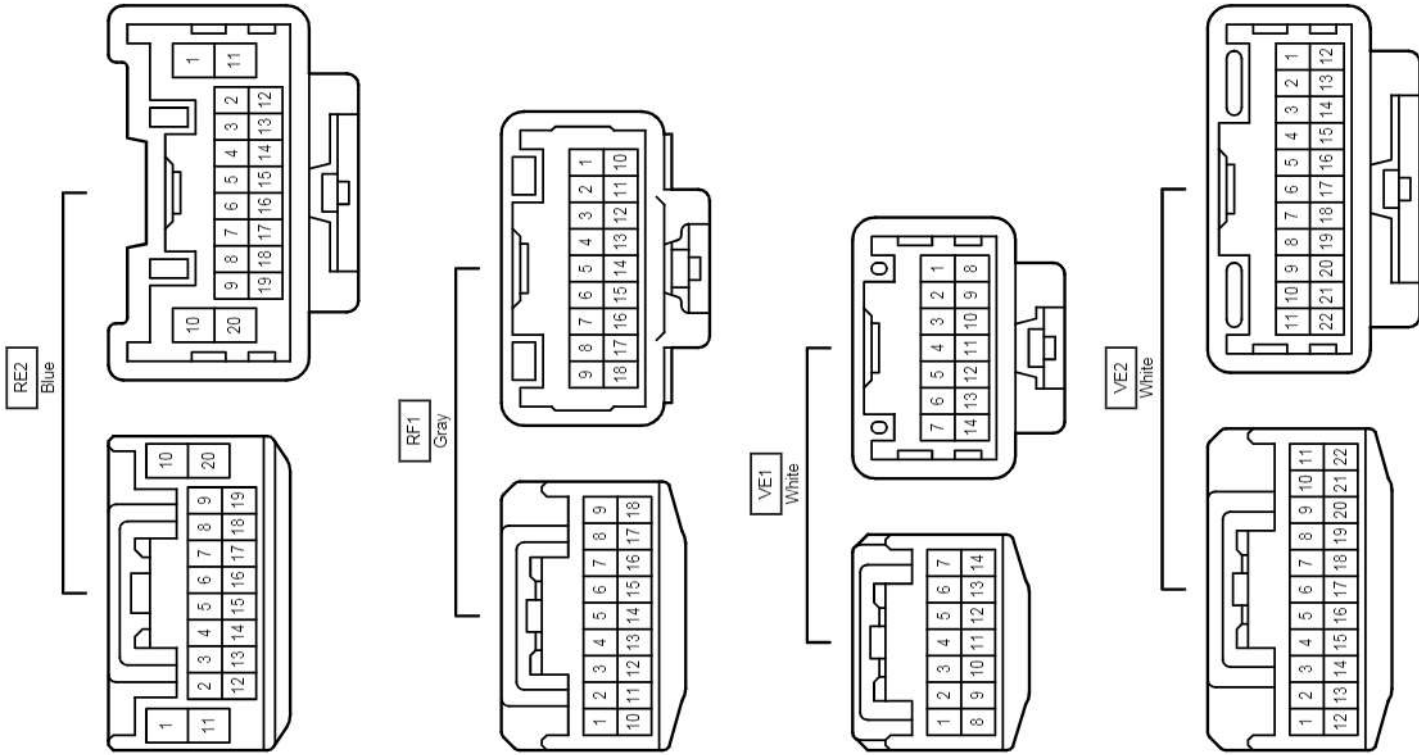


Ground Points in Instrument Panel <RHD>

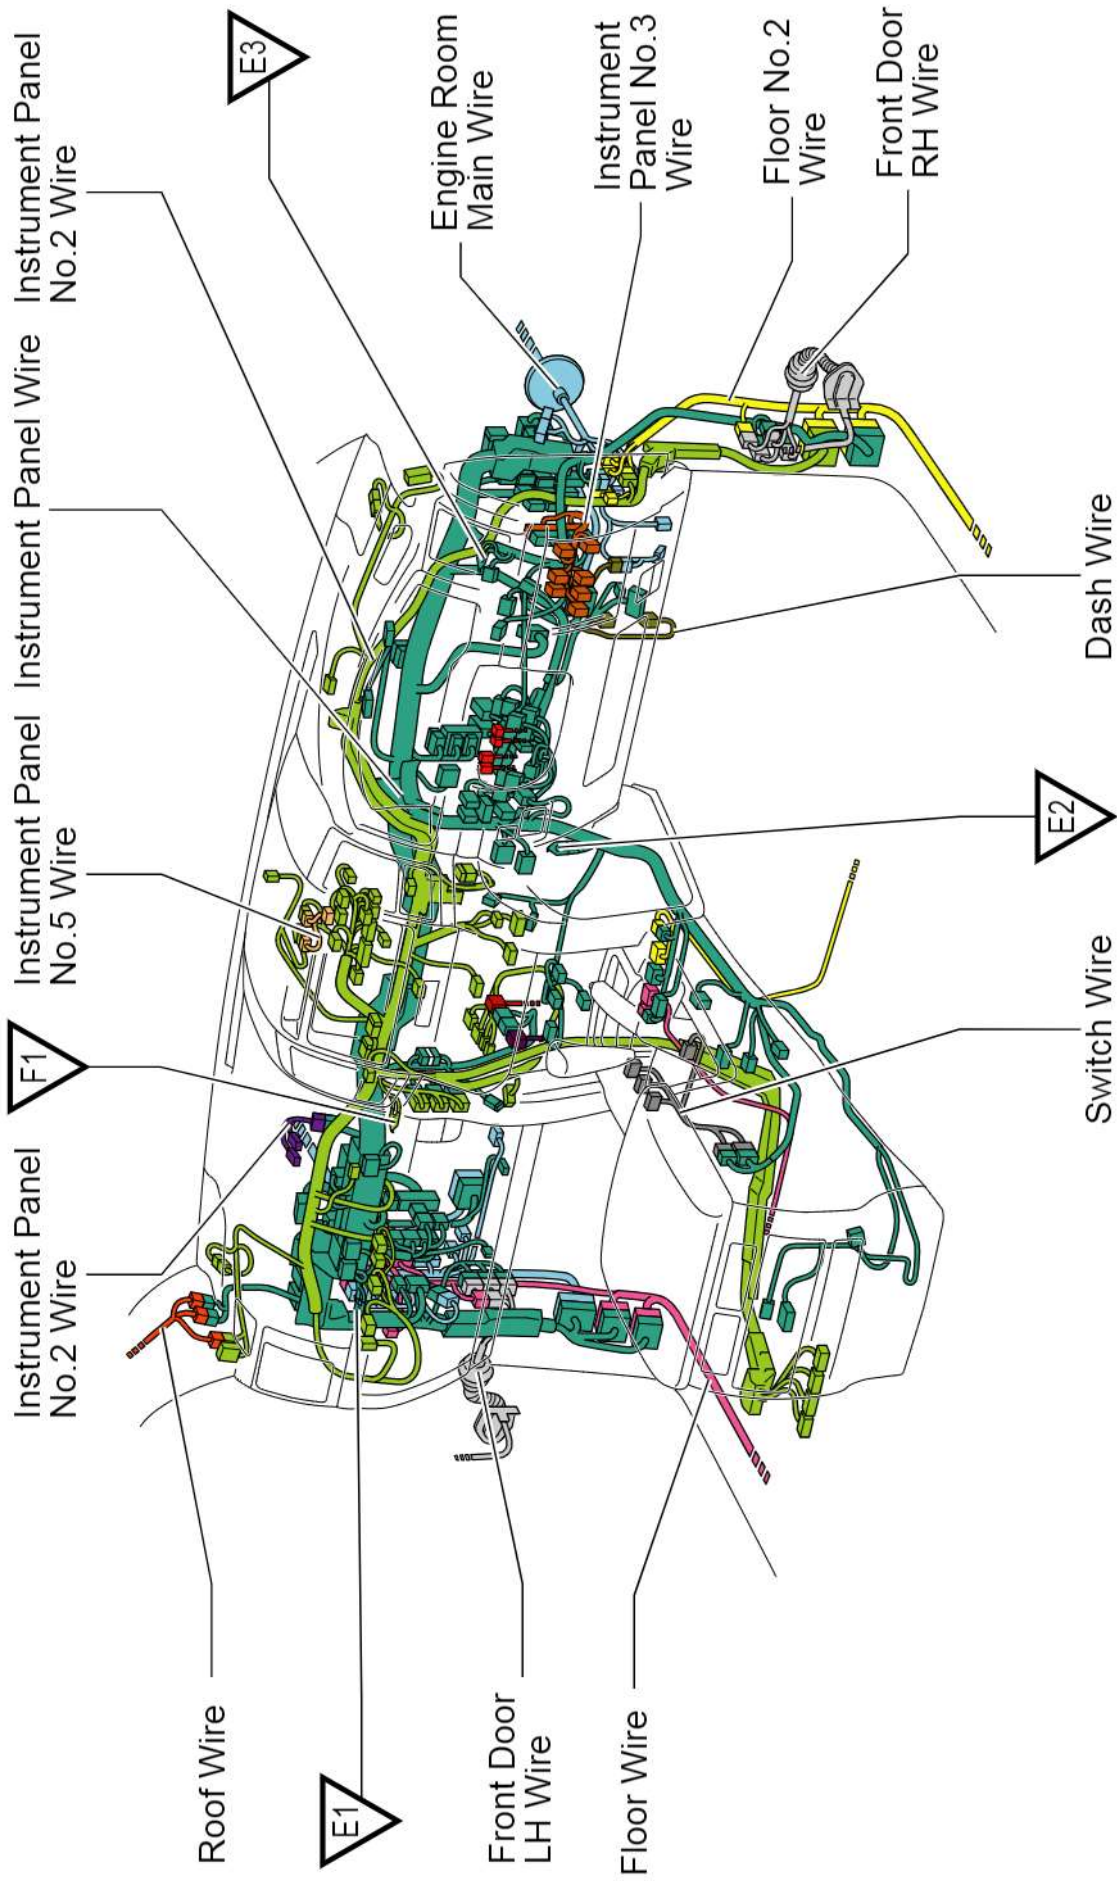



Position of Parts in Instrument Panel <RHD>

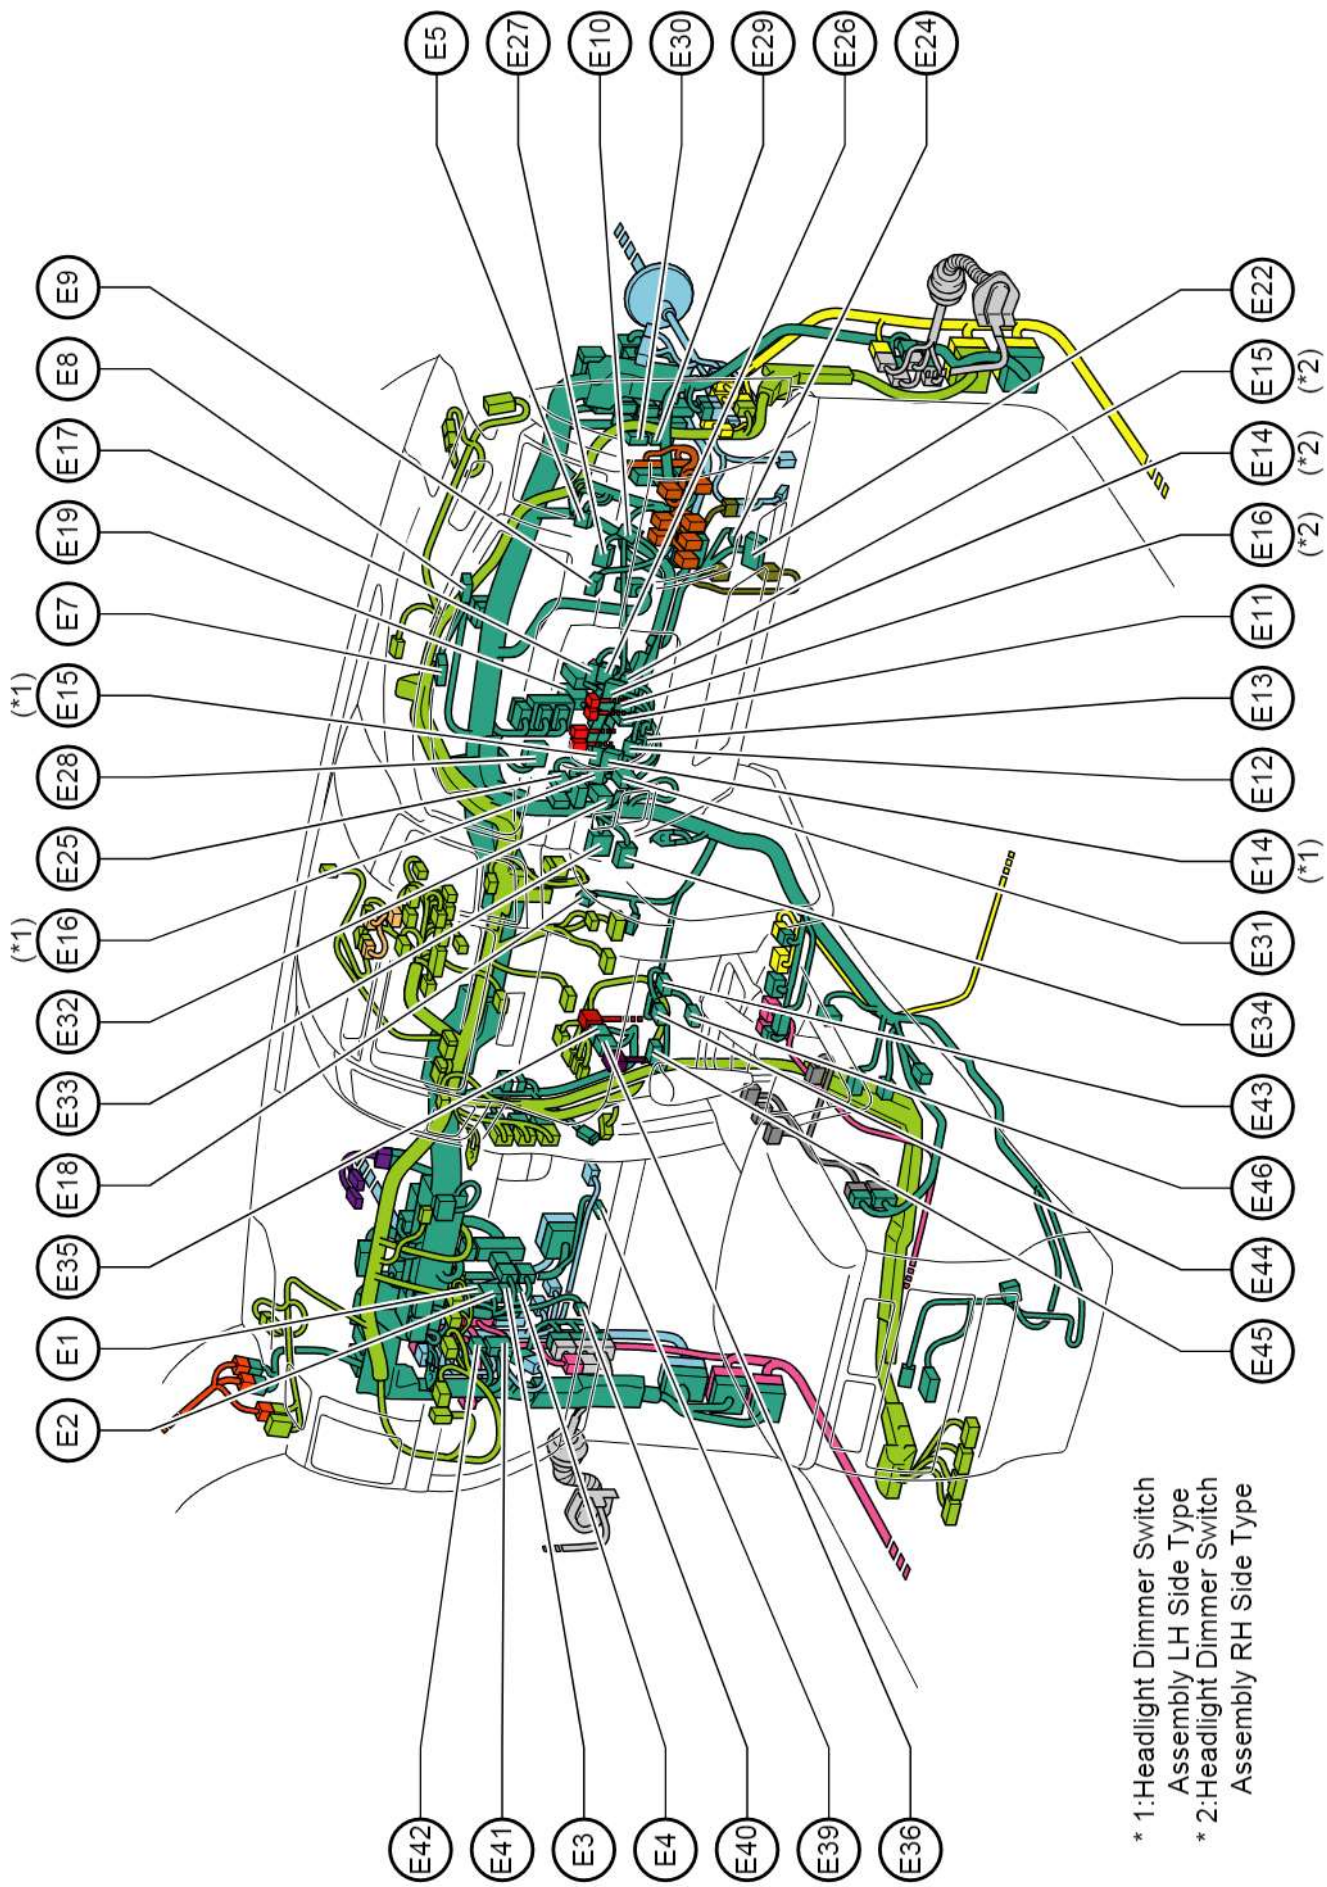


- \* 1:Headlight Dimmer Switch  
Assembly LH Side Type
- \* 2:Headlight Dimmer Switch  
Assembly RH Side Type


E 1	Main Body ECU
E 2	Main Body ECU
E 3	Main Body ECU
E 4	Main Body ECU
E 5	Skid Control Buzzer Assembly
E 7	Combination Meter Assembly
E 8	Combination Meter Assembly
E 9	Light Control Rheostat
E 10	No.1 Clearance Warning Buzzer
E 11	Steering Sensor
E 12	Spiral Cable Sub-Assembly
E 13	Spiral Cable Sub-Assembly
E 14	Headlight Dimmer Switch Assembly
E 15	Windshield Wiper Switch Assembly
E 16	Windshield Wiper Switch Assembly
E 17	Power Tilt Motor
E 18	Engine Switch
E 19	Turn Signal Flasher Assembly
E 22	DLC3
E 24	Lower No.1 Instrument Panel Airbag Assembly
E 25	VSC Off Switch
E 26	Steering Lock Actuator Assembly
E 27	Multiplex Tilt and Telescopic ECU
E 28	ID Code Box
E 29	Certification ECU Assembly
E 30	Certification ECU Assembly
E 31	Network Gateway ECU
E 32	Room Temperature Sensor
E 33	Quick Heater Assembly
E 34	Quick Heater Assembly
E 35	A/C Amplifier Assembly
E 36	A/C Amplifier Assembly
E 39	Glove Box Light Assembly
E 40	Lower No.2 Instrument Panel Airbag Assembly
E 41	Seat Belt Control ECU
E 42	Seat Belt Control ECU
E 43	Cigarette Lighter Assembly
E 44	Cigarette Lighter Illumination Assembly
E 45	Ash Receptacle Light Sub-Assembly
E 46	Power Outlet Socket Assembly

Position of Parts in Instrument Panel <RHD>


E 1  
White

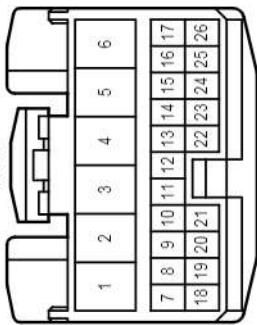


E 2  
White

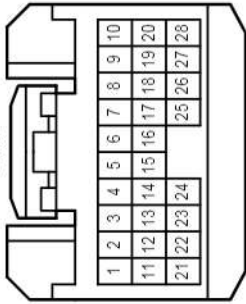


E 3  
White

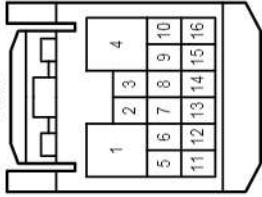


E 4  
White

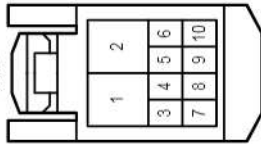


E 5  
Blue

 


E 7  
White

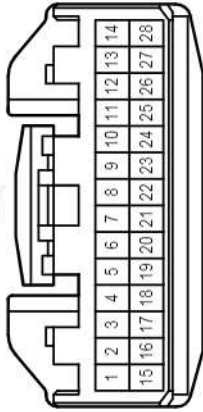

E 8  
Black

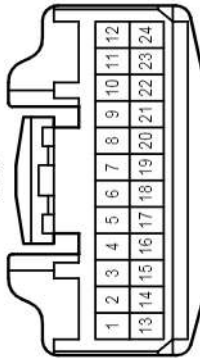


E 9  
White

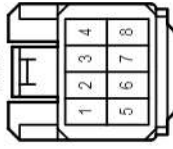


E 10  
Black




E 11  
Gray

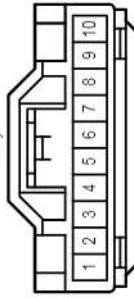


E 12  
Black

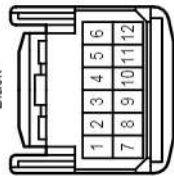


E 13  
Yellow

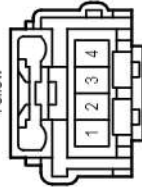

E 14  
White

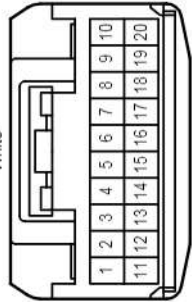


E 15  
White

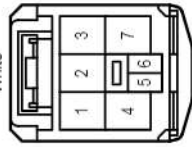


E 16  
White



 E 17  
White




E 18  
Black

 

E 19  
Black





Position of Parts in Instrument Panel <RHD>

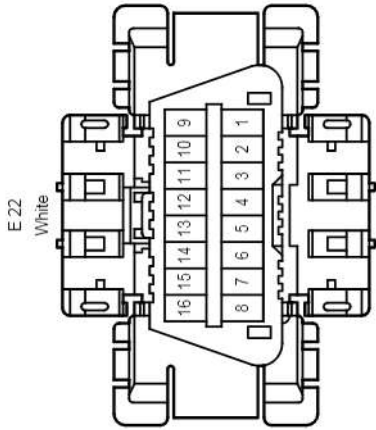

E 22  
White

E 24  
Black



 
E 25  
Black

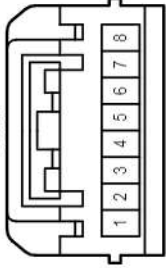

E 26  
Black



E 27  
White

E 28  
White

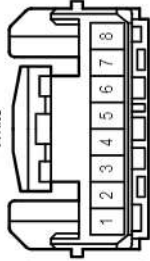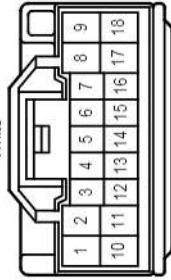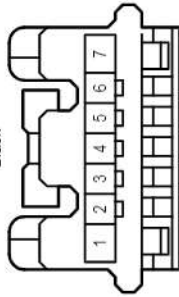

E 29  
White

E 30  
White


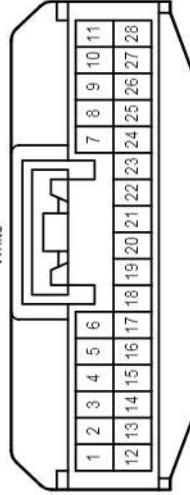
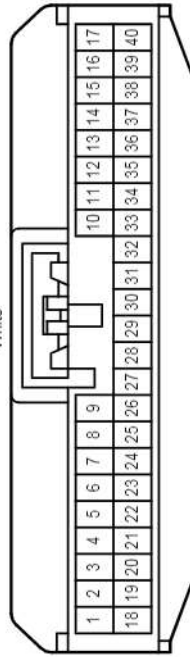


E 31  
White

E 32  
Black

E 33  
White

E 34  
White


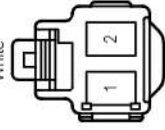
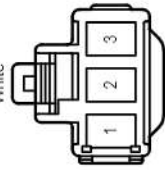
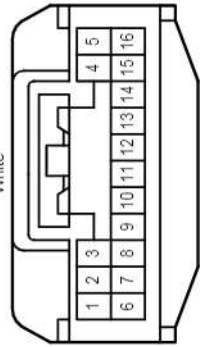


E 35  
White


E 36  
White

E 39  
Black

    
E 40  
Black



E 46  
White

 


Position of Parts in Instrument Panel <RHD>

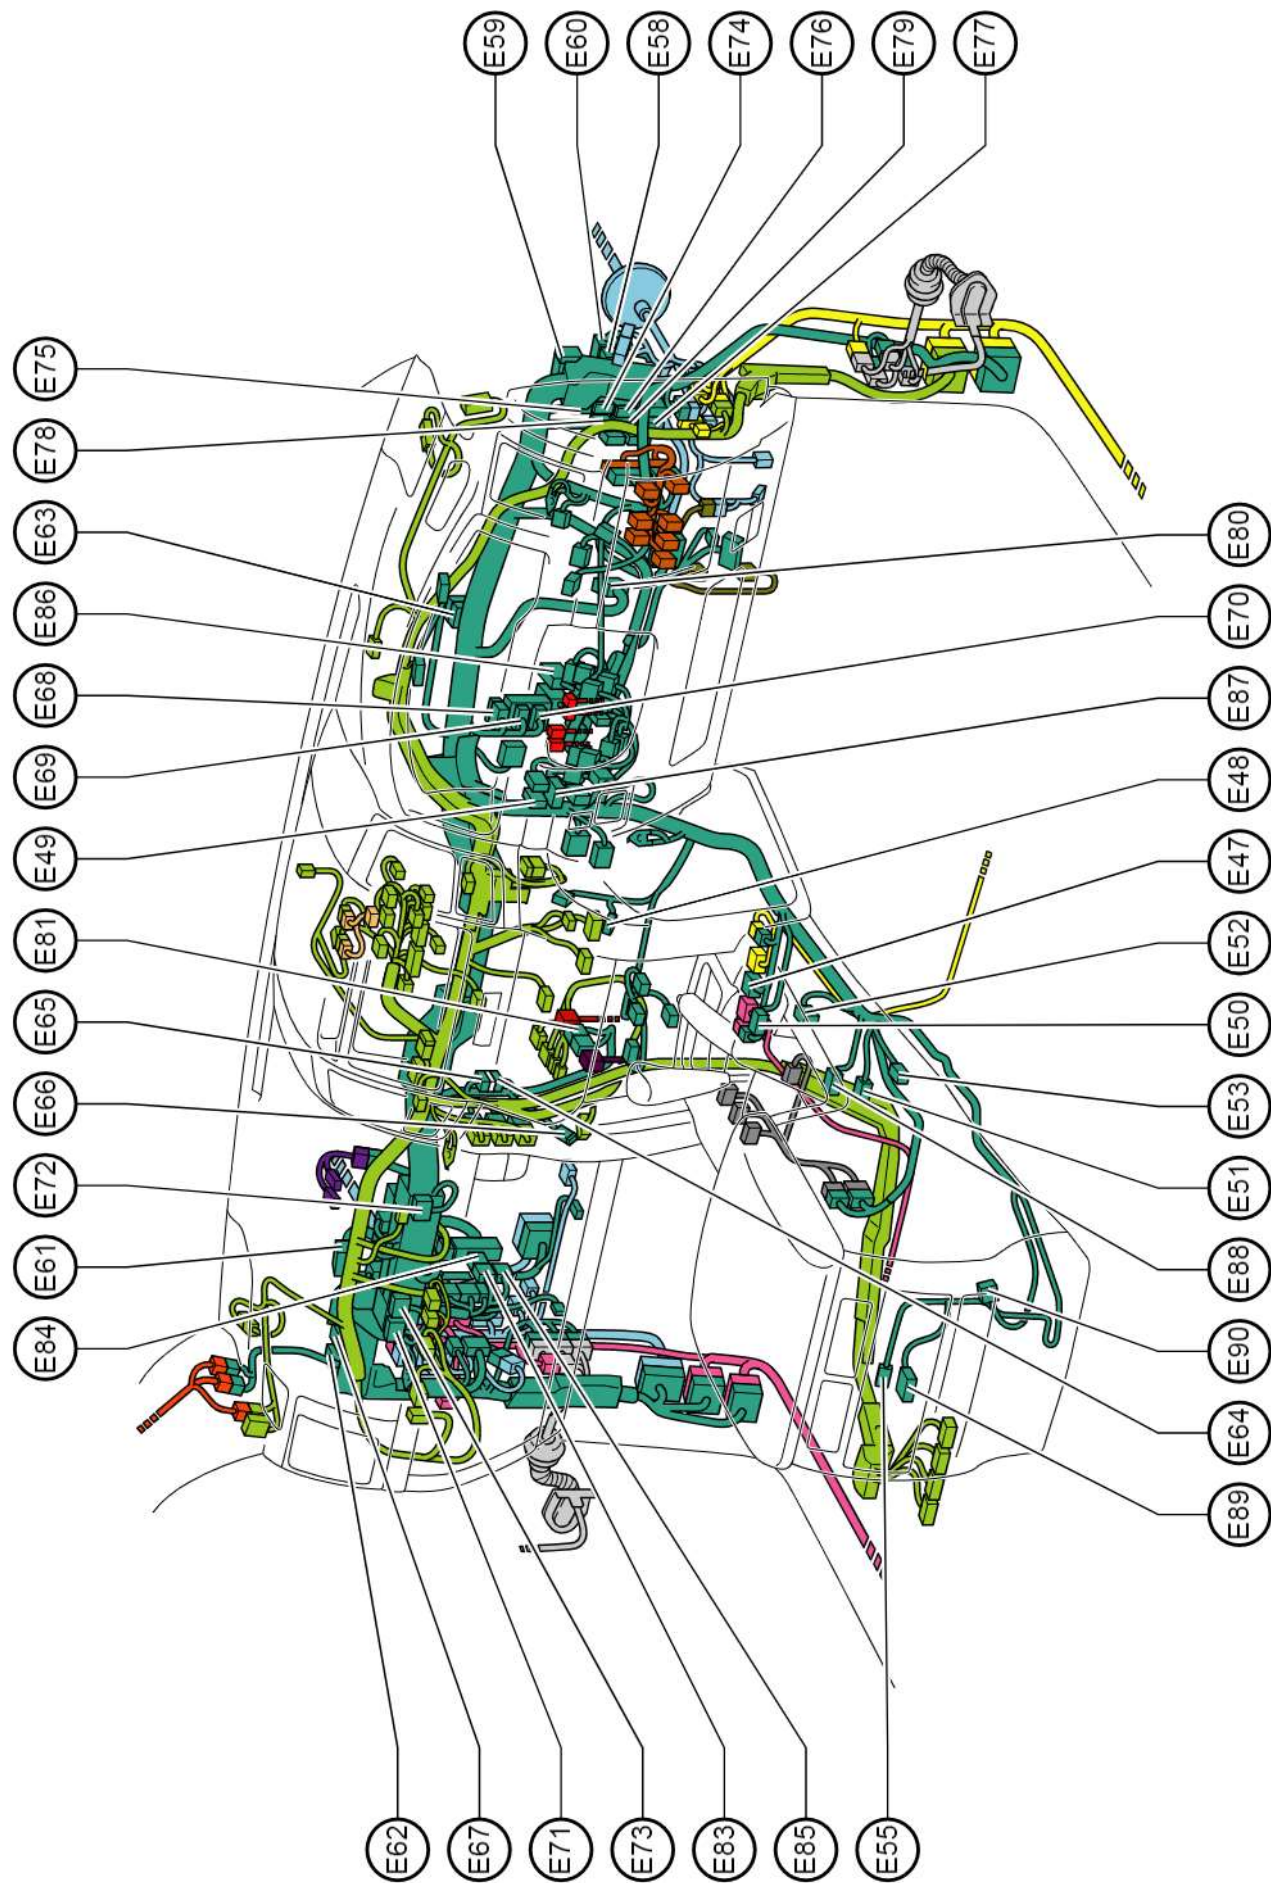


- E 47 Center Airbag Sensor Assembly
- E 48 Transfer Position Switch
- E 49 Center Differential Lock Switch
- E 50 Yaw Rate Sensor Assembly
- E 51 Shift Lock Control ECU Sub-Assembly
- E 52 Transmission Control Switch
- E 53 Parking Brake Switch Assembly
- E 55 No.2 A/C Control Assembly
- E 58 Junction Connector
- E 59 Junction Connector
- E 60 Junction Connector
- E 61 Junction Connector
- E 62 Junction Connector
- E 63 Junction Connector
- E 64 Junction Connector
- E 65 Junction Connector
- E 66 Junction Connector
- E 67 Junction Connector
- E 68 Junction Connector
- E 69 Junction Connector
- E 70 Junction Connector
- E 71 Junction Connector
- E 72 Junction Connector
- E 73 Junction Connector
- E 74 Junction Connector
- E 75 Junction Connector
- E 76 Junction Connector
- E 77 Steering Control ECU
- E 78 Steering Control ECU
- E 79 Steering Control ECU
- E 80 Steering Actuator Assembly
- E 81 A/C Amplifier Assembly
- E 83 Windshield Wiper ECU , Short Connector
- E 84 Short Connector
- E 85 Windshield Wiper ECU
- E 86 Double Lock Door Control Relay Assembly
- E 87 Differential Lock Switch
- E 88 Deceleration Sensor
- E 89 Heater Blower Switch
- E 90 Cooling Box Assembly

Position of Parts in Instrument Panel <RHD>


E 47  
Yellow

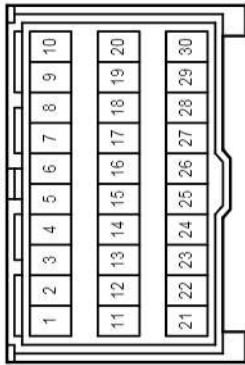


E 48  
Black

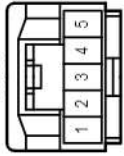


E 49  
White

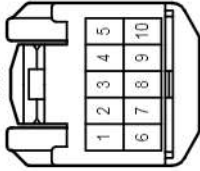


E 50  
Black

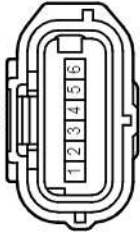

E 51  
White

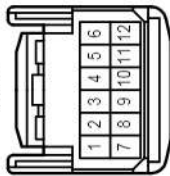


E 52  
White

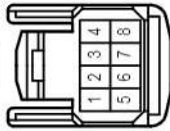


E 53  
White




E 55  
White

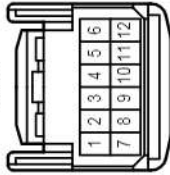


E 58

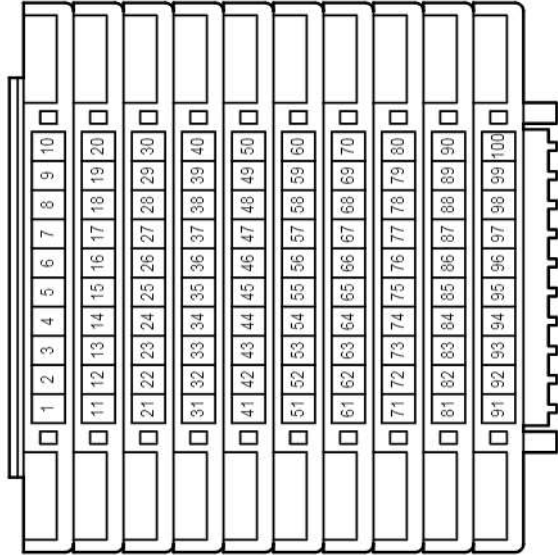


E 59

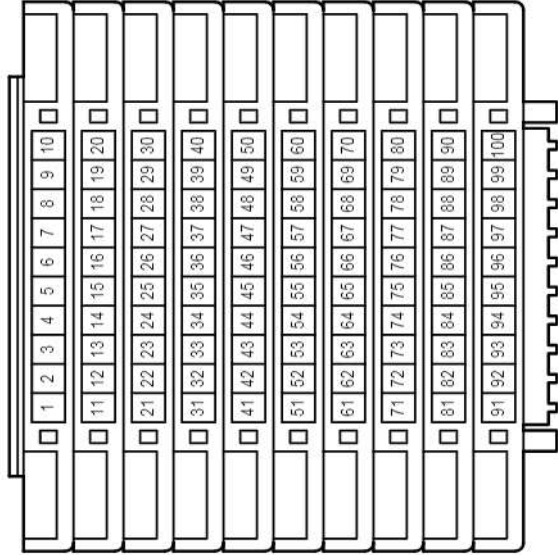

E 60

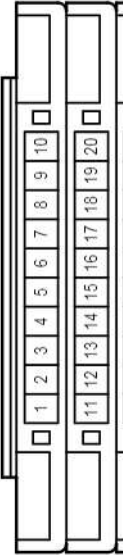


E 61

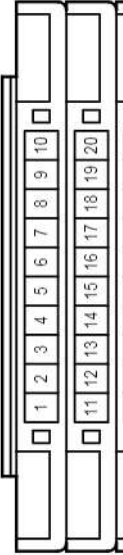



Position of Parts in Instrument Panel <RHD>


E 62  
White

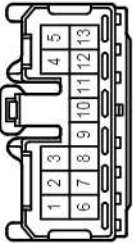


E 63  
Gray




E 64  
Black

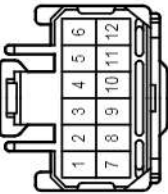


E 65  
Black

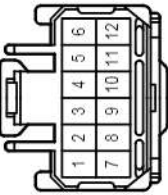


E 66  
White

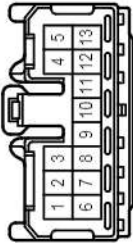


E 67  
White

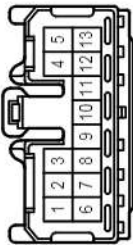


E 68  
Gray

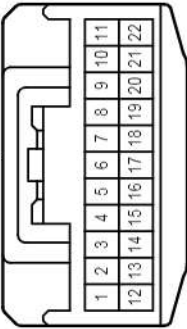


E 69  
Gray

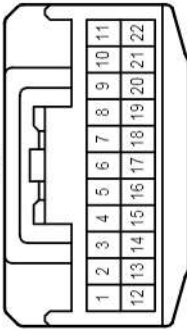


E 70  
Gray

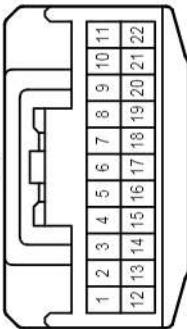


E 71  
Gray

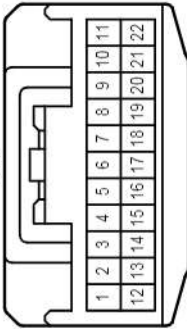


E 72  
Gray

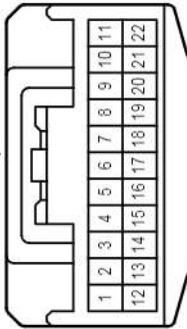


E 73  
Gray

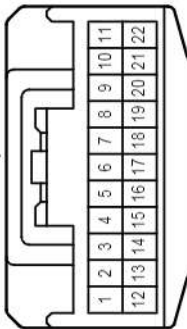


E 74  
Gray

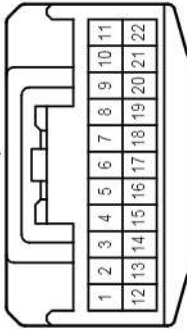


E 75  
Gray

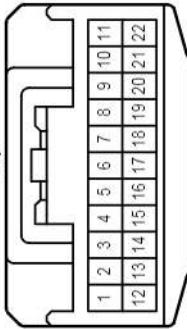

E 76  
Gray

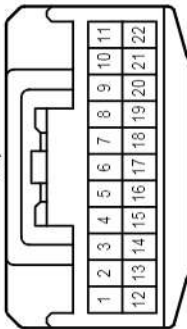


E 77  
White

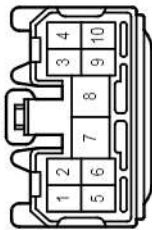


Position of Parts in Instrument Panel <RHD>


E 81  
White

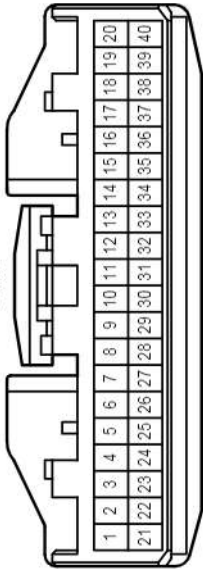


E 83  
Blue

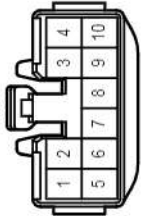


E 84  
Blue

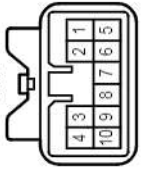

E 85  
White

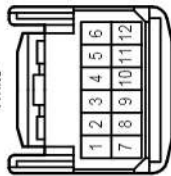

E 86  
White

 


E 87  
White



E 88  
Black




E 89  
Black

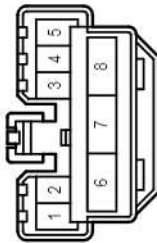

E 90  
White








Position of Parts in Instrument Panel <RHD>

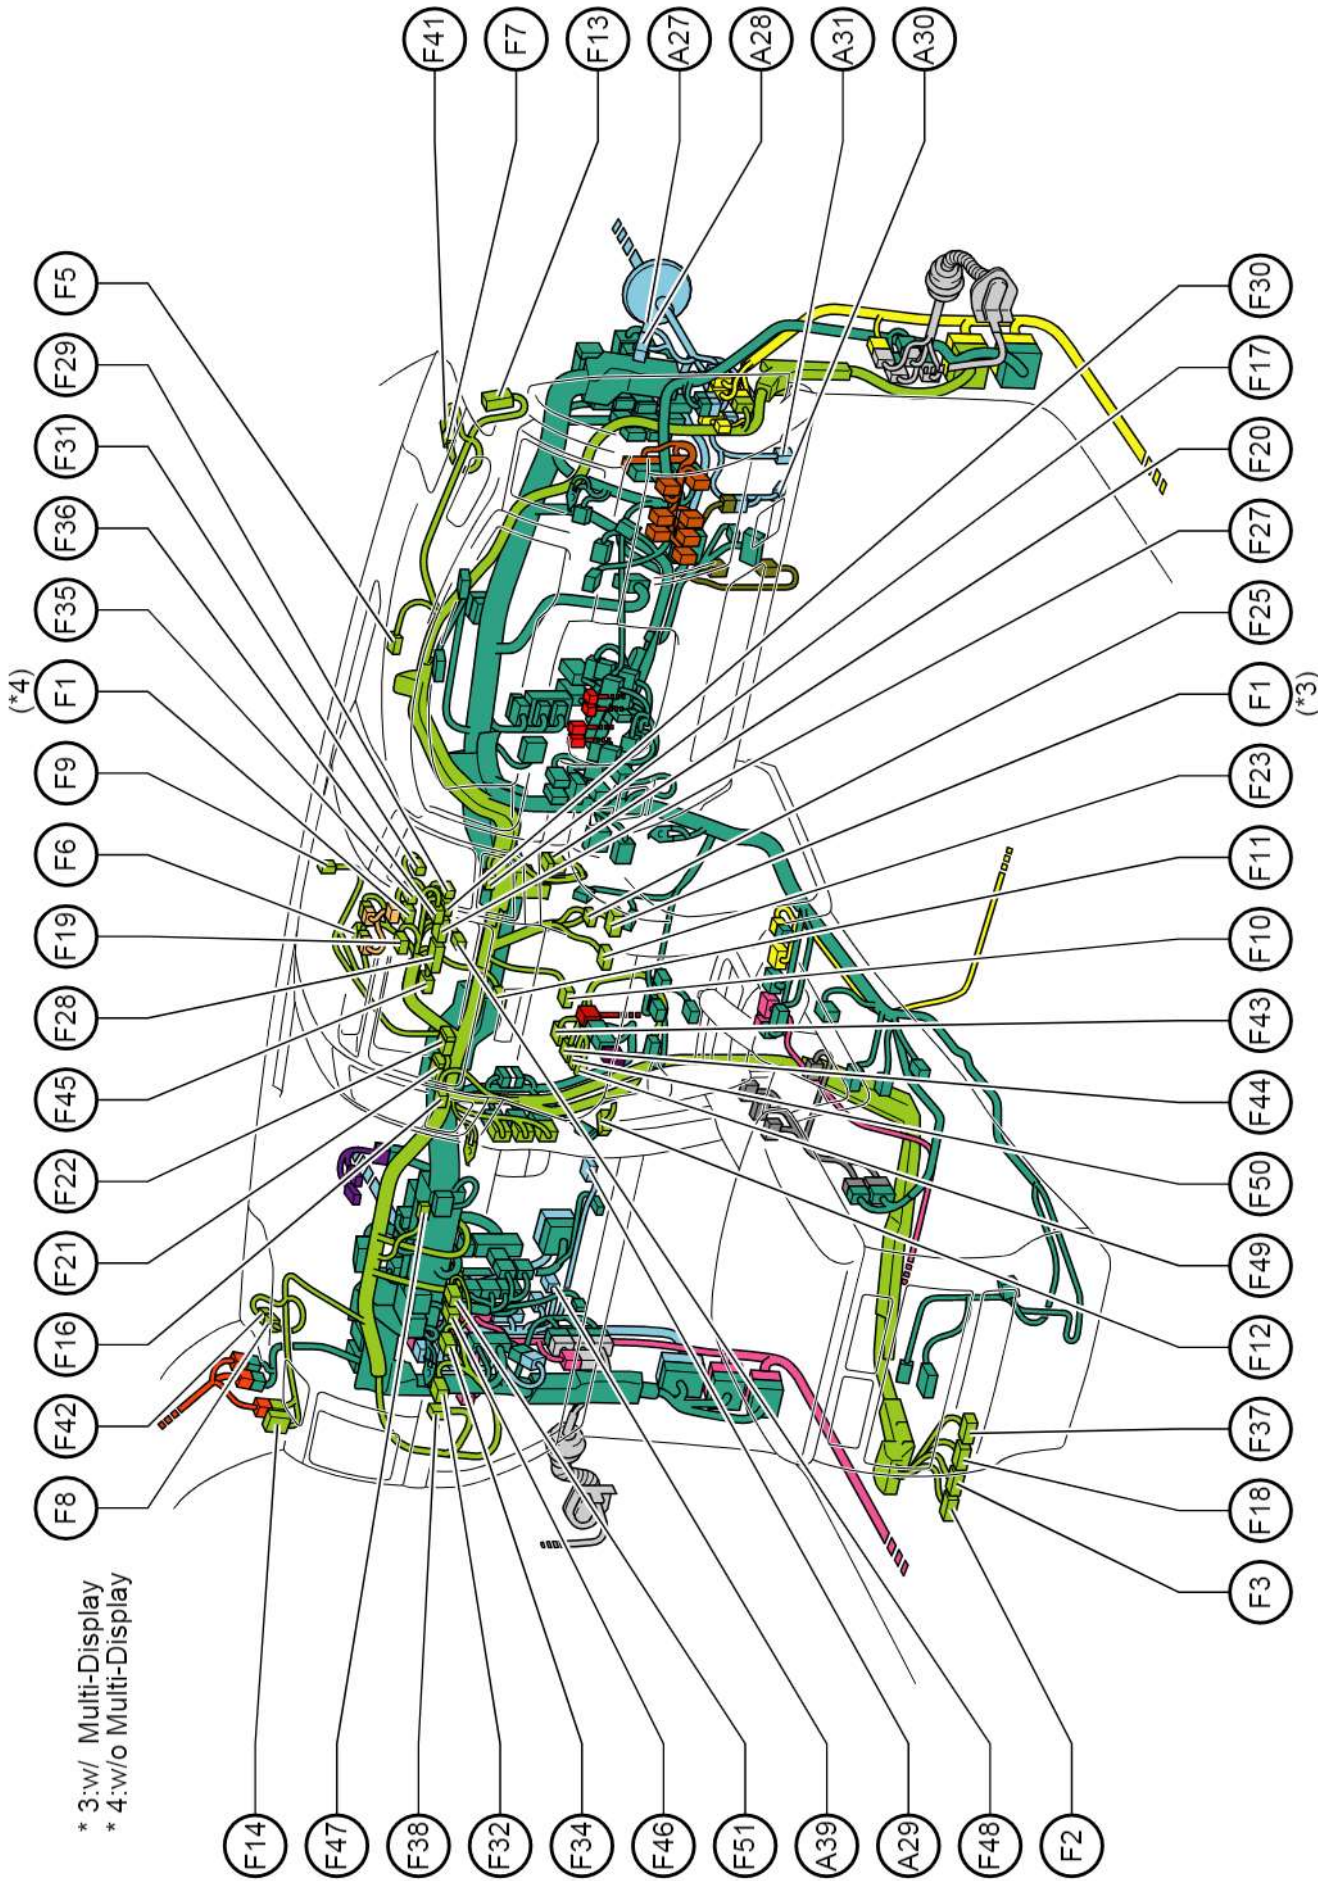

\* 3:w/ Multi-Display  
 \* 4:w/o Multi-Display

A 27	Four Wheel Drive Control ECU
A 28	Four Wheel Drive Control ECU
A 29	Front Blower with Fan Motor Sub-Assembly
A 30	Stop Light Switch Assembly
A 31	Accelerator Pedal Sensor Assembly
A 39	Stop Light Control Relay Assembly
F 1	Radio Receiver Assembly
F 2	Stereo Component Amplifier Assembly
F 3	Stereo Component Amplifier Assembly
F 5	Amplifier Antenna Assembly
F 6	Front No.4 Speaker Assembly
F 7	Front No.2 Speaker Assembly RH , Short Connector
F 8	Front No.2 Speaker Assembly LH , Short Connector
F 9	Automatic Light Control Sensor
F 10	A/C Control Assembly
F 11	Hazard Warning Signal Switch Assembly
F 12	Clearance Warning ECU Assembly
F 13	Front No.3 Speaker Assembly RH
F 14	Front No.3 Speaker Assembly LH
F 16	Temperature Control Switch Assembly LH
F 17	Temperature Control Switch Assembly RH
F 18	Stereo Component Amplifier Assembly
F 19	Radio Receiver Assembly
F 20	Junction Connector
F 21	Junction Connector
F 22	Junction Connector
F 23	Radio Receiver Assembly
F 25	Radio Receiver Assembly
F 27	Multi-Display
F 28	Multi-Display
F 29	Multi-Display
F 30	Multi-Display
F 31	Multi-Display
F 32	Navigation ECU
F 34	Navigation ECU
F 35	Radio Receiver Assembly
F 36	Radio Receiver Assembly
F 37	Stereo Component Amplifier Assembly
F 38	Airbag Cut Off Switch Cylinder Sub-Assembly
F 41	Short Connector
F 42	Short Connector
F 43	Parking Assist ECU
F 44	Parking Assist ECU

Position of Parts in Instrument Panel <RHD>

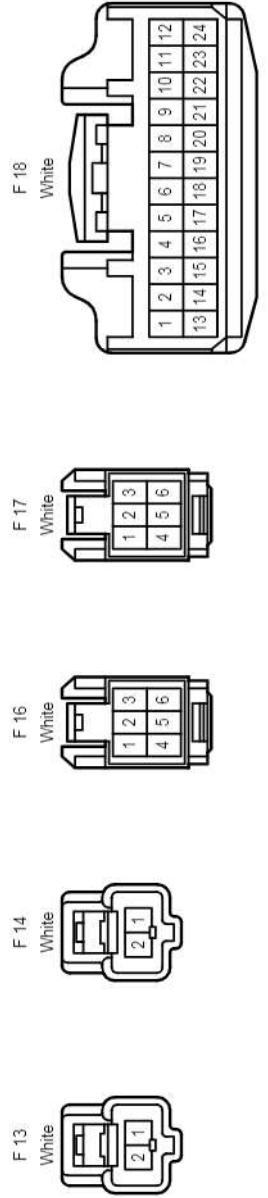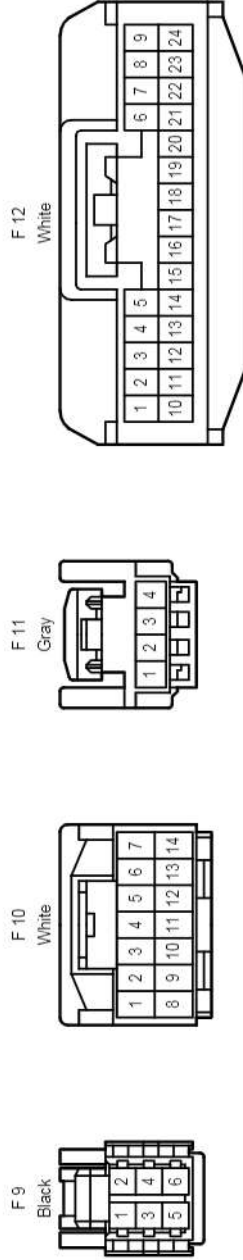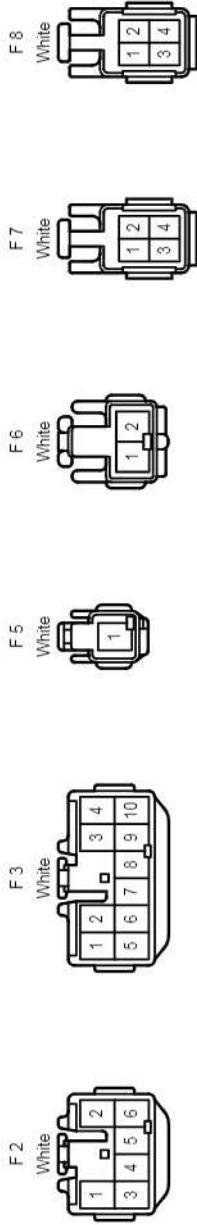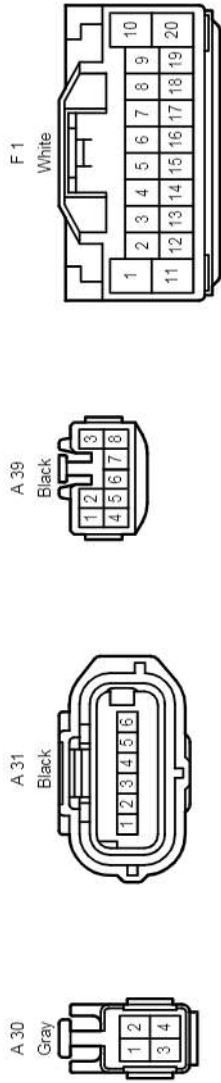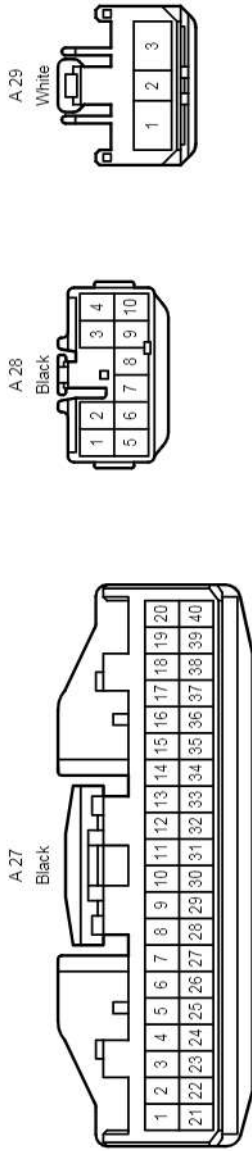


F.19 White

F.20 Gray


F.21 Black

Position of Parts in Instrument Panel <RHD>


F 22  
White

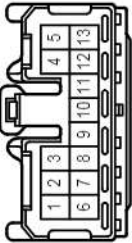


F 23  
White

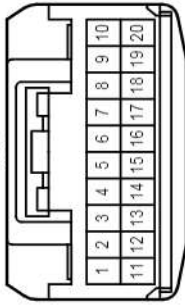


F 25  
White

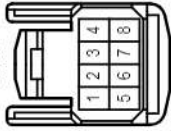


F 27  
White

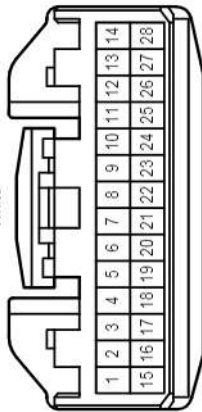


F 28  
White

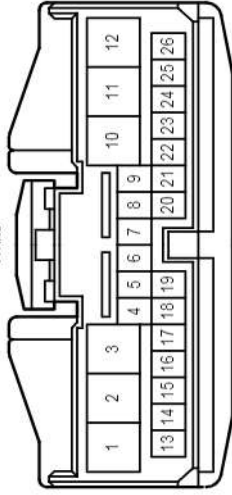


F 29  
Blue

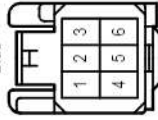


F 30  
White

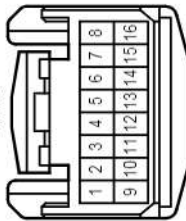


F 31  
White

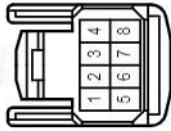


F 32  
White

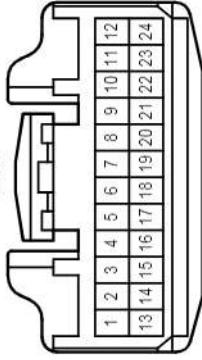


F 34  
White

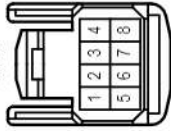


F 35  
White

 

F 36  
White

 


F 37  
White

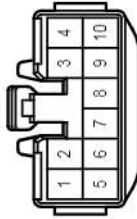


F 38  
White



 
F 42  
White



F 43  
White

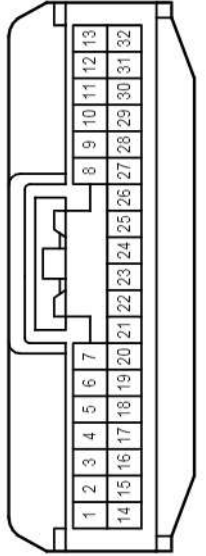


F 41  
White

 


Position of Parts in Instrument Panel <RHD>

---

 F 47  
Gray



F 48  
Blue

 


F 49  
White




F 50  
Blue



 F 51  
White



Position of Parts in Instrument Panel <RHD>





















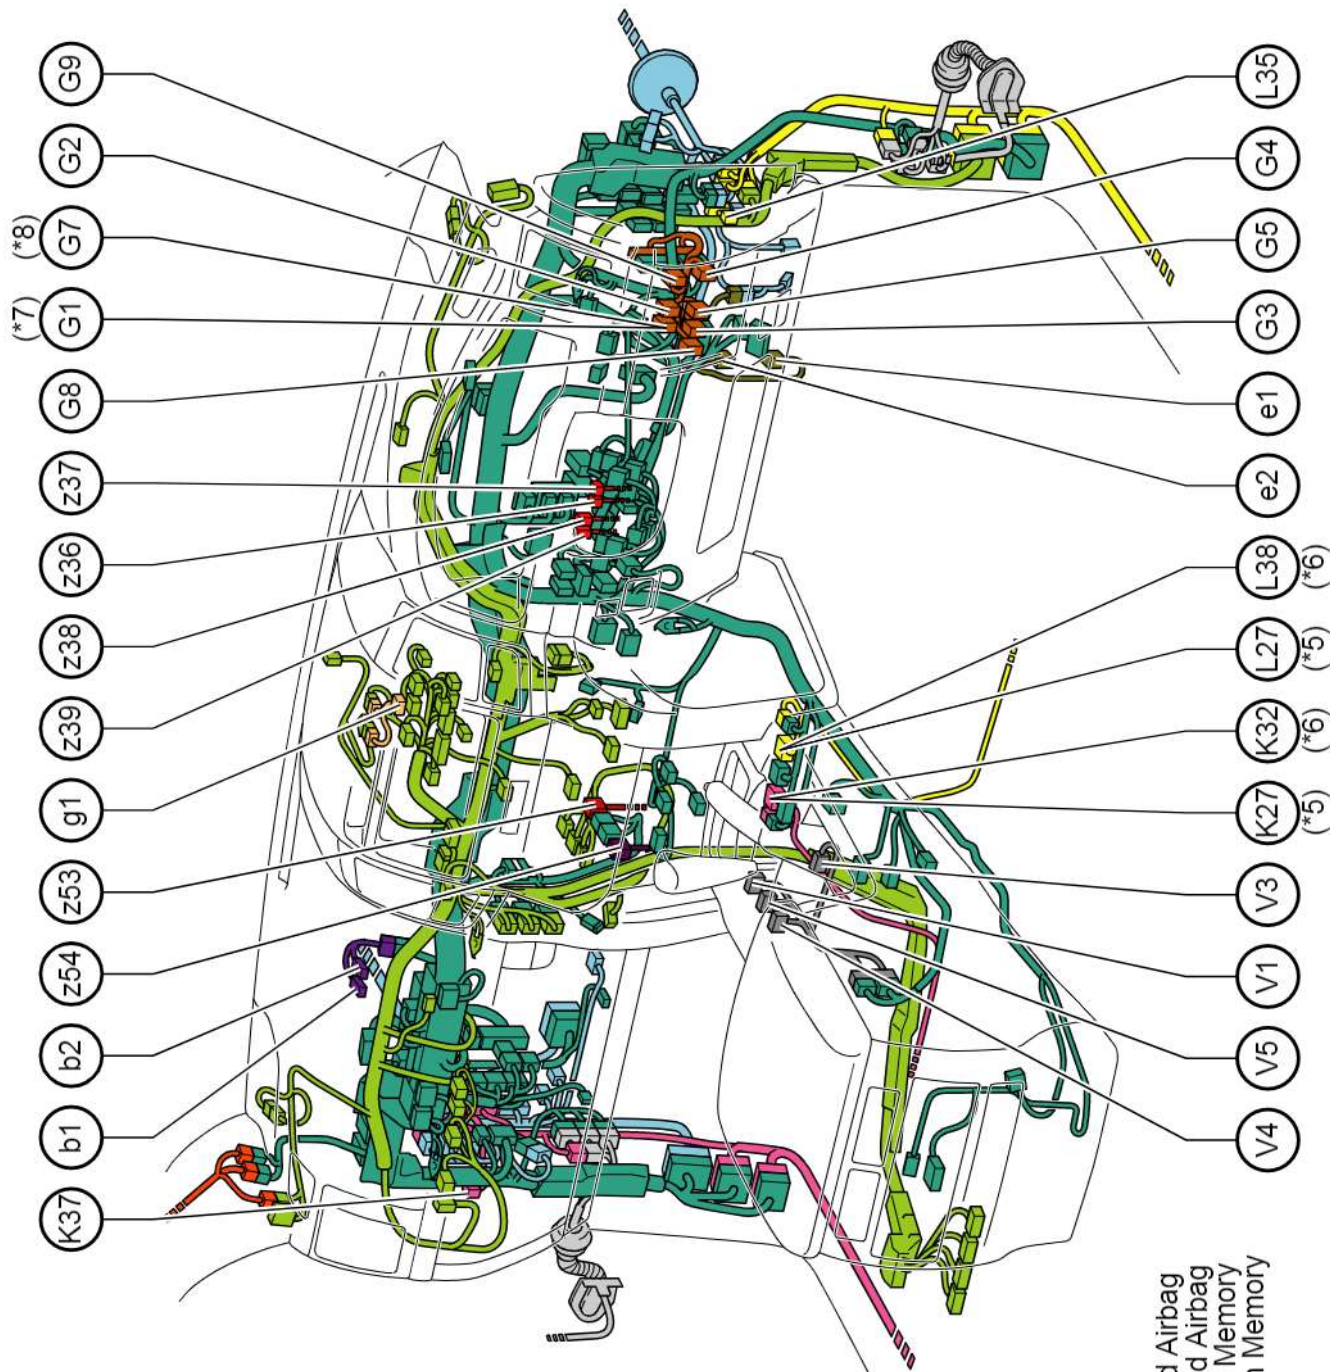


- \* 5:w/ Curtain Shield Airbag
- \* 6:w/o Curtain Shield Airbag
- \* 7:w/ Seat Position Memory
- \* 8:w/o Seat Position Memory






- G 1 Outer Mirror Switch Assembly
- G 2 Outer Mirror Switch Assembly
- G 3 Curtain Airbag Cutoff Switch
- G 4 Headlight Cleaner Switch Assembly
- G 5 Back Sonar or Clearance Sonar Switch Assembly
- G 7 Outer Mirror Switch Assembly
- G 8 Idle Up Switch
- G 9 Headlight Leveling Switch
  
- K 27 Center Airbag Sensor Assembly
- K 32 Center Airbag Sensor Assembly
- K 37 Acceleration Sensor LH
  
- L 27 Center Airbag Sensor Assembly
- L 35 Acceleration Sensor RH
- L 38 Center Airbag Sensor Assembly
  
- V 1 Seat Heater Switch
- V 3 Front Indoor Electrical Key Oscillator
- V 4 Suspension Control Switch
- V 5 Suspension Control Switch
  
- b 1 Front Passenger Side Squib Circuit
- b 2 Front Passenger Side Squib Circuit
  
- e 1 Clutch Start Switch Assembly
- e 2 Clutch Switch Assembly
  
- g 1 Clock Assembly
  
- z 36 Spiral Cable Sub-Assembly , Steering Pad Switch
- z 37 Cruise Control Main Switch , Spiral Cable Sub-Assembly
- z 38 Driver Side Squib 2nd Step Circuit , Spiral Cable Sub-Assembly
- z 39 Driver Side Squib Circuit , Spiral Cable Sub-Assembly
- z 53 A/C Blower Assembly , A/C Amplifier Assembly
- z 54 A/C Blower Assembly , A/C Amplifier Assembly

   Position of Parts in Instrument Panel <RHD>

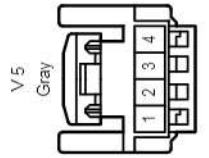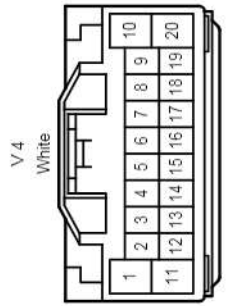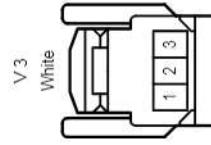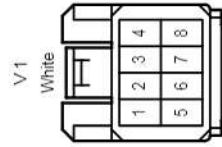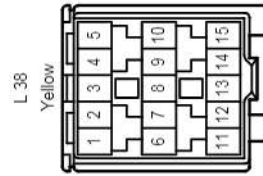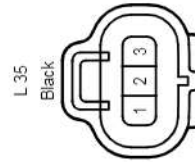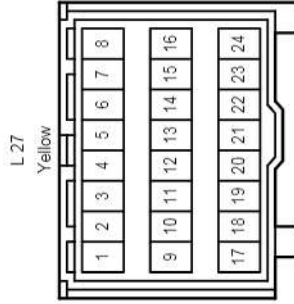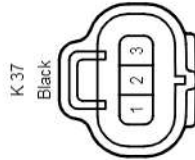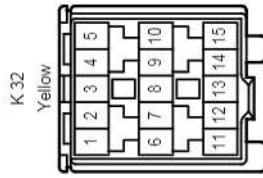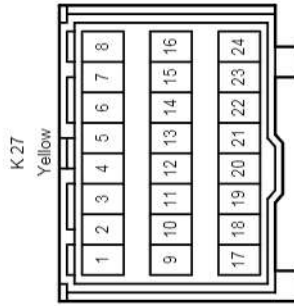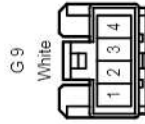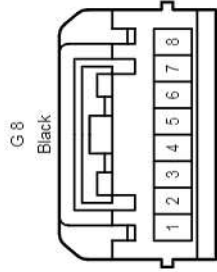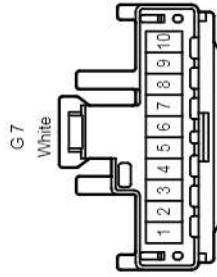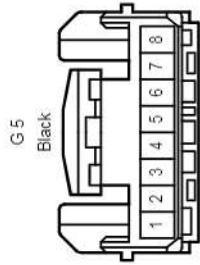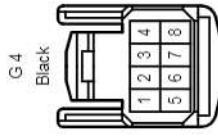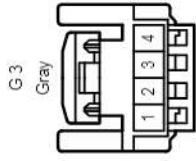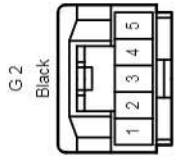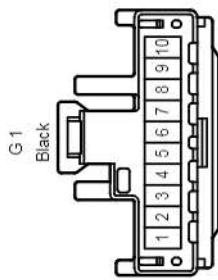




 
Position of Parts in Instrument Panel <RHD>

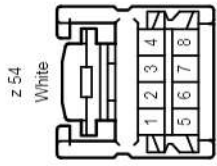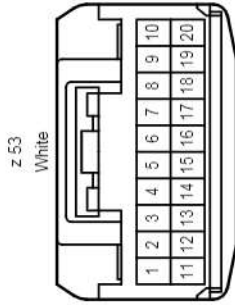

Wire and Wire in Instrument Panel <RHD>





Wire and Wire in Instrument Panel <RHD>

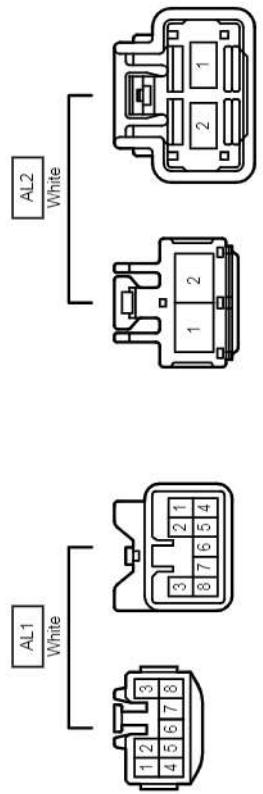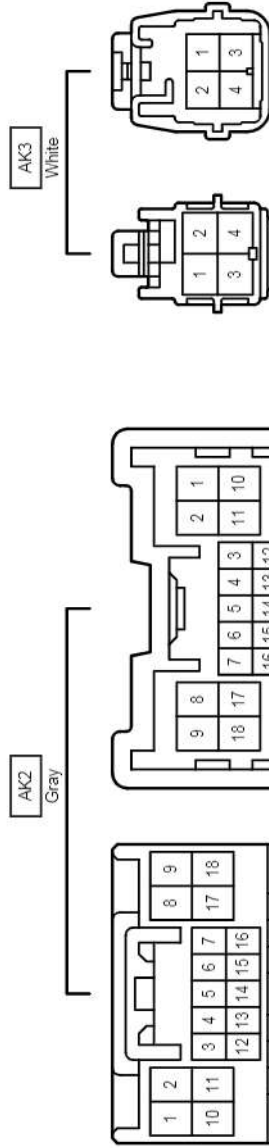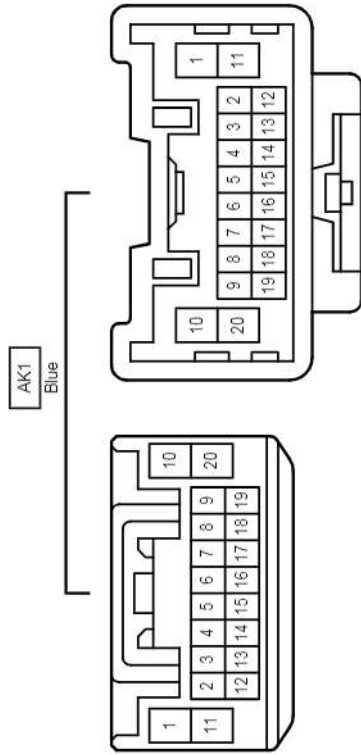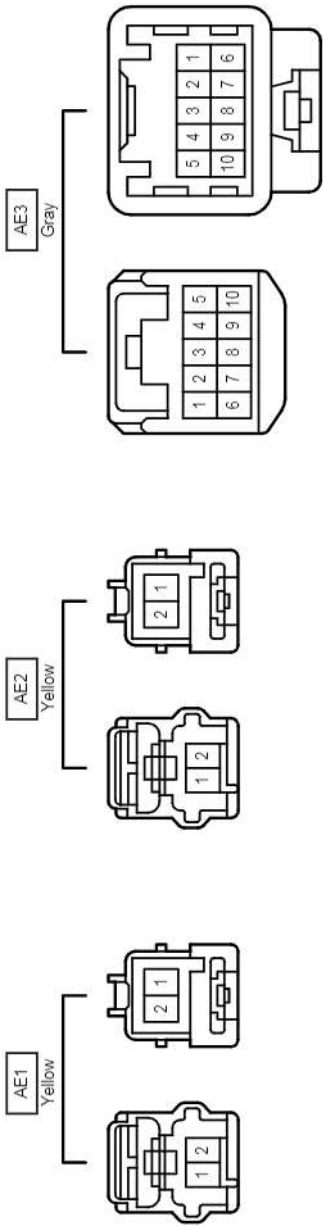



Wire and Wire in Instrument Panel <RHD>

EA1  
White

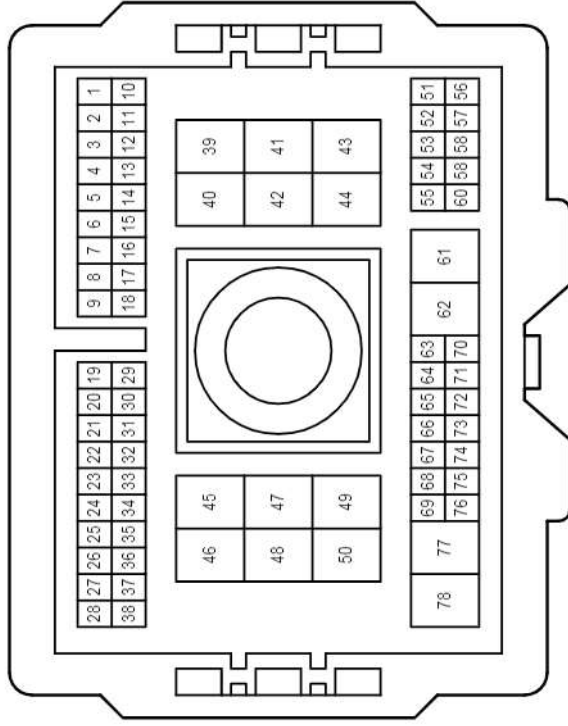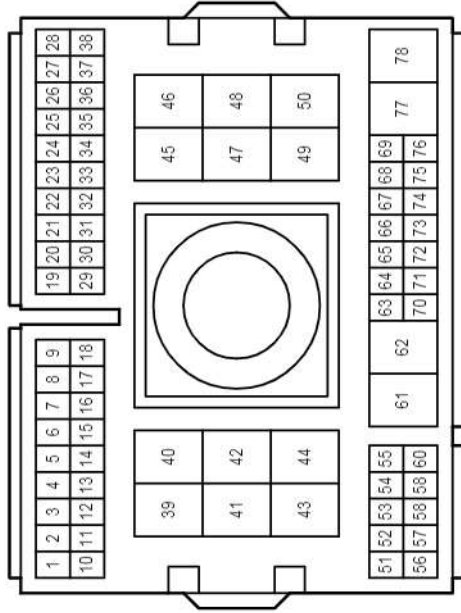

EA2  
Gray


White

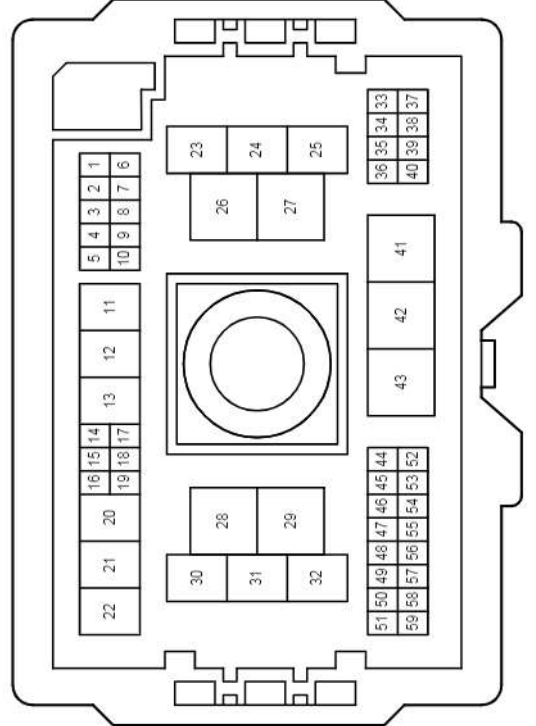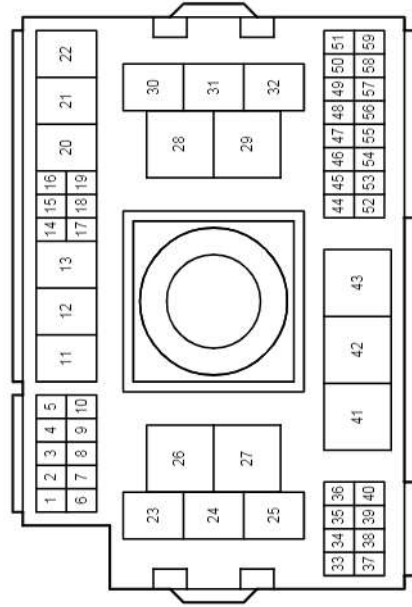

EA4  
White


Wire and Wire in Instrument Panel <RHD>

EE1  
White

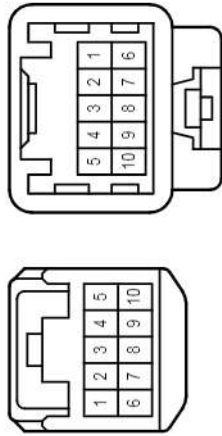


EK1

Blue


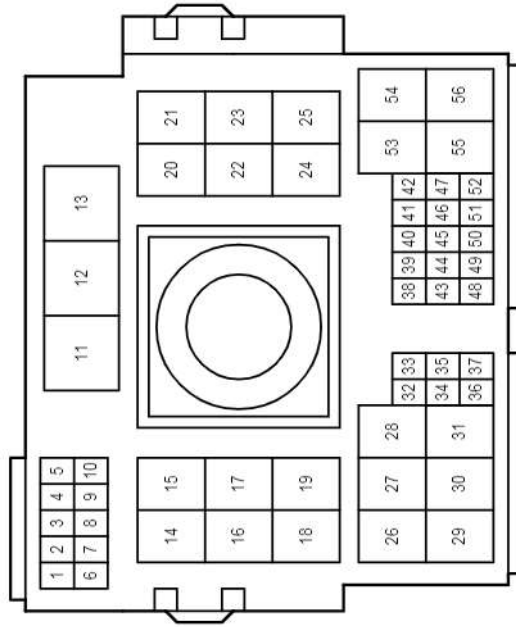


White

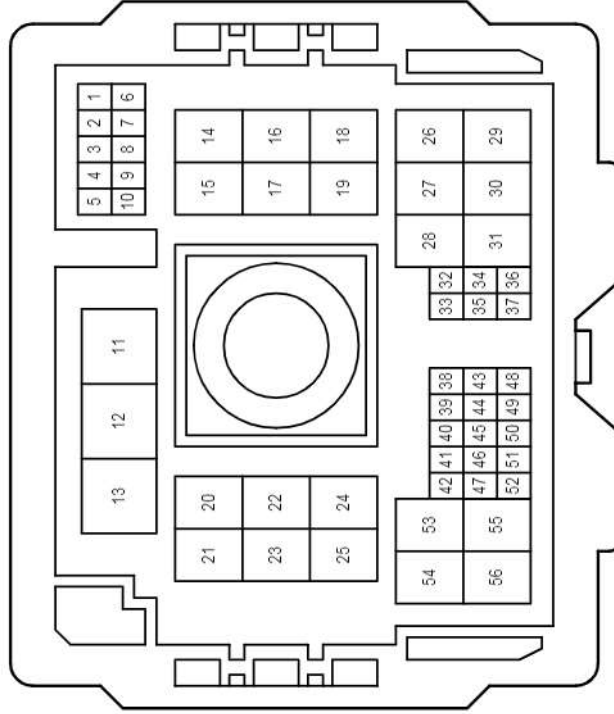


EK2

White

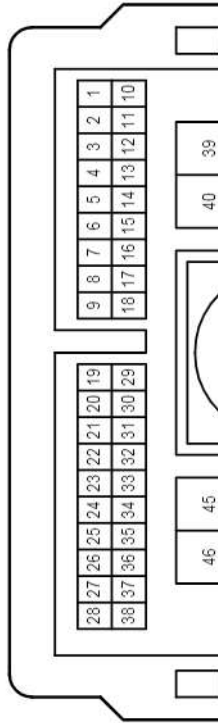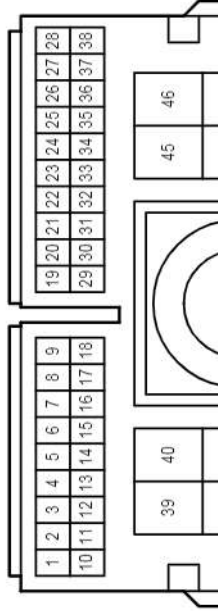


cardiagn.com

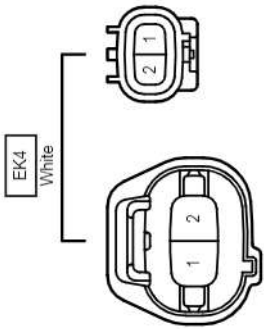




Wire and Wire in Instrument Panel <RHD>

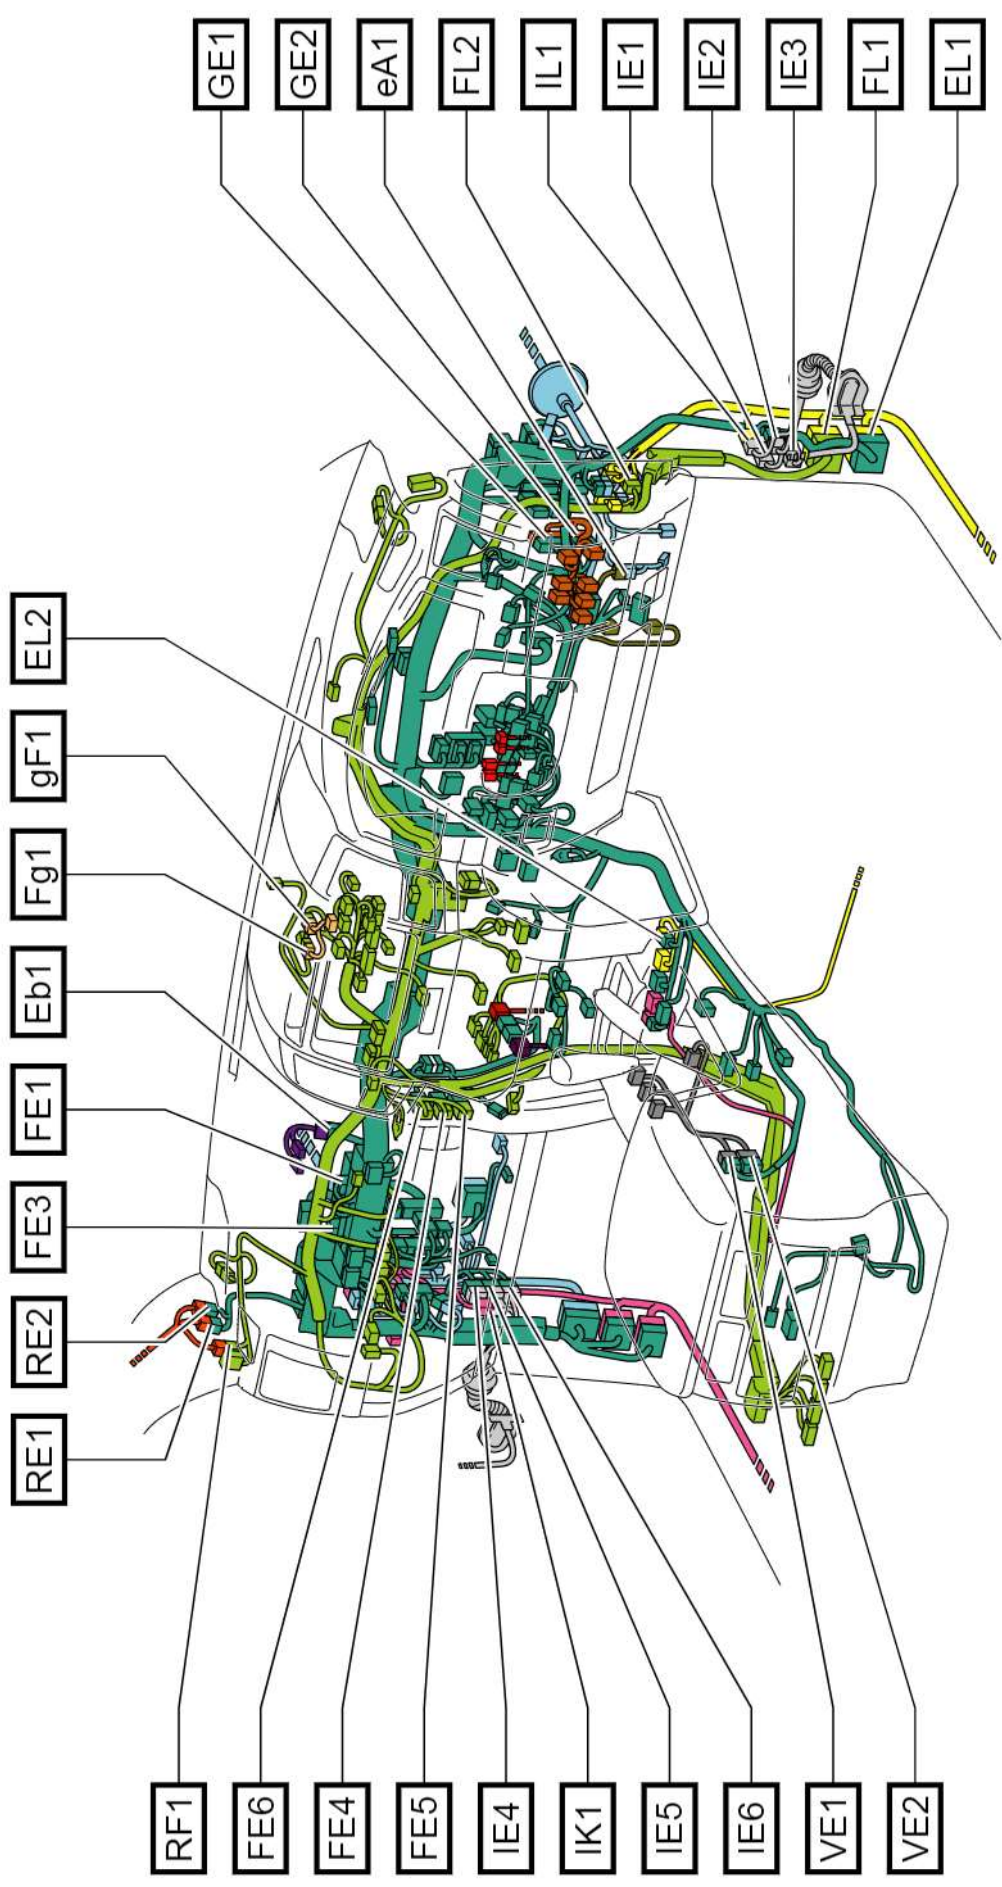


Wire and Wire in Instrument Panel <RHD>

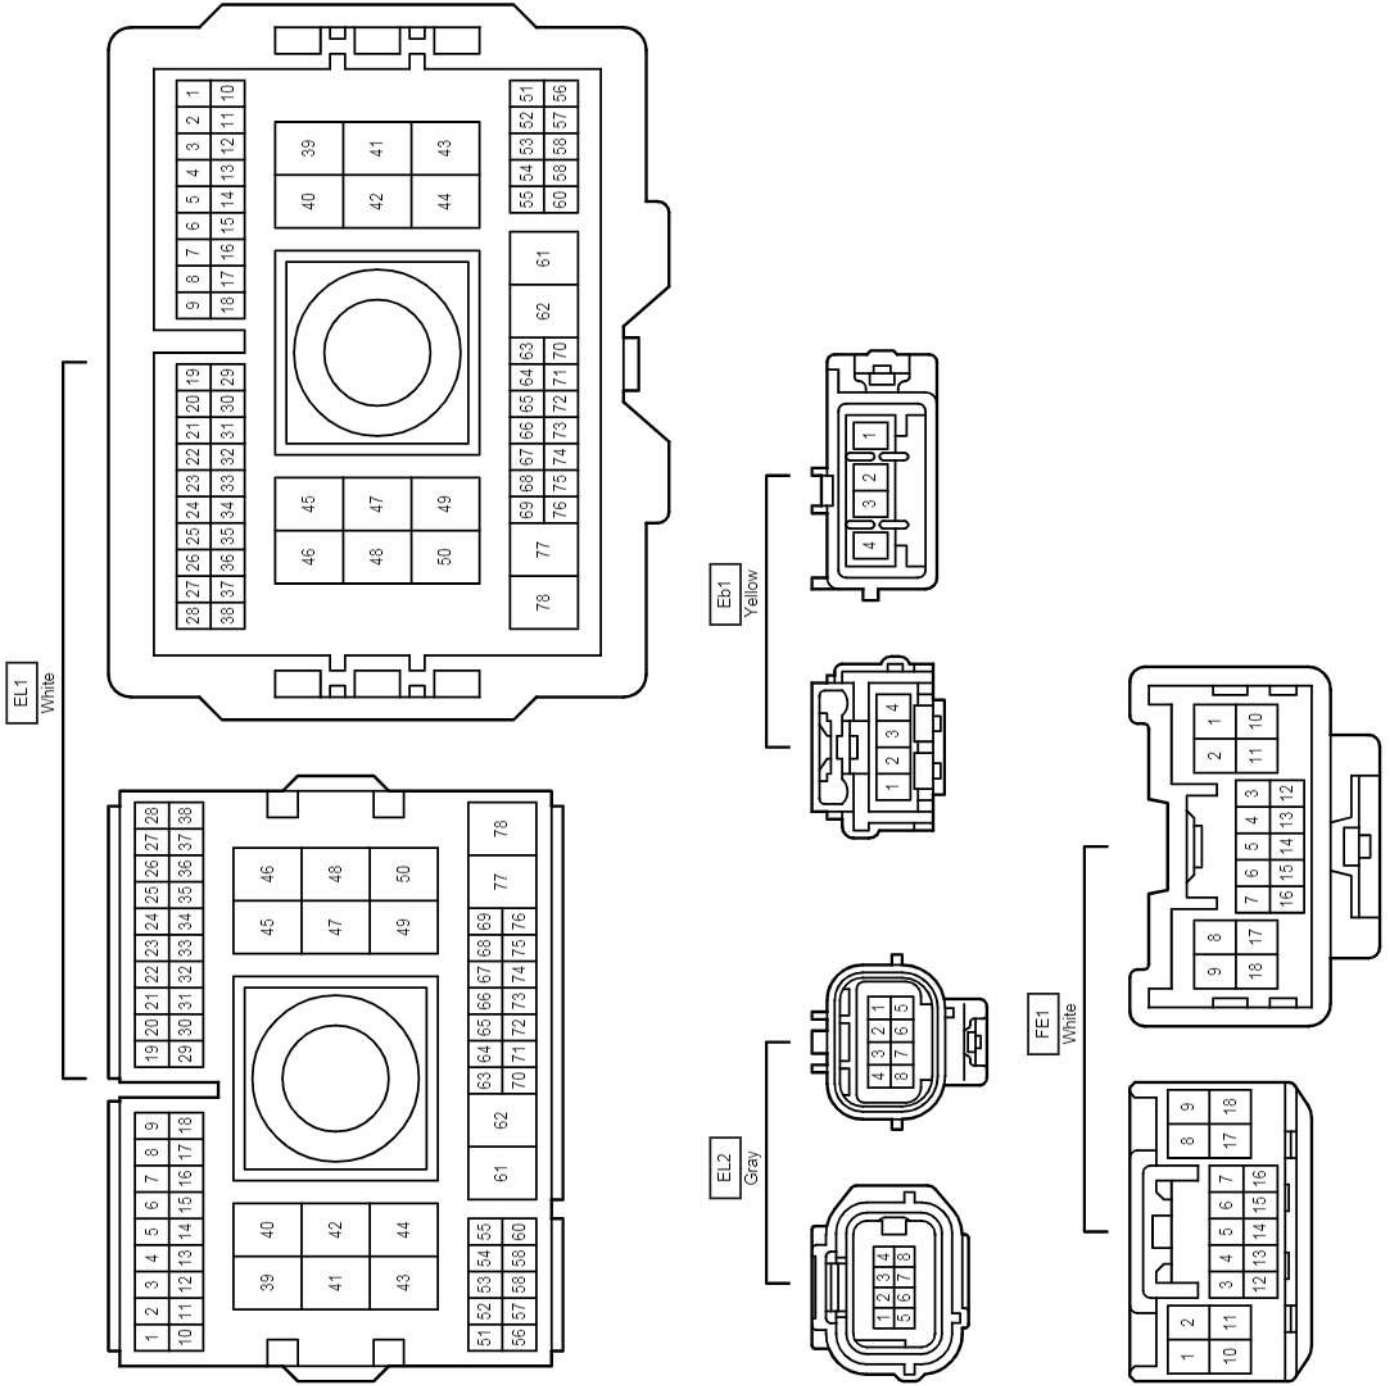


Wire and Wire in Instrument Panel <RHD>


FE4  
White

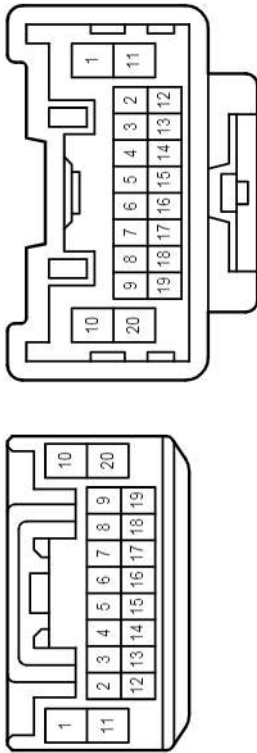

FE5  
White

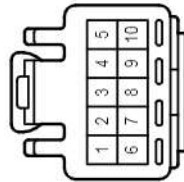


FE6  
White

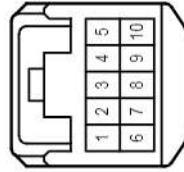


FL1

Blue



White

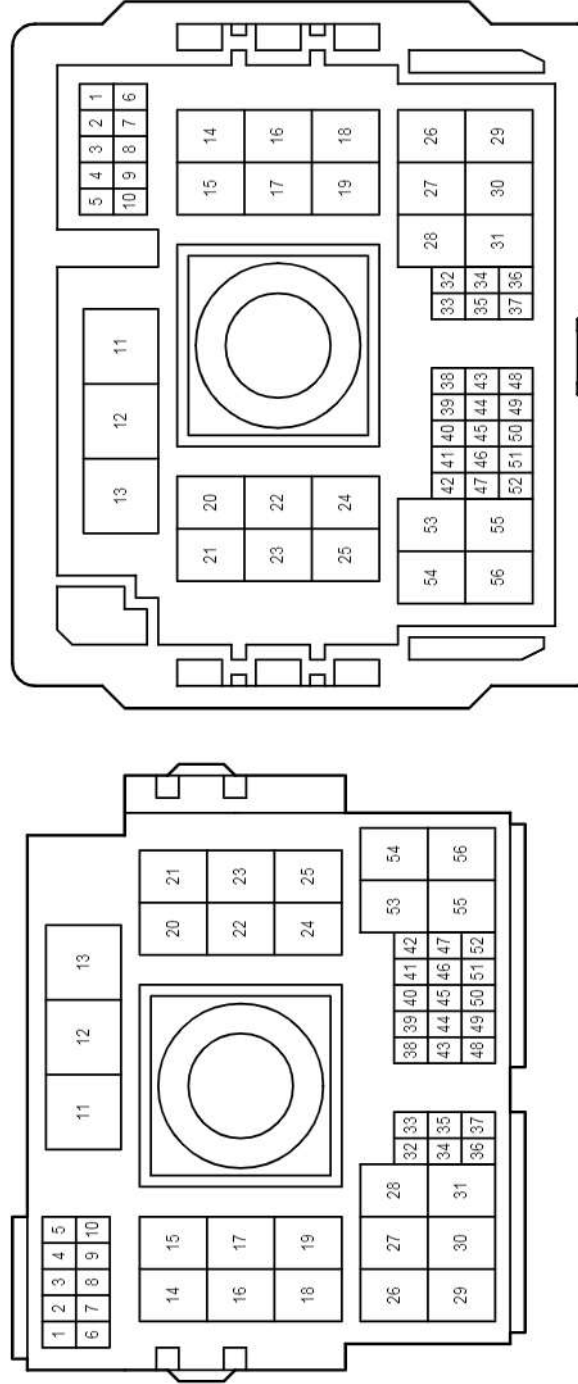


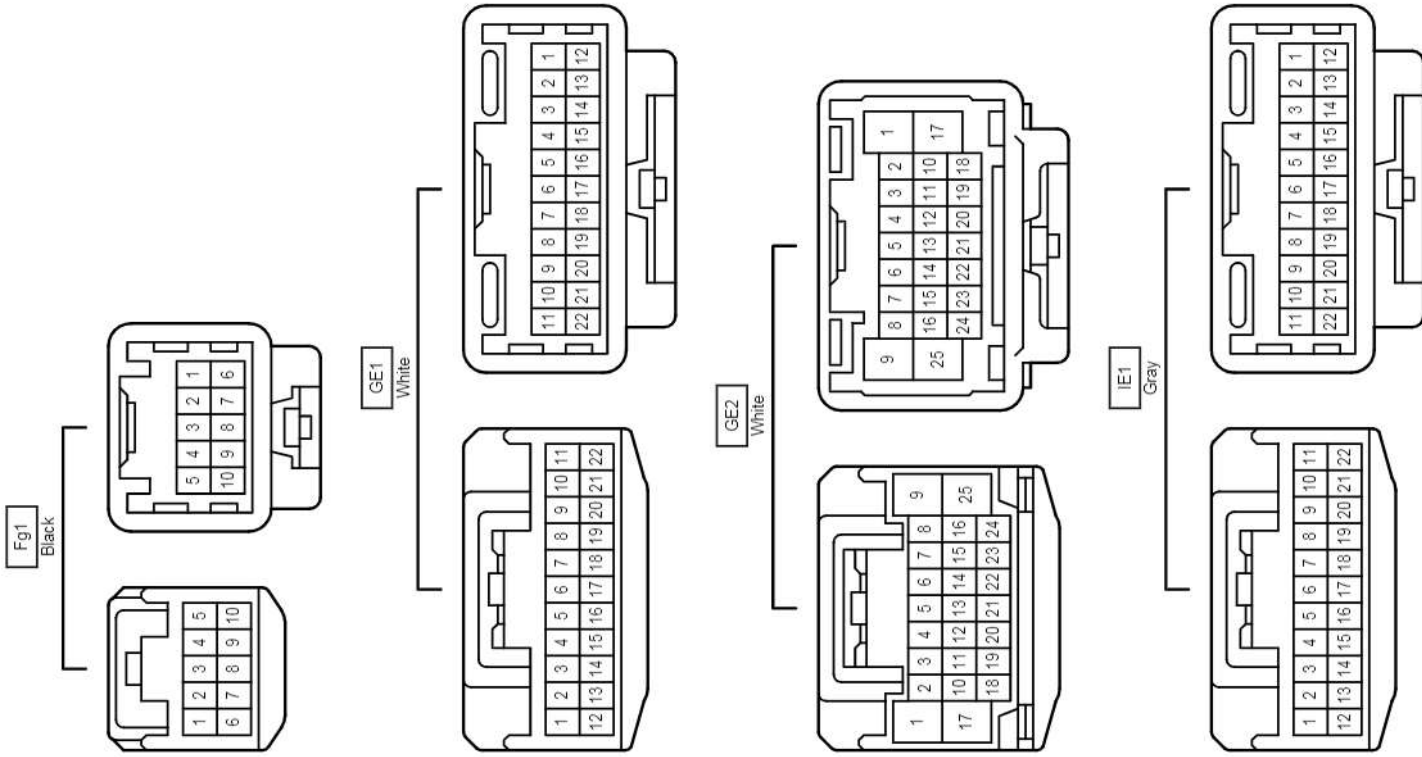


Wire and Wire in Instrument Panel <RHD>



IE3  
White

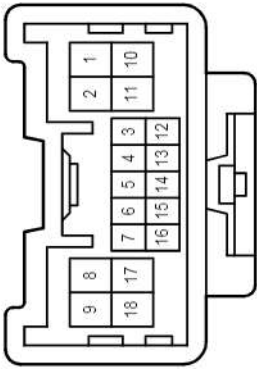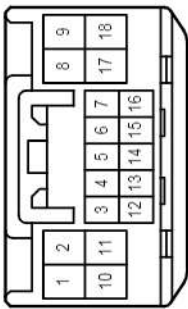



IE4  
Gray

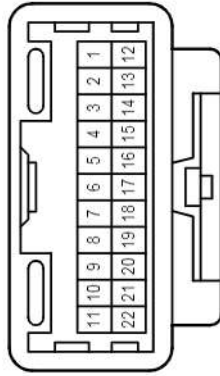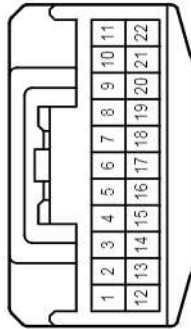



IE5  
Blue

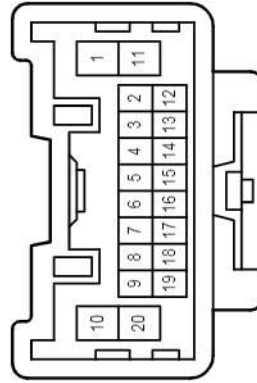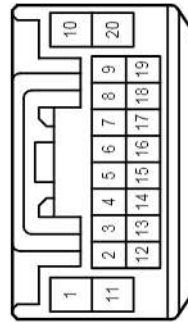





IE6  
White

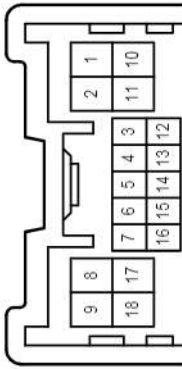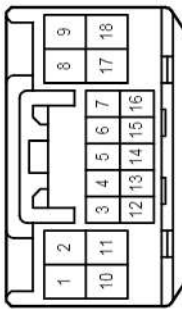


IK1  
Yellow

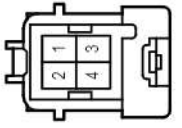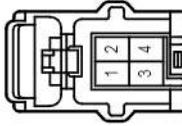

Wire and Wire in Instrument Panel <RHD>

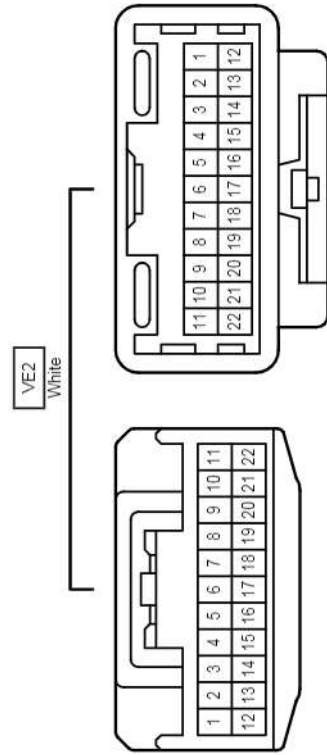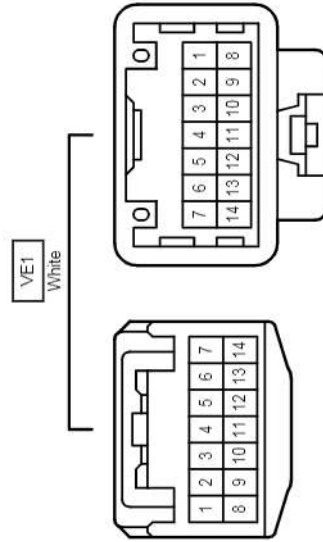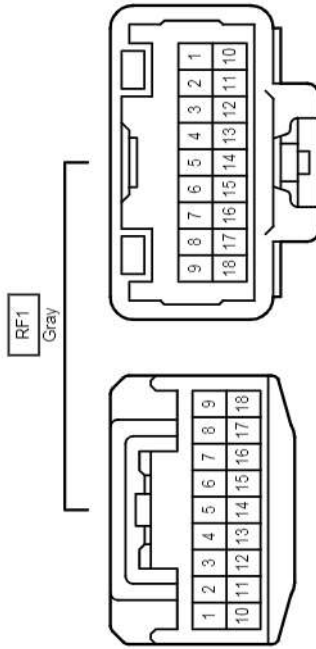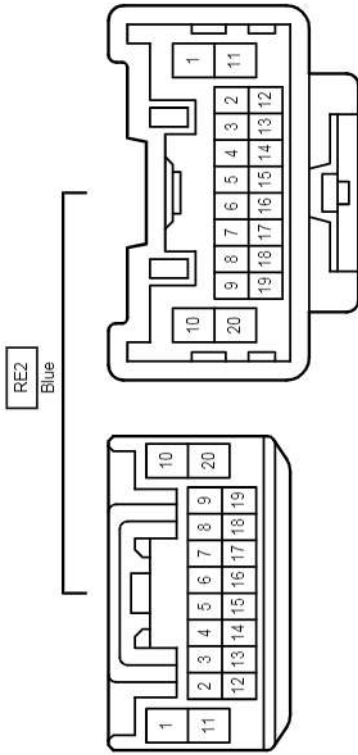

Position of Parts in Seat <LHD Rear Seat>

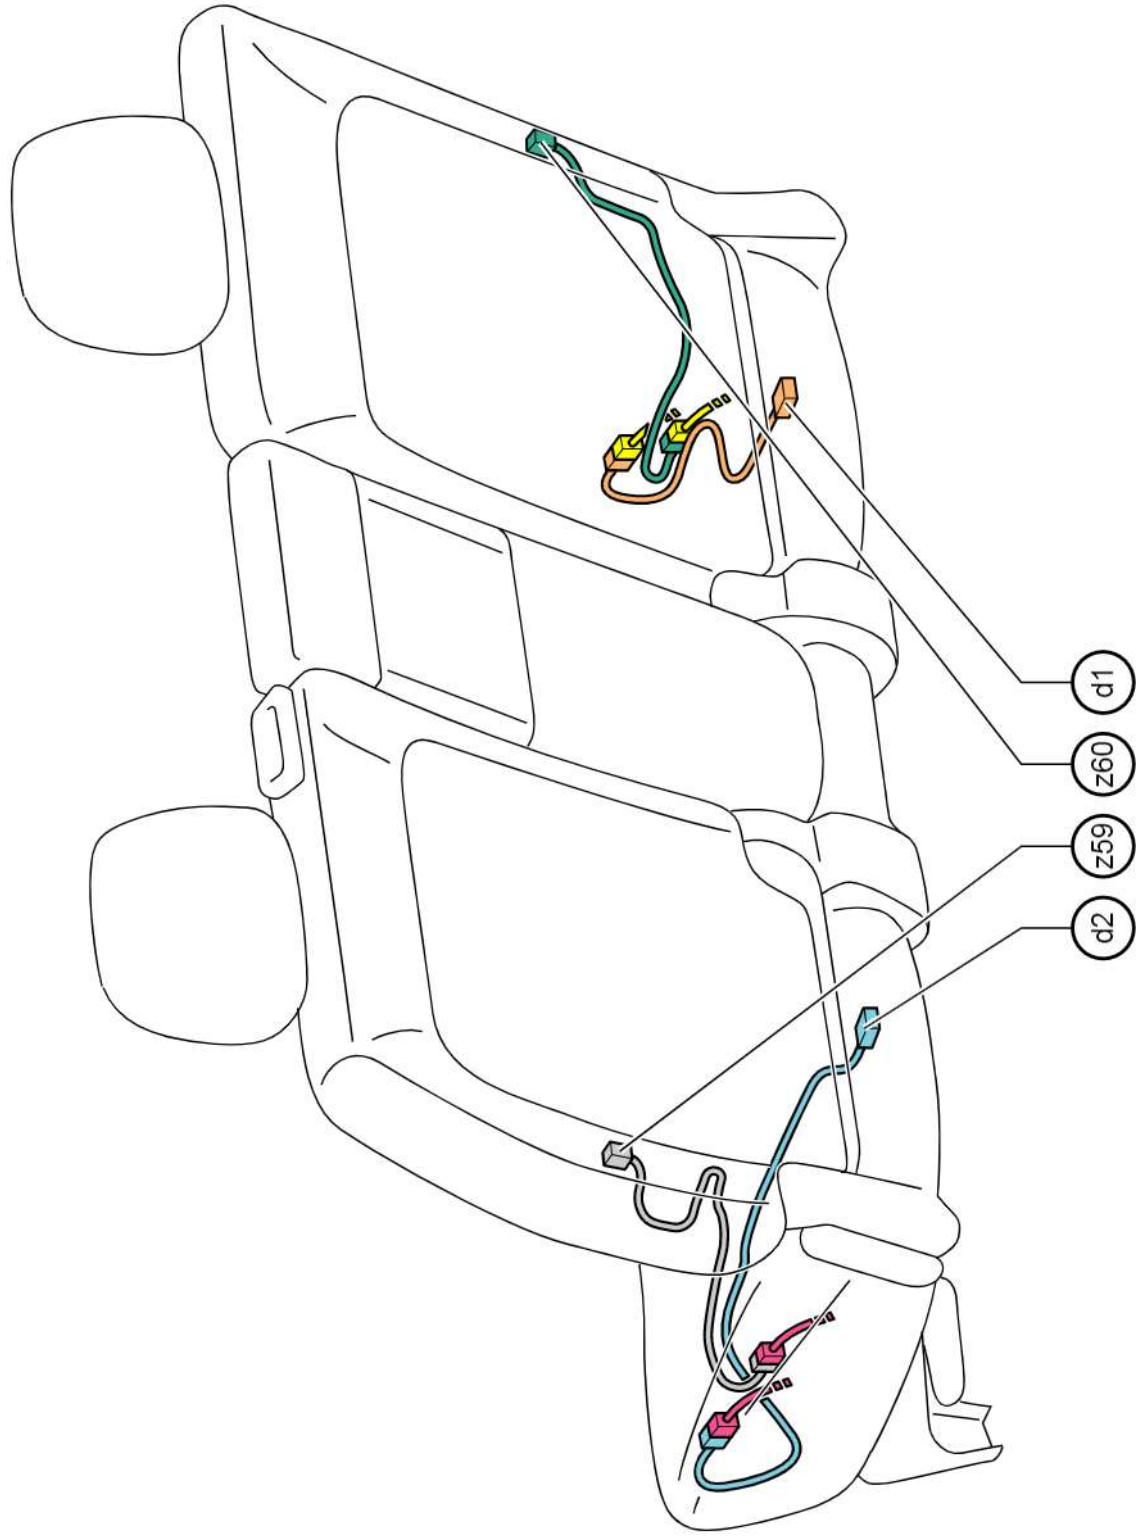

Position of Parts in Seat <LHD Rear Seat>

 
 


---


d 1 Rear Seat Heater RH  
d 2 Rear Seat Heater LH

z 59 Rear Side Airbag Squib Circuit LH  
z 60 Rear Side Airbag Squib Circuit RH




Position of Parts in Seat <LHD Rear Seat>

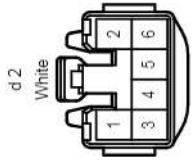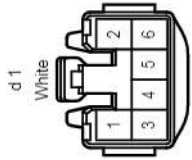


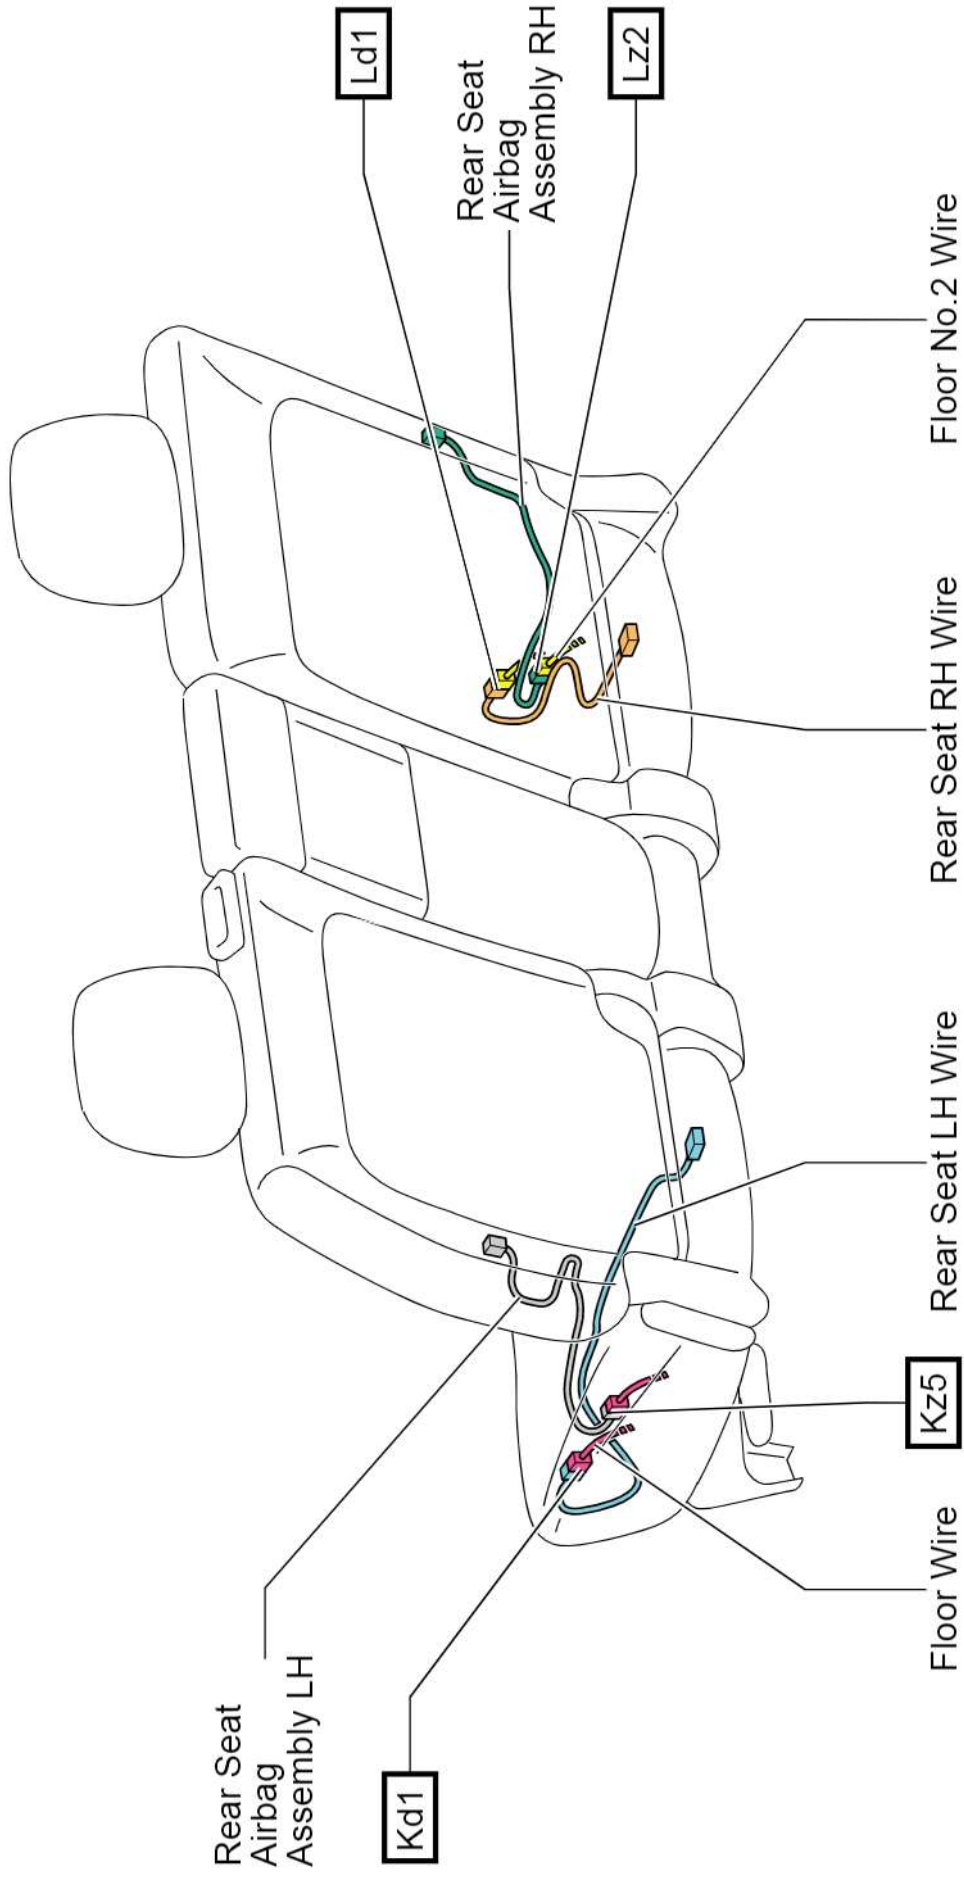

Wire and Wire in Seat <LHD Rear Seat>

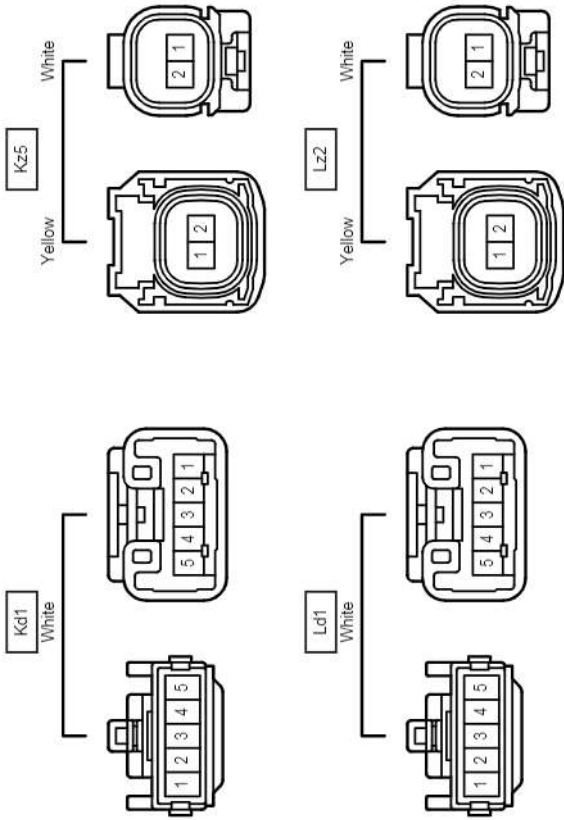

Position of Parts in Seat <RHD Rear Seat>

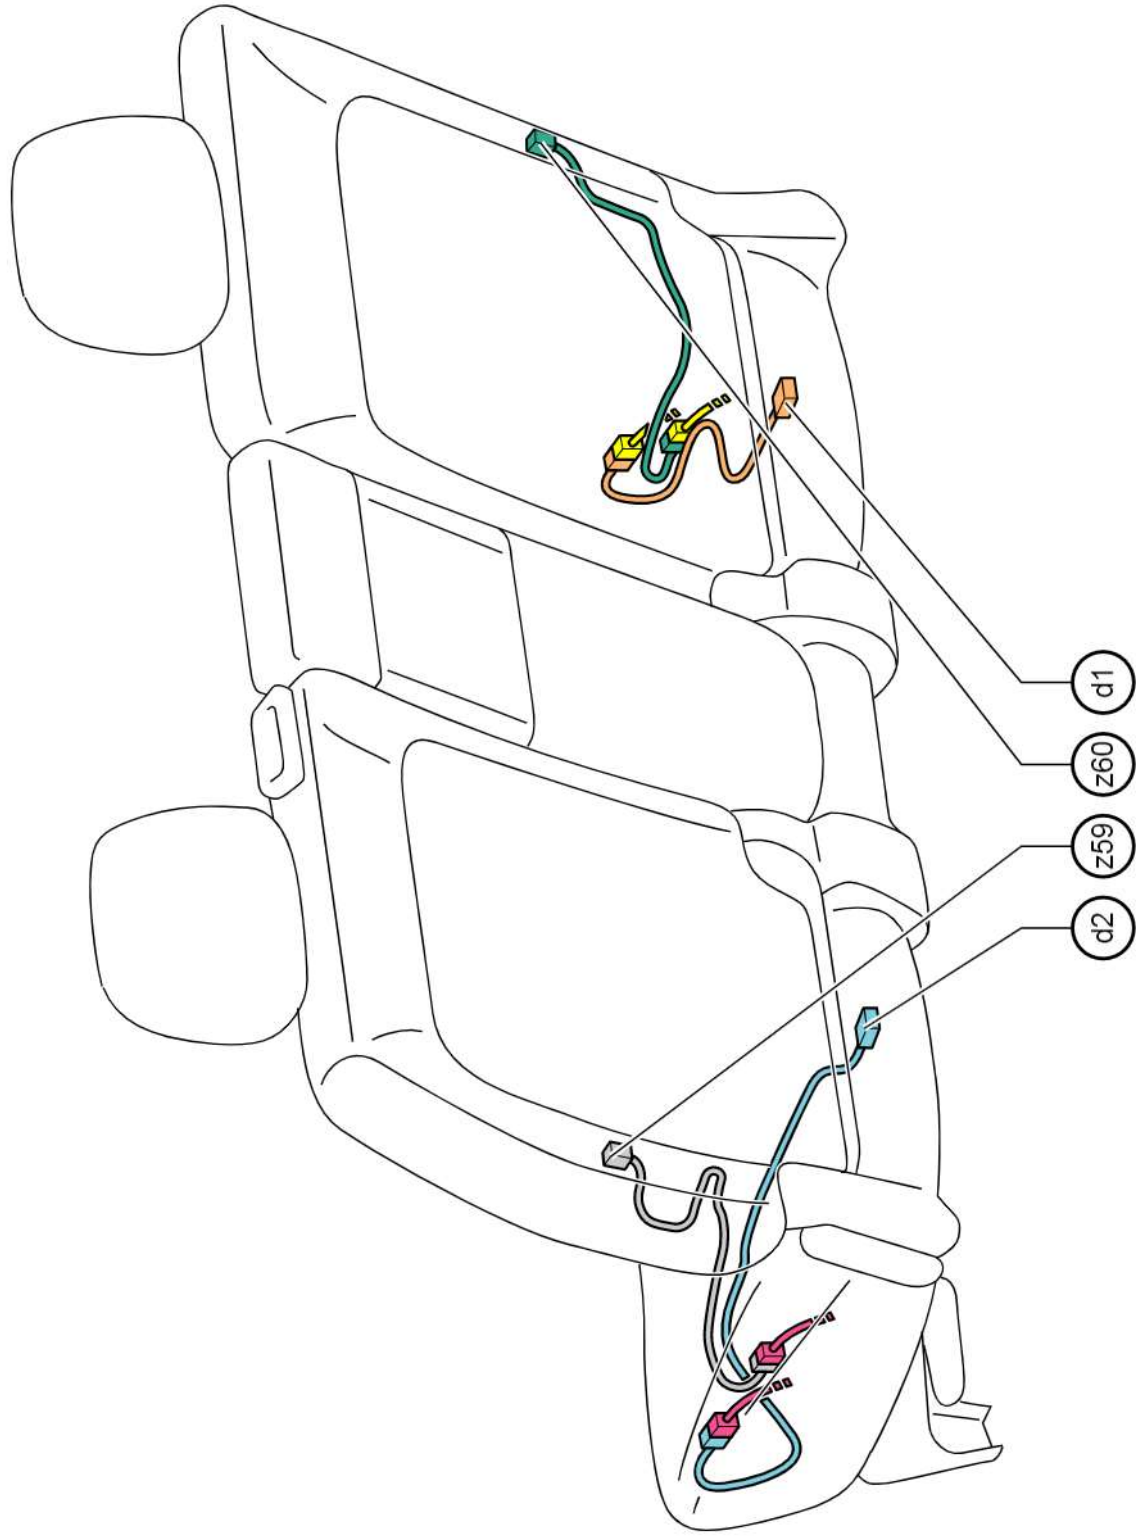

Position of Parts in Seat <RHD Rear Seat>

---


d 1 Rear Seat Heater RH  
d 2 Rear Seat Heater LH

z 59 Rear Side Airbag Squib Circuit LH  
z 60 Rear Side Airbag Squib Circuit RH


Position of Parts in Seat <RHD Rear Seat>

---


d 1  
White

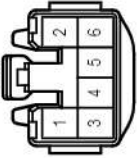


d 2  
White

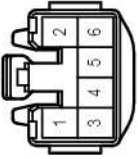


z 59  
White

 

z 60  
White

 

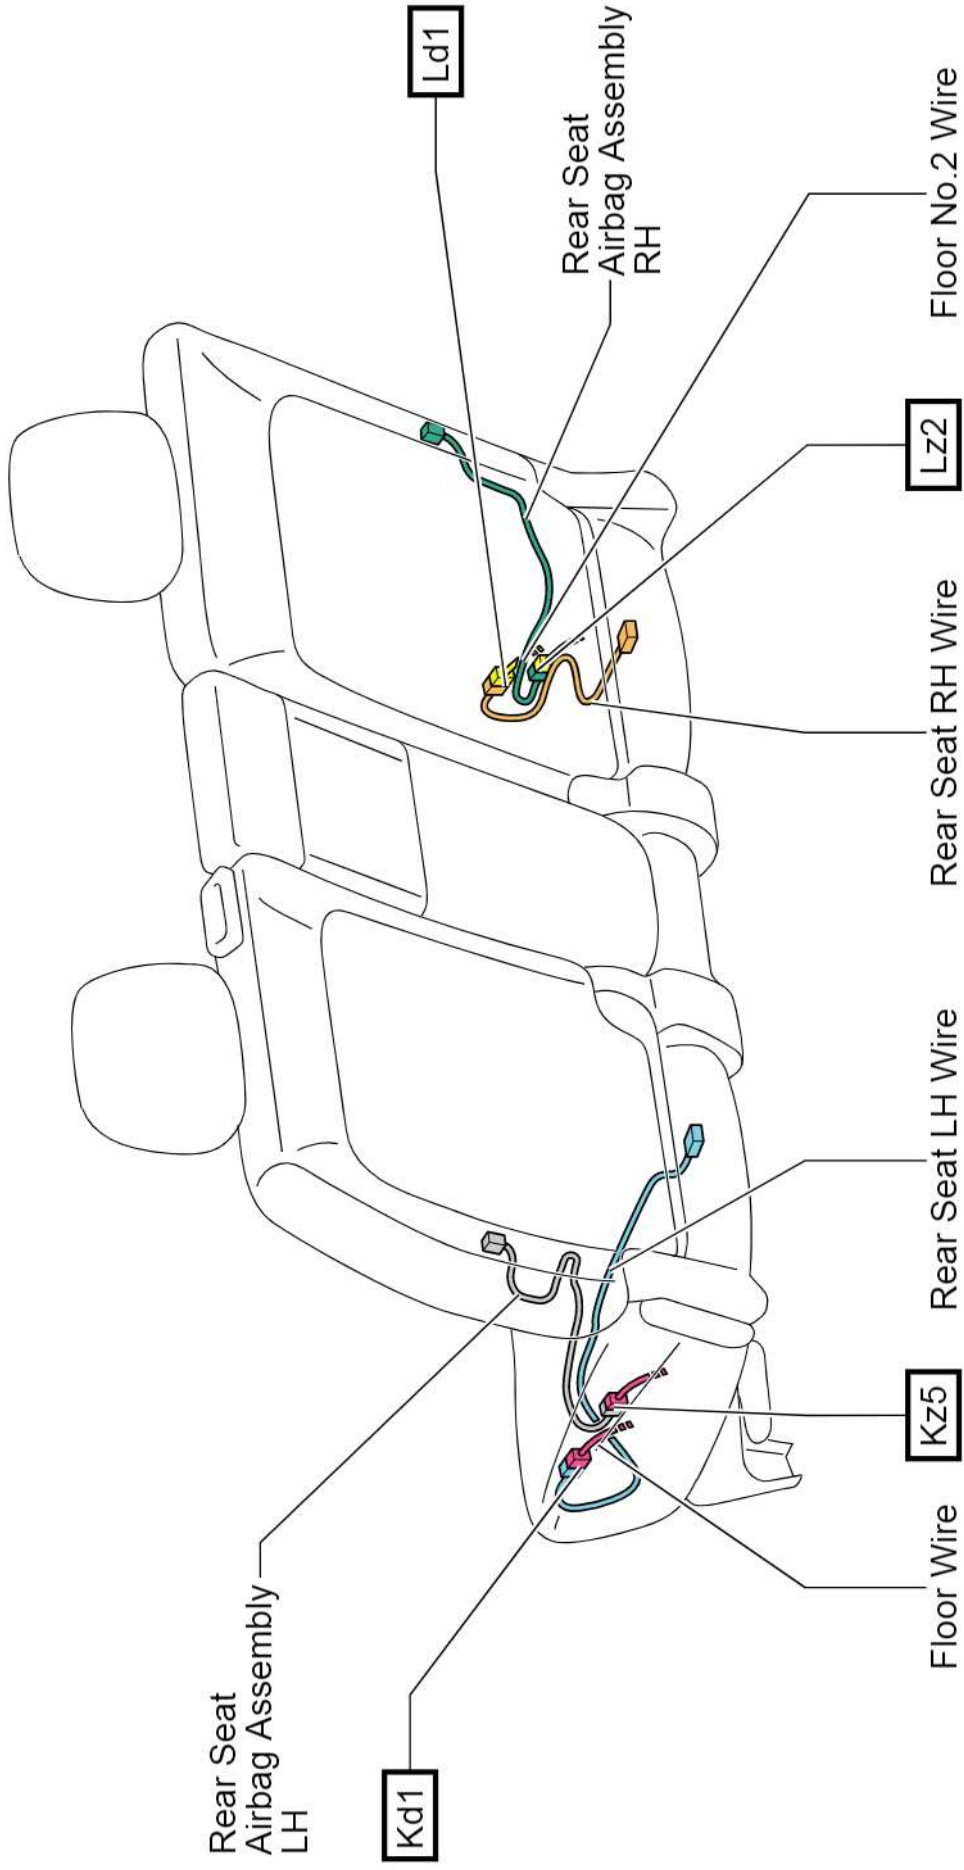

Wire and Wire in Seat <RHD Rear Seat>

