

INSTRUCTION MANUAL

Thank you for purchasing this new product. Please read this instruction manual carefully before placing your HMC-2 in service.

INSTALLATION

Set the volume control on the transceiver to minimum before connecting the headset.

1. Insert the headset plug into the MIC/SP jack on the transceiver.
2. Put the headset on and adjust the band so that the headset sits comfortably on your head. Insert the earphone into your ear.
3. Adjust the volume on the transceiver for a comfortable listening level.
4. Adjust the microphone boom so that the microphone is approximately 1 ~ 3 cm (0.4 ~ 1.2 in.) from your mouth.
5. Attach the VOX unit to your pocket, etc., using the attached hook.

VOX OPERATION

1. Place the VOX/PTT switch on the VOX unit to the VOX position.
2. Adjust the sensitivity control on the VOX unit to the desired level. When the ambient noise level is high, or conditions are windy, you can reduce the sensitivity by turning the control counter-clockwise. In quiet locations you can increase the sensitivity by turning the control clockwise. The VOX delay is approximately 1 second.

PTT SWITCH OPERATION


1. Place the VOX/PTT switch to the PTT position.
2. Press and hold the PTT switch on the VOX unit whenever you wish to transmit.

NOTE:

During PTT switch operation you can adjust the microphone sensitivity with the sensitivity control. To increase sensitivity turn the control clockwise.

CAUTION:

1. Do not increase the volume to a level that may cause discomfort.
2. The volume level of the transceiver speaker and headphone are not the same. Be sure to decrease the volume level before putting on the headset.
3. The PTT switch on both the transceiver and the HMC-2 will function regardless of the VOX/PTT switch setting on the HMC-2.

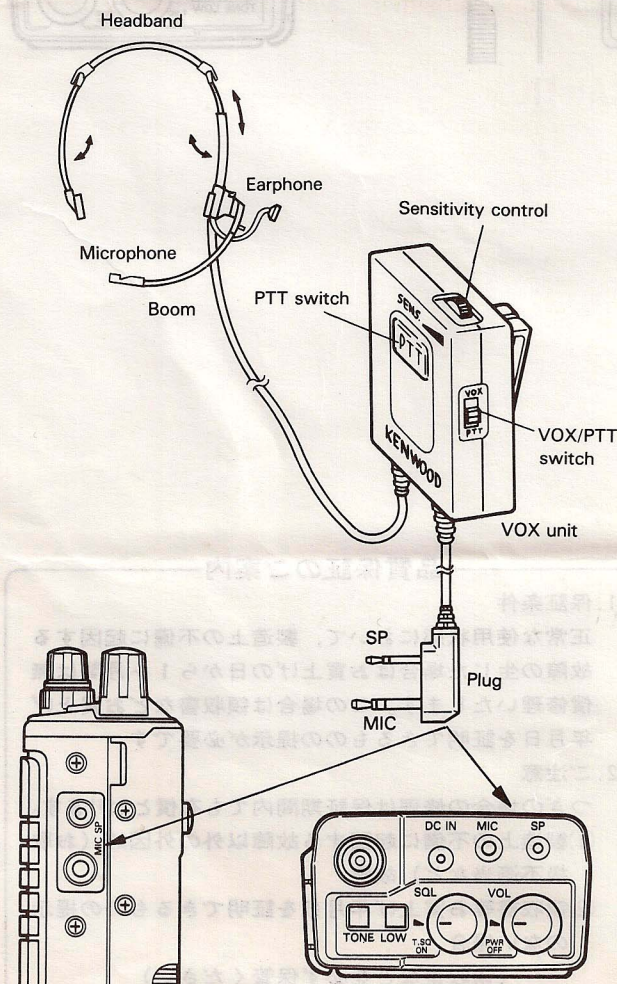

取扱説明

お買いあげいただきましてありがとうございます。
ご使用前にこの取扱説明書をよくお読みのうえ、正しくお
使ください。

装 着

1. トランシーバーの受信音量を最小にします。
2. トランシーバーのMIC, SP端子に、ヘッドセットのプ
ラグを差しこみます。
3. ヘッドバンドを開閉してヘッドホンを左、または右
耳の最適位置に装着します。
4. トランシーバーの受信音量を希望の音量にします。
5. マイクロホンのフレキシブルパイプ部を調整して、口
先から1~3cmのところマイクロホンをセットします。
6. VOXユニットをクリップで、ポケット等に固定します。

VOX運用

1. VOXユニットのVOX/PTT切換えスイッチをVOX位
置にします。
2. VOXユニットの感度調整つまみを最適位置に合わせま
す。周囲の雑音が多い場所、または風が強い時は左側
に、静かな所では右側にまわしてください。
3. マイクロホンに向かって話してください。トランシーバ
ーは自動的に送信状態になり、話をやめると受信状態
に戻ります。

ご注意：

本体の電源を入れた時、または切換スイッチをVOXに
した時から、VOXが動作するまで約3秒かかります。

このように、トランシーバーのPTTスイッチを操作せずに、
音声信号で、送信・受信を自動的に切り換えます。
送信の立ち上り時間および、相手局がスケルチを使用して
いる場合はスケルチの開く時間によって一語程度相手に通
じない状態になります。これを避けるために、「了解」等の
言葉で、まずVOX回路を動作させてから交信に入る運用方
法をおすすめします。本機のVOX動作保持時間は約1秒です。

PTTスイッチによる運用


VOXユニットの、VOX/PTT切換えスイッチをPTT位置
にします。

これによりVOXユニットのPTTスイッチを押している間
だけ送信します。

PTT運用時には、感度調整つまみで変調感度を調整できます。
右側に回すと変調感度が高くなります。

ご注意：

1. 耳の健康のため音量はあまり大きくしないでお使いい
ください。
2. スピーカーとヘッドホンでは能率に差があります。
ヘッドホンを装着する前には必ず音量をしぼってか
ら耳につけてください。
3. VOX/PTT切換えスイッチがVOX位置にセットされて
いる場合でも、PTTスイッチを押すと送信状態になり
ます。

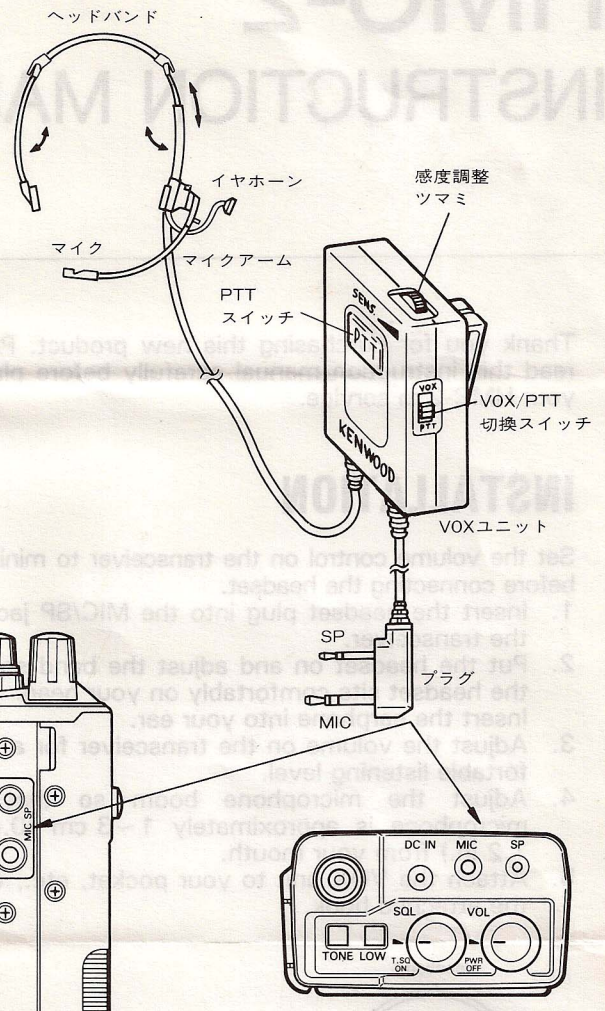

品質保証のご案内

1. 保証条件

正常な使用状態において、製造上の不備に起因する
故障の生じた場合はお買上げの日から1ヶ月間は無
償修理いたします。この場合は領収書などお買上げ
年月日を証明できるものの提示が必要です。

2. ご注意

つぎの場合の修理は保証期間内でも有償となります。

- (1) 製造上の不備に起因する故障以外の外因的（お取
扱不適当など）故障
- (2) 領収書等お買上げ年月日を証明できるものの提示
のない場合

（領収書などを必ず保管ください）