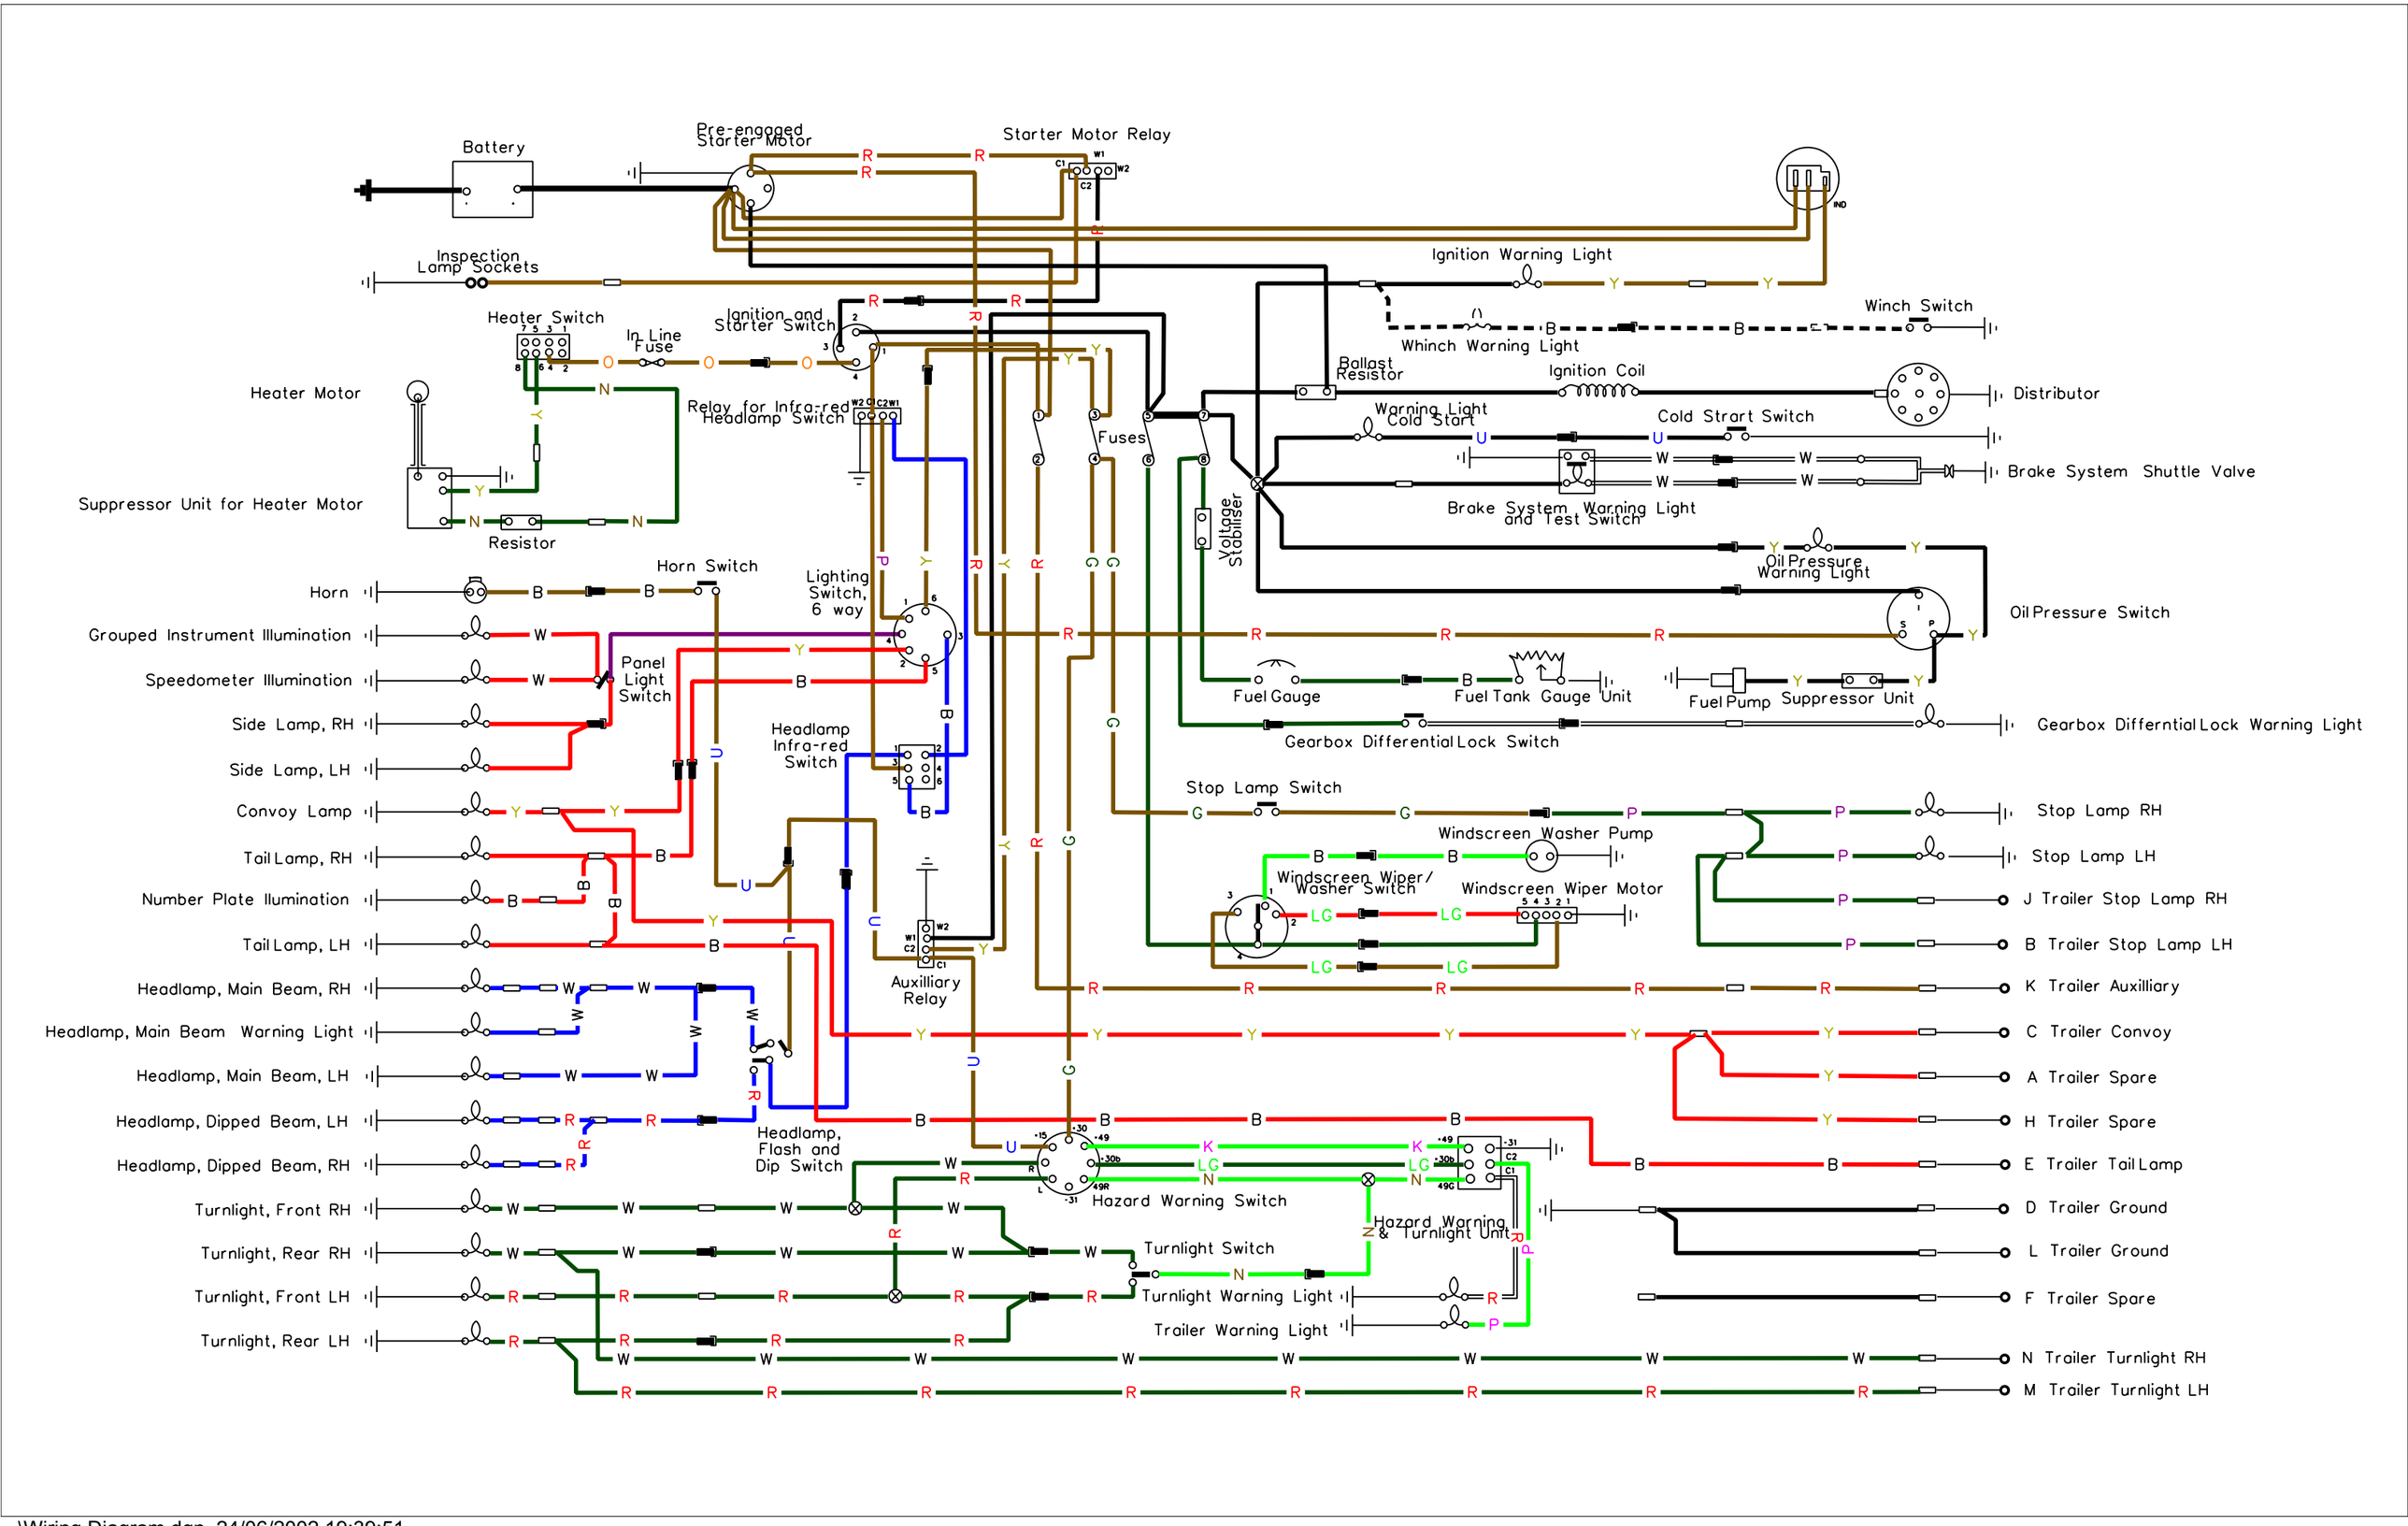
Battery
Pre-engaged Starter Motor
Starter Motor Relay
Inspection Lamp Sockets
Ignition Warning Light
Winch Switch
Whinch Warning Light
Heater Switch
In Line Fuse
Ignition and Starter Switch
Ballast Resistor
Ignition Coil
Distributor
Heater Motor
Relay for Infra-red Headlamp Switch
Fuses
Warning Light Cold Start
Cold Strart Switch
Brake System Shuttle Valve
Suppressor Unit for Heater Motor
Resistor
Brake System Warning Light and Test Switch
Voltage Stabiliser
Oil Pressure Warning Light
Horn
Horn Switch
Lighting Switch, 6 way
Oil Pressure Switch
Grouped Instrument Illumination
Speedometer Illumination
Panel Light Switch
Fuel Gauge
Fuel Tank Gauge Unit
Fuel Pump
Suppressor Unit
Side Lamp, RH
Side Lamp, LH
Headlamp Infra-red Switch
Gearbox Differential Lock Warning Light
Gearbox Differential Lock Switch
Convoy Lamp
Stop Lamp Switch
Stop Lamp RH
Tail Lamp, RH
Windscreen Washer Pump
Stop Lamp LH
Number Plate Illumination
Windscreen Wiper/ Washer Switch
Windscreen Wiper Motor
J Trailer Stop Lamp RH
Tail Lamp, LH
B Trailer Stop Lamp LH
Headlamp, Main Beam, RH
Auxilliary Relay
K Trailer Auxilliary
Headlamp, Main Beam Warning Light
C Trailer Convoy
Headlamp, Main Beam, LH
A Trailer Spare
Headlamp, Dipped Beam, LH
H Trailer Spare
Headlamp, Dipped Beam, RH
Headlamp, Flash and Dip Switch
E Trailer Tail Lamp
Hazard Warning Switch
Turnlight, Front RH
D Trailer Ground
Turnlight, Rear RH
Turnlight Switch
Hazard Warning & Turnlight Unit
L Trailer Ground
Turnlight, Front LH
Turnlight Warning Light
F Trailer Spare
Trailer Warning Light
Turnlight, Rear LH
N Trailer Turnlight RH
M Trailer Turnlight LH