


EA26-RVT

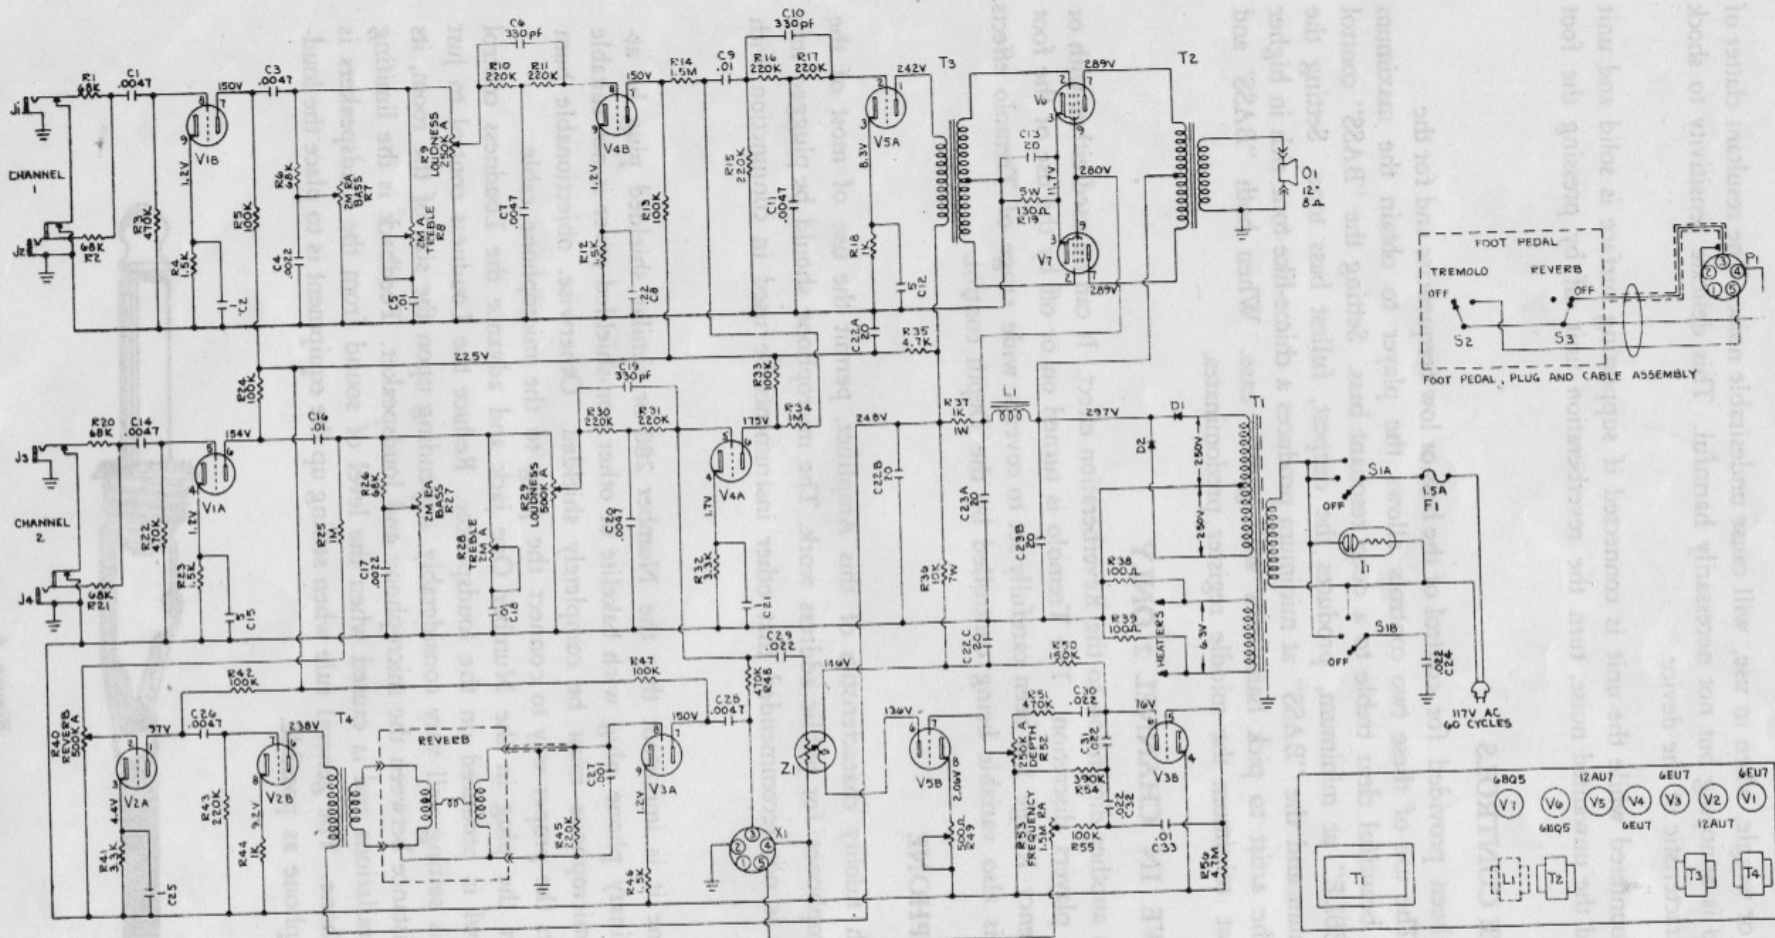

- T1
- T2
- T3
- T4
- L1
- S1A, B
- S2, S3
- I1
- X1
- P1
- D1, D2

- TF-105T-1
- TF-504-U
- TF-100L-1
- TF-E6L-1
- TF-1003 C
- SW-899-1
- SW-824-03
- PL-35R
- CN-78PCO-5
- CN-91MPM-5L
- DI-4-04

- Power Transformer
- Output Transformer
- PP Driver Transformer
- Reverb Transformer
- Filter Choke
- Switch - SPST Rotary
- Switches - SPST
- Pilot Light (Neon) w/clip
- Foot Pedal Socket
- Foot Pedal Plug
- Diode - 800 PIV

- R9, R52
- R6, R26
- R29, R10
- R53
- R7, R27
- R10

- CBA-4-008 Control - 250K, Audio (Loudness & Depth)
- CBA-111-3702-1 Control - 2 meg, Audio (Treble)
- CBA-4-007 Control - 500K, Audio (Loudness & Reverb)
- CBA-111-3711-1 Control - 1.5 meg, RA (Frequency)
- CBA-112-222-1 Control - 2 meg, RA (Bass)
- CR-23351 Control - 500 ohm, WW

