

**EINBAUANLEITUNG
MOUNTING INSTRUCTIONS****OPTION 20.812.893.00
BANDSCHERE UND BANDMARKIERER****NACHRÜST-KIT**

enthaltend:		
1 Bandschere kompl. mit Befestigungsschraube	1.020.888.82	
1 Bandmarkierer	1.810.402.81	
1 Einbauanleitung	10.27.0572	

Anwendung:

Für Tonbandgeräte STUDER A812.

Benötigtes Werkzeug

1 Innensechskant-Schraubendreher	Nr. 2.5	10.258.003.09
1 Innensechskant-Schraubendreher	Nr. 3	10.258.003.10
1 Kreuzschlitz-Schraubendreher	Nr. 0	10.258.004.03

BANDSCHERE**EINBAU****Vorbereitungen**

- Kopfträger ausbauen:
Andruckrolle entfernen (Kappe abschrauben), Kopfträgerabdeckung [8] entfernen (4 IS-Schrauben), Kopfträger [7] ausbauen (3 IS-Schrauben).
- Kreuzschlitzschraube [1] herausdrehen und Blindstopfen [2] aus Kopfabdeckung [3] heben.

Einbau

- Bandschere [5] (Pass-Stift auf vorgesehene Bohrung [6] ausgerichtet) auf Kopfträger [7] aufsetzen, einpressen und festdrehen (IS-Schraube [9]).

VORSICHT

Bandschere nicht verkanten. Sie muss mit ihrer Basisfläche satt am Kopfträgerchassis anliegen.

- Kopfträger [7] und Kopfträgerabdeckung [8] wieder einbauen, Andruckrolle einsetzen und Kappe aufschrauben.

Funktionskontrolle

Während der Betätigung der Bandschere darf der Druckknopf [4] nicht an der Kopfabdeckung [3] streifen.

Korrektur durch entsprechendes Ausrichten der Kopfabdeckung [3], resp. der Kopfträgerabdeckung [8] bei gelösten Befestigungsschrauben.

**OPTION 20.812.893.00
TAPE SCISSORS AND TAPE MARKER****MODIFICATION KIT**

consisting of:		
1 Tape scissors compl. with screw	1.020.888.82	
1 Tape marker	1.810.402.81	
1 Instruction Sheet	10.27.0572	

Application

- Suitable for STUDER A812 tape recorders.

Required Tools

1 Allen screwdriver	No. 2.5	10.258.003.09
1 Allen screwdriver	No. 3	10.258.003.10
1 Phillips screwdriver	No. 0	10.258.004.03

TAPE SCISSORS**INSTALLATION****Preparations**

- Removing the headblock:
Unscrew the cap of the pinch roller, and remove both. Take away the headblock cover [8] (unscrew the 4 Allen screws). Then remove the headblock [7] after undoing its 3 Allen screws.
- Unscrew the Phillips screw [1] and remove the plastic cap [2] from the head cover [3].

Installation procedure

- Introduce the pin on the lower side of the tape scissors into the corresponding hole [6] on the headblock [7]. After pressing the scissors assembly [5] down firmly, screw it tight with Allen screw [9].

CAUTION

Make shure that the scissors assembly is seated straight. Its base must rest evenly on the headblock chassis. Do not force it in a tilted position.

- Re-install the headblock [7] and the headblock cover [8], as well as the pinch roller and its cap.

Functional test

When pressing the tape scissors button [4] it must slide down smoothly without any hindrance or rattling during the motion.

If the motion is not smooth, loosen the mounting screws of the head cover [3] and reposition it slightly.

A slight repositioning of the headblock cover [8] may in some cases be required as well.

BANDMARKIERER

EINBAU

- Markierer in vorgesehene Führungsbohrungen [15] in Kopfträgerabdeckung einstecken.

Einstellung

- Abschirmklappe [13] hochschwenken. Magnetband einlegen.
- Ausrichten des Markierers auf Mitte Wiedergabekopf [14] (Kopfspalt): Bei gelöster Innensechskantschraube [12] lässt sich der Markierer in begrenztem Masse in Längsrichtung schieben. Schraube wieder festdrehen.
- Anschlagschraube [11] justieren:
Beim Betätigen des Markierers mit dem linkem Zeigefinger (Pfeilrichtung) bis zum Anschlag muss der Stempel eine möglichst scharf gezeichnete Markierung auf das Band auftragen.

VORSICHT

Unkorrekte Einstellung kann Beschädigung des Wiedergabekopfes zur Folge haben.

TAPE MARKER

INSTALLATION



- Press the tape marker down into the guiding holes [15] of the headblock cover.

Adjustments

- Tilt up the head shield [13] and load the recorder with magnetic tape.
- Fine adjust the marking position in front of the head cap [14]: Loosen the Allen screw [12] and move the marker laterally, to position the ink print exactly in front of the reproduce head gap. Tighten the screw again.
- Setting the marker's adjustable stop screw [11]:
When depressing the marker's short end in the direction of the arrow with the index finger of your left hand, it should produce a very fine yet distinct ink mark on the tape.

CAUTION

Incorrect adjustment of the tape marker may cause damage to the head.

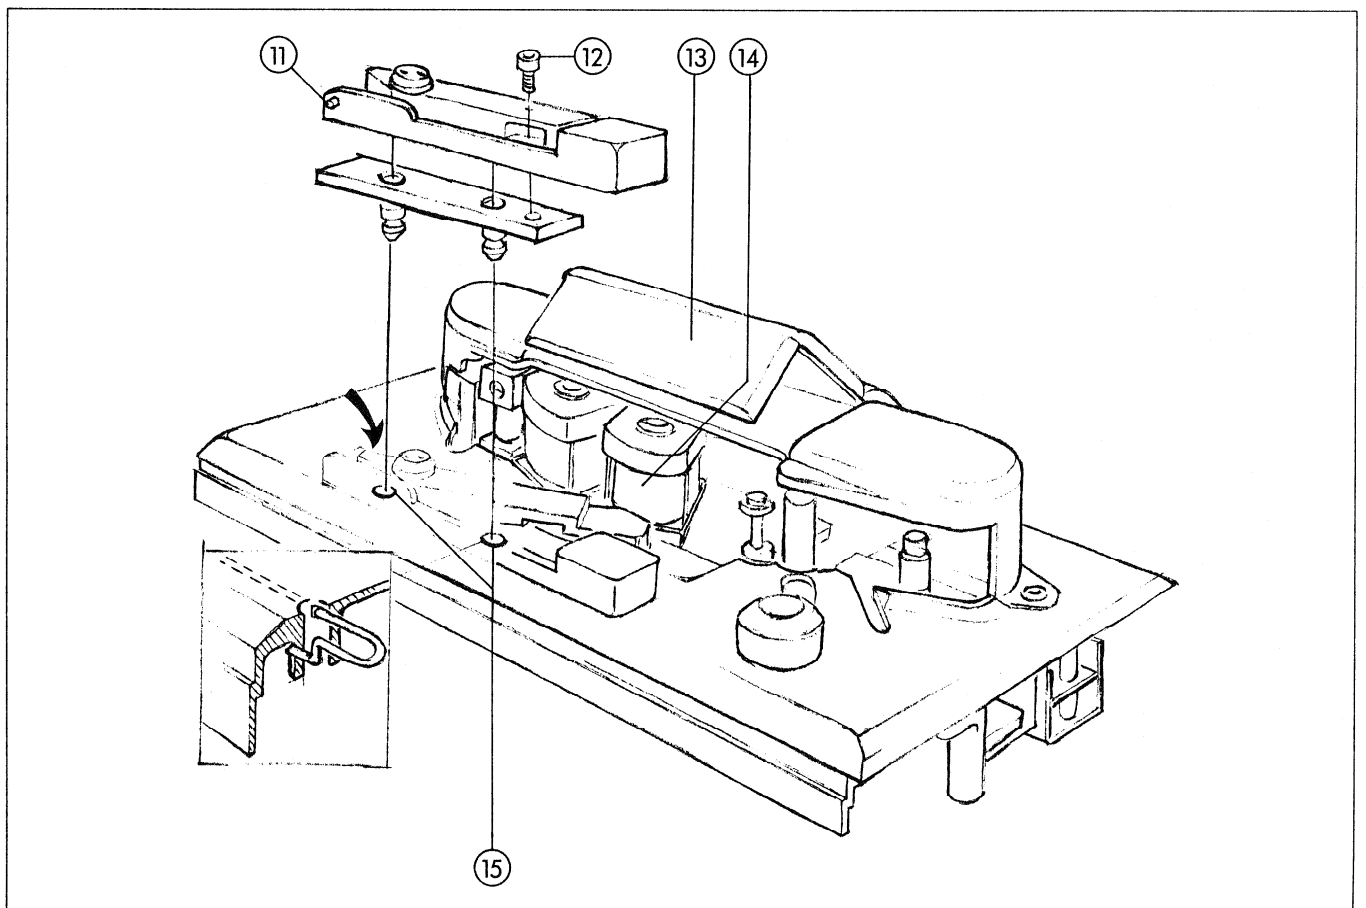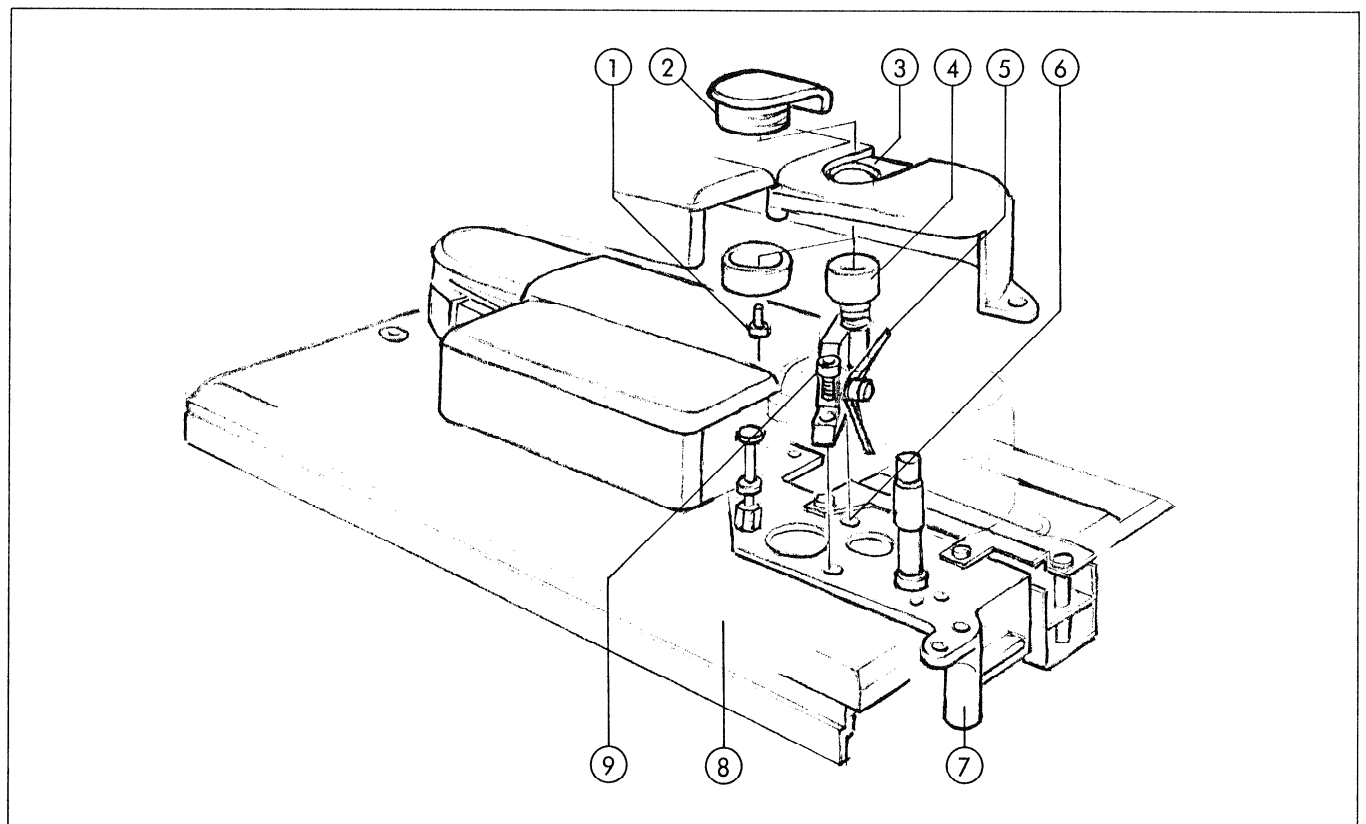

STUDER

Prepared and edited by

STUDER REVUX
TECHNICAL DOCUMENTATION
Althardstrasse 10
CH-8105 Regensdorf-Zürich
Switzerland

We reserve the right to make alterations

Copyright by WILLI STUDER AG
Printed in Switzerland

Order No. 10.27.0572 (Ed. 0687)

STUDER is a registered trade mark of STUDER INTERNATIONAL AG Regensdorf
STUDER ist ein eingetragenes Warenzeichen der STUDER INTERNATIONAL AG Regensdorf