



MFJ VERSA TUNER II



MODEL MFJ-949D INSTRUCTION MANUAL

CAUTION: Read All Instructions Before Operating Equipment

MFJ ENTERPRISES, INC.

P.O. BOX 494, MISSISSIPPI STATE, MS 39762, USA

COPYRIGHT © 1991 MFJ ENTERPRISES, INC.

MFJ-949D VERSA TUNER II INSTRUCTIONS

GENERAL INFORMATION

The MFJ-949D is designed to match virtually any transmitter to almost any antenna, including dipoles, inverted-vees, verticals, mobile whips, beams, random wires, and other antennas fed by coax lines, balanced lines, or a single wire. A 4:1 balun is built-in for connection to balanced lines. An antenna-selector switch provides versatile antenna selection. A 50 ohm dummy load is built-in for easy transmitter tuning. The MFJ-949D will handle up to 300 watts of RF output power from the transmitter from 160 through 10 meters. The MFJ-949D employs a cross-needle meter so forward power, reflected power, and SWR may be read simultaneously.


PEAK READING SWR/WATTMETER

The meter on the MFJ-949D may be used with the tuner in or out of line. To use the meter without the tuner, set the ANTENNA SELECTOR to COAX 1 DIRECT or COAX 2 DIRECT. The MFJ-949D utilizes a cross-needle meter so peak or average FORWARD power, REFLECTED power and SWR may be read simultaneously in two ranges. To read FORWARD power, set the power range switch to HI(300 watts) or LO(30 watts). Next read the power level on the FORWARD SCALE. REFLECTED power is shown at the same time on the REFLECTED POWER SCALE. SWR is read by observing where the two needles cross. No SWR sensitivity adjustment is needed to read SWR. You get a peak holding average reading when you set the METER button to PEAK. Read the power level off of both scales. The HI range is 300 watts FORWARD and 60 watts REFLECTED. The LO range is 30 watts FORWARD and 6 watts REFLECTED. The difference between the HI and LO scales readings is a factor of 10.

The meter lamp can be powered by a 12V DC source, such as the optional MFJ-1312 power supply. Use a 2.5mm plug with the tip of the plug connected to the positive. The METER LAMP ON/OFF switch will activate the meter lamp.

ANTENNA SELECTOR

The ANTENNA SELECTOR switch utilizes six positions. There are COAX 1 and COAX 2 antenna positions for both DIRECT and through the tuner operation, one position for either balanced-line or wire antenna and a position to select the built-in 50 ohm dummy load. The 50 ohm dummy load is rated at 300 watts. Do not continuously key into the dummy load for more than 2 minutes at a time. CAUTION: DO NOT OPERATE THE ANTENNA SELECTOR SWITCH WHILE TRANSMITTING. Never use the MFJ-949D for over 300 watts of RF output power, including the DIRECT or DUMMY LOAD positions.

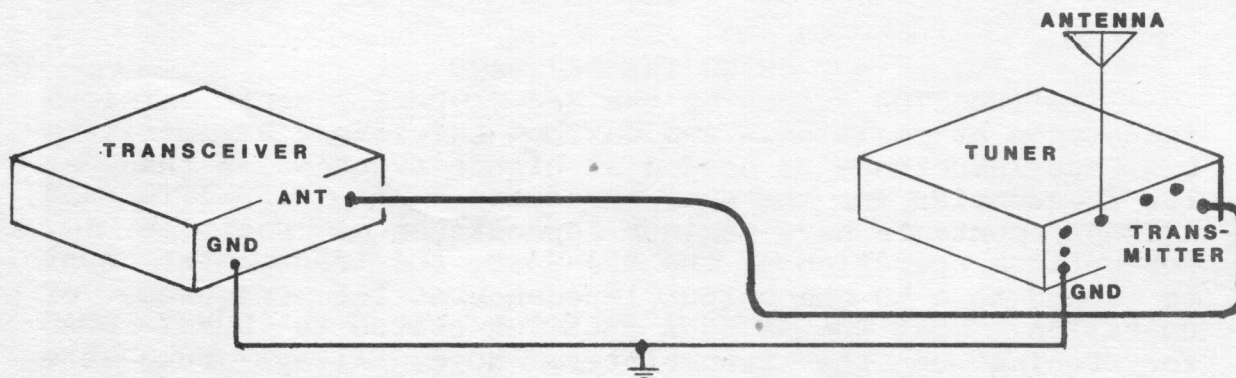

INSTALLATION


1. Locate the tuner in a convenient location at the operating position. NOTE: LOCATE THE TUNER SO THE REAR IS NOT ACCESSIBLE DURING OPERATION. During random wire or balanced line operation, the ceramic feed through insulators will have high RF voltages which can cause serious RF burns if touched when transmitting.
2. Install the MFJ-949D between the transmitter and antenna as shown in the diagram above. A coax cable is connected from the transmitter to the SO-239 coax connector marked TRANSMITTER on the back of the tuner.
3. One or two coax-fed antennas may be connected to the SO-239 coax connectors marked COAX 1 or COAX 2. NOTE: Coax 1 or Coax 2 antennas may bypass the tuner and connect directly to the transmitter by setting the ANTENNA SELECTOR switch to either COAX 1 DIRECT or COAX 2 DIRECT.
4. A random wire antenna may be connected to the five-way binding post marked WIRE. The random length wire should be long, high, and as clear of surrounding objects as possible. For optimum operation, the wire antenna should be a quarter-wavelength or longer at the operating frequency. Do NOT ground the random wire antenna. Make certain that the tuner is well-grounded to the transmitter. A binding post marked GROUND is provided for ground connection(s).
5. A balanced line fed antenna may be connected to the two five-way binding posts marked BALANCED LINE. A jumper wire from the WIRE binding post, as indicated by a dotted line on the MFJ-949D, should be connected to one of the posts of the BALANCED LINE. This couples the balanced line antenna to the 4:1 balun.
NOTE: A random wire antenna and a balanced line antenna can not be connected to the MFJ-949D at the same time. If a random length wire is used, make sure that there is no jumper wire between the WIRE and BALANCED LINE binding posts.

USING THE MFJ-949D

The INDUCTOR switch on the MFJ-949D represents minimum inductance at position A and maximum inductance at position L. Less inductance is needed at higher frequencies than at low frequencies for the same impedance. The TRANSMITTER and ANTENNA controls have maximum capacitance at position 10. For optimum operation of the MFJ-949D, the transmitter must be tuned to a 50 ohm output impedance at the frequency of operation. Set the ANTENNA SELECTOR switch to DUMMY LOAD for tuning up the transmitter. NOTE: Always tune the transmitter using low power.

After properly tuning the transmitter, set the ANTENNA SELECTOR to the desired antenna and tune the tuner for a minimum SWR as described below. Do NOT readjust the transmitter loading control setting after loading it to the 50 ohm load.

1. Set the TRANSMITTER and ANTENNA controls to 5.
2. Rotate the INDUCTOR control until maximum receive signal is obtained.
3. Transmit a low power steady state carrier (CW) and alternately adjust "TRANSMITTER" and "ANTENNA" controls for minimum SWR. Since both controls interact, the two controls can best be adjusted by turning the TRANSMITTER control a small increment at a time, then rotating the ANTENNA control for minimum SWR. Repeat until minimum SWR is obtained.
4. If a SWR of 1:1 is not achieved, STOP transmitting. Either increase or decrease the INDUCTOR control and repeat Step 3. If arcing should occur between capacitor plates, increase or decrease the INDUCTOR control one position, then repeat Step 3. NOTE: If you can't achieve a SWR of 1:1, repeat Step 3 for each INDUCTOR control position. NOTE: Do NOT transmit while changing inductor settings.
5. After minimum SWR is achieved, transmitter power may be increased to 300 watts. Your VERSA TUNER II will reduce the SWR of most feed systems to 1:1. In some cases, a perfect 1:1 SWR is not achievable. Increase or decrease the length of your antenna to improve SWR.
6. A SWR of 1:1 may occur at more than one set of control settings on your MFJ-949D. When an SWR of 1:1 is obtained, check transmitter power. Confirm that transmitter power is relatively high. If transmitter power has decreased substantially, try another INDUCTOR control setting and repeat Step 3.
7. When using the MFJ-949D for receiving only, tune the MFJ-949D as described in Step 1 and Step 2.

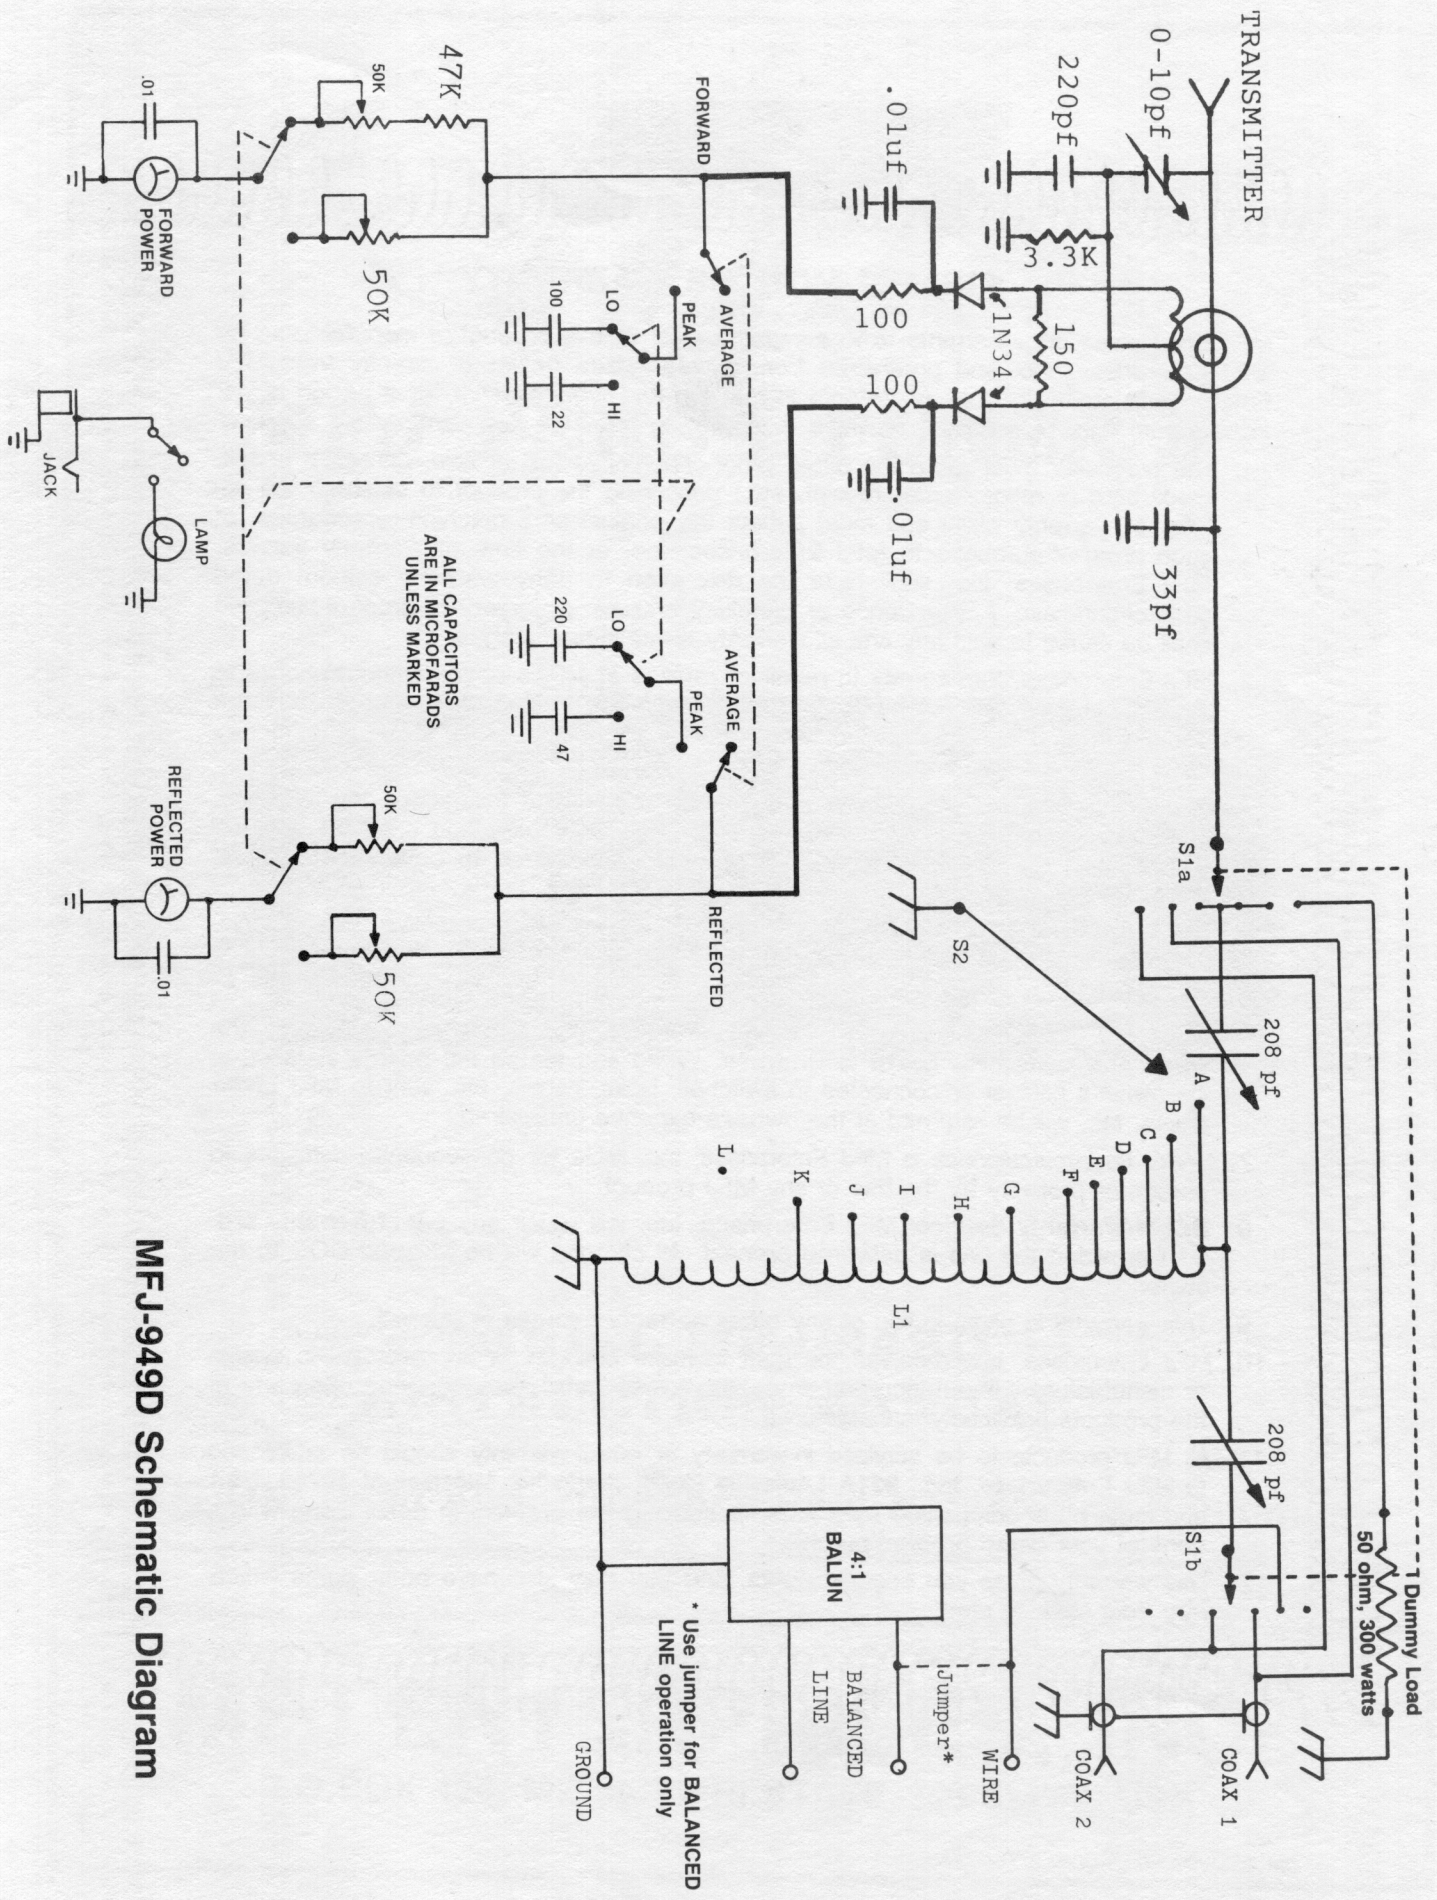

ALL CAPACITORS
ARE IN MICROFARADS
UNLESS MARKED

* Use jumper for BALANCED
LINE operation only

MFJ-949D Schematic Diagram

FULL 12 MONTHS WARRANTY

MFJ Enterprises, Inc. warrants to the original owner of this product, if manufactured by MFJ Enterprises, Inc. and purchased from an authorized dealer or directly from MFJ Enterprises, Inc. to be free of defects in material and workmanship for a period of 12 months from date of purchase provided the following terms of this warranty are satisfied.

1. The purchaser must retain the dated proof-of-purchase (bill of sale, cancelled check, credit card or money order receipt, etc.) describing the product to establish the validity of warranty claim and must submit the original or a machine-reproduction of such proof-of-purchase to MFJ Enterprises, Inc. at the time of warranty service. MFJ Enterprises, Inc. shall have the discretion to deny warranty without dated proof-of-purchase. Any evidence of alteration, erasure, or forgery of proof-of-purchase shall be cause to void any and all warranty terms immediately.
2. MFJ Enterprises, Inc. agrees to repair or replace at MFJ's option without charge to the original owner any defective product provided the product is returned postage prepaid to MFJ Enterprises, Inc. with a personal check, cashier's check or money order for \$7.00 covering postage and handling.
3. MFJ Enterprises, Inc. will supply replacement parts free of charge for any MFJ product under warranty upon request. A dated proof-of-purchase and a \$7.00 personal check, cashier's check or money order must be provided to cover postage and handling.
4. This warranty is **NOT** void for owners who attempt to repair defective units. Technical consultation is available by calling (601) 323-5869.
5. This warranty does not apply to kits sold or manufactured by MFJ Enterprises, Inc.
6. Wired and tested PC board products are covered by this warranty provided **only the wired and tested PC board is returned**. Wired and tested PC boards installed in the owner's cabinet or connected to switches, jacks, cables, etc. sent to MFJ Enterprises, Inc. will be returned at the owner's expense unrepaired.
7. Under no circumstances is MFJ Enterprises, Inc. liable for consequential damages to person or property by the use of any MFJ product.
8. **Out-of-Warranty Service:** MFJ Enterprises, Inc. will repair any out-of-warranty product provided the unit is delivered prepaid. All charges will be shipped COD to the owner.
9. This warranty is given in lieu of any other warranty express or implied.
10. MFJ Enterprises, Inc. reserves the right to make changes or improvement in design or manufacture without incurring any obligation to install such changes upon any of the products previously manufactured.
11. All MFJ products to be serviced in-warranty or out-of-warranty should be addressed to **MFJ Enterprises, Inc., 921A Louisville Road, Starkville, Mississippi 39759, USA** and must be accompanied by a letter describing the problem in detail along with a copy of your dated proof-of-purchase.
12. This warranty gives you specific rights, and you may also have other rights which vary from state to state.