


Operating Manual

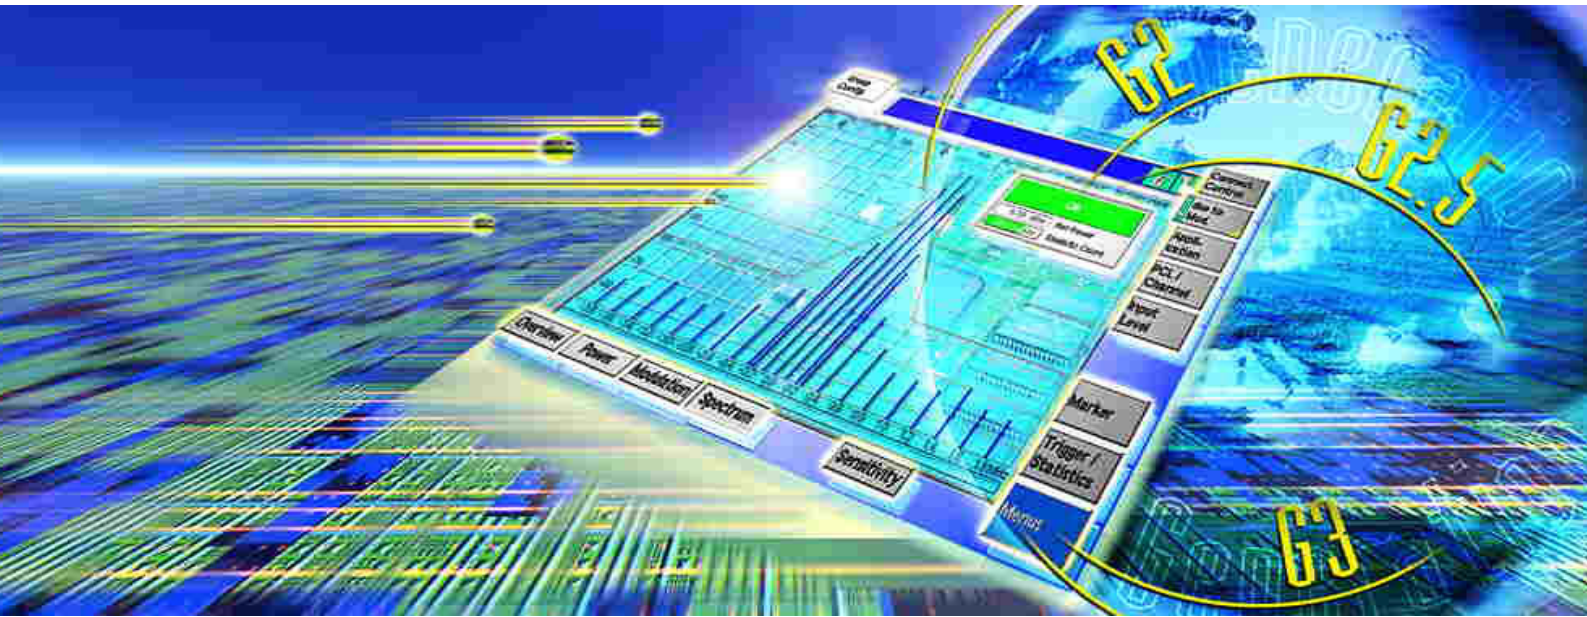

(E)GPRS Application Testing

R&S[®] CMU-K92

1157.4077.02

Printed in Germany



Contents

1 General Information	5
PC Requirements.....	5
R&S CMU Requirements.....	5
2 Software Installation	6
Installing the DATS.....	6
PPP WAN Adapter Configuration	7
Windows XP Procedure	8
Windows 2000 Procedure	11
Installing and Enabling the R&S CMU Components.....	13
3 Putting into Operation	14
Connecting the R&S CMU to the PC.....	14
R&S CMU Configuration for (E)GPRS Application Tests	16
DATS Configuration	19
Starting a Test and Verifying the Connection	20
4 Sample Session.....	22
5 Data Application Test Suite (DATS).....	25
Main Window Controls.....	25
Configuration Dialogs	27
DATS Configuration	27
AutoLog Configuration	29
Traffic Window.....	30
Demo Tools	31
Analysis Tool	32
Main Window Controls	33
Message Display	34
Message Display Filter.....	35
Traffic Graph	36
6 Further Reference Information.....	38
Web Server Lite	38
7 Index.....	40

1 General Information

(E)GPRS Application Testing (option R&S CMU-K92) is a PC-based application that connects to a R&S CMU200 via a TCP/IP network. The application is used together with the GSM-MS options of the R&S CMU200 Universal Radio Communication Tester.

The *(E)GPRS Application Testing* software simulates a radio network to test and monitor IP-based, packet-switched applications that a GPRS or EGPRS mobile phone services under realistic operating conditions. The software records and displays the exchanged protocol messages and evaluates the data throughput between the mobile and the PC. Moreover, it allows the CMU to perform TX tests while a mobile-terminated or mobile-originated application is running.

In addition to the operating instructions for the *(E)GPRS Application Testing* software, this manual contains the system requirements and information about the installation of the option. The instructions assume you are familiar with Windows use and terminology.

PC Requirements

The *(E)GPRS Application Testing* software is designed for a PC equipped with a 32-bit Windows operating system networked to a R&S CMU200. The PC requirements are listed below:

- *Windows 2000 with Service Pack 3 or higher, Windows XP with Service Pack 1 or higher*
- *Pentium III or higher processor*
- *40 MB hard disk*
- *100 Mbit network adapter and Ethernet connector*
- *CD-ROM drive*
- *VGA or higher resolution display adapter*

R&S CMU Requirements

The R&S CMU hardware and software requirements are listed in the separate installation instructions supplied with the option, stock no. 1157.4119.00. In particular, the R&S CMU200 must have the following software options installed and enabled:

- *One of the GSM software options R&S CMU-K21...K24*
- *One of the GSM software extensions R&S CMU-K42 (GPRS) or R&S CMU-K43 (EGPRS)*

The R&S CMU must be equipped with an Ethernet connector, to be mounted on the rear panel of the instrument. Your Rohde & Schwarz service representative will install the connector and label it *ETHERNET USU* when you purchase the option for an older R&S CMU unit.

2 Software Installation

The (E)GPRS Application Testing software is divided into several components, to be installed on the external computer and on the R&S CMU. The installation a three-stage process:

1. Install the PC components of the (E)GPRS Application Testing software (Data Application Test Suite, DATS); see section [Installing the DATS](#) on p. 6 ff.
2. Configure the PPP WAN adapter providing the communication path between the incoming data from the R&S CMU / the mobile under test and the network components of the Windows operating system; see section [PPP WAN Adapter Configuration](#) on p. 7 ff.
3. Install the R&S CMU software components and enter the key code provided with R&S CMU-K92 to enable the option; see section [Installing and Enabling the R&S CMU Components](#) on p. 13 ff.

After these steps, the CMU can be connected to a mobile phone and the PC in order to simulate a radio network; see section [Putting into Operation](#) on p. 14 ff. The necessary configurations of the DATS and the CMU are described in section [R&S CMU Configuration for \(E\)GPRS Application Tests](#) on p. 16 ff.

Installing the DATS

The Data Application Test Suite (DATS) is the central simulation and analysis tool of the (E)GPRS Application Testing software. To be run on an external PC equipped with a Windows 2000 or Windows XP operating system, the DATS requires an auxiliary software component termed the GSM Operational Software.

Note: *You need to have administrator rights to install software on a Windows operating system.*

Both the DATS and the Operational Software are installed on the external PC from the R&S CMU-K92 CD-ROM using an *InstallShield*® setup process. It is recommended to install the Operational Software in a first stage.

To install the Operational Software...

1. Insert the CD into the CD-ROM drive.
2. Use Windows Explorer to view the contents of your CD-ROM's root directory. Close all other applications.
3. Double-click the setup file *SETUP_FULL_CMU-WS-OPSW_<Version_no.>.exe* in the *CMU-WS-OPSW* subdirectory and follow the instructions of the *InstallShield Wizard*, accepting the terms of the software license.

The program directory *OPSW* is created automatically on the local disk (drive C:). During the installation, a PPP WAN adapter is installed. In addition a batch job *CMU-WS OPSW Init* is executed and copied to the Windows *Startup* program folder. The main role of this batch job is to re-map drives D:, L:, Q:, and T: as required by the DATS.



Attention: *The required drive mapping must be compatible with your system configuration. If installation of the Operational Software fails, check your drive mapping and ensure that drives D:, L:, Q:, and T: are available for the DATS application. To restore the original drive mapping simply remove the batch job *CMU-WS OPSW Init* from the Startup program folder and restart the PC. The executable file *cmuws.bat* is stored in the program directory *C:\OPSW\1.9975\CR02P2P*.*

To install the DATS...

1. Double-click the setup file *SETUP.exe* in the *CRTU_GD03\2v30* subdirectory of the R&S CMU-K92 CD-ROM and follow the instructions of the *InstallShield Wizard*, accepting the terms of the software license.

Installation is largely self-explanatory. In the dialogs following the license agreement you can select the program and start menu folders and the setup type.

2. In the *Choose Destination Location* dialog, click *Browse* if you wish to copy the application to a destination folder other than the default folder.
3. In the *Setup Type* dialog, choose *Full* installation.
4. In the *Select Program Folder* dialog, select the default start menu folder *CRTU-GD03* or another existing folder.
5. After completing the setup, click *Finish* to complete the installation.

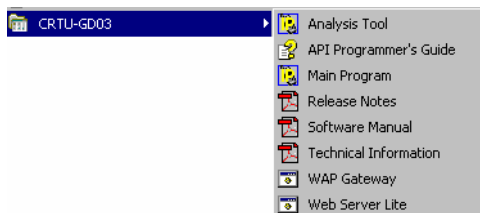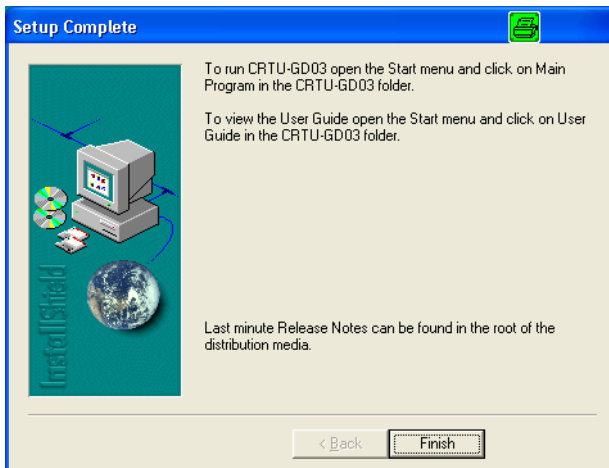

After finishing the installation, the Windows places the start icon for the DATS onto the desktop.

In addition, links for starting the *DATS*, the *Analysis Tool*, the *WAP Gateway*, and the *Web Server Lite* appear in the start menu folder selected during the installation.

From here you can also access the documentation related to the DATS including this manual.

During the installation a default PC user called *rsuser* is created automatically. The *rsuser* is required to access the PPP WAN Adapter installed with the Operational Software. The configuration of the PPP WAN Adapter is described in the following section.

PPP WAN Adapter Configuration

The PPP WAN adapter provides the communication path between the incoming data from the R&S CMU / the mobile under test and the network components of the Windows operating system. The adapter is automatically installed together with the Operational Software component of the Data Application Test Suite (DATS); see section [Installing the DATS](#) on p. 6 ff.

The Windows operating system needs to be instructed to use the PPP WAN adapter for an incoming connection. Windows provides the *Network Connections Wizard* to define the necessary settings. The configuration for Windows 2000 and Windows XP is slightly different.


Windows XP Procedure

The *New Connection Wizard* which is opened from the control panel provides all necessary PPP WAN Adapter settings.


1. Click *Start – Settings – Control Panel – Network Connections – Create a new connection* to open the wizard and click the *Next* button.




2. In the *Network Connection Type* dialog opened, select *Set up an advanced connection*. Click *Next*.

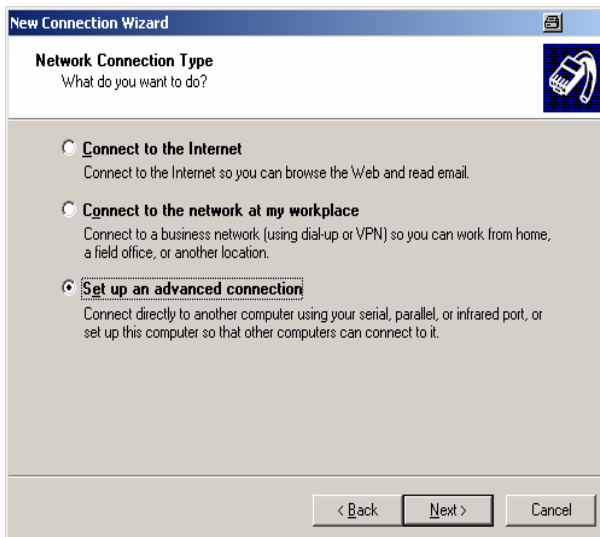

3. In the *Advanced Connection Options* dialog opened, select *Accept incoming connections*. Click *Next*.

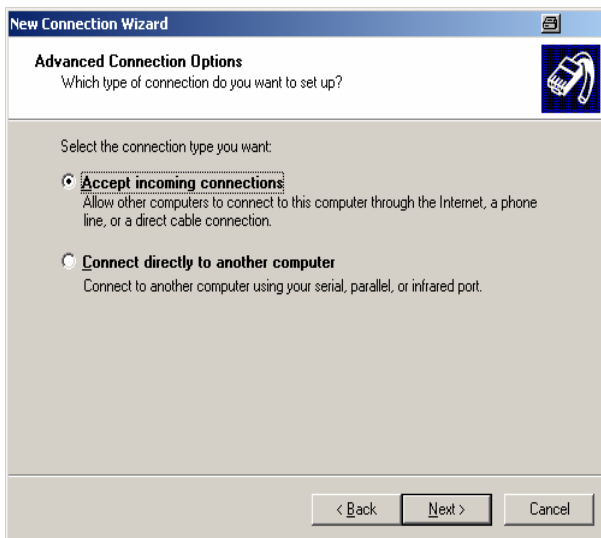


4. In the *Devices for Incoming Connections* tab select *PPP WAN Adapter* and click *Next*.

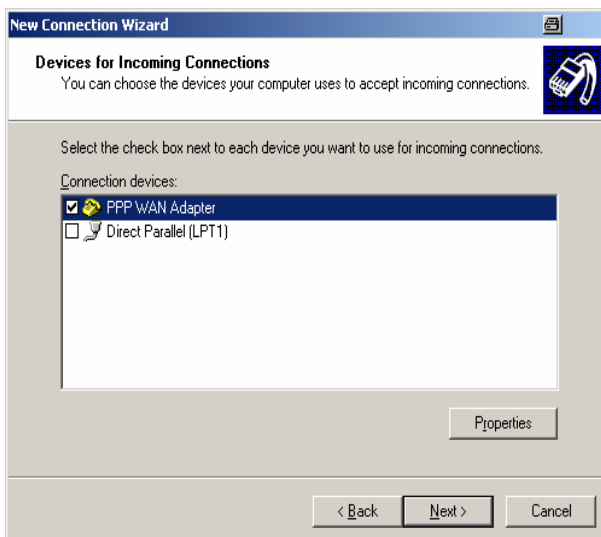


Note: *If the list of Connection devices shows more than one WAN adapter, it is recommended to Cancel the wizard and restart the PC. If the problem persists, then remove the additional WAN adapter as follows:
Click Start – Settings – Control Panel – Administrative Tools – Computer Management – Device Manager – Network Adapters. Right-click the additional WAN adapter and select Uninstall from the context menu.*


5. In the *Incoming Virtual Private Network (VPN) Connection* dialog opened, select *Do not allow virtual private connections*. Click *Next*.

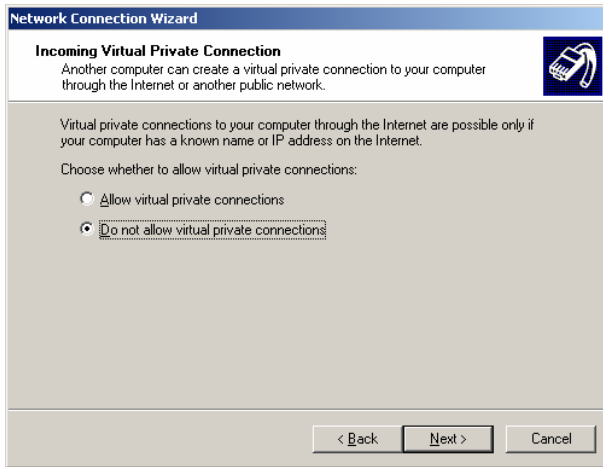


6. In the *User Permissions* dialog, allow the *RsUser* to connect via the PPP WAN Adapter connection. Click *Next*.

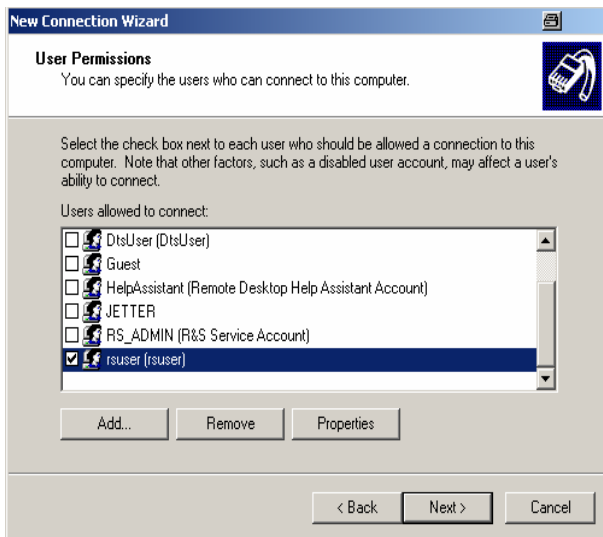

7. In the *Networking Software* dialog opened, select *Internet Protocol (TCP/IP)* (other networking software may be checked simultaneously) and click the *Properties* button to open a popup dialog for the TCP/IP address information.

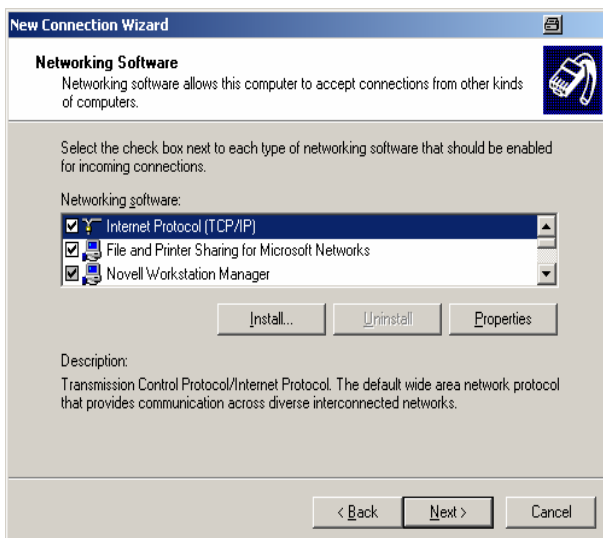

8. Configure the *Incoming TCP/IP Properties* dialog as shown below. In particular, use the fixed, reserved private TCP/IP addresses 192.168.1.19 and 192.168.1.20 and enable *Allow calling computer to specify its own IP address*.

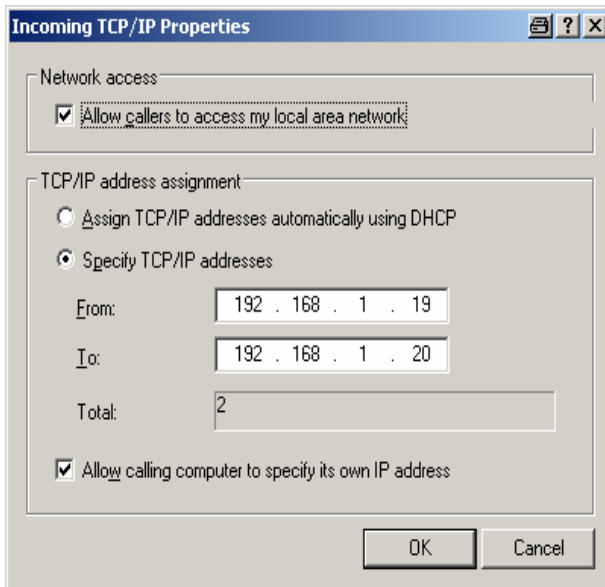


9. Click *OK* to close the popup dialog and *Next* to proceed to the last dialog of the *Network Connection Wizard*.
10. Click *Finish* to complete the installation and close the wizard.




Windows 2000 Procedure

The *Network Connections Wizard* which is opened from the control panel provides all necessary PPP WAN Adapter settings.


1. Click *Start – Settings – Control Panel – Network and Dial-up connections – Make New Connection* to open the wizard and click the *Next* button.
2. In the *Network Connection Type* dialog opened, select *Accept Incoming connections*. Click *Next*.

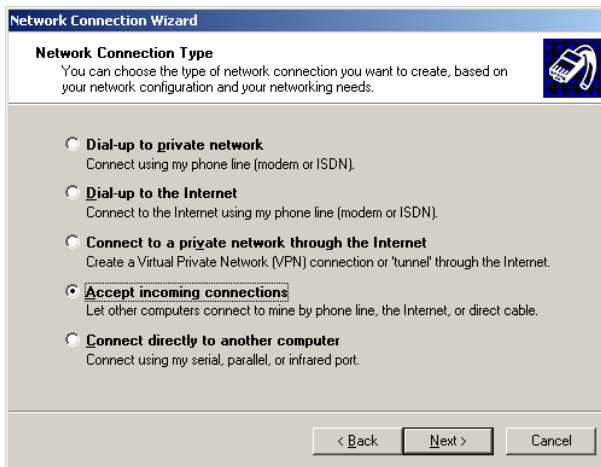


- In the next dialog, select the *PPP WAN Adapter* (check the box) and click *Next*.
- In the *Incoming Virtual Private Connection* dialog opened, select *Do not allow virtual private connections*. Click *Next*.

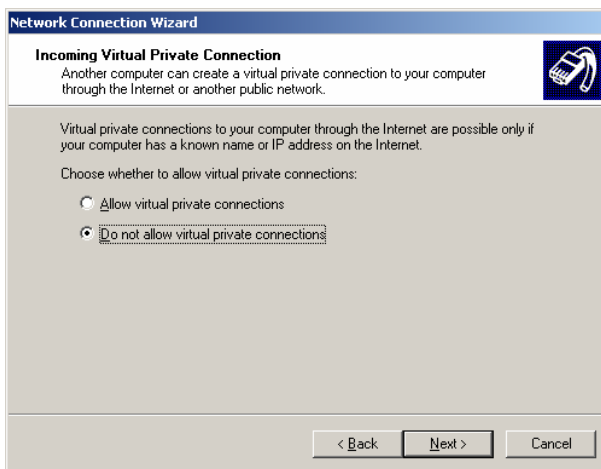

- In the next dialog, allow the *rsuser* to connect via the PPP WAN Adapter connection. Click *Next*.
- In the *Networking Components* dialog opened, select *Internet Protocol (TCP/IP)* and press the "Properties" button to open a popup dialog for the TCP/IP address information.

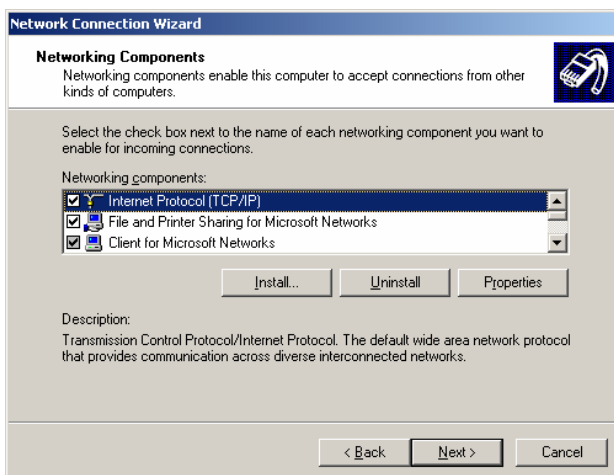

- Configure the *Incoming TCP/IP Properties* dialog as shown below. In particular, use the fixed, reserved private TCP/IP addresses 192.168.1.19 and 192.168.1.20 and enable *Allow calling computer to specify its own IP address*.

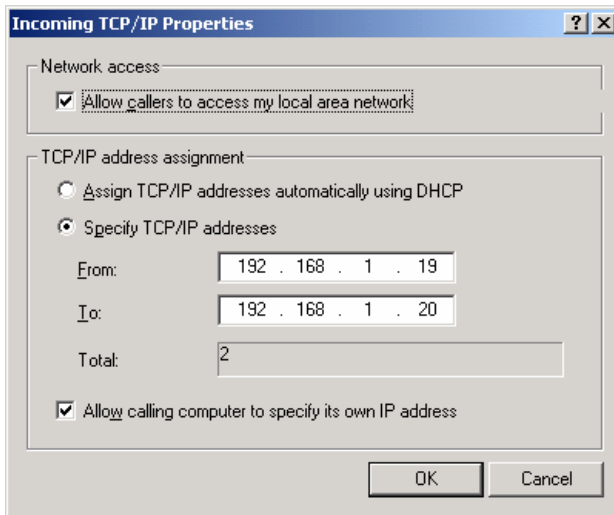

- Click *OK* to close the popup dialog and *Next* to proceed to the last dialog of the *Network Connection Wizard*.
- Click *Finish* to complete the installation and close the wizard.



Installing and Enabling the R&S CMU Components

The R&S CMU components of option R&S CMU-K92 are part of the CMU MS GSM software package. To install these components, it is sufficient to activate a CMU MS GSM software package and to enable the option using the key code provided with the option. No separate installation and no additional registration is required.

Together with the R&S CMU system requirements, the installation procedure is described in the separate installation instructions provided with the option, stock no. 1157.4119.00. The R&S CMU 200/300 operating manual, stock no. 1100.4903.12, describes how to handle software packages on the R&S CMU using the *VersionManager* and how to enable options.

3 Putting into Operation

After successful installation according to Chapter [Software Installation](#) on p. 6 ff., option R&S CMU-K92 requires the following preparations on the R&S CMU and the PC:

1. Establish an Ethernet connection between the R&S CMU and the PC assigning the appropriate IP addresses; see section [Connecting the R&S CMU to the PC](#) on p. 14 ff.
2. Configure the R&S CMU for (E)GPRS Application Testing; see section [R&S CMU Configuration for \(E\)GPRS Application Tests](#) on p. 16 ff.
3. Configure the Data Application Test Suite (DATS) in accordance with the R&S CMU settings; see section [DATS Configuration](#) on p. 19 ff.

Connecting the R&S CMU to the PC

The R&S CMU is directly connected to the PC using the *ETHERNET USU* connector on the rear panel of the instrument (see section [R&S CMU Requirements](#) on p. 5 ff.) and a cross-over network cable. To communicate with the PC the R&S CMU must know its IP address, so you have to look up or change this address.


Attention: *It is advisable to keep the PC's IP address and set this address at the R&S CMU as described in section [R&S CMU Configuration for \(E\)GPRS Application Tests](#) on p. 16 ff.*

When changing the IP address of your PC, always keep the initial address to ensure you can re-use it after closing the R&S CMU-K92 session.


If your PC is equipped with a single network adapter that is used to connect to the internet or to a business network, you have to cancel this network connection (work locally) in order to run option R&S CMU-K92.

To set up a connection between the CMU and the PC...


1. Establish a direct (dedicated) connection between the PC and the R&S CMU 200 using a cross-over network cable. Connect the cable between the network port labeled *ETHERNET USU* on the rear panel of the R&S CMU 200 and the network connector on the PC.
2. Click *Start – Settings – Control Panel – Network Connections*.

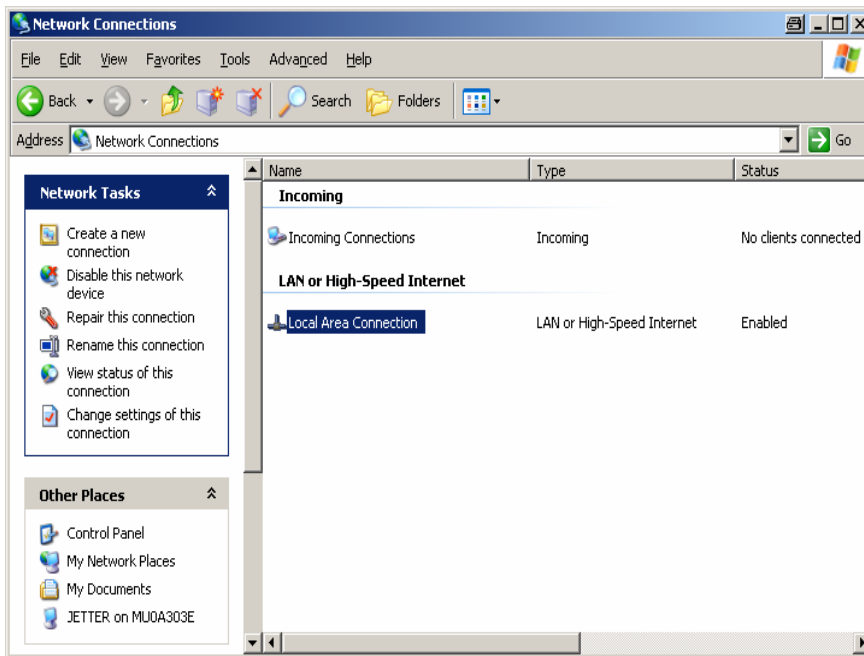

- Click *Network Tasks* – *Change settings of this connection* to open the *Local Area Connection Properties* dialog.

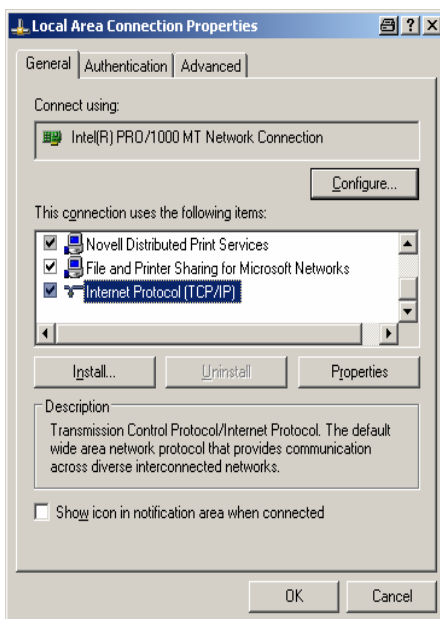

- Select *Internet Protocol (TCP/IP)* and click the *Properties* button to open the *Internet Protocol (TCP/IP) Properties* dialog.
- Note your IP address and proceed with step 6. **Alternative:** Keep your or original IP address for future use, then overwrite it, e.g. using the default IP address of the workstation that the R&S CMU expects (see below and section [R&S CMU Configuration for \(E\)GPRS Application Tests](#) on p. 16 ff.). The DNS server addresses are not relevant for the dedicated connection.

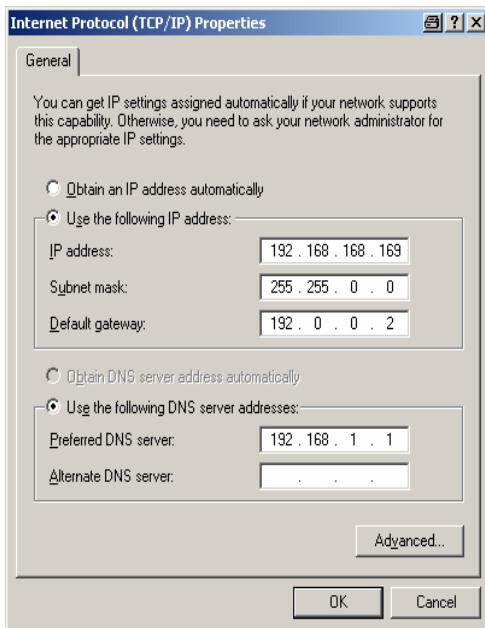


6. Click **OK** – OK to confirm your changes.

R&S CMU Configuration for (E)GPRS Application Tests

The R&S CMU provides a special test mode for GPRS and EGPRS application tests. The test mode is selected in the *Connection Control* menu after one of the supported GSM networks is started.

To configure the R&S CMU for (E)GPRS application tests...


1. Start up the R&S CMU. In the *Menu Select* menu, select one of the supported GSM networks (see section [R&S CMU Requirements](#) on p. 5 ff.) and the *Signalling* mode. Press *Enter* to access the *GSM Signalling* measurements and automatically open the *Connection Control* menu.

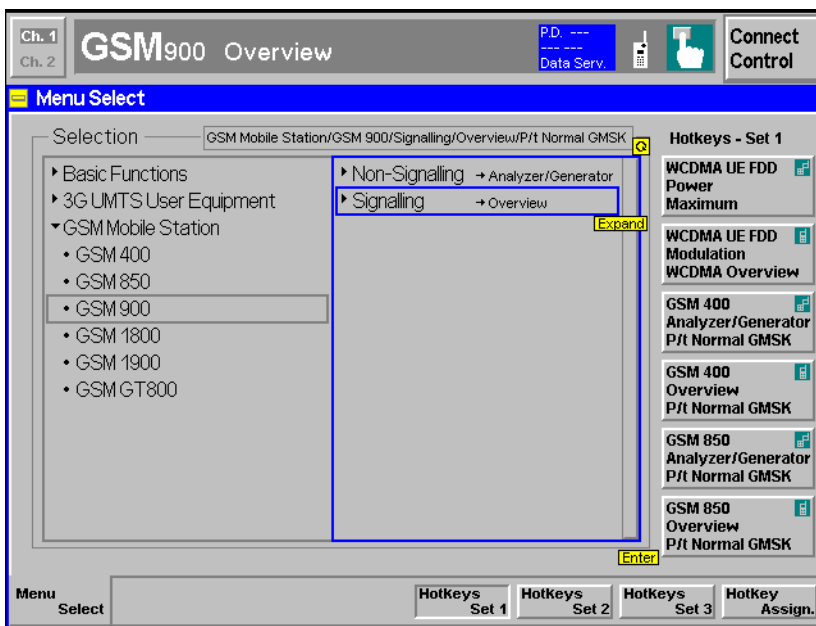

2. Make sure that your GSM software is in a well-defined state: Press the *RESET* key on the front panel of the instrument and confirm the *Reset* of all *GSM Signalling* parameters.
3. If you wish to change the IP address of the R&S CMU, you can do this in the *Setup* menu; see [Fig. 2](#) on p. 18 ff.

Note: *The TCP/IP information is not changed after a reset of the R&S CMU base system or the GSM-MS Signalling function groups.*

4. In the *Misc.* tab in the second level of the *Connection Control* menu, adjust the *IP Address Workstation* to the IP address of your PC's network adapter (see section [Connecting the R&S CMU to the PC](#) on p. 14 ff.). If desired, you can also change the *Port* number for your application test.

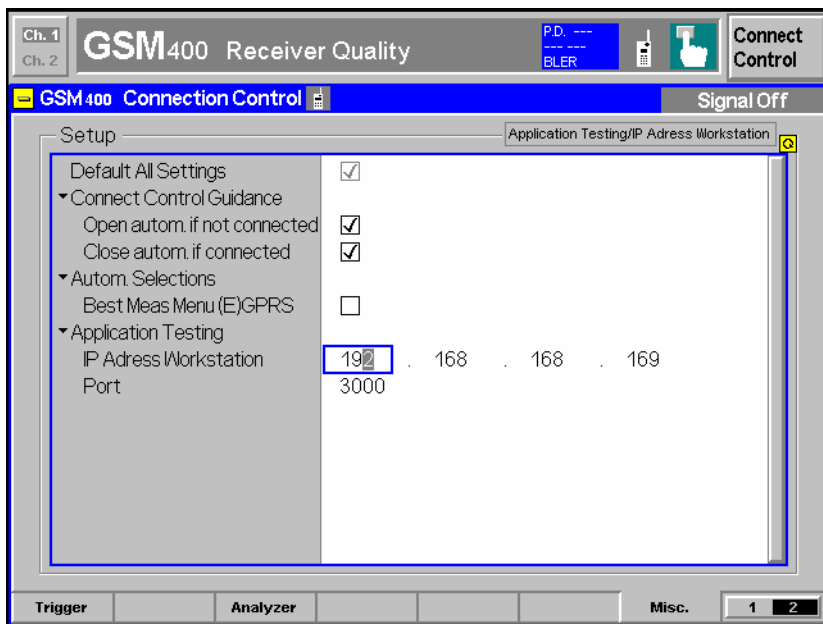

TCP/IP Ports: IP addresses identify a particular device within the TCP/IP network. The port number is an additional addressing element that identifies a specific software application process within a particular IP address. Port numbers are important if a host on a network has different software application processes running concurrently. Each (E)GPRS data application can be run with a specific port number.

5. In the *Connection* tab of the *Connection Control* menu, select *Network Support: GSM + GPRS* (for GPRS application tests) or *Network Support: GSM + EGPRS* (for EGPRS application tests), and *Main Service: Application Test*.

The R&S CMU displays a message for approx. 30 s while the *Application Test* is initialized. Afterwards the *Connection Control* menu should look as shown below.

Note: The IP addresses of the workstation and of the R&S CMU and the IP port address are also stored in the configuration file `prostacklink.ini` in the directory `C:\OPSW\<version>\CR02P2P` which is installed together with the operational software. When changing the R&S CMU address, always adjust the IP address string in `prostacklink.ini`.

R&S CMU configuration via remote control

The configuration described in this section can be set with the following remote control commands:

Base system commands:

```

SYSTEM:TCPIP:PRIMARY:STATIC:IPADDRESS
    <IP1>, <IP2>, <IP3>, <IP4>
SYSTEM:TCPIP:PRIMARY:STATIC:SMASK
    <SM1>, <SM2>, <SM3>, <SM4>
SYSTEM:TCPIP:PRIMARY:STATIC:DGATEWAY
    <GW1>, <GW2>, <GW3>, <GW4>

```

GSM Signalling commands:

```

CONFIGURE:NETWORK:NSUPPORT GGPR | GEPG
PROCEDURE:SIGNALLING:PDATA:ACTION SATest
CONFIGURE:ATEST:WSIPADDRESS
    <IP1>, <IP2>, <IP3>, <IP4>
CONFIGURE:ATEST:WSPORT <port_no>

```

For a detailed documentation of the commands refer to the relevant manuals (R&S CMU 200/300 for base system, R&S CMU-K20, ... , -K26 (GSM-MS) for the GSM Signalling commands).


DATS Configuration

To communicate with the CMU, the DATS needs to know the GSM band used by the R&S CMU and the mobile under test. Moreover, a couple of RF-related parameters can be set in the DATS, overwriting the current R&S CMU parameters.

1. Double-click the start icon on your desktop or click *Main Program* in the program folder (e.g. *CRTU-GD03*) in the *Start – Program* menu to start the DATS.

The start icon and the program folder are created during the DATS installation; see section [Installing the DATS](#) on p. 6 ff. The DATS is opened with its main application window described in section [Data Application Test Suite \(DATS\)](#) on p. 22 ff.

2. Click *Test – Configuration – Signalling*, and select the GSM band currently used by the R&S CMU in the *Band* panel of the configuration dialog.

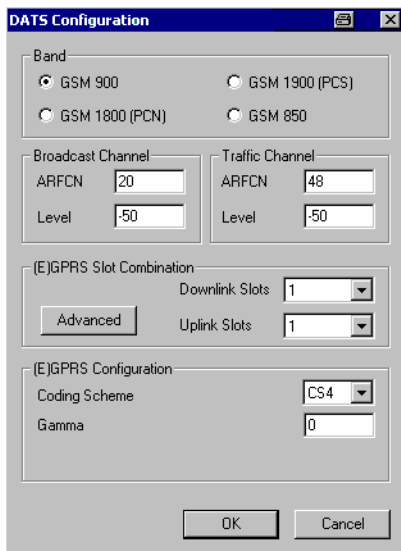


In the configuration dialog, you can also change the broadcast and traffic channel numbers of the R&S CMU's (downlink) *BS Signal*, the signal *Levels* in these channels, the multislot configuration, the (modulation and) coding scheme (CS1 to CS4 for GPRS, MCS1 to MCS9 for EGPRS), and the channel-specific power control parameter Γ_{ch} (*Gamma*). For more information see section [DATS Configuration](#) on p. 27 ff.

Starting a Test and Verifying the Connection


With the preparations described in the previous sessions, an (E)GPRS application test can be started from the DATS in a straightforward way. After connecting the R&S CMU to your PC (see section [Connecting the R&S CMU to the PC](#) on p. 14 ff.) proceed as follows:

1. Configure the R&S CMU as described in section [R&S CMU Configuration for \(E\)GPRS Application Tests](#) on p. 16 ff. and press *Start Appl. Test*.
2. Start the DATS and set the GSM band in use (see section [DATS Configuration](#) on p. 19 ff.).
3. Click *Test – Run* and wait until the DATS has *Connected to (the) LAN*. This may take approx. 30 seconds.

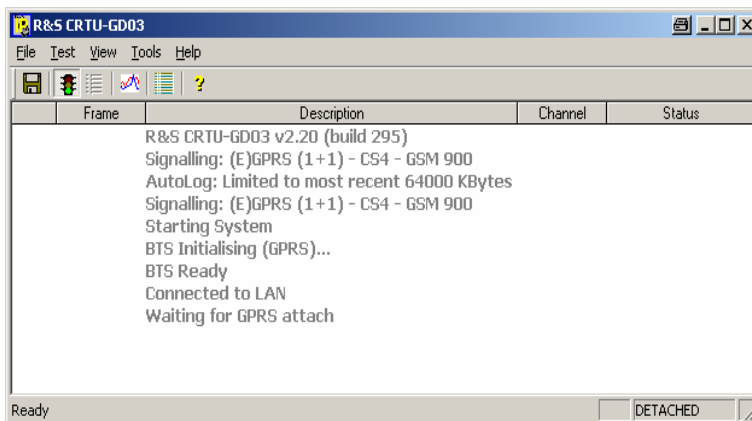

4. Connect your mobile to the bidirectional RF connector RF 2 and switch on.

The DATS displays the UL and DL signalling messages exchanged between the R&S CMU and the mobile as soon as the latter initiates an (E)GPRS attach.

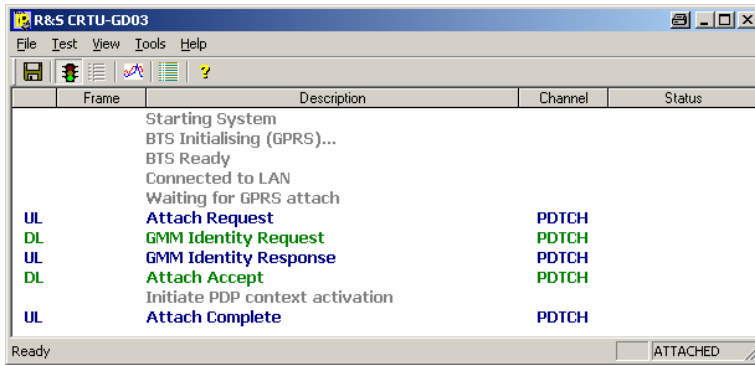

In the *Attached* state, the DATS is ready for an (E)GPRS application test. A simple example is described in the [Sample Session](#) chapter starting on p. 22.



For a quick test of the connection you can select Tools – API Demo (MP Events) and send a short message to the connected mobile; see section [Demo Tools](#) on p. 31.

*You can also test the LAN connection between the DATS and the R&S CMU by sending a ping to the R&S CMU: Open the command prompt and enter the following command line: `ping -w 4000 -l 512 192.168.168.170 -t`
The R&S CMU should respond within 4000 ms.*


4 Sample Session

The following application example is intended to give an introduction to the main features that the DATS provides for application control and data analysis. The example reports a HTTP download from a web server. The download does not require any additional tools: the web server and the downloaded files are supplied with the installation of option R&S CMU-K92.

Activating the web server

Web Server Lite is a simple solution for web application tests on the local PC; see section [Web Server Lite](#) on p. 38. This server is included in the *Full* DATS installation described in section [Installing the DATS](#) on p. 6. To activate the web server,

1. Open the Windows *Start* menu and click *Web Server Lite*.

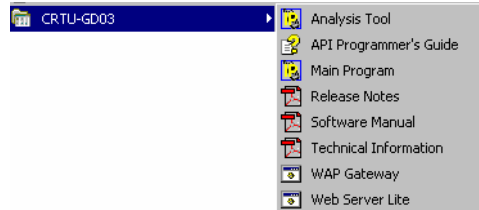

The server opens a command prompt window with the message sequence:

```
C:\> Web Server Lite
Web server is starting...
Web server is running. Waiting for connection...
```

The DOS box must be left open until the end of the HTTP download.

Initiating the HTTP download

2. Proceed as described in section [Starting a Test and Verifying the Connection](#) on p. 20 to establish an (E)GPRS connection between the DATS and the mobile.
3. After you have reached the *Attach Complete* state, initiate a HTTP download from your mobile phone using the download address `http://192.168.1.19:80/index.html`.

The IP address is the one assigned to the PPP WAN adapter; see section [PPP WAN Adapter Configuration](#) on p. 7. The source port number 80 is the default port number of the web server, stored in the *WebServerLite.ini* file in the *GS03_INET* directory of the server. *Index.html* is a sample file for demo tests and is stored in the same directory. The file is small in size and quickly transferred but provides a link to a larger *.pdf file named *CRTUG_21_web.pdf*.

4. Activate the link to download the file *CRTUG_21_web.pdf*.

Analyzing the data rates

5. Click *View – Analysis Tool* (or the corresponding icon in the toolbar) to display the Signalling messages exchanged between the R&S CMU and the mobile and the transferred IP frames.


During the download the message list and detailed view of the analysis tool typically looks as follows (see section [Message Display](#) on p. 34):

UL	0:12:45.112	IP Frame for LAN
DL	0:12:45.128	IP Frame from LAN
DL	0:12:45.143	IP Frame from LAN
DL	0:12:45.159	IP Frame from LAN
DL	0:12:45.174	IP Frame from LAN
	0:12:45.518	0 GUI Traffic Rate Update
UL	0:12:45.987	IP Frame for LAN
	0:12:46.018	0 GUI Traffic Rate Update
	0:12:46.518	0 GUI Traffic Rate Update
UL	0:12:46.753	IP Frame for LAN
	0:12:47.019	0 GUI Traffic Rate Update


IP Frame from LAN		NET -> RR																																																								
<table border="1"> <tr> <td colspan="12">IP Header</td> </tr> <tr> <td>00</td><td>01</td><td>02</td><td>03</td><td>04</td><td>05</td><td>06</td><td>07</td><td>08</td><td>09</td><td>10</td><td>11</td> </tr> <tr> <td>0000</td><td>45</td><td>00</td><td>05</td><td>78</td><td>15</td><td>64</td><td>40</td><td>00</td><td>80</td><td>06</td><td>5C A4</td> </tr> <tr> <td>0012</td><td>C0</td><td>A8</td><td>01</td><td>13</td><td>C0</td><td>A8</td><td>01</td><td>14</td><td colspan="3"></td> </tr> </table>		IP Header												00	01	02	03	04	05	06	07	08	09	10	11	0000	45	00	05	78	15	64	40	00	80	06	5C A4	0012	C0	A8	01	13	C0	A8	01	14				<table border="1"> <tr> <td colspan="2">IP Header</td> </tr> <tr> <td>Src IP</td> <td>192.168.1.19</td> </tr> <tr> <td>Dst IP</td> <td>192.168.1.20</td> </tr> <tr> <td>Protocol</td> <td>6 (TCP)</td> </tr> </table>	IP Header		Src IP	192.168.1.19	Dst IP	192.168.1.20	Protocol	6 (TCP)
IP Header																																																										
00	01	02	03	04	05	06	07	08	09	10	11																																															
0000	45	00	05	78	15	64	40	00	80	06	5C A4																																															
0012	C0	A8	01	13	C0	A8	01	14																																																		
IP Header																																																										
Src IP	192.168.1.19																																																									
Dst IP	192.168.1.20																																																									
Protocol	6 (TCP)																																																									
<table border="1"> <tr> <td colspan="12">TCP Header</td> </tr> <tr> <td>00</td><td>01</td><td>02</td><td>03</td><td>04</td><td>05</td><td>06</td><td>07</td><td>08</td><td>09</td><td>10</td><td>11</td> </tr> <tr> <td>0012</td><td colspan="7"></td><td>00</td><td>50</td><td>04</td><td>05</td><td></td> </tr> </table>		TCP Header												00	01	02	03	04	05	06	07	08	09	10	11	0012								00	50	04	05		<table border="1"> <tr> <td colspan="2">TCP Header</td> </tr> <tr> <td>Src Port</td> <td>80 (HTTP)</td> </tr> <tr> <td>Dst Port</td> <td>1029</td> </tr> </table>	TCP Header		Src Port	80 (HTTP)	Dst Port	1029													
TCP Header																																																										
00	01	02	03	04	05	06	07	08	09	10	11																																															
0012								00	50	04	05																																															
TCP Header																																																										
Src Port	80 (HTTP)																																																									
Dst Port	1029																																																									

6. In the *Analysis Tool*, click *View – Traffic Graph* (or the corresponding icon in the toolbar).

The traffic graph shows the data throughput since the beginning of the session and is continuously updated with the message list (see section [Traffic Graph](#) on p. 36). The IP traffic at the beginning of the connection and the transfer of the small file *index.html* generates a traffic graph of the following type:

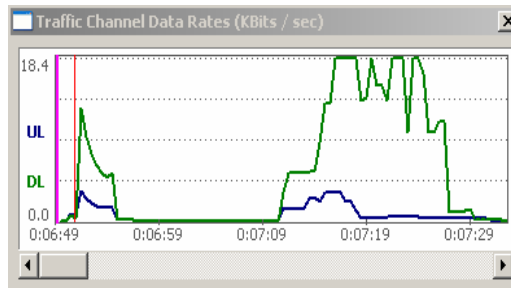

The transfer of the larger *.pdf file generates a traffic graph of the following shape:

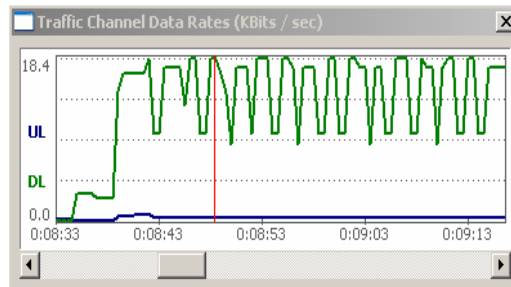

The ripples in the DL data rate reflect the large IP packets which are crossing the link in bursts.

7. Click on a particular point in the traffic graph to analyze the data rate in detail.

A red, horizontal marker line appears in the graph. At the same time the message list is scrolled, and the detailed view shows a statistical evaluation of the data rate.

D:08:48.262 0 GUI Traffic Rate Update	
UL	D:08:48.293 IP Frame for LAN
GUI Traffic Rate Update	
UL Rate	0,36 kBits / sec
DL Rate	18,24 kBits / sec
UL Total	5753 Bytes
DL Total	77419 Bytes
UL Session Average	0,38 kBits / sec
DL Session Average	5,20 kBits / sec
UL Maximum Attainable	19,20 kBits / sec
DL Maximum Attainable	19,20 kBits / sec


The file transfer is also monitored in Web Server Lite's command prompt window.

P/Slot analysis

During the DATS session, you can always run TX measurements on the R&S CMU to obtain more insight in the UL traffic.

- Close the *Connection Control* menu (from where you activated the application test), press *Menus – Power* and activate the *P/t Multislot* application.

The *Power* menu displays the power in all used uplink slots. For the simplest multislot configuration with one uplink slot and coding scheme CS4 (i.e. GMSK modulation), a result of the following type can be obtained:

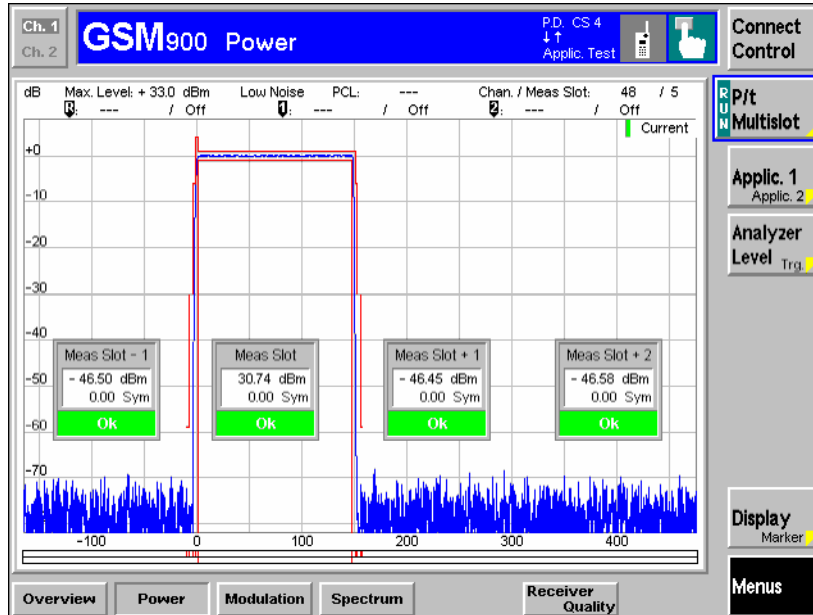

Closing the application

- Go back to the DATS main window and click *File – Save Log As...* to save the messages including the details and the recorded traffic rate to a log file (*.dlf).

You can re-open the log file any time using the *Analysis Tool*.

- Click *Test – Run* to terminate the test and disconnect.

You can now close the DATS (*File – Close*) and the Web Server Lite (*Close* button of the command prompt window) and switch off your R&S CMU and mobile phone.

5 Data Application Test Suite (DATS)

The *Data Application Test Suite (DATS)* is the central control and evaluation tool for data application tests. When started as described in section [Starting a Test and Verifying the Connection](#) on p. 20 f., the application shows its main window:

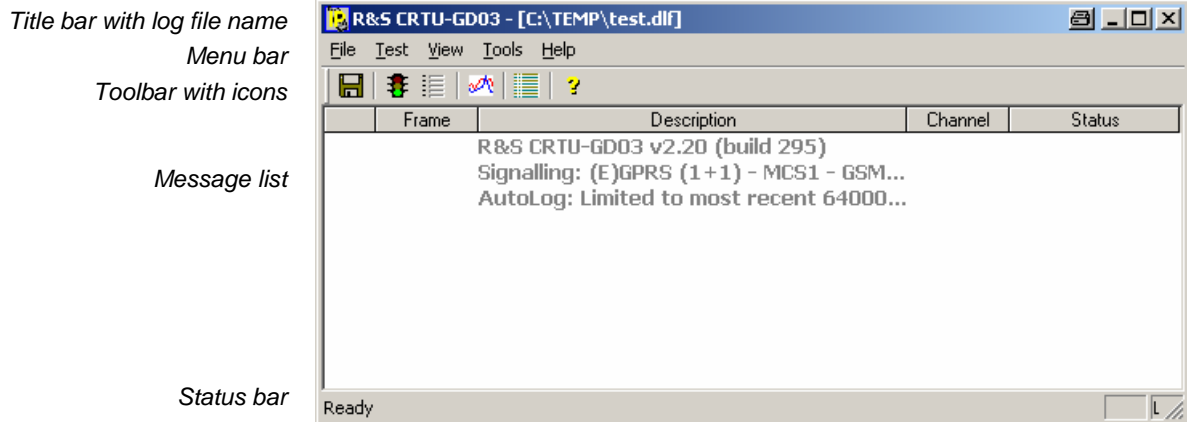



Fig. 3: DATS main window

The main window provides the following control and display elements:

- The title bar shows the application's name. If a log file is stored, the name and directory of this file is displayed in addition. A temporary file name `C:\TEMP\~$GD03.dlf` indicates that the messages of the current DATS session are viewed using the [Analysis Tool](#) described on p. 31 ff. The control elements in the title bar provide standard Windows functionality.
- The menus and the corresponding icons control all tasks performed by the DATS; see section [Main Window Controls](#) below.
- The message list contains status information about the DATS (grey lines), uplink (blue) and downlink (green) messages exchanged between the R&S CMU and the mobile, and error messages (red). The messages can be stored to a log file using the *File* menu commands. Uplink and downlink messages can be analyzed in detail using the *Analysis Tool* of the DATS; see section [Analysis Tool](#) on p. 31 ff.
- The status bar gives additional information about the selected menu command or icon, the status of the application and the connection, important RF parameters, and the amount of logging information kept in memory. The status bar may be hidden using *View – Status Bar* in order to gain more space for the message list.

Main Window Controls

The main window provides five menus to control all tasks performed by the DATS. The icons below the menu bar are shortcuts to frequently used menu commands. Equivalent keyboard shortcuts are also shown in the menus.

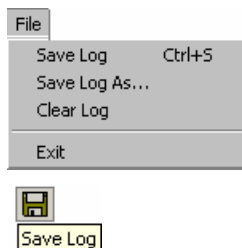


Saves log files and closes the application:

- *Save Log* calls up a standard *Save As* dialog to select a name and location for the generated log file and saves the file. If it is used repeatedly *Save Log* updates the log file with the current contents of the message list.
- *Save Log As...* calls up a standard *Save As* dialog to select a name and location for a new log file and saves the file.

- *Clear Log* closes the current log file.
- *Exit* closes the DATS (disabled while a test is running).


A log file is a binary file with default extension *.dlf that is used to store the information displayed in the message list of the DATS main application window. The log file also contains detailed information about all the messages exchanged during the test session and the data throughput displayed in the *Traffic Window* (see section [Traffic Window](#) on p. 30). Saving data to a log file clears the internal memory of the DATS.

Log files can be read by the *Analysis Tool* described on p. 31 ff.; they cannot be opened by the DATS itself. Recording of log files is controlled by means of the *AutoLog Configuration* menu (*Test – Configuration – AutoLog*); see section [AutoLog Configuration](#) on p. 29.




Controls the test and open the configuration submenu:

- *Run* starts a test or stops a running test.
- *Configuration* opens a submenu with two commands, each opening a configuration menu.




- *Signalling* opens the *DATS Configuration* dialog to select the GSM band and set the RF parameters for the connection; see section [DATS Configuration](#) on p. 27.
- *AutoLog* opens the *AutoLog Configuration* dialog to specify how much information is kept in the log memory and how often it is saved to a log file; see section [AutoLog Configuration](#) on p. 29.

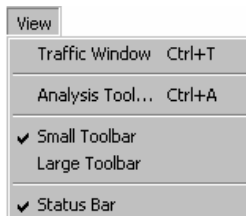


Customizes the main application window and provides additional evaluation tools:

- *Traffic Window* displays the real-time traffic data throughput during the connection; see section [Traffic Window](#) on p. 30.
- *Analysis Tool* opens the log file viewer of the DATS; see section [Analysis Tool](#) on p. 31 ff.
- *Small Toolbar* and *Large Toolbar* toggle between small and larger toolbar icons; see Fig. 3 on p. 25. Small toolbar icons enlarge the space for the message list.
- *Status Bar* shows or hides the status bar; see Fig. 3 on p. 25. Hiding the status bar enlarges the space for the message list.



Contains application tools written using the DATS Application Programmers' Interface (API) and provides demo tools for the application:

- *API Demo (MT Events)* opens a dialog used to send a short message to the mobile; see section [Demo Tools](#) on p. 31 ff.



Provides information on the application:

- *About* opens a dialog indicating the current DATS version, a link to the Rohde & Schwarz internet and copyright information.

Configuration Dialogs

The configuration dialogs described in this section provide settings for the RF connection between the R&S CMU and the (E)GPRS mobile phone and for data logging. All dialogs can be opened from the *Configuration* menu or using the icons in the toolbar.

DATS Configuration

The *DATS Configuration* dialog selects the GSM band and sets the RF parameters for the connection between the R&S CMU and the mobile under test. It is opened via *Test – Configuration – Signalling* (*Ctrl + ENTER*) or by clicking the *Signalling Config* icon.

The dialog is disabled while a test is running. The settings are stored for future use when the DATS is closed. They are displayed at the beginning of the message list when the DATS is started:

```
R&S CRTU-GD03 v2.30 (build 310)
Signalling: (E)GPRS (1+1) - CS4 - GSM 900
AutoLog: Not Enabled
```

For a detailed description of the GSM bands and RF parameters refer to the operating manual for the GSM-MS network options, stock no. 1115.6088.12.

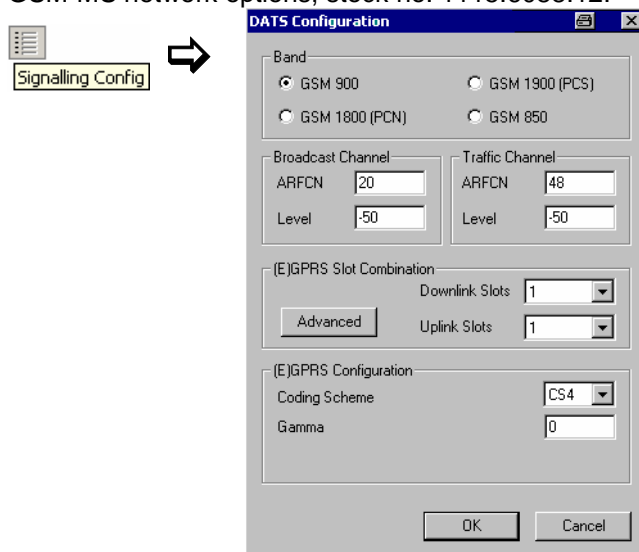


Fig. 4: DATS configuration dialog

Band The GSM band selected in the upper panel of the configuration dialog must be in accordance with the GSM band used for the connection between the R&S CMU and the mobile under test; see section [DATS Configuration](#) on p. 19 ff. The four bands correspond to the following R&S CMU software options:

<i>GSM 900</i>	<i>GSM 900-MS</i>	<i>R&S CMU-K21</i>
<i>GSM 1800 (PCN)</i>	<i>GSM 1800-MS</i>	<i>R&S CMU-K22</i>
<i>GSM 1800 (PCS)</i>	<i>GSM 1800-MS</i>	<i>R&S CMU-K23</i>
<i>GSM 850</i>	<i>GSM 850-MS</i>	<i>R&S CMU-K24</i>

RF and (E)GPRS parameters In contrast to the GSM band the RF parameters below overwrite the current R&S CMU settings. They are needed because the *MS Signal*, *BS Signal*, and *Network* tabs of the R&S CMU's *Connection Control* menu are disabled while an application Test is running.


The following two parameters can be defined separately for the control channel (*Broadcast Channel*, BCCH) and the *Traffic Channel* (TCH) of the R&S CMU's BS Signal.

ARFCN Absolute RF Channel Number. The ARFCN range depends on the selected GSM band.

Level RF signal level in dBm.

The following parameters are related to (E)GPRS multislot operation:

Slot Configuration Number of downlink and uplink timeslots used. It is possible to select a single uplink and downlink timeslot or specify *Advanced* configuration (for single slot or multislot mode). The *Advanced* button opens the *Advanced Multislot Configuration* dialog to select the individual downlink and uplink slots corresponding to the Multislot Class of the mobile under test. Timeslots that are incompatible with the selected multislot class are disabled (grayed) in the dialog.

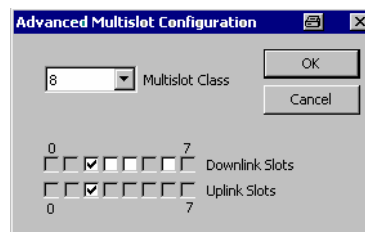

Coding Scheme Coding scheme for downlink traffic data channels: Coding schemes CS1 to CS4 for GPRS or modulation and coding schemes MCS1 to MSC4 for EGPRS.

Gamma Channel-dependent uplink power control parameter Γ_{ch} . The gamma scale is analogous to the Power Control Level (PCL) scale for circuit switched connections; it comprises values between 0 and 31.

AutoLog Configuration

The *AutoLog Configuration* dialog specifies how much information is kept in the log memory and how often it is saved to a log file. It is opened via *Test – Configuration – AutoLog (Ctrl + L)*. As an alternative to automatic logging, log files can be created manually using the *File* menu commands described in section *Main Window Controls* on p. 25 ff.

The dialog is enabled even while a test is running; the settings take effect almost immediately (within 15 seconds). The settings are stored for future use when the DATS is closed. They are displayed at the beginning of the message list when the DATS is started:

```
R&S CRTU-GD03 v2.30 (build 310)
Signalling: (E)GPRS (1+1) - CS4 - GSM 900
AutoLog: Not Enabled
```

Ctrl + L →

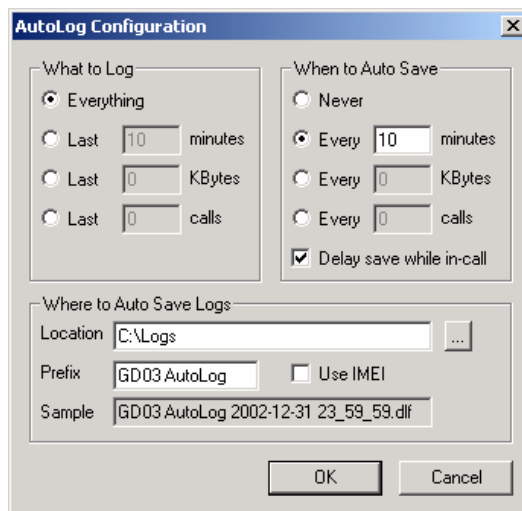



Fig. 5: AutoLog configuration dialog

What to Log


Specifies the amount of data that the DATS keeps in memory. The data in the memory can be saved automatically according to the *Auto Save* options or manually using the commands in the *File* menu. The memory contains the information displayed in the message list of the DATS main application window plus detailed information about all the messages. It is cleared automatically after the data has been saved to a log file.

Everything The DATS keeps the entire information of the current test session, no matter how many individual test runs have been started (*Test – Run*). If the data is never saved to a file the required storage capacity increases with the duration of the test session.

Last xxx minutes The DATS only keeps the information recorded in a moving time window of the specified duration. Older information is discarded.

Last xxx kBytes The DATS keeps up to a specified number of kBytes in memory. Once this limit is exceeded, newer information replaces the oldest one. The current number of bytes in memory is shown in the toolbar: 

Last xxx calls The DATS keeps up to a specified number of connections in memory. Once this limit is exceeded, the information about the oldest connection is discarded as soon as a new connection is released (PDP context deactivation for (E)GPRS connections).

When to Auto Save	Specifies the period of the auto save mechanism in order to divide the logged information into portions. The log file always contains the full contents of the current memory; the auto save period is independent of the <i>What to Log...</i> settings.
<i>Never</i>	Auto save is deactivated; log files can be generated manually using the commands in the <i>File</i> menu.
<i>Every xxx minutes</i>	A new log file with a new name is created approx. every xxx minutes. Log files are distinguished by the time stamp in their file names; see below.
<i>Every xxx kBytes</i>	A new log file is created after a specified amount of data has been acquired. The current number of bytes in memory is shown in the toolbar: 
<i>Every xxx calls</i>	A new log file is created after a specified number of connections have been set up and released (PDP context deactivation for (E)GPRS connections).
<i>Delay save...</i>	Extends the specified auto save period until the current connection has been released. This option ensures that the messages from a single connection are never split over several log files.



The DATS always creates a log file before it is closed (File – Exit) unless When to Auto Save: Never is active. To save the information acquired in an entire session to a single file, select one of the other auto save options and specify a sufficiently large number (e.g. every 1000 calls).

Where to Auto Save Logs

Specifies the directory on the PC and the name of the log files. The auto save mechanism can create a large number of log files. To ensure that they can be sorted in chronological order, the file names consist of a user-defined prefix complemented by the current date and time. The file extension *.dlf is automatically annexed to the file name.

With *Use IMEI*, the International Mobile Equipment Identity evaluated by the R&S CMU replaces the prefix.

Note: *The R&S CMU must connect to the mobile in order to evaluate its IMEI. When the mobile is exchanged, the previous IMEI is still used until a new connection is set up.*

Traffic Window

The *Traffic Window* displays the real-time traffic data throughput during the current connection. It is opened via *View – Traffic Window (Ctrl + T)* or by clicking the *Traffic Window* icon.

The contents of the window are updated at approx. the same rate as the mobile's measurement reports, i.e. typically twice per second. They remain static after the end of the connection (PDP context deactivation); they are cleared at the beginning of the next connection.

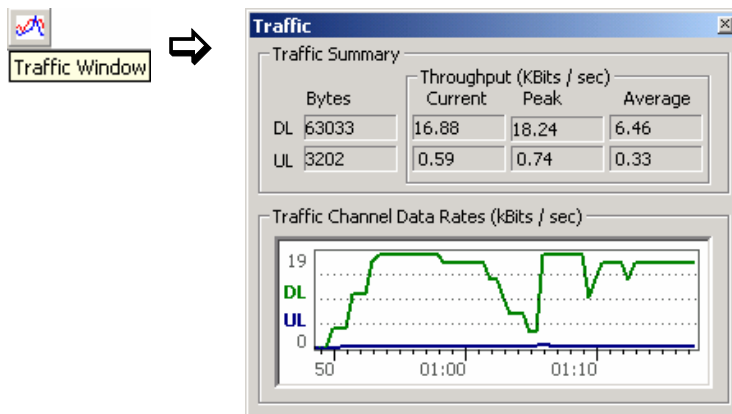


Fig. 7: Traffic Window

Traffic Summary

Statistical evaluation of the throughput in downlink (DL) and uplink (UL) direction:

Bytes Total number of bytes transferred since the beginning of the connection.

Throughput Data throughput in kbit/sec. The *Current* values are averaged over approximately 4 seconds. The *Peak* and *Average* values correspond to the maximum and average of all *Current* values since the beginning of the connection.

2D-Chart

The diagram in the lower part of the window visualizes the *Current* DL and UL data throughput as a function of time. The timing information across the x-axis is indicative rather than absolutely accurate.

Demo Tools

To test applications, the *DATS* can be provided with additional software tools written by means of the Application Programmers' Interface (API). Application tools are accessible from the *Tools* menu.

The *DATS* is shipped with a simple Mobile Terminated (MT) demo tool providing a basic test of the Short Message Service. This tool is opened by via *Tools – API Demo (MT Events)*.

Tools – API Demo

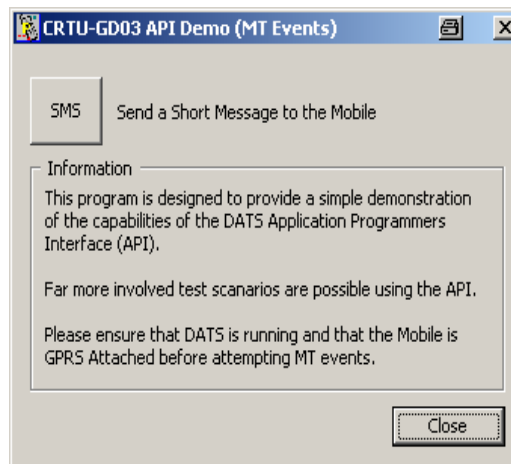


Fig. 8: API Demo

SMS

Sends a short message to the mobile. The text of the message is fixed and reads “This is a message sent by the R&S Data Application Test Suite”. The mobile must be (E)GPRS attached to receive the message. The DATS message list shows the following message sequence.

	0:02:08.782	GUI [API Connection ...]
	0:02:08.782	GUI [API Demo]
	0:02:08.788	GUI [API Initiated MT SMS]
DL	0:02:08.792	CP Data
DL	0:02:08.792	GUI [CP Data]
UL	0:02:09.475	CP Acknowledgement
UL	0:02:09.475	GUI [CP Acknowledgement]
	0:02:09.479	CP Acknowledgement
	0:02:09.479	GUI [SMS Message Sent]
UL	0:02:09.913	CP Data
UL	0:02:09.913	GUI [CP Data]
	0:02:09.916	CP Data
	0:02:09.917	GUI [SMS Message Received]
DL	0:02:09.921	CP Acknowledgement
DL	0:02:09.921	GUI [CP Acknowledgement]

Analysis Tool

The *Analysis Tool* is the log file viewer of the DATS.

- If it is opened via *View – Analysis Tool (Ctrl + A)* or by clicking the *Analysis Tool* icon, it shows the logged information acquired in the current session since the last log file was saved.
- Alternatively it is possible to launch the *Analysis Tool* from the DATS program group in the *Start* menu or simply double-click a log file (*.dlf).

The *Analysis Tool* can display several log files in parallel.

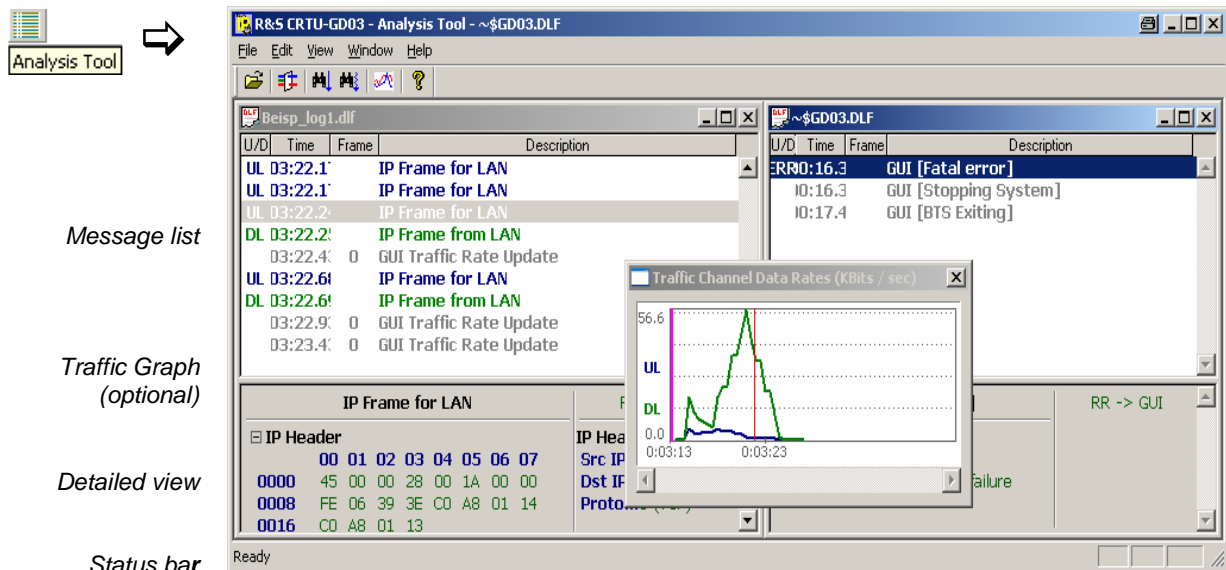


Fig. 9: Analysis Tool


Log files can be created manually using the *File* menu commands described in section [Main Window Controls](#) on p. 25 ff. As an alternative the DATS can automatically create log files in periodic intervals; see [AutoLog Configuration](#) on p. 29 ff. The current amount of data in the DATS memory (and thus the expected size of the log files) is monitored in the toolbar.

The main window of the *Analysis Tool* provides the following control and display elements:

- The title bar shows the application's name. If a log file is viewed, the file name is displayed in addition. The temporary file name `~$GD03.dlf` indicates that messages of the current DATS session are viewed. The control elements in the title bar provide standard Windows functionality.
- The menus and the corresponding icons control all tasks performed by the *Analysis Tool*; see section [Main Window Controls](#) below.
- The central area contains the message list for each of the log files viewed, the details for a selected message and the optional *Traffic Graph*; see section [Message Display](#) on p. 34 ff.
- The status bar displays the tooltip of the currently selected menu command or icon.

Main Window Controls

The main window provides five menus to control all tasks performed by the DATS. The icons below the menu bar are shortcuts to frequently used menu commands. Equivalent keyboard shortcuts are also shown in the menus.

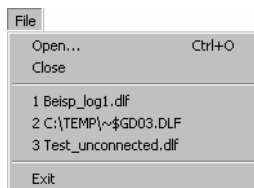

Opens or closes log files and closes the application:

- *Open* calls up a standard *Open File* dialog to select a log file (*.dlf).
- *Close* closes the active log file.
- The log file list displays and re-opens up to four recently analyzed log files.
- *Exit* closes the *Application Tool*.


Note: It is possible to open and analyze several log files simultaneously. The *Analysis Tool* provides the standard Windows functionality for file handling, in particular the controls in the title bar of the windows and the commands in the Window menu.



Message Filter

Changes the contents of the message list:

- *Message Filter* opens a dialog providing filter options for the analyzed messages; see section [Message Display Filter](#) on p. 35.

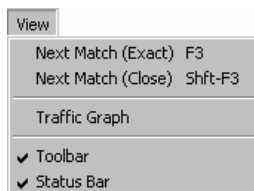

Exact Match



Close Match




Traffic Window

Provides search and evaluation tools and customizes the main application window. The following search options are enabled while a particular message is selected in the message list:


- *Next Match (Exact)* searches for the next message of exactly the same type (example: if an *IP Frame from LAN* message is selected, then the next exact match is also an *IP Frame from LAN* message). If a message is found, it is displayed on a dark blue background, and the message contents appear in the detailed view below the list.
- *Next Match (Close)* searches for the next message of similar type (example: if an *IP Frame from LAN* message is selected, then the next exact match can be an *IP Frame from LAN* message but also an *IP Frame for LAN* message).
- *Traffic Graph* displays the real-time traffic data throughput during the connection; see section [Traffic Graph](#) on p. 36 ff.
- *Toolbar* shows or hides the toolbar. Hiding the toolbar enlarges the space for the message list and the detailed view.

- *Status Bar* shows or hides the status bar; see Fig. 9 on p. 32. Hiding the status bar enlarges the space for the message list and the detailed view.

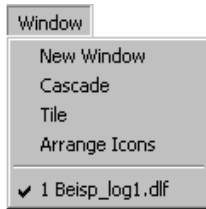

Provides commands for arranging and handling the windows for different log files:

- *New Window* creates a new window and displays the contents of the active log file in this window. The message lists in the two windows can be scrolled independently.
- *Cascade* arranges all opened windows in an overlapped fashion.
- *Tile* arranges all opened windows in non-overlapped tiles.
- *Arrange Icons* arranges the icons for minimized windows across the bottom of the main window. An open log file window may cover and hide the icons.
- The numbered list shows all open log file windows. The active window is displayed with a checkmark.

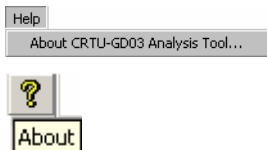

Provides information on the application:

- *About...* opens a dialog indicating the current version of the analysis tool, a link to the Rohde & Schwarz internet and copyright information.

Message Display

The central area of the main window shows the message list and the detailed view below. The amount of messages can be reduced using the [Message Display Filter](#); see below.

U/D	Time	Frame	Description
	:00:12.67		GUI [BTS Starting]
	:00:21.70		GUI [Connected to LAN]
	:00:35.91		GUI [BTS Ready]
UL	:02:50.23		Attach Request
UL	:02:50.23		GUI [Attach Request]
DL	:02:50.28		GMM Identity Request
DL	:02:50.28		GUI [GMM Identity Request]
UL	:02:50.85		GMM Identity Response

Attach Request								RR -> MM		
	00	01	02	03	04	05	06	07	Channel	PDTCH
0000	08	01	02	E5	40	73	07	02	Timeslot	0
0008	05	F4	87	65	43	21	00	F1	SAPI	0
0016	10	00	01	01	08	15	F3	82		
0024	33	54	2A	32	26	44	A1	90		
0032	17	16	90							

Fig. 10: Message display

Message list

In the message list the recorded or generated messages are displayed with their direction (UL for uplink messages, DL for downlink messages), the *Time* when they were recorded, the *Frame* no. (if applicable), and the message name and type (*Description*). Uplink messages are blue, downlink messages are green, GUI messages are gray. The following message types may occur:

GUI messages

Messages containing measured values that can be displayed in graphical views (*Traffic Rate Updates*) or additional status information/comments generated by the DATS

<i>Signalling messages</i>	Signalling and layer 3 messages exchanged between the R&S CMU and the mobile.
<i>LAN Traffic</i>	IP frames or PPP frames transferred over the LAN.

Detailed view

The contents of detailed view depend on the message type:

- GUI comments are displayed with their description; GUI *Traffic Rate Updates* contain the throughput statistics (see section [Traffic Graph](#) on p. 36 ff.).
- Signalling messages are displayed as an array of bytes, together with the logical channel, timeslot and SAPI information, if appropriate.
- For LAN traffic messages, the total frame contents are displayed. The contents of the different frame components (e.g. the IP header information, TCP header information, protocol data) are displayed separately.

Message Display Filter

The *Message Display Filter* dialog sets criteria for the display of messages in the *Analysis Tool*. It does not modify the contents of the analyzed log file. The dialog is opened via *Edit – Message Filter (Ctrl + F)* or by clicking the *Message Filter* icon.

The dialog is enabled as soon as a log file is open. The filter options can be used to reduce the amount of data displayed and focus on the information actually needed. By default all messages in the log file are displayed. To indicate that the filter settings have been changed so that the displayed message list may not be complete, the message *[Filtered]* appears in the title bar of the *Analysis Tool*, the *Message Filter* icon in the toolbar is highlighted, and a checkmark precedes the *Edit – Message Filter* command.

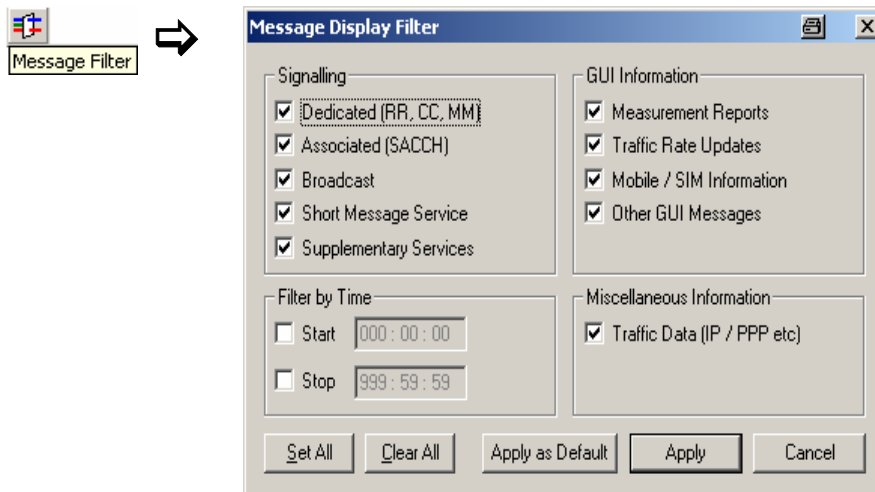


Fig. 11: Message Display Filter dialog

Signalling

Selects different classes of signalling messages exchanged between the mobile and the R&S CMU and recorded. The *Associated (SACCH)* messages are not relevant for (E)GPRS connections.

GUI Information

Selects the GUI information. The GUI information consists of two message types:

- Messages containing measured values that can be displayed in graphical views (*Traffic Rate Updates*)
- Additional status information or comments that the DATS stored in the log file (*Other GUI Messages*).

The *Measurement Reports* and the *Mobile/SIM Information* are not relevant for (E)GPRS connections.

Filter by Time	Discards all messages except the ones recorded in the selected time interval.
Miscellaneous Information	Selects the data transferred over the LAN including IP and PPP frames for display.
Apply as Default	Stores the current filter settings as a default configuration which will be activated automatically when the <i>Analysis Tool</i> is opened again.

Traffic Graph

The *Traffic Graph* displays the real-time traffic data throughput stored in the log file. It is opened via *View – Traffic Graph* or by clicking the *Traffic Graph* icon.

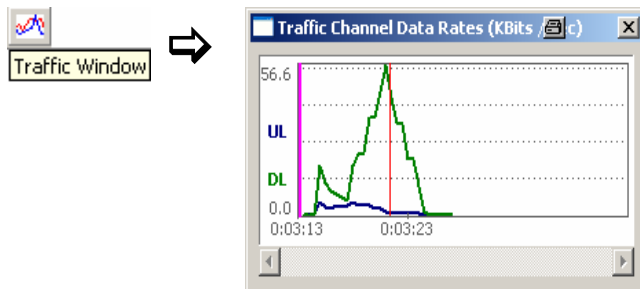



Fig. 12: Traffic Graph

2D-Chart The diagram visualizes the *Current* DL and UL data throughput as a function of time. Each throughput is plotted as a polygonal curve connecting the consecutive data rate values provided by the DATS. The graph can be scrolled and resized. Since the log file can contain several connections, a vertical magenta line marks the beginning of each connection.

The DATS updates the throughput values at approx. the same rate as the mobile's measurement reports, i.e. typically twice per second. Whenever this happens a GUI message *Traffic Rate Update* appears in the message list.

Marker line A mouse click places the vertical, red marker line to a particular position (time) in the graph. The marker line is synchronized with the message list:

- To find the message corresponding to a particular graph point (e.g. a point where the throughput was exceptionally poor), click on the graph point: the list is scrolled (if necessary) so that the corresponding *Traffic Rate Update* message appears on top or at the bottom of the view area.
- To find the graph point corresponding to a particular *Traffic Rate Update* message, click the message. The red marker line is moved to the point.
- Use the *Exact Match* search tool  to move from one *Traffic Rate Update* message to the next.

Detailed analysis

The detailed information for the *Traffic Rate Update* messages contain the current UL and DL rates in kbit/s (the values displayed in the graph, averaged over approx. 4 s), the total number of transferred bytes, the average throughput since the beginning of the connection, and the maximum attainable throughput according to the (E)GPRS configuration for the connection (see section [DATS Configuration](#) on p. 27). The measured rates are also displayed in the *Traffic Window* (see p. 30) while the session is recorded.

GUI Traffic Rate Update	
UL Rate	2.85 kBits / sec
DL Rate	46.19 kBits / sec
UL Total	2591 Bytes
DL Total	22949 Bytes
UL Session Average	2.96 kBits / sec
DL Session Average	26.22 kBits / sec
UL Maximum Attainable	86.40 kBits / sec
DL Maximum Attainable	86.40 kBits / sec

6 Further Reference Information

The present chapter contains background information about third-party utilities included with the DATS installation.

Web Server Lite

Web Server Lite is software tool for local web server tests on a Windows PC with no need for external servers. The server is automatically installed with the *Full* DATS installation and can be launched from the DATS program group (see [Sample Session](#) on p. 22 ff.). In contrast to commercial quality web servers to be run on an external computer equipped with a dedicated server operational software, Web Server Lite does not consume large amounts of system resources.

Note: *The performance of Web Server Lite is limited. In particular, it will not cope well with very complicated web pages or many concurrent users.*

During the installation Web Server Lite creates the following directories and files:

C:\GD03_INET	The root directory for the web server.
C:\GD03_INET\index.html	The default file for the web server.
C:\GD03_INET\images	Directory used for images.
C:\GD03_INET\images\R&SLogo.jpg	An image used within index.html.

After Web Server Lite is started it will accept HTTP requests. To test this open the *Internet Explorer* on your PC and enter the following address:

http://localhost

The default web site is a file called `index.html`; see above. The web server can be tested from a remote machine as well by replacing `localhost` with the name of your PC running Web Server Lite.

7 Troubleshooting

The following list helps you to solve problems that you may encounter during DATS installation or mobile connection.

Table 1 Possible problems and solutions

Symptoms	Solution
During installation	
Installation of the operational software fails	Check your drive mapping and ensure that drives D:, L:, Q:, and T: are available for the DATS application
Error message "...RS_WanConnect.dll was not found..." during DATS installation	Install the operational software in a first step, then proceed to the DATS installation.
Data calls and GPRS	
Error message: <i>Generic failure connecting to LAN</i>	This generally indicates that either the WAN adapter or the network connection has not been set up correctly; refer to section Software Installation on p. 6 ff.
Error message: <i>Timeout connecting to LAN</i>	This generally indicates that the LAN connection was not shut down correctly on the previous occasion that it was used. Simply trying again will usually solve the problem.
Error message: <i>Authentication failure connecting to LAN</i> or mobile reports: <i>Invalid user</i>	Problem with the user name or password. Ensure that the automatically generated <i>rsuser</i> is allowed to connect to the PPP Wan Adapter connection; see section PPP WAN Adapter Configuration on p. 7 ff.
Data connections	
Mobile phone is unable to connect to local server (e.g. Web Server Lite)	The Web Server Lite must be launched from the start menu; see section Sample Session on p. 22 ff.
Mobile phone is unable to connect to remote server	Use a ping command to check whether the remote server is online; see section Starting a Test and Verifying the Connection on p. 20 ff.

8 Index

A

Advanced Multislot Configuration	27
Analysis Tool.....	32
main window	32
API Demo.....	31
ARFCN.....	27
AutoLog Configuration dialog	29

B

Band selection.....	27
---------------------	----

C

Coding scheme	27
Configuration	
DATS.....	19
R&S CMU	16
Connection	
R&S CMU – PC.....	14
verify	20

D

Data Application Test Suite	25
installation.....	6
DATS	25
installation.....	6
main window	25
DATS configuration	19
DATS Configuration dialog.....	27

E

Edit menu (Analysis Tool).....	33
ETHERNET USU connector.....	5

F

File menu	
Analysis Tool.....	33
DATS.....	25

G

Gamma	27
GSM band.....	19
GSM software options	5

H

Help menu	
Analysis Tool.....	33
DATS.....	25

I

IMEI	30
Installation.....	6
IP address	
network adapter	11, 13

PC.....	14, 15
R&S CMU.....	18

L

Level (BS signal).....	27
------------------------	----

M

Message Display Filter dialog	35
Multislot Class.....	27

O

Operational Software	6
Options (required).....	5

P

PC requirements.....	5
PPP WAN adapter	
configuration (Windows 2000).....	11
configuration (Windows XP).....	8
installation	6
prostack.ini	19
Putting into operation	14

R

R&S CMU components.....	13
R&S CMU configuration.....	16
R&S CMU requirements.....	5
R&S CMU-Z92 (option).....	5
Requirements (hardware, software)	5
rsuser	7

S

Slot Configuration	27
Software installation.....	6

T

Test menu (DATS).....	25
Tools menu (DATS).....	25
Traffic Graph.....	36
Traffic Window.....	30

U

Use IMEI.....	30
---------------	----

V

View menu	
Analysis Tool.....	33
DATS.....	25

W

Web Server Lite.....	38
Window menu (Analysis Tool).....	33