

SECTION 5 -- LATE MODEL UPDATE

GENERAL DESCRIPTION	5-1
CONTROLS AND SWITCHES	5-2
REAR APRON CONNECTIONS	5-5
BLOCK DIAGRAM	5-7
CIRCUIT DESCRIPTION	5-8
MAINTENANCE AND ALIGNMENT	5-17
OPTIONAL INSTALLATIONS	5-20
PARTS LIST	5-25

HIGH—PERFORMANCE HF TRANSCEIVER YAESU FT-101ZD



GENERAL DESCRIPTION

The FT-101ZD is a precision engineered, high-performance HF transceiver of advanced design, providing all band (160 - 10 meters) operation on SSB, CW, and AM* or FM*. This transceiver operates at an input power of 180 watts.

Advanced features include digital plus analog frequency display, continuously variable IF bandwidth (300 Hz - 2.4 kHz), a superb noise blanker with threshold adjustment, and an effective RF speech processor. The receiver boasts excellent dynamic range, despite its high sensitivity, for reliable operation in the presence of strong signals.

Built into every FT-101ZD are VOX, semi-break-in CW with sidetone, a 25 kHz crystal calibrator, selectable AGC, and a 10 dB/20 dB RF attenuator in the incoming signal path.

The FT-101ZD has been engineered for use. Controls and switches are laid out in an efficient and logical manner, so you won't have to fumble for a switch or knob when you need it quickly. And Yaesu designers have now made it possible for you to switch sidebands without recalibrating the display.


* option

All circuits, except the transmitter driver and final amplifier stages, are solid state. Solid state devices provide extremely high reliability and high component density, along with low power drain. The FT-101ZD may be operated from a variety of AC voltages, from 100 to 234 volts. A DC-DC converter, providing operation from a 13.5 VDC power source, is an available option.

For the economy FT-101Z, the counter unit is an available option, providing digital display capability, should you want to upgrade your transceiver at a later date. Optional equipment on both models FT-101ZD and FT-101Z are the cooling fan, DC-DC converter, 600 Hz/350 Hz CW filter, AM unit, FM unit, and microphone.

A diecast front panel, and the heavy-duty case, provide maximum protection for your transceiver. If the ratings of this unit are not exceeded, it will provide the owner with many years of satisfying operation. Please read this manual carefully before commencing operation, in order to derive maximum satisfaction from your new YAESU transceiver.

CONTROLS AND SWITCHES

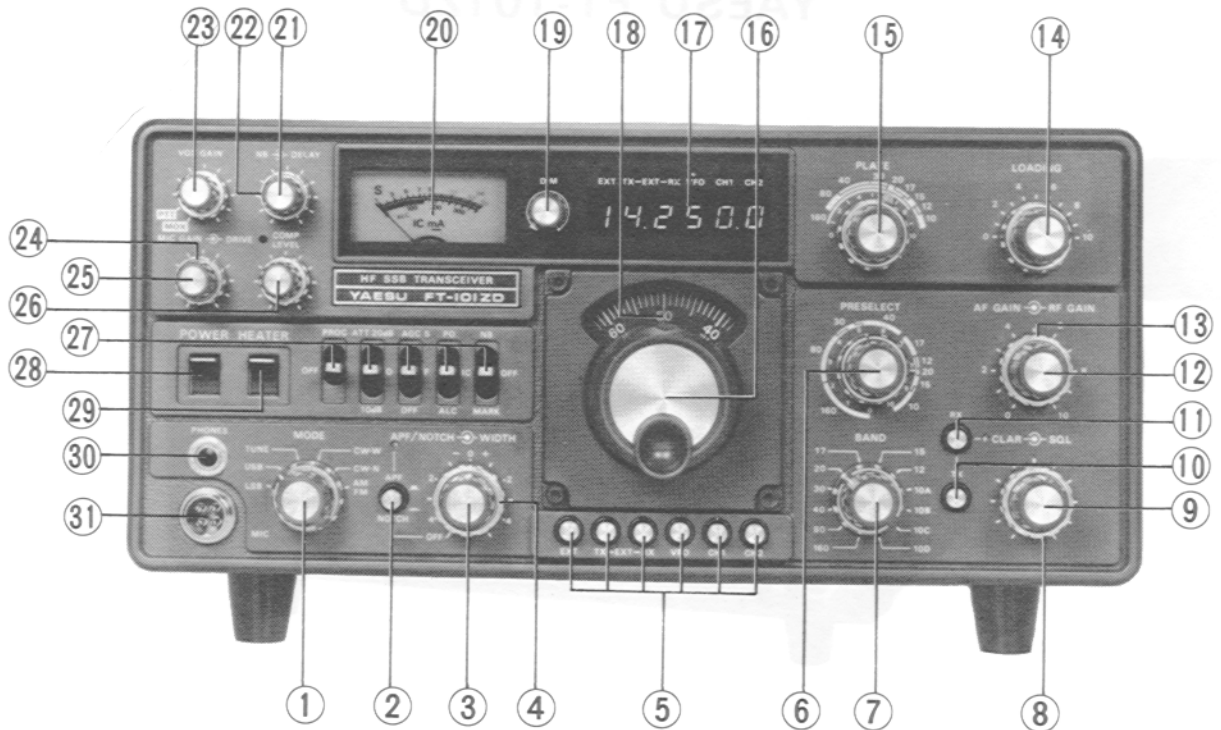

(1) MODE

Selection of LSB, USB, CW-W (SSB filter), CW-N (optional CW filter) and AM* or FM* is provided.

(2) APF/NOTCH switch

This switch selects either the Audio Peak Filter (APF) or the Audio Notch Filter. When pressed, the Audio Notch Filter function is activated.

(3) APF/NOTCH

The APF/NOTCH control varies the frequency response of the audio peak/notch filter. The peak/notch filter may be varied over the range 350 Hz – 1500 Hz. When rotated into the OFF position, the APF/NOTCH function is switched off.

(4) WIDTH

This control varies IF bandwidth (except on AM and FM) from 2.4 kHz down to 600 Hz.

(5) SELECT switches

When using the optional FV-101DM synthesized, scanning external VFO, these switches determine which component will control the transmit, receive, or transceive frequency.

EXT..... This switch, when pressed, shifts control of the transceive frequency to the external VFO.

TX EXT... This switch, when pressed, shifts control of the transmit frequency to the external VFO.

RX EXT... This switch, when pressed, shifts control of the receive frequency to the external VFO.

VFO..... This switch selects control of the transceive frequency on the FT-101ZD internal VFO.

CH1, CH2... These switches select optional fixed channels, transceive only.

(6) PRESELECT

The preselector control peaks the RF and IF stages for the frequency in use.

(7) BAND

The bandswitch selects the frequency band in use: 160 - 10 meters.

(8) SQL

The SQL (Squelch) control will silence the receiver until a signal is received. The SQL control can be used only when the FM unit is installed.

(9) CLARIFIER

The clarifier control allows offset of ± 2.5 kHz from the frequency established by the main tuning dial.

* with optional unit

(10) (11) CLARIFIER SELECT switches

Press the RX button for offset of the receive frequency.

Press the TX button for offset of the transmit frequency.

Press both buttons for offset of the transceive frequency.

(12) AF GAIN

The AF GAIN control varies the output level of the audio amplifier stages. Clockwise rotation increases the audio output level.

(13) RF GAIN

The RF GAIN control varies the gain of the RF and IF stages. Clockwise rotation increases the gain of these stages.

(14) LOADING

This control tunes the output circuit of the final amplifier pi network to match the feedpoint impedance of the load.

(15) PLATE

This control tunes the plate circuit of the final amplifier.

(16) MAIN TUNING KNOB

Rotation of this knob selects the operating frequency, in conjunction with the setting of the bandswitch. One revolution of the dial produces a frequency change of approximately 17 kHz.

(17) DIGITAL DISPLAY

The digital display reads out the operating frequency, with resolution to 100 Hz. The display unit is built into the FT-101ZD, and is an available option for the FT-101Z.

(18) ANALOG DIAL

The analog dial allows readout of the operating frequency to better than 1 kHz. The combination of the precision dial mechanism and drive unit provides zero backlash at slow tuning rates.

(19) DIM

This control allows dimming of the meter and dial lamps.

(20) METER

The meter displays final amplifier cathode current (IC), relative power output (PO), and ALC feedback voltage.

(21) NB

This control varies the threshold point for the noise blanker, and should be set to the minimum point that provides the desired blanking action.

(22) DELAY

This control sets the delay time for the VOX relay. For voice-actuated SSB, or semi-break-in CW, the operator may select the delay time most suitable for his or her operating habits.

(23) VOX GAIN

The threshold level for the VOX (voice operated relay) system can be varied using this control. In the PTT position, PTT (push to talk) control is provided, for relay control via the microphone PTT switch or footswitch.

(24) DRIVE

This control sets the carrier level for CW/AM and tuning purposes. When the RF processor is ON, this control varies the RF output on SSB, as well.

(25) MIC GAIN

This control sets the output level of the microphone amplifier stage. Clockwise rotation increases the mic gain level.

(26) COMP LEVEL

This control varies the compression level for the built-in RF speech processor. The processor does not function in the AM/FM mode.

(27) FUNCTION switches

PROC This switch activates the RF speech processor.

ATT This switch allows the insertion of 10 or 20 dB attenuators in the incoming signal path.



AGC S/F/OFF . . This switch allows selection of the desired AGC decay time. In the OFF position, the AGC is switched off, and the S-meter will not function.

PO/IC/ALC In the PO position, relative power output is displayed on the meter. In the IC position, final amplifier cathode current is displayed. In the ALC position, ALC voltage is displayed. Regardless of the setting of the meter switch, the meter functions as an S-meter on receive.

NB/MARK In the NB position, the noise blander is activated. In the MARK position, the internal crystal calibrator is activated.


(28) POWER

This is the main ON/OFF switch for the transceiver.

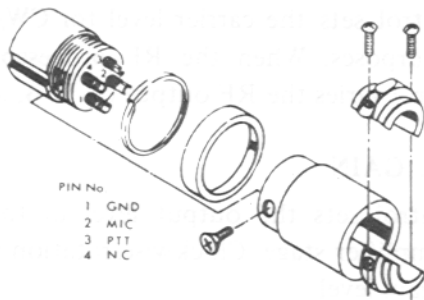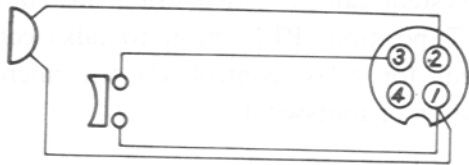

- PIN No.
 1 GND
 2 MIC
 3 PTT
 4 NC

Mic plug

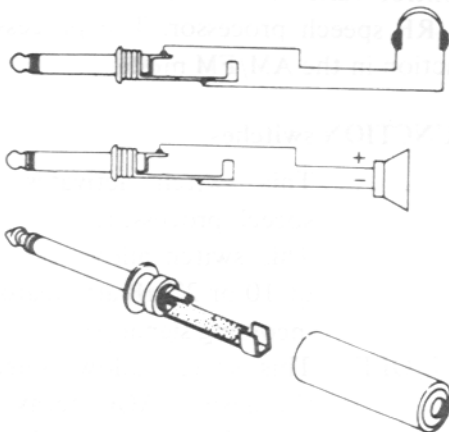

Headphone and external speaker plug

(29) HEATER


With the HEATER switch on, heater voltage is applied to the driver and final amplifier tubes. This switch may be turned off during periods of RX, when energy conservation is critical.

(30) PHONES

This is a standard 1/4" phone jack for use with headphones.

(31) MIC

This is a 4 conductor jack for microphone and PTT input.




Key plug




- PIN No.
 1 HEATER
 2 HEATER
 3 NC
 4 NC
 5 NC
 6 NC
 7 ALC
 8 GND
 9 TX GND
 10 RX GND
 11 NC

ACC plug

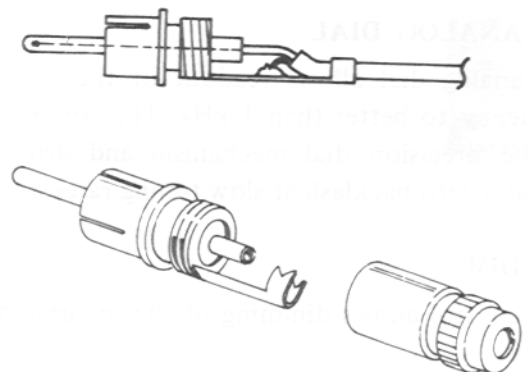

Pin plug

REAR APRON

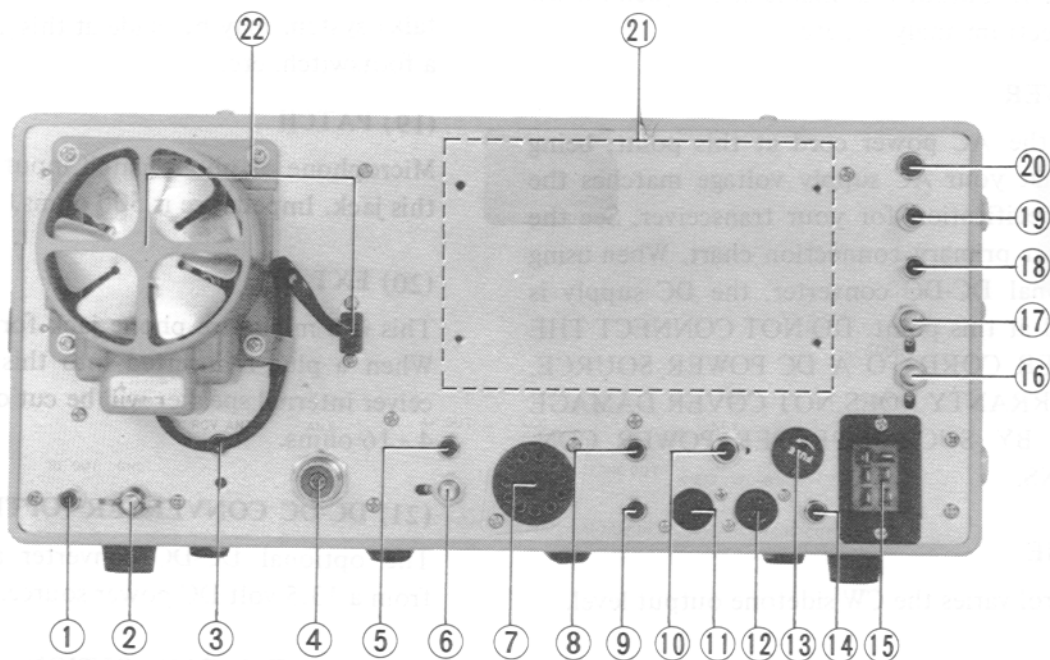

(1) RF OUT

RF output of 3 volts RMS is available at this jack for use with a transverter. Output is from the driver stage.

(2) GND

For best transceiver performance, as well as protection from electrical shock, a good ground connection should be made at this point, using a heavy, braided wire of the shortest length possible.

(3) RCV ANT

This jack is switched in parallel with the ANT jack on receive, for use with an external receiver.

(4) ANT

Standard "UHF" connector for the antenna.

(5) AF OUT

This is an audio output jack, providing 200 mV of audio output for recording purposes. This jack is not disabled by insertion of a headphone or speaker plug into their respective jacks.

(6) PO ADJ

This control adjusts the relative power output meter.

(7) ACC

ALC voltage and relay connections can be made through the accessory jack.

Please insert the ACC plug at all times, to provide heater voltage for the final amplifier tubes.

(8) TONE OUT

The CW sidetone may be fed to an external receiver through this jack.

(9) A TRIP IN

Anti-trip input from an external receiver may be made via this jack, to prevent the receiver audio output from tripping the FT-101ZD VOX.

(10) KEY

The CW key may be connected at this point. Key-up voltage is 7 volts, and key-down current is 1.5 mA. Be sure your electronic keyer's output switch will handle these levels.

(11) EXT VFO A

This is a 8 pin DIN jack for interconnection to the FV-101DM external digital VFO.

(12) EXT VFO B

This is a 6 pin DIN jack for interconnection to the FV-101Z, FV-901DM and FV-101DM external VFO.

(13) FUSE

This is the fuse holder. For 100 - 117 volts, replace with only a 5 amp fuse. For 200 - 234 volts, use a 3 amp fuse. Replace fuses only with a fuse of the proper rating.

(14) IF OUT

Wideband IF output is available at this jack for use with a spectrum analyzer, etc.

(15) POWER


Connect the AC power cord at this point, being certain that your AC supply voltage matches the voltage specification for your transceiver. See the transformer primary connection chart. When using the optional DC-DC converter, the DC supply is connected at this point. **DO NOT CONNECT THE AC POWER CORD TO A DC POWER SOURCE. OUR WARRANTY DOES NOT COVER DAMAGE CAUSED BY SUCH IMPROPER POWER CONNECTIONS.**

(16) TONE

This control varies the CW sidetone output level.


(17) A TRIP

This control varies the level of the VOX anti-trip circuit.

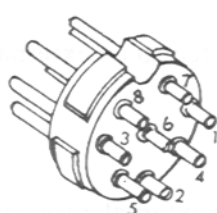


- PIN No
- 1 12V
 - 2 USB 8V
 - 3 VFO 6V
 - 4 +500kHz SHIFT
 - 5 LSB 8V
 - 6 TX EXT
 - 7 D VFO OUT
 - 8 XCVR VFO IN

EXT VFO A

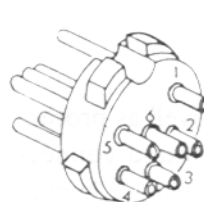

- PIN No
- 1 VFO OUT (FV-101Z, FV-901DM)
NC (FV-101DM)
 - 2 GND
 - 3 EXT 6V IN
 - 4 AGC IN (FV-901DM)
 - 5 TX 12V IN
 - 6 GND (FV-101Z, FV-901DM)
RX EXT (FV-101DM)

EXT VFO B

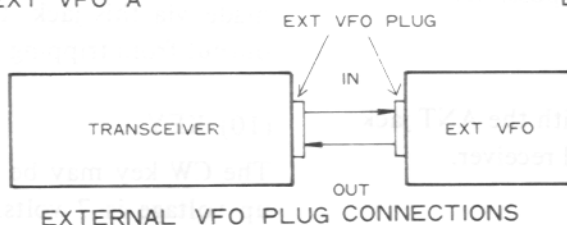

EXTERNAL VFO PLUG CONNECTIONS

(18) PTT

External control of the transceiver PTT (push to talk) system may be made at this jack, for use with a footswitch, etc.

(19) PATCH

Microphone or phone patch input may be made at this jack. Impedance is 500 ohms.

(20) EXT SP

This is a miniature phone jack for speaker output. When a plug is inserted into this jack, the transceiver internal speaker will be cut off. Impedance is 4 - 16 ohms.

(21) DC-DC CONVERTER (OPTION)

The optional DC-DC converter allows operation from a 13.5 volt DC power source.

(22) COOLING FAN (OPTION)

The optional cooling fan keeps the tubes at a safe operating temperature, when they are used in a hot environment. The 2 pin fan power jack supplies 100 volts to the fan.

ACCESSORIES

The following accessories are included with your new transceiver:

(1) AC POWER CORD 1 pc.

The power cord comes equipped with a 6-prong connector for connection to the AC supply.

(2) ACC PLUG 1 pc.

The accessory plug allows access to relay contacts and ALC voltage. The ACC plug must be inserted in the accessory socket for proper operation of the transceiver, whether or not external connections are being made.

(3) PHONO PLUG 2 pcs.

Use these plugs for interface with station equipment via the FT-101ZD rear panel.

(4) SPARE FUSES 5A (3A) 1 pc. each


When replacing fuses, be absolutely certain to use a fuse of the proper rating. **OUR WARRANTY DOES NOT COVER DAMAGE CAUSED BY IMPROPER FUSE REPLACEMENT.** For 100 - 117 volt AC operation, use a 5 amp fuse. For 200 - 234 volt operation, use a 3 amp fuse.

CIRCUIT DESCRIPTION


RECEIVER

RF UNIT (PB-2154)

The incoming signal is amplified by the RF amplifier, Q₁₀₁ (3SK51-03), a dual-gate MOS FET with excellent rejection of cross modulation and intermodulation. The amplified signal is fed to the Schottky barrier diode module, Q₁₀₂ (ND487C2-3R), where the RF signal is mixed with a local signal delivered from Q₁₀₄ (2SC2407), resulting in a first IF of 8.9875 MHz. The IF signal is then amplified by Q₁₀₃ (J310) and fed to J₁₀₁.

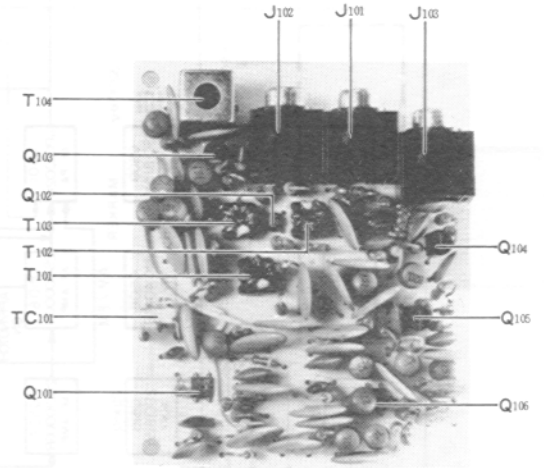

RF UNIT (PB-2154)

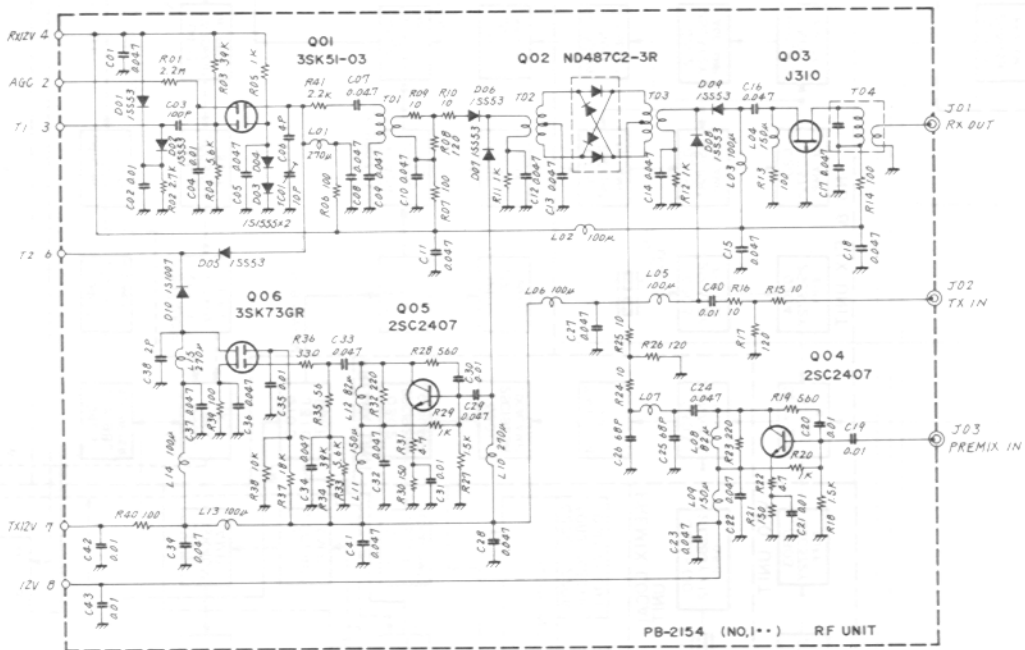



FM UNIT (PB-2219) OPTION

In the FM mode, the IF signal from the RF unit is fed to Q₂₅₀₁ (2SK125), where it is buffered and delivered through a 20 kHz band width monolytic filter, XF₂₅₀₁ (8.9M20A) to a mixer, Q₂₅₀₃ (2SC-535B). The IF signal applied to Q₂₅₀₃ is heterodyned with the 8532.5 kHz signal delivered from the local signal oscillator, Q₂₅₀₂ (2SC945Q), thus producing a 455 kHz IF signal. Next the 455 kHz IF signal passes through a ceramic filter, CF₂₅₀₁ (CFW455E) and is amplified by a two-stage amplifier, Q₂₅₀₄, Q₂₅₀₅ (2SC945Q), and then is fed through another ceramic filter, CF₂₅₀₂ (LFB15) to an amplifier limiter, Q₂₅₀₆ (μPC577H), where any amplified variations in the signal are removed.

A frequency discriminator consisting of CD₂₅₀₁ (SFD455S4) and D₂₅₀₃, D₂₅₀₄ (1S188FM) produces an audio output in response to a corresponding frequency shift in the 455 kHz IF signal. The discriminator output is first delivered through a de-emphasis circuit consisting of R₂₅₂₇, R₂₅₂₈ and C₂₅₂₃, and then sent to Q₂₅₁₀ (2SC945Q).

When no carrier is present in the 455 kHz IF, the noise at the discriminator output is amplified by Q₂₅₀₇ and Q₂₅₀₈, and detected by D₂₅₀₅, D₂₅₀₆ and D₂₅₀₇ (1S188FM) to produce a DC voltage. This voltage is applied to turn "on" Q₂₅₀₉ (2SC-945Q). The thermistor, TH₂₅₀₁ (STD-250) maintains the threshold level of the squelch control, corresponding to temperature changes.

While Q₂₅₀₉ is "on", the base of Q₂₅₁₀ (2SC-945Q) is grounded to quiet the audio amplifier. When a carrier is present the noise from the discriminator output is suppressed to turn "off" Q₂₅₀₉, preventing normal action of Q₂₅₁₀. The squelch control, VR₆₆, sets the squelch threshold level.

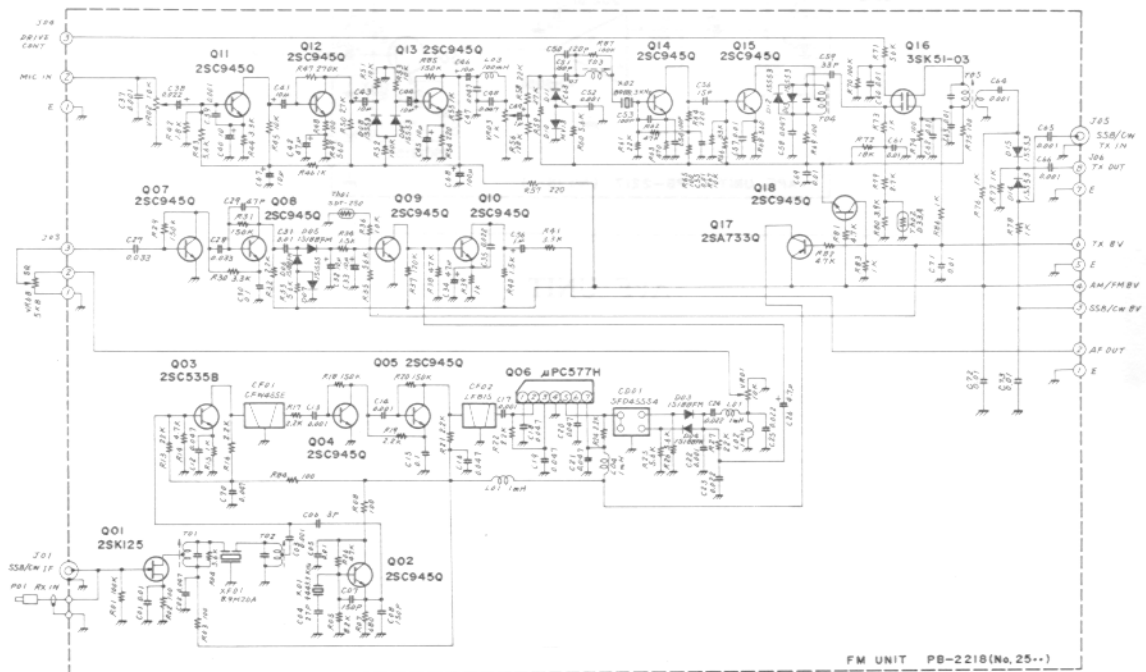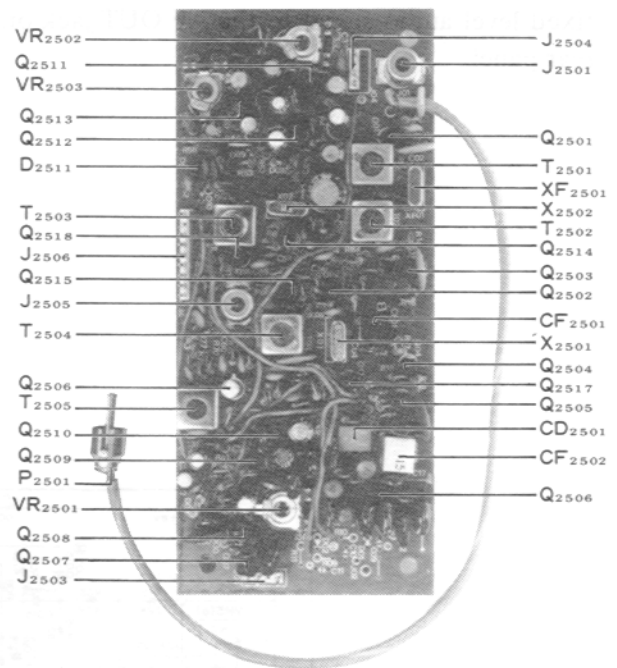


APF UNIT (PB-2217)

The APF UNIT is placed in the audio circuit by the APF/NOTCH switch on the front panel. For APF operation, a selective active filter is formed by Q_{1502(a)}, and the output is delivered to the AF UNIT through the AF GAIN control.

The sections of Q_{1502(b)} are also used for the high-Q notch filter. APF VR provides for adjustment of the center frequency of the audio peak and notch filter.

A portion of the audio signal at AF GAIN control is amplified by Q₁₅₀₁ (2SC1815Y) to provide a fixed level audio signal to the AF OUT jack on the rear panel.

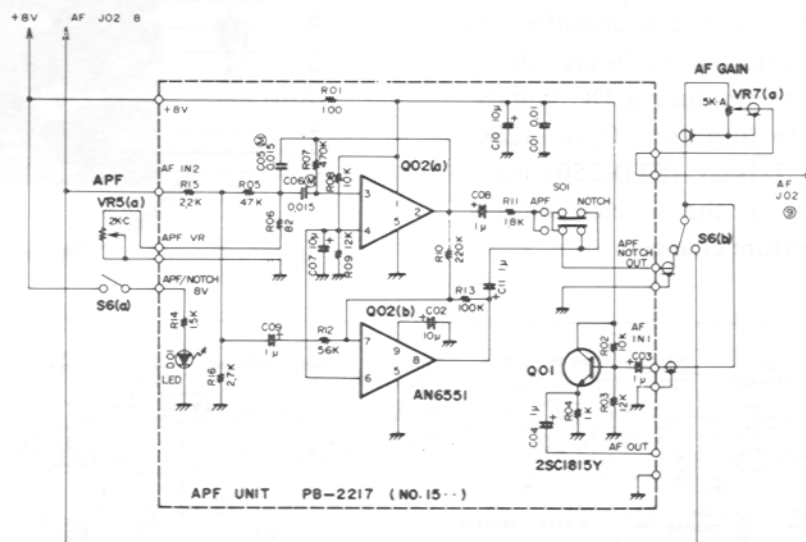

APF UNIT

RF UNIT (PB-2154)

The IF signal from J₁₀₂ is delivered to the Schottky barrier diode module Q₁₀₂ (ND487C2-3R), where the IF signal is mixed with a local signal delivered from Q₁₀₄ (2SC2407), producing the RF output signal. The RF signal is then amplified by Q₁₀₅ (2SC2407) and Q₁₀₆ (3SK40M), and fed through diode switch D₁₁₀ (1S1007) to the DRIVE UNIT.

FM MODE

The speech signal from the AF unit is fed through two stages of amplifier, consisting of Q₂₅₁₁ and Q₂₅₁₂ (2SC945Q), and this amplified signal is passed to the instantaneous deviation control (IDC) circuit, where both positive and negative peaks are clipped by D₂₅₀₈ and D₂₅₀₉ (1SS53). The output from the IDC is fed through Q₂₅₁₃ (2SC945Q), where the signal is amplified and then fed to the de-emphasis circuit, consisting of C₂₅₄₇, C₂₅₄₈ and L₂₅₀₃. This signal passes through VR₂₅₀₃, where determines the maximum deviation, to the modulator D₂₅₁₁ (FC63) while Q₂₅₁₄ (2SC945Q) oscillates at a crystal frequency of 8988.3 kHz, and its frequency is modulated by variable capacitance diode D₂₅₁₁. The output from Q₂₅₁₄ is amplified by Q₂₅₁₅ (2SC945) and Q₂₅₁₆ (2SK51-03) and then fed through a diode switch D₂₅₁₅ (1SS53) to pin 6 of J₂₅₀₆. The output from the terminal is delivered to the IF unit.



COMMON CIRCUITS

PREMIX LOCAL UNIT (PB-2153)

Crystal oscillators Q601–Q612 (2SC380Y) generate the premix local signal at the frequencies shown in Table 3. Diode switches D601–D612 (1S1555) select the proper local signal for the band in use. The local signal is then delivered to the PREMIX UNIT.

		XCO Frequency	PREMIX OUT Frequency
160m	X 601	15.9875MHz	10.4875~10.9875MHz
80m	X 602	17.9875MHz	12.4875~12.9875MHz
40m	X 603	21.4875MHz	15.9875~16.4875MHz
30m	X 604	24.4875MHz	18.9875~19.4875MHz
20m	X 605	28.4875MHz	22.9875~23.4875MHz
17m	X 606	32.4875MHz	26.9875~27.4875MHz
15m	X 607	35.4875MHz	29.9875~30.4875MHz
12m	X 608	38.9875MHz	33.4875~33.9875MHz
10m A	X 609	42.4875MHz	36.9875~37.4875MHz
10m B	X 610	42.9875MHz	37.4875~37.9875MHz
10m C	X 611	43.4875MHz	37.9875~38.4875MHz
10m D	X 612	43.9875MHz	38.4875~38.9875MHz


Table 3

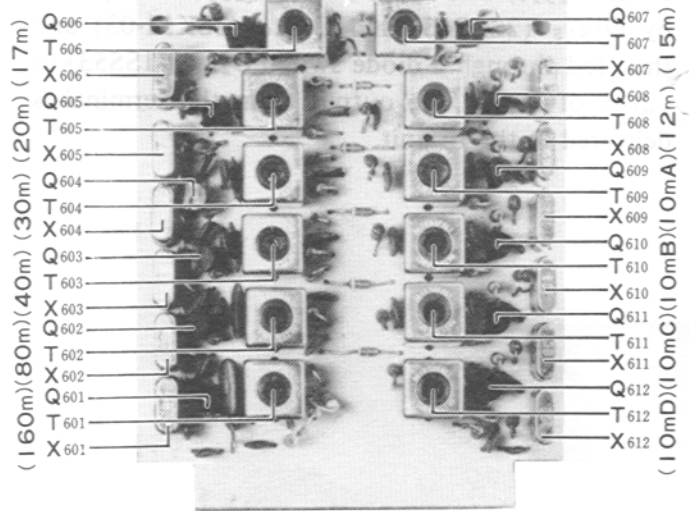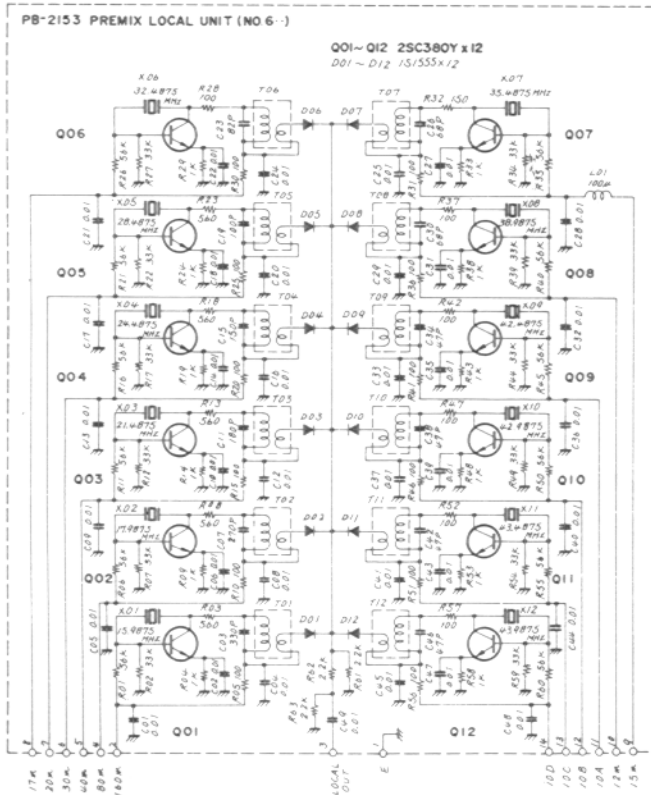


PREMIX LOCAL (XTAL) UNIT (PB-2153)

PREMIX UNIT (PB-2152)

The premix signal is produced at Q303 (SN76514N), a double-balanced mixer, where the premix local signal from Q601–Q612 is mixed with the VFO or crystal controlled 5 MHz signal. The premix output frequencies are shown in Table 3. The premix signal is passed through bandpass filter T301–T318, and amplified by Q301, Q302 (2SC1923R). The amplified signal is then fed to the RF UNIT, where the signal is further amplified by Q102 for delivery to the transmitter and receiver mixers.

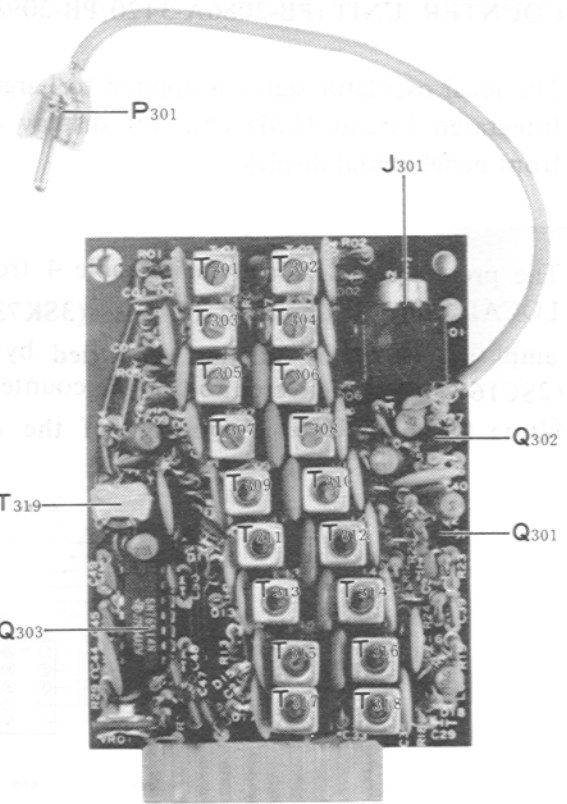

PREMIX UNIT (PB-2152)

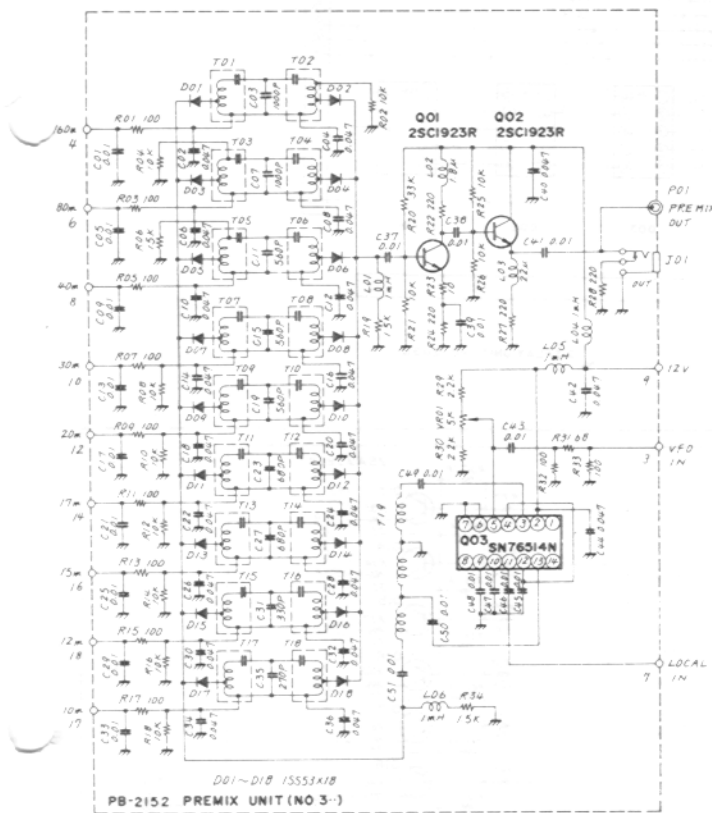

	Nominal Premix Local Frequency	L S B	U S B	CW, AM/FM
160m	10.4875–10.9875 (MHz)	10.486–10.986 (MHz)	10.489–10.989 (MHz)	10.4883–12.9883 (MHz)
80m	12.4875–12.9875	12.486–12.986	12.489–12.989	12.4883–12.9883
40m	15.9875–16.4875	15.986–16.486	15.989–16.489	15.9883–16.4883
30m	18.9875–19.4875	18.986–19.486	18.989–19.489	18.9883–19.4883
20m	22.9875–23.4875	22.986–23.486	22.989–23.489	22.9883–23.4883
17m	26.9875–27.4875	26.986–27.486	26.989–27.489	26.9883–27.4883
15m	29.9875–30.4875	29.986–30.486	29.989–30.489	29.9883–30.4883
12m	33.4875–33.9875	33.486–33.986	33.489–33.989	33.4883–33.9883
10m A	36.9875–37.4875	36.986–37.486	36.989–37.489	36.9883–37.4883
10m B	37.4875–37.9875	37.486–37.986	37.489–37.989	37.4883–37.9883
10m C	37.9875–38.4875	37.986–38.486	37.989–38.489	37.9883–38.4883
10m D	38.4875–38.9875	38.486–38.986	38.489–38.989	38.4883–38.9883


COUNTER UNIT (PB-2086A-3420/PB-2098)

The local oscillator signal is applied to Large-Scale Integrated Circuit (LSI) chip for display on the front panel digital display.


The premix signal as shown in Table 4 from the LOCAL unit, is amplified by Q2301 (3SK73). The amplified signal is further amplified by Q2303 (2SC1674) and delivered to the LSI counter chip, Q2312 (MSM9520RS). A portion of the output

from Q2303 is amplified by Q2304 (2SC1815Y) and fed to gate 2 of Q2301 controlling the gain of this amplifier.


The output from the LSI is fed to the display. The output from pins 24 through 30 is delivered to segment drivers Q2313–Q2319 (2SA952L) and digit drivers Q2306–Q2311 (2SA952L) through a dynamic drive configuration. Display is performed by D2201–D2206 (HP5082-7623), seven-segment light-emitting diodes.

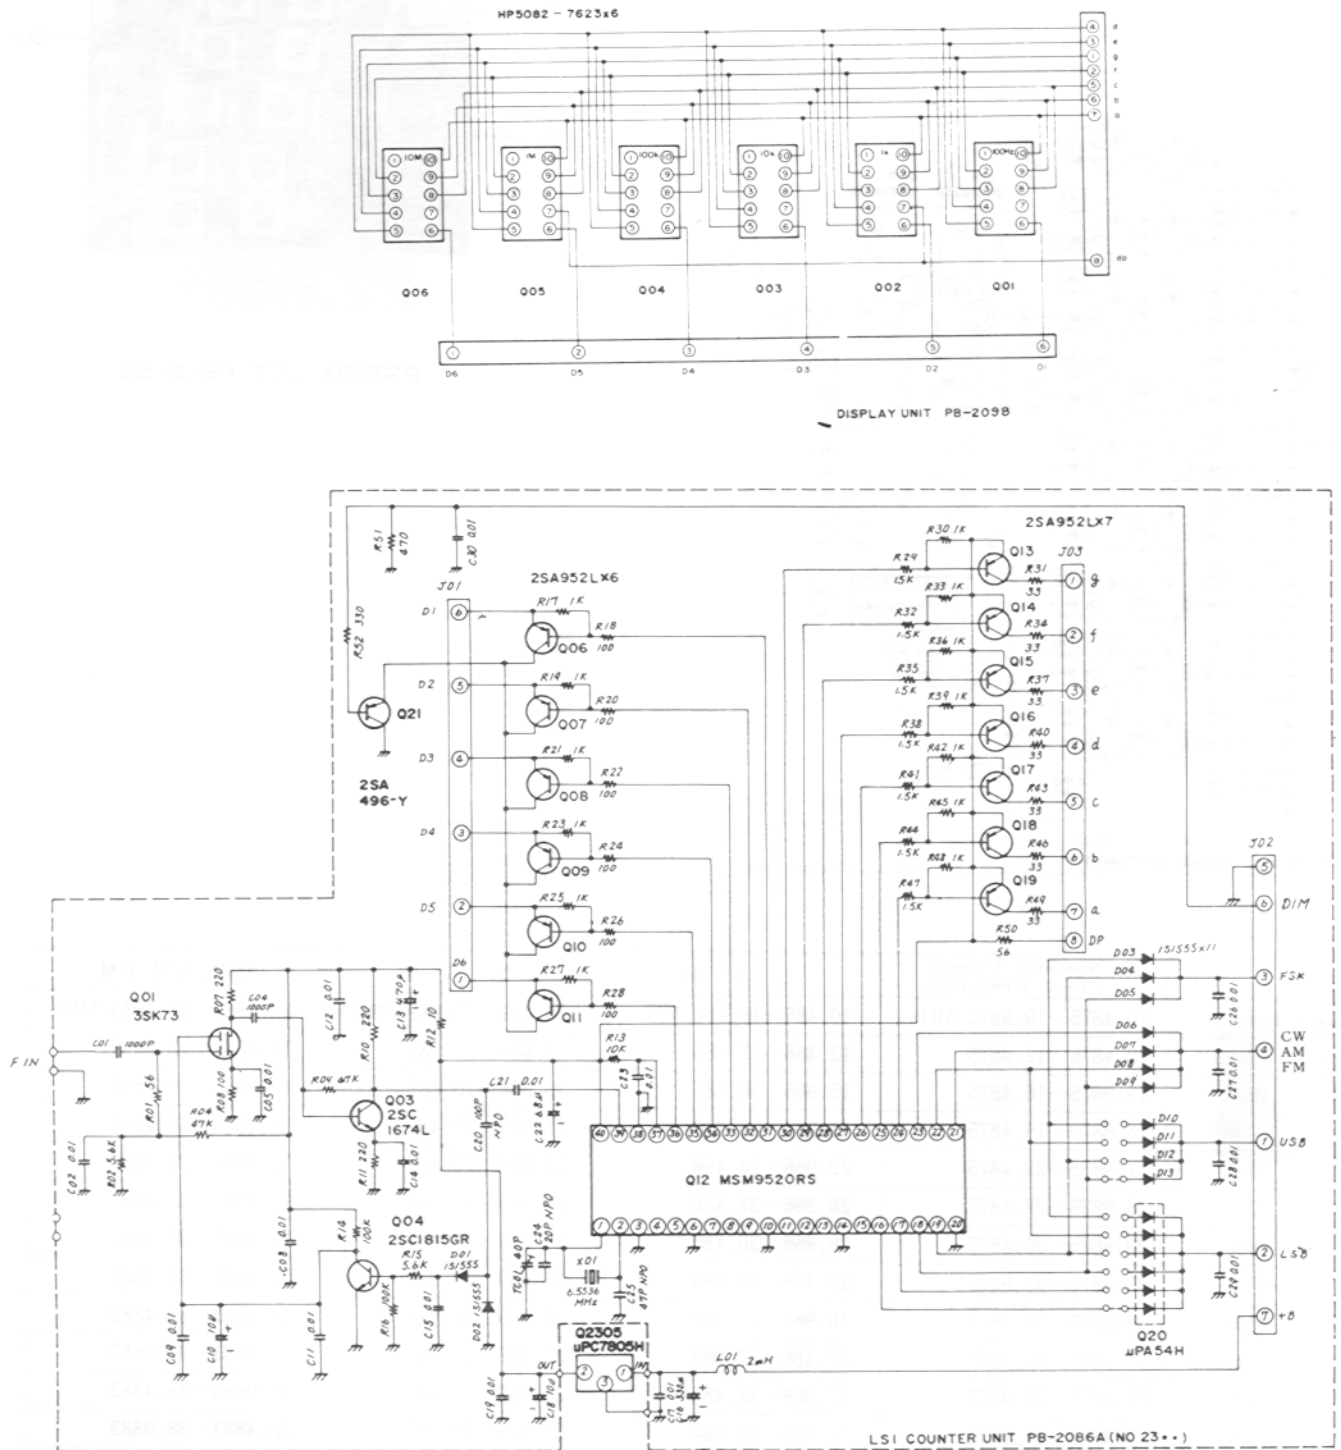


DISPLAY/COUNTER UNIT

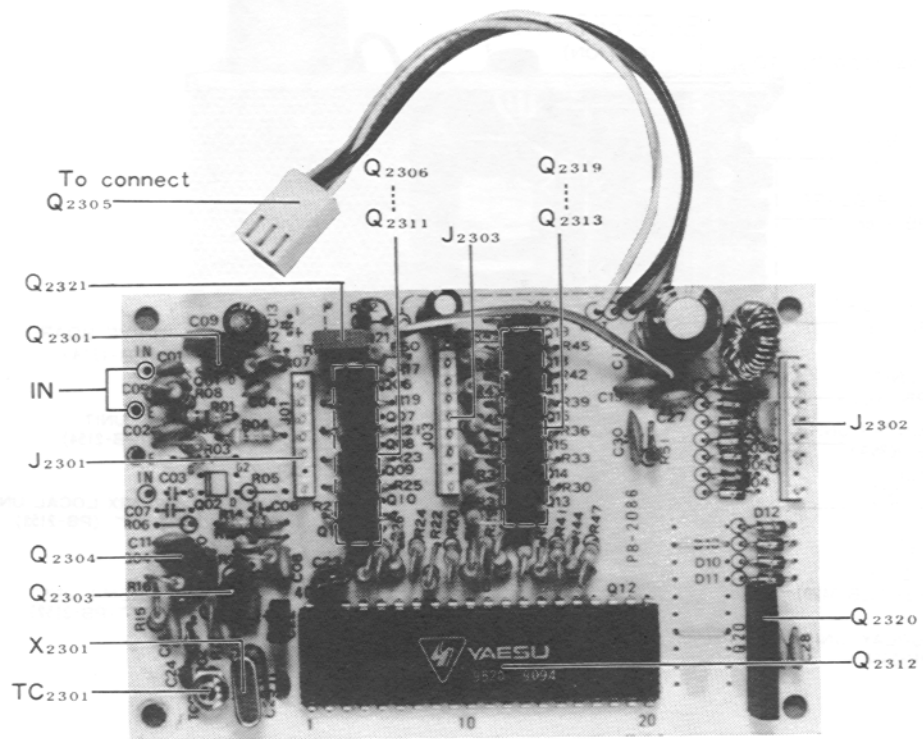

COUNTER UNIT (PB-2086A)

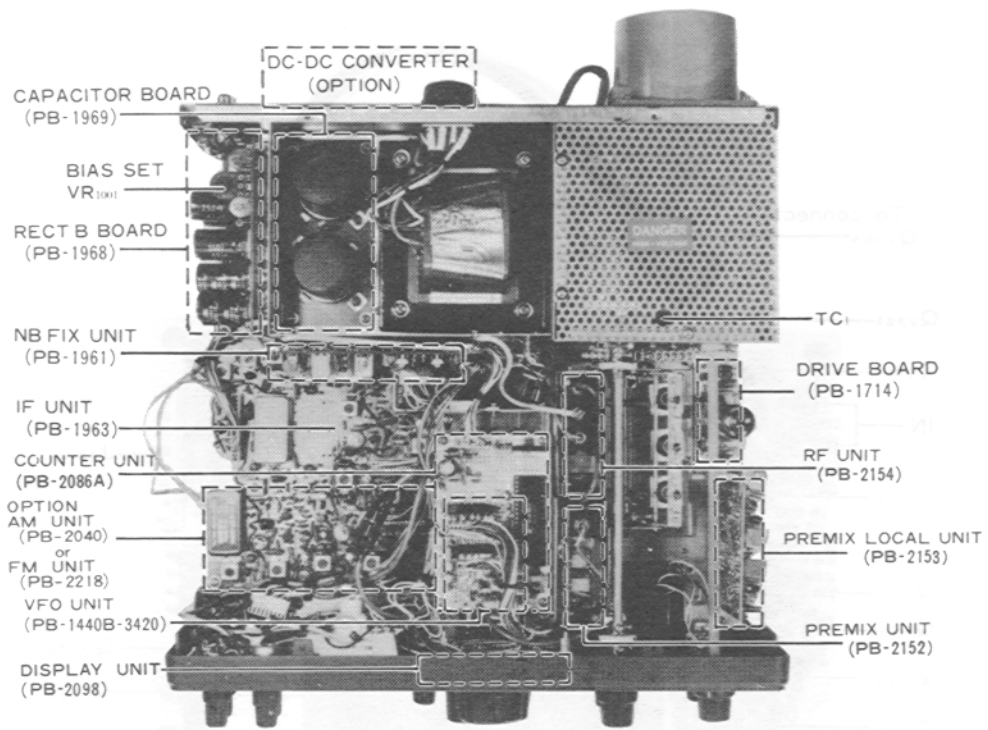

TOP VIEW

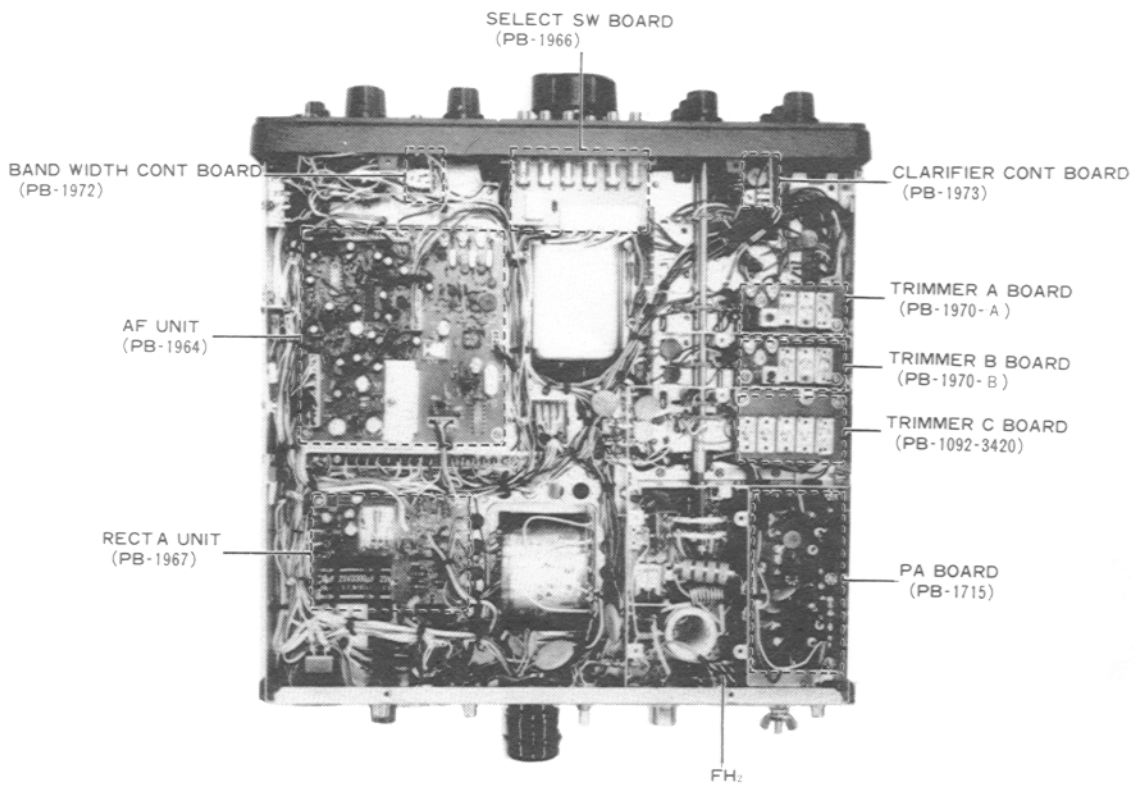

BOTTOM VIEW

MAINTENANCE AND ALIGNMENT


PREMIX LOCAL UNIT

Premix Local Alignment

1. Connect the RF probe of the VTVM to pin 3 of MJ₃.
2. Refer to Table 6, and adjust the appropriate transformer for a level of 300 mV for each band and crystal, as shown in the table.

BAND	CRYSTAL	FREQUENCY	TRANSFORMER
160m	X ₆₀₁	15.9875MHz	T ₆₀₁
80m	X ₆₀₂	17.9875	T ₆₀₂
40m	X ₆₀₃	21.4875	T ₆₀₃
30m	X ₆₀₄	24.4875	T ₆₀₄
20m	X ₆₀₅	28.4875	T ₆₀₅
17m	X ₆₀₆	32.4875	T ₆₀₆
15m	X ₆₀₇	35.4875	T ₆₀₇
12m	X ₆₀₈	38.9875	T ₆₀₈
10m A	X ₆₀₉	42.4875	T ₆₀₉
10m B	X ₆₁₀	42.9875	T ₆₁₀
10m C	X ₆₁₁	43.4875	T ₆₁₁
10m D	X ₆₁₂	43.9875	T ₆₁₂

Table 6.

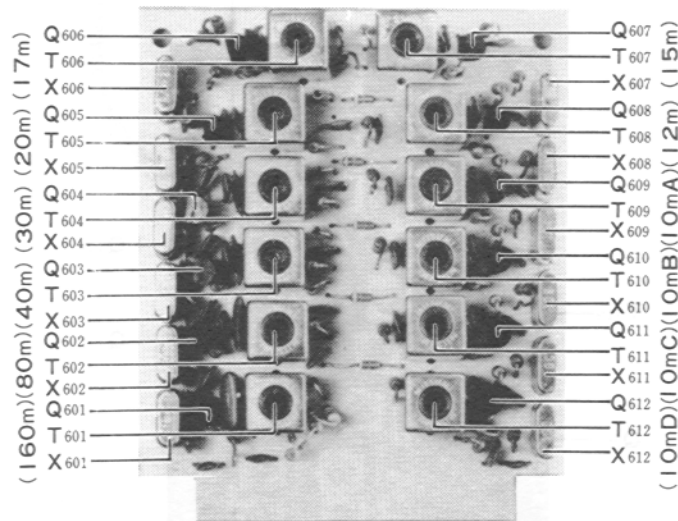

PREMIX LOCAL (XTAL) UNIT (PB-2153)


PREMIX UNIT

For this alignment, a wideband (not peak) sweep generator, as well as an oscilloscope, should be used.

1. Press the EXT select switch. Apply 5.0 - 5.5 MHz sweep output to the VFO output terminal at the rear apron external VFO jack. Connect a high-impedance probe of an oscilloscope to J₃₀₁.
2. Adjust the transformers shown in Table 7 for a flat response across the entire passband. If you have never adjusted a bandpass filter previously, this may take some practice. Perform the adjustments on each band, according to the chart.

BAND	TRANS-FORMER	PASSBAND
160m	T ₃₀₁ , T ₃₀₂	10.4-11.0(MHz)
80m	T ₃₀₃ , T ₃₀₄	12.4-13.0
40m	T ₃₀₅ , T ₃₀₆	15.9-16.5
30m	T ₃₀₇ , T ₃₀₈	18.9-19.5
20m	T ₃₀₉ , T ₃₁₀	22.9-23.5
17m	T ₃₁₁ , T ₃₁₂	26.9-27.5
15m	T ₃₁₃ , T ₃₁₄	29.9-30.5
12m	T ₃₁₅ , T ₃₁₆	33.5-34.0
10m	T ₃₁₇ , T ₃₁₈	36.9-39.0

Table 7

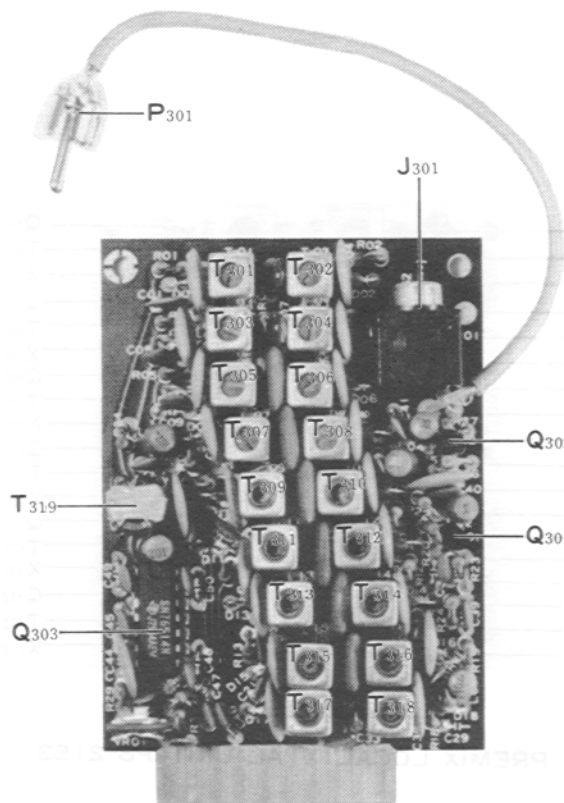

PREMIX UNIT (PB-2152)

FM UNIT

Set the transceiver to operate at 29.0 MHz (10 mC).

RX IF Adjustment

Turn the SQL control fully counterclockwise, and adjust T₂₅₀₁ and T₂₅₀₂ for maximum receiver noise from the speaker, with no signal applied to the ANT connector.

Squelch Threshold Adjustment

Set the SQL control at the 10 o'clock position, and adjust VR₂₅₀₁ to the point where the receiver noise just disappears.

Carrier Frequency Adjustment


Connect a frequency counter to pin 8 of J₂₅₀₁, and set the MIC GAIN control fully counterclockwise.

Adjust T₂₅₀₁ for a reading of exactly 8988.3 kHz.

TX IF Adjustment

Connect the probe of a VTVM to pin 8 of J₂₅₀₆, and adjust T₂₅₀₄ and T₂₅₀₅ for a maximum reading on the VTVM. While this adjustment is being made, the DRIVE control should be adjusted so as not to clip the signal in the IF stage. If the DRIVE control is set too excessively high, the peak cannot be accurately obtained.

It may be necessary to perform this adjustment a few times in order to obtain a definite reading.

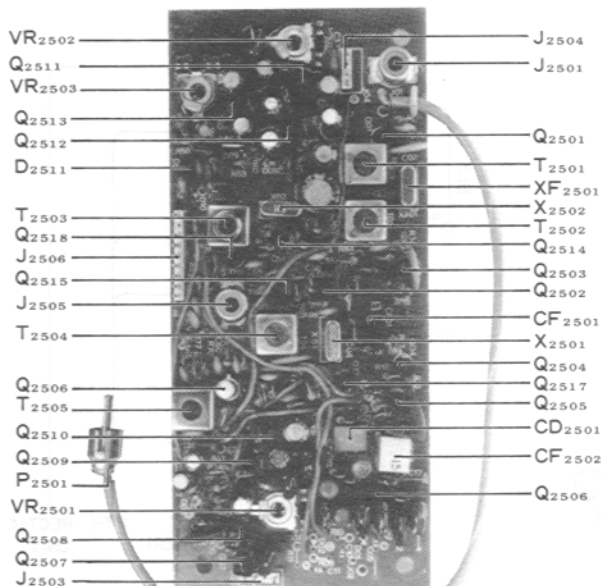

Deviation Adjustment

Connect a deviation meter to the antenna jack, and connect an audio signal generator to the microphone input terminal, as shown in Figure 17.

Set the MIC GAIN control fully clockwise, and set VR₂₅₀₂ at the 9 o'clock position. Apply a 1 kHz, 15 mV signal to the microphone terminal, and adjust VR₂₅₀₃ for a deviation of ± 4.5 kHz, as shown on the deviation meter.

Set the MIC GAIN control at the 2 o'clock position, and reduce the output of the signal generator to 2 mV. Now adjust VR₂₅₀₂ for a deviation of ± 3.5 kHz on the deviation meter.

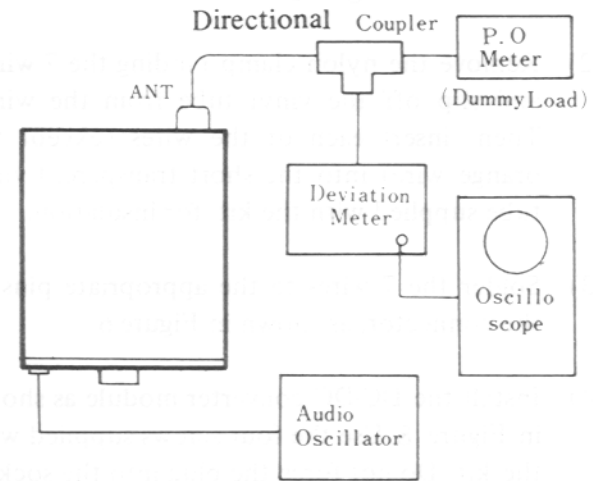


Figure 17



VR₂₅₀₂ at the 9 o'clock position.

OPTIONAL INSTALLATIONS

FT-101ZD DC-DC CONVERTER INSTALLATION

The optional DC-DC converter can be installed in a matter of minutes. Please follow the instructions carefully, in order to make the proper connections.

INSTALLATION

- (1) Remove the seal covering the chassis cutout for the DC-DC converter installation on the rear panel, and install the 9 pin connector supplied with the kit on the chassis cutout, as shown in Figure 5.
- (2) Remove the nylon clamp binding the 7 wires, and slip off the vinyl tube from the wires. Then, insert each of the wires (except the orange wire) into the short transparent vinyl tube supplied with the kit, for insulation.
- (3) Solder the 7 wires to the appropriate pins of the connector, as shown in Figure 6.
- (4) Install the DC-DC converter module as shown in Figure 8. Use the four screws supplied with the kit. Do not force the plug into the socket, as the connection should be smooth, yet solid.
- (5) Check the DC cable fuse socket, located in the positive (red) lead, to be certain that a 20 amp fuse is installed.
- (6) When making connections to the battery, be absolutely certain that the proper polarity is observed. The RED lead should be connected to the POSITIVE (+) battery terminal, and the BLACK lead should be connected to the NEGATIVE (-) terminal. OUR WARRANTY DOES NOT COVER DAMAGE CAUSED BY REVERSED POLARITY CONNECTIONS.
- (7) Before connecting the DC power cable to the transceiver, check the automobile voltage regulator level with the engine running (battery charging). The maximum charging rate should be 15 volts or less. If the voltage is higher than this level, please adjust the voltage regulator for a maximum of 15 volts. This precaution also applies to bench power supplies, which should be adjusted in the same fashion. Caution should also be taken so that the transceiver is not operated from a supply voltage of less than 12 volts.
- (8) Connect the DC cable to the transceiver. Power connections are made automatically when the DC cable is connected to the POWER jack.

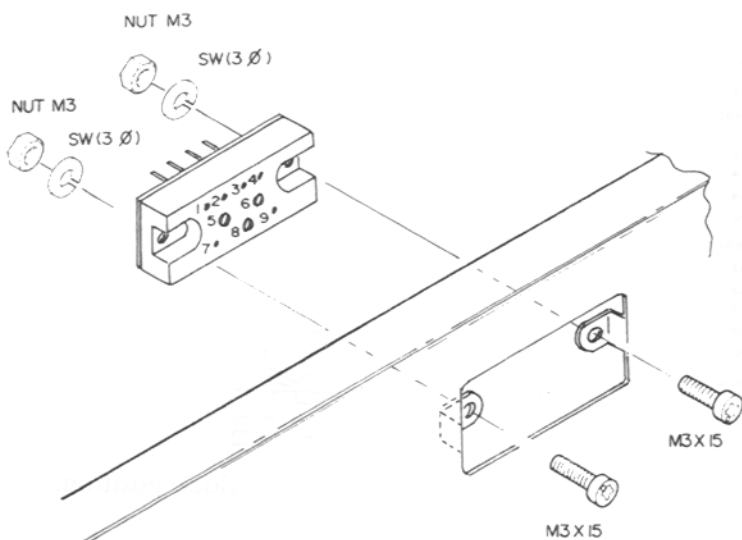


Figure 5

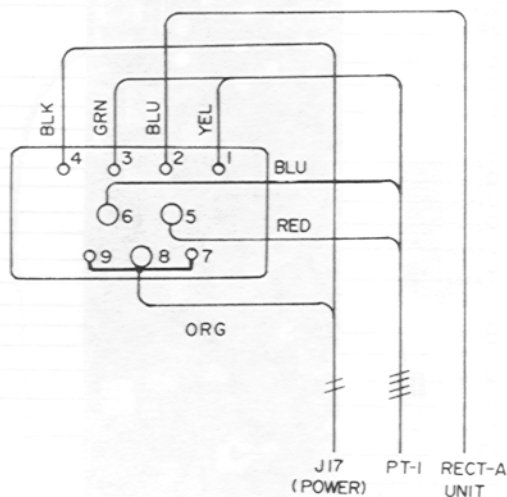


Figure 6

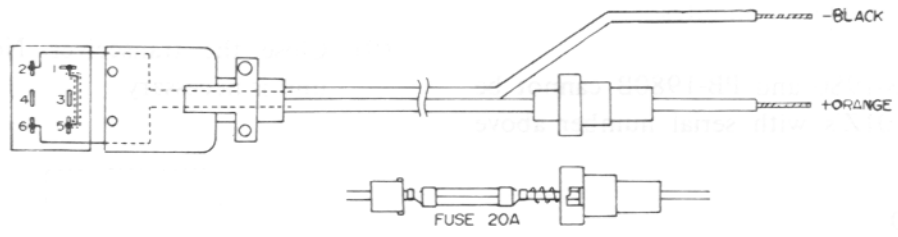


Figure 7

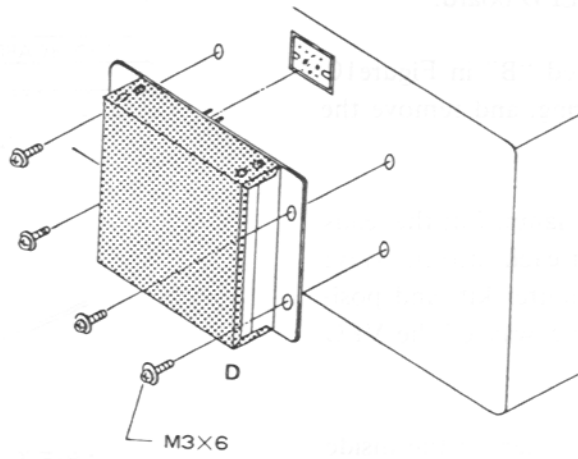


Figure 8

COUNTER UNIT (PB-2086A) INSTALLATION ON FT-101Z

The installation of the New Counter unit (PB-2086A) to the FT-101Z economy can be easily accomplished in a matter of minutes.

Counter units PB-1980 and PB-1980B cannot be installed in FT-101Z's with serial number above XX160001.

PARTS NEEDED

Optical Filter with double-face tape	(1)
Counter Module	(1)
Guide Pins	(2)
Support Tower	(1)
Vinyl Tubes	(2)

- (1) Remove the top cover of the transceiver, according to the drawing on page 3-5.
- (2) Remove the screws marked "A" in Figure 10. These screws support the LED board.
- (3) Remove the screws marked "B" in Figure 10 as well as the tension spring, and remove the analog display panel.
- (4) Locate the analog display lamp. Cut the leads to this lamp, insert 1 lead each into the vinyl tube supplied with the counter kit, and position these leads out of the way of the VFO gears, etc.
- (5) Install the orange optical filter on the inside of the front panel of the transceiver, in the position formerly occupied by the analog display panel. Be sure that it is correctly centered. The filter is held in place by the double-face tape included with the filter.
- (6) Replace the LED board with "A" screws. Install the support tower into the hole marked "C" in Fig. 10.
- (7) Install the Counter unit with the screw previously installed at "B" for securing the counter module at point "C". Use the two plastic screws supplied with the kit for securing at point "B". Connect the Molex plug into the board connector J2302 on the Counter unit (if your transceiver bears a serial number smaller than XX159999, use the supplied connector assembly for this connection). The co-

axial cable from the Counter unit is connected to point "F" in Fig. 10.

- (8) Remove the 820 ohm (Gray-Red-Brown) resistor from the terminal strip marked "E" in Figures 10 and 11.
- (9) Close the transceiver. No alignment of the unit is necessary.


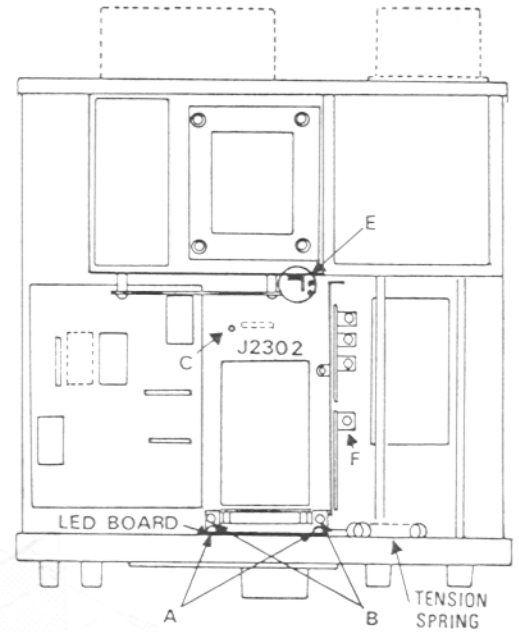


Figure 10

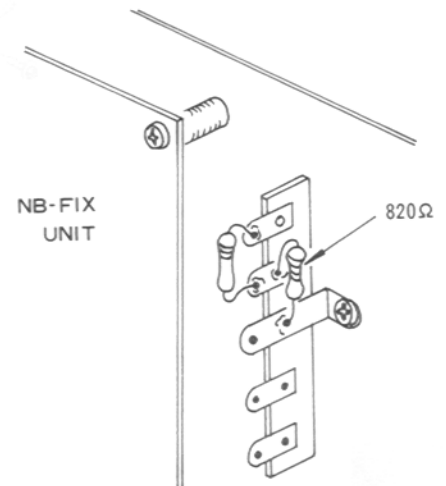

(Enlarged) Part E

Figure 11

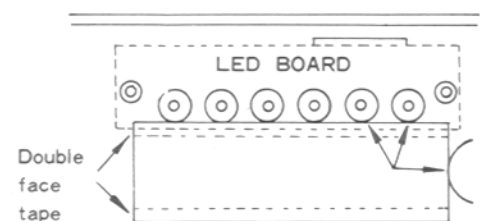


Figure 12

FM UNIT INSTALLATION

1. Remove the top cover of the transceiver, as shown in Figure 1 on page 3-5.
2. Remove the two screws (shown as "C" on Figure 13) from the IF unit, and replace with the two post screws supplied.
3. Install the FM unit in the space over the IF unit, and secure it with the mounting screws previously removed from the IF unit.
4. Connect P19 (3 pin) to J2504; P32 (3 pin) to J2503; and P20 (8 pin) to J2506. During this procedure, be sure not to press too heavily on the connector, so as not to damage the unit.
5. Unplug P14 (yellow shielded cable) from J101 on the RF unit, and connect it to J101 on the FM unit. Then connect P2501 (yellow shielded cable) to J101, by referring to Figure 15.
6. On the RF unit, unplug P11 (red shielded cable) from J102, and connect it to J2505 on the FM unit. Connect P22 (red shielded cable) from P20 (connected to J2506) on the FM unit, to J102 on the RF unit, as shown in Figure 15.

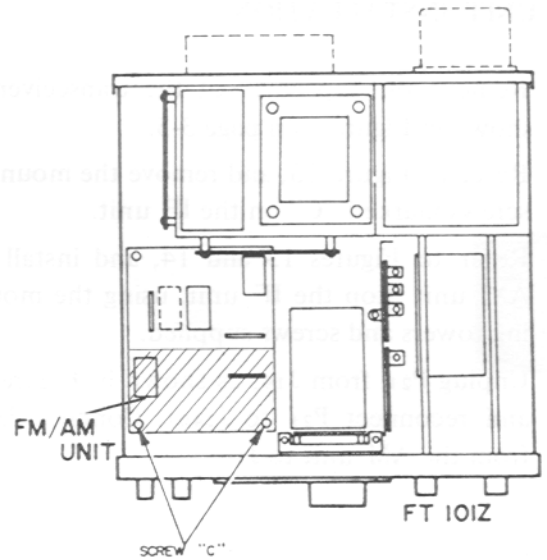


Figure 13

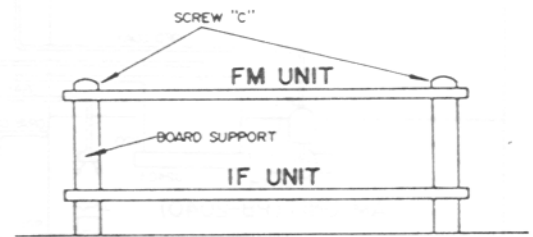


Figure 14

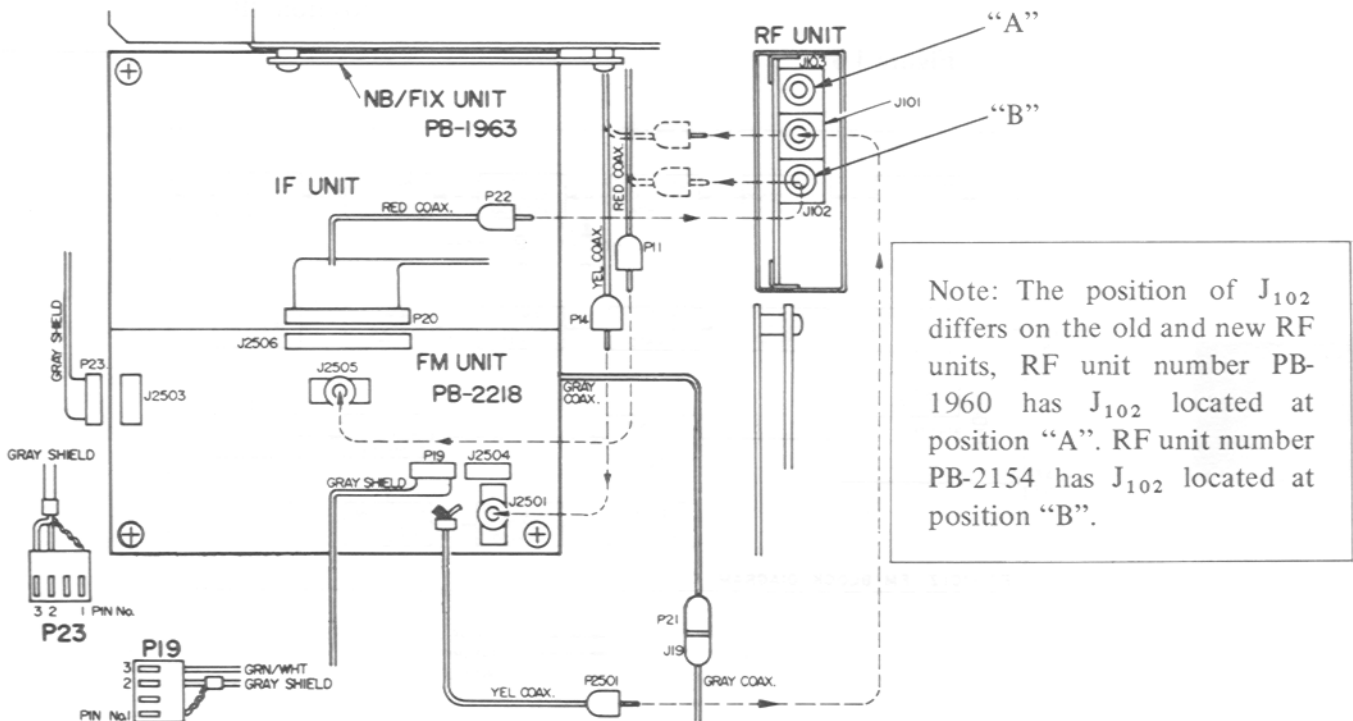


Figure 15

MAIN CHASSIS						
Symbol No.	Part No.	Description				
			C6	K30279052	Dipped mica	500 WV 1100 pF (DM19D-112K5)
		IC, TRANSISTOR				
Q2	G3104960Y	TR 2SA496(Y)	C5	K30279062	" "	500 WV 3000 pF (DM19D-302K5)
Q1	G3206160R	" 2SB616R(S)				
Q4	G3408800	" 2SD880(O)	C59, 66	K31306800	Moulded mica	1 KWV 80 pF
Q3	G1090070	IC μ PC14308	C17	K02279001	Ceramic	500 WV 1 pF
	G1090080	" μ PC78L08	C10	K02279002	" "	5 pF
			C18	K02279003	" "	47 pF
			C11	K00279001	" "	200 pF
			C20	K00279002	" "	470 pF
		DIODE	C16	K00359003	" "	1 KV 3 pF
D1	G2090029	Ge 1N60	C15	K02309002	" "	5 pF
D2-5,10-14	G2015550	Si 1S1555	C14	K02309003	" "	100 pF
D6	G2090001	" 10D1	C3	K00329002	" "	1.5 KWV 460 pF
			C9	K00359001	" "	3 KV 100 pF
			C1	K12359001	" "	1000 pF
			C74, 75	K13170102	" "	50 WV 0.001 μ F
		RESISTOR	C29,34,35,41, 73,76-81	K13170103	" "	0.01 μ F
R22, 24	J01245220	Carbon film 1/4W TJ 22 Ω	C12, 22-24, 39,40,56,58, 60,68,69,82, 84	K13170473	" "	0.047 μ F
R23	J01245330	" " " " 33 Ω				
R14	J01245560	" " " " 56 Ω				
R7, 11	J01245101	" " " " 100 Ω				
R18, 26	J01245821	" " " " 820 Ω				
R4, 5	J01245102	" " " " 1 k Ω	C27, 28, 36	K12279004	" "	500 WV 0.0047 μ F
R6, 19	J01245152	" " " " 1.5 k Ω	C54, 55, 61	K12279002	" "	0.01 μ F
	J01245182	" " " " 1.8 k Ω	C2, 25, 26	K12329002	" "	1.4 KV 0.0047 μ F
R17	J01245222	" " " " 2.2 k Ω	C37, 64	K12329001	" "	0.01 μ F
R20	J01245474	" " " " 470 k Ω	C42-51	K21270002	Feed thru	500 WV 0.001 μ F (ECK-L2H102PE)
R2	J10276100	Carbon composition 1/2W GK 10 Ω				
R9, 10 (with L5, L6)	-	" " 1W " 56 Ω	C63	K40120476	Electrolytic	16 WV 47 μ F
			C72	K40120107	" "	50 WV 100 μ F
R3	J10276101	" " " " 100 Ω	C65	K40120337	" "	330 μ F
R1, 8	J10276222	" " " " 2.2 k Ω	C70	K40120106	" "	10 μ F
R25	J30356150	Cement 3W 15 Ω	C67	K40109011	" "	10 WV 33 μ F
				K50177104	Mylar	50 WV 0.1 μ F
		POTENTIOMETER				
VR1	J60800078	VM11AX46E 5M1112 10 k Ω B			VARIABLE CAPACITOR	
VR2	J62800053	K16BA004C 500 k Ω B/20 k Ω B	VC1	K90000026	YB-250	250 pF
VR3	J62800052	K16BA004C 5 k Ω A/5 k B	VC2	K90000016	C134E125	
VR4	J60800079	K1611000HE 5 k Ω A				
VR5	J62800056	K16BA1A05 5 k Ω B/2 k C				
VR6	J62800054	EVHCOAS15B23 5 k Ω B x 2				
VR7	J62800055	EVHCOAS15B24 5 k Ω B/5 k A			TRIMMER CAPACITOR	
VR8	J60800037	VM10A654A 1 k Ω B	TC1	K91000007	TSN120C	10P x 2
VR9, 10	J60800038	VM10A654A 5 k Ω B				
VR11	J60800077	K1611000AZE 5 k Ω B				
					INDUCTOR	
			L1	L0020534C		
			L2	L0020611B		
			L3	L1020690		
			L4	L1020064		
			L5, L6	L1020308B		
			(R9, R10)			
			L7	L1190001	EL0710-251K	250 μ H
			L8	L1190017	FL-5H-102K	1 mH
			L9	L0020705		
		CAPACITOR				
		Dipped mica 500 WV 5 pF				
C13, 19, 21	K30276271	" " " 270 pF (LCQ17271K5)				
C8	K30276331	" " 500 WV 330 pF (LCQ17331K5)				
C7	K30276621	" " 500 WV 620 pF (LCQ18621K5)				

REPAIR PARTS

		TRANSFORMER	J19	P1090111	J-7015
T1	L0020544A		J20	P1090152	D8-703B-11
T2, T3	L0020074				
					MULTI JACK
		METER	MJ1	P4090001	121S-10B-105A
M1	M0090002	Y-45-02	MJ2	P4090007	220D-20B-205A
			MJ3	P4090002	121S-14B-105A
		SPEAKER			
SP1	M4090024	SE-92B 4 Ω 3 W			PLUG
			P1	P1090079	5047-12A (with wire T9201410C)
			P2	P1090080	5047-13A (" " T9201300F)
			P3	P1090082	5047-15A (" " T9201310E)
		POWER TRANSFORMER	P4	P1090086	5047-19A
PT1	L3030028	52-74	P5	P1090082	5047-15A (with wire T9201330E)
			P6	P1090075	5047-08A
			P7	P1090072	5047-05A (with wire T9201350A)
			P8	P1090075	5047-08A (" " T9201310E)
		RELAY	P9	P1090079	5047-12A (" " T9201310D)
RL1	M1190004	FRL-263 D012/04CS01	P10	P1090083	5047-16A (" " T921370D)
RL2	M1090002	MX2P	P18	P1090070	5047-03A (" " T9201420C)
			P11, 14, 22	P0090045	SQ4052
			P15	P0090002	SI5908
			P16	P0090005	SI-7502
		RELAY SOCKET	P19, 23	P1090070	5047-03A
RLS1	M1490010	263H204	P20	P1090075	5047-08A
RLS2	M1490001	PX08-1	P21	P0090075	P-7015P
		SWITCH			FUSE
S1	N0190070B		F1	Q0000005	5 A (100V-117V)
S2	N0190090			Q0000004	3 A (200V-234V)
S3* (Lot 1-7)	N0190025	ESR-E485R20			
S3* (Lot 8-)	N0190037	ESR-E486R20			
S4, 5	N7090005	WD9223			
					FUSE HOLDER
			FH1	P2000012	SN2059
			FH2	P2000003	F3265
		COOLING FAN			
FAN1	M2090001	2SB10A			
					PILOT LAMP
			PL1	Q1000010	BQ041-22803A
		RECEPTACLE	PL2-5	Q1000033	K0252-6-8 (BQ054-32732B)
J1	P1090004	SG7814			
J3	P1090134	SG7627			
J2	P0090011	FM144S			
J4	P1090033	D6-701B00		Q5000010	Thru terminal FT-SM1
J5	P1090075	5047-08 (with wire T9203200A)		Q4000002	" A339 (HV)
J6	P1090014	SI7501-1		Q6000042	Terminal block ML-3182 20 P
J7	P1090028	M-BR-06D		Q6000004	" 1L2PS (2-0)
J8	P1090040	SA607B00		Q6000007	" 1L3PS (2-0-1)
J9-14, 18, 21	P1090133	STR-01-H		Q6000016	" 1L5PS (4-0-1)
J15	P1090230	SG-8022		Q6000003	" 1L2PS (1-0-1)
	P1090045	AC9-PF		Q6000008	" 1L3P (3-0)
J17	P0090047	QS-DB6-ML		Q6000011	" 1L4P (2-0-2)

REPAIR PARTS

		DIODE					CRYSTAL SOCKET	
D201-204	G2090029	Ge	1N60		XS201	P3090025	S-14	2P
D205-209	G2015550	Si	1S1555					
							MINI CONNECTOR	
		RESISTOR			J201	P0090037	5048-08A	
R208,216,224,230,238,239	J00245101	Carbon film	1/4W VJ	100 Ω	J202	P0090038	5048-12A	
R204	J00245221	" "	" "	220 Ω				
R222, 236	J00245471	" "	" "	470 Ω				
R231-233,235	J00245561	" "	" "	560 Ω				
R206,215,221,234,237	J00245102	" "	" "	1 kΩ				
							PREMIX UNIT	
R207	J00245222	" "	" "	2.2 kΩ	Symbol No.	Part No.	Description	
R240	J10245472	" "	" TJ	4.7 kΩ		C0021520	PREMIX unit with components	
R210	J00245472	" "	" VJ	4.7 kΩ	PB-2152C	F0002152C	P.C. Board	
R205,209,218	J00245562	" "	" "	5.6 kΩ				
R202,203,212,214,225,226	J00245103	" "	" "	10 kΩ				
							IC, FET, TRANSISTOR	
R201,220,223	J00245153	" "	" "	15 kΩ	Q303	G1090062	IC	SN76514N
R211,213,219	J00245223	" "	" "	22 kΩ	Q301, 302	G3319230R	TR	2SC1923R
R217	J00245683	" "	" "	68 kΩ				
							DIODE	
		CAPACITOR			D301-318	G2090027	Si	1SS53
C216-218	K30176331	Dipped mica	50WV	330 pF				
C234, 236	K30176471	" "	" "	470 pF				
C235	K30176821	" "	" "	820 pF				
C208, 209	K02175150	Ceramic	50WV NPO	15 pF			RESISTOR	
C206	K00179005	" "	" SL	20 pF	R323	J00245100	Carbon film	1/4W VJ 10 Ω
C204	K00175101	" "	" "	100 pF	R331	J00245680	" "	" " 68 Ω
C201	K00175331	Ceramic disc	" "	330 pF	R301,303,305,307,309,311,313,315,332,333	J00245101	" "	" " 100 Ω
C202,203,205,211,212,221,225-227,229-233	K13170103	Ceramic	" "	0.01 μF	R317	J02245101	" "	" SJ 100 Ω
C207,210,213,215,219,220,223,224,228,237	K13170473	" "	" "	0.047 μF	R322,324,327,328,336	J00245221	" "	" VJ 220 Ω
					R337	J02245102	" "	" SJ 1 kΩ
					R319, 334	J00245152	" "	" VJ 1.5 kΩ
C214	K40170105	Electrolytic	" "	1 μF	R335	J00245182	" "	" " 1.8 kΩ
C238	K40140475		10WV	4.7 μF	R329, 330	J00245222	" "	" " 2.2 kΩ
					R302,304,308,310,312,314,316,318,321,325,326	J00245103	" "	" " 10 kΩ
		TRIMMER CAPACITOR						
TC201, 202	K91000016	ECV-1ZW	50 x 32	50 pF	R320	J00245333	" "	" " 33 kΩ
		INDUCTOR					POTENTIOMETER	
L207, 208	L1190007	FL-4H	1R8K	1.8 μH	VR301	J50710502	V10K-8-1-2	5 kΩB
L204-206	L1190016	FL-5H	101K	100 μH				
L201-203	L1190017	FL-5H	102K	1 mH				
							CAPACITOR	
		TRANSFORMER			C335	K30176271	Dipped mica	50WV 270 pF
T201, 202	L0020140	R12-4170			C331	K30176331	" "	" 330 pF

T401,406,408, 415	L0020141	R12-4171	X503	H0100422	HC-18/U	8988.3 kHz
			X504	H0100423	"	8989 kHz
T405	L0020221					
T411	L0020460					
T412	L0020209					
					RESISTOR	
				J00245560	Carbon film 1/4W VJ	56 Ω
			R509,539,557	J00245101	" " " "	100 Ω
		MINI CONNECTOR	R511	J00245121	" " " "	120 Ω
J401	P0090038	5048-12A	R533, 546	J00245151	" " " "	150 Ω
J402	P0090039	5048-13A	R503,513,524, 525	J00245221	" " " "	220 Ω
J403	P0090040	5048-15A				
			R512,522,538	J00245471	" " " "	470 Ω
			R504,514,520, 523,548,561	J00245102	" " " "	1 kΩ
TP401-412	Q5000011	Wrapping terminal C				
			R515	J00245222	" " " "	2.2 kΩ
			R534,535,565	J00245272	" " " "	2.7 kΩ
			R510,562,569, 578-580	J00245332	" " " "	3.3 kΩ
				J01245472	" " " TJ	4.7 kΩ
AF UNIT			R510,506,531, 536,537,544, 545,549,550, 563,566,575, 576,581	J00245472	" " " VJ	4.7 kΩ
Symbol No.	Part No.	Description				
	C0019640	AF unit with components				
PB-1964A	F0001964A	P.C. Board				
			R521,527,532	J00245562	" " " "	5.6 kΩ
			R541,542,568, 570	J00245682	" " " "	6.8 kΩ
		IC, FET, TRANSISTOR				
Q503	G1090077	IC MC3403P (μPC324C)	R501,507,519, 529,555,556, 558,571,572	J00245103	" " " "	10 kΩ
Q506	G1090064	" MC14024B				
Q504	G1090100	" SN74LS123N				
Q502	G1090086	" TA7063P	R517, 551	J00245153	" " " "	15 kΩ
Q501	G1090164	" μPC2002H	R508,518,528, 540,554,573	J00245223	" " " "	22 kΩ
Q505	G1090120	" NJM78L05				
Q514	G3090035	FET 2SK19TM-GR	R584	J01245223	" " " TJ	22 kΩ
Q515	G3105641	TR 2SA564A	R559	J00245393	" " " VJ	39 kΩ
	G3303730	" 2SC373	R567	J00245473	" " " "	47 kΩ
Q507, 508	G3307320G	" 2SC732TM-GR	R516	J00245563	" " " "	56 kΩ
	G3310000G	" 2SC1000GR	R547, 574	J00245104	" " " "	100 kΩ
Q512	G3313830	" 2SC1383	R560	J00245154	" " " "	150 kΩ
Q509,510,513, 516	G3318150Y	" 2SC1815Y	R553	J00245224	" " " "	220 kΩ
			R526	J00245274	" " " "	270 kΩ
Q511	G3318150G	" 2SC1815GR	R552,564,577	J00245474	" " " "	470 kΩ
			R582	J00245824	" " " "	820 kΩ
			R505	J10276229	composition 1/2W GK	2.2 Ω
			R502	J32276010	Wire wound 1W	1 Ω
		DIODE				
D510, 511	G2090029	Ge 1N60				
D502-505	G2090118	" 1SS97				
D507-509, 512-517, 519-522	G2015550	Si 1S1555			POTENTIOMETER	
			VR501	J51727101	CR-19R	100 ΩB
D501, 518	G2090001	" 10D1				
D506	G2090027	" 1SS53				
					CAPACITOR	
			C513	K30176511	Dipped mica 50WV	510 pF
			C511	K02172050	Ceramic " CH	5 pF
		CRYSTAL	C522	K02173100	" " "	10 pF
X501	H0100260	HC-6/W 3200 kHz	C514	K06175270	" " VJ	27 pF
X502	H0100421	HC-18/U 8986 kHz	C546-548	K02175390	" " CH	39 pF

REPAIR PARTS


C811	K02179023	Ceramic disc 50WV CH	180 pF			RESISTOR
C821, 823	K00175471	" " " "	470 pF	R908	J01245560	Carbon film 1/4W TJ 56 Ω
C809,810,812, 815,819,820, 824,826	K13170103		0.01 μF	R905	J10276220	" composition 1/2W GK 22 Ω
				R901-904	J10276474	" " " " 470 kΩ
				R907	J20339001	Metallic film 2W 0.4 Ω
C813	K30176431	Dipped mica "	430 pF			
C802, 822	K30209001	" " " "	1000 pF			
C825	K70167334	Tantalum 10WV	0.33 μF			
						CAPACITOR
				C901-905	K13170103	Ceramic 50WV 0.01 μF
				C908-911	K40140106	Electrolytic 25WV 10 μF
		VARIABLE CAPACITOR		C907	K40140107	" " 100 μF
VC801	K90000024	C521 R112		C906	K41140338	" " 3300 μF
		TRIMMER CAPACITOR				RELAY
TC801	K90000001	TSN-100D15	15 pF	RL901	M1190003	FRL-264 D012/04CS-01
TC802	K91000016	ECV-1ZW 50 x 32	50 pF			
					Q5000011	Wrapping terminal C
					Q5000004	Test point D
		INDUCTOR				
L801	L0020268A					
L804, 805	L1190007	Micro inductor FL-4H	1.8 μH			
L803, 806	L1190001	" " EL0710	250 μH			
L802	L1190040	" " S4 102K	1 mH			
						RECT. B UNIT
				Symbol No.	Part No.	Description
					C0019680	RECT. B unit with components
		RECEPTACLE		PB-1968C	F0001968C	P.C. Board
J801	P1090012	SI-6303-1				
						TRANSISTOR
		TERMINAL		Q1003	G3106390	2SA639
	Q5000005	Lighthouse type		Q1001	G3107330	2SA733
	Q5000011	Wrapping terminal C		Q1002	G3303720Y	2SC372Y
						DIODE
				D1004, 1005, 1008-1011	G2015550	Si 1S1555
		RECT. A UNIT				
Symbol No.	Part No.	Description				
	C0019670	RECT. A unit with components		D1002, 1003, 1012	G2090002	" 10D10
PB-1967	F0001967	P.C. Board		D1006, 1007	G2090001	" 10D1
				D1001	G2090081	" SM1-12
		IC, TRANSISTOR				
Q901	G1090162	IC μPC78L12				RESISTOR
Q903	G3110150Y	TR 2SA1015Y		R1021	J00245681	Carbon film 1/4W VJ 680 Ω
				R1011, 1016, 1020	J00245472	" " " " 4.7 kΩ
		DIODE		R1013, 1015	J00245103	" " " " 10 kΩ
D907	G2090001	Si 10D1		R1014	J00245123	" " " " 12 kΩ
D901-904	G2090002	" 10D10		R1017-1019	J00245223	" " " " 22 kΩ
D905, 906	G2090003	" V06B		R1012	J00245563	" " " " 56 kΩ
D908	G2090007	Zener WZ061		R1010	J20306562	Metallic film 1W 5.6 kΩ


		TRIMMER CAPACITOR		P1090088	CONNECTOR PLUG	QS-B6FL
TC2301	K91000030	ECV-1ZW 40 x 53 40 pF		P0090018	PIN PLUG	STP58
				P0090035	ACC PLUG	PA602B04
				Q0000005	FUSE (100V-117V)	5 A
				Q0000004	" (200V-234V)	3 A
		INDUCTOR				
L2301	L2030068					
		CONNECTOR			AM UNIT	
J2301	P0090051	5048-06A	Symbol No.	Part No.	Description	
J2302	P0090054	5048-07A		C0020400	AM unit with components	
J2303	P0090037	5048-08A	PB-2040	F0002040	P.C. Board	
P2301	P0090045	SQ4052				
P2303	P1090186	3021-03 (with wire T9201380A)				
					FET & TRANSISTOR	
			Q2404	G3090035	FET	2SK19TM-GR
			Q2406	G4800510C	"	3SK51-03
			Q2405, 2407, 2408	G3303800Y	TR	2SC280TM-Y
			Q2401	G3307320G	"	2SC732TM-GR
			Q2402, 2409	G3318150Y	"	2SC1815Y
					DIODE	
		RESISTOR	D2406	G2090029	Ge.	1N60
R3202	J31306339	Wire wound 1W 3.3 Ω	D2401, 2402, 2404, 2405	G2015550	Si.	1S1555
R3201	J20376221	Metallic film 5W 220 Ω				
					CRYSTAL	
C3202	K52247474	Metallized paper 250WV 0.047 μ F	X2401	H0100422	HC-18/U	8988.3 kHz
C3201	K41140227	Electrolytic 25WV 220 μ F				
					RESISTOR	
		CONNECTOR	R2441, 2457	J00245470	Carbon film 1/4W VJ	47 Ω
P3201	P0090066	AC9M	R2455	J00245560	" " " "	56 Ω
			R2411, 2414, 2418, 2422, 2425, 2432, 2434, 2447	J00245101	" " " "	100 Ω
	T9012720	DC POWER CORD				
	Q0000009	FUSE 20 A	R2406, 2423	J00245331	" " " "	330 Ω
			R2445, 2452	J00245471	" " " "	470 Ω
			R2409, 2419, 2435, 2436, 2438, 2440, 2448	J00245102	" " " "	1 k Ω
			R2437	J01245102	" " " TJ	1 k Ω
			R2431	J00245272	" " " VJ	2.7 k Ω
			R2401, 2410, 2453, 2456	J00245332	" " " "	3.3 k Ω
	T9012380A	2 wire, 2 prong plug				
	T9012481A	3 wire without plug	R2454	J01245332	" " " TJ	3.3 k Ω
	T9012582A	3 wire, 3 prong plug (UL)	R2404	J00245392	" " " VJ	3.9 k Ω
	T9012484	3 wire, 3 prong Australian plug	R2420, 2429	J00245472	" " " "	4.7 k Ω
	T9012683A	3 wire, 2 prong EU plug	R2442, 2444	J00245562	" " " "	5.6 k Ω
					ACCESSORIES	
Symbol No.	Part No.	Description				
		AC POWER CORD				
	T9012380A	2 wire, 2 prong plug				
	T9012481A	3 wire without plug				
	T9012582A	3 wire, 3 prong plug (UL)				
	T9012484	3 wire, 3 prong Australian plug				
	T9012683A	3 wire, 2 prong EU plug				

		CRYSTAL	R2504, 2525,	J00245562	Carbon film 1/4W VJ	5.6 k Ω
X2501	H0100431A	HC-18/U 8532.5 kHz	2526, 2533,			
X2502	H0100440A	" 8988.3 kHz	2543, 2560			
			R2505	J00245822	" " " "	8.2 k Ω
			R2536, 2545,	J00245103	" " " "	10 k Ω
			2551, 2553,			
			2567			
		CRYSTAL FILTER				
XF2501	H1100470	8.9M20A	R2572	J00245183	" " " "	18 k Ω
			R2513, 2527,	J00245223	" " " "	22 k Ω
			2558, 2561			
			R2559	J00245273	" " " "	27 k Ω
		CERAMIC FILTER	R2566	J00245333	" " " "	33 k Ω
CF2501	H3900200	CFW455E	R2506, 2538,	J00245473	" " " "	47 k Ω
CF2502	H3900030	LF-B15	2562			
			R2535, 2571	J00245563	" " " "	56 k Ω
			R2501, 2552,	J00245104	" " " "	100 k Ω
			2570, 2587			
		CERAMIC DISCRIMINATOR	R2537, 2556	J00245124	" " " "	120 k Ω
CD2501	H7900040	SFD455-S4	R2518, 2520,	J00245154	" " " "	150 k Ω
			2529, 2531,			
			2585			
			R2547	J00245274	" " " "	270 k Ω
		THERMISTOR				
TH2501	G9090001	SDT-250				
TH2502	G9090003	D-33A				
					POTENTIOMETER	
			VR2503	J51721102	EVL-S3A A00B13	1 k Ω B
			VR2501,2502	J51721103	EVL-S3A A00B14	10 k Ω B
				J51721503	EVL-S3A A00B54	50 k Ω B
		RESISTOR				
R2588	J01254470	Carbon film 1/4W TJ	47 Ω			
	J00245560	" " " VJ	56 Ω			
	J00245820	" " " "	82 Ω			
R2502, 2503,	J00245101	" " " "	100 Ω			
2508, 2548,					CAPACITOR	
2565, 2569,				C2506	K02179004	Ceramic 50WV CH 3 pF (DD104CH030J50V02)
2574, 2575,				C2556	K00175150	Ceramic 50WV SL 15 pF (DD104SL150J50V02)
2584						
R2554, 2564	J00245221	" " " "	220 Ω	C2504	K02179011	Ceramic 50WV CH 27 pF (DD104CH270JJ50V02)
R2557	J01245221	" " " TJ	220 Ω			
R2563	J00245471	" " " VJ	470 Ω	C2559	K00175330	Ceramic 50WV SL 33 pF (DD104SL330J50V02)
R2549, 2568	J00245561	" " " "	560 Ω			
R2507	J00245681	" " " "	680 Ω	C2529	K00175470	Ceramic 50WV SL 47 pF (DD104SL470J50V02)
R2515, 2546,	J00245102	" " " "	1 k Ω			
2555, 2573,				C2551, 2553,	K06175101	Ceramic 50WV UJ 100 pF (DD106UJ101J50V02)
2577, 2581,				2554		
2583, 2586				C2550	K06175121	Ceramic 50WV UJ 120 pF (ECC-D1H121UJ2)
R2539, 2576,	J01245102	" " " TJ	1 k Ω			
2578				C2507, 2508	K02175151	Ceramic 50WV UJ 150 pF (DD109CH151J50V02)
R2534, 2540	J00245152	" " " VJ	1.5 k Ω			
R2542	J00245182	" " " "	1.8 k Ω	C2503, 2537,	K13170102	Ceramic 50WV 0.001 μ F (DB201YF102Z5L2)
R2516, 2517,	J00245222	" " " "	2.2 k Ω	2552, 2564- 2566		
2519, 2521,				C2501, 2505,	K13170103	Ceramic 50WV 0.01 μ F (DB201ZF103Z5L5)
2522, 2524,				2555, 2557, 2560-2563,		
2532				2569, 2571, 2572, 2573		
R2550, 2579	J00245272	" " " "	2.7 k Ω	C2502, 2512,	K13170473	Ceramic 50WV 0.047 μ F (DB207YF473Z5L5)
R2530, 2541,	J00245332	" " " "	3.3 k Ω	2558, 2574		
2544						
R2580	J00245392	" " " "	3.9 k Ω			
R2514, 1582	J00245472	" " " "	4.7 k Ω			

REPAIR PARTS

C2548	K19149021	Ceramic 25WV 0.047 F (UAT08X473KL46AE)		
C2515, 2530	K19149025	Ceramic 25WV 0.1 F (UAT13X104K-L46AE)		
	K51176101	Styrol 100 pF (50SU101K)		
C2513, 2514, 2517, 2522, 2539	K50177102	Mylar 50WV 0.001 μF (50F2U102M)		
	K50177152	Mylar 50 WV 0.0015 μF (50F2U102M)		
C2531	K50177103	Mylar 50WV 0.01 μF (50F2U103M)		
C2523-2525, 2535, 2538	K50177223	Mylar 50WV 0.022 μF (50F2U223M)		
C2527, 2528	K50177333	Mylar 50WV 0.033 μF (50F2U333M)		
C2516, 2518- 2521, 2547, 2570	K50177473	Mylar 50WV 0.047 μF		
C2536, 2549	K40170105	Electrolytic 50WV 1 μF (50RL105)		
C2526	K40140475	Electrolytic 25WV 4.7 μF (25RL475)		
C2532, 2533, 2540, 2541, 2543, 2544, 2546, 2567	K40120106	Electrolytic 16WV 10 μF (16RL106)		
C2534, 2542	K40129002	Electrolytic 16WV 47 μF (16RE476)		
C2568	K40120107	Electrolytic 16WV 100 μF (16RL107)		
C2545	K40109001	Electrolytic 16WV 100 μF (16RE107)		
		INDUCTOR		
L2501, 2502, 2504	L1190017	FL-5H102K 1 mH		
L2503	L1190102	S8-104K 100 mH		
		TRANSFORMER		
T2501, 2502, 2504	L0020140			
T2503	L0020319			
T2504	L0020221			
		CONNECTOR		
J2501, 2505	P1090016	SQ3056		
J2503, 2504	P0090041	5048-03A		
J2506	P0090037	5048-08A		
P2501	P0090075	P-7015P		
	P0090045	SQ4052		

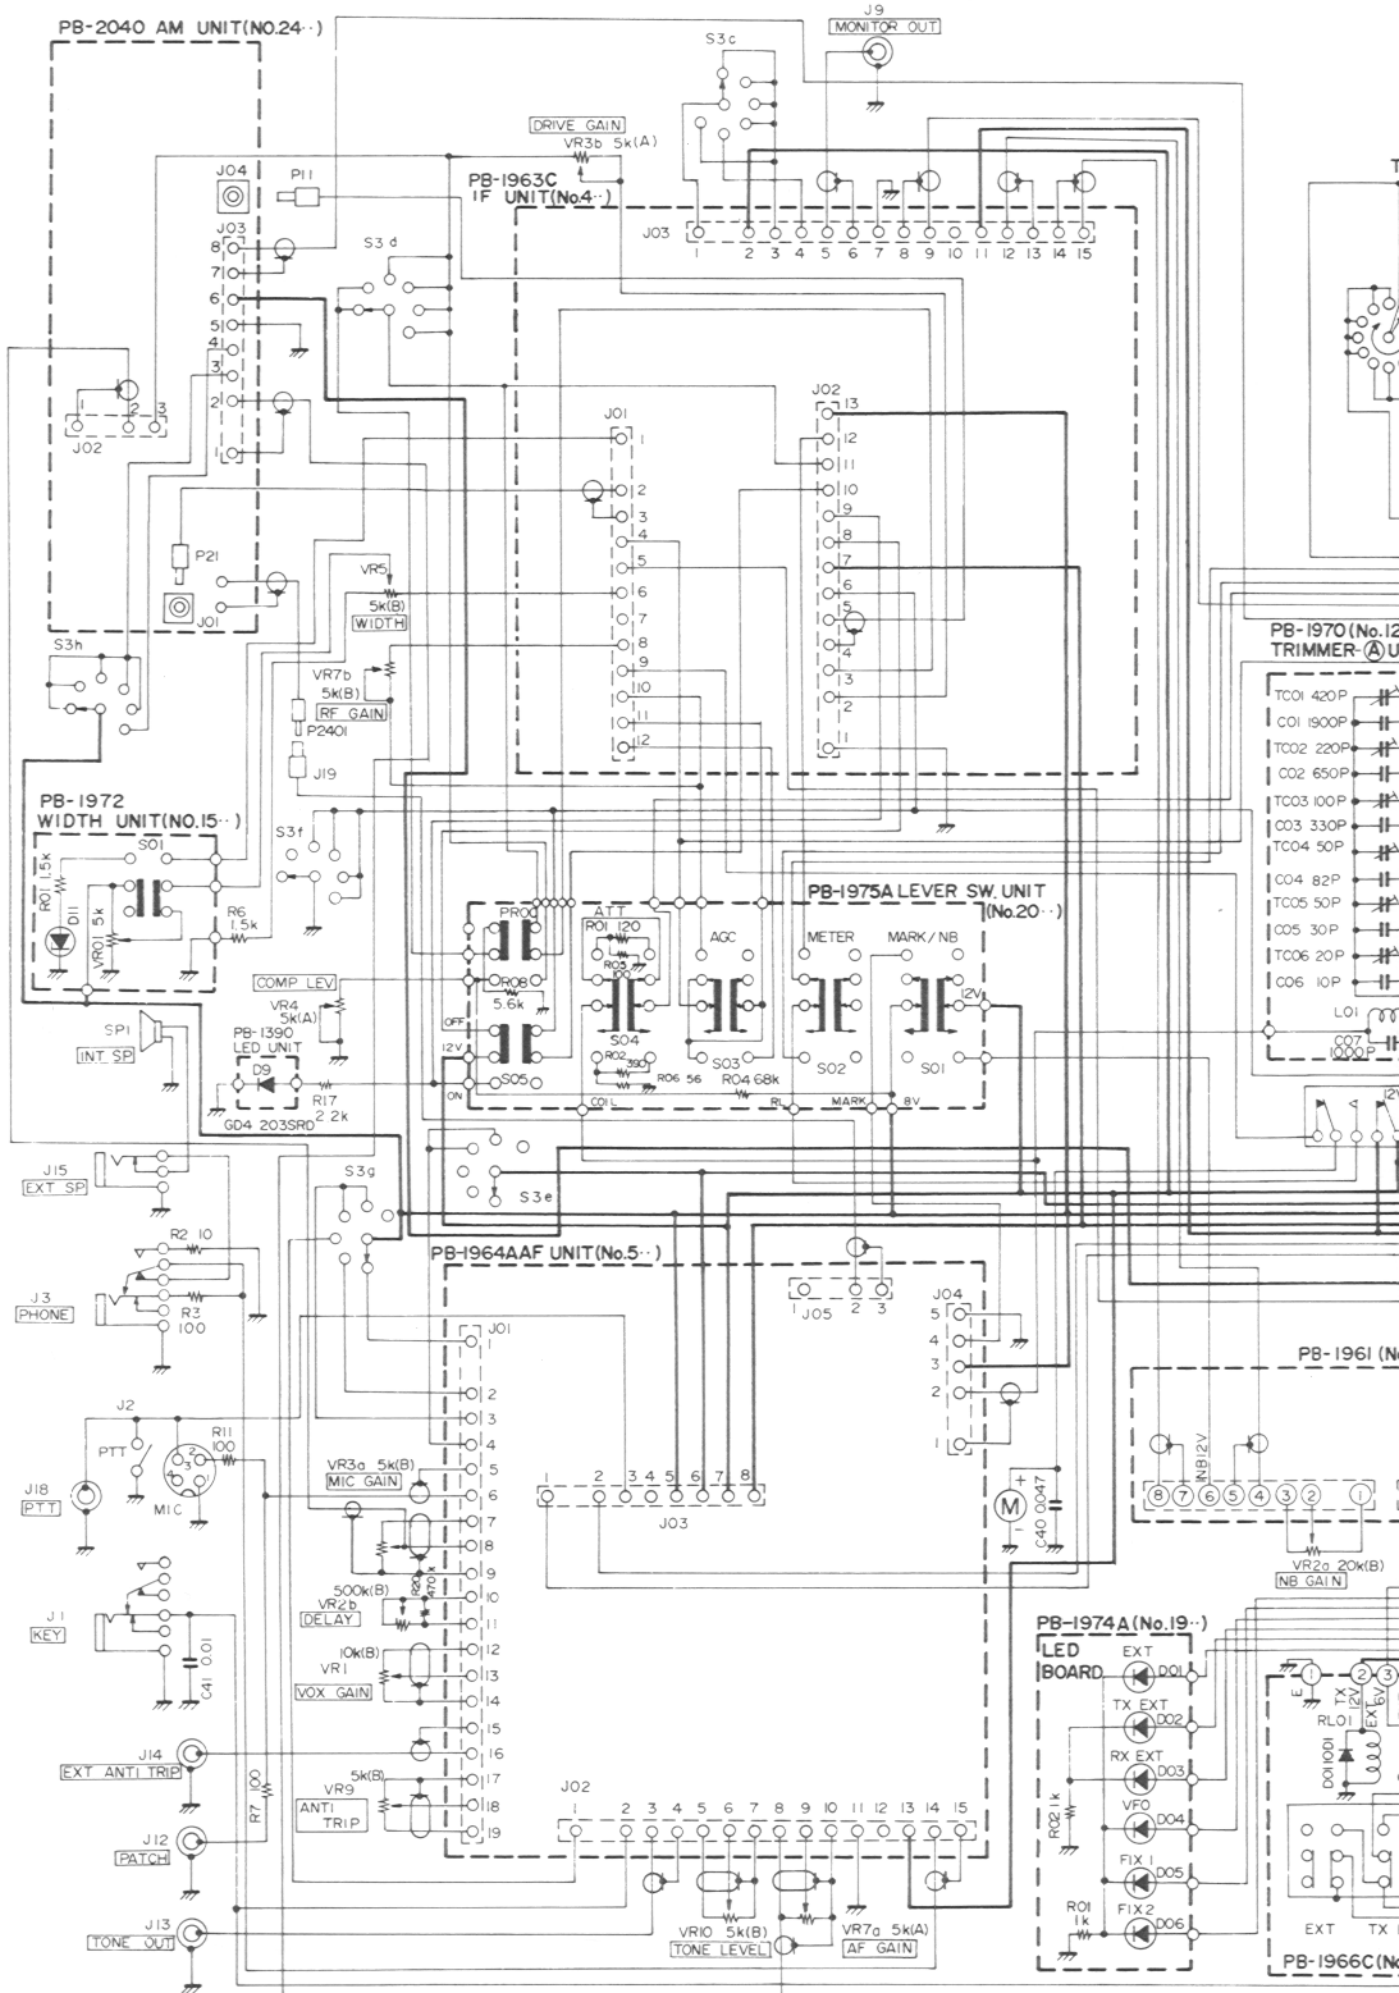

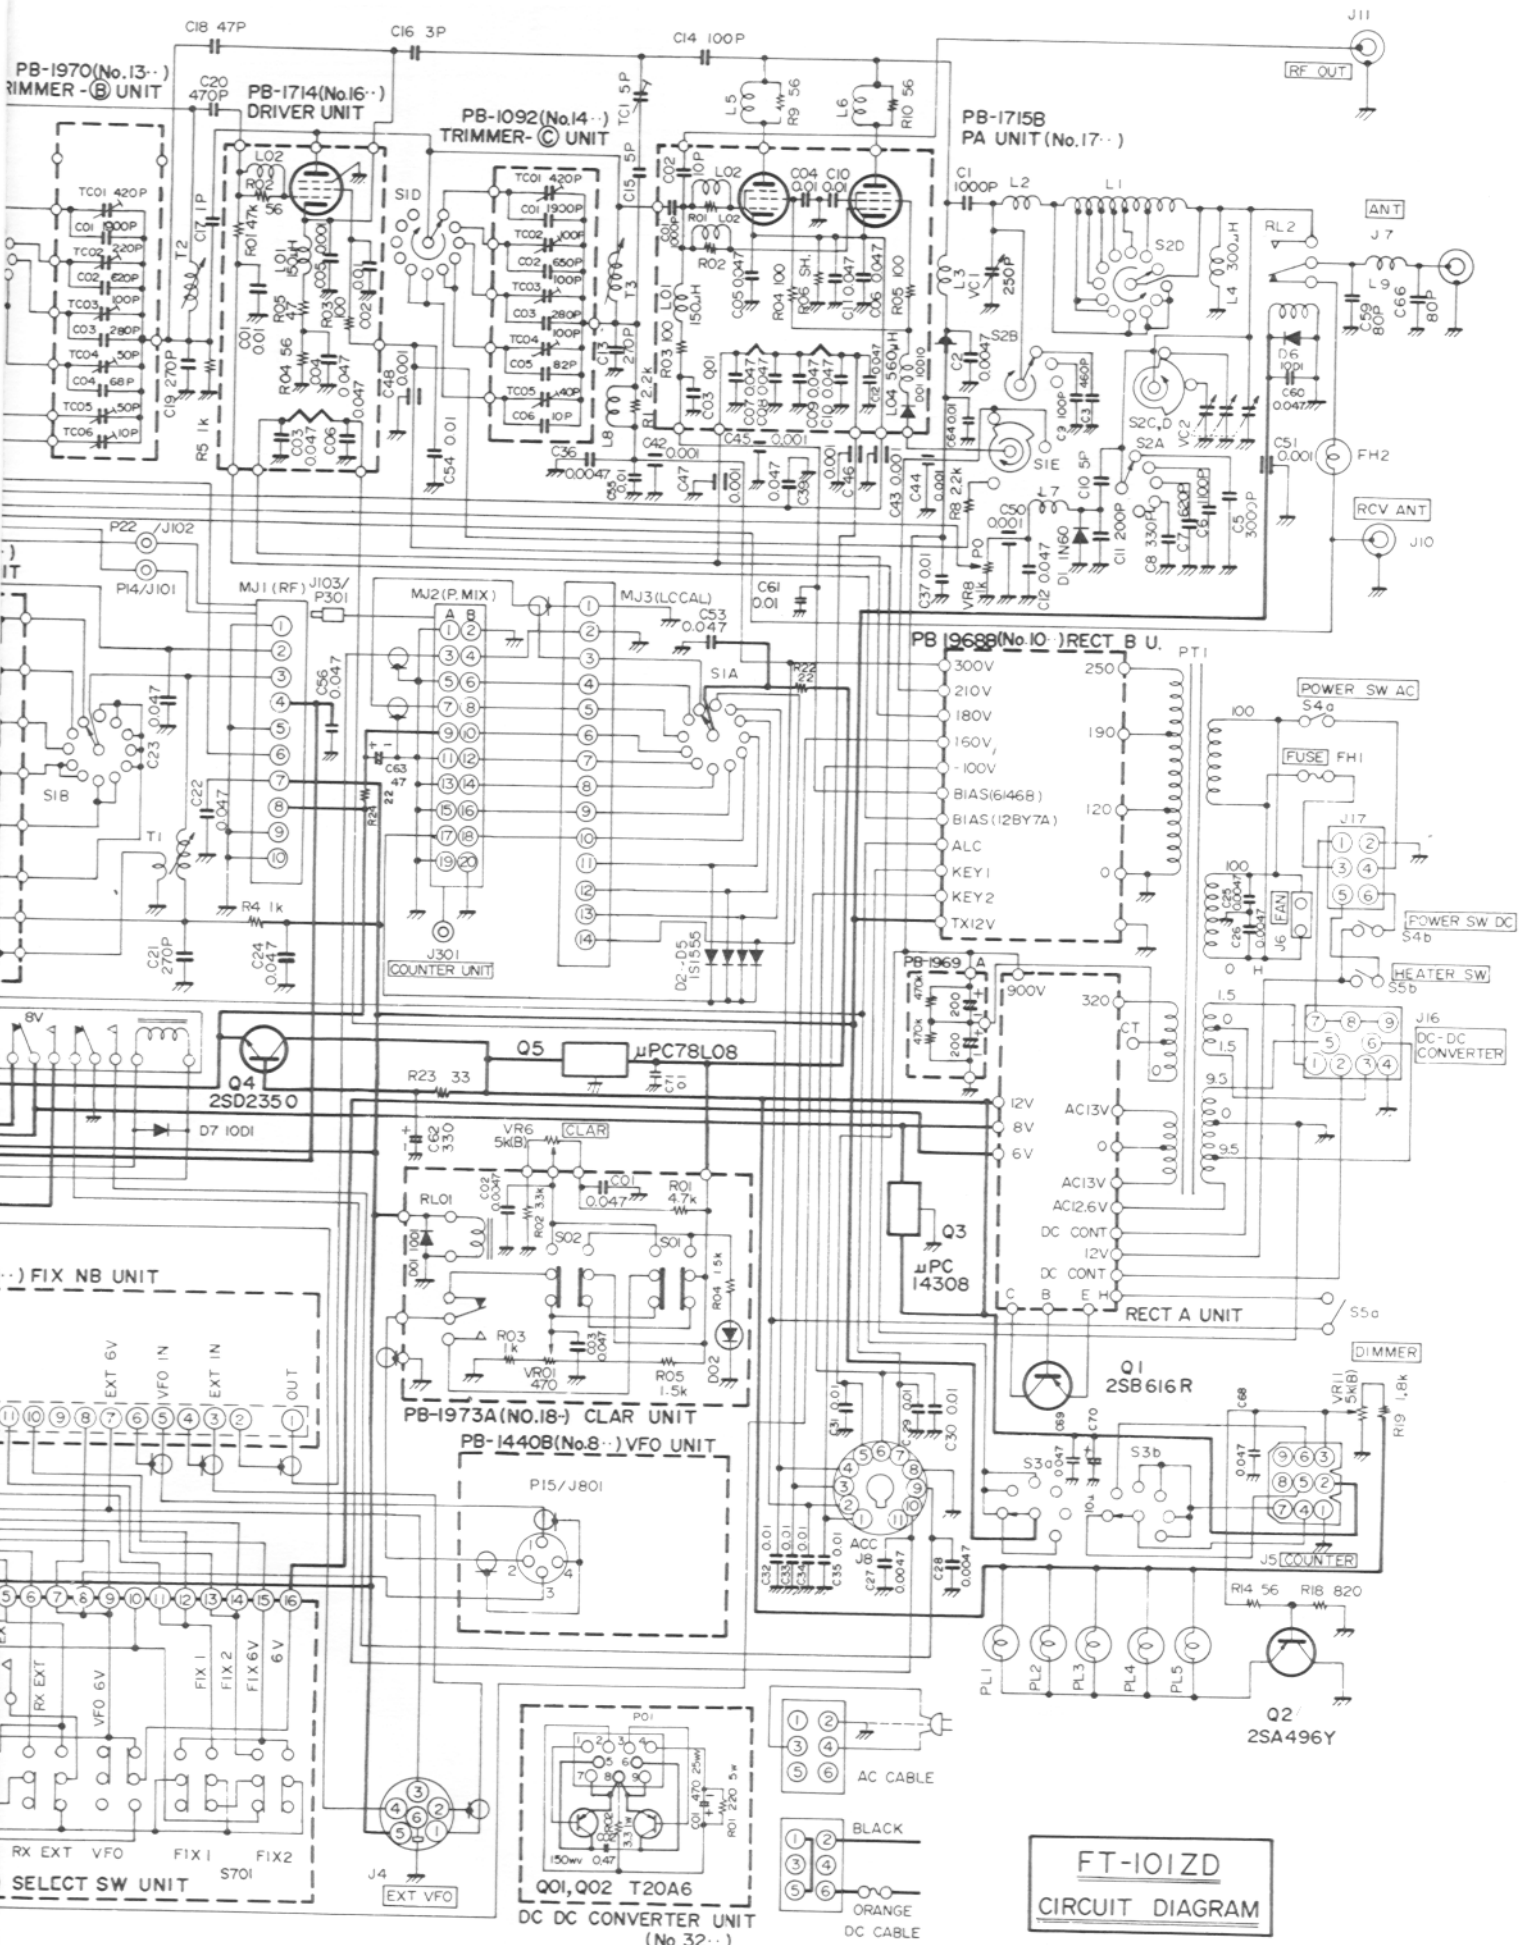

**FT-101ZD
CIRCUIT DIAGRAM**

Serial No.170001 ~ 239999

