



OPERATION AND SERVICE MANUAL

MODEL 4192A
LF IMPEDANCE ANALYZER

SERIAL NUMBERS

This manual applies to instruments with
serial numbers prefixed 2150J- and above.

Valuetronics International, Inc.
1-800-552-8258
MASTER COPY

© COPYRIGHT: YOKOGAWA-HEWLETT-PACKARD, LTD., 1983
9-1, TAKAKURA-CHO, HACHIOJI-SHI, TOKYO, JAPAN

Manual Part No. 04192-90001
Microfiche Part No. 04192-90050

Printed: APR. 1984

TABLE OF CONTENTS

Section	Title	Page	Section	Title	Page
I	GENERAL INFORMATION		3-38.	Measurement	
	1-1. Introduction	1-1		Ranges	3-22
	1-4. Description	1-1	3-40.	OSC Output	3-23
	1-12. Specifications	1-3	3-42.	Channel A/B	3-23
	1-14. Safety Considerations	1-3	3-46.	Input	
	1-17. Instruments Covered by			Configurations	3-24
	Manual	1-3	3-48.	Impedance	
	1-22. Options	1-18		Matching	3-26
	1-26. Accessories Supplied	1-18	3-55.	Measurement Time	3-27
	1-28. Accessories Available	1-18	3-57.	Test Fixture	
				Characteristics	3-28
			3-59.	Amplitude/Phase	
II	INSTALLATION			Measurement Operating	
	2-1. Introduction	2-1		Instructions	3-32
	2-3. Initial Inspection	2-1	3-61.	Swept Frequency	
	2-5. Preparation for Use	2-1		Measurement	3-34
	2-6. Power Requirements	2-1	3-63.	Group Delay	
	2-8. Line Voltage and Fuse			Measurement	3-37
	Selection	2-1	3-65.	Impedance	
	2-10. Power Cable	2-2		Measurements	3-40
	2-14. Interconnections	2-2	3-67.	Measurement	
	2-16. Operating Environment .	2-4		Functions	3-40
	2-19. Installation		3-71.	Measurement Range	3-41
	Instructions	2-4	3-73.	Circuit Mode	3-46
	2-21. Installation of Options		3-75.	Unknown Terminals	3-47
	907, 908 and 909.....	2-4	3-77.	Selection of Test	
	2-23. Storage and Shipment	2-5		Cable Length	3-49
	2-24. Environment	2-5	3-79.	ZERO Offset	
	2-26. Packaging	2-5		Adjustment	3-49
			3-82.	Actual Measurement	
III	OPERATION			Equivalent	
	3-1. Introduction	3-1		Circuit	3-51
	3-3. Operating		3-86.	Measured Values and	
	Instructions	3-2		Behavior of	
	3-5. Panel Features	3-2		Components	3-53
	3-7. Self Test	3-14	3-89.	Measurement Time	3-53
	3-9. Initial Control		3-91.	Test Signal Level	
	Settings	3-14		Monitor	3-55
	3-11. Displays	3-15	3-93.	Characteristics of	
	3-18. Test Signal	3-18		Test Fixtures	3-56
	3-20. Measurement Modes	3-18	3-95.	Impedance Measurement	
	3-22. Trigger Modes	3-19		Operating	
	3-26. Deviation			Instructions	3-57
	Measurement	3-19	3-97.	Swept Frequency	
	3-30. Continuous Memorization			Measurements	3-60
	of Control Settings		3-99.	Swept OSC Level	
	(SAVE and RECALL			Measurements	3-62
	Functions)	3-21	3-101.	Internal DC Bias	
	3-34. Amplitude/Phase			Supply	3-62
	Measurement	3-22	3-103.	Swept Bias Voltage	
	3-36. Measurement			Measurements	3-64
	Functions	3-22	3-105.	Measurement of	
				Grounded Devices	3-65
			3-107.	External DC Bias	3-65
			3-109.	HP-IB Interface	3-68

TABLE OF CONTENTS

Section	Title	Page	Section	Title	Page
3-111.	Connection to HP-IB ...	3-68	5-7.	Equipment Required	5-1
3-113.	HP-IB Status Indicators	3-68	5-9.	Factory Selected Components	5-1
3-115.	LOCAL Key	3-68	5-11.	Adjustment Relationships .	5-1
3-117.	HP-IB Control Switch	3-68	5-13.	Adjustment Locations	5-2
3-119.	HP-IB Interface Capabilities	3-69	5-15.	Initial Operating Procedure	5-2
3-121.	Remote Program Code ...	3-69	5-17.	A7 Power Supply Adjustment	5-5
3-123.	Parameter Setting	3-72	5-19.	A8 DC Bias Check and Adjustment	5-6
3-125.	Data Output	3-72	5-21.	A3 40MHz VCXO Adjustment/40MHz-IF VCO Adjustment	5-8
3-127.	Service Request Status Byte	3-74	5-23.	A4 API Adjustment	5-10
3-129.	Programming Guide for 4192A	3-75	5-25.	A4 S/H 100kHz Spurious Adjustment	5-12
3-131.	X-Y Recorder Output	3-78	5-27.	A12 OSC Level Adjustment .	5-14
3-133.	Analog Outputs	3-78	5-29.	A11 Input Channel Isolation Check	5-15
3-135.	Control Capabilities for Analog Output	3-78	5-31.	A11 Input Channel Tracking Adjustment	5-16
3-137.	External Synthesizer	3-84	5-33.	A11 IF Attenuator Adjustment	5-17
3-139.	Internal Control Switch	3-86	5-35.	A11IF Amplifier Adjustment	5-18
IV	PERFORMANCE TESTS		5-37.	A1 Null Detector DC Offset Adjustment	5-19
4-1.	Introduction	4-1	5-39.	A1 L _{CUR} Amplifier Output Level Adjustment	5-20
4-3.	Equipment Required	4-1	5-41.	A1 L _{CUR} Amplifier Phase Adjustment	5-22
4-5.	Test Record	4-1	5-43.	A1 Phase Tracking Adjustment	5-24
4-7.	Calibration Cycle	4-1	5-45.	A1 10MHz Phase Adjustment .	5-26
4-9.	Measurement Signal Frequency Accuracy Test .	4-2	5-47.	A9 Analog Recorder Output Check and Adjustment	5-28
4-11.	Measurement Signal Level Accuracy Test	4-3	VI	REPLACEABLE PARTS	
4-13.	Capacitance Accuracy Test	4-4	6-1.	Introduction	6-1
4-15.	Resistance Accuracy Test .	4-6	6-3.	Abbreviations	6-1
4-17.	Frequency/Phase Accuracy Test	4-8	6-5.	Replaceable Parts List ...	6-1
4-19.	Amplitude/Phase Accuracy Test	4-9	6-7.	Order Information	6-2
4-21.	Amplitude Accuracy Test ..	4-10	6-10.	Direct Mail Order System .	6-2
4-23.	Absolute Amplitude Accuracy Test	4-12	VII	MANUAL CHANGES	
4-25.	Phase Accuracy Test	4-13	7-1.	Introduction	7-1
4-27.	DC Bias Voltage Accuracy Test	4-15	7-3.	Manual Changes	7-1
4-29.	Recorder Output Voltage Accuracy Test	4-16			
4-31.	HP-IB Interface Test	4-17			
V	ADJUSTMENT				
5-1.	Introduction	5-1			
5-3.	Safety Requirements	5-1			

TABLE OF CONTENTS

Section	Title	Page	Section	Title	Page
VIII	SERVICE	8-1	8-81.	Measurement Control Register	8-28
8-1.	Introduction	8-1	8-83.	Fractional N Control Register	8-28
8-3.	Safety Considerations	8-1	8-85.	Status Buffer	8-28
8-5.	Theory of Operation ..	8-1	8-87.	HP-IB Interface ...	8-28
8-7.	Recommended Test Equipment	8-1	8-89.	Front-Panel Control	8-29
8-9.	Troubleshooting	8-1	8-93.	A5 Display and Keyboard Control	8-30
8-11.	Repair	8-1	8-96.	Timing Diagram Discussion	8-35
8-13.	Basic Operating Theory	8-2	8-98.	Troubleshooting	8-38
8-15.	Auto-Balance Bridge Measurement Circuit	8-2	8-100.	Warnings and Cautions	8-41
8-21.	Vector Voltage Ratio Detector	8-6	8-102.	Analog Section Troubleshooting To Assembly Level	8-41
8-30.	Amplitude-Phase Measurement Circuit	8-10	8-104.	Primary Troubleshooting Guide	8-41
8-34.	Block Diagram Discussion	8-12	8-106.	Isolation of the Signal Source	8-41
8-35.	Analog Measurement Section	8-12	8-109.	Isolation of Trouble Causing UCL Display	8-42
8-37.	Signal Source	8-12	8-111.	Isolation of the Range Control Circuit	8-43
8-40.	Reference Signal ...	8-16	8-113.	Isolation of the VRD Section (A11 and A2 Boards)	8-44
8-42.	Test Signal Output	8-16		Diagnostic Test Flow Diagram Notes	8-47
8-44.	Auto-Balance Bridge	8-17	8-115.	Repair	8-67
8-46.	Phase Tracking of the Bridge Control Loop	8-17	8-116.	A6 Microprocessor Digital Control Board Disassembly ..	8-67
8-48.	IF Signal Source ...	8-17	8-118.	A2, A3, A4 and A9 Boards Disassembly ..	8-68
8-50.	Floating Measurement Circuit Configuration	8-17	8-120.	A1, A11 and A12 Boards Disassembly ..	8-68
8-52.	Process Amplifier Stage ..	8-18	8-122.	A5 Display and Keyboard Control Board Disassembly ..	8-68
8-54.	Phase Detection ...	8-19	8-124.	Product Safety Checks	8-70
8-56.	A-D Conversion	8-19			
8-58.	Internal DC Bias Source	8-20			
8-60.	Digital Control Section	8-24			
8-62.	A6 Microprocessor Digital Control ...	8-24			
8-65.	I/O Signals	8-24			
8-68.	Memory	8-24			
8-71.	Read/Write Control	8-25			
8-75.	IRQ Circuit	8-25			
8-77.	Serial Port	8-25			
8-79.	VRD Control	8-26			

TABLE OF CONTENTS

Section	Title	Page
8-126.	A1 Range Resistor/ Null Detector	8-77
8-127.	Null Detector (1): I-V Converter and IF Amplifier	8-77
8-130.	Null Detector (2): Phase Detector and Phase Tracking Circuit	8-81
	A1 Board Functional Test	8-83
8-133.	Range Resistor and Power Amplifiers ...	8-87
	A1 Board Functional Test	8-89
8-135.	A2 Phase Detector and Integrator	8-93
	A3 Board Functional Test	8-100
8-137.	A3 Reference Frequency Generator	8-100
	A4 Board Functional Test	8-108
8-139.	A4 Fractional N Loop (Analog)	8-108
8-140.	Phase Comparator, Loop Filter, API Current Source and VCO Circuits	8-108
8-142.	A4 Fractional N Loop (Digital)	8-114
8-143.	Fractional Down Counter and Fractional N Control Chip	8-114
8-145.	A7 Power Supply	8-125
8-147.	A8 Floating Power Supply/Bias Supply ..	8-128
8-148.	Floating Power Supply Section	8-128
8-150.	Floating DC Bias Supply Section	8-131
8-152.	A9 Analog Recorder Output	8-135
	A11 Board Functional Test	8-140
8-154.	A11 Process Amplifier	8-140
8-156.	A12 Modulator	8-147

LIST OF TABLES

Number	Title	Page	Number	Title	Page
1-1.	Specifications	1-4	4-1.	Recommended Test Equipment	4-A
1-2.	General Information	1-16	4-2.	Measurement Signal Accuracy Test	4-2
1-3.	Available Options	1-18	4-3.	Measurement Signal Level Accuracy Test	4-4
1-4.	Accessories Available	1-19	4-4.	Capacitance Accuracy Test	4-6
3-1.	4192A Self Test	3-14	4-5.	Resistance Accuracy Test	4-7
3-2.	Operational Error-codes	3-16	4-6.	Frequency-Phase Accuracy Test	4-8
3-3.	Annunciations	3-16	4-7.	Amplitude/Phase Accuracy Test	4-10
3-4.	SELF TEST Error-codes	3-17	4-8.	Amplitude Accuracy Test	4-11
3-5.	Frequency and Output Level of Test Signal	3-18	4-9.	Absolute Amplitude Accuracy Test	4-13
3-6.	Test Parameters	3-20	4-10.	Phase Accuracy Test	4-14
3-7.	DISPLAY A/B Functions for Amplitude/Phase Measurements	3-22	4-11.	DC Bias Voltage Accuracy Test	4-15
3-8.	Measurement Range for Amplitude/Phase Measurements	3-22	4-12.	Recorder Output Voltage Accuracy Test	4-16
3-9.	BNC Cables	3-24	4-13.	Controller Instructions and Operator Responses for Program 1	4-19
3-10.	Impedance Terminations	3-24	4-14.	Controller Instructions and Operator Responses for Program 4	4-23
3-11.	Balancing Transformers	3-26	4-15.	Controller Instructions and Operator Responses for Program 5	4-25
3-12.	Measurement Time for Amplitude/Phase Measurements	3-27	5-1.	Adjustable Components	5-3
3-13.	DISPLAY A/B Functions for Impedance Measurements	3-40	5-2.	Factory Selected Components ..	5-4
3-14.	Measurement Parameter Formulas for Impedance Measurements	3-41	5-3.	Adjustment Requirements	5-4
3-15.	ZY RANGE	3-41	5-4.	Manual Operating Self-Test Item	5-30
3-16.	Measurement Range of $\theta/Q/D$..	3-42	6-1.	List of Reference Designators and Abbreviations	6-1
3-17.	Dissipation Factor Equations	3-47	6-2.	Manufacturers Code Lists	6-2
3-18.	ZERO Offset Adjustments	3-50	6-3.	Replaceable Parts	6-3
3-19.	Measurement Time for Impedance Measurement	3-54	6-4.	Board Mounted Hardware	6-42
3-20.	Test Signal Level Monitor	3-55	6-5.	Interconnecting Cable Assemblies	6-44
3-21.	Typical Characteristics of Test Fixtures and Leads	3-56	6-6.	Parts Identification	6-46
3-22.	HP-IB Interface Capabilities	3-69	7-1.	Manual Changes by Serial Number	7-1
3-23.	Remote Program Code	3-69			
3-24.	Program Codes for Parameter Setting	3-72			
3-25.	Data Output Codes	3-74			
3-26.	Sample Program using 9825A/9835A	3-75			
3-27.	Connection of Recorder Output	3-81			
3-28.	Internal Control Switch	3-87			

LIST OF TABLES

Number	Title	Page
8-1.	Test Frequency and IF Signal Frequency Relationship	8-18
8-2.	Digital Data Processing Time	8-35
8-3.	4192A Error Message Meanings	8-39
8-4.	Front-Panel Troubleshooting Guide	8-40
8-5.	Null Detector Gain Control ..	8-77
8-6.	Phase-Tracking Control Data States	8-82
8-7.	Relationship of the Source Resistor and the Measurement Range	8-88
8-8.	Relationship of the Range Resistor and the Measurement Range	8-88
8-9.	Integrator Charge Time Control	8-95
8-10.	IF Amplifier Gain Control ..	8-143
8-11.	IF Conversion Mixer Gain Control	8-143

LIST OF ILLUSTRATIONS

Number	Title	Page	Number	Title	Page
1-1.	Model 4192A and Accessories	1-1	3-27.	Effects of Resonance in Sample (Example)	3-52
1-2.	Serial Number Plate	1-3	3-28.	Impedance Vector Representation	3-53
2-1.	Line Voltage and Fuse Selection	2-2	3-29.	Typical Impedance Locus of an Inductor	3-53
2-2.	Available Power Codes	2-3	3-30.	Operating Instructions for Impedance Measurements	3-57
2-3.	Rack Mount Kits	2-4	3-31.	Operating Instructions for Swept-Frequency Impedance Measurements	3-60
3-1.	Contents of Section III	3-1	3-32.	Operating Instructions for Internal DC Bias Supply	3-63
3-2.	Front Panel Features	3-2	3-33.	Operating Instructions for Swept-Bias Voltage Impedance Measurements	3-64
3-3.	Rear Panel Features	3-12	3-34.	External DC Voltage Supply	3-66
3-4.	External Trigger Pulse	3-19	3-35.	HP-IB Control Switch	3-68
3-5.	Equivalent Output Circuit	3-23	3-36.	Data Output Format for the 4192A	3-73
3-6.	Equivalent Input Circuit	3-23	3-37.	Status Byte for the 4192A	3-75
3-7.	Zt vs Frequency	3-24	3-38.	Sample Program 1 Using 9825A/9835A	3-76
3-8.	Input Configurations	3-25	3-39.	Sample Program 2 Using 9825A/9835A	3-77
3-9.	Cable Compensation	3-28	3-40.	X-Y Recorder Output	3-80
3-10.	Operating Instructions for Amplitude/Phase Measurements	3-32	3-41.	Plot Areas of RECORDER OUTPUTS	3-82
3-11.	Operating Instructions for Swept-Frequency Amplitude/Phase Measurements	3-34	3-42.	External Synthesizer	3-84
3-12.	Group Delay Measurement at Spot Frequency	3-37	3-43.	A6S2 Internal Control Switch	3-86
3-13.	Group Delay Measurement at Swept Frequency	3-38	4-1.	Measurement Signal Frequency Accuracy Test Setup	4-2
3-14.	Measurement Ranges and Resolution of the Group Delay Measurements	3-39	4-2.	Measurement Signal Level Accuracy Test Setup	4-3
3-15.	Display Digits for Z /Y Measurements	3-43	4-3.	Capacitance Accuracy Test Setup	4-4
3-16.	Measurement Ranges, Resolution and Display Digits for L/C Measurements	3-45	4-4.	Resistance Accuracy Test Setup	4-6
3-17.	Auto Changing of the Measurement Equivalent Circuit	3-46	4-5.	Frequency/Phase Accuracy Test Setup	4-8
3-18.	Parallel and Series Parameter Relationship	3-47	4-6.	Amplitude/Phase Accuracy Test Setup	4-8
3-19.	Four Terminal Pair DUT Connectors	3-48	4-7.	Amplitude Accuracy Test Setup	4-10
3-20.	Four Terminal Pair Measurement Principle	3-48	4-8.	Absolute Amplitude Accuracy Test Setup	4-12
3-21.	Test Signal Phase on Test Cables	3-49	4-9.	Phase Accuracy Test Setup	4-13
3-22.	Residual Impedance	3-49	4-10.	DC Bias Voltage Accuracy Test Setup	4-15
3-23.	Stray Admittance	3-51	4-11.	Recorder Output Voltage Accuracy Test Setup	4-16
3-24.	Parasitic Elements Incident to DUT Connections	3-51			
3-25.	Equivalent Circuits Including Residual Impedance	3-51			
3-26.	Effects of Residual Impedance	3-52			

LIST OF ILLUSTRATIONS

Number	Title	Page	Number	Title	Page
4-12.	HP-IB Interface Test Setup	4-17	8-1.	Vector-Voltage-Current-Ratio Measurement Method Using the Range Resistor Amplifier	8-2
5-1.	A7 Power Supply Adjustment Setup	5-5	8-2.	Two Oscillator Model of the Auto-Balance Bridge	8-2
5-2.	A8 DC Bias Check and Adjustment Setup	5-6	8-3.	Principle of the Auto-Balance Control	8-3
5-3.	A3 40MHz VCXO Adjustment/40MHz-IF VCO Adjustment Setup	5-8	8-4.	Actual Auto-Balance Bridge Circuit	8-3
5-4.	A4 API Adjustment Setup	5-10	8-5.	Principle of the Modulator ..	8-4
5-5.	Waveforms at A4TP4	5-11	8-6.	Vector Voltage Ratio Detector Basic Block Diagram	8-6
5-6.	A4 S/H 100kHz Spurious Adjustment Setup	5-12	8-7.	Phase Detection Vector Diagram	8-7
5-7.	Waveforms at A4TP4	5-13	8-8.	Vector Voltage Ratio Detection Timing	8-8
5-8.	A12 OSC Level Adjustment Setup	5-14	8-9.	Test Signal Voltage and Current Relationship to DUT's Impedance	8-9
5-9.	A11 Input Channel Isolation Check Setup	5-15	8-10.	Typical Network Analyzer Construction	8-10
5-10.	A11 Input Channel Tracking Adjustment Setup	5-16	8-11.	Amplitude-Phase Measurement Circuit Basic Block Diagram	8-10
5-11.	A11 IF Attenuator Adjustment Setup	5-17	8-12.	Amplitude-Phase Measurement Timing	8-11
5-12.	A11 IF Amplifier Adjustment Setup	5-18	8-13.	4192A Block Diagram	8-12
5-13.	A1 Null Detector DC Offset Adjustment Setup	5-19	8-14.	$\div N / \div N+1$ Counter Block Diagram	8-13
5-14.	A1 L_{CUR} Amplifier Phase Adjustment Setup	5-20	8-15.	API Circuit Block Diagram ..	8-13
5-15.	A1 L_{CUR} Amplifier Phase Adjustment Setup	5-22	8-16.	Phase Relationship of the Phase Detector Inputs	8-14
5-16.	Waveforms at Outer Conductor of Feedthrough Termination ..	5-23	8-17.	Phase Accumulator Operating Principle	8-15
5-17.	A1 Phase Tracking Adjustment Setup	5-24	8-18.	API Current Source Basic Block Diagram	8-16
5-18.	10MHz Phase Adjustment	5-26	8-19.	Principle of the Multi-Slope A-D Conversion	8-19
5-19.	A9 Analog Recorder Output Check and Adjustment	5-28	8-20.	A-D Converter Charge/Discharge Control	8-20
5-20.	Adjustment Locations	5-31	8-21.	DC Bias Circuit Simplified Schematic	8-20
6-1.	Major Mechanical Parts on the Instrument Exterior - Exploded View	6-45	8-22.	Analog Measurement Section Block Diagram	8-21
6-2.	Major Mechanical Parts - Exploded View	6-47	8-23.	Floating Measurement Circuit Configuration	8-23
			8-24.	Address Timing Control	8-24
			8-25.	VRD Control Circuit Block Diagram	8-26
			8-26.	A-D Conversion Data Counter Simplified Schematic	8-27

LIST OF ILLUSTRATIONS

Number	Title	Page	Number	Title	Page
8-27.	HP-IB Interface Adapter Internal Register Configuration	8-28	8-47.	A1 Range Resistor/Null Detector Board Assembly Schematic Diagram (Sheet 2 of 3)	8-85
8-28.	Matrix Keyboard Operating Principle	8-30	8-48.	A1 Range Resistor/Null Detector Board Troubleshooting Flow Diagram -- 3 of 3	8-86
8-29.	Digital Control Section Block Diagram -- A6 Microprocessor Digital Control	8-31	8-49.	A1 Range Resistor/Null Detector Board Assembly Schematic Diagram (Sheet 3 of 3)	8-91
8-30.	Digital Control Section Block Diagram -- A5 Display and Keyboard Control	8-33	8-50.	A2 Phase Detector/A-D Converter Board Troubleshooting Flow Diagram	8-92
8-31.	Measurement Control Timing Diagram	8-37	8-51.	Basic Phase Detection	8-93
8-32.	How to Use Troubleshooting Guides	8-38	8-52.	Phase Detection Vector Diagram	8-93
8-33.	Analog Measurement Section Troubleshooting Flow Diagram	8-45	8-53.	Full Wave Phase Detection ...	8-93
8-34.	Signature Analysis	8-49	8-54.	A2 Phase Detector/A-D Converter Board Assembly Component Locations	8-96
8-35.	16343A Connection	8-52	8-55.	A2 Phase Detector/A-D Converter Board Assembly Schematic Diagram	8-97
8-36.	Diagnostic Test Flow Diagram (Analog and Digital Section Isolation Procedure)	8-53	8-56.	A3 Reference Frequency Generator Board Troubleshooting Flow Diagram -- 1 of 2	8-98
8-37.	Signature Analysis Troubleshooting Flow Diagram	8-54	8-57.	A3 Reference Frequency Generator Board Troubleshooting Flow Diagram -- 2 of 2	8-99
8-38.	A6 Microprocessor Digital Control Board Disassembly	8-67	8-58.	A3 Reference Frequency Generator Block Diagram	8-100
8-39.	A5 Display and Keyboard Control Board Disassembly	8-69	8-59.	A3 Reference Frequency Generator Board Assembly Component Locations	8-102
8-40.	Assembly Locations	8-71	8-60.	A3 Reference Frequency Generator Board Assembly Schematic Diagram	8-103
8-41.	Schematic Diagram Notes	8-75	8-61.	A4 Fractional N Loop Board Troubleshooting Flow Diagram -- 1 of 4	8-104
8-42.	A1 Range Resistor/Null Detector Board Troubleshooting Flow Diagram -- 1 of 3	8-76	8-62.	A4 Fractional N Loop Board Troubleshooting Flow Diagram -- 2 of 4	8-105
8-43.	A1 Range Resistor/Null Detector Board Assembly Component Locations	8-78	8-63.	A4 Fractional N Loop Board Troubleshooting Flow Diagram -- 3 of 4	8-106
8-44.	A1 Range Resistor/Null Detector Board Assembly Schematic Diagram (Sheet 1 of 3)	8-79	8-64.	A4 Fractional N Loop Board Troubleshooting Flow Diagram -- 4 of 4	8-107
8-45.	A1 Range Resistor/Null Detector Board Troubleshooting Flow Diagram -- 2 of 3	8-80			
8-46.	Phase Detector Circuit Operation	8-81			

LIST OF ILLUSTRATIONS

Number	Title	Page	Number	Title	Page
8-65.	A4 Fractional N Loop Block Diagram	8-108	8-82.	A8 Floating Power Supply/ Bias Supply Board Assembly Schematic Diagram (Sheet 1 of 2)	8-129
8-66.	API Current Source Simplified Schematic	8-109	8-83.	A8 Floating Power Supply/ Bias Supply Board Troubleshooting Flow Diagram (Bias Supply Section)	8-130
8-67.	API Control Timing Diagram	8-111	8-84.	A8 Floating Power Supply/ Bias Supply Board Assembly Schematic Diagram (Sheet 2 of 2)	8-133
8-68.	A4 Fractional N Loop Board Assembly Component Locations	8-112	8-85.	A9 Analog Recorder Output Board Troubleshooting Flow Diagram	8-134
8-69.	A4 Fractional N Loop Board Assembly Schematic Diagram (Sheet 1 of 2)	8-113	8-86.	A9 Analog Recorder Output Board Assembly Component Locations	8-136
8-70.	2/ 3 Counter Timing Diagram	8-114	8-87.	A9 Analog Recorder Output Board Assembly Schematic Diagram	8-137
8-71.	A4 Fractional N Loop Board Assembly Schematic Diagram (Sheet 2 of 2)	8-115	8-88.	All Process Amplifier Board Troubleshooting Flow Diagram -- 1 of 2	8-138
8-72.	A5 Display and Keyboard Control Board Assembly Component Locations	8-116	8-89.	All Process Amplifier Board Troubleshooting Flow Diagram -- 2 of 2	8-139
8-73.	A5 Display and Keyboard Control Board Assembly Schematic Diagram	8-117	8-90.	Basic IF Conversion Mixer ...	8-140
8-74.	A6 Microprocessor Digital Control Board Assembly Component Locations	8-118	8-91.	Actual IF Conversion Mixer on the All Board	8-141
8-75.	A6 Microprocessor Digital Control Board Assembly Schematic Diagram (Sheet 1 of 3)	8-119	8-92.	All Process Amplifier Board Assembly Component Locations	8-144
8-76.	A6 Microprocessor Digital Control Board Assembly Schematic Diagram (Sheet 2 of 3)	8-121	8-93.	All Process Amplifier Board Assembly Schematic Diagram	8-145
8-77.	A6 Microprocessor Digital Control Board Assembly Schematic Diagram (Sheet 3 of 3)	8-123	8-95.	A12 Modulator Block Diagram	8-147
8-78.	A7 Power Supply Board Troubleshooting Flow Diagram	8-124	8-96.	A12 Modulator Board Assembly Component Locations	8-149
8-79.	A7 Power Supply Board and A10 Battery and Charger Board Assembly Component Locations	8-127	8-97.	A12 Modulator Board Assembly Schematic Diagram	8-149
8-80.	A7 Power Supply Board and A10 Battery and Charger Board Assembly Schematic Diagram	8-127			
8-81.	A8 Floating Power Supply/ Bias Supply Board Assembly Component Locations	8-129			

SECTION I GENERAL INFORMATION

1-1. INTRODUCTION

1-2. This operating manual contains the information required to install, operate, and test the Hewlett-Packard Model 4192A LF Impedance Analyzer. Figure 1-1 shows the instrument and supplied accessories. This section covers specifications, instrument identification, description, options, accessories, and other basic information.

1-3. Listed on the title page of this manual is a microfiche part number. This number can be used to order 4 X 6 inch microfilm transparencies of the manual. Each microfiche contains up to 60 photo-duplicates of the manual pages. The microfiche package also includes the latest manual changes supplement as well as all pertinent service notes. To order an additional manual, use the part number listed on the title page of this manual.

1-4. DESCRIPTION

1-5. The HP Model 4192A LF Impedance Analyzer is a fully automatic, high performance test instrument designed to measure a wide range of impedance parameters as well as gain, phase, and group delay. The 4192A improves efficiency and quality in the development and production of many types of complex components, semiconductors, and materials. Complete network analysis of devices such as filters, crystals and audio/video equipment, plus evaluation of the impedance characteristics of their circuit components, can be performed. These tests can be performed using test signals equivalent to those found under actual operating conditions. The two measurement display sections, DISPLAY A and DISPLAY B, provide direct readout of the selected meas-

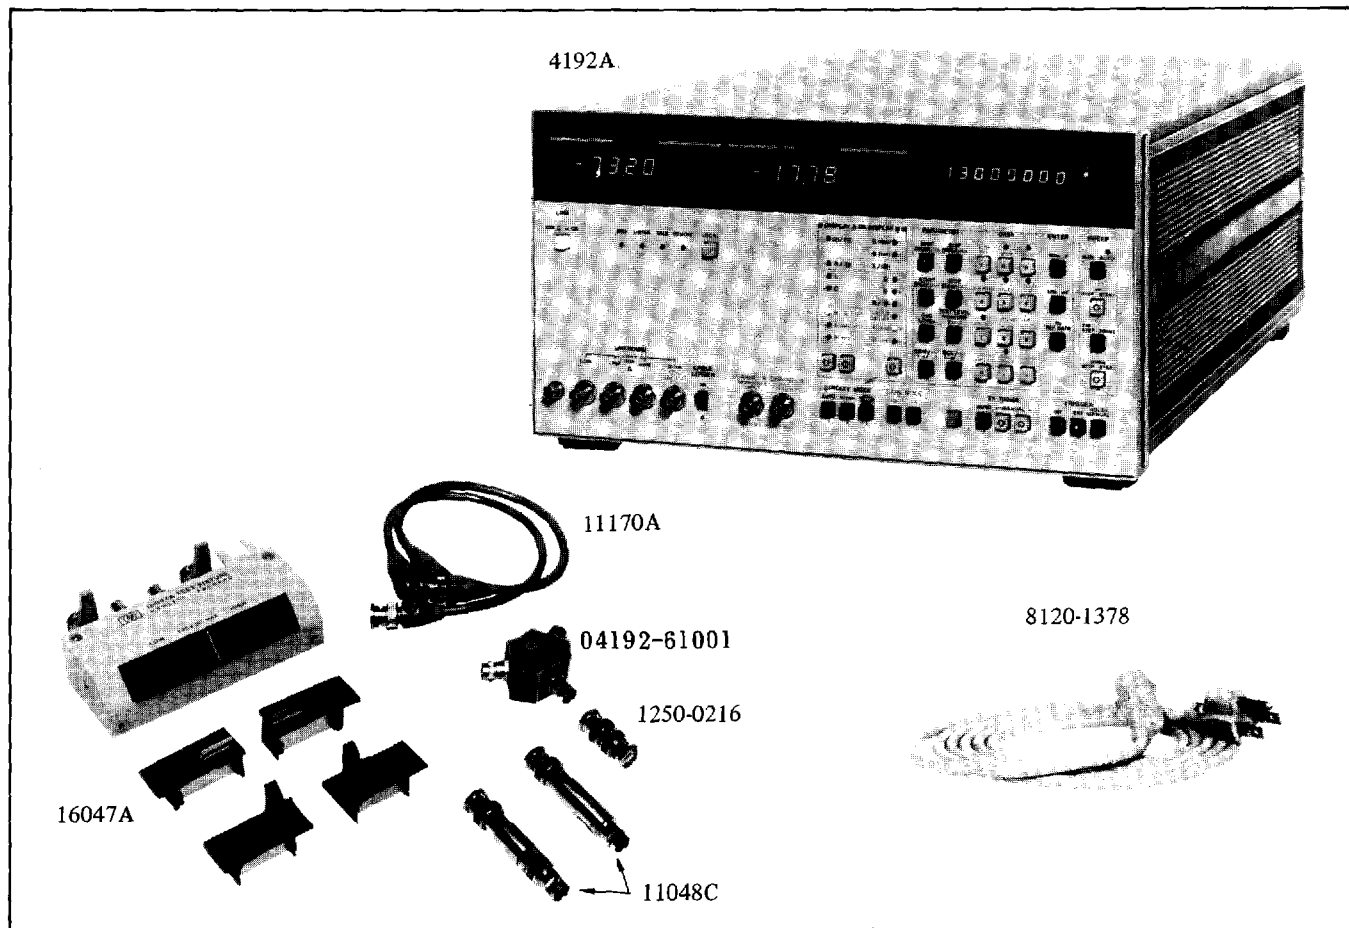


Figure 1-1. Model 4192A and Accessories

Section I
Paragraphs 1-6 to 1-9

urement parameters with $4\frac{1}{2}$ digit resolution along with the appropriate units. In NORMAL mode operation, the 4192A performs approximately five measurements per second. The 4192A also provides an AVERAGE measurement mode (approximately one measurement per second) to obtain measurement data of higher resolution and repeatably than is possible in NORMAL measurement mode, and a HIGH SPEED measurement mode to perform approximately ten measurements per second.

1-6. The 4192A can provide measuring frequency, OSC level, and dc bias voltage (impedance measurements only) equivalent to actual operating conditions. The sweep capability of the built-in frequency synthesizer and dc bias source permits quick and accurate measurements. The built-in frequency synthesizer can be set to measuring frequency within the range from 5.000Hz to 13.00000MHz with 1mHz maximum resolution. OSC level is variable from 5mV to 1.1Vrms with 1mV resolution (5mV for levels higher than 100mV). The internal dc bias voltage source (impedance measurements only) provides ± 35 V in 10mV increments. Measuring frequency or dc bias voltage can be automatically or manually swept in either direction. OSC level can be manually swept in either direction in 1mV increments (5mV for levels above 100mV). Actual test voltage across- or test signal current through the device under test is also measured. Thus the 4192A can evaluate components and circuits under a wide variety of measurement conditions. For example, video frequency characteristics of a VTR head, dc bias voltage characteristics of a semiconductor or ceramic device, at circuit level as well as component level, can be accurately evaluated. For measurements on high Q ($\approx 10^6$) devices or for impedance measurements that require a test signal that is more stable than that provided by the 4192A, an external frequency synthesizer can be connected to the 4192A EXT VCO input connector. Using this technique, a frequency resolution of 1mHz over the full frequency range, from 5Hz to 13MHz, can be obtained. In addition, a high stability reference (1MHz or 10MHz) can be connected to the 4192A so that even more-stable test signals are obtained.

1-7. In amplitude/phase measurements, the 4192A can measure four transmission parameters – gain/loss (B–A), level (A, B), phase (θ), and group delay. Measurement range of B–A is -100 dB to $+100$ dB with 0.001dB maximum resolution and 0.02dB to 0.09dB basic accuracy; measurement range of A/B is $+0.8$ dBV to -100 dBV, $+13.8$ dBm to -87 dBm with 0.001dB maximum resolution and 0.4dB basic accuracy; measurement range of θ is $-180^\circ \sim +180^\circ$ with 0.01° resolution and 0.1° to 0.2° basic accuracy; measurement range of group

delay is 0.1ns to 19.999s with a resolution of $4\frac{1}{2}$ digits. These features make accurate measurement of transmission characteristics easier than ever before. For example, 0.001dB changes in insertion loss and ripple in the pass band of a BPF (Band Pass Filter), caused by temperature changes, can be resolved. Moreover, the ability of the 4192A to measure group delay helps in the design and construction of filters that must accurately transmit phase information.

1-8. In impedance measurements, the 4192A can measure eleven impedance parameters – absolute value of impedance ($|Z|$), absolute value of admittance ($|Y|$), phase angle (θ), resistance (R), reactance (X), conductance (G), susceptance (B), inductance (L), capacitance (C), dissipation factor (D) and quality factor (Q). Measurement range of $|Z|/R/X$ is 0.1 m Ω to 1.2999 M Ω . $|Y|/G/B$ is 1 ns to 12.999s; θ is -180.00° to $+180.00^\circ$; L is 0.01mH to 1.000kH; C is 0.1pF to 100.0mF; D is 0.0001 to 19.999; Q is 0.1 to 1999.9. All have a basic accuracy of 0.1% and a resolution of $4\frac{1}{2}$ digits (number of display digits depends on measuring frequency and OSC level setting). Moreover, the unique circuitry of the 4192A provides direct and accurate impedance measurements of both grounded and floated devices.

1-9. The 4192A employs certain functions which make the best use of the intelligence capability of its microprocessor. This microprocessor-based design of the hardware makes operation of the 4192A simple, yet improves performance to realize the accurate measuring capabilities. Desired test parameters are fully programmable through the front-panel control keys or via HP-IB control, a standard capability of the 4192A. The deviation measurement function eliminates the need for tedious deviation calculations. Deviation measurement can be performed on all measuring parameters and is displayed as either the deviation (Δ) from a stored reference value or percent deviation ($\Delta\%$). This feature is useful for environmental tests such as temperature characteristics measurement of filter loss, and gain vs. frequency for amplifiers. The self test function augments the high reliability design of the 4192A. Convenient introspective testing is possible by pressing the SELF TEST key and confirms the functional operation of the instrument. The zero offset adjustment function measures the residual impedance and stray admittance inherent to the test fixture used, and offsets the effects of these parasitic parameters to zero with respect to the measured values. The save/recall function can store (SAVE key) five completely different front-panel settings, including both parameter selection and sweep controls, and recall them at any time (RECALL key). This feature

improves efficiency in production applications where repetitive measurements are made. This feature can also be used to measure the same parameter on one component under (five) different sets of test conditions. The standard memory of the 4192A preserves stored data even when the instrument is off.

1-10. The 4192A provides HP-IB interface capability for complete remote control of all front-panel control key settings and test parameter settings. This feature makes it possible to integrate the 4192A into a measurement system which reduces cost by improving DUT throughout, improving circuit design efficiency, and shortening the component development period. The 4192A is also equipped with X-Y recorder outputs and pen lift control. Clear and accurate copies of characteristics curves resulting from swept measurements can be obtained easily with this capability, without an external HP-IB controller.

1-11. The versatility and operability of the 4192A are maximized by the availability of versatile test fixtures. Because components and networks are not of uniform shape and size, the 4192A has several test fixtures that can be used to best meet different measurement requirements.

1-12. SPECIFICATIONS

1-13. Complete specifications of the Model 4192A LF Impedance Analyzer are given in Table 1-1. These specifications are the performance standards or limits against which the instrument is tested. The test procedures for the specifications are covered in Section IV, Performance Tests. Table 1-2 lists supplemental performance characteristics. Supplemental performance characteristics are not specifications but are typical characteristics included as additional information for the operator. When the 4192A LF Impedance Analyzer is shipped from the factory, it meets the specifications listed in Table 1-1.

1-14. SAFETY CONSIDERATIONS

1-15. The Model 4192A LF Impedance Analyzer has been designed to conform to the safety requirements of an IEC (International Electromechanical Committee) Safety Class I instrument and is shipped from the factory in a safe condition.

1-16. This operating and service manual contains information, cautions, and warnings which must be followed by the user to ensure safe operation and to maintain the instrument in a safe condition.

1-17. INSTRUMENTS COVERED BY MANUAL

1-18. Hewlett-Packard uses a two-section nine character serial number which is stamped on the serial number plate (Figure 1-2) attached to the instrument's rear-panel. The first four digits and the letter are the serial prefix and the last five digits are the suffix. The letter placed between the two sections identifies the country where the instrument was manufactured. The prefix is the same for all identical instruments; it changes only when a change is made to the instrument. The suffix, however, is assigned sequentially and is different for each instrument. The contents of this manual apply to instruments with the serial number prefix(es) listed under SERIAL NUMBERS on the title page.

1-19. An instrument manufactured after the printing of this manual may have a serial number prefix that is not listed on the title page. This unlisted serial number prefix indicates the instrument is different from those described in this manual. The manual for this new instrument may be accompanied by a yellow Manual Changes supplement or have a different manual part number. This supplement contains "change information" that explains how to adapt the manual to the newer instrument.

1-20. In addition to change information, the supplement may contain information for correcting errors (called Errata) in the manual. To keep this manual as current and accurate as possible, Hewlett-Packard recommends that you periodically request the latest Manual Changes supplement. The supplement for this manual is identified with this manual's print date and part number, both of which appear on the manual's title page. Complimentary copies of the supplement are available from Hewlett-Packard. If the serial prefix or number of an instrument is lower than that on the title page of this manual, see Section VII, Manual Changes.

1-21. For information concerning a serial number prefix that is not listed on the title page or in the Manual Change supplement, contact the nearest Hewlett-Packard office.

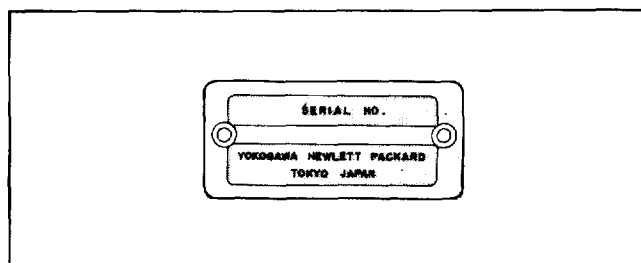


Figure 1-2. Serial Number Plate

Table 1-1. Specifications (Sheet 1 of 12)

COMMON SPECIFICATIONS

(Amplitude-Phase and Impedance Measurements)

- INTERNAL SYNTHESIZER :** Output from OSC OUTPUT (H_{CUR}) terminal
- Frequency Range :** 5.000Hz to 13.000000MHz
- Frequency Resolution :** 1mHz (5Hz to 10kHz), 10mHz (10kHz to 100kHz), 100mHz (100kHz to 1MHz), 1Hz (1MHz to 13MHz)
- Frequency Accuracy :** ± 50 ppm (23°C ± 5°C)
- OSC Level Range :** Variable from 5mV_{rms} to 1.1V_{rms} (when terminated by 50Ω in amplitude-phase measurements or UNKNOWN terminals are open in impedance measurements).
- OSC Level Resolution :** 1mV (5mV to 100mV), 5mV (100mV to 1.1V)
- OSC Level Accuracy :**

Measuring Frequency	OSC Level	
	≤ 100mV	> 100mV
5 Hz ~ 1 MHz	(5 + 10/f) % + 2mV	(5 + 10/f) % + 10mV
1 MHz ~ 13 MHz	(4 + 1.5F) % + 2mV	(4 + 1.5F) % + 10mV

f : measuring frequency (Hz), F : measuring frequency (MHz).

- Output Resistance :** 50Ω (amplitude/phase measurements), 100Ω (impedance measurements, ≥ 38kHz) 100Ω to 10kΩ (impedance measurements, < 38kHz, depends on measuring range), dc coupling.
- Level Monitor (impedance measurement) :** Measures and displays the voltage across- or current through the device under test.
- Frequency and Level Control :** Set via the front-panel numeric keys or HP-IB; auto sweep (except for level) or manual sweep.

- EXTERNAL SYNTHESIZER :** Connected to the VCO INPUT connector on the rear-panel (HP3325A Synthesizer or equivalent is recommended).
- Frequency Range :** 40.000005MHz to 53MHz (measuring frequency is equal to the frequency of the external synthesizer minus 40MHz [5Hz to 13MHz]).
- Required Signal Level :** 0dBm to 3dBm

Note: Frequency of the 4192A internal synthesizer should be set to the frequency of the external synthesizer minus 40MHz, and the internal and external synthesizers should be phase-locked.

Table 1-1. Specifications (Sheet 2 of 12)

EXT REFERENCE INPUT CONNECTOR :	Can be connected to a 1MHz/10MHz high stability reference signal (-1 dBm to +5 dBm) to improve the stability of the internal synthesizer.
Input Resistance :	Approximately 50Ω
MEASURING MODE :	
Spot Measurement :	At specific frequency (or dc bias*)
Swept Measurement :	Between START and STOP frequencies (or dc bias*). Sweep can be automatic or manual.
Sweep Mode :	Linear sweep mode (sweeps at specified step) and logarithmic sweep mode (20 measurement points per frequency decade).
X10 STEP :	Multiplies the specified frequency/dc bias* step by 10 in linear manual sweeps.
PAUSE Key :	Temporarily stops swept measurements.
SWEEP ABORT Key :	Makes sweep cancellation.
	* : DC bias sweeps can be made for impedance measurements only.
RECORDER OUTPUT :	DC outputs proportional to measured values of DISPLAY A, DISPLAY B, and measuring frequency or dc bias. PEN LIFT output and X-Y recorder scaling outputs are provided.
Maximum Output :	±1 V
Output Voltage Accuracy :	± (0.5% of output voltage + 20mV).
FIVE NONVOLATILE STORAGE REGISTERS :	Memorize five complete instrument measurement configurations. Measurement configurations can be set from the front-panel, from the HP-IB, or both.
HP-IB INTERFACE :	Data output and remote control via the HP-IB (based on IEEE-Std-488 and ANSI-MC1-1).
Interface Capability :	SH1, AH1, T5, L4, SR1, RL1, DC1, DT1.
Remote Control Function :	All front-panel functions except LINE ON/OFF switch and X10 STEP key.
Data Output :	Measured values of DISPLAY A, DISPLAY B, and measuring frequency or dc bias.
SELF TEST :	Performs the 4192A basic operation checks and displays the test results when power is turned on or when the SELF TEST mode is set by the SELF TEST key or via HP-IB.
TRIGGER :	Internal, External, Hold/Manual, or HP-IB remote control.

Table 1-1. Specifications (Sheet 3 of 12)

AMPLITUDE/PHASE MEASUREMENTS

PARAMETERS MEASURED : Measures DISPLAY A parameters and DISPLAY B parameters simultaneously in the parameter combination listed below. Deviation measurement (Δ) and percent deviation measurement ($\Delta\%$) can be performed for all measurement parameters.

DISPLAY A Function	DISPLAY B Function
B – A (dB) : Amplitude ratio	Group delay (s)
	θ (deg/rad) : Phase Difference
A (dBm/dBV) : Absolute amplitude of Reference Input	/
B (dBm/dBV) : Absolute amplitude of Test Input	

REFERENCE AMPLITUDE : 0dBv = 1 Vrms, 0dBm = 1mV (into 50 Ω)

OSC OUTPUT CONNECTOR OUTPUT IMPEDANCE : 50 Ω + 5% - 8% (at 50Hz to 5MHz), 50 Ω \pm 10% (at 5Hz to 13MHz).

CHANNEL A AND B :

Input Impedance : 1 M Ω \pm 2%, shunt capacitance 25 pF \pm 5pF

Maximum Input Voltage : 2Vrms/ \pm 35 V DC Max.

DISPLAY RANGE AND RESOLUTION : In NORMAL or AVERAGE measurement mode (Measuring resolution decreases one digit in HIGH SPEED measurement mode.

B – A : 0 to \pm 100dB, 0.001dB (0 ~ 20dB), 0.01dB (20 ~ 100dB) resolution

θ : 0 to \pm 180 $^\circ$ (0 to \pm τ radian), 0.01 $^\circ$ resolution

Group Delay (τ_g) : 0.1ns to 19.999s, 0.1ns maximum resolution

A, B : +0.8dBV to -100dBV, +13.8dBm to -87dBm, 0.001 dB ($>$ -20dB), 0.01dB (\leq -20dB) resolution

Table 1-1. Specifications (Sheet 4 of 12)

MEASURING ACCURACY : Specified at measuring terminals when the following conditions are satisfied:

- (1) **Warmup Time :** > 30 minutes
- (2) **Ambient Temperature :** 23°C ± 5°C (error limits double for 0°C to 55°C temperature range).
- (3) **Measuring Speed :** NORMAL or AVERAGE mode.

Note: Additional errors due to the power splitter, feedthrough termination, etc., are to be added to specifications given here.

The measurement accuracy of each parameter is given below. The accuracy depends on input absolute level of each channel and the measuring frequency.

B–A and θ Measurements Accuracies : Accuracies are the sum of each channel accuracy given in the table below. For example, when the frequency is 1 kHz, A channel is -15 dBV and B channel is -25 dBV; the uncertainty contributed by each channel to the B–A error is 0.01 dB/0.05° and 0.05 dB/0.15°, respectively. Therefore, the final accuracy of 0.06 dB/0.2° is given by the accuracy of both channels.

Group Delay Measurements Accuracy : Accuracy is derived from the following equation (phase accuracy $\Delta\theta_A$ and $\Delta\theta_B$ are read from the table below):

$$\text{group delay accuracy} = \frac{\Delta\theta_A + \Delta\theta_B}{720 \times \Delta F} \text{ (s)}$$

where, $\Delta\theta_A$: Channel A phase accuracy (degree)
 $\Delta\theta_B$: Channel B phase accuracy (degree)
 ΔF : Step Frequency (Hz)

Input Absolute Level of Each Channel (dBV)	+0.8	(0.008+0.2/f) dB (0.04+1/f)°	0.01 dB 0.05°	0.045 dB 0.08°	(0.025+0.02F) dB 0.08F°
	-10				
	-20	(0.047+0.2/f) dB (0.13+2/f)°	0.05 dB 0.15°	0.08 dB 0.25°	(0.04+0.04F) dB (0.05+0.2F)°
	-30	(0.05+1/f) dB (0.14+6/f)°	0.06 dB 0.2°	0.12 dB 0.3°	(0.06+0.06F) dB (0.05+0.25F)°
	-40	(0.05+3/f) dB (0.15+15/f)°	0.08 dB 0.3°	0.14 dB 0.6°	(0.07+0.07F) dB (0.3+0.3F)°
	-50	(0.1+10/f) dB (1+50/f)°	0.2 dB 1.5°		(0.1+0.1F) dB (1+0.5F)°
	-60	(0.45+25/f) dB (4+100/f)°	0.7 dB 5°		(0.4+0.3F) dB (4+F)°
	-70	(1.5+50/f) dB (12+300/f)°	2 dB 15°		(1+F) dB (13+2F)°
-80	Unspecified				
-90					
-100					
	5	100	10k	1M	13M
	Measuring Frequency (Hz)				

f : measuring frequency (Hz)
 F : measuring frequency (MHz)

Equations in table represent:


A, B accuracy
θ accuracy

Note

When calculating accuracy for points along a horizontal or vertical line, or at the intersection of two lines, use the narrowest accuracy equation.

Table 1-1. Specifications (Sheet 5 of 12)

Absolute Amplitude (A, B) Accuracy : Accuracy is given in the table below.

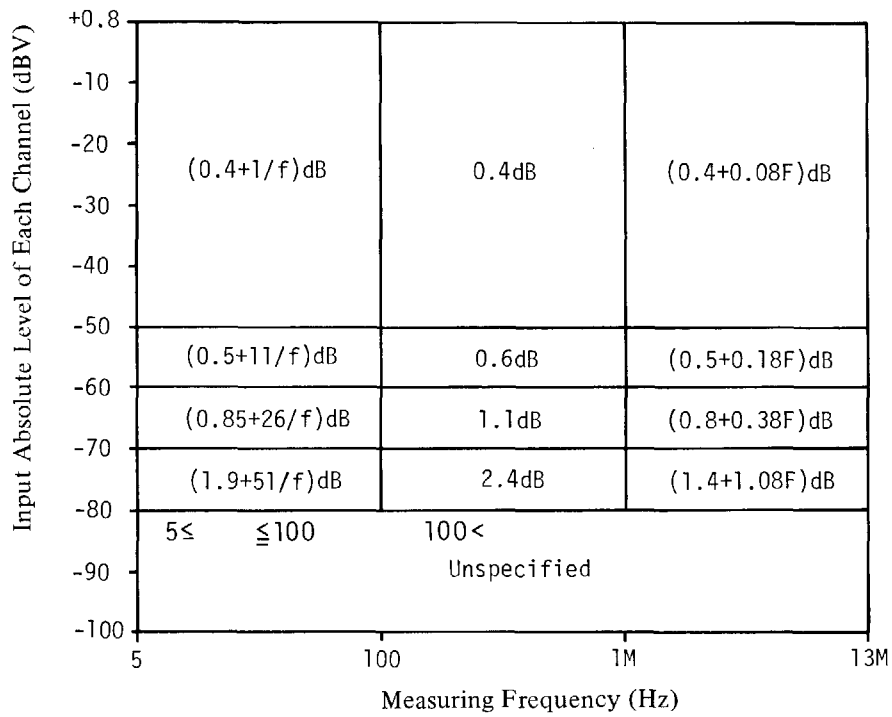

f : measuring frequency (Hz)
F : measuring frequency (MHz)

Note

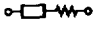

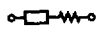

When calculating accuracy for points along a horizontal or vertical line, or at the intersection of two lines, use the narrowest accuracy equation.

Table 1-1. Specifications (Sheet 6 of 12)

IMPEDANCE MEASUREMENTS

PARAMETERS MEASURED : Measures DISPLAY A parameters and DISPLAY B parameters simultaneously in the parameter combinations listed below. Deviation measurement (Δ) and percent deviation measurement ($\Delta\%$) can be performed for all measurement parameters.

DISPLAY A Function	DISPLAY B Function
Z : Absolute Value of Impedance	θ (deg/rad) : Phase Angle
Y : Absolute Value of Admittance	
R : Resistance	X : Reactance
G : Conductance	B : Susceptance
L : Inductance	Q : Quality Factor
	D : Dissipation Factor
C : Capacitance	R : Resistance
	G : Conductance

EQUIVALENT CIRCUIT MODE : Auto,  (Series), and  (Parallel). |Z|, R, and X are measured in  mode; and |Y|, G, and B in  mode.

DISPLAY : Maximum 4-1/2 digits in NORMAL or AVERAGE measurement mode, maximum 3-1/2 digits in HIGH SPEED measurement mode; 19999 full-scale display for L and C measurement, 12999 for other parameters. Number of display digits depends on OSC level, measurement range, and test frequency. (Refer to Para. 3-17)


RANGING : AUTO or MANUAL for impedance (|Z|)/admittance (|Y|) measured value.


MEASUREMENT TERMINAL : 4-terminal pair configuration

AUTOMATIC ZERO ADJUSTMENT : Residual impedance ($R + jX$) and stray admittance ($G + jB$) of the test fixture are measured at a frequency selected by the operator. These values are then stored and used as offset data for subsequent measurements. The stored offset values are converted and applied to other measurement frequencies (refer to paragraph 3-79).

Table 1-1. Specifications (Sheet 7 of 12)

MEASURING RANGE AND RESOLUTION : Accuracy is specified at UNKNOWN terminals under the following conditions:

- (1) **Warmup Time :** ≥ 30 minutes
- (2) **In Floating Measurements :** (see Table 1-2 for specifics on low-grounded measurements)
- (3) **Measuring Frequency :** At the frequency of the zero offset adjustment
- (4) **Ambient Temperature :** $23^{\circ}\text{C} \pm 5^{\circ}\text{C}$ (error limits double for temperature range of 0°C to 55°C)
- (5) **CABLE LENGTH :** At 0 position
- (6) **Measuring Speed :** NORMAL or AVERAGE mode
- (7) **In the tables,**  area : Reference data (accuracy is not guaranteed.)

 area : Measurement can not mode but accuracy is not specified.
 0.0001 to $1.2999\text{M}\Omega$ $100\Omega_{\mu}$ -180.00° to $+180.00^{\circ}$

$B = 1 + \frac{0.02}{\gamma}$: use the left graph (below)

$C = \frac{1}{\gamma}$: use the right graph (below)

where γ : OSC LEVEL (V)

f : Measuring frequency (Hz)

F : Measuring frequency (MHz)

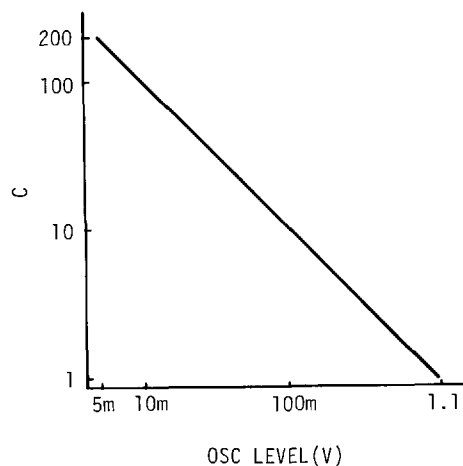
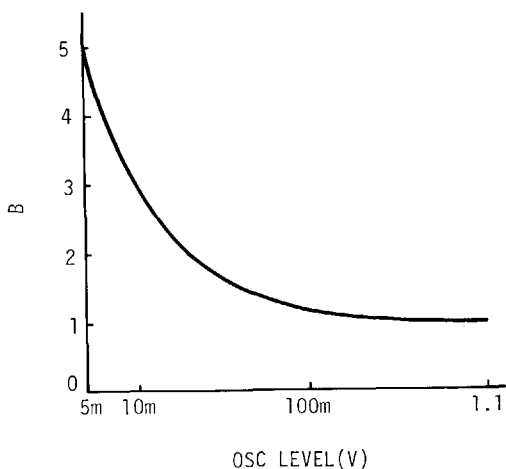


Table 1-1. Specifications (Sheet 8 of 12)

$|Z|-\theta$ and R-X Measurements :

Measuring Range :

Parameter	Measuring Range	Maximum Resolution
$ Z \cdot R \cdot X$	0.0001 Ω to 1.2999M Ω	100 $\mu\Omega$
θ	-180.00° to +180.00°	0.01°

Measurement Accuracy : Refer to the table below (specified by ZY RANGE). However, R and X accuracy depends on the value of D as follows:

	D < 1	1 ≤ D < 10	10 ≤ D
R	Accuracy of R is equal to the accuracy of X, in number of counts, as calculated from the table below.	Two times % error given in the table below.	Table below
X	Table below.	Accuracy of X is equal to the accuracy of R, in number of counts, as calculated from the table below.	

$ Z $ Range (Ω)	Accuracy Equations		
	D < 1	1 ≤ D < 10	10 ≤ D
1M	$\left\{ (0.2 + A)B + \frac{5}{F} (1 + 2.4A \cdot C) \right\} \% + 1$ $\left[(0.1 + 0.5A)B + \frac{3}{F} (1 + 2.4A \cdot C) \right]^\circ$	$(0.2 + A)B\% + 1$ $(0.1 + 0.5A)B^\circ$	$(0.2F + A)B\% + 1$ $(0.12F + 0.5A)B^\circ$
100k	$\left[(0.1 + 0.2A)B + \frac{5}{F} \{ 1 + 0.03 (1 + 10A)C \} \right] \% + 1$ $\left[(0.05 + 0.1A)B + \frac{3}{F} \{ 1 + 0.03 (1 + 10A)C \} \right]^\circ$	$(0.1 + 0.2A)B\% + 1$ $(0.05 + 0.1A)B^\circ$	$(0.2F + 0.2A)B\% + 1$ $(0.12F + 0.1A)B^\circ$
10k	$\left[(0.1 + 0.2A)B + \frac{5}{F} \{ 1 + 0.02 (1 + 10A)C \} \right] \% + 1$ $\left[(0.05 + 0.1A)B + \frac{3}{F} \{ 1 + 0.02 (1 + 10A)C \} \right]^\circ$		$(0.15F + 0.2A)B\% + 1$ $(0.09F + 0.1A)B^\circ$
1k	$\left[(0.1 + 0.2A)B + \frac{5}{F} \{ 1 + 0.04 (1 + 6A)C \} \right] \% + 1$ $\left[(0.05 + 0.1A)B + \frac{3}{F} \{ 1 + 0.04 (1 + 6A)C \} \right]^\circ$		$(0.1 + 0.2A + 0.02F + 0.024F^2)B\% + 1$ $(0.05 + 0.1A + 0.01F + 0.014F^2)B^\circ$
100	$\left[0.1B + \frac{5}{F} \left\{ 1 + 0.04 \left(1 + \frac{0.2}{A} C \right) \right\} \right] \% + 3$ $\left[(0.05 + \frac{0.01}{A})B + \frac{3}{F} \left\{ 1 + 0.04 \left(1 + \frac{0.2}{A} C \right) \right\} \right]^\circ$	$0.1B\% + 3$ $(0.05 + \frac{0.01}{A})B^\circ$	$(0.1 + 0.02F + 0.024F^2)B\% + 3$ $(0.05 + \frac{0.01}{A} + 0.01F + 0.014F^2)B^\circ$
10	$\left[0.2B + \frac{5}{F} \left\{ 1 + 0.04 \left(1 + \frac{2}{A} C \right) \right\} \right] \% + 5$ $\left[(0.1 + \frac{0.02}{A})B + \frac{3}{F} \left\{ 1 + 0.04 \left(1 + \frac{2}{A} C \right) \right\} \right]^\circ$	$0.2B\% + 5$ $(0.1 + \frac{0.02}{A})B^\circ$	$(0.2 + 0.03F + 0.032F^2)B\% + 5$ $(0.1 + \frac{0.02}{A} + 0.06F + 0.064F^2)(0.2 + \frac{0.1}{A})B^\circ$
1	$\left[0.5B + \frac{5}{F} \left\{ 1 + 0.04 \left(1 + \frac{20}{A} C \right) \right\} \right] \% + 5$ $\left[(0.3 + \frac{0.1}{A})B + \frac{3}{F} \left\{ 1 + 0.04 \left(1 + \frac{20}{A} C \right) \right\} \right]^\circ$	$0.5B\% + 5$ $(0.3 + \frac{0.1}{A})B^\circ$	

Measuring Frequency (Hz)

(1) $A = \frac{\text{Displayed } |Z|, R \text{ or } X (\Omega)}{|Z| \text{ Range full scale } (\Omega)}$ in the table.

(2) Equations in table represent :

$|Z|, R, X$ accuracy [\pm (% of reading + number of counts)]
 θ accuracy [\pm (absolute value)]

Table 1-1. Specifications (Sheet 9 of 12)

$|Y| - \theta$ and G-B Measurements :

Measuring Range :

Parameter	Measuring Range	Maximum Resolution
$ Y , G, B$	0.001 μ S ~ 12.999S	1nS
θ	-180.00° ~ +180.00°	0.01°

Measurement Accuracy : Refer to the table below (specified by ZY RANGE). However, G and B accuracy depends on the value of D as follows:

	$D \leq 0.1$	$0.1 < D \leq 1$	$1 < D$
G	Accuracy of G is equal to the accuracy of B, in number of counts, as calculated from the table below.		Table below
B	Table below	Two times % error given in the table below.	Accuracy of B is equal to the accuracy of G, in number of counts, as calculated from the table below.

$ Y $ Range (S)	$D \leq 0.1$		$0.1 < D \leq 1$		$1 < D$	
	Equation	Equation	Equation	Equation	Equation	Equation
10 μ	$\{0.2B + \frac{5}{F} (1 + \frac{0.24C}{A})\} \% + 3$ $\{ (0.1 + \frac{0.05}{A})B + \frac{3}{F} (1 + \frac{0.24C}{A}) \} ^\circ$		$0.2B\% + 3$ $(0.1 + \frac{0.05}{A})B^\circ$		$0.2F \cdot B\% + 3$ $(0.12F + \frac{0.05}{A})B^\circ$	
100 μ	$[0.1B + \frac{5}{F} \{1 + 0.03 (1 + \frac{1}{A})C\}] \% + 3$ $[(0.05 + \frac{0.01}{A})B + \frac{3}{F} \{1 + 0.03 (1 + \frac{1}{A})C\}]^\circ$		$0.1B\% + 3$ $(0.05 + \frac{0.01}{A})B^\circ$		$0.2F \cdot B\% + 3$ $(0.12F + \frac{0.01}{A})B^\circ$	
1m	$[0.1B + \frac{5}{F} \{1 + 0.02 (1 + \frac{1}{A})C\}] \% + 3$ $[(0.05 + \frac{0.01}{A})B + \frac{3}{F} \{1 + 0.02 (1 + \frac{1}{A})C\}]^\circ$				$0.15F \cdot B\% + 3$ $(0.09F + \frac{0.01}{A})B^\circ$	
10m	$[0.1B + \frac{5}{F} \{1 + 0.04 (1 + \frac{0.6}{A})C\}] \% + 3$ $[(0.05 + \frac{0.01}{A})B + \frac{3}{F} \{1 + 0.04 (1 + \frac{0.6}{A})C\}]^\circ$				$(0.1 + 0.02F + 0.024F^2)B\% + 3$ $(0.05 + \frac{0.01}{A} + 0.01F + 0.014F^2)B^\circ$	
100m	$[(0.1 + 0.2A)B + \frac{5}{F} \{1 + 0.04 (1 + 2A)C\}] \% + 1$ $[(0.05 + 0.1A)B + \frac{3}{F} \{1 + 0.04 (1 + 2A)C\}]^\circ$		$(0.1 + 0.2A)B\% + 1$ $(0.05 + 0.1A)B^\circ$		$(0.1 + 0.2A + 0.02F + 0.024F^2)B\% + 1$ $(0.05 + 0.1A + 0.01F + 0.014F^2)B^\circ$	
1	$[(0.2 + 0.5A)B + \frac{5}{F} \{1 + 0.04 (1 + 20A)C\}] \% + 1$ $[(0.1 + 0.2A)B + \frac{3}{F} \{1 + 0.04 (1 + 20A)C\}]^\circ$		$(0.2 + 0.5A)B\% + 1$ $(0.1 + 0.2A)B^\circ$			
10			$(0.5 + 2A)B\% + 1$ $(0.3 + A)B^\circ$			

(1) $A = \frac{\text{Displayed } |Y|, G \text{ or } B (S)}{|Y| \text{ Range full scale } (S)}$ in the table.

(2) Equations in table represent :

$|Y|, G, B$ accuracy: $[\pm (\% \text{ of reading} + \text{number of counts})]$
 θ accuracy: $[\pm (\text{absolute value})]$

Table 1-1. Specifications (Sheet 10 of 12)

L—Q, D, R, G Measurements : Refer to R/X or G/B measurements for R and G accuracy.

Measuring Range :

Parameter	Measuring Range	Maximum Resolution
L*	0.01 nH ~ 1.0000 kH	10 pH
D	0.0001 ~ 19.999	0.0001
Q	0.1 ~ 1999.9	0.1

* : Depends on ZY RANGE and measuring frequency (refer to paragraph 3-71).

Measuring Accuracy :

Refer to the table below (specified by ZY RANGE).

To determine which |Z| range is selected for L measurements, change the DISPLAY A function to |Z| / |Y|.

Z Range (Ω)	Measuring Frequency (Hz)	
	5	400
1M	$\{(1 + 2A)B + \frac{5}{F} (1 + 2.4A \cdot C)\} \% + 1$ $(0.01 + 0.02A)B + \frac{0.05}{F} (1 + 2.4A \cdot C)$	$(1 + 2A)B \% + 1$ $(0.01 + 0.02A)B$
100k	$[(0.2 + 0.3A)B + \frac{5}{F} \{1 + 0.03 (1 + 10A)C\}] \% + 1$ $(0.002 + 0.003A)B + \frac{0.05}{F} \{1 + 0.03 (1 + 10A)C\}$	$(0.3F + 0.3A)B \% + 1$ $(0.003F + 0.003A)B$
10k	$[(0.2 + 0.3A)B + \frac{5}{F} \{1 + 0.002 (1 + 10A)C\}] \% + 1$ $(0.002 + 0.003A)B + \frac{0.05}{F} \{1 + 0.03 (1 + 10A)C\}$	$(0.2 + 0.3A)B \% + 1$ $(0.002 + 0.003A)B$
1k	$[(0.2 + 0.3A)B + \frac{5}{F} \{1 + 0.04 (1 + 6A)C\}] \% + 1$ $(0.002 + 0.003A)B + \frac{0.05}{F} \{1 + 0.02 (1 + 10A)C\}$	$(0.2 + 0.3A + 0.03F + 0.032F^2)B \% + 1$ $(0.002 + 0.003A + 0.0003F + 0.0004F^2)B$
100	$[0.2B + \frac{5}{F} \{1 + 0.04 (1 + \frac{2}{A})C\}] \% + 3$ $(0.002 + \frac{0.0003}{A})B + \frac{0.05}{F} \{1 + 0.04 (1 + \frac{2}{A})C\}$	$0.2B \% + 3$ $(0.002 + \frac{0.0003}{A})B$
10	$[0.3B + \frac{5}{F} \{1 + 0.04 (1 + \frac{2}{A})C\}] \% + 5$ $(0.003 + \frac{0.0004}{A})B + \frac{0.05}{F} \{1 + 0.04 (1 + \frac{2}{A})C\}$	$0.3B \% + 5$ $(0.003 + \frac{0.0004}{A})B$
1	$[0.7B + \frac{5}{F} \{1 + 0.04 (1 + \frac{20}{A})C\}] \% + \alpha$ $(0.007 + \frac{0.002}{A})B + \frac{0.05}{F} \{1 + 0.04 (1 + \frac{20}{A})C\}$	$0.7B \% + 5$ $(0.007 + \frac{0.002}{A})B$

(1) $A = \frac{2\pi \times \text{Measuring frequency (Hz)} \times \text{Displayed L (H)}}{|Z| \text{ Range full scale } (\Omega)}$ in the table.

(2) Equations in table represent (at $D \leq 0.1$) :

L accuracy: [± (% of reading + number of counts)]
D accuracy: [± (absolute value)]

(3) If $0.1 < D \leq 1$, double the % error for all values of L.

(4) If $D > 0.1$, multiply error of D by $(1 + D)^2$.

(5) $\alpha = \frac{5}{2\pi f \times 10^6}$ (H) in the table.

Where β : number of digits displayed when the DISPLAY A function is changed to |Z| / |Y|.

Table 1-1. Specifications (Sheet 11 of 12)

C–Q, D, R, G Measurements : Refer to R/X or G/B measurements for R and G accuracy.

Measuring Range :

Parameter	Measurement Range	Maximum Resolution
C*	0.0001pF ~ 100.00mF	0.1fF
D	0.0001 ~ 19.999	0.0001
Q	0.1 ~ 1999.9	0.1

* : Depends on ZY RANGE and measuring frequency (refer to paragraph 3-71).

Measurement Accuracy : Refer to the table below (specified by ZY RANGE).
To determine which |Z| range is selected for L measurements, change the DISPLAY A function to |Z|/|Y|.

Y Range (S)	Accuracy Formula	Accuracy Formula	Accuracy Formula	Accuracy Formula
10 μ	$\left\{0.2B + \frac{5}{F} \left(1 + \frac{0.24C}{A}\right)\right\} \% + \alpha$ $(0.002 + \frac{0.001}{A})B + \frac{0.05}{F} \left(1 + \frac{0.24C}{A}\right)$	0.2B% + 3 $(0.002 + \frac{0.001}{A})B$	0.2F·B% + 3 $(0.002F + \frac{0.001}{A})B$	
100 μ	$\left[0.1B + \frac{5}{F} \left\{1 + 0.03 \left(1 + \frac{1}{A}\right)C\right\}\right] \% + 3$ $(0.0009 + \frac{0.0002}{A})B + \frac{0.05}{F} \left\{1 + 0.03 \left(1 + \frac{1}{A}\right)C\right\}$		0.2F·B% + 3 $(0.002F + \frac{0.0002}{A})B$	
1m	$\left[0.1B + \frac{5}{F} \left\{1 + 0.02 \left(1 + \frac{1}{A}\right)C\right\}\right] \% + 3$ $(0.0009 + \frac{0.0002}{A})B + \frac{0.05}{F} \left\{1 + 0.04 \left(1 + \frac{0.6}{A}\right)C\right\}$	0.1B% + 3 $(0.0009 + \frac{0.0002}{A})B$	0.15F·B% + 3 $(0.0016F + \frac{0.0002}{A})B$	
10m	$\left[0.1B + \frac{5}{F} \left\{1 + 0.04 \left(1 + \frac{0.6}{A}\right)C\right\}\right] \% + 3$ $(0.0009 + \frac{0.0002}{A})B + \frac{0.05}{F} \left\{1 + 0.04 \left(1 + 2A\right)C\right\}$		$(0.1 + 0.02F + 0.024F^2)B \% + 3$ $(0.0009 + \frac{0.0002}{A} + 0.0002F + 0.0003F^2)B$	
100m	$\left[(0.1 + 0.2A)B + \frac{5}{F} \left\{1 + 0.04 \left(1 + 2A\right)C\right\}\right] \% + 1$ $(0.0009 + \frac{0.0002}{A})B + \frac{0.05}{F} \left\{1 + 0.04 \left(1 + 2A\right)C\right\}$	$(0.1 + 0.2A)B \% + 1$ $(0.0009 + \frac{0.0002}{A})B$	$(0.1 + 0.2A + 0.02F + 0.024F^2)B \% + 1$ $(0.0009 + \frac{0.0002}{A} + 0.0002F + 0.0003F^2)B$	
1	$\left[(0.2 + 0.5A)B + \frac{5}{F} \left\{1 + 0.04 \left(1 + 20A\right)C\right\}\right] \% + 1$ $(0.002 + 0.004A)B + \frac{0.05}{F} \left\{1 + 0.04 \left(1 + 20A\right)C\right\}$	$(0.2 + 0.5A)B \% + 1$ $(0.002 + 0.004A)B$		
10		$(0.5 + 2A)B \% + 1$ $(0.005 + \frac{0.02A}{A})B$		

Measuring Frequency (Hz): 5, 400, 16k, 1M, 2M, 13M

$$(1) A = \frac{2\pi \times \text{Measuring frequency (Hz)} \times \text{Displayed C (F)}}{|Y| \text{ Range full scale}}$$

(2) Equations in table represent (at D ≤ 0.1) :

C accuracy: [± (% of reading + number of counts)] D accuracy: [± (absolute value)]

(3) If 0.1 < D ≤ 1, double the % error for all values of C.

(4) If D > 0.1, multiply error of D by (1 + D)².

$$(5) \alpha = \frac{3}{2\pi f \times 10^{\beta+5}} (F) \text{ in the table.}$$

Where β : number of digits displayed when the DISPLAY A function is changed to |Z|/|Y|.

Table 1-1. Specifications (Sheet 12 of 12)

DC BIAS :	Valid for impedance measurements only.
Voltage Range :	-35 V to +35 V, 10 mV steps
Setting Accuracy (at 23°C ± 5°C) :	± (0.5% of setting + 5 mV)
Output Resistance :	110Ω to 11kΩ ± 10% (depends on measuring range)
Maximum Output Current :	Varies with measuring frequency and range.
	Floating measurements - 20 mA max.
	Low-grounded measurements - 5 mA max.
Control :	Front-panel numeric keys or HP-IB remote control

GENERAL

OPERATING TEMPERATURE :	0°C to 55°C
RELATIVE HUMIDITY :	≤ 95% at 40°C
POWER :	100, 120, 220 V ± 10%, 240 V + 5% - 10%, 48 Hz to 66 Hz, power consumption 150 VA maximum.
DIMENSIONS :	425.5 mm (W) × 235 mm (H) × 615 mm (D)
WEIGHT :	Approximately 19 kg
FURNISHED ACCESSORIES AND PARTS :	16047A Test Fixture, 11048C 50Ω Feedthrough Termination (2 ea.), Splitter (HP Part No.: 04192-61001, Nominal 50Ω), Power Cord (HP Part No.: 8120-1378).

OPTIONS

OPTION 907 :	Front Handle Kit (HP Part No.: 5061-0091)
OPTION 908 :	Rack Flange Kit (HP Part No.: 5061-0079)
OPTION 909 :	Rack and Handle Kit (HP Part No.: 5061-0085)
OPTION 910 :	Extra Manual

Table 1-2. General Information (Sheet 1 of 2)

GENERAL INFORMATION

(The following information is reference data and not guaranteed specifications.)

TYPICAL MEASUREMENT ACCURACY :


Impedance Measurement (Floating) :

Accuracy when CABLE LENGTH is 1 m : 2.5 times percent error for frequencies above 1 MHz.

L · C accuracy for $D > 1$: $(1 + D^2)$ times accuracy specifications

Low Grounded Impedance Measurement Accuracy :

To obtain low grounded measurement accuracy, add the accuracy for floating impedance measurements, given in the preceding tables, to the additional error given in the figure below. Compensation for residual impedance ($\leq 9\text{pF}$ at $\leq 600\text{kHz}$ or approximately $20\text{k}\Omega$ at $\geq 600\text{kHz}$) must also be made using the 4192A's zero offset adjustment function.

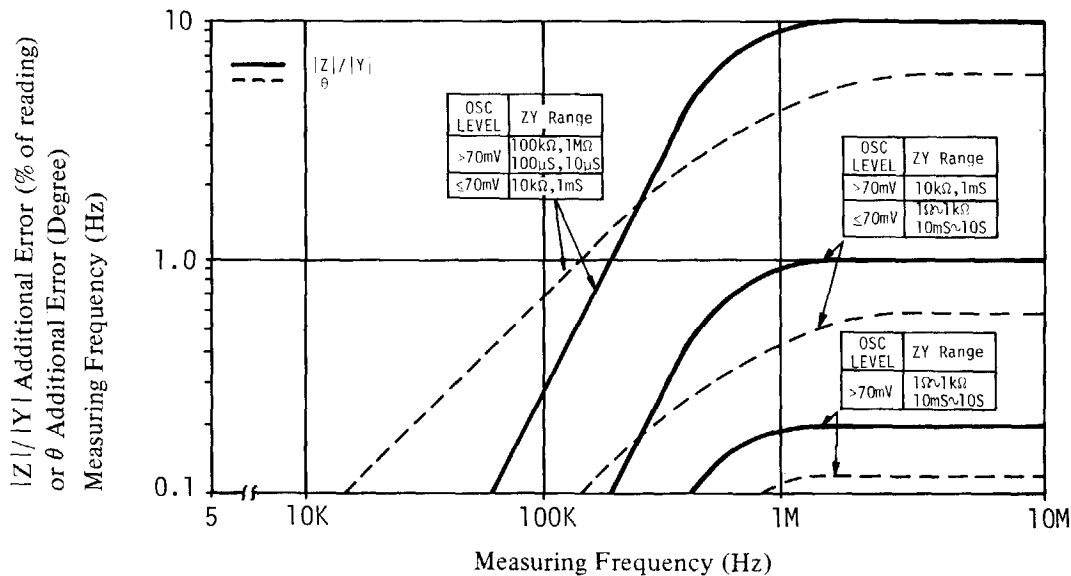

MEASURING SPEED :

Refer to the figure below (at fixed measuring frequency, measurement range and OSC level for impedance measurement). Specific information is provided in paragraph 3-55 for amplitude/phase measurements and in paragraph 3-89 for impedance measurements. Speed in AVERAGE mode is approximately 7 times that for NORMAL mode.

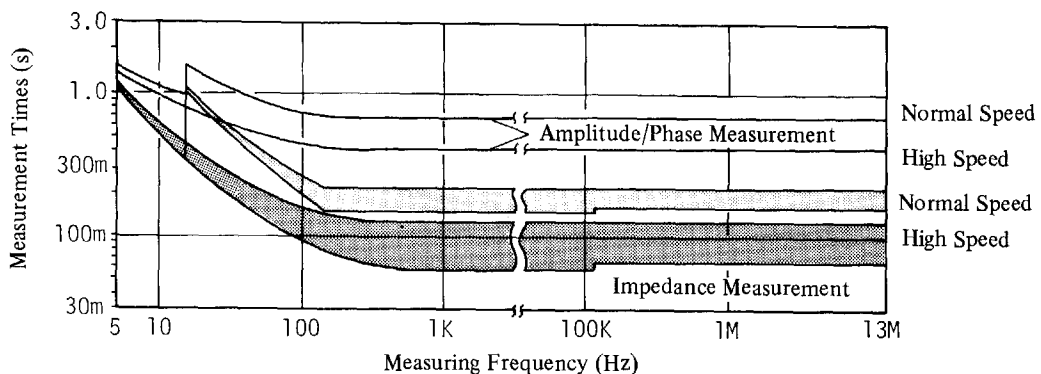


Table 1-2. General Information (Sheet 2 of 2)

FREQUENCY SWITCHING TIME : Approximately 50ms to 65ms

ZY RANGE SWITCHING TIME : Approximately 35ms to 50ms per range (at > 400Hz)

OSC LEVEL SWITCHING TIME : Approximately 65ms

DC BIAS VOLTAGE SETTling TIME : Approximately $(0.4 \times \Delta V + 10)$ ms where ΔV is the voltage change (V).

LEVEL MONITOR RANGE AND ACCURACY : At $23^{\circ}\text{C} \pm 5^{\circ}\text{C}$

	Range	Accuracy (% of reading + count)
Voltage	5mV ~ 1.1V	$\leq 100\text{Hz} : (4 + 10/f) \% + 1$ 100Hz to 1MHz : 4% + 1 $\geq 1\text{MHz} : (4 + 0.8F) \% + 1$
Current	1 μA ~ 11mA	
where f : measuring frequency (Hz), F : measuring frequency (MHz).		

TIME REQUIRED FOR LEVEL MONITOR : Approximately 120ms

1MHz REFERENCE OUTPUT : Square wave, $\geq 1.6\text{V}_{\text{p-p}}$

Output Resistance : Approximately 50Ω

1-22. OPTIONS

1-23. Options are modifications to the standard instrument that implement the user's special requirements for minor functional changes. The 4192A has four options as listed in Table 1-3.

Table 1-3. Available Options

Option Number	Description
907	Front Handle Kit.
908	Rack Flange Kit.
909	Rack Flange and Front Handle Kit.
910	Extra Manual

1-24. The following options provide the mechanical parts necessary for rack mounting and hand carrying:

Option 907: Front Handle Kit. Furnishes carrying handles for both ends of front-panel.

Option 908: Rack Flange Kit. Furnishes flanges for rack mounting for both ends of front-panel.

Option 909: Rack Flange and Front Handle Kit. Furnishes both front handles and rack flanges for instrument.

Installation procedures for these options are detailed in Section II.

1-25. Option 910 adds an extra copy of the Operation and Service Manual.

1-26. ACCESSORIES SUPPLIED

1-27. The HP Model 4192A LF Impedance Analyzer, along with its furnished accessories, is shown in Figure 1-1. The furnished accessories are also listed below.

- 16047A Test Fixture
- 11048C 50Ω Feedthrough (2 ea.)
- Power Splitter (HP Part No.: 04192-61001)
- BNC Adapter (HP Part No.: 1250-0216)
- 11170A BNC Cable (2 ea.)
- Power Cable (HP Part No.: 8120-1378)
- Additional Fuses for A1F1 (2ea. PN: 2110-0650)

1-28. ACCESSORIES AVAILABLE

1-29. For certain measurements and for convenience in connecting samples, ten types of accessories are available. Each accessory is designed to meet the various measurement requirements and types of DUT. All accessories were developed with careful consideration to accuracy, reliability, and ease of measurement. A brief description and photo of each available accessory is given in Table 1-4.

Table 1-4. Accessories Available (Sheet 3 of 4)

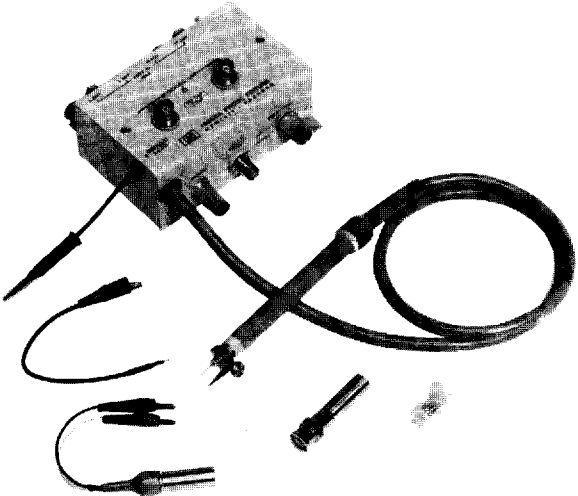
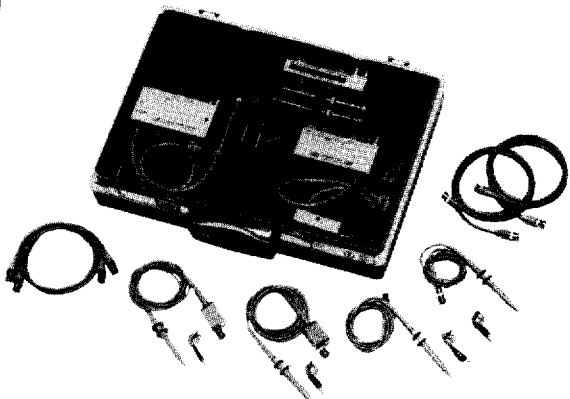
Model	Description										
<p data-bbox="166 319 302 347">HP 16095A</p>  <p>The image shows the HP 16095A Probe Fixture, a rectangular metal box with various connectors and a coiled cable. It is used for probe impedance measurements on board-mounted components or entire circuits.</p>	<p data-bbox="761 319 1075 347">HP 16095A Probe Fixture:</p> <p data-bbox="761 357 1430 519">For probe impedance measurements on board-mounted components or entire circuits. Low lead can be floated or grounded. OSC OUTPUT connector is provided for amplitude-phase measurements. Following data is specified when BNC adapter is used:</p> <p data-bbox="835 541 1215 638"> Stray capacitance : $\leq 15\text{pF}$ Residual inductance : $\leq 40\text{nH}$ Residual resistance : $\leq 100\text{m}\Omega$ </p> <p data-bbox="761 659 1100 687">Following parts are furnished.</p> <table border="1" data-bbox="773 713 1438 1037"> <thead> <tr> <th>Part</th> <th>HP Part No.</th> </tr> </thead> <tbody> <tr> <td>Center pins for probe (10 ea.)</td> <td>16095-60012</td> </tr> <tr> <td>Alligator clip for ground</td> <td>16095-61611</td> </tr> <tr> <td>BNC (male) adapter</td> <td>16095-60011</td> </tr> <tr> <td>Alligator clip adapter</td> <td>16095-61612</td> </tr> </tbody> </table> <p data-bbox="794 961 1414 1026">Ground pins (5 ea., HP Part No. 16095-65001) are also available (not furnished).</p>	Part	HP Part No.	Center pins for probe (10 ea.)	16095-60012	Alligator clip for ground	16095-61611	BNC (male) adapter	16095-60011	Alligator clip adapter	16095-61612
Part	HP Part No.										
Center pins for probe (10 ea.)	16095-60012										
Alligator clip for ground	16095-61611										
BNC (male) adapter	16095-60011										
Alligator clip adapter	16095-61612										
<p data-bbox="166 1080 257 1108">16097A</p>  <p>The image shows the 16097A Accessory Kit, which includes a carrying case and various accessories such as cables, probes, and test fixtures.</p>	<p data-bbox="761 1080 1265 1108">16097A Accessory Kit (with carrying case):</p> <p data-bbox="761 1118 1438 1146">Contains the following accessories for circuit measurements:</p> <p data-bbox="835 1168 1265 1468"> 11094B 75Ω Feedthrough (2 ea.) 11095A 600Ω Feedthrough (2 ea.) 11070B 60 cm BNC cable (2 ea.) 11170C 120 cm BNC cable (2 ea.) 10013A 10 : 1 Scope probe (2 ea.) 10007B 1 : 1 Scope probe (2 ea.) 16047C Test Fixture 16048C Test Leads 16095A Probe Fixture </p>										

Table 1-4. Accessories Available (Sheet 4 of 4)

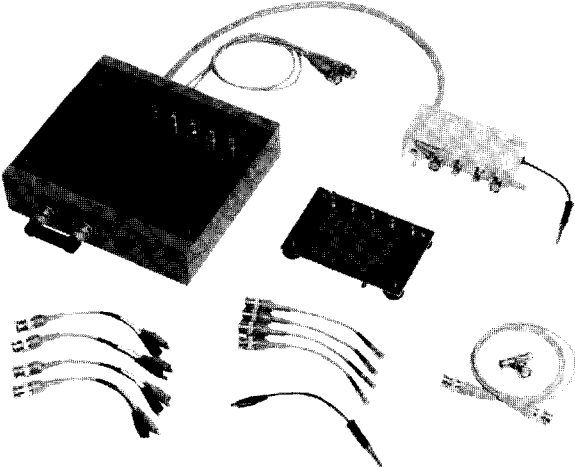
Model	Description														
<p data-bbox="216 325 307 353">16096A</p> 	<p data-bbox="814 325 1067 353">16096A Test Fixture:</p> <p data-bbox="814 362 1476 454">To alternately make amplitude/phase measurements and input impedance measurements on two-port devices. Following data is specified at BNC connectors:</p> <p data-bbox="814 485 1397 513">Residual Impedances (after zero offset adjustment):</p> <p data-bbox="885 521 1257 549">Stray capacitance : $\leq 0.01 \text{ pF}$</p> <p data-bbox="885 556 1372 584">Residual Inductance : $\leq (100 + 0.5F^2) \text{ nH}$</p> <p data-bbox="885 590 1348 618">Residual resistance : $\leq (50 + 5F^2) \text{ m}\Omega$</p> <p data-bbox="814 642 1476 700">Error in amplitude/phase measurements (after cable compensation):</p> <p data-bbox="885 717 1125 745">B-A error : $\pm 0.1 \text{ dB}$</p> <p data-bbox="885 752 1100 780">Phase error : $\pm 0.1^\circ$</p> <p data-bbox="885 786 1265 814">A, B error : $\pm (0.1 + 0.06F^2) \text{ dB}$</p> <p data-bbox="814 838 1476 896">Input impedance of CHANNEL A/B : $1 \text{ M}\Omega$ shunted by less than 15 pF.</p> <p data-bbox="814 922 1149 950">Following parts are furnished:</p> <table border="1" data-bbox="819 976 1450 1381"> <thead> <tr> <th data-bbox="819 976 1285 1019">Part</th> <th data-bbox="1285 976 1450 1019">HP Part No.</th> </tr> </thead> <tbody> <tr> <td data-bbox="819 1019 1285 1069">Textool® Grid zip test socket kit</td> <td data-bbox="1285 1019 1450 1069">16096-65001</td> </tr> <tr> <td data-bbox="819 1069 1285 1144">BNC (male) to dual alligator clip cable</td> <td data-bbox="1285 1069 1450 1144">16096-61614 (4 ea.)</td> </tr> <tr> <td data-bbox="819 1144 1285 1220">BNC (male) to SMC cable</td> <td data-bbox="1285 1144 1450 1220">16096-61611 (4 ea.)</td> </tr> <tr> <td data-bbox="819 1220 1285 1263">Banana plug to alligator clip cable</td> <td data-bbox="1285 1220 1450 1263">16096-61613</td> </tr> <tr> <td data-bbox="819 1263 1285 1338">BNC (male) – BNC (male) cable (90 cm)</td> <td data-bbox="1285 1263 1450 1338">16096-61615</td> </tr> <tr> <td data-bbox="819 1338 1285 1381">BNC T adapter</td> <td data-bbox="1285 1338 1450 1381">1250-0781</td> </tr> </tbody> </table>	Part	HP Part No.	Textool® Grid zip test socket kit	16096-65001	BNC (male) to dual alligator clip cable	16096-61614 (4 ea.)	BNC (male) to SMC cable	16096-61611 (4 ea.)	Banana plug to alligator clip cable	16096-61613	BNC (male) – BNC (male) cable (90 cm)	16096-61615	BNC T adapter	1250-0781
Part	HP Part No.														
Textool® Grid zip test socket kit	16096-65001														
BNC (male) to dual alligator clip cable	16096-61614 (4 ea.)														
BNC (male) to SMC cable	16096-61611 (4 ea.)														
Banana plug to alligator clip cable	16096-61613														
BNC (male) – BNC (male) cable (90 cm)	16096-61615														
BNC T adapter	1250-0781														

Table 1-4. Accessories Available (Sheet 1 of 4)

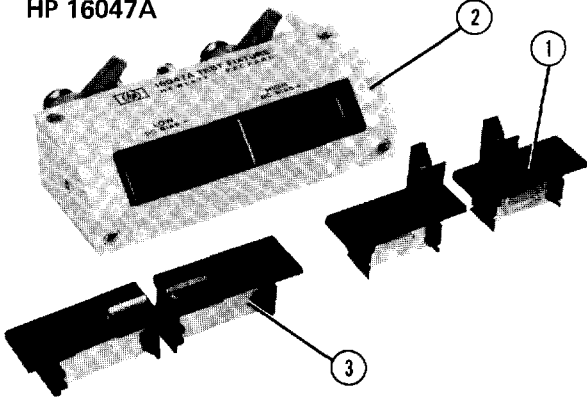
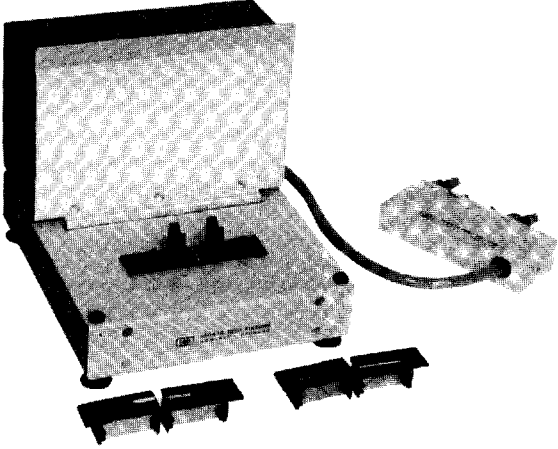
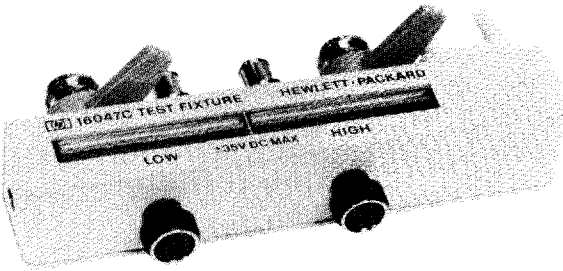
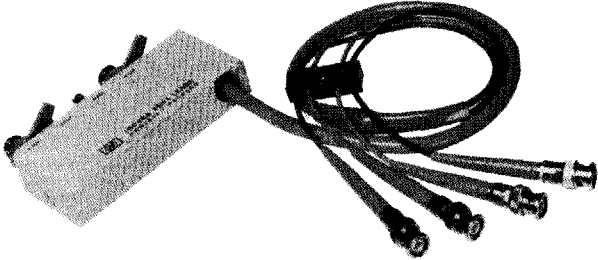
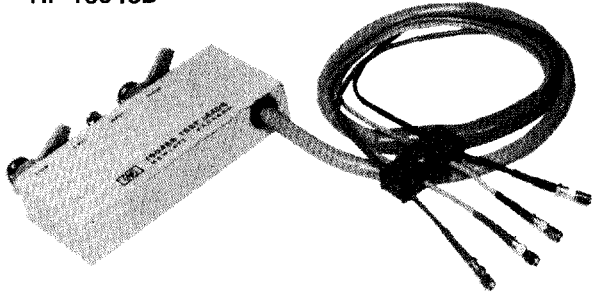
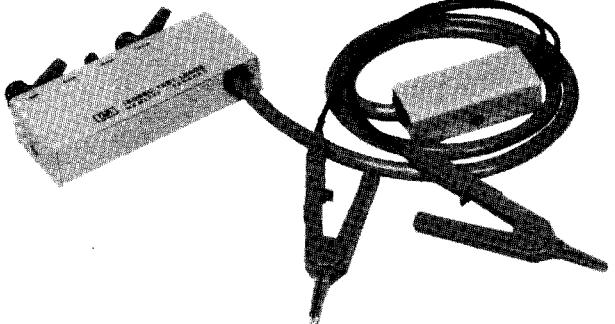
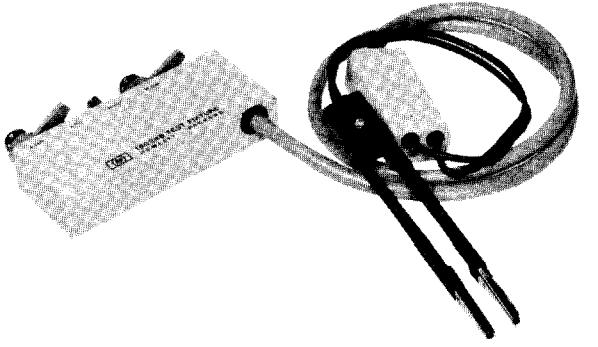
Model	Description
<p data-bbox="170 325 299 351">HP 16047A</p>  <p>The image shows the HP 16047A Direct Coupled Test Fixture, a rectangular metal unit with a black top surface. Three contact inserts are shown below it, labeled with circled numbers 1, 2, and 3. Insert 1 is a small, dark, rectangular component. Insert 2 is a larger, dark, rectangular component with a central slot. Insert 3 is a dark, rectangular component with a central slot and a small protrusion on one side.</p>	<p data-bbox="761 325 1328 351">16047A Direct Coupled Test Fixture (furnished):</p> <p data-bbox="761 362 1422 454">Test Fixture (direct attachment type) for general measurement of both axial and radial lead components. Three kinds of contact inserts are furnished:</p> <ul style="list-style-type: none"> <li data-bbox="761 470 1229 530">① For axial lead components, (HP P/N 16061-70022). <li data-bbox="761 545 1229 605">② For general radial lead components, (HP P/N 16061-70021). <li data-bbox="761 620 1245 681">③ For radial short lead components, (HP P/N 16047-65001). <p data-bbox="761 707 1158 733">DC bias up to $\pm 35V$ can be applied.</p>
<p data-bbox="170 767 299 793">HP 16047B</p>  <p>The image shows the HP 16047B Test Fixture with Safe Guard, a rectangular metal unit with a black top surface and a white protective cover. The cover is open, revealing the test fixture inside. A cable is connected to the fixture. Three contact inserts are shown below the fixture.</p>	<p data-bbox="761 767 1207 793">16047B Test Fixture with Safe Guard:</p> <p data-bbox="761 804 1422 929">Test Fixture (cable connection type) for general measurement of both axial and radial lead components at frequencies below 2MHz. Three kinds of contact inserts are furnished (same as those for the 16047A Test Fixture).</p> <p data-bbox="761 955 1422 1015">DC bias up to $\pm 35V$ can be applied with using the 4192A (a protective cover provides for operator safety).</p> <p data-bbox="761 1041 1158 1067">Cable length: approximately 40 cm</p>
<p data-bbox="170 1306 299 1332">HP 16047C</p>  <p>The image shows the HP 16047C High Frequency Test Fixture, a rectangular metal unit with a black top surface. It has two screw knobs on the top surface. The front panel has a scale with 'LOW', '+35V DC MAX', and 'HIGH' markings. The text 'HEWLETT-PACKARD' and '16047C TEST FIXTURE' is visible on the top surface.</p>	<p data-bbox="761 1306 1202 1332">16047C High Frequency Test Fixture:</p> <p data-bbox="761 1343 1422 1494">Test Fixture (direct attachment type) especially appropriate for high frequency measurements requiring high accuracy. Two screw knobs facilitate and ensure optimum contact of electrodes and sample leads. Maximum applied dc bias voltage is $\pm 35V$.</p>

Table 1-4. Accessories Available (Sheet 2 of 4)

Model	Description
<p data-bbox="232 319 368 347">HP 16048A</p> 	<p data-bbox="834 319 1321 347">16048A Test Leads with BNC Connector:</p> <p data-bbox="834 351 1503 416">Test Leads (four terminal pair) with BNC connectors for connecting user-fabricated test fixtures.</p> <p data-bbox="834 437 1503 502">Maximum applied dc bias voltage is $\pm 200V$ (refer to Figure 3-34).</p> <p data-bbox="834 506 1037 534">Cable length: 1m</p>
<p data-bbox="232 685 368 713">HP 16048B</p> 	<p data-bbox="834 685 1428 713">16048B Test Leads with RF Miniature Connectors:</p> <p data-bbox="834 717 1503 814">Test Lead (four terminal pair) with miniature RF connectors suitable for connecting user-fabricated test fixtures in systems applications.</p> <p data-bbox="834 836 1503 901">Maximum applied dc bias voltage is $\pm 200V$ (refer to Figure 3-34).</p> <p data-bbox="834 905 1037 933">Cable length: 1m</p>
<p data-bbox="232 1062 368 1090">HP 16048C</p> 	<p data-bbox="834 1062 1301 1090">16048C Test Leads with Alligator Clips:</p> <p data-bbox="834 1095 1503 1192">Test Leads with dual alligator clips for testing components of various shapes and sizes at frequencies below 100kHz. Applicable measurement ranges:</p> <p data-bbox="905 1213 1194 1241">Capacitance $> 1000pF$</p> <p data-bbox="905 1246 1186 1274">Inductance $> 100\mu H$</p> <p data-bbox="834 1289 1318 1317">Maximum applied dc bias voltage is $\pm 35V$.</p> <p data-bbox="834 1321 1037 1349">Cable length: 1m</p>
<p data-bbox="232 1455 368 1483">HP 16034B</p> 	<p data-bbox="834 1455 1346 1483">16034B Test Fixture for Chip Components:</p> <p data-bbox="834 1487 1503 1612">Test Fixture (tweezer type) for measurement of miniature, leadless components such as chip capacitors. Employs a three terminal configuration tweezer probe suitable for high impedance component measurements (above 50Ω).</p> <p data-bbox="834 1634 1318 1662">Maximum applied dc bias voltage is $\pm 35V$.</p> <p data-bbox="834 1666 1037 1694">Cable length: 1m</p>

SECTION II

INSTALLATION

2-1. INTRODUCTION

2-2. This section provides installation instructions for the Model 4192A Impedance Analyzer. The section also includes information on initial inspection and damage claims, preparation for using the 4192A, packaging, storage, and shipment.

2-3. INITIAL INSPECTION

2-4. The 4192A Impedance Analyzer, as shipped from the factory, meets all the specifications listed in Table 1-1. Upon receipt, inspect the shipping container for damage. If the shipping container or cushioning material is damaged, it should be kept until the contents of the shipment have been checked for completeness and the instrument has been checked mechanically and electrically. The contents of the shipment should be as shown in Figure 1-1. The procedures for checking electrical performance are given in Section III, paragraph 3-7, Self Test and in Section IV, Performance Tests. If the shipment is incomplete, if the instrument is damaged in any way, or if the instrument does not pass the Performance Tests, notify the nearest Hewlett-Packard office. If the shipping container is damaged, notify the carrier as well as Hewlett-Packard. Keep the shipping materials for the carrier's inspection. The HP office will arrange for repair or replacement without waiting for claim settlement.

2-5. PREPARATION FOR USE

2-6. Power Requirements

2-7. The 4192A requires a power source of 100, 120, 220 Volts ac $\pm 10\%$, or 240 Volts ac $+5\% - 10\%$, 48 to 66Hz single phase; power consumption is 150VA maximum.

WARNING

THIS IS A SAFETY CLASS I PRODUCT (PROVIDED WITH A PROTECTIVE EARTH TERMINAL). AN UNINTERRUPTIBLE SAFETY EARTH GROUND MUST BE PROVIDED FROM THE MAIN POWER SOURCE TO THE INSTRUMENT'S INPUT WIRING TERMINALS, POWER CORD, OR SUPPLIED POWER CORD SET. WHENEVER THE SAFETY EARTH GROUND HAS BEEN IMPAIRED, THE INSTRUMENT MUST BE MADE INOPERATIVE AND BE SECURED AGAINST ANY UNINTENDED OPERATION. IF THIS INSTRUMENT IS TO BE ENERGIZED VIA AN AUTOTRANSFORMER FOR VOLTAGE REDUCTION, MAKE SURE THAT THE COMMON TERMINAL IS CONNECTED TO THE EARTH POLE OF THE POWER SOURCE.

2-8. Line Voltage and Fuse Selection

CAUTION

BEFORE CONNECTING THE INSTRUMENT TO THE POWER SOURCE, make sure that the correct fuse has been installed and that the line voltage selection switch is set to the correct voltage.

2-9. Figure 2-1 provides instructions for line voltage and fuse selection. The line voltage selection switch and the proper fuse are factory installed for 100 or 120 volts ac operation. Current ratings for the fuse are printed under the fuseholder on the instrument's rear-panel and are listed, with HP part numbers, in Figure 2-1.

CAUTION

Use the proper fuse for the line voltage selected. Make sure that only fuses for the required rated current and of the specified type are used for replacement. The use of mended fuses or short-circuited fuse-holders must be avoided.

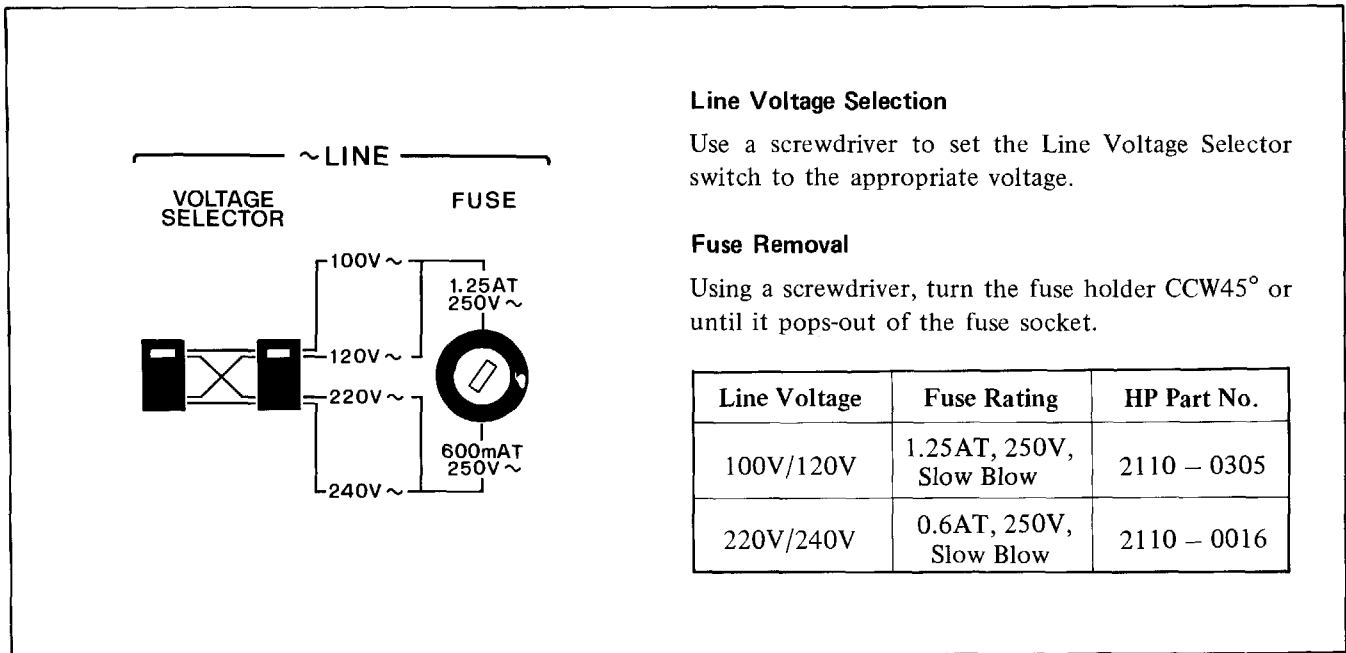


Figure 2-1. Line Voltage and Fuse Selection.

2-10. POWER CABLE

2-11. To protect operating personnel, the National Electrical Manufacturer's Association (NEMA) recommends that the instrument panel and cabinet be grounded. The Model 4192A is equipped with a three-conductor power cable which, when plugged into an appropriate ac power receptacle, grounds the instrument. The offset pin on the power cable is the ground wire.

2-12. To preserve the protection feature when operating the instrument from a two contact outlet, use a three prong to two prong adapter (HP Part No. 1251-8196) and connect the green pigtail on the adapter to power line ground.

CAUTION

The mains plug must only be inserted in a socket outlet provided with a protective earth contact. The protective action must not be negated by the use of an extension cord (POWER CABLE) without protective conductor (GROUNDING).

2-13. Figure 2-2 shows the available power cords which may be used in various countries. Also shown is the standard power cord furnished with the instrument. HP Part numbers, applicable standards for power plug, power cord color, electrical characteristics and countries using each power cord are listed in the figure. If assistance is

Line Voltage Selection

Use a screwdriver to set the Line Voltage Selector switch to the appropriate voltage.

Fuse Removal

Using a screwdriver, turn the fuse holder CCW45° or until it pops-out of the fuse socket.

Line Voltage	Fuse Rating	HP Part No.
100V/120V	1.25AT, 250V, Slow Blow	2110 - 0305
220V/240V	0.6AT, 250V, Slow Blow	2110 - 0016

needed for selecting the correct power cable, contact the nearest Hewlett-Packard office.

2-14. Interconnections

2-15. To interconnect the 4192A to an external controller or peripheral device using the HP-IB interface capability (IEEE Std. 488/ANSI-MC1.1), connect the HP-IB interface cable between the HP-IB connector on the rear panel of the 4192A and the HP-IB connector on the peripheral device. Refer to paragraph 3-109 for details on the HP-IB.

When an external frequency synthesizer is used, remove the cable connected between the VCO OUTPUT and EXT VCO connectors (located on the 4192A's rear panel), connect the OUTPUT of the external frequency synthesizer to the EXT VCO connector, and connect the 1MHz or 10MHz REFERENCE OUTPUT of the external frequency synthesizer to the 4192A's EXT REFERENCE connector. Refer to paragraph 3-131 for details on using an external frequency synthesizer.

When an X-Y recorder is used, connect the RECORDER OUTPUTS connectors (located on the 4192A's rear panel) to the X and Y axes connectors of the X-Y recorder. If the X-Y recorder is equipped with remote TTL pen lift control, connect the 4192A's PEN LIFT connector to the X-Y recorder's pen lift terminal. Refer to paragraph 3-137 for details on using an X-Y recorder.

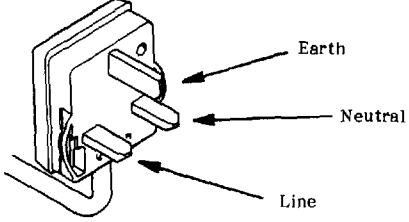
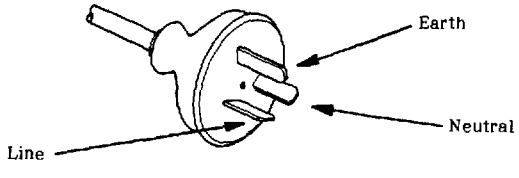
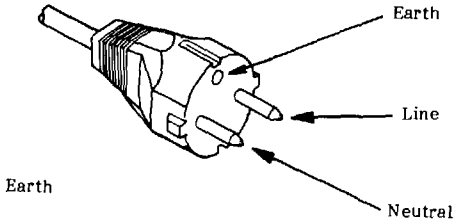
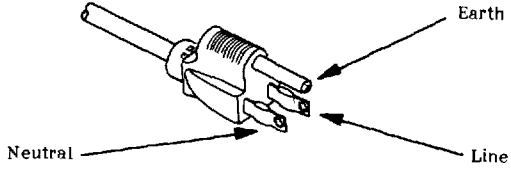
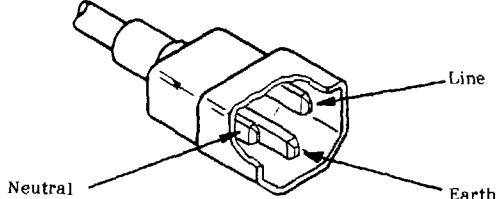
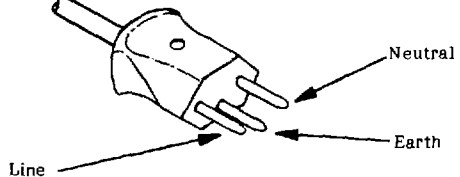
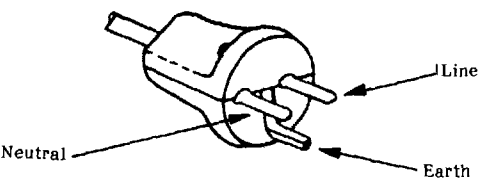
<p>OPTION 900 United Kingdom</p>  <p>Earth Neutral Line</p> <p>Plug : BS 1363A, 250V Cable : HP 8120-1351</p>	<p>OPTION 901 Australia/New Zealand</p>  <p>Earth Neutral Line</p> <p>Plug : NZSS 198/AS C112, 250V Cable : HP 8120-1369</p>
<p>OPTION 902 European Continent</p>  <p>Earth Line Neutral Earth</p> <p>Plug : CEE-VII, 250V Cable : HP 8120-1689</p>	<p>OPTION 903 U.S./Canada</p>  <p>Earth Neutral Line</p> <p>Plug : NEMA 5-15P, 125V, 15A Cable : HP 8120-1378</p>
<p>OPTION 905** Any country</p>  <p>Line Neutral Earth</p> <p>Plug : CEE 22-VI, 250V Cable : HP 8120-1396</p>	<p>OPTION 906 Switzerland</p>  <p>Neutral Earth Line</p> <p>Plug : SEV 1011.1959-24507 Type 12, 250V Cable : HP 8120-2104</p>
<p>OPTION 912 Denmark</p>  <p>Line Neutral Earth</p> <p>Plug : DHCR 107, 220V Cable : HP 8120-2956</p>	<p>** Plug option 905 is frequently used for interconnecting system components and peripherals.</p>
<p>NOTE : Each option number includes a ' family ' of cords and connectors of various materials and plug body configurations (straight, 90 ° etc.).</p>	

Figure 2-2. Power Cables Supplied.

2-16. Operating Environment

2-17. Temperature. The instrument may be operated in environments with ambient temperatures from 0°C to +55°C.

2-18. Humidity. The instrument may be operated in environments with relative humidities to 95% at 40°C. However, the instrument should be protected from temperature extremes which cause condensation within the instrument.


2-19. INSTALLATION INSTRUCTIONS

2-20. The 4192A can be operated on a bench or can be rack-mounted. The 4192A is ready for bench operation as shipped from the factory. For bench operation, the instrument is equipped with two retractable legs that are located on the bottom cover. They are extended by pulling them away from the bottom cover.

2-21. Installation of Options 907, 908 and 909

2-22. The 4192A can be rack-mounted and operated as part of a measurement system. Rack mounting information for the 4192A is given in Figure 2-3.

Option	Kit Part Number	Parts Included	Part Number	Q'ty	Remarks
907	Handle Kit 5061-0091	Front Handle Trim Strip # 8-32 x 3/8 Screw	③ 5060-9901 ④ 5060-8898 2510-0195	2 2 6	9.525 mm
908	Rack Flange Kit 5061-0079	Rack Mount Flange # 8-32 x 3/8 Screw	② 5020-8864 2510-0193	2 6	9.525 mm
909	Rack Flange & Handle Kit 5061-0085	Front Handle Rack Mount Flange # 8-32 x 5/8 Screw	③ 5060-9901 ⑤ 5020-8876 2510-0194	2 2 6	15.875 mm

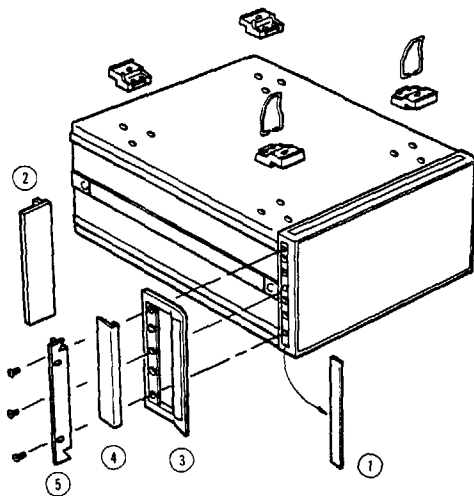

1. Remove the adhesive-backed trim strip ① from both sides of the front-panel frame.
2. HANDLE INSTALLATION: Attach the handles ③ to both sides of the front-panel frame with the screws provided, and attach trim ④.
3. RACK MOUNTING: Attach rack mount flange ② to both sides of the front-panel frame with the screws provided.
4. HANDLE AND RACK MOUNTING: Attach front handle ③ and rack mount flange ⑤ to both sides of the front-panel frame with screws provided.
5. When rack mounting (3 and 4 above), remove the four instrument feet (lift tab, and slide the foot in the direction of the tab).

Figure 2-3. Rack Mount Kits.

2-23. STORAGE AND SHIPMENT

2-24. Environment

2-25. The instrument should be stored in a clean, dry environment. The following environmental limitations apply to both storage and shipment:

Temperature -55°C to +75°C
Humidity to 95% (at 40°C)

The instrument should be protected from temperature extremes which cause condensation inside the instrument.

2-26. Packaging

2-27. Original Packaging. Containers and materials identical to those used in factory packaging are available through Hewlett-Packard offices. If the instrument is being returned to Hewlett-Packard for servicing, attach a tag indicating the type of service required, return address, model number, and full serial number. Also mark the container FRAGILE to assure careful handling. In any correspondence, refer to the instrument by model number and full serial number.

2-28. Other Packaging. The following general instructions should be used for repackaging with commercially available materials:

- a. Wrap instrument in heavy paper or plastic. If shipping to Hewlett-Packard office or service center, attach tag indicating type of service required, return address, model number, and full serial number.
- b. Use strong shipping container. A double-walled carton made of 350 pound test material is adequate.
- c. Use enough shock absorbing material (3 to 4 inch layer) around all sides of the instrument to provide a firm cushion and prevent movement inside container. Protect front-panel with cardboard.
- d. Seal shipping container securely.
- e. Mark shipping container FRAGILE to ensure careful handling.
- f. In any correspondence, refer to instrument by model number and full serial number.

SECTION III OPERATION

3-1. INTRODUCTION

3-2. This section provides all the information necessary to operate the Model 4192A LF Impedance Analyzer. Included are descriptions of the front- and rear-panel controls, displays, lamps, and connectors; discussions on operating procedures and measuring techniques for various applications; and instructions on the instrument's SELF TEST function. A break-down of the contents of this section is given in Figure 3-1. Warnings, Cautions, and Notes are given throughout; they should be carefully observed to secure the safety of the operator and the serviceability of the instrument.

ALL PROTECTIVE EARTH TERMINALS, EXTENSION CORDS, AUTO-TRANSFORMERS AND DEVICES CONNECTED TO IT SHOULD BE CONNECTED TO A PROTECTIVE EARTH GROUNDED SOCKET. ANY INTERRUPTION OF THE PROTECTIVE EARTH GROUNDING WILL CAUSE A POTENTIAL SHOCK HAZARD THAT COULD RESULT IN PERSONAL INJURY.

ONLY FUSES WITH THE REQUIRED RATED CURRENT AND OF THE SPECIFIED TYPE SHOULD BE USED. DO NOT USE REPAIRED FUSES OR SHORT CIRCUITED FUSEHOLDERS. TO DO SO COULD CAUSE A SHOCK OR FIRE HAZARD.

WARNING

BEFORE THE INSTRUMENT IS SWITCHED ON,

Caution: Before the instrument is switched on, it must be set to the voltage of the power source, or damage to the instrument may result.

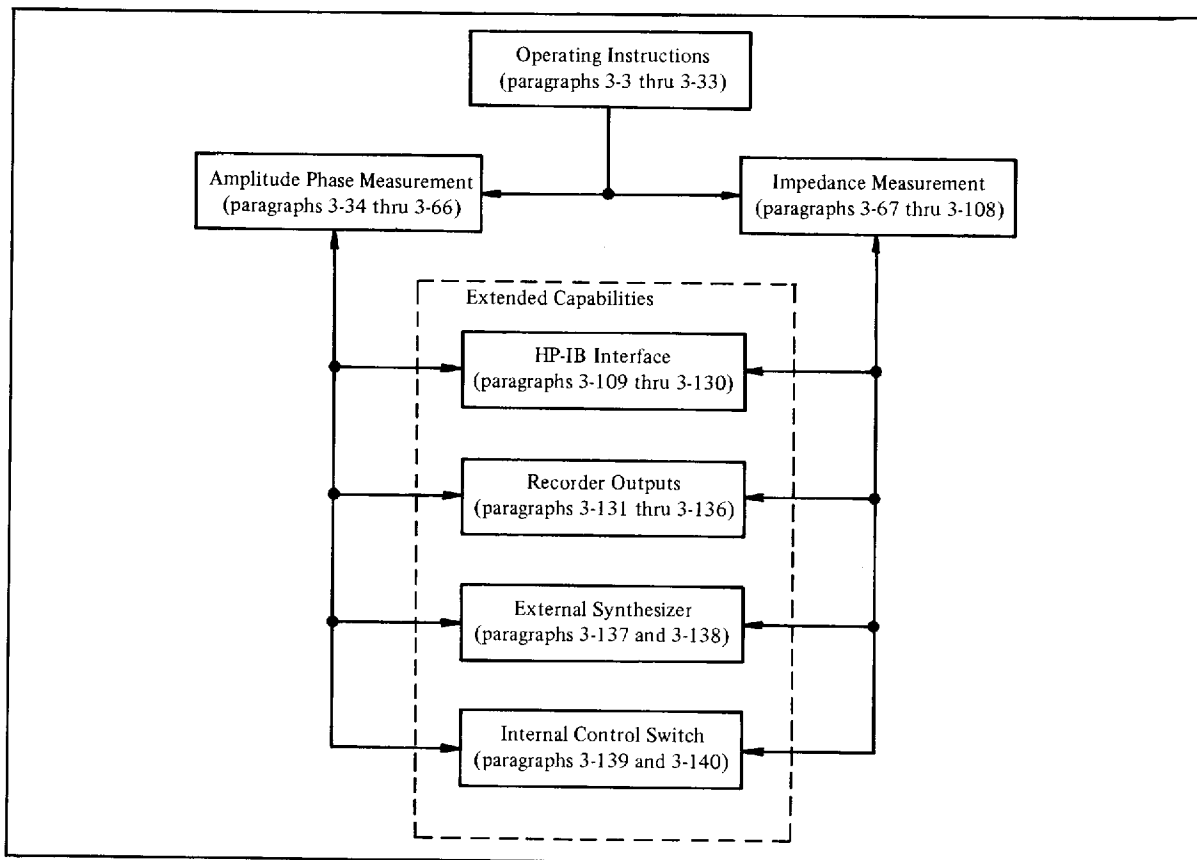



Figure 3-1. Contents of Section III

3-3. OPERATING INSTRUCTIONS

3-4. Operating instructions for the instrument's basic capabilities are given in paragraphs 3-5 through 3-33. Operating instructions for extended capabilities (remote operation via the HP-IB, X-Y Recorder Outputs, External Synthesizer, and Internal Control Switches) are covered in paragraphs 3-109 through 3-140.

3-5. Panel Features

3-6. Front- and rear-panel features are described in Figures 3-2 and 3-3, respectively. More detailed information on the panel displays and controls is given starting in paragraph 3-7.

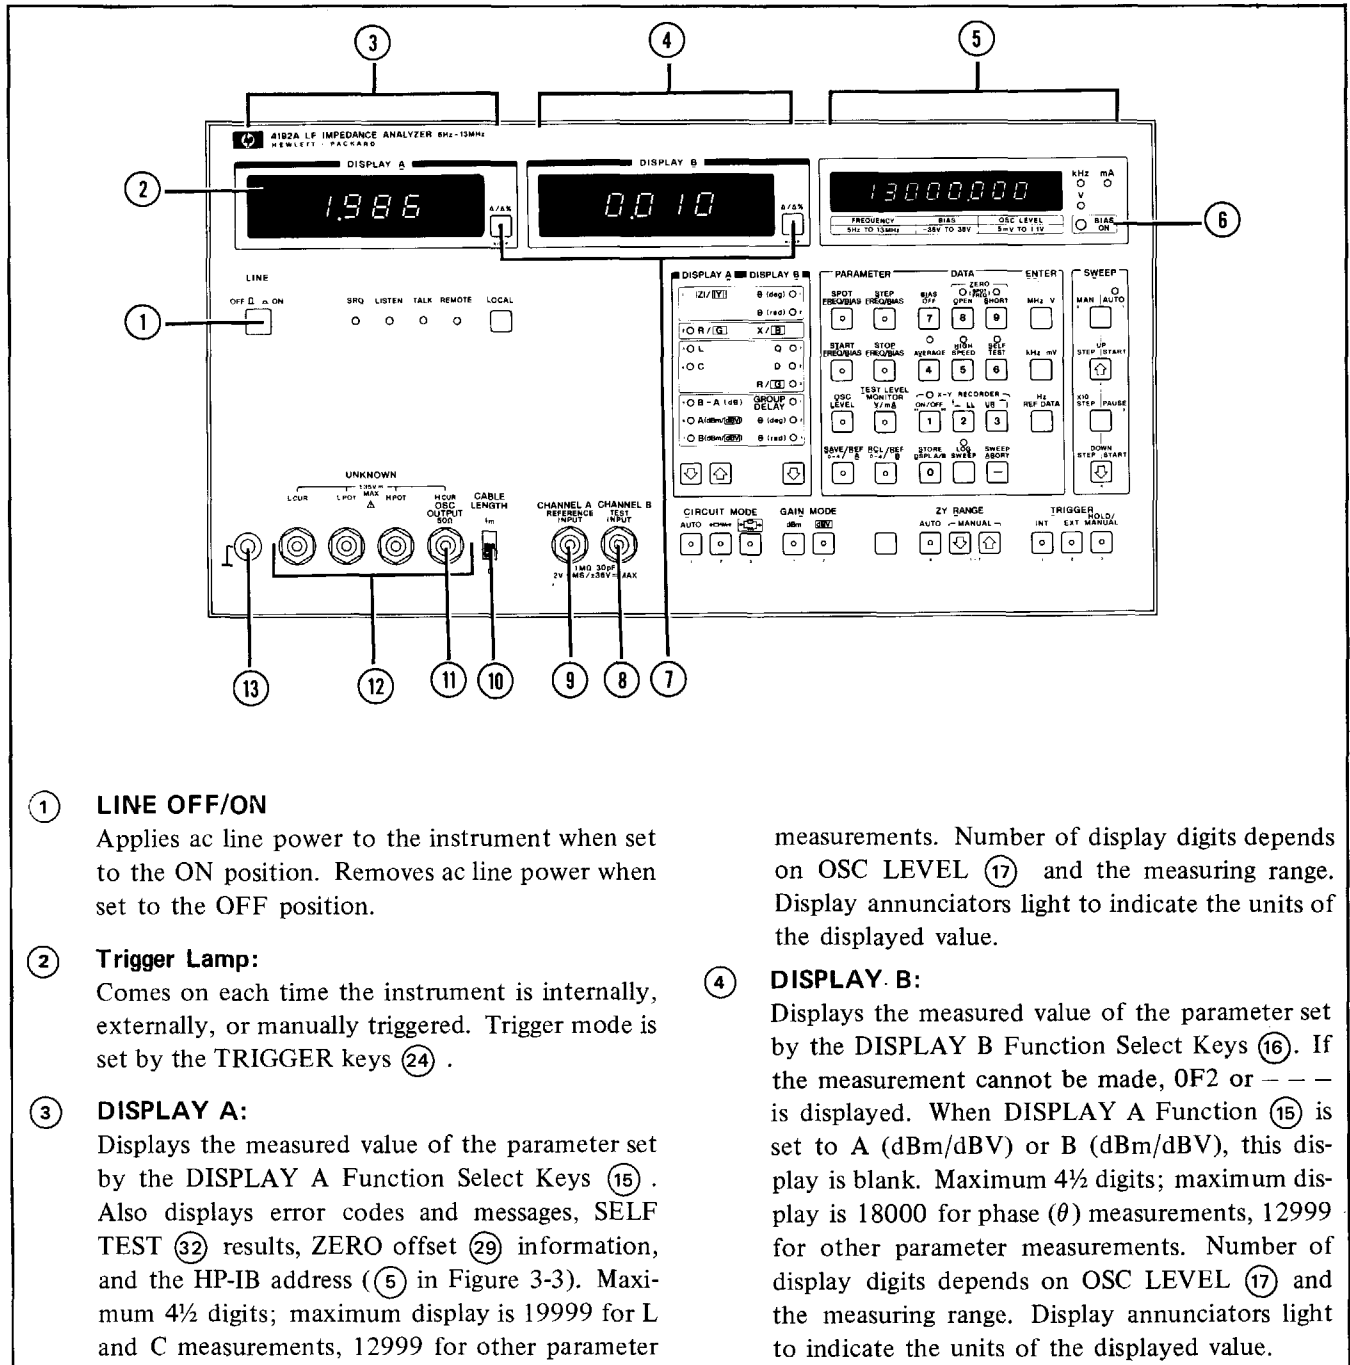


- ① **LINE OFF/ON**
 Applies ac line power to the instrument when set to the ON position. Removes ac line power when set to the OFF position.
- ② **Trigger Lamp:**
 Comes on each time the instrument is internally, externally, or manually triggered. Trigger mode is set by the TRIGGER keys (24).
- ③ **DISPLAY A:**
 Displays the measured value of the parameter set by the DISPLAY A Function Select Keys (15). Also displays error codes and messages, SELF TEST (32) results, ZERO offset (29) information, and the HP-IB address ((5) in Figure 3-3). Maximum 4½ digits; maximum display is 19999 for L and C measurements, 12999 for other parameter

- ④ **DISPLAY B:**
 Displays the measured value of the parameter set by the DISPLAY B Function Select Keys (16). If the measurement cannot be made, OF2 or --- is displayed. When DISPLAY A Function (15) is set to A (dBm/dBV) or B (dBm/dBV), this display is blank. Maximum 4½ digits; maximum display is 18000 for phase (θ) measurements, 12999 for other parameter measurements. Number of display digits depends on OSC LEVEL (17) and the measuring range. Display annunciators light to indicate the units of the displayed value.

Figure 3-2. Front Panel Features (Sheet 1 of 10)

- ⑤ **Test Parameter Data Display (DISPLAY C):**
Displays test parameter values (FREQ. BIAS, and OSC LEVEL). Test parameters are set by the test PARAMETER Select keys (17). Maximum 7½ digits for frequency; 4½ digits for OSC LEVEL and DC BIAS. Annunciator lamps, located to the right of the display, light to indicate the units of the displayed value. Also displays error codes, overflow annunciation, and information related to the SAVE function.
- ⑥ **BIAS ON Indicator:**
Comes on when dc bias is applied to the DUT; goes off when the BIAS OFF key (28) is pressed.
- ⑦ **Δ/Δ% Keys and Indicators:**
These keys – one for DISPLAY A and one for DISPLAY B – are used for deviation (Δ) or percent deviation (Δ%) measurement. For percent deviation (Δ%), the **Blue** key (37) must be pressed before the Δ/Δ% key.
Δ (Delta): The difference between the measured value of the DUT and a previously stored reference value is displayed by pressing this key. The formula used to calculate the deviation is
- $$A - B$$
- where A is the measured value of the DUT and B is the stored reference value
- Δ%: The difference between the measured value of the DUT and a previously stored reference value is displayed as a percentage of the reference value. The formula used to calculate the percent deviation is
- $$\frac{A - B}{B} \times 100 (\%)$$
- where A is the measured value of the DUT and B is the stored reference value.
- ⑧ **CHANNEL B (TEST INPUT) Connector:**
Used in conjunction with CHANNEL A (9) and OSC OUTPUT (11) in transmission characteristics measurements, i.e., gain/loss (B–A), level (A or B), phase, group delay. Output port of the network under test is connected to this connector. Input impedance is $1 \text{ M}\Omega \pm 2\%$, shunted by $25 \text{ pF} \pm 5 \text{ pF}$. Maximum input voltage is AC 2 Vrms and DC $\pm 35\text{V}$.
- ⑨ **CHANNEL A (REFERENCE INPUT) Connector:**
Used in conjunction with CHANNEL B (8) and OSC OUTPUT (11) in transmission characteristics measurements, i.e., gain/loss (B–A), level (A or B), phase, group delay. The 5 Hz – 13 MHz signal from OSC OUTPUT (11) is simultaneously applied to the input port of the network under test and this connector. Input impedance, shunt capacitance, and maximum input voltage of CHANNEL A are the same as those of CHANNEL B (8).
- ⑩ **CABLE LENGTH Switch:**
This switch has meaning in impedance measurements only. It facilitates balancing of the measuring bridge circuit and minimizes measurement errors when the standard 1 meter test leads are used.
1m: Set the switch to this position when using the standard 1 meter test leads. Appropriate compensation is made for propagation delay and phase error caused by the test leads in high frequency measurements.
0: Set the switch to this position when using a direct attachment type test fixture (connects to the UNKNOWN terminals (12)).
- ⑪ **OSC OUTPUT Connector:**
Used in conjunction with CHANNEL A (9) and CHANNEL B (8) in transmission characteristics measurements, i.e., gain/loss (B–A), level (A or B), phase, group delay. Provides a 5 Hz to 13 MHz stimulus signal for the network under test (output of network is connected to CHANNEL B (8)) and the reference signal for CHANNEL A (9). Output impedance is approximately 50Ω .
- ⑫ **UNKNOWN Terminals:**
Used for impedance/phase measurements – $|Z|$, $|Y|$, R, G, L, C, X, B, phase – these four BNC connectors provide the means to connect DUT's – components or networks – in a four terminal pair configuration: High current terminal (H_{CUR}), High potential terminal (H_{POT}), Low current terminal (L_{CUR}), and Low potential terminal (L_{POT}). Four terminal pair test fixture attaches directly to these terminals.
- ⑬ **GROUND Terminal:**
This terminal is tied to the instrument's chassis ground and can be used in measurements that require guarding.

Figure 3-2. Front Panel Features (Sheet 2 of 10)

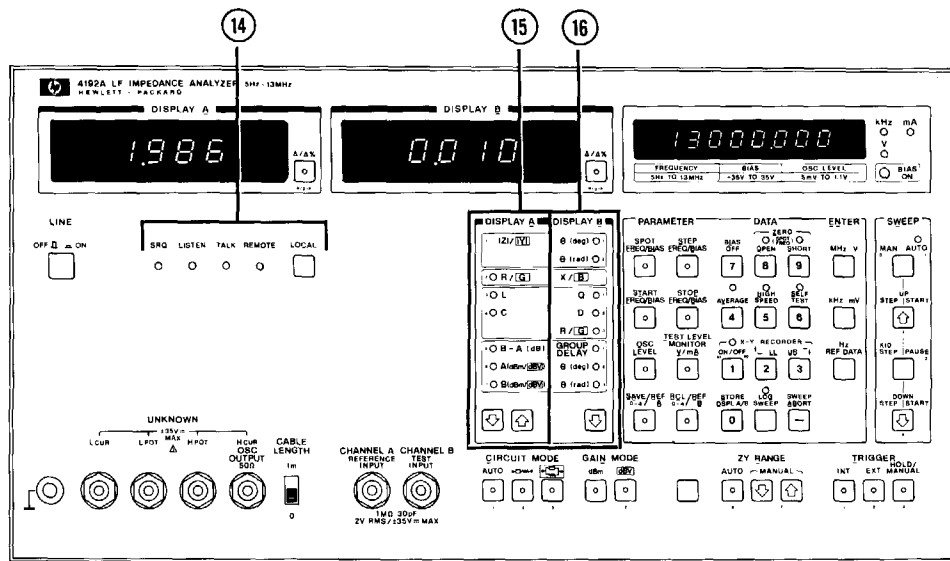

14 HP-IB Status Indicators and LOCAL key:
These four LED lamps – SRQ, LISTEN, TALK, and REMOTE – indicate the status of the 4192A when it is interfaced with a controller via the HP-IB.

The LOCAL key, when pressed, releases the instrument from REMOTE (HP-IB) control and enables front-panel control. The LOCAL key does not function when the instrument is set to local lockout by the controller.

15 DISPLAY A Function Select Keys and Indicators:
These keys – \downarrow and \uparrow – are used in conjunction with the CIRCUIT MODE keys (27) to select the primary measurement parameter for display on DISPLAY A. The selectable parameters are $|Z|/|Y|$, R/G, L, C, B-A (dB), A (dBm/dBV), or B (dBm/dBV). The selected parameter is indicated by the corresponding LED lamp. Pressing either of these keys shifts the selected parameter in the indicated direction (\downarrow , \uparrow).

$|Z|/|Y|$: When CIRCUIT MODE (27) is set to AUTO or --- , the instrument measures $|Z|$ (absolute value of the DUT's impedance) and θ (phase angle) in degrees or radians (depends on DISPLAY A Function (16) setting); the results are displayed on DISPLAY A ($|Z|$) and DISPLAY B (θ) to provide a polar representation ($|Z|/\angle\theta$) of the DUT's impedance. When CIRCUIT

MODE (27) is set to --- , the instrument measures $|Y|$ (absolute value of the DUT's admittance) and θ (phase angle) in degrees or radians; the results are displayed on DISPLAY A ($|Y|$) and DISPLAY B (θ) to provide a polar representation ($|Y|/\angle\theta$) of the DUT's admittance.

R/G : When CIRCUIT MODE (27) is set to --- , the instrument measures R (resistance of the DUT) and X (reactance of the DUT); the results are displayed on DISPLAY A (R) and DISPLAY B (X) to provide a rectangular (Cartesian) representation ($R \pm jX$) of the DUT's impedance.

When CIRCUIT MODE (27) is set to --- , the instrument measures G (conductance) and B (susceptance); the results are displayed on DISPLAY A (G) and DISPLAY B (B) to provide a rectangular (Cartesian) representation ($G \pm jB$) of the DUT's admittance.

L : Measures inductance and – depending on the setting of DISPLAY B Function (16) – Q (quality factor), D (dissipation factor), or R/G (equivalent series resistance or equivalent parallel conductance [to measure G, CIRCUIT MODE (27) must be set to ---]).

Figure 3-2. Front Panel Features (Sheet 3 of 10)




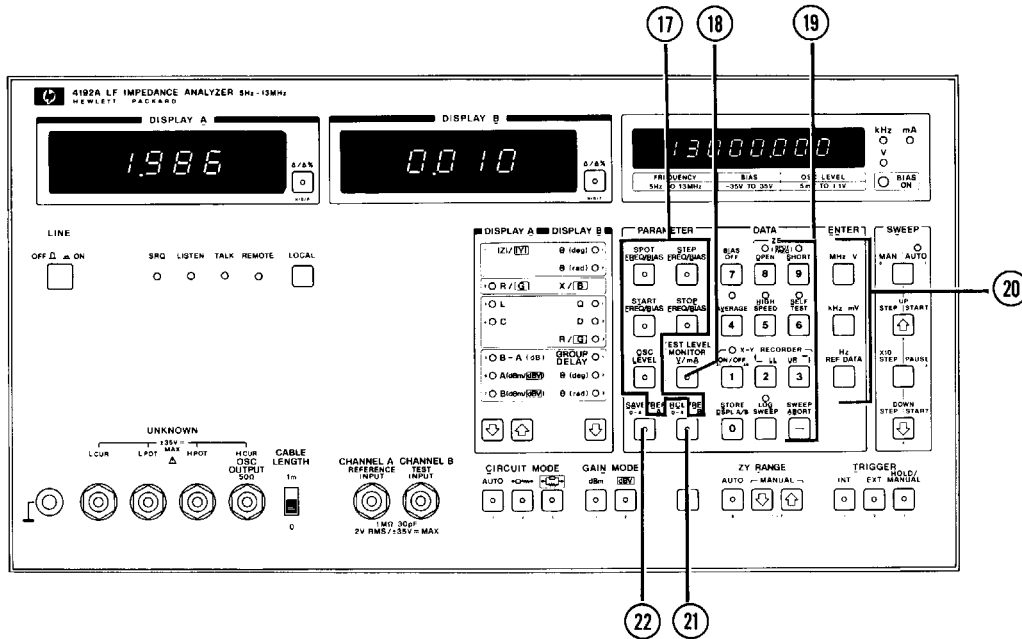
C :	<p>the results are displayed on DISPLAY A and DISPLAY B, respectively.</p> <p>Measures capacitance and – depending on the setting of DISPLAY B Function (16) – Q (quality factor), D (dissipation factor, or R/G (equivalent series resistance or equivalent parallel conductance [to measure G, CIRCUIT MODE (27) must be set to ]); the results are displayed on DISPLAY A (3) and DISPLAY B (4), respectively.</p>	<p>The selected parameter is indicated by the corresponding LED lamp.</p>
B-A (dB) :	<p>Measures the relative amplitude of the reference input (CHANNEL A (9)) and the test input (CHANNEL B (8)). The result is displayed on DISPLAY A (3). Also measures group delay or phase in degrees or radians (selected by DISPLAY B Function (16)).</p> <p>The value displayed on DISPLAY A (3) is the gain or loss of the network under test. Group delay or phase is displayed on DISPLAY B (4).</p>	<p>Pressing this key shifts the selected parameter in the indicated direction ().</p>
A (dBm/dBV) :	<p>Measures the absolute amplitude of the reference input (CHANNEL A (9)) in dBm or dBV (selected by GAIN MODE Select key (26)). Amplitude is displayed on DISPLAY A (3).</p> <p>When this parameter is selected, DISPLAY B Function (16) has no selectable parameters and DISPLAY B (4) is blank.</p>	<p>θ (deg) : Measures, in degrees, the phase angle of Z (absolute impedance of the DUT) or Y (absolute admittance of the DUT).</p>
B (dBm/dBV) :	<p>Measures the absolute amplitude of the test input (CHANNEL B (8)); identical to A (dBm/dBV) in all other respects.</p>	<p>θ (rad) : Measures, in radians, the phase angle of Z (absolute impedance of the DUT) or Y (absolute admittance of the DUT).</p>
(16) DISPLAY B Function Select Key and Indicators:	<p>This key,  , is used in conjunction with the CIRCUIT MODE keys (27) to select the secondary measurement parameter for display on DISPLAY B (4). Selectable parameters are θ (phase), Q (quality factor), D (dissipation factor), R/G (equivalent series resistance or equivalent parallel conductance), and GROUP DELAY. Phase (θ) can only be selected when DISPLAY A Function (15) is set to Z / Y or B-A (dB); Q, D, and R/G, only when DISPLAY A Function is set to L or C; GROUP DELAY, only when DISPLAY A Function is set to B-A (dB).</p>	<p>X/B : These parameters are automatically selected when DISPLAY A Function (15) is set to R/G. X is the reactance of DUT's impedance; B is the susceptance of the DUT's admittance.</p>
		<p>Q : Measures the quality factor of the DUT. DISPLAY A Function (15) must be set to L (inductance) or C (capacitance).</p>
		<p>D : Measures the dissipation factor of the DUT. DISPLAY A Function (15) must be set to L (inductance) or C (capacitance).</p>
		<p>R/G : Measures the resistance or conductance of the DUT. DISPLAY A Function (15) must be set to L (inductance) or C (capacitance). CIRCUIT MODE keys (27) determine which of the two parameters (R or G) is selected.</p>
		<p>GROUP DELAY: Measures the group delay between the reference input (CHANNEL A (9)) and test input (CHANNEL B (8)). Can only be selected when DISPLAY A Function (15) is set to B-A (dB).</p>
		<p>θ (deg) : Measures, in degrees, the phase difference between the reference input (CHANNEL A (9)) and test input (CHANNEL B (8)). Can only be selected when DISPLAY A Function (15) is set to B-A (dB).</p>
		<p>θ (rad) : Measures, in radians, the phase difference between the reference input (CHANNEL A (9)) and test input (CHANNEL B (8)). Can only be selected when DISPLAY A Function (15) is set to B-A (dB).</p>

Figure 3-2. Front Panel Features (Sheet 4 of 10)



17 **Test PARAMETER Select Keys and Indicators:**
These keys are used in conjunction with the DATA input keys (19), ENTER keys (20), and the BLUE key (37) to assign values to the various test parameters; to monitor the test parameters; to save and recall front-panel control settings; and to input reference data for deviation and percent deviation ($\Delta/\Delta\%$ (7)) measurements. Pressing a test parameter key will cause the value of the selected test parameter to be displayed on the Test Parameter Data Display (5). Lighted indicator lamp (center of each key) indicates selected test parameter. Only one test parameter can be selected. Test parameters labelled in blue are accessible by first pressing the BLUE key (37).

SPOT FREQ/BIAS:

For single point measurements. Sets the spot frequency and spot bias.
When spot bias is set, BIAS ON Indicator (6) lights.

STEP FREQ/BIAS:

For swept measurements. Sets the step (increment) frequency and step (increment) bias.

START FREQ/BIAS :

For swept measurements. Sets the start frequency and start bias.

STOP FREQ/BIAS :

For swept measurements. Sets the stop frequency and stop bias.

OSC LEVEL :

Sets the voltage (rms) of the internal frequency synthesizer.

REF A :

For deviation and percent deviation ($\Delta/\Delta\%$ (7)) measurements. Sets the reference value for DISPLAY A.

REF B :


For deviation and percent deviation ($\Delta/\Delta\%$ (7)) measurements. Sets the reference value for DISPLAY B.

Figure 3-2. Front Panel Features (Sheet 5 of 10)

- 18 TEST LEVEL MONITOR Key and Indicator:**
Pressing this key displays the level of the test signal applied to the DUT or, if the BLUE key 37 is first pressed, the current through the DUT on the Test Parameter Data Display 5. The appropriate annunciator lamp will light.
- 19 DATA Input Keys:**
These keys (0 thru 9, decimal point, and minus sign) are used to input test parameter values, register numbers for SAVE 22 and RCL 21 functions, and reference data for DISPLAY A (REF A) and DISPLAY B (REF B) deviation measurements ($\Delta/\Delta\%$ 7). Data is displayed on the Test Parameter Data Display 5 as it is input. Each key has a control function – labelled in blue above the key – which is accessible via the BLUE key 37. These control functions are explained individually in 28 thru 36.
- 20 ENTER Keys:**
These keys instruct the instrument to read the test parameter data and reference data set by the PARAMETER Select keys 17 and DATA Input keys 19. Data are not input until one of these keys is pressed.

MHz, V : Enters the value input from the DATA Input keys 19 in MHz for frequency parameters or V for bias parameters.
- kHz, mV : Enters the value input from the DATA Input keys 19 in kHz for frequency parameters or mV for bias parameters.
- Hz, REF DATA:
Enters the value input from the DATA Input key 19 in Hz for frequency parameters or as reference data for deviation measurements.
- 21 RCL (Recall) Key:**
This key is used to return the instrument to the front-panel control settings, test parameter values, calibration data (ZERO OPEN/SHORT 29), and reference data saved by the SAVE key 22. DATA Input keys 19 0 thru 4 are used to select the desired register. For example, to return the instrument to the control settings stored in register 0, press $\frac{\text{RCL/REF}}{0-4/B}$ and 0 .
- 22 SAVE Key:**
This key is used to save (store) front-panel control settings, test parameter values, calibration data (ZERO OPEN/SHORT 29), and reference data. There are five registers (0 thru 4), so five sets of control settings can be saved. And because the registers are nonvolatile, saved control settings can be recalled (RCL key 21) even if the instrument has been turned off. To store existing control settings, press $\frac{\text{SAVE/REF}}{0-4/B}$ and enter the register number from the DATA Input keys 19 .

Figure 3-2. Front Panel Features (Sheet 6 of 10)

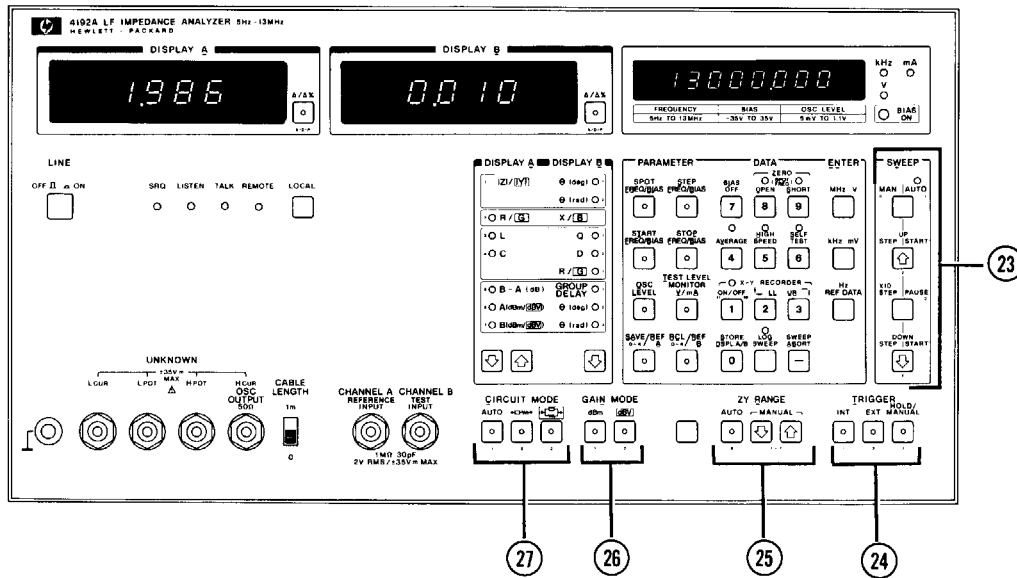

23 SWEEP Control Keys and Indicator:
 These keys control the instrument's sweep function. Frequency, bias voltage, and oscillator level can be swept. (Oscillator level can be swept in MAN. mode only.) BIAS ON Indicator (6) must be on for bias voltage sweep; off for frequency sweep. The MAN AUTO key controls the sweep mode. Indicator comes on in AUTO mode. The functions of the other keys are described below for each mode. For log sweep, press the LOG SWEEP key (35).

AUTO

START UP :
 Starts the frequency or bias voltage sweep from the value set by the START FREQ./BIAS test parameter key (17). Sweeps up at the increment (step) set by the STEP FREQ./BIAS test parameter key (17).
 Also restarts the sweep after a PAUSE.

PAUSE : Temporarily stops the sweep to allow

the sweep step or sweep direction to be changed. Sweep is restarted by pressing the START UP or START DOWN key.

START DOWN :

Starts the frequency or bias voltage sweep from the value set by the STOP FREQ./BIAS test parameter key (17). Sweeps down at the increment (step) set by the STEP FREQ./BIAS test parameter key (17). Also restarts the sweep after a PAUSE.



MAN.

STEP UP : Each time this key is pressed, the frequency or bias voltage is incremented by the value set by the STEP FREQ./BIAS test parameter key (17). If the OSC LEVEL or TEST LEVEL MONITOR key is pressed, oscillator level will be incremented by 1mV (when level is less than 100mV) or 5mV

Figure 3-2. Front Panel Features (Sheet 7 of 10)

(when level is greater than 100mV) each time this key is pressed. Sweep becomes continuous when this key is pressed and held.

X10 STEP :

This key is used with the STEP UP  or STEP DOWN  key. Holding this key down while pressing STEP UP or STEP DOWN increases the sweep step value by a factor of ten.

STEP DOWN :

Each time this key is pressed, the frequency or bias voltage is decremented by the value set by the STEP FREQ./BIAS test parameter key (17). If the OSC LEVEL key or TEST LEVEL MONITOR key is pressed, oscillator level will be decremented by 1mV (when level is less than 100mV) or 5mV (when level is greater than 100mV) each time this key is pressed. Sweep becomes continuous when this key is pressed and held.

(24) TRIGGER:

These keys select the trigger mode for triggering measurement (Internal, External or Hold/Manual):

INT : Internal trigger signal enables instrument to make repeated automatic measurements. Measurement speed varies depending on the type of measurement, oscillator frequency, and whether normal, average, or high speed is selected.

EXT : Measurement is triggered by external trigger signal through rear panel EXT TRIGGER input connector ((7) in Figure 3-3).

HOLD/MANUAL :

Measurement is triggered each time this key is pushed. Measurement data is held until the next time the key is pressed.



(25) ZY RANGE Select Keys and Indicator:



In impedance measurements, these keys select the measurement range and ranging method of the absolute value of impedance ($|Z|$: 1 Ω ~ 1M Ω) or admittance ($|Y|$: 10 μ S ~ 10 μ S).

AUTO (when indicator is lit) :

Optimum range for the sample value is automatically selected.

MANUAL (when indicator is not lit) :

Measurement range is fixed (even when the sample is changed). Manual ranging is done by pressing adjacent DOWN () or UP () key.

Note: Pressing DOWN () or UP () key sets the ranging mode to Manual even if the ranging mode was set to AUTO.

(26) GAIN MODE Selector Key:





In amplitude/phase measurements, these keys select the appropriate unit for A (absolute amplitude of reference input) and B (absolute amplitude of test input).


dBm : Displays absolute amplitude in dBm (=20 log₁₀ V + 13.01).


dBV : Displays absolute amplitude in dBV (= 20 log₁₀ V).

(27) CIRCUIT MODE Selector Key:

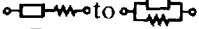These keys select desired measurement circuit mode to be used for R/G, C, or L measurement.

AUTO : Automatically selects appropriate parallel or series equivalent circuit for the sample value. When ZY RANGE (25) up-ranges from the 1k Ω (10ms) range to 10k Ω (1ms) range, circuit mode changes from  to . When ZY RANGE (25) down-ranges from the 100 Ω (100ms) range to 10 Ω (1s) range, circuit mode changes from  to .

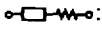 : Selects equivalent series circuit.

 : Selects equivalent parallel circuit.

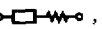

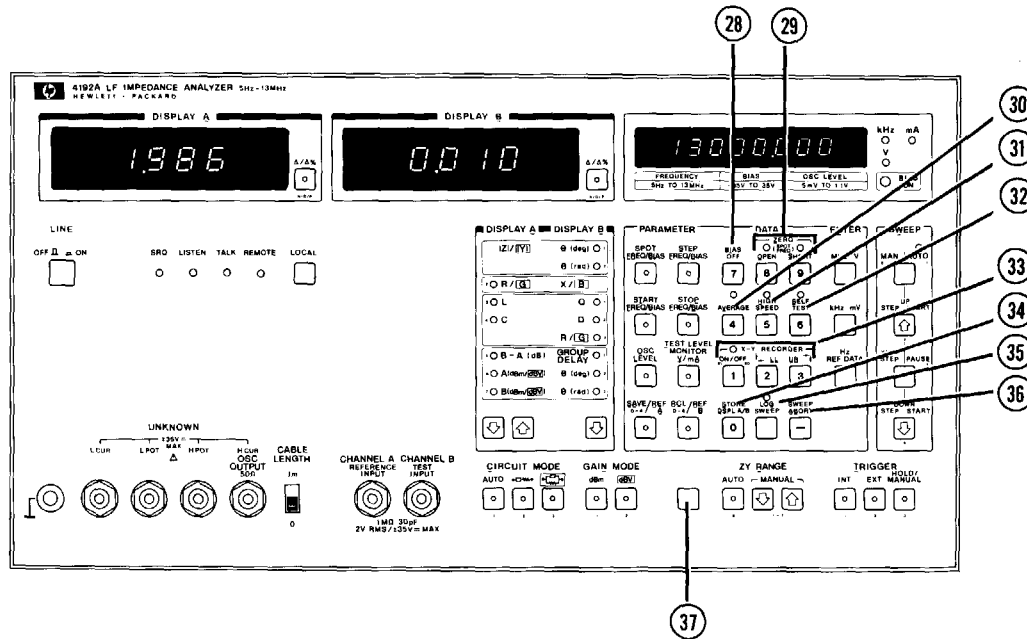
Note: In $|Z|/|Y|$ measurements, ranging does not affect the measurement circuit mode. CIRCUIT MODE keys are used to select $|Z|$ or $|Y|$. When the circuit mode is set to AUTO or , $|Z|$ is selected; when the circuit mode is set to , $|Y|$ is selected.

Figure 3-2. Front Panel Features (Sheet 8 of 10)



Note: The nine secondary functions, (28) thru (36) of the DATA Input keys (19) are accessible by first pressing the BLUE key (37).

(28) BIAS OFF Key:

This key disables internal dc bias operation. When this key is pressed, no dc bias is applied to the DUT and BIAS ON indicator (6) goes off.

(29) ZERO Offset Keys and Indicators:

These keys perform compensation for the residuals present in the test fixture, test leads, and measurement circuit. ZERO offset can be performed for one spot frequency only. If the spot frequency is changed, ZERO offset must be performed again.

OPEN : If this key is pressed when the test fixture or test leads are terminated OPEN and the indicator is off, measured value at this time is stored as residual admittance ($G + jB$) data and the indicator comes on. While the indicator is on, compensation for the residuals is made.

SHORT : If this key is pressed when the test fixture or test leads are SHORTed and the indicator is off, measured value at this time is stored as residual impedance ($R + jX$) data and the indicator comes on. While the indicator is lit, compensation for the residuals is made.

(30) AVERAGE Key and Indicator:

This key sets the 4192A to the average measurement mode. In the average measurement mode (when the indicator is lit), measurement data has a higher resolution and repeatability than measurement data in the normal or high speed measurement mode. This function is released by repressing the key after pressing the Blue key (37) or by setting the 4192A to the high speed measurement mode (31).

Figure 3-2. Front Panel Features (Sheet 9 of 10)

31 HIGH SPEED Key and Indicator:

This key sets the 4192A to the high speed measurement mode. In the high speed measurement mode (when the indicator is lit), measurement time is shorter (approximately $\frac{1}{2}$) than the measurement time in the normal measurement mode. This function is released by repressing the key after pressing the BLUE key (37) or by setting the 4192A to the average measurement mode.

32 SELF TEST Key and Indicator:

This key initiates the instrument's SELF TEST function. During SELF TEST (when the indicator is on), six tests, which check the basic functional operation of the instrument, are automatically performed. The results (Pass or Fail) are displayed on DISPLAY A (3). When the SELF TEST is completed, this mode is released automatically and normal measurement mode (indicator is off) is set.

33 X-Y RECORDER Function Keys and Indicator:

These keys control the instrument's analog output capability. Voltage proportional to the measurement results is output from the X-Y RECORD OUTPUT connectors (see (11) in Figure 3-3) located on the instrument's rear-panel. Graphs can be plotted with this capability.

ON : Analog data representing the measurement results and test parameter value (frequency/bias) are output from the DISPLAY A, DISPLAY B, and FREQ./BIAS RECORDER OUTPUTS on the rear-panel. Indicator lamp is on in this state.

OFF : No analog data is output, and X-Y Recorder zero- and full-scale adjustments can be made. Indicator lamp is off in this state.

↓← LL : Provides a reference voltage (0V) from each rear-panel RECORDER OUTPUT. Used for zero-scale adjustment of the X-Y Recorder. When this key is pushed, the recorder pen will be positioned at the lower-left (X and Y are zero) of the plot area.

UR ↗↑ : Provides a reference voltage (1V) from each rear-panel RECORDER OUTPUT. Used for full-scale adjustment of the X-Y Recorder. When this key is pushed, the recorder pen will be positioned at the upper-right (X and Y are maximum) of the plot area.

34 STORE DSPL A/B Key:

This key simultaneously memorizes the measured values displayed on DISPLAY A (3) and DISPLAY B (4) as reference values for deviation measurement.

35 LOG SWEEP Key and Indicator:

This key sets the log sweep mode. In the log sweep mode (when the indicator is on), the frequency is swept at 20 steps/decade. The steps are automatically selected at logarithmic regular intervals between the decade of the START frequency and the decade of the STOP frequency. STEP. FREQ. has no meaning in log sweep. This function is released by repressing the key (after pressing the BLUE key (37)).

36 SWEEP ABORT Key:


This key releases sweep frequency (bias voltage) measurement and activates a spot frequency measurement at the frequency (voltage) point where the sweep is aborted.

37 BLUE Key:

This key is pressed prior to pressing a blue label function key to interchange a normal key function with a blue label function.

This key is pressed to access and release the functions and test parameters labeled in blue on the Test PARAMETER keys (17), DATA Input keys (19), and the $\Delta/\Delta\%$ keys (7).

Figure 3-2. Front Panel Features (Sheet 10 of 10)

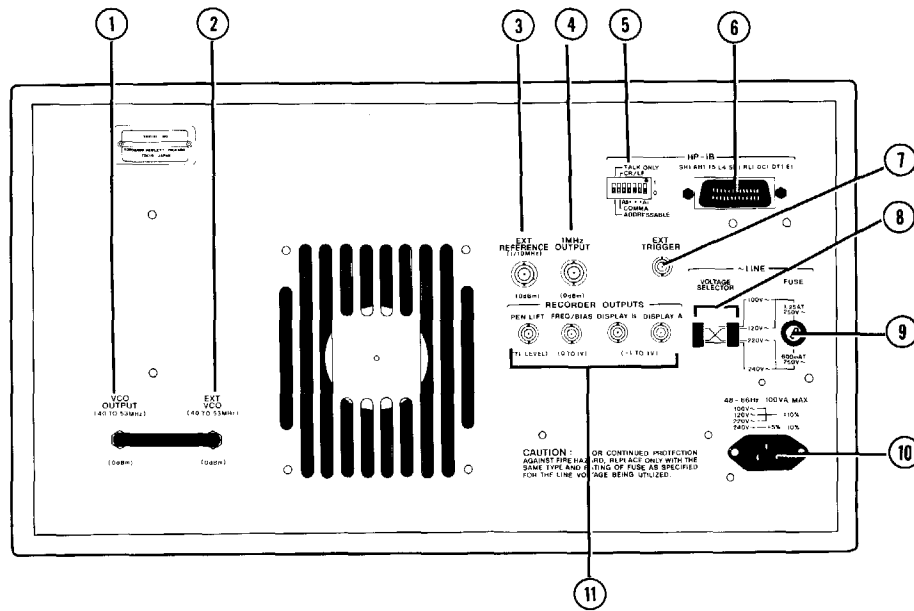

- 1 VCO OUTPUT Connector:**
Female BNC connector; outputs a 40.000005 MHz to 53MHz signal from the internal synthesizer. This connector is normally connected to the EXT VCO connector **2** with a short-connector.
- 2 EXT VCO Connector:**
Female BNC connector; receives a 40.000005 MHz to 53MHz (input level: 0 dBm ~ 3 dBm) signal to generate the measurement frequency (5 Hz to 13 MHz). This connector can be connected to an external frequency synthesizer for better accuracy, stability, and resolution; or to the instrument's internal synthesizer. Normally connected to the VCO OUTPUT connector **1** with a short-connector.
- 3 EXT REFERENCE Connector:**
Female BNC connector; receives a 1 MHz or 10 MHz reference signal from an external signal source to improve the stability of the internal synthesizer. Input impedance is approximately 50 Ω.
- 4 1 MHz OUTPUT Connector:**
Female BNC connector; outputs a 1 MHz square wave (≥ 1.6 V_{p-p}) to phase-lock external instruments. Output impedance is approximately 50 Ω.
- 5 HP-IB Control Switch:**
This switch sets the instrument's HP-IB address (0 ~ 30), data output format (A or B), and interface capability (Talk Only or Addressable). Specific information on this switch is given in paragraph 3-117.
- 6 HP-IB Connector:**
Twenty-four pin connector; connects the instrument to the HP-IB for remote operations.
- 7 EXT TRIGGER Connector:**
This connector is used to externally trigger the instrument by inputting an external trigger signal. TRIGGER key on front panel should be set to EXT. Specific information is provided in paragraph 3-22.

Figure 3-3. Rear Panel Features (Sheet 1 of 2)

<p>⑧ ~ LINE VOLTAGE SELECTOR Switch:</p> <p>These switches select the appropriate ac operating voltage. Selectable voltages are 100V/120V $\pm 10\%$ and 220V $\pm 10\%$/240V $\pm 5\%$ -10% (48 ~ 66Hz). Refer to paragraph 2-8.</p> <p>⑨ ~ LINE FUSE Holder:</p> <p>Instrument's power-line fuse is installed in this holder.</p> <p>100V/120V operation : 1.25AT, 250V (HP P/N: 2110-0305)</p> <p>220V/240V operation : 0.6AT, 250V (HP P/N: 2110-0016)</p> <p>Refer to paragraph 2-8.</p>	<p>PEN LIFT connector :</p> <p>Outputs pen up/down control signal. When the 4192A is set as follows, this connector outputs a LOW level TTL signal (pen down).</p> <p>(1) X-Y RECORDER key on the front-panel is set to ON.</p> <p>(2) START UP key or START DOWN key is pressed when X-Y RECORDER and SWEEP MAN/AUTO keys on the front-panel are set to ON.</p> <p>At other times, this connector outputs a HIGH level TTL signal (pen up).</p>
<p>⑩ ~ LINE Input Receptacle:</p> <p>AC power cord is connected to this receptacle. Refer to paragraph 2-10.</p>	<p>FREQ/BIAS connector :</p> <p>Outputs voltage proportional to the test frequency or internal dc bias voltage (from 0V at START frequency/voltage to 1V at STOP frequency/voltage). The output voltage is proportional to the logarithm of the frequency when LOG SWEEP is set to ON.</p>
<p>⑪ RECORDER OUTPUTS Connectors:</p> <p>These connectors output dc voltages proportional to the measurement display outputs and test frequency (or internal dc bias voltage), and a pen control signal for the X-Y recorder. Results of swept (frequency of bias) measurements can be plotted by connecting an X-Y recorder to these connectors.</p>	<p>DISPLAY B connector :</p> <p>Outputs voltage proportional to the value displayed on DISPLAY B. Normalized value is 1V (max.).</p> <p>DISPLAY A connector :</p> <p>Outputs voltage proportional to the value displayed on DISPLAY A. Normalized value is 1V (max.).</p> <p>Refer to paragraph 3-121 for specifics.</p>

Figure 3-3. Rear Panel Features (Sheet 2 of 2)

3-7. SELF TEST

3-8. The 4192A is equipped with an automatic self-diagnostic function that can be initiated at any time to confirm normal operation of the instrument's basic functions. The SELF TEST can be initiated from the front-panel by pressing the BLUE key and the SELF TEST key, or via HP-IB remote control (program code S1). When the SELF TEST is initiated (indicator lamp is on), the six tests listed in Table 3-1 are automatically performed and the results (pass code or one of the error codes listed in the table) are displayed on DISPLAY A. If no errors are detected, PASS is displayed on DISPLAY A and the instrument is returned to normal measurement mode (SELF TEST indicator is off). If an error is detected, the corresponding error code is displayed on DISPLAY A and the SELF TEST stops. If the instrument fails the SELF TEST, contact the nearest Hewlett-Packard Service Office (see list at back of this manual).

Note: An abbreviated SELF TEST, which includes test 1 (one second only), 2, 3, and 6 (at 100 kHz only) of the standard SELF TEST, is performed each time the instrument is turned on. During this abbreviated SELF TEST, only error codes are displayed.

3-9. Initial Control Settings

3-10. To facilitate operation, the instrument is automatically set to the following initial control settings each time it is turned on:


- Panel Controls :
- DISPLAY A |Z|
 - DISPLAY B θ (deg)
 - Test Parameter Data Display .. SPOT FREQ
 - BIAS OFF
 - ZERO OPEN OFF
 - ZERO SHORT OFF
 - AVERAGE OFF
 - HIGH SPEED OFF
 - SELF TEST OFF
 - X-Y RECORDER OFF
 - LOG SWEEP OFF
 - SWEEP OFF
 - CIRCUIT MODE AUTO ()
 - GAIN MODE dBm
 - ZY RANGE AUTO
 - TRIGGER INT
 - $\Delta/\Delta\%$ OFF

Table 3-1. 4192A SELF TEST

Test Number	Description	Display	
		Pass	Fail
1	All numerical displays and indicator lamps on the front-panel come on and remain on as long as the SELF TEST key is being pressed. Check that all displays and indicator lamps are on.	P-01 *	
2	Checks four RAM's (Random Access Memory).	P-02	E-20, E-21
3	Checks fourteen ROM's (Read Only Memory).	P-03	E-30 ~ E-43
4	Checks that the interrupt signal is present and that it is of the correct frequency.	P-04	E-50, E-51
5	Checks the integrator in the VRD (Vector Raito Detector) circuit.	P-05	E-61, E-62
6	Checks that the frequency setting of the internal synthesizer is normally done at each decade.	P-06	E-70, E-71, E-72

*P-01 indicates that test 1 has been completed. It does not mean that the instrument has passed test 1. The operator must determine whether the instrument has passed or failed this test.

Test Parameters :

SPOT FREQ	100kHz
STEP FREQ	1kHz
STOP FREQ	13MHz
START FREQ	5Hz
OSC LEVEL	1Vrms
SPOT BIAS	0V
STEP BIAS	1V
START BIAS	-35V
STOP BIAS	+35V
REF A	0
REF B	0

3-11. Displays

3-12. The 4192A has three display sections: DISPLAY A, DISPLAY B, and a Test Parameter Data Display (hereinafter called DISPLAY C). DISPLAY A and DISPLAY B are the primary displays; they are described in paragraphs 3-13 and 3-14, respectively. DISPLAY C is described in paragraph 3-15. The BIAS ON Indicator is described in paragraph 3-16.

3-13. DISPLAY A provides direct readout of the primary measurement parameter in amplitude/phase measurements and impedance measurements.

In impedance measurements, DISPLAY A displays the absolute value of the vector impedance, $|Z|$; the absolute value of the vector admittance, $|Y|$; resistance, R; conductance, G; inductance, L; or capacitance, C. In amplitude/phase measurements, DISPLAY A displays the measured value of B-A (dB), the gain or loss between CHANNEL A and CHANNEL B; A (dBm/dBV), the amplitude of the signal input to CHANNEL A; or B (dBm/dBV), the amplitude of the signal input to CHANNEL B.

All values are displayed with a maximum of 4½ digits. The actual number of display digits depends on the setting of other control functions such as OSC LEVEL, ZY RANGE, etc. Maximum display is 19999 for inductance and capacitance measurements; 12999, for all other parameters. Decimal point and the appropriate unit annunciator (e.g., pF, mH, μ S, M Ω) are also displayed. If the selected measurement cannot be made, because the value of the DUT is outside the instrument's measurement range or because the front-panel controls are incorrectly set, one of the following will be displayed.

OF1	---
OF2	E-06
UCL	E-07

Refer to Tables 3-2 and 3-3 for the meaning of each of

these annunciations. When a SHORT or OPEN ZERO offset adjustment is being made, CAL is displayed. DISPLAY A also displays the pass- and error-codes (P-01 through P-06 and E-20 through E-73) related to the instrument's SELF TEST function. Refer to Table 3-4 for the meanings of SELF TEST error-codes E-20 through E-73.

3-14. DISPLAY B provides direct readout of the secondary measurement parameter in amplitude-phase measurements and impedance measurements. This display is blank when DISPLAY A function is set to A (dBm/dBV) or B (dBm/dBV).

In impedance measurements, DISPLAY B displays the value of the impedance/admittance; phase angle, θ (degrees or radians); reactance, X; susceptance, B; quality factor, Q; dissipation factor, D; resistance, R; or conductance, G.

In amplitude/phase measurements, DISPLAY B displays either group delay or phase difference, θ (degrees or radians).

Refer to paragraph 3-13 for specifics on number of digits, maximum display, unit annunciators, etc.

If the selected measurement cannot be made, OF2 or --- is displayed. Refer to Table 3-3 for the meaning of these annunciations.

3-15. DISPLAY C displays all test parameter data - SPOT FREQ/BIAS, STEP FREQ/BIAS, START FREQ/BIAS, STOP FREQ/BIAS, OSC LEVEL, TEST LEVEL, and REF A or REF B value. Frequency is displayed with a maximum of 7½ digits; BIAS, OSC LEVEL, and TEST LEVEL are displayed with a maximum of 4 digits; and REF A and REF B values are displayed with a maximum of 4½ digits. Error-codes displayed on DISPLAY C are discussed in paragraph 3-17.

3-16. The BIAS ON Indicator comes on to warn the operator that the instrument is applying a dc bias voltage across the DUT.

3-17. Error-codes and annunciations related to operator error and out-of-range measurement are listed and described in Tables 3-2 and 3-3, respectively. Error-codes for errors detected during SELF TEST are listed and described in Table 3-4. If the instrument fails the SELF TEST, i.e., if one of the error-codes listed in Table 3-4 is displayed on DISPLAY A, contact the nearest Hewlett-Packard Sales/Service Office.

Table 3-2. Operational Error-codes

Error-code	Meaning
E-01	An attempt was made to input a test parameter value or reference value that is out-of-range.
E-02	AUTO SWEEP was attempted when the selected test parameter was REF A, REF B, OSC LEVEL, or TEST LEVEL MONITOR; or MAN SWEEP was attempted when the selected test parameter was REF A or REF B.
E-03	AUTO or MAN SWEEP was attempted when the STOP FREQ. (or BIAS) is lower than the START FREQ. (or BIAS).
E-04	MAN SWEEP was attempted when the SPOT FREQ. (or BIAS) is lower than the START FREQ. (or BIAS) or higher than the STOP FREQ. (or BIAS).
E-05	The STORE DSPL A/B key was pressed when DISPLAY A and/or DISPLAY B is set to $\Delta/\Delta\%$ measurement or is displaying OF1, OF2, UCL, or ---.
E06	REF A, REF B, Δ , or $\Delta\%$ key was pressed when no reference data for the deviation measurement is stored.
E07	ZERO OPEN or ZERO SHORT operation could not be properly performed.
E-08	SAVE 5 ~ 9 or RCL (Recall) 5 ~ 9 was attempted (only memory locations 0 ~ 4 are available).
E-09	RCL (Recall) was attempted on an empty memory.
E-10	In swept frequency measurements of Group Delay, STEP FREQ. is too low for the START FREQ./STOP FREQ. sweep range.

Table 3-3. Annunciations (Sheet 1 of 2)

DISPLAY		Meanings	
A	B	DISPLAY A	DISPLAY B
OF1	---	Measured value of Z or Y exceeds 130% of full scale of the ZY RANGE.	Measurement cannot be performed.
OF2	Significant value	Measured value exceeds 200% of full scale of display range.	Measurement is performed correctly.
Significant value	OF2	Measurement is performed correctly.	Measured value exceeds 200% of full scale of display range.
OF2	OF2	Measured value exceeds 200% of full scale of display range.	Measured value exceeds 200% of full scale of display range.
UCL ^{*1}	---	The instrument's internal measurement circuit is saturated.	Measurement cannot be performed.

Table 3-3. Annunciations (Sheet 2 of 2)

DISPLAY		Meanings	
A	B	DISPLAY A	DISPLAY B
Significant value	---	Measurement is performed correctly.	Measurement cannot be performed because: ① When function is set to θ , Q, or D, the measured value of Z or Y is less than 5% of full scale of the ZY RANGE. ② When GROUP DELAY measurement is being performed, the test frequency to be automatically selected next is outside the selectable test frequency range (5 Hz and 13 MHz).
---	---	Auto ranging of ZY RANGE is being performed.	
Significant value	Blank	Measurement is performed correctly.	DISPLAY B function is blank when DISPLAY A function is set to A (dBm/dBV) or B (dBm/dBV).
CAL	Blank	ZERO offset adjustment is being performed.	
*1. When the measuring frequency is set to 10MHz or above and ZY RANGE is held, measured values output 500ms after DISPLAY A indicates "UCL" are invalid. *2. Specific information on GROUP DELAY measurement is provided in paragraph 3-63.			

Table 3-4. SELF TEST Error-codes

Display	Meaning
E-20, E-21	One of the four RAM's (Random Access Memory) is not functioning properly.
E-30 ~ E-43	One of the fourteen ROM's (Read Only Memory) is not functioning properly.
E-50, E-51	The line frequency detection circuit is not functioning properly.
E-61, E-62	Integrator in the VRD (Vector Ratio Detector) is not functioning properly.
E-70, E-71, E-72	Internal synthesizer is not functioning properly.

3-18. Test Signal

3-19. The internal frequency synthesizer provides a sinusoidal wave test signal that has an accuracy of 55 ppm. The frequency range is from 5 Hz to 13 MHz, and signal level is 5 mVrms to 1.1Vrms. The test signal is output from the OSC OUTPUT connector (H_{CUR} of the UNKNOWN terminals) on the front-panel. Test frequency and test level range, resolution, and accuracy are given in Table 3-5.

Note: Test signal accuracy, stability, and resolution can be improved by connecting an external frequency synthesizer to the EXT VCO connector on the rear-panel. Specific information on measurements using an external synthesizer is given in paragraph 3-137.

Note: In impedance measurements, the level of the test signal across the DUT depends on the impedance of the DUT. To monitor the actual level of test signal across the DUT, press the TEST LEVEL MONITOR key. (Refer to paragraph 3-91 for specifics.)

3-20. Measurement Modes

3-21. The 4192A has three selectable measurement modes: NORMAL, HIGH SPEED, and AVERAGE.

- (1) **NORMAL Measurement Mode:**
 This mode is automatically set each time the instrument is turned on. In this mode, the integration time of the instrument's A/D converter is equal to the period of the line frequency. Line frequency ripple on the dc voltage used for integration is rejected (filtered).
- (2) **HIGH SPEED Measurement Mode:**
 This mode is set by pressing the HIGH SPEED key. Measurement speed in this mode is approximately twice that of the NORMAL mode; however, resolution is reduced and accuracy is not specified. Integration time is 2.5ms. Line frequency ripple is not rejected (filtered).
- (3) **AVERAGE Measurement Mode:**
 This mode is set by pressing the AVERAGE key. Resolution, accuracy, and repeatability in this mode are much better than in NORMAL mode or HIGH SPEED mode. The displayed measurement value is the average of seven measurements. Integration time is 10 times the period of the line frequency. Line frequency ripple is rejected (filtered).

Note: Measurement times for each mode at each DISPLAY A/B function setting are given in paragraph 3-55 for amplitude/phase measurements and in paragraph 3-89 for impedance measurements.

Table 3-5. Frequency and Output Level of Test Signal

	Setting Range	Resolution	Setting Accuracy* ¹
Measurement Frequency	5 Hz ~ 10 kHz	1 mHz	Setting Value ±50 ppm.
	10 Hz ~ 100 kHz	10 mHz	
	100 kHz ~ 1 MHz	100 mHz	
	1 MHz ~ 13 MHz	1 Hz	
OSC Output Level* ²	5 mVrms ~ 100 mVrms	1 mVrms	5 Hz ~ 1 MHz: (5 + 10/f)% + 2mV 1 MHz ~ 13 MHz: (4 + 1.5f)% + 2mV
	100 mVrms ~ 1.1 Vrms	5 mVrms	5 Hz ~ 1 MHz: (5 + 10/f)% + 10mV 1 MHz ~ 13 MHz: (4 + 1.5F)% + 10mV
* ¹ : At 23°C ± 5°C.			
* ² : UNKNOWN terminals open (impedance measurements) or terminated with 50Ω (amplitude/phase measurement), f: measurement frequency (Hz), F: measurement frequency (MHz).			

3-22. Trigger Modes

3-23. The 4192A has three selectable trigger modes: INTERNAL, EXTERNAL, and HOLD/MANUAL.

- (1) INTERNAL Trigger Mode:
 In this mode, measurement is automatically and repeatedly triggered. Trigger speed depends on the type of measurement, test frequency, and measurement mode.
- (2) EXTERNAL Trigger Mode:
 Measurement is triggered by applying a TTL level pulse to the EXT TRIGGER connector on the rear-panel. Refer to Figure 3-4 for specifics.
- (3) HOLD/MANUAL Trigger Mode:
 Measurement is triggered each time the HOLD/MANUAL key is pressed. Measurement data is held until the next time the key is pressed.

Note: Measurement can also be triggered via the HP-IB. Refer to Figure 3-38.

Note: Triggering in EXT and HOLD/MANUAL modes must be slow enough to allow the instrument to complete each measurement. If a trigger signal is received before measurement is completed, it is ignored.

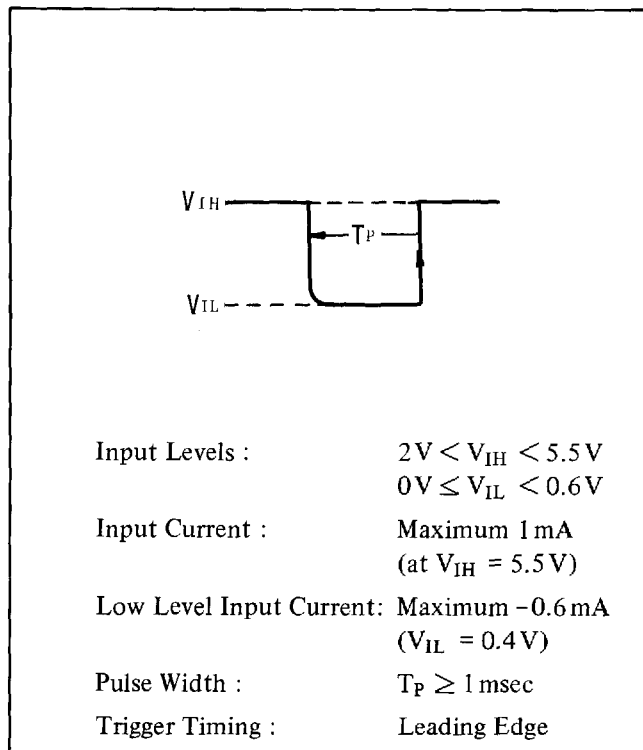


Figure 3-4. External Trigger Pulse

3-24. Setting Test Parameters

3-25. The 4192A provides eleven test parameters. They are listed, along with range and resolution, in Table 3-6. Use the following procedure to set the value of these parameters:

- (1) Press the desired PARAMETER key.
- (2) Set the desired value with the DATA keys. The set value will be displayed on DISPLAY C.
- (3) Press the appropriate ENTER key to enter this value.

Note: Parameter values can also be set via the HP-IB. Refer to paragraph 3-123 for specifics.

Note: If the parameter value is out-of-range (see Table 3-6), E-01 will be displayed on DISPLAY C for approximately one second and the previous value is retained.

3-26. Deviation Measurement

3-27. When many components of similar value are to be tested, it may be more practical to measure the difference between the value of the component and a predetermined, or ideal, reference value than measuring the DUT value itself. When the purpose of the measurement is to observe the change of a component's value versus changes in temperature, frequency, bias, etc., a direct measurement of this change (deviation) makes examination more meaningful and easier.

3-28. Deviation measurements can be made for either or both DISPLAY A and/or DISPLAY B parameter measurements. There are two methods of inputting reference values for deviation measurements: 1) input the reference value using the DATA keys, or 2) input the measured value of the reference component by pressing the STORE DSPL A/B key. Deviation is displayed as either the deviation (Δ) from the reference value or the percent deviation ($\Delta\%$).

- (1) Deviation Measurement Δ (Delta):
 The difference between the measured value of the DUT and a previously stored reference value (REF A or REF B) is displayed. The formula used to calculate the deviation is

$$A - B$$

where A is the measured value of the DUT and B is the stored reference value.

Table 3-6. Test Parameters

Parameter	Description	Range
SPOT FREQ	The spot frequency	Range : 5 Hz ~ 13 MHz Resolution : 1 mHz at 5 Hz ~ 10 kHz; 10 mHz at 10 kHz ~ 100 kHz; 100 mHz at 100 kHz ~ 1 MHz; 1 Hz at 1 MHz ~ 13 MHz
START FREQ	The start frequency for swept frequency measurements	
STOP FREQ	The stop frequency for swept frequency measurements	
STEP FREQ	The step frequency for swept frequency measurements	Range: 1 mHz ~ 13 MHz Resolution: 1 mHz at 1 mHz ~ 10 kHz; 10 mHz at 10 kHz ~ 100 kHz; 100 mHz at 100 kHz ~ 1 MHz; 1 Hz at 1 MHz ~ 13 MHz
SPOT BIAS	The spot bias voltage.	Range: -35 V ~ +35 V. Resolution: 10 mV.
START BIAS	The start voltage for swept voltage measurements	
STOP BIAS	The stop voltage for swept voltage measurements	
STEP BIAS	The step voltage for swept voltage measurements	Range: 10 mV ~ 35 V. Resolution: 10 mV.
OSC LEVEL	The level (rms) of the signal output by the internal synthesizer	Range: 5 mV ~ 1.1 V. Resolution: 1 mV at 5 mV ~ 100 mV; 5 mV at 100 mV ~ 1.1 V
REF A	The reference value for DISPLAY A deviation measurements	Range and resolution are the same as those of the DISPLAY A/B parameter.
REF B	The reference value for DISPLAY B deviation measurements	

- (2) Percent Deviation Measurement $\Delta\%$ (Delta Percent):

The difference between the measured value of the DUT and a previously stored reference value (REF A or REF B) is displayed as a percentage of the reference value. The formula used to calculate the percent deviation is

$$\frac{A - B}{B} \times 100 (\%)$$

where A is the measured value of the DUT and B is the stored reference value.

- 3-29. Use the following procedure to perform deviation measurements:

- (1) Set the front-panel controls for normal amplitude-phase or impedance measurement. (Basic procedure for amplitude-phase measurement is given in Figure 3-10, and in Figure 3-30 for impedance measurements.)
- (2) Press the BLUE key and the REF A or REF B key. At this time, the previously stored reference value or E-06 will be displayed on DISPLAY C. E-06 simply means there is no reference data for

the selected display function; ignore it and proceed to step 3.

- (3) Enter the desired reference value using the numeric DATA keys. (E-06 annunciation will disappear.) This value will be displayed on DISPLAY C.
- (4) Press the ENTER key labeled REF DATA. This stores the value displayed on DISPLAY C as the reference value.

Note: To store the measured (displayed) value of a reference sample (DUT) as reference data, use the following procedure:

- (a) *Connect the sample to the instrument and make one measurement.*
 - (b) *Press the BLUE key and the STORE DSPL A/B key. The values displayed on DISPLAY A and DISPLAY B will be stored as REF A and REF B data, respectively.*
- (5) Press the $\Delta/\Delta\%$ key on DISPLAY A and/or DISPLAY B. The value displayed on the display (A or B) is the difference (deviation) between the stored reference value and the measured value. For percent deviation measurement, press the BLUE key before pressing the $\Delta/\Delta\%$ key.

Note: Reference data stored for one measurement function cannot be used for another measurement function; that is, reference data stored for an impedance measurement cannot be used for a resistance measurement.

3-30. Continuous Memorization of Control Settings (SAVE and RCL Functions)

3-31. The 4192A is equipped with five non-volatile

storage registers. These registers are used to store five different, frequently used front-panel control settings. Stored control settings are preserved (not erased) in the registers even when the instrument is turned off.

Frequently used control settings can be saved and then recalled instead of having to reenter the measurement conditions each time. This feature improves efficiency in applications where repetitive measurements are made.

Almost all front-panel control settings and test parameter settings, including reference data and zero calibration data, can be saved. Exceptions are listed below.

HP-IB status
DISPLAY A/B measurement data
LINE OFF/ON
CABLE LENGTH
BIAS ON
SPOT BIAS

3-32. Use the following procedure to save and recall a measurement condition:

- (1) Set the front-panel controls and test parameters as desired.
- (2) Press the SAVE key and the register number (0-4). All front-panel control settings and test parameter settings are now saved, or memorized, in the specified register.
- (3) To restore the instrument to the control settings and test parameters saved in step (2), press the RCL key and the register number.

3-33. The instrument is equipped with two rechargeable batteries that provide power for the storage registers when the instrument is turned off. They are automatically recharged while the instrument is turned on. Specifications are given below.

Operating time: 7500 hours (typical) after full charge.
Recharge time: Time required to fully recharge the batteries is 200 hours.
Lifetime: 5 years (at 25°C).

3-34. AMPLITUDE/PHASE MEASUREMENT

3-35. The Model 4192A LF Impedance Analyzer can accurately measure the gain/loss, phase, group delay and level of many types of circuits. It displays all measured parameters with 4½ digit numeric displays. The built-in frequency synthesizer can be set to any test frequency between 5.000Hz and 13.000000MHz, and can be swept within that frequency range with 1mHz (maximum) resolution. Instructions for amplitude/phase measurements are given in paragraph 3-34 to 3-66.

3-36. Measurement Functions

3-37. Most amplitude-gain measurements are based on relative measurements where the signals at the input and output ports of a network are compared to determine how the network behaves as a signal processor. The 4192A simultaneously measures two independent, complementary parameters in each measurement cycle. These measurement functions are classified, for display purpose, into two groups: DISPLAY A and DISPLAY B functions, as given in Table 3-7. Measurement results can be displayed as deviation or percent deviation from stored reference values. Deviation measurements are described in paragraph 3-26.

3-38. Measurement Ranges

3-39. The 4192A can measure transmission parameters, gain/loss (B-A), level (A/B), phase (θ) and group delay, over the measurement ranges listed in Table 3-8. Measurement resolution, also listed in the table, are for NORMAL and AVERAGE measurement modes. Resolution in HIGH SPEED measurement mode is one digit lower than these values.

Table 3-8. Measurement Range for Amplitude-Phase Measurements

Measurement Function	Measurement Range	Resolution
B-A	0 dB ~ ± 20 dB	0.001 dB
	± (20 dB ~ 100 dB)	0.01 dB
A/B (dBm)	+ 13.8 dBm ~ - 20 dBm	0.001 dBm
	- 20 dBm ~ - 87 dBm	0.01 dBm
A/B (dBV)	+ 0.8 dBV ~ - 20 dBV	0.001 dBV
	- 20 dBV ~ - 100 dBV	0.01 dBV
GROUP DELAY*1	0.0001 μs ~ 1.9999 μs	100ps
	0.001 μs ~ 19.999 μs	1ns
	0.01 μs ~ 199.99 μs	10ns
	0.0001 ms ~ 1.9999 ms	100ns
	0.001 ms ~ 19.999 ms	1 μs
	0.01 ms ~ 199.99 ms	10 μs
	0.0001 s ~ 1.9999 s	100 μs
0.001 s ~ 19.999 s	1ms	
θ (deg)	0° ~ ± 180°	0.01°
θ (rad)	- π ~ - 1.000	0.001
	- 1.0000 ~ + 1.0000	0.0001
	+ 1.000 ~ + π	0.001

*1: Measurement range at GROUP DELAY is determined automatically by ΔF (STEP FREQ × 2) and Δθ. Specific information on GROUP DELAY measurements is provided in paragraphs 3-63 to 3-66.

Table 3-7. DISPLAY A/B Functions for Amplitude/Phase Measurements

DISPLAY A Function		DISPLAY B Function	
B - A (dB)	Relative Amplitude of the Reference Input and the Test Input	GROUP DELAY	Group Delay in seconds
		θ (deg)	Phase Difference in degrees
		θ (rad)	Phase Difference in radians
A (dBm/dBV)	Absolute Amplitude of the Reference Input		
B (dBm/dBV)	Absolute Amplitude of the Test Input		

3-40. OSC OUTPUT

3-41. In amplitude/phase measurements, the output signal from the OSC OUTPUT terminal is applied to a power splitter (HP Part No.: 04192-61001, furnished with the 4192A) to produce two output signals that are in phase and of equal amplitude. One of these signals is applied to CHANNEL A and is used as the reference input; the other signal is applied to input port of the network under test. The output port of the network is then connected to CHANNEL B. Figure 3-5 shows the equivalent circuit for the OSC OUTPUT. The circuit consists of a low (zero) impedance source in series with a 50Ω resistor which determines the output impedance. The output signal level is variable from 5mV to 1.1Vrms when terminated with 50Ω . Specific information on the internal synthesizer is provided in paragraph 3-18.

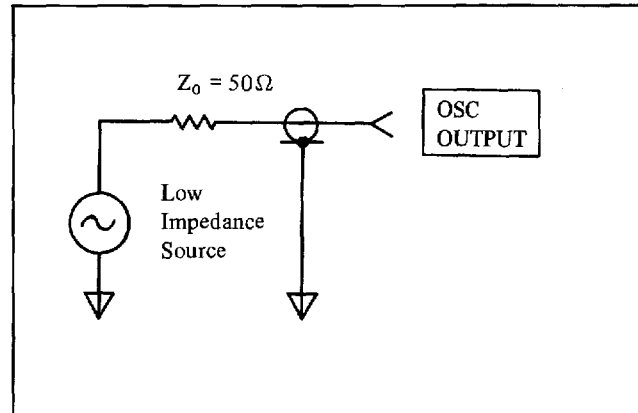


Figure 3-5. Equivalent Output Circuit

3-42. CHANNEL A/B

3-43. For basic amplitude/phase measurements, the reference input is obtained by connecting one of the output signals from the power splitter connected to the OSC OUTPUT. The test input is obtained by inserting the network to be tested between the power splitter and CHANNEL B. Since the signals divided by the power splitter are identical, the signal applied to CHANNEL A represents the input to the network while the signal applied to CHANNEL B is the output of the network. By comparing these two signals, the 4192A measures the gain or loss, phase shift and group delay introduced by the network. When the frequency is swept over the band of interest with amplitude, phase and group delay, measurement data represent the amplitude and phase response of the transfer function in the frequency domain.

3-44. For production testing, it is often necessary to compare a newly manufactured network to a production standard. The 4192A, being a dual channel instrument, lends itself well to this application. When comparing two networks, the standard network is connected between the power splitter and CHANNEL A to obtain the reference. The network to be tested is then connected between the power splitter and CHANNEL B. In this case, the 4192A compares the output signals of the two networks and any differences between the networks are reflected as deviation from 0dB (B-A amplitude), 0 degrees (phase) or 0s (group delay).

3-45. Figure 3-6 shows the equivalent circuit for the CHANNEL A/B. The resistor, R_{in} , represents the $1M\Omega$ input resistance; the capacitor, C_s , represents the $25pF \pm 5pF$ shunt capacitance. This high input impedance has a minimum loading effect on the input signal and allows the 4192A to be used for characterizing networks having output impedances other than 50Ω . Figure 3-7 shows the input impedance, Z_t , as a function of frequency. At low frequencies, the reactance of C_s is very high, making Z_t nearly equal to R_{in} . As frequency increases, the decreasing reactance of C_s becomes more and more significant, causing Z_t to decrease. At high frequencies, R_{in} is no longer significant and Z_t is slightly less than the reactance of C_s (approximately 500Ω at 13MHz).

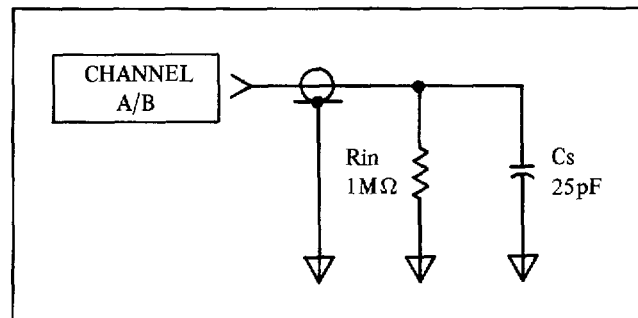


Figure 3-6. Equivalent Input-Circuit

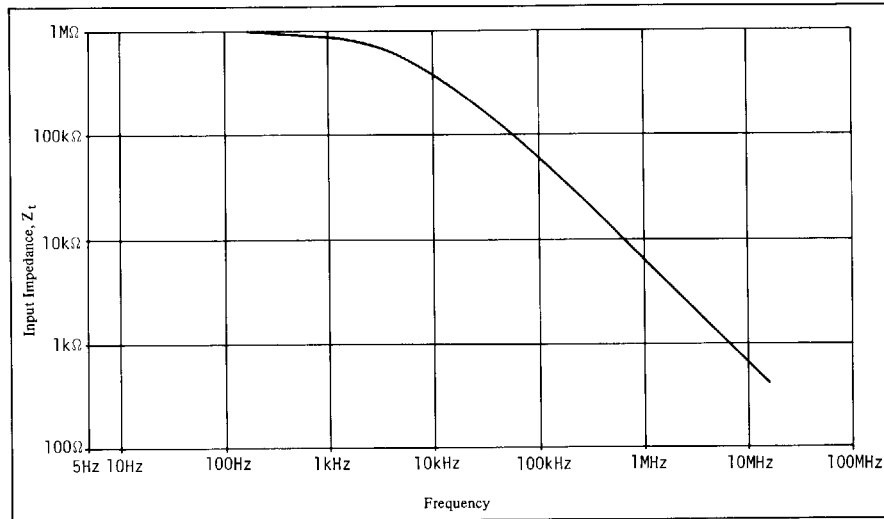


Figure 3-7. Z_t vs Frequency

3-46. Input Configurations

3-47. Figure 3-8 illustrates and describes the basic input configurations for various types of measurements. Connections of these input configurations should be made using double-shielded cables with BNC connectors as listed in Table 3-9. When making input connections, observe the following guidelines:

- (1) Keep input cables as short as possible.
- (2) Make the total cable length in each channel equal. This is particularly important when measuring phase (or group delay) at high frequencies.
- (3) When impedance terminations are required, use shielded terminations equipped with suitable RF connectors as listed in Table 3-10. Place terminations at the end of the transmission line.

Note: When making a relative gain/loss (B-A) measurement with either the 4192A or a Network Analyzer using the input configurations shown in Figure 3-8, the measurement results are the same but those of an absolute amplitude (A/B) measurement may differ. This is because the 4192A uses a passive (2-resistor) power splitter and the Network Analyzer uses an active power splitter.

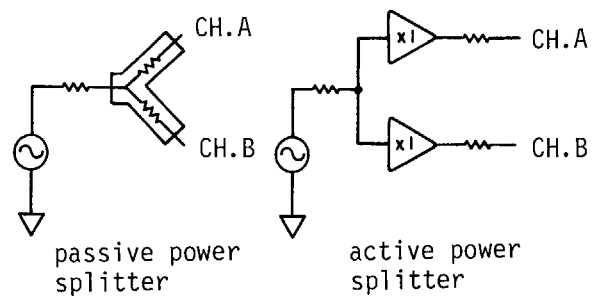


Table 3-9. BNC Cables

Model No.	Cable
11170A	30cm BNC (male) – BNC (male) Double – Shield Cable (two 11170A's are furnished with the 4192A)
11170B	60cm BNC (male) – BNC (male) Double – Shield Cable (two 11170B's are furnished with the 16097A Accessory Kit)
11170C	120cm BNC (male) – BNC (male) Double – Shield Cable (two 11170C's are furnished with the 4192A)

Table 3-10. Impedance Terminations

Model No.	Termination
11048C	50Ω Feedthrough (two 11048C's are furnished with the 4192A)
11094B	75Ω Feedthrough (two 11094B's are furnished with the 11097A)
11095A	600Ω Feedthrough (two 16097A's are furnished with the 16-97A)

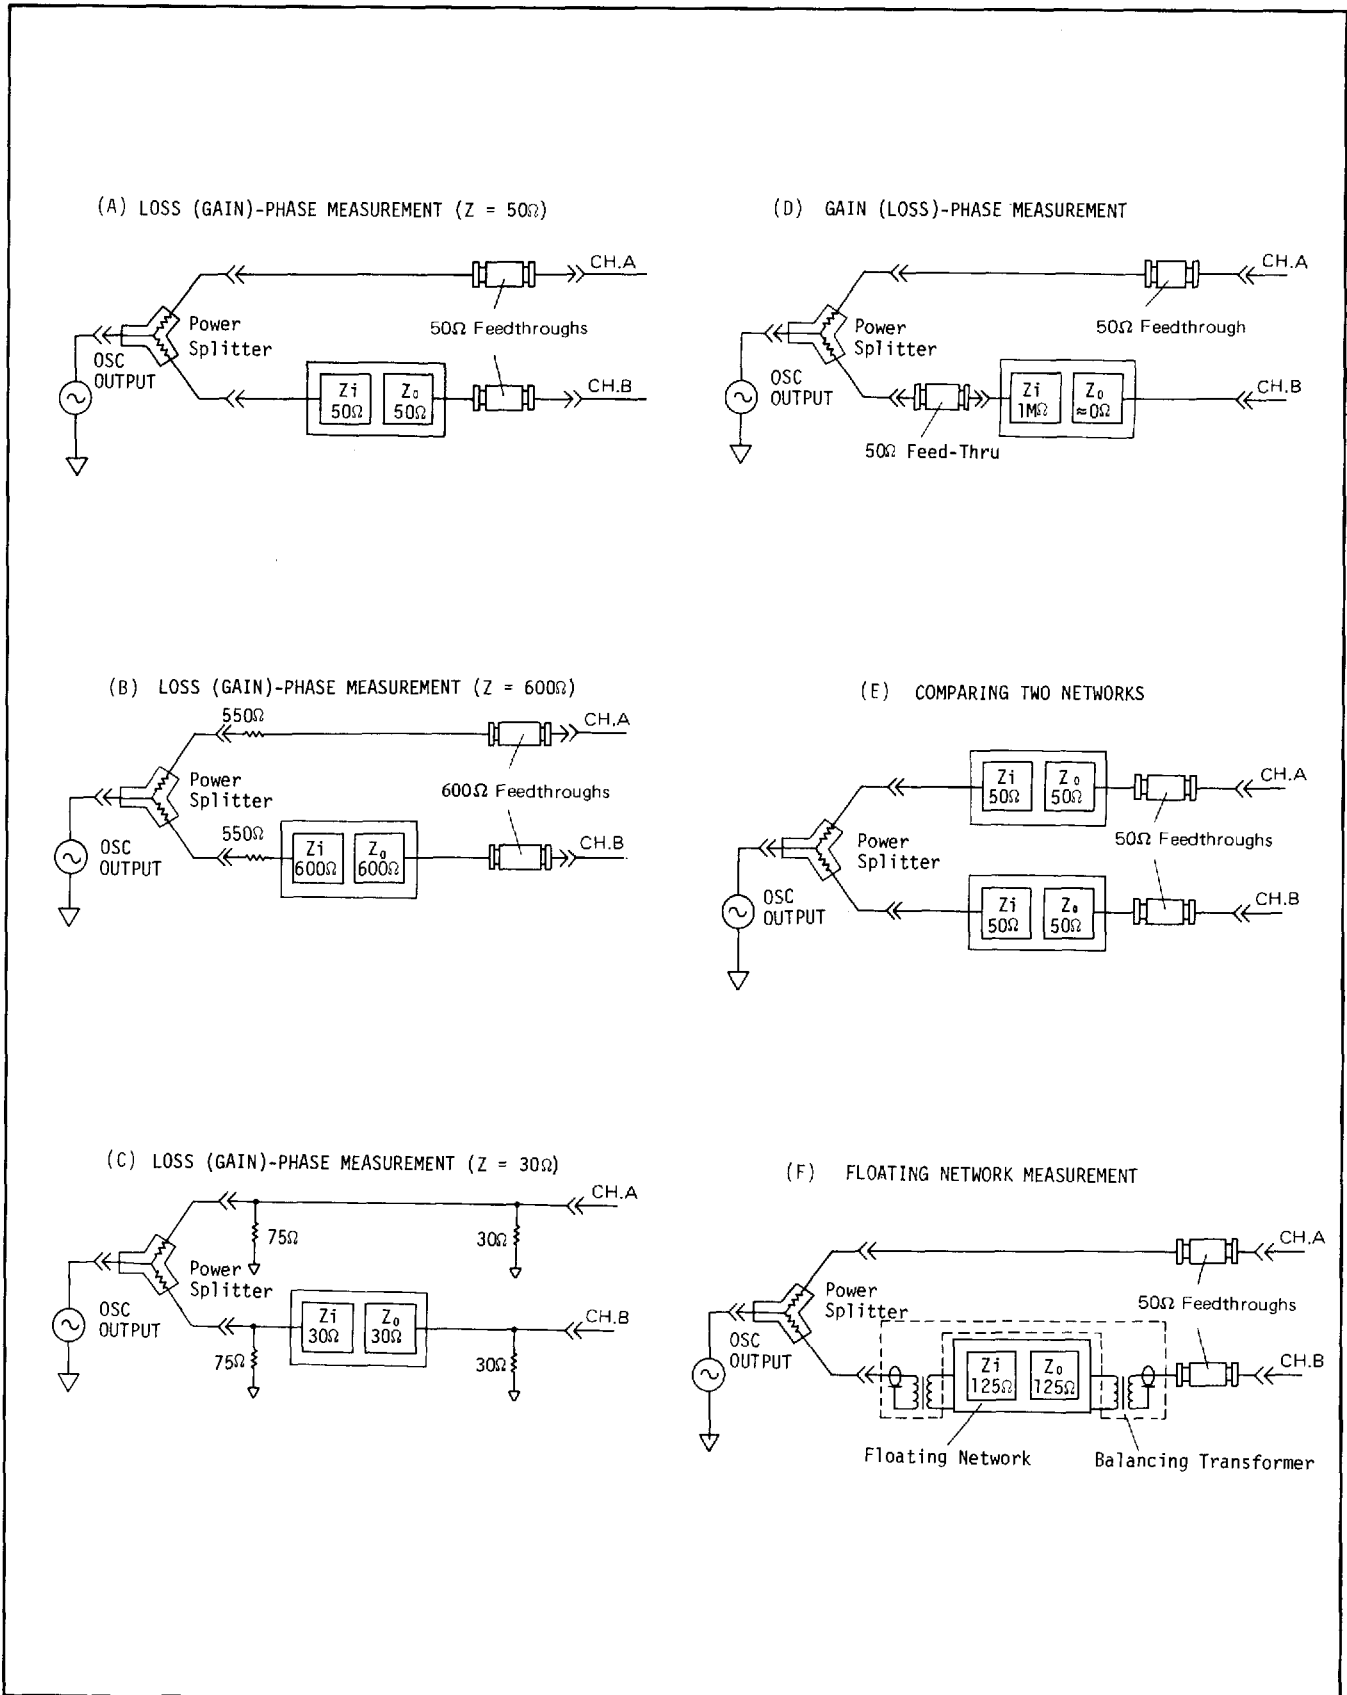


Figure 3-8. Input Configurations

3-48. Impedance Matching

3-49. In most measurement applications the network under test must be driven and terminated in its characteristic impedance. If the characteristic impedance of the network matches the 50Ω output impedance of the 4192A OSC OUTPUT, the network can be connected directly to the OSC OUTPUT through the power splitter as shown in Figure 3-8 (A). In this case, both the reference input and test input should be terminated with a 50Ω Feedthrough and connected to CHANNEL A and CHANNEL B, respectively.

3-50. If the characteristic impedance of the network is greater than 50Ω, a compensating resistor can be added in series with the OSC OUTPUT between the power splitter and the network to obtain the required output impedance. For example, if the input impedance of the network is 600Ω, a 550Ω resistor can be added in series with the 50Ω output to obtain the required 600Ω as shown in Figure 3-8 (B). Note that the reference input shown in Figure 3-8 (B) also has a compensating resistor to maintain identical impedances in both channels. In this case, both the reference input and test input should be terminated with a 600Ω Feedthrough and connected to CHANNEL A and CHANNEL B respectively.

3-51. If the characteristic impedance of the network is lower than 50Ω, connect a shunting resistor between the power splitter and network to be tested, as across the OSC OUTPUT, to obtain the required output impedance. Otherwise, a shunt resistance of the same value can be connected to CHANNEL A to obtain the same output impedance. The value of shunt resistance is calculated from the following formula:

$$R_s = \frac{50 \times Z}{50 - Z} (\Omega)$$

where : R_s = shunt resistance
 Z = required output impedance

For example, if the input impedance of the network is 30Ω, a 75Ω shunt resistor can be added in parallel with a 50Ω output to obtain 30Ω as shown in Figure 3-8 (C). Note that the reference input shown in Figure 3-8 (C) also has a shunting resistor to maintain identical impedances in both channels. In this case, both the reference input and test input should be terminated with the 30Ω shunt resistor and connected to CHANNEL A and CHANNEL B, respectively. When driving an impedance lower than 50Ω, a certain amount of insertion loss will be encountered. The amount of loss depends on the type of impedance matching network used and on the various impedance ratios. Whenever a loss is encountered, an equal loss should be introduced in CHANNEL A so that the reference input accurately represents the input of the network. This can be accomplished by placing identical shunt resistances and identical terminations in both channels.

3-52. When the network to be tested has a high input impedance (1MHz) and low output impedance ($\approx 0\Omega$), each channel should be terminated with a 50Ω Feedthrough and then the network can be connected to CHANNEL B as shown in Figure 3-8 (D).

3-53. Deviation measurement from reference network can be performed by inserting the standard network between the power splitter and CHANNEL B. Figure 3-8 (E) shows an input configuration of networks which have 50Ω characteristic impedance. In this case, both the

Table 3-11. Balancing Transformers

Model No.	Impedance		Connectors		
	Unbalanced	Balanced	Unbalanced	Balanced	
11473A	50Ω or 75Ω	600Ω	BNC	WECO 310	
11473B				Simence 9REL STP-6AC	
11474A		135Ω		WECO 241	
11475A		150Ω		Simence 9REL STP-6AC	
11476A		124Ω			WECO 408A

reference input and test input should be terminated by 50Ω Feedthroughs and connected to CHANNEL A and CHANNEL B, respectively.

input and test input should be terminated by 50Ω Feedthroughs and connected to CHANNEL A and CHANNEL B, respectively.

3-54. Floating networks can be measured by floating from the measuring circuit using one of the balancing transformers listed in Table 3-11. Figure 3-8 (F) shows the input configuration of a network which has 125Ω characteristic impedance. In this case, both the reference

3-55. Measurement Time

3-56. Table 3-12 shows the measurement times of the 4192A amplitude/phase measurements.

Table 3-12. Measurement Time for Amplitude/Phase Measurements

Measurement Function	Measurement Mode	Measurement Frequency (Hz)			
		5 ~ 15	15 ~ 150	150 ~ 400	400 ~ 13M
(B-A) - θ	HIGH SPEED	$\frac{5000}{f} + 100.5 \sim \frac{5000}{f} + 114.5$			113 ~ 127
	NORMAL	$\frac{5000}{f} + 102 \sim \frac{5000}{f} + 116$	$\frac{15000}{f} + 102 \sim \frac{15000}{f} + 116$	202 ~ 216	
	AVERAGE	$\frac{15000}{f} + 102 \sim \frac{15000}{f} + 116$	1102 ~ 1116		
(B-A) - GROUP DELAY*1	HIGH SPEED	$\frac{5000}{f} + 412.5$			425
	NORMAL	$\frac{5000}{f} + 592$	$\frac{15000}{f} + 592$	692	
	AVERAGE	$\frac{15000}{f} + 2399$	3399		
A/B (dBm)	HIGH SPEED	$\frac{5000}{f} + 77.5$			90
	NORMAL	$\frac{5000}{f} + 79$	$\frac{15000}{f} + 79$	179	
	AVERAGE	$\frac{15000}{f} + 80$	1080		
A/B (dBV)	HIGH SPEED	$\frac{5000}{f} + 75.5$			88
	NORMAL	$\frac{5000}{f} + 77$	$\frac{15000}{f} + 77$	177	
	AVERAGE	$\frac{15000}{f} + 78$	1078		
(B - A)*2	HIGH SPEED	$\frac{5000}{f} + 90.5$			103
	NORMAL	$\frac{5000}{f} + 92$	$\frac{15000}{f} + 92$	192	
	AVERAGE	$\frac{15000}{f} + 92$	1092		

Measurement times are typical values in ms, f: measuring frequency (Hz).

*1: At spot frequency measurement (refer to paragraph 3-63).

*2: Measurement time for B - A measurements can be shortened by changing the setting of an internal control switch (refer to paragraph 3-139).

3-57. Test Fixture Characteristics

3-58. Compensation for the error-causing parasitic elements of the test fixtures used in amplitude/phase measurements is described in Figure 3-9. Additional error introduced into amplitude/phase measurements by the 16096A test fixture after compensation is as follows:


- B - A error : ± 0.1 dB
- Phase error : $\pm 0.1^\circ$
- A, B error : $\pm (0.1 + 0.06F^2)$ dB

where F is the Frequency of the test signal in MHz.

Input impedance of CHANNEL A and CHANNEL B is $1\text{M}\Omega$, shunted by 30pF .

(1) Cable compensation for the 16096A Test Fixture

a. Connect the 16096A Test Fixture to the UNKNOWN terminals of the 4192A as shown below:

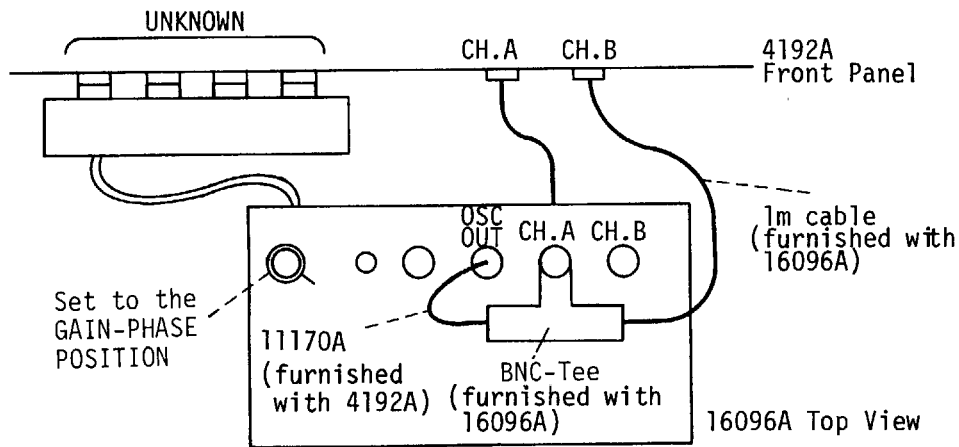


b. Set the 4292A's controls as follows:

DISPLAY A Function	B - A (dB)
DISPLAY B Function	θ (deg)
AVERAGE	OFF
HIGH SPEED	OFF

Figure 3-9. Cable Compensation (Sheet 1 of 4)

SELF TEST	OFF
SWEEP	MANUAL
TRIGGER	INT
$\Delta/\Delta\%$	OFF
SPOT FREQ	1 kHz
OSC LEVEL	0.6 V


- c. Set the selector switch on the 16096A to the GAIN-PHASE position.
- d. The value displayed on DISPLAY A should be 20dBV \pm 0.02 dBV.
- e. Set the SPOT FREQ to 1 MHz.
- f. Adjust CHANNEL A CABLE COMP on the 16096A until the value displayed on DISPLAY A is 20dBV \pm 0.1 dBV.
- g. Reconnect the 16096A as shown below:

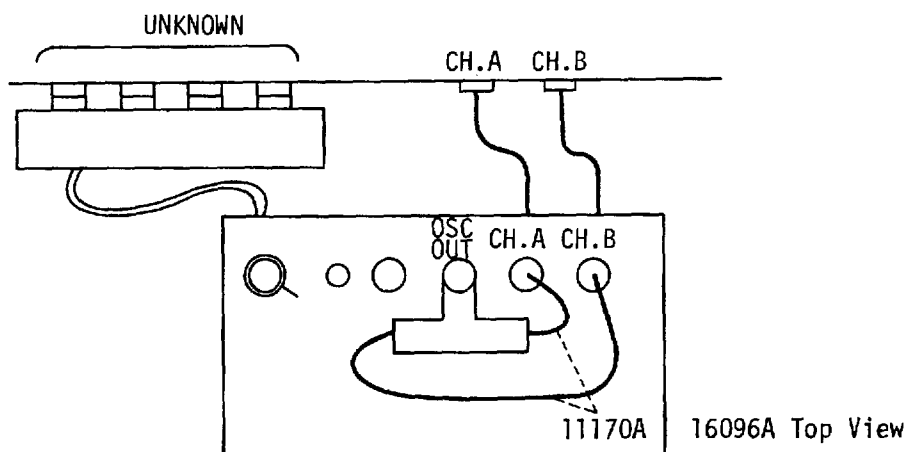

- h. Set the SPOT FREQ to 1 kHz.
- i. The value displayed on DISPLAY A should be 0dBV \pm 0.04 dBV.
- j. Set the SPOT FREQ to 1 MHz.
- k. Adjust CHANNEL B CABLE COMP on the 16096A until the value displayed on DISPLAY A is 0dBV \pm 0.1 dBV.
- l. Set the SPOT FREQ to 15 kHz.
- m. The values displayed on DISPLAY A and DISPLAY B should be 0dBV \pm 0.1 dBV and 0° \pm 0.5°, respectively.

Figure 3-9. Cable Compensation (Sheet 2 of 4)

- (2) Compensation procedure for the 10013A 10 : 1 Scope Probe
- a. Connect the 11048C 50Ω Feedthrough termination to the OSC OUTPUT terminal of the 4192A.
 - b. Connect the two 10013A scope probes to CHANNEL A and B and to the 50Ω feedthrough as shown in below.

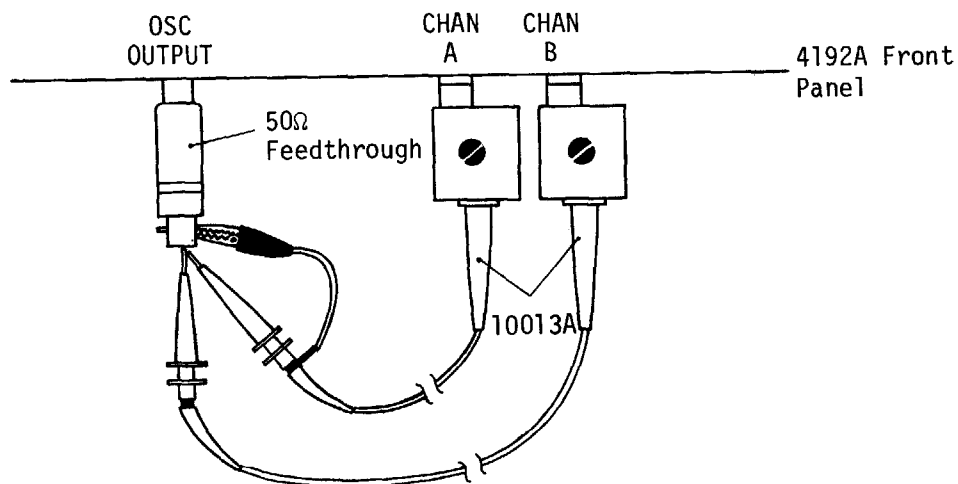

- c. Set the 4192A's controls as follows:

DISPLAY A Function	A (dBm/dBV)
AVERAGE	OFF
HIGH SPEED	OFF
SELF TEST	OFF
SWEEP	MANUAL
GAIN MODE	dBV
TRIGGER	INT
$\Delta/\Delta\%$	OFF
SPOT FREQ	1 kHz
OSC LEVEL	1 V

- d. Press the BLUE key and the STORE DSPL A/B key.
- e. Press DISPLAY A's $\Delta/\Delta\%$ key.
- f. Set the SPOT FREQ to 1 MHz.
- g. Adjust the cable compensation of the scope probe connected to CHANNEL A until the deviation, displayed on DISPLAY A, is 0.00 dBV.

Figure 3-9. Cable Compensation (Sheet 3 of 4)

h. Repeat steps c through g until the amplitude difference between the two measurement values is less than or equal to 0.01 dB.

i. Set the 4192A's controls as follows:

- DISPLAY A Function B - A (dB)
- DISPLAY B Function θ (deg)
- SPOT FREQ 1 kHz
- $\Delta/\Delta\%$ OFF

j. Adjust the cable compensation of the scope probe connected to CHANNEL B until the phase, displayed on DISPLAY B, is $0^\circ \pm 0.1^\circ$.

k. Set the 4192A's controls as follows:

- DISPLAY A Function B (dBm/dBV)
- SPOT FREQ 1 MHz

l. The value displayed on DISPLAY A should be $-20\text{ dBV} \pm 0.2\text{ dBV}$.

Note: With these adjustments, tracking between CHANNEL A/B will be as follows for the frequency range of 5Hz to 2MHz.

- Gain tracking : $\pm 0.2\text{ dB}$*
- Phase tracking : $\pm 0.2^\circ$*

Figure 3-9. Cable Compensation (Sheet 4 of 4)

3-59. Amplitude/Phase Measurement Operating Instructions

3-60. Basic operating instructions for amplitude/phase measurements are given in Figure 3-10.

(1) Turn On

- a. Press the LINE ON/OFF key to turn the 4192A on.
- b. Following turn on, the instrument will perform the following operations in the order listed.
 - ① Initial operational check is performed (refer to paragraph 3-7).
 - ② HP-IB address, set by the HP-IB control switch on rear panel (refer to paragraph 3-117), is displayed on DISPLAY A (e.g. H-17).
 - ③ Initial control setting is performed (refer to paragraph 3-9).
- c. Confirm that 4192A trigger lamp begins to flash.
- d. Press the BLUE key and then the SELF TEST key to check the basic operation of the instrument. Refer to paragraph 3-7 for details on the SELF TEST.

Note: The 4192A requires a one-hour warm up period to satisfy all specifications listed in Table 1-1.

(2) Test Fixture Connection

Connect the desired test fixture. Refer to paragraphs 3-46 and 3-48 for Input Configuration and Impedance Matching, respectively.

Note: When the 16096A Test Fixture or 10013A 10 : 1 Scope Probe is used, error compensation, described in Figure 3-9, must be performed.

(3) Setting Measurement Condition


- a. Select the desired DISPLAY A parameter by pressing the \uparrow or \downarrow (up-down) key. The indicator lamp adjacent to the selected parameter will come on (refer to paragraph 3-38).
- b. If necessary, select the desired DISPLAY B parameter (compatible with the DISPLAY A parameter selected in step a by pressing the \downarrow key (refer to paragraph 3-38).
- c. When DISPLAY A function is set to A (dBm/dBV) or B (dBm/dBV), select the desired GAIN MODE: dBm or dBV.

Note: GAIN MODE, dBm or dBV, is specified from the following equations:

$$\begin{aligned} \text{dBm} &= 20 \log_{10} V + 13.01 \\ \text{dBV} &= 20 \log_{10} V \end{aligned}$$

The relationship between input voltage (V_{rms}) and dBm/dBV is shown in the graph below.

Figure 3-10. Operating Instructions for Amplitude – Phase Measurements (Sheet 1 of 2)

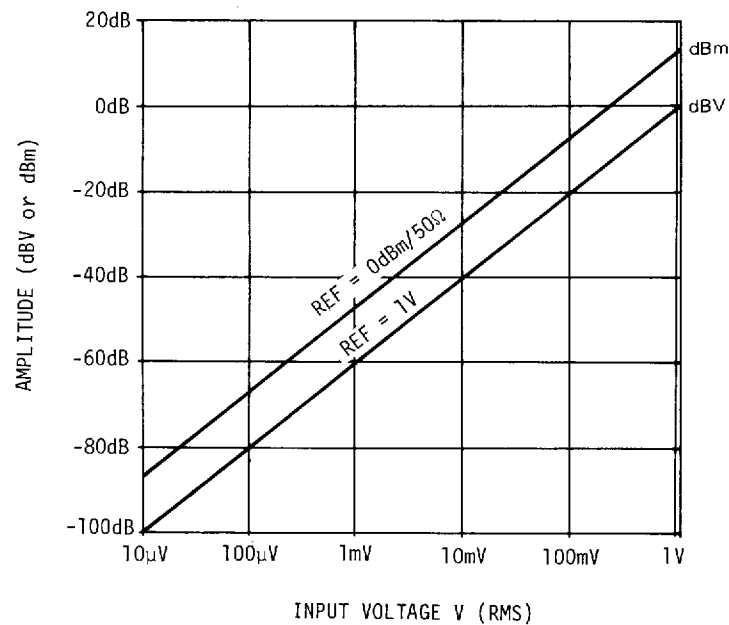

d. Press SPOT FREQ key.

Set the desired spot frequency (initial setting value is 100kHz) with the DATA input keys (refer to paragraph 3-29) and press the appropriate ENTER key.

(Example) Spot frequency = 7.5 MHz

Key strokes : $\overset{\text{SPOT}}{\text{FREQ/BIAS}}$ $\overset{\text{MHz}}{\text{V}}$

The spot frequency setting, 7500.000kHz, is displayed on DISPLAY C (Test Parameter Data Display).

e. Press the OSC LEVEL key.

Set the desired measuring signal level (initial setting value is 1V) with the DATA input keys (refer to paragraph 3-24) and press the appropriate ENTER key.

(Example) OSC level = 750mV

Key strokes : $\overset{\text{OSC}}{\text{LEVEL}}$ $\overset{\text{kHz}}{\text{mV}}$

The OSC level setting, 0.750V, is displayed on DISPLAY C.

(4) Connecting a Network

a. Connect the network to be tested between CHANNEL B and the power splitter with the test fixture.


Note: When comparing two networks, the reference network should be connected between the power splitter and CHANNEL A.

b. The 4192A will automatically display the measured values of the network to be tested in accordance with the measurement conditions.

Figure 3-10. Operating Instructions for Amplitude – Phase Measurements (Sheet 2 of 2)

CAUTION

When making amplitude/phase measurements on an active circuit (e.g., amplifier, active filter, etc.), DO NOT allow a dc bias voltage exceeding $\pm 10V$ to be applied to the OSC OUTPUT terminal. To do so may damage the instrument. When the dc bias voltage of the circuit under test is higher than $\pm 10V$, but not more than $\pm 35V$, connect a $2.2\mu F$ (or less) capacitor in series with the OSC OUTPUT terminal to block the dc bias voltage. This blocking capacitor can be connected to the SHORT/EXTERNAL CAP terminal of the 16096A Test Fixture instead of the short-connector. When the blocking capacitor is used, however, the output impedance of the OSC OUTPUT is increased at low test frequencies, as shown graphically below, and the oscillator level is reduced. If a suitable capacitor is not available from conventional sources, order HP Part No.: 0160-0128; $2.2\mu F$, 50V.

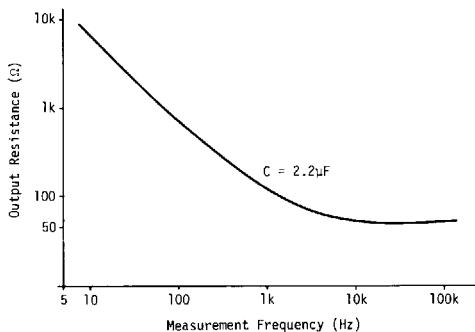

NEVER apply a dc voltage exceeding $\pm 35V$ to the OSC OUTPUT terminal, even if the blocking capacitor is used.

Figure 3-10. Operating Instructions for Amplitude – Phase Measurement (Sheet 3 of 3)

3-61. Swept Frequency Measurements

3-62. Basic operating instructions for swept-frequency amplitude/phase measurements are given in Figure 3-11.

Note: Before proceeding with the procedure given below set the 4192A's controls as necessary for an amplitude/phase measurement. Refer to Figure 3-10.

(1) Setting Sweep Parameters

- a. Press the START FREQ key. Set the start (lower limit) frequency (initial setting is 5Hz) of the desired sweep frequency range with the DATA input keys (refer to paragraph 3-24) and press the appropriate ENTER key.

(Example) Start frequency = 10kHz


Key strokes :

The start frequency setting, 10.00000kHz, is displayed on DISPLAY C (Test Parameter Data Display).

Figure 3-11. Operating Instructions for Swept – Frequency Amplitude – Phase Measurements (Sheet 1 of 4)

- b. Press the STOP FREQ key. Set the stop (upper limit) frequency (initial setting is 13MHz) of the desired sweep frequency range with the DATA input keys (refer to paragraph 3-24) and press the appropriate ENTER key.

(Example) Stop frequency = 1MHz

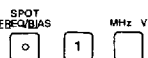
Key strokes : 

The stop frequency setting, 1000.000 kHz, is displayed on DISPLAY C.

Note: The stop frequency should be set to a value higher than the start frequency. If not, error-code E-03 will be displayed on DISPLAY C when swept measurement is attempted and measurement will be not performed.

- c. Press the STEP FREQ key. Set the desired step frequency (initial setting is 1 kHz) with the DATA input keys (refer to paragraph 3-24) and press the appropriate ENTER key.

(Example) Step frequency = 1 kHz

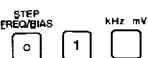Key strokes : 

The step frequency setting, 1.000000 kHz, is displayed on DISPLAY C.

Note: In LOG SWEEP measurement applications, STEP FREQ. has no meaning. To set the instrument to logarithmic sweep mode, press the BLUE key and the LOG SWEEP key; the indicator lamp will come on. In this mode, automatic or manual sweeps are made at twenty frequency steps per decade. Each step is calculated from the following formula:

$$F \times 10^{0.05N}$$

where F is the start frequency (5Hz, 10Hz, 100Hz, 1 kHz, 10 kHz, 100 kHz, 1MHz, or 10MHz) and N is an integer that represents the step number. For example, if the start frequency is 100 kHz and the stop frequency is 1MHz, the sweep will be as follows:

1	112.2018kHz	6	199.5262kHz	11	354.8133kHz	16	630.9573 kHz
2	125.8925kHz	7	223.8721 kHz	12	398.1071 kHz	17	707.9457 kHz
3	141.2537kHz	8	251.1886kHz	13	446.6835 kHz	18	794.3282 kHz
4	158.4893kHz	9	281.8382kHz	14	501.1872 kHz	19	891.2509 kHz
5	177.8279 kHz	10	316.2277 kHz	15	562.3413 kHz	20	1000.000 kHz

The start and stop frequencies, which determine the sweep range, are limited to decade values (10, 100, 1k, 10k, 100k, 1M, 10M). If, for example, the start frequency is set to 50 kHz and the stop frequency is set to 800 kHz, the instrument automatically sets the sweep range as 10 kHz to 1MHz. There are, however, two exceptions: (1) when the start frequency is set to a value below 10Hz and (2) when the stop frequency is set to a value above 10MHz. In such cases, the instrument automatically assumes a start frequency of 5Hz and a stop frequency of 13MHz.

Figure 3-11. Operating Instructions for Swept – Frequency Amplitude – Phase Measurements (Sheet 2 of 4)

(2) Manual Sweep



In manual sweeps, the sweep begins at the spot frequency, and the sweep range is determined by the start and stop frequencies.

- a. Set the desired spot frequency (initial setting is 100kHz) with the DATA input keys (refer to paragraph 3-24) and press the appropriate ENTER key.

(Example) Spot frequency = 10kHz





Key strokes :    

The spot frequency, 10.00000kHz, will be displayed on DISPLAY C;

- b. Press the STEP UP  key or STEP DOWN  key to shift the frequency one step (determined by the step frequency setting) in the indicated direction.



Notes: 1. In logarithmic sweep mode, the measurement frequency is automatically shifted to the nearest frequency that satisfies the equation $F \times 10^{0.05N} = F_m$; where F is the start frequency, F_m is the measurement frequency, and N is an integer that represents the step number.

2. If the spot frequency is set to a value that is greater than the stop frequency or less than the start frequency, error-code E-04 will be displayed on DISPLAY C and the measurement will not be performed.



- c. Pressing and holding the STEP UP () key or STEP DOWN () key continuously advances swept frequency measurement.
- d. When X10 STEP key is pressed simultaneously with the STEP UP () or STEP DOWN () key, the step frequency increases by a factor of ten. (This is for linear sweeps only.)



(3) Auto Sweep

- a. Press MAN/AUTO key to set to auto sweep mode (the indicator lamp comes on.)

- b. ① Pressing the START UP () key starts the frequency sweep from the programmed start frequency. The frequency sweep ends at the stop frequency.
- ② Pressing the START DOWN () key starts the frequency sweep from the stop frequency. The frequency sweep ends at the start frequency.

Note: Swept test frequency is displayed on DISPLAY C.

- c. To temporarily stop a swept frequency measurement, press the PAUSE key. Start frequency, stop frequency, step frequency, sweep direction, and sweep mode (linear or logarithmic, auto or manual) can be changed when the PAUSE function is set. To restart the sweep, press the START UP () key or START DOWN () key.
- d. Auto sweep measurement mode is automatically released when the swept measurement ends (reaches the stop frequency or start frequency). To stop the sweep before the measurement is completed, press BLUE key and then press the SWEEP ABORT key.

Key strokes :  

To return to normal spot frequency measurement, press the SWEEP AUTO key (indicator lamp goes off).

Figure 3-11. Operating Instructions for Swept – Frequency Amplitude – Phase Measurements (Sheet 3 of 4)

Note : When a swept frequency measurement is made, if the sweep comes to a frequency band which has lower frequency resolution than the STEP FREQ., this STEP FREQ. automatically changes to the next higher resolution frequency, and the sweep continues. In special cases for group delay measurement, E-10 appears on DISPLAY C and the sweep stops.

Figure 3-11. Operating Instructions for Swept – Frequency Amplitude – Phase Measurements (Sheet 3 of 4)

3-63. Group Delay Measurement

3-64. The 4192A can measure group delay at a spot frequency or swept frequency. Figure 3-12 shows a group delay measurement at a spot frequency.

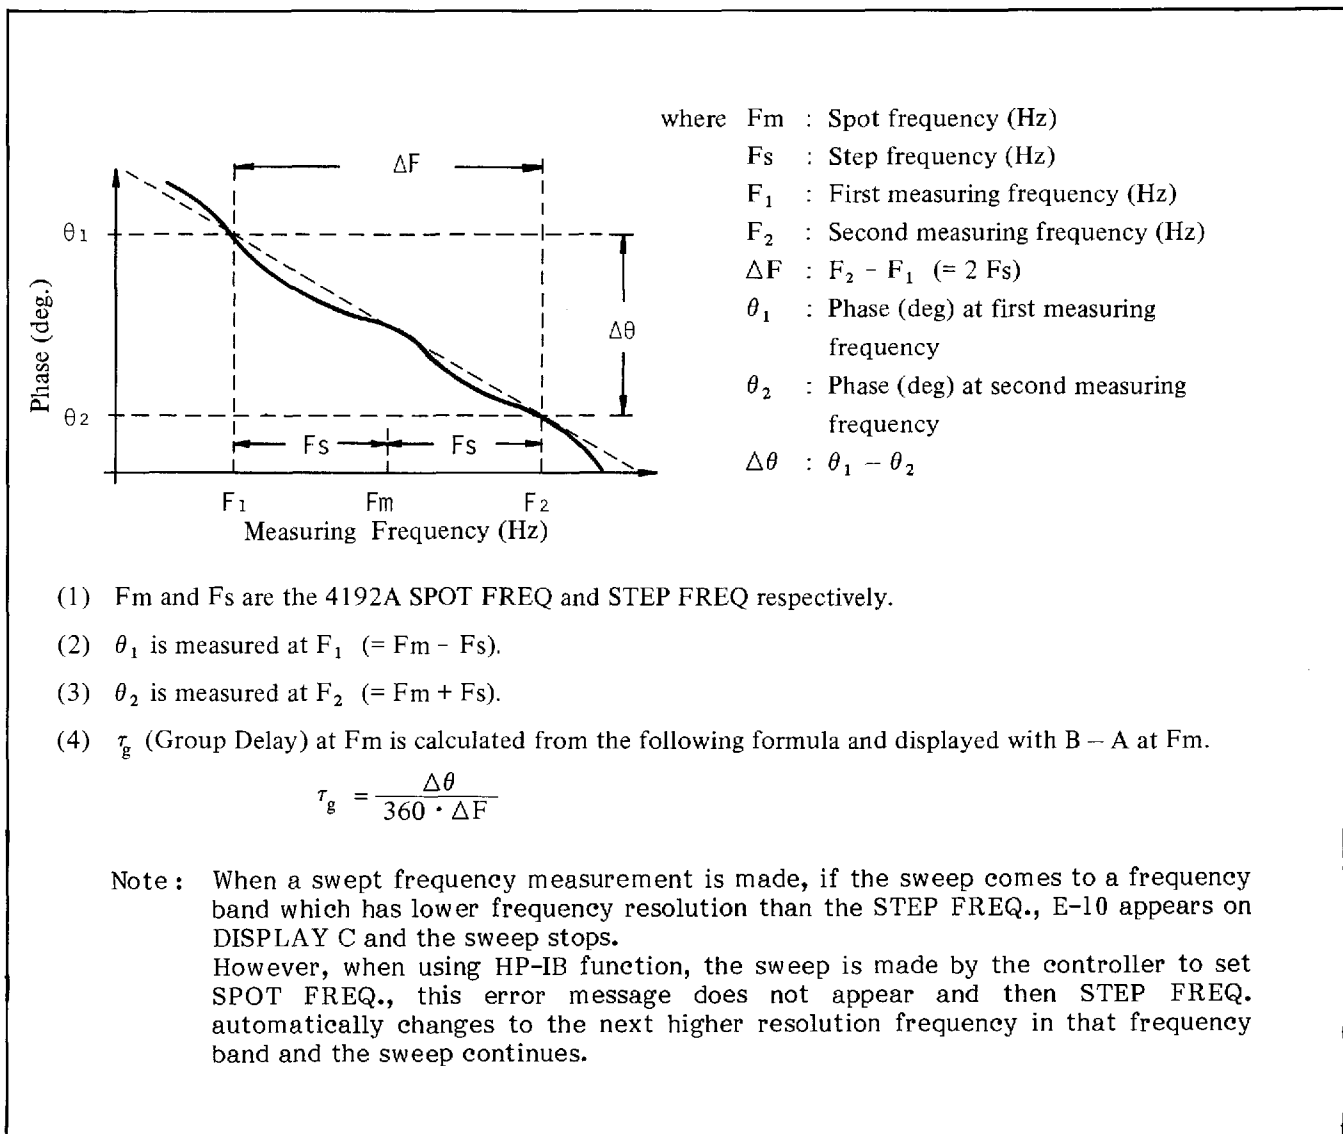


Figure 3-12. Group Delay Measurement at Spot Frequency

3-65. Figure 3-13 shows a swept group delay measurement.

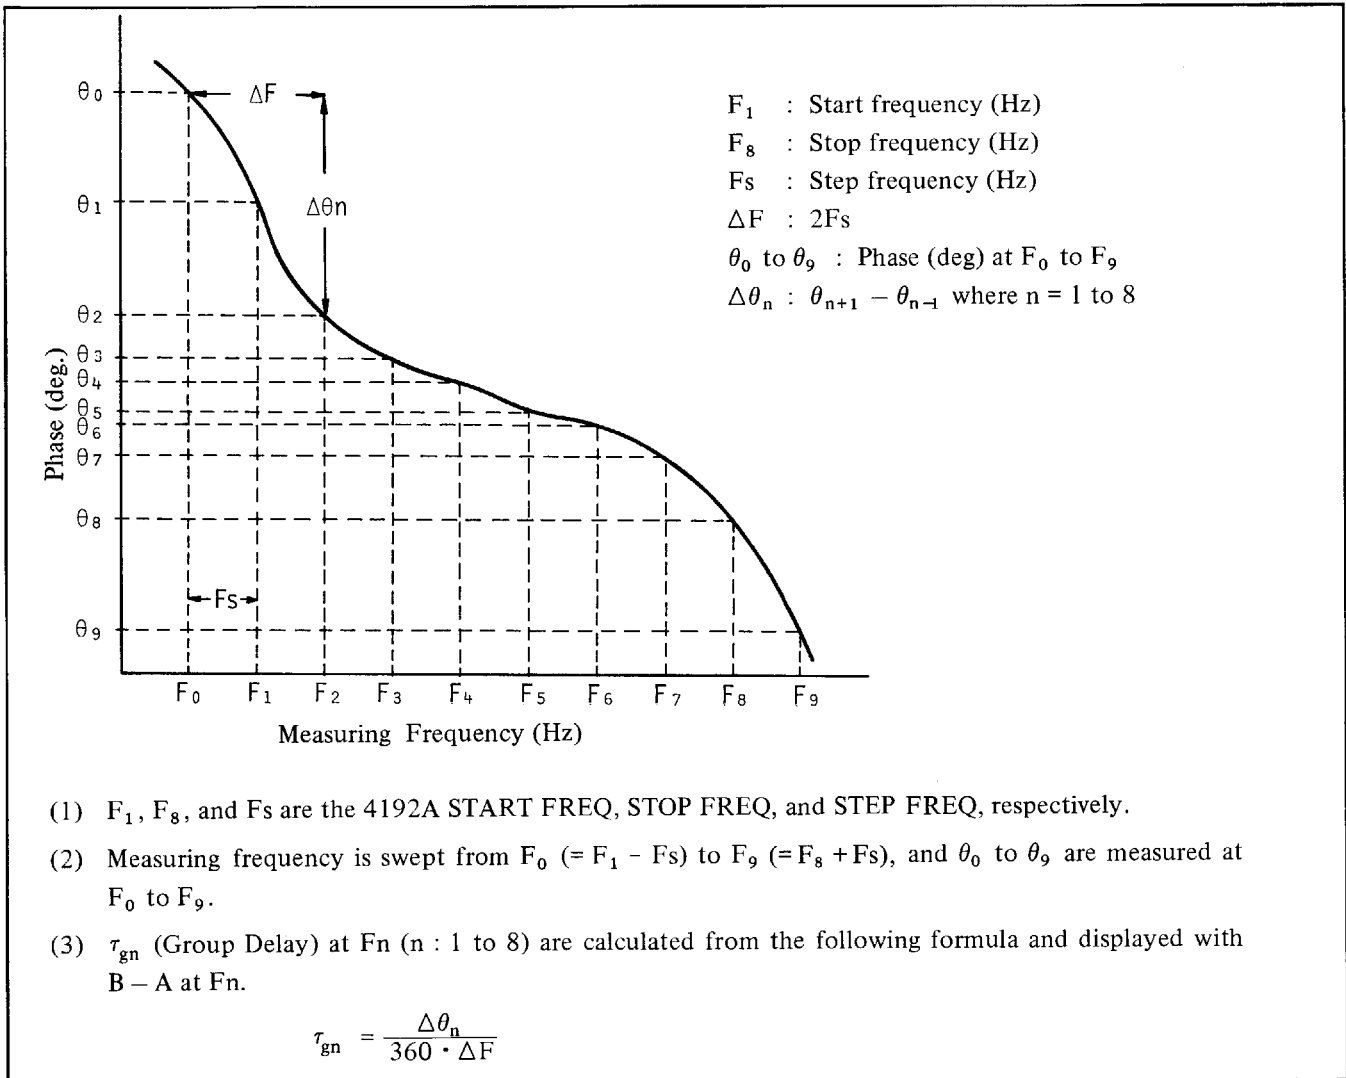


Figure 3-13. Group Delay Measurement on Swept Frequency

3-66. Measurement ranges and resolution of the group delay measurements are determined automatically by ΔF (STEP FREQ $\times 2$) and $\Delta\theta$.

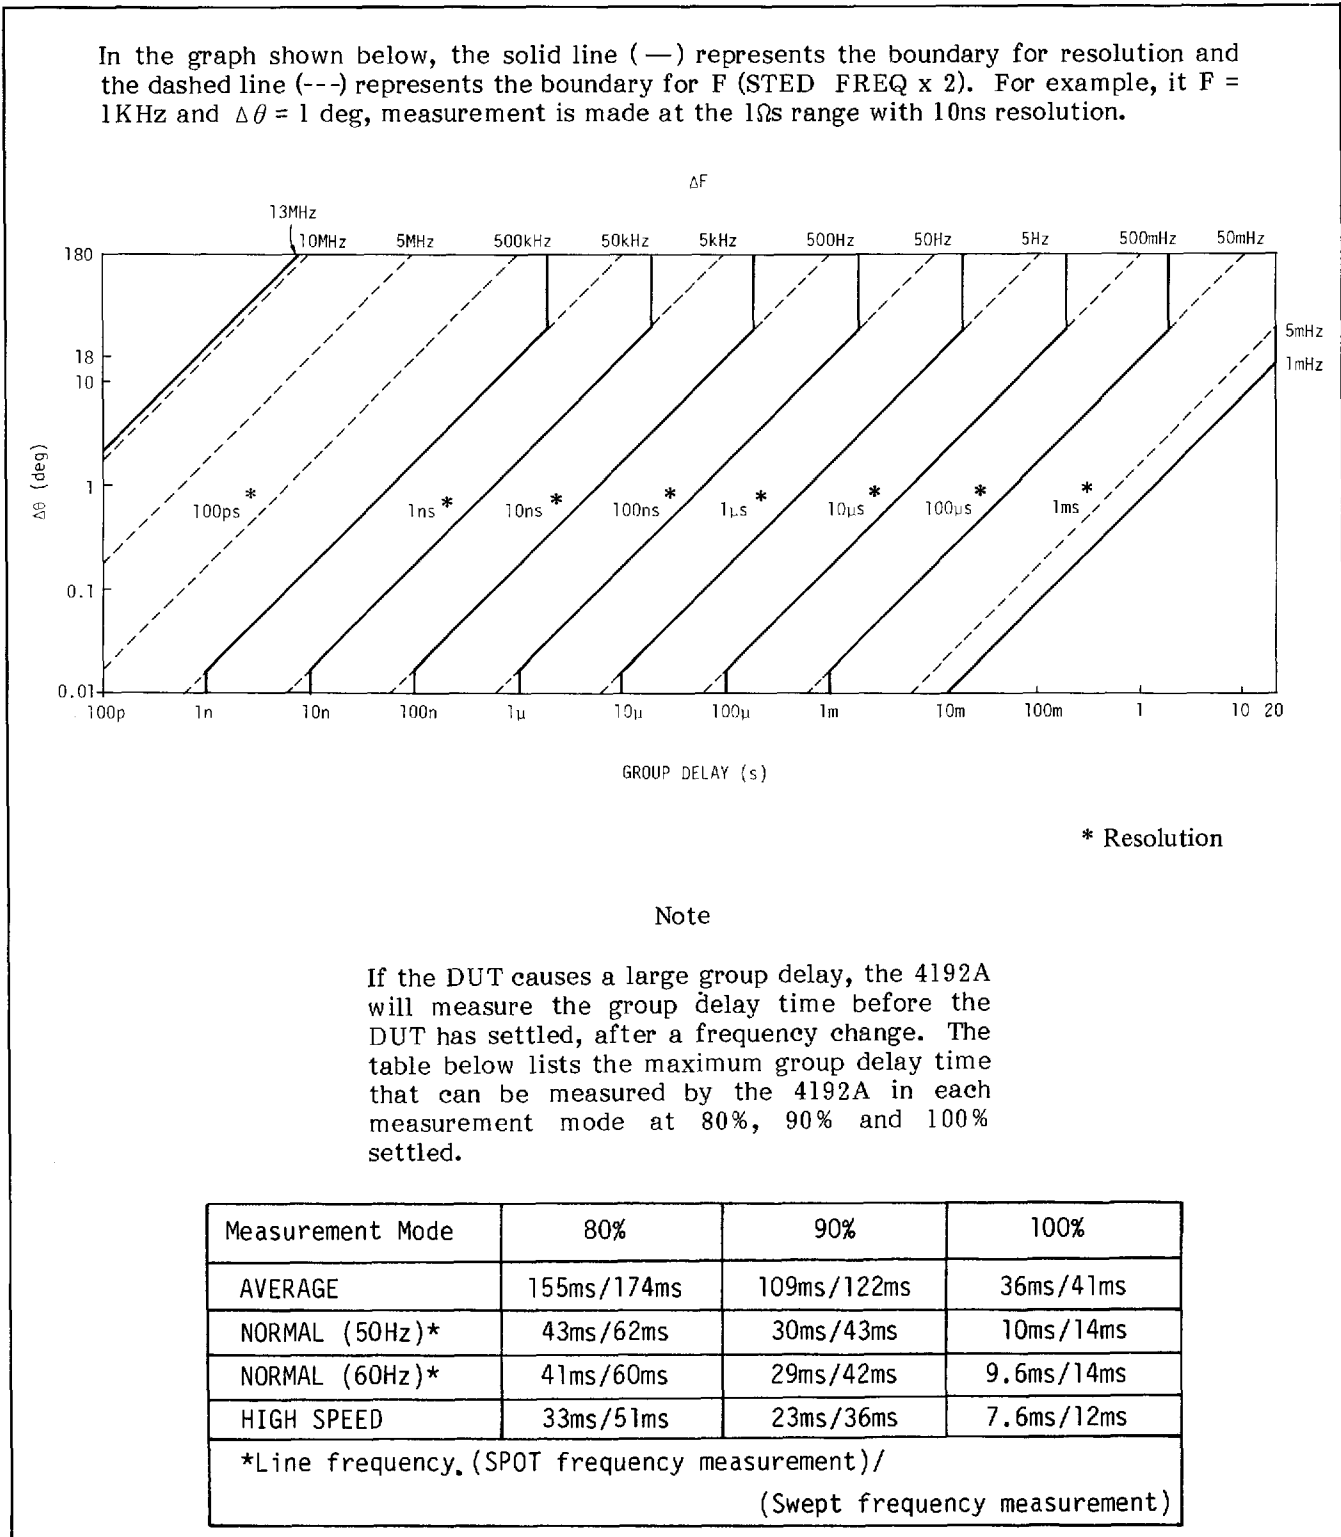


Figure 3-14. Measurement Ranges and Resolution of the Group Delay Measurements

3-67. IMPEDANCE MEASUREMENT

3-68. The 4192A can accurately measure the impedance parameters of a component or circuit at the frequency, test signal level, and dc bias level found in actual-real world-operation.

- (1) Measuring Frequency : 5Hz to 13MHz
- (2) OSC Level : 5 mVrms to 1.1 Vrms
- (3) DC bias voltage : -35V to +35V

Frequency and bias can be automatically or manually swept, full range, in either direction. OSC level can also be swept (manual only) at 1mV steps (5mV steps at levels above 100mV). The actual test signal voltage across the DUT, or the test signal current through the DUT can be measured.

Instructions for impedance measurements are given in paragraphs 3-69 through 3-108.

3-69. Measurement Functions

3-70. The 4192A simultaneously measures two independent, complementary impedance parameters in each measurement cycle. This combination of measurement parameters represents both the resistive and reactive





characteristics of the sample. A total of fourteen measurement parameters (two are duplicates) make up the twelve selectable parameter combinations. These measurement functions are classified, for display purpose, into two groups: DISPLAY A and DISPLAY B functions, as given in Table 3-13. DISPLAY A function group comprises the primary measurement parameters and measured values are displayed on DISPLAY A. DISPLAY B functions include a group of subordinate parameters, the availability of which are partially dependent on the primary function. Selected and measured values are displayed on DISPLAY B. Selectable combinations of DISPLAY A and DISPLAY B functions are listed in Table 3-13. Measurement parameters separated by a slash (/) in Table 3-13 are for equivalent series circuit () (left of slash) or equivalent parallel circuit () (right of slash). Refer to paragraph 3-73 for details. The 4192A measures $R + jX$ (impedance) in equivalent series circuit mode and $G + jB$ (admittance) in equivalent parallel circuit mode. Other impedance parameters are calculated from $R + jX$ or $G + jB$ with the equations given in Table 3-14. Measurement results can be displayed as either deviation or percent deviation from stored reference values. Deviation measurements are described in paragraph 3-26.

Table 3-13. DISPLAY A/B Functions for Impedance Measurements

DISPLAY A Function		DISPLAY B Function	
Z / Y	Absolute Impedance/Absolute Admittance	θ (deg)	Phase Angle in degrees
		θ (rad)	Phase Angle in radians
R/G	Resistance/Conductance	X/B	Reactance/Susceptance
L C	Inductance Capacitance	Q	Quality Factor
		D	Dissipation Factor
		R/G	Resistance/Conductance

Table 3-14. Measurement Parameter Formulas for Impedance Measurement

Measurement Parameter	Measurement Equivalent Circuit	
		
Z	$\sqrt{R^2 + X^2}$	/
Y		
θ	$\tan^{-1} \left(\frac{X}{R} \right)$	$\tan^{-1} \left(\frac{B}{G} \right)$
L	$\frac{X}{\omega}$	$-\frac{1}{\omega B}$
C	$-\frac{1}{\omega X}$	$\frac{B}{\omega}$
Q	$\frac{ X }{R}$	$\frac{ B }{G}$
D	$\frac{R}{ X }$	$\frac{G}{ B }$

3-71. Measurement Range

3-72. The 4192A has two measurement range modes: AUTO and MANUAL. The mode is set by the ZY RANGE keys on the front-panel. When DISPLAY A function is set to |Z|/|Y| in AUTO range mode, ranging depends on the impedance, |Z|, or the admittance, |Y|, of the DUT. When L or C is selected, ranging depends on the displayed value. |Z| and |Y| ranges and resolution are listed in Table 3-15.

When ZY RANGE is set to AUTO, the optimum range is automatically selected. If the internal measurement circuit is saturated or the measured value exceeds the upper limit of the range (130% of full scale), the next higher range is automatically selected. If the measured value is less than the range's lower limit (11% of full scale), the next lower range is automatically selected.



When ZY RANGE is set to MANUAL, the measurement range will not change even if the measured value of the DUT changes. If the ZY RANGE down () key or up () key is pressed, the measurement range is changed one decade in the indicated direction. If the

Table 3-15. ZY RANGE

ZY RANGE	Z		Y	
	Measurement Range	Resolution	Measurement Range	Resolution
1Ω/10S	0.0001Ω ~1.2999Ω	0.1mΩ	0.01S ~12.99S	10mS
10Ω/1S	0.001Ω ~12.999Ω	1mΩ	0.0001S ~1.2999S	100μS
100Ω/100mS	0.01Ω ~129.99Ω	10mΩ	0.01mS ~129.99mS	10μS
1kΩ/10mS	0.0001kΩ ~1.2999kΩ	100mΩ	0.001mS ~12.999mS	1μS
10kΩ/1mS	0.001kΩ ~12.999kΩ	1Ω	0.0001mS ~1.2999mS	100nS
100kΩ/100μS	0.01kΩ ~129.99kΩ	10Ω	0.01μS ~129.99μS	10nS
1MΩ/10μS	0.0001MΩ ~1.2999MΩ	100Ω	0.001μS ~12.999μS	1nS

internal measurement circuit is saturated, UCL will be displayed on DISPLAY A; if the measured value exceeds the upper limit of the range (130% of full scale), OF1 will be displayed on DISPLAY A.

The time required for a range change is between 35ms and 40ms at frequencies above 400Hz. Figure 3-15 shows the number of display digits for |Z| and |Y| measurements. (The number of display digits depends on the test frequency, OSC level, and ZY RANGE.) Measurement range for each of the other parameters is discussed below.

(1) R/G/X/B:

The measurement ranges, resolution, and number of display digits for R (resistance) and X (reactance) are the same as those for |Z| and are given in Table 3-15 and Figure 3-15. Likewise, measurement ranges, resolution, and number of display digits for G (conductance) and B (susceptance) are the same as those for |Y|. However, the upper limit of X/B and DISPLAY B R/G is 200% of full scale and the lower limit is 18% of full scale.

(2) L/C:

The measurement ranges, resolution, and number of display digits for L (inductance) and C (capacitance) depends on the test frequency and the ZY RANGE (see Figure 3-16). The upper limit for L and C is 200% of full scale and the lower limit is 18% of full scale.

(3) $\theta/Q/D$:

The measurement ranges and resolution for θ (phase angle), Q (quality factor) and D (dissipation factor) are given in Table 3-16. Number of display digits for θ , Q, and D are the same as that for |Z| and |Y| (see Figure 3-15). When the measured value of |Z| or |Y| is less than 5% of full scale, θ , Q, and D measurement cannot be made and --- is displayed on DISPLAY B.

The measurement ranges for these parameters are selected automatically. If the measured value exceeds the limit of the display, OF2 will be displayed on the corresponding display.

Table 3-16. Measurement Range of $\theta/Q/D$

Measurement Parameter	Measurement Range	Resolution
θ (deg)	$0^\circ \sim \pm 180^\circ$	0.01°
θ (rad)	$-\pi \sim -1.000$	0.001
	$-1.0000 \sim +1.0000$	0.0001
	$+1.000 \sim +\pi$	0.001
Q	0 ~ 1999.9	0.1
D	0 ~ 1.9999	0.0001
	2.000 ~ 19.999	0.001

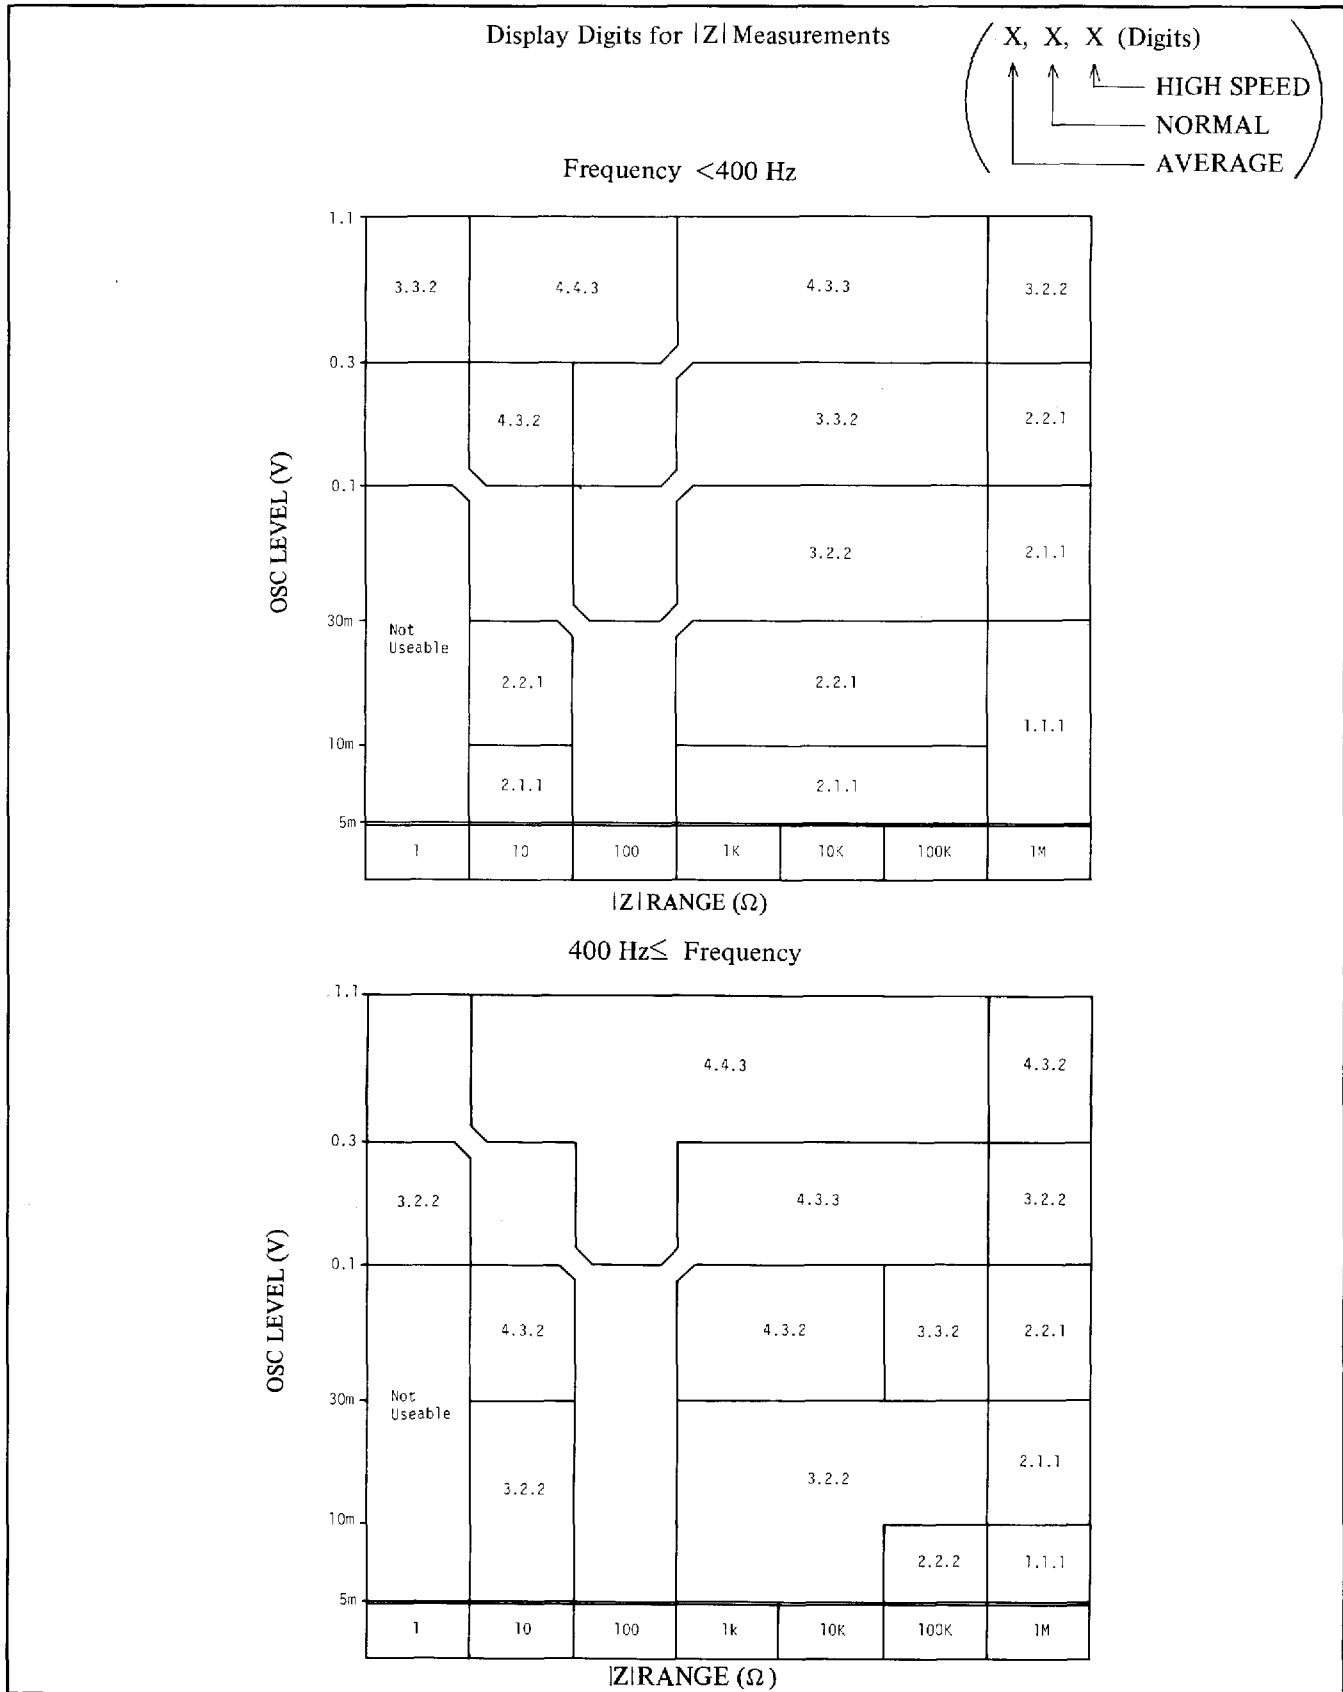


Figure 3-15. Display Digits for |Z|/|Y| Measurements (sheet 1 of 2)



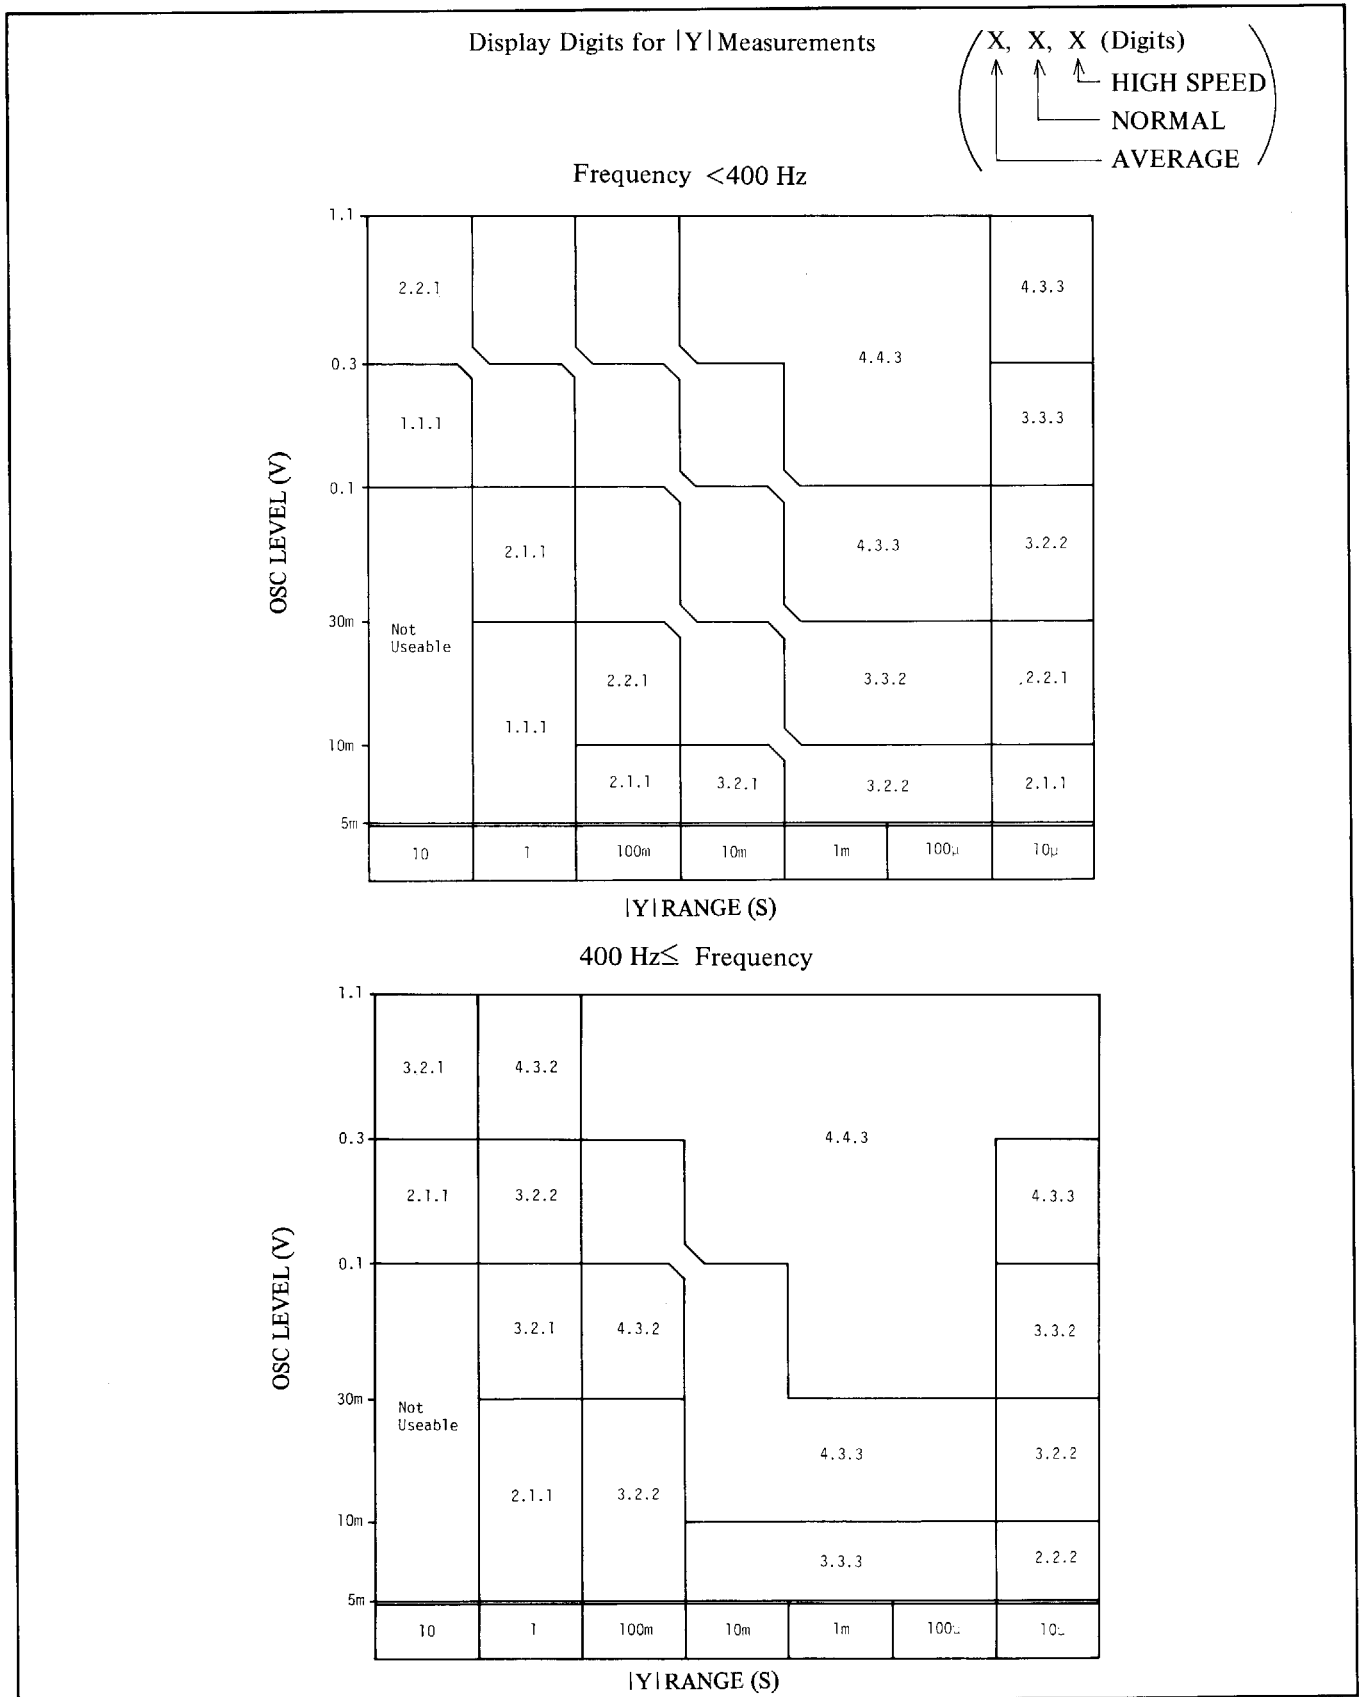


Figure 3-15. Display Digits for |Z|/|Y| Measurements (sheet 2 of 2)

Measurement Ranges, Resolution, and Display Digits for L Measurements (Specified by |Z| RANGE).

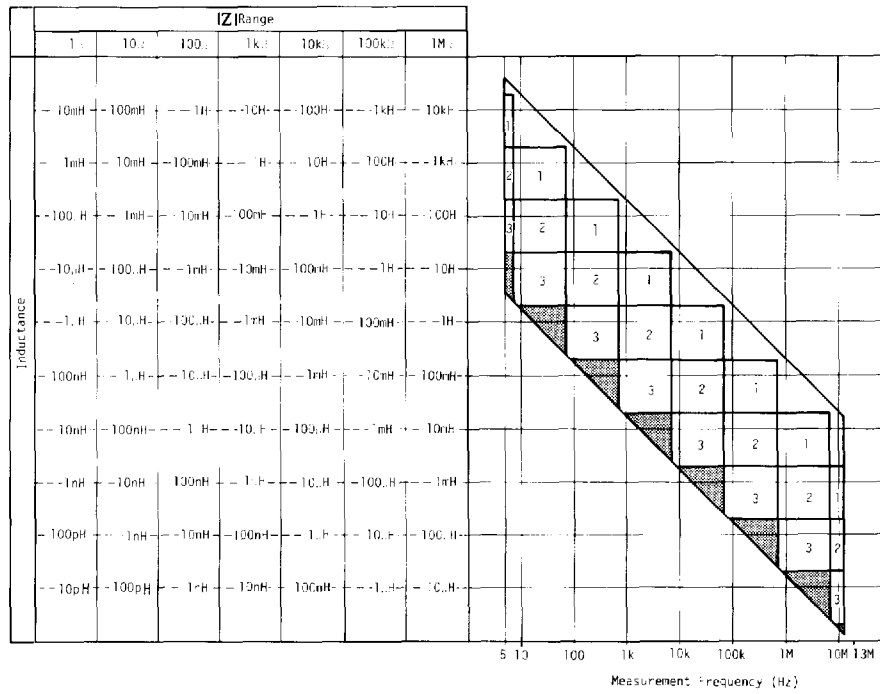





Measurement Ranges, Resolution, and Display Digits for C Measurements (Specified by |Y| RANGE).

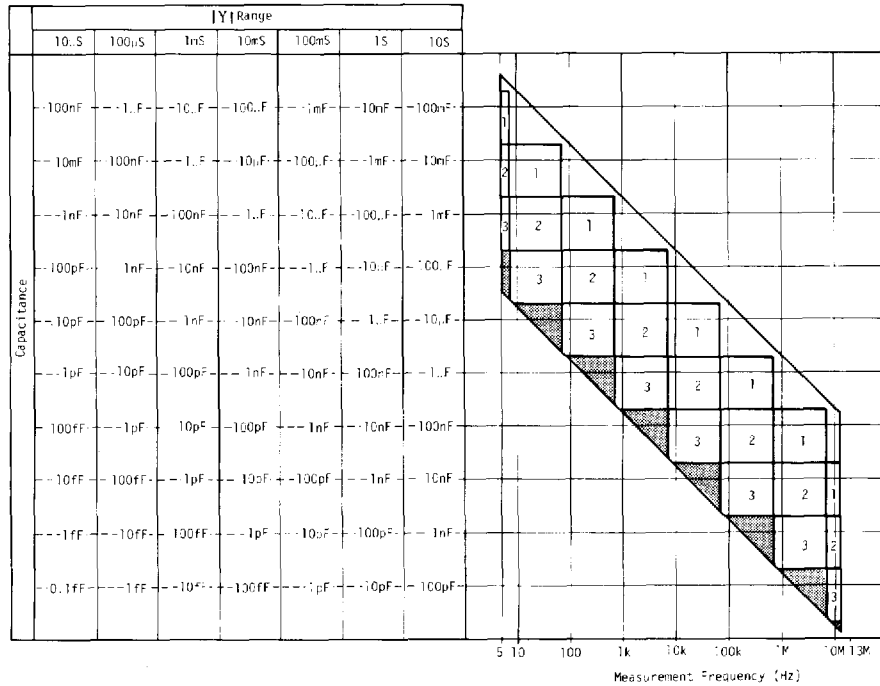

Note: Display digits for L/C = Display digit of |Z|/|Y| in Figure 3-15 – Number in above figure. Shaded areas indicate that measurement cannot be performed.

Figure 3-16. Measurement Ranges, Resolution and Display Digits for L/C Measurements.

Table 3-17. Dissipation Factor Equations

Circuit Mode	Dissipation Factor	Conversion to Other Modes
C	$D = \frac{G}{\omega C_p} = \frac{1}{Q}$ 	$C_s = (1 + D^2) C_p, \quad R = \frac{D^2}{1 + D^2} \cdot \frac{1}{G}$
	$D = \omega C_s R = \frac{1}{Q}$ 	$C_p = \frac{1}{1 + D^2} C_s, \quad G = \frac{D^2}{1 + D^2} \cdot \frac{1}{R}$
L	$D = \omega L_p G = \frac{1}{Q}$ 	$L_s = \frac{1}{1 + D^2} L_p, \quad R = \frac{D^2}{1 + D^2} \cdot \frac{1}{G}$
	$D = \frac{R}{\omega L_s} = \frac{1}{Q}$ 	$L_p = (1 + D^2) L_s, \quad G = \frac{D^2}{1 + D^2} \cdot \frac{1}{R}$

value at a given frequency for both parallel and series equivalents.

In ordinary LCR measuring instruments, the measurement circuit is set (automatically or manually) to a predetermined equivalent circuit with respect to either the selected range or to the dissipation factor value of the sample. The wider circuit mode selection capability of the 4192A, which is free from these restrictions, permits taking measurements in the desired circuit mode and of comparing such measured values directly with those obtained by another instrument. This obviates the inconvenience and necessity of employing instruments capable of taking measurements with the same equivalent circuit to assure measurement result correspondence.

3-75. Unknown Terminals

3-76. For connecting the sample to be tested, the 4192A employs measurement terminals in a four terminal pair configuration, which has a significant measuring advantage for component parameter measurements requiring high accuracy in the high frequency region. Generally, any mutual inductance, interference of the measurement signals, and unwanted residual factors in the connection method which are incidental to ordinary terminal methods significantly affect the measurement at a high frequency. The four terminal pair configuration measurement permits easy, stable and accurate measurements and avoids the measurement limitations inherent in such effects. To construct this terminal architecture, connection of a sample to the instrument requires the use of a test fixture or test leads in a four terminal pair configuration design.

The UNKNOWN terminals consist of four connectors: High current (H_{CUR}), High potential (H_{POT}), Low potential (L_{POT}) and Low current (L_{CUR}). The purpose of the current terminals is to cause a measurement signal current to flow through the sample. The potential terminals are for detecting the voltage drop across the sample. The high side signifies the drive potential (referenced to low side potential) drawn from the internal measurement signal source. To compose a measurement circuit loop in a four terminal pair configuration, the H_{CUR} and H_{POT}, L_{POT} and L_{CUR} terminals must be respectively connected together and, in addition, the shields of all conductors must be connected together (as shown in Figure 3-19). Principle of the four terminal configuration measurement is illustrated in Figure 3-20. At first glance, the arrangement appears to be an expanded four terminal

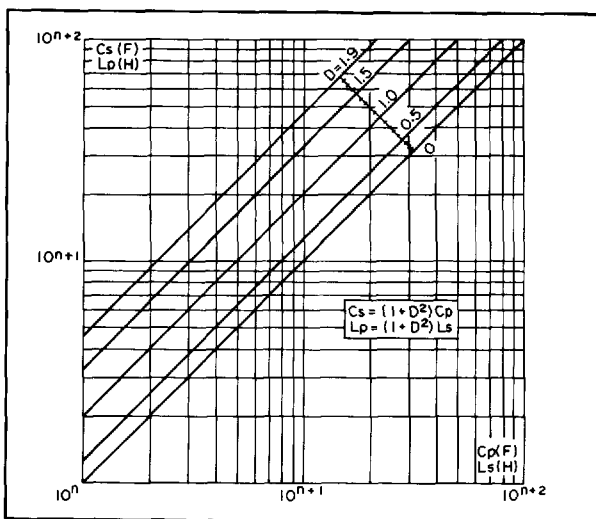


Figure 3-18. Parallel and Series Parameter Relationship

method with a built-in guard structure. This is true. Thus, the four terminal pair method combines the advantages of the four terminal method in low impedance measurements while providing the shielding required for high impedance measurements. The distinctive feature of the four terminal pair configuration is that the outer shield conductor works as the return path for the measurement signal current. The same current flows through both the center conductors and the outer shield conductors (in opposite directions) yet no external magnetic fields are generated around the conductors (the magnetic fields produced by the inner and outer currents completely cancel each other). Because the measurement signal current does not develop an inductive magnetic field, the test leads do not contribute additional measurement errors due to self-or mutual-inductance between the individual leads. Hence, the four terminal pair method enables measurements with best accuracy while minimizing any stray capacitance and residual inductance in the test leads or test fixture.

Note: If residual inductance does exist in test leads, it affects measurements and the resultant additional measurement error increases in capacitance measurements in proportion to the square of the measurement frequency.

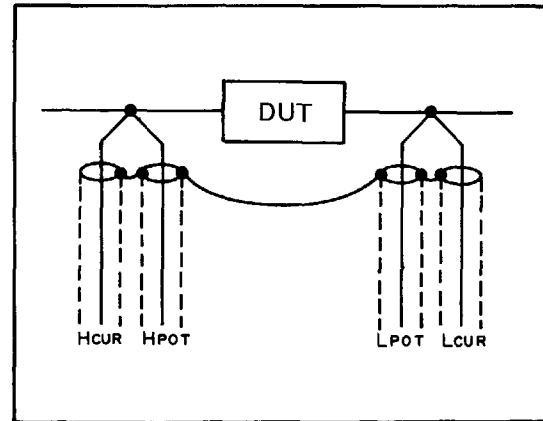


Figure 3-19. Four Terminal Pair DUT Connections

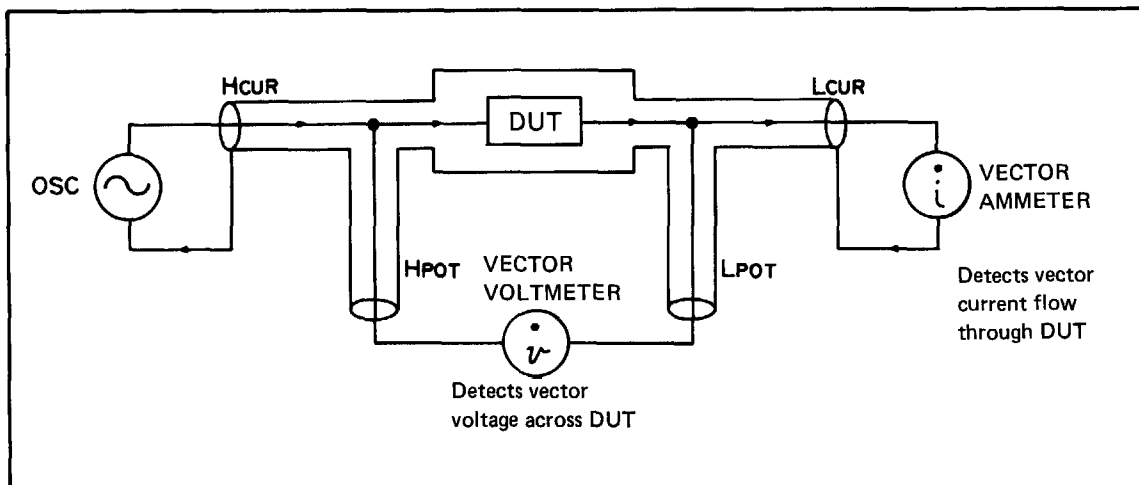


Figure 3-20. Four Terminal Pair Measurement Principle

3-77. Selection of Test Cable Length

3-78. The propagation signal in a transmission line will develop a change in phase between two points on the line as illustrated in Figure 3-21. The difference in phase corresponds to the ratio of the distance between the two points to the wavelength of the propagating signal. Consequently, owing to their length, test cables for connecting a sample will cause a phase shift and a propagation loss of the test signal. For example, the wavelength of a 13MHz test signal is 23 meters which is 23 times as long as the 1m standard test cables. Here, the phase of the test signal at the end of the test cable will have been shifted by about 15.6 degrees ($360^\circ \div 23$) as referenced to the phase at the other end of the cable. Since the effect of test cables on measurements and the resultant measurement error increase in proportion to the test frequency, cable length must be taken into consideration in high frequency measurements. The CABLE LENGTH switch selects measuring circuitry for the 1m standard test cables or for a test fixture attached directly to the UNKNOWN terminals. When standard 1m test cables are used for measurements, the CABLE LENGTH switch is set to the 1m position to properly adapt measuring circuit for the test cables and to minimize additional measurement errors. The 0 position is selected for direct attachment type test fixtures.

Notes:

1. When the HP16047B Test Fixture is used with the 4192A, set CABLE LENGTH switch to 1m position.
2. If test cable is longer or shorter than the standard 1m test cable, the additional error contributed is proportional to the square of the frequency. As the characteristic impedance of the test cable is also a


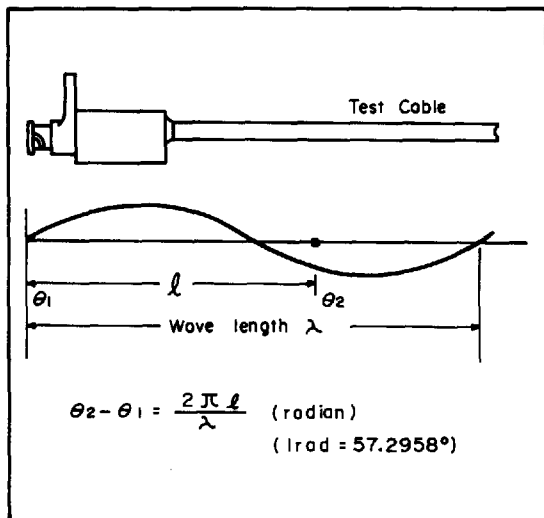


Figure 3-21. Test Signal Phase on Test Cables

factor in the propagation loss and phase shift (and of resultant measurement error), using different type test cables must be avoided. Be sure to use the standard test cables available from Hewlett-Packard.

3. To minimize incremental measurement errors at frequencies above 4MHz, convert four terminal pair to three terminal configuration at cable ends by connecting High and Low side cables, respectively, with low impedance straps as illustrated (do not extend cables of four terminal pair). The residual error factors, L_o and C_o , are shown in the figure.

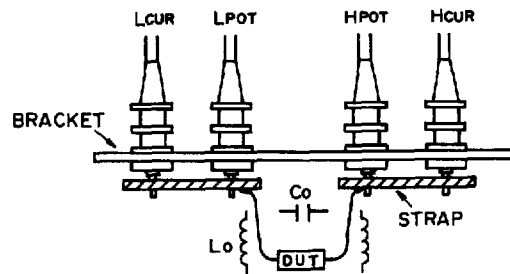

3-79. ZERO Offset Adjustment

3-80. There is no perfect test fixture. They all have parasitic elements that affect measurement accuracy. This is also true of the measurement circuit. To minimize the effect these parasitic elements have on measurements, the 4192A is equipped with an automatic ZERO offset adjustment capability. Refer to Figure 3-30 for the ZERO offset procedure.

3-81. The 4192A measures $R \pm jX$ (impedance) in equivalent series circuit mode and $G \pm jB$ (admittance) in equivalent parallel circuit mode. All other impedance parameters are calculated from $R \pm jX$ or $G \pm jB$ (refer to paragraph 3-69). When one of the other impedance parameters is measured (after offset adjustment), compensation is made on the raw measurement data ($R \pm jX$ or $G \pm jB$) before conversion into the selected parameter.

(1) ZERO SHORT

All measurement errors are represented as two series residual parameters $R + jX$ as shown in Figure 3-22 and measured values are compensated with following equations.

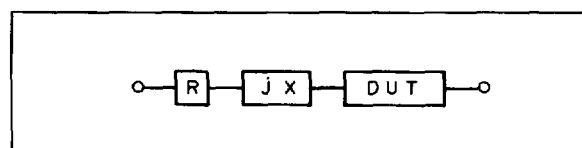


Figure 3-22. Residual Impedance

$$R_d = R_m - R_s$$

$$X_d = X_m - X_s$$

where R_d, X_d : Displayed values.
 R_m, X_m : Measured values.
 R_s, X_s : ZERO SHORT offset data

The 4192A calculates ZERO SHORT offset data at other frequencies using the ZERO SHORT offset data at a particular frequency as shown in

Table 3-18 and compensates measured values at other frequencies.

(2) ZERO OPEN

All measurement errors are represented as two parallel stray parameters, $G + jB$, as shown in Figure 3-23, and measured values are compensated with following equations.

Table 3-18. ZERO Offset Adjustments

Measurement (Hz)	ZERO Offset Adjustments	
	SHORT	OPEN*
5 ~ 500	ZERO offset adjustment must be performed at each spot frequency. For example, offset adjustment at 5 Hz is not valid at 6 Hz.	
500 ~ 100k	ZERO SHORT offset at 100kHz is valid for all frequencies from 500Hz to 100kHz.	ZERO OPEN offset data is automatically recalculated for each frequency within a given frequency range if ZERO OPEN offset is performed at 1 MHz. The equations used for this are as follows: $G_c = G_o$ $B_c = B_o \times \frac{F_m}{F_o}$ $G_D = G_m - G_c \quad B_D = B_m - B_c$
100k ~ 1M	ZERO SHORT offset data is automatically recalculated for each frequency within a given frequency range if ZERO SHORT offset is performed at the maximum frequency of that range. The equations used for this are as follows: $R_c = R_s \times \frac{1 \times \sqrt{F_m}}{1 \times \sqrt{F_s}}$ $X_c = X_s \times \frac{F_m}{F_s}$ $R_D = R_m - R_c \quad X_D = X_m - X_c$	
1M ~ 10M		ZERO OPEN offset data is automatically recalculated for each frequency within a given frequency range if ZERO OPEN offset is performed at the maximum frequency of that range. The equations used for this are the same as those used in the 500Hz to 1MHz range.
10M ~ 13M	ZERO SHORT offset data is automatically recalculated for each frequency within a given frequency range if ZERO SHORT offset is performed at 10MHz. The equations used for this are the same as those used in the 100kHz to 10MHz range.	ZERO OPEN offset data is automatically recalculated for each frequency within a given frequency range if ZERO OPEN offset is performed at 10MHz. The equations used for this are the same as those used in the 500Hz to 1 MHz range.

F_m : Measuring frequency (MHz)
 F_s : Frequency at which ZERO SHORT offset adjustment is performed (MHz).
 F_o : Frequency at which ZERO OPEN offset adjustment is performed (MHz).
 R_c, X_c, G_c, B_c : Recalculated offset data
 R_s, X_s : ZERO SHORT offset data
 G_o, B_o : ZERO OPEN offset data
 R_D, X_D, G_D, B_D : Displayed value of DUT
 R_m, X_m, G_m, B_m : Value measured by the 4192A includes offset error.
 * : The ZERO OPEN offset adjustment should be performed at each measuring frequency in measurements on grounded devices.

$$G_d = G_m - G_o$$

$$B_d = B_m - B_o$$

where G_d, B_d : Displayed Values.
 G_m, B_m : Measured Values.
 G_o, B_o : ZERO OPEN offset data

The 4192A calculates ZERO OPEN offset data at other frequencies using the ZERO OPEN offset data at a particular frequency as shown in Table 3-18 and compensates measured values at the other frequencies.

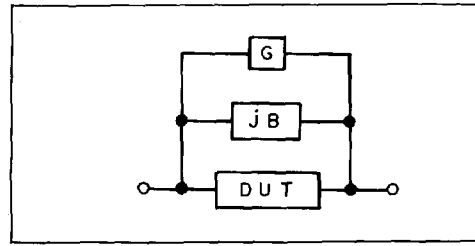


Figure 3-23. Stray Admittance

3-82. Actual Measurement Equivalent Circuit

3-83. The measuring circuit used to connect a test sample to the UNKNOWN terminals actually becomes part of the sample which the instrument measures. The four terminal pair configuration measurement employed in the 4192A offers minimum residual impedance in the measuring circuit. However, the four terminal pair measurement system must be converted to a two terminal configuration at/near to the sample because ordinary components have two terminal leads. Moreover, additional stray capacitance appears in the measuring circuit when a sample is connected to the test fixture. Figure 3-24 illustrates such stray capacitances present around the component leads.

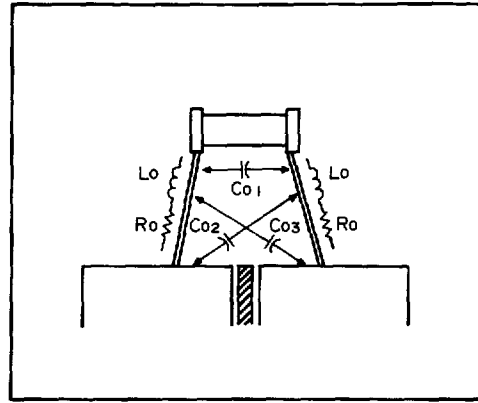


Figure 3-24. Parasitic Elements Incident to DUT Connections

3-84. Diverse parasitic elements existing in the measuring circuit between the unknown device and the measurement terminals will affect measurement results. These undesired parasitic elements are present as resistive and reactive factors in series and conductive and suscep-

tive factors in parallel with the test component. Figure 3-25 shows an equivalent circuit model of the measuring circuit which includes the parasitic elements (usually

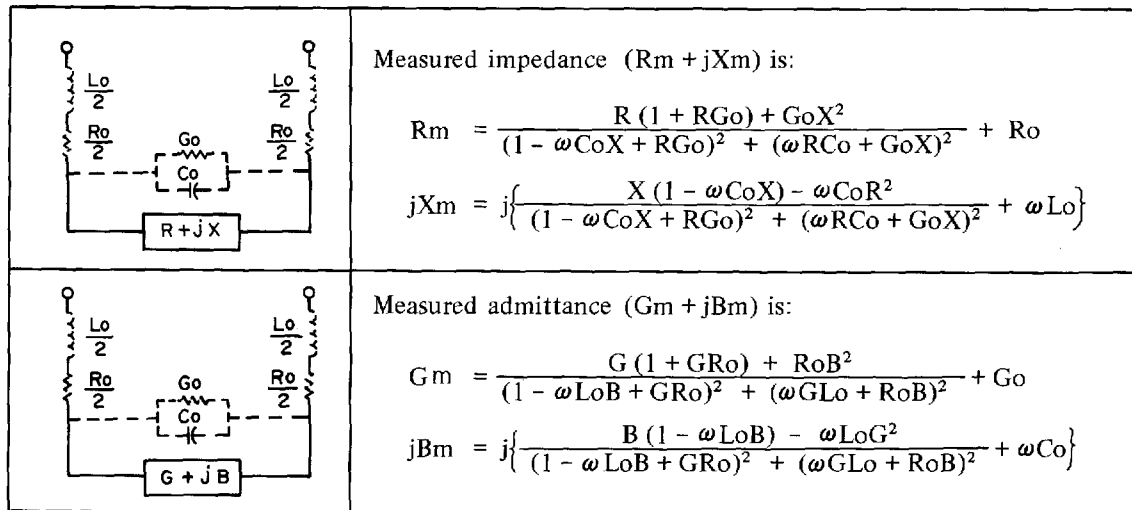


Figure 3-25. Equivalent Circuits Including Residual Impedance

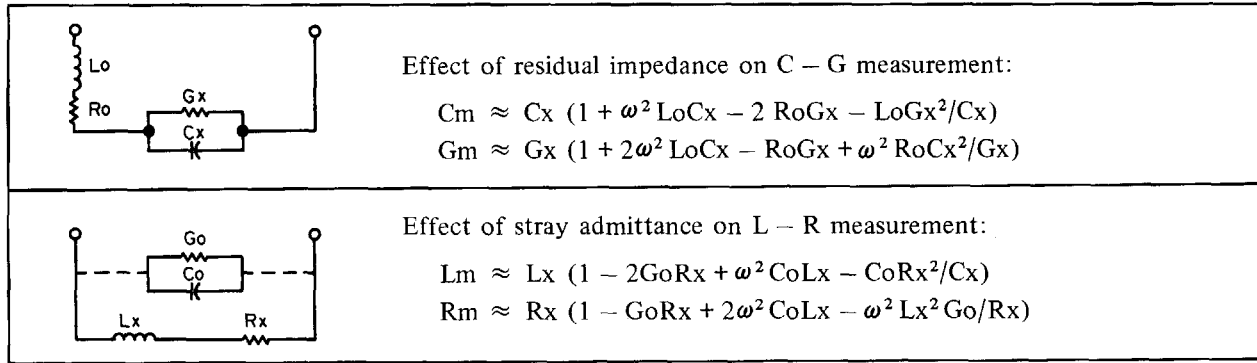


Figure 3-26. Effects of Residual Impedance

called residual parameters). In the equivalent measuring circuit (Figure 3-25), L_o represents residual inductances in test component leads, R_o is lead resistance. G_o is conductance between the leads, and C_o is the stray capacitance illustrated in Figure 3-24. Reactive factors in the residual impedance and susceptive factors in the stray admittance have a greater effect on measurement at higher frequencies.

3-85. Figure 3-26 shows the effect of residual impedance on C – G measurement and the effect of stray admittance on L – R measurement. Generally, L_o resonates with the capacitance of the sample (series resonance) and C_o resonates with the inductance of the sample (parallel resonance), respectively, at a specific high frequency. Thus, the impedance of the test sample will have a minimum value corresponding to resonant peaks, as shown in Figure 3-27. The presence of L_o and C_o causes measurement errors, as the phase of the test signal current varies over a broad frequency region around the resonant frequencies. Additional errors, due to the resonance, increase in proportion to the square of the measurement frequency (below resonant frequency) and can be theoretically approximated as follows:

$$C_{\text{ERROR}} \approx \omega^2 L_o C_x \cdot 100 (\%)$$

$$L_{\text{ERROR}} \approx \omega^2 C_o L_x \cdot 100 (\%)$$

where, $\omega = 2\pi f$ (f : test frequency)

C_x = Capacitance value of sample.

L_x = Inductance value of sample.

At low frequencies, L_o and C_o affect the measured inductance and capacitance values, respectively, as simple additive errors. These measurement errors cannot be fully eliminated by the ZERO offset adjustment (which permits compensating for residual factors inherent in the

test fixture used). This is because L_o and C_o are peculiar to the component being measured. Their values depend on component lead length and on the distance between the sample and test fixture. The measurement results, then, are substantially the sample values including the parasitic impedances present under the conditions necessary to connect and hold the sample.

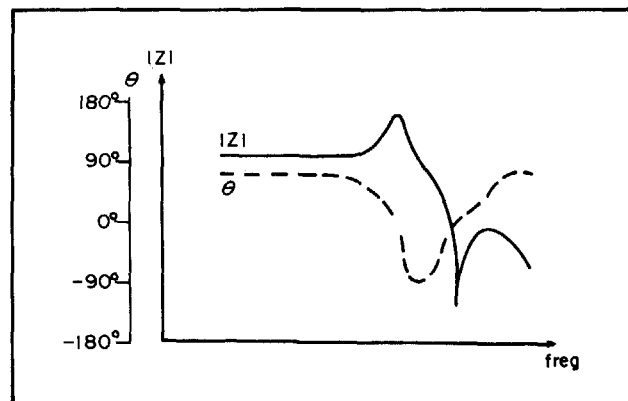


Figure 3-27. Effect of Resonance in Sample (Example)

3-86. Measured Values and Behavior of Components

3-87. Measured resistive and reactive (conductive or susceptive) parameter values of a component are not always close to their respective nominal values. In addition, certain electrical effects can cause the measurement to vary widely. Measured sample values include factors which vary such values because of electromagnetic effects such as the well-known skin effect of a conductor, the general characteristics of ferromagnetic inductor cores, and effects of dielectric materials in capacitors. Here, we'll discuss only the effects which result from the interaction of the reactive (susceptive) parameter elements (L, C, etc.) of a component.

3-88. The impedance of a component can be expressed in vector representation by a complex number as shown in Figure 3-28. In such representation, the effective resistance and effective reactance correspond to the projections of the impedance vector $|Z| < \theta$, that is, the real (R) axis and the imaginary (jX) axis, respectively.

When phase angle, θ , changes, both Re and X change in accordance with the definitions above. As component measurement parameters L, C, R, D, etc., are also representations of components related to the impedance

vector, phase angle, θ , dominates their values. Consider, for example, the inductance and the loss of an inductive component at frequencies around its self-resonant frequency. Figure 3-29 shows the equivalent circuit of the inductor. The inductance L_x resonates with the distributed capacitance C_o at frequency f_o . The phase angle (θ) of the impedance vector approaches 0 degrees (the vector approaches the R axis) when the operating frequency is close to the resonant frequency. Thus, the inductance of this component decreases while, on the other hand, the resistive factor (loss) increases. At the resonant frequency, f_o , this component is purely resistive. The effective resistance increases at resonance even if the inductor has (ideally) no resistance at dc. Consequently, the loss factor varies sharply at frequencies around the resonance point.

3-89. Measurement Time

3-90. Table 3-19 shows the measurement times for impedance measurements made with the 4192A.

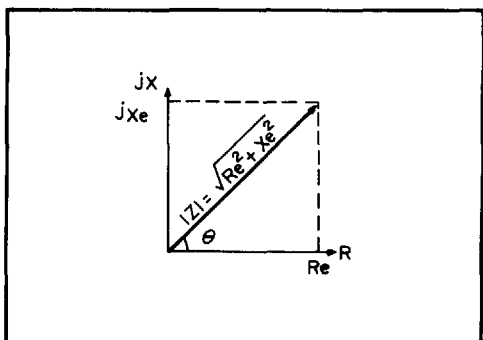


Figure 3-28. Impedance Vector Representation

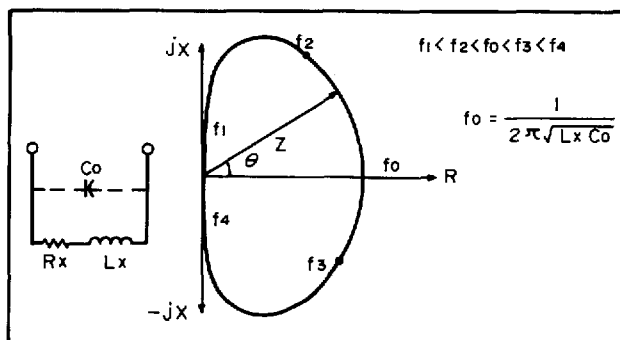


Figure 3-29. Typical Impedance Locus of an Inductor

Table 3-19. Measurement Time for Impedance Measurement


Measurement Function	Measurement Mode	Measurement Frequency (Hz)				
		5 ~ 15	15 ~ 150	150 ~ 400	400 ~ 116k	116k ~ 13M
Z / Y - θ	HIGH SPEED	$\frac{5000}{f} + 57.5 \sim \frac{5000}{f} + 71.5$			70 ~ 84	77 ~ 91
	NORMAL	$\frac{5000}{f} + 59 \sim \frac{5000}{f} + 72$	$\frac{15000}{f} + 59 \sim \frac{15000}{f} + 72$	159 ~ 172		166 ~ 179
	AVERAGE	$\frac{15000}{f} + 60 \sim \frac{15000}{f} + 73$	1060 ~ 1073			1067 ~ 1080
R/G - X/B	HIGH SPEED	$\frac{5000}{f} + 45.5$			58	65
	NORMAL	$\frac{5000}{f} + 47$	$\frac{15000}{f} + 47$	147		154
	AVERAGE	$\frac{15000}{f} + 48$	1048			1055
L/C - D/Q/R/G	HIGH SPEED	$\frac{5000}{f} + 60.5 \sim \frac{5000}{f} + 64.5$			63 ~ 67	70 ~ 74
	NORMAL	$\frac{5000}{f} + 52 \sim \frac{5000}{f} + 55$	$\frac{15000}{f} + 52 \sim \frac{15000}{f} + 55$	152 ~ 155		159 ~ 162
	AVERAGE	$\frac{15000}{f} + 52 \sim \frac{15000}{f} + 55$	1052 ~ 1055			1059 ~ 1062
Z / Y *	HIGH SPEED	$\frac{5000}{f} + 47.5$			60	67
	NORMAL	$\frac{5000}{f} + 49$	$\frac{15000}{f} + 49$	149		156
	AVERAGE	$\frac{15000}{f} + 50$	1050			1057
R/X*	HIGH SPEED	$\frac{5000}{f} + 41.5$			54	61
	NORMAL	$\frac{5000}{f} + 41$	$\frac{15000}{f} + 41$	141		148
	AVERAGE	$\frac{15000}{f} + 43$	1043			1050
L/C*	HIGH SPEED	$\frac{15000}{f} + 44.5$			57	64
	NORMAL	$\frac{5000}{f} + 45$	$\frac{15000}{f} + 45$	145		152
	AVERAGE	$\frac{15000}{f} + 46$	1046			1053

Measurement times are typical values in ms; f : measuring frequency (Hz).

* : Measurement times for |Z|/|Y|, R/X and L/C are times at single measurements by setting an internal switch (refer to paragraph 3-139).

3-91. Test Signal Level Monitor

3-92. The 4192A can measure the actual test signal voltage (V) across the DUT or test signal current (mA) through the DUT by using TEST LEVEL MONITOR key. The measured value is displayed on the Test Parameter Data Display.

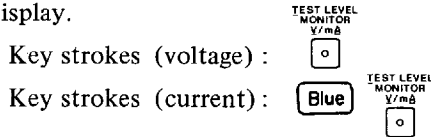

Accuracy for the test signal voltage and current is given in Table 3-20. The accuracies listed in the table are not specifications; they are typical values. The read out of test signal voltage will normally be close to the setting of the OSC LEVEL. However, when a low impedance com-

ponent (less than approximately $1k\Omega$) is connected to the UNKNOWN terminals as a DUT, the test signal voltage decreases because of internal loading. Actual test signal voltage is, thus, lower than the OSC LEVEL setting. The displayed value, nevertheless, is the correct voltage/current readout for the test signal level actually being used in the measurement.

When test cables are used in high frequency measurements, accuracy of the displayed test voltage is reduced. This is because the propagation loss in the test cables decreases the level of the test signal applied to the sample. The typical accuracies at frequencies above 1MHz, given in Table 3-20, apply only when a direct attachment type test fixture is used.

Table 3-20. Test Signal Level Monitor Accuracy

Measurement Mode	Measurement Range	Resolution	Measuring Frequency	Accuracy*
Voltage	5 mV ~ 1.1 V	1 mV	$\leq 100\text{Hz}$	$\pm ((4 + 10/f) \% \text{ of reading} + 1 \text{ mV})$
			100Hz ~ 1MHz	$\pm (4\% \text{ of reading} + 1 \text{ mV})$
			$\geq 1 \text{ MHz}$	$\pm ((4 + 0.8F) \% \text{ of reading} + 1 \text{ mV})$
Current	$1\mu\text{A} \sim 11\text{mV}$	$1\mu\text{A}$	$\leq 100\text{Hz}$	$\pm ((4 + 10/f) \% \text{ of reading} + 1 \mu\text{A})$
			100Hz ~ 1MHz	$\pm (4\% \text{ of reading} + 1 \mu\text{A})$
			$\geq 1 \text{ MHz}$	$\pm ((4 + 0.8F) \% \text{ of reading} + 1 \mu\text{A})$

* : at $23^{\circ}\text{C} \pm 5^{\circ}\text{C}$, f : measuring frequency (Hz), F : measuring frequency (MHz).

3-93. Characteristics of Test Fixtures

3-94. Characteristics and applicable measurement ranges of HP test fixtures and test leads for the 4192A are summarized in Table 3-21. To facilitate measurement and to minimize measurement errors, a test fixture appropriate for the measurement should be chosen from among HP's standard accessories. Select the test fixture or leads that have the desired performance characteristics.

Table 3-21. Typical Characteristics of Test Fixtures and Leads

Model No.	Residual Parameter Value	% of Reading Error (All Parameters)*1	Offset Value in D
16047A	/	$\pm 5 \times \left(\frac{f}{10}\right)^2 \%$	$\pm 0.02 \times \left(\frac{f}{10}\right)^2$
16047B*2		/	
16047C		$\pm 1 \times \left(\frac{f}{10}\right)^2 \%$	$\pm 0.01 \times \left(\frac{f}{10}\right)^2$
16048A		$\pm 5 \times \left(\frac{f}{10}\right)^2 \%$	$\pm 0.02 \times \left(\frac{f}{10}\right)^2$
16048B			
16048C*3	C < 5pF, L < 200nH, R < 10mΩ	/	
16034B*4	C < 0.02pF, L < 30 nH, R < 30mΩ	$\pm 5 \times \left(\frac{f}{10}\right)^2 \%$	$\pm 0.02 \times \left(\frac{f}{10}\right)^2$
16095A*5	C ≤ 15pF, L ≤ 40 nH, R ≤ 100mΩ	/	
16096A*6	C ≤ 0.01pF, L ≤ (100 + 0.5f ²) nH, R ≤ (50 + 5f ²) mΩ		
f : frequency (MHz) *1 : The incremental errors calculated from the equations in the table for measurements at frequencies above 1MHz are additive. *2 : The 16047B is useable only at frequencies below 2MHz. *3 : The 16048C is useable with C (> 1000pF) and L (> 100μH) DUT's at frequencies below 100kHz. *4 : The 16034B is useable for measurements on high impedance DUT's (Z > 50Ω). *5 : When BNC adapter is used. *6 : At BNC connector after zero offset.			

3-95. Impedance Measurement Operating Instructions

3-96. Basic operating instructions for impedance measurements are given in Figure 3-30.

(1) Turn On and Test Fixture Connection

- a. Press the LINE ON/OFF key to turn the 4192A on.
- b. Following turn on, the instrument will perform the following operations in the order listed.
 - 1 Initial operational check is performed (refer to paragraph 3-7).
 - 2 HP-IB address, set by the HP-IB control switch on rear-panel (refer to paragraph 3-117), is displayed on DISPLAY A (e.g., H-17).
 - 3 Initial control setting is performed (refer to paragraph 3-9).
- c. Confirm that 4192A trigger lamp begins to flash.
- d. Press the BLUE key and then the SELF TEST key to check the basic operation of the instrument. Refer to paragraph 3-7 for details on the SELF TEST.








Note: The 4192A requires a one hour warm up time to satisfy all specifications listed in Table 1-1.

- e. Set the CABLE LENGTH switch to the 0 position.






Note: Set the CABLE LENGTH switch to appropriate position when other test fixtures are used. Guard terminal is sometimes used in high impedance measurements.

- f. Connect the 16047A Test Fixture to the UNKNOWN terminals.

(2) Setting Measurement Conditions

- a. Select the desired DISPLAY A parameter by pressing the  or  (up-down) key. The indicator lamp adjacent to the selected parameter will come on (refer to paragraph 3-69).
- b. Select the desired DISPLAY B parameter (compatible with the DISPLAY A parameter selected in step a) by pressing the  key (refer to paragraph 3-69).
- c. Select the desired equivalent circuit mode, series () or parallel (), by pressing CIRCUIT MODE keys for selected DISPLAY A function (refer to paragraph 3-73).
- d. Select the desired ZY RANGE by pressing the  or  (up-down) key (refer to paragraph 3-71).
- e. Press SPOT FREQ key. Set the desired spot frequency (initial setting is 100kHz) with the DATA input keys (refer to paragraph 3-29) and press the appropriate ENTER key.

(Example) Spot frequency = 7.5 MHz






Key strokes :     

The spot frequency setting, 7500.000kHz, is displayed on DISPLAY C (Test Parameter Data Display).

Figure 3-30. Operating Instructions for Impedance Measurements (Sheet 1 of 3)

- f. Press the OSC LEVEL key. Set the desired measuring signal level (initial setting value is 1V) with the DATA input keys (refer to paragraph 3-24) and press the appropriate ENTER key.

(Example) OSC level = 750mV



Key strokes :     


The OSC level setting, 0.750V, is displayed on DISPLAY C.



(3) ZERO Offset Adjustments

Note: When the 16047B Test Fixture is used, close the protective cover to enable measurement. Closing the cover electrically connects the instrument's UNKNOWN terminals to the fixture; opening the cover disconnects the fixture from terminals.

- a. Insert a low impedance shorting-bar to the Test Fixture to short-circuit the UNKNOWN terminals to 0Ω (0H).
- b. Press the BLUE key and then the ZERO SHORT key. Indicator lamp will come on and R (resistance) and X (reactance) offset adjustments are automatically performed at the spot frequency displayed on DISPLAY C (refer to paragraph 3-79). CAL (calibration) is displayed on DISPLAY A and will remain until the offset adjustment is completed; a value of approximately zero will then be displayed.

Key strokes :  

- c. Remove the shorting-bar from the test fixture.
- d. Set the circuit mode to 
- e. Press the BLUE key and the ZERO OPEN key. Indicator lamp will come on and G (conductance) and B (susceptance) offset adjustments are automatically performed at the spot measuring frequency displayed on DISPLAY C (refer to paragraph 3-79). CAL (calibration) is displayed on DISPLAY A and will remain until the offset adjustment is completed; a value of approximately zero will then be displayed.

Key strokes :  

(4) Connecting a DUT (Device Under Test)

- a. Connect a DUT to Test Fixture.

Note: To accurately set the test signal level, use the TEST LEVEL MONITOR key to monitor the actual test signal level applied to the DUT (voltage or current) (refer to paragraph 3-91). If necessary, reset OSC LEVEL at step (3)-(f).

- b. The 4192A will automatically display the measured values of the DUT in accordance with the measurement conditions.


Figure 3-30. Operating Instructions for Impedance Measurements (Sheet 2 of 3)

CAUTIONS

- 1) Do not apply voltage to the L_{CUR} or L_{POT} terminals. To do so may damage the instrument.
- 2) The 4192A can be used to measure charged capacitors; however, charge voltage is limited. If the limit is exceeded, i.e., if the charge voltage is too high, the instrument may be damaged. The limit depends on whether the 4192A's internal dc bias source is ON or OFF and the capacitance of the capacitor being measured. Refer to the graph below. Also, when the bias source is ON, output voltage should be set to 0V.
- 3) When making impedance measurements on an active circuit (e.g., voltage source, battery, etc.), DO NOT allow a dc voltage exceeding ±10V to be applied to the H_{CUR} terminal. To do so may damage the instrument. Also, in these measurements, the 4192A becomes part of the load (parallel) on the dc voltage present in the circuit under test. Refer to the table below. When the dc bias voltage of the circuit is higher than ±10V, connect a 2.2μF (or less) capacitor in series with the H_{CUR} terminal to block the dc bias voltage. If a suitable capacitor is not available from conventional sources, order HP Part No.: 0160-0128; 2.2μF, 50V.

The 16095A Probe Fixture is equipped with this blocking capacitor; the 16096A, however, is not. When the 16096A is used, connect the blocking capacitor to the SHORT/EXTERNAL CAP terminals instead of the short-connector. With the blocking capacitor connected, the output impedance of the test signal source is increased and, thus, the signal level is reduced. Consequently, accurate impedance measurements on active circuits are possible only above a specified frequency for a given |Z| range. Refer to the graph below. For example, if the impedance of the DUT is 9kΩ, the 4192A automatically selects the 10kΩ range. On this range, with the 2.2μF capacitor connected, the lowest useable frequency is approximately 80Hz. At frequencies below 80Hz, accuracy of measurement results decreases. For measurements at lower frequencies, a higher value blocking capacitor must be used. To measure the 9kΩ DUT mentioned above at 10Hz, for example, a blocking capacitor of approximately 12μF must be used.

To change the value of the blocking capacitor in the 16095A, an external capacitor must be connected to the EXT CAPACITOR terminals. The value of this capacitor must be equal to the desired blocking capacitor value (determined from the graph) minus 2.2μF (the value of the blocking capacitor in the 16095A). When the value of the blocking capacitor is higher than 2.2μF, the maximum allowable dc bias voltage is ±10V. NEVER apply a dc voltage exceeding ±35V to the H_{CUR} terminal.

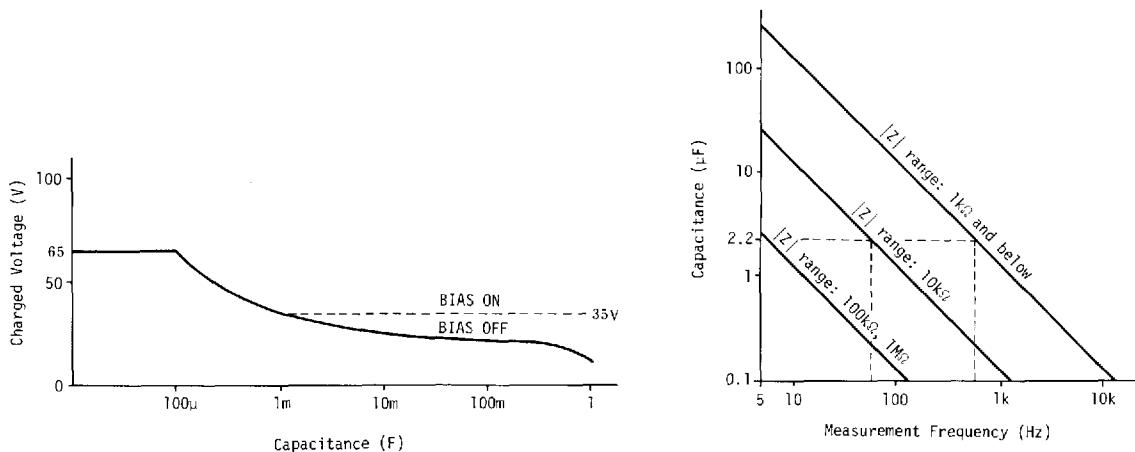

Measurement Frequency	@ < 38kHz			@ ≥ 38kHz	
	≤ 1kΩ	10kΩ	≥ 100kΩ	≤ 1kΩ	≥ 10kΩ
ZY RANGE	140Ω	980Ω	8.4kΩ	140Ω	160Ω
DC Load	140Ω	980Ω	8.4kΩ	140Ω	160Ω

Figure 3-30. Operating Instructions for Impedance Measurements (Sheet 3 of 3)

3-97. Swept Frequency Measurements

3-98. Basic operating instructions for swept-frequency impedance measurements are given in Figure 3-31.

Notes: 1. Before proceeding with the procedure given below, set the 4192A's controls as necessary for an impedance measurement. Refer to Figure 3-30.

2. The 4192A has a ZERO offset adjustment function to eliminate the residual impedance and stray admittance of the test fixture and test leads. ZERO offset adjustment should be performed at each spot (measuring) frequency. However, the 4192A calculates ZERO offset data (SHORT and OPEN) at other frequencies using the ZERO offset data taken at a particular frequency as shown in Table 3-18 and compensates measured values at other frequencies. When a swept-frequency measurement is performed, ZERO offset adjustment should be performed at the appropriate frequency in accordance with Table 3-18. In this procedure (Example START FREQ = 100kHz and STOP FREQ = 1MHz), ZERO offset adjustment (SHORT and OPEN) should be performed at 1MHz.

(1) Setting Sweep Parameters

- a. Press the START FREQ key. Set the start (lower limit) frequency (initial setting value is 5Hz) of the desired sweep frequency range with the DATA input keys (refer to paragraph 3-24) and press the appropriate ENTER key.




(Example) Start frequency = 100kHz

Key strokes :    

The start frequency setting, 100.0000kHz, is displayed on DISPLAY C (Test Parameter Data Display).

- b. Press the STOP FREQ key. Set the stop (upper limit) frequency (initial setting is 13MHz) of the desired sweep frequency range with the DATA input keys (refer to paragraph 3-24) and press the appropriate ENTER key.

(Example) Stop frequency = 1MHz




Key strokes :   

The stop frequency setting, 1000.000kHz, is displayed on DISPLAY C.

Note: The stop frequency should be higher than the start frequency. If not, error-code E-03 will be displayed on DISPLAY C when swept measurement is attempted and measurement will be not performed.

- c. Press the STEP FREQ key. Set the desired step frequency (initial setting is 1 kHz) with the DATA input keys (refer to paragraph 3-24) and press the appropriate ENTER key.

(Example) Step frequency = 1 kHz

Key strokes :   

The step frequency setting, 1.000000kHz, is displayed on DISPLAY C.

Figure 3-31. Operating Instructions for Swept-Frequency Impedance Measurements (Sheet 1 of 3)

Note: In LOG SWEEP measurement applications, STEP FREQ. has no meaning. To set the instrument to logarithmic sweep mode, press the BLUE key and the LOG SWEEP key; the indicator lamp will come on. In this mode, automatic or manual sweeps are made at twenty frequency steps per decade. Each step is calculated from the following formula:

$$F \times 10^{0.05N}$$

where F is the start frequency (5Hz, 10Hz, 100Hz, 1 kHz, 10 kHz, 100 kHz, 1MHz, or 10MHz) and N is an integer that represents the step number. For example, if the start frequency is 100 kHz and the stop frequency is 1MHz, the sweep will be as follows:

1	112.2018 kHz	6	199.5262 kHz	11	354.8133 kHz	16	630.9573 kHz
2	125.8925 kHz	7	223.8721 kHz	12	398.1071 kHz	17	707.9457 kHz
3	141.2537 kHz	8	251.1886 kHz	13	446.6835 kHz	18	794.3282 kHz
4	158.4893 kHz	9	281.8382 kHz	14	501.1872 kHz	19	891.2509 kHz
5	177.8279 kHz	10	316.2277 kHz	15	562.3413 kHz	20	1000.000 kHz

The start and stop frequencies, which determine the sweep range, are limited to decade values (10, 100 k, 10k, 100k, 1M, 10M). If, for example, the start frequency is set to 50 kHz and the stop frequency is set to 800 kHz, the instrument automatically sets the sweep range to 10 kHz to 1MHz. There are, however, two exceptions to this: (1) when the start frequency is set to a value below 10Hz and (2) when the stop frequency is set to a value above 10MHz. In such cases, the instrument automatically assumes a start frequency of 5Hz and a stop frequency of 13MHz, respectively.

(2) Manual Sweep

In manual sweeps, the sweep begins at the spot frequency and the sweep range is determined by the start and stop frequencies.

- a. Set the desired spot frequency (initial setting is 100kHz) with the DATA input keys (refer to paragraph 3-24) and press the appropriate ENTER key.

(Example) Spot frequency = 100kHz

Key strokes :
SPOT
ENTER/BIAS

KHz mV

The spot frequency, 100.0000kHz, is displayed on DISPLAY C.

- b. Press the STEP UP key or STEP DOWN key to shift the frequency one step (determined by the step frequency setting) in the indicated direction.



Notes: 1. In logarithmic sweep mode, the measurement frequency is automatically shifted to the nearest frequency that satisfies the equation $F \times 10^{0.05N} = F_m$; where F is the start frequency, F_m is the measurement frequency, and N is an integer that represents the step number.

2. If the spot frequency is higher than the stop frequency or less than the start frequency, error-cord E-04 will be displayed on DISPLAY C and the measurement will not be performed.



- c. Pressing and holding the STEP UP () key or STEP DOWN () key continuously advances swept frequency measurement.
- d. When X10 STEP key is pressed simultaneously with the STEP UP () or STEP DOWN () key, the step frequency is increased by a factor of ten. (This is for linear sweeps only.)



Figure 3-31. Operating Instructions for Swept-Frequency Impedance Measurements (Sheet 2 of 3)

(3) Auto Sweep

- a. Press MAN/AUTO key to set to auto sweep mode (indicator lamp comes on).
- b. 1 Pressing the START UP () key starts the frequency sweep from the programmed start frequency. The frequency sweep ends at the stop frequency.
- 2 Pressing the START DOWN () key starts the frequency sweep from the stop frequency. The frequency sweep ends at the start frequency.

Note: 1) Swept test frequency is displayed on DISPLAY C.
2) ZY RANGE is automatically set to AUTO when auto sweep is started.

- c. To temporarily stop a swept frequency measurement, press the PAUSE key. Start frequency, stop frequency, step frequency, sweep direction, and sweep mode (linear or logarithmic, auto or manual) can be changed when the PAUSE function is set. To restart the sweep, press the START UP () key or START DOWN () key.
- d. AUTO sweep measurement mode is automatically released when the swept measurement ends (reaches the stop frequency or start frequency). To stop the sweep before the measurement is completed, press blue key and then press the SWEEP ABORT key.



Key Strokes :  

To return to normal spot frequency measurement, press the SWEEP AUTO key (indicator lamp goes off).

- Notes:
- 1) When a swept frequency measurement is made, if the sweep comes to a frequency band which has lower frequency resolution than the STEP FREQ., this STEP FREQ. automatically changes to the higher resolution frequency, and the sweep is continued.
 - 2) When the swept frequency crosses 38kHz, an additional 50msec is required for measurement circuit stabilization.

Figure 3-31. Operating Instructions for Swept-Frequency Impedance Measurements (Sheet 3 of 3)

3-99. Swept OSC Level Measurements

3-100. The OSC level can be manually swept in 1 mVrms (5mVrms at 100mVS) steps by pressing the STEP UP  key or STEP DOWN  key. In impedance measurements, the OSC level can be swept while monitoring the actual test signal voltage across- or the current through the device under test (DUT) using the TEST LEVEL MONITOR function (refer to paragraph 3-91). Therefore, accurate test signal level characteristics of the DUT can be obtained easily.

3-101. Internal DC Bias Supply

3-102. The 4192A is equipped with an internal, programmable dc bias supply controllable from 0.00V to $\pm 35.00V$ (for impedance measurements only). This provides step bias voltage control in 10mV increments over the entire controllable range as well as providing an accurate voltage setting capability ($\pm 0.5\%$ of setting +5mV) to facilitate up-to-date use in applications requiring precision bias voltage control such as analysis of material properties and semiconductor testing. The bias can be programmed and bias parameters memorized, further enhancing utility of the internal bias supply. Operating instructions on measurements using the internal dc bias supply are provided in Figure 3-32.

Notes: 1. Before proceeding with the procedure given below, set the 4192A's controls for an impedance measurement. Refer to Figure 3-30.

2. Test frequency can be swept while using the internal dc bias set to desired (spot) voltage.

To apply a stationary (fixed) bias voltage to the sample, set the desired bias voltage using the following procedure:

- (1) Press the BLUE key and SPOT BIAS key. Set the desired spot bias voltage (initial setting is 0V) with the DATA input keys (refer to paragraph 3-29) and press the appropriate ENTER key.

(Example) Spot bias voltage = - 3.5 V

Key strokes : Blue SPOT BIAS - 3 . 5 MHz V

The spot bias voltage setting, -3.50V, is displayed on DISPLAY C (Test Parameter Data Display).

Note: The internal dc bias voltage is applied to the sample just after the bias voltage value is set by the front-panel control keys (requires no trigger signal).

WARNING


WHEN THE INTERNAL DC BIAS VOLTAGE IS APPLIED TO THE SAMPLE, THE "BIAS-ON" INDICATOR COMES ON. WHILE THE BIAS ON INDICATOR IS ON, REMEMBER THAT THE 4192A IS OUTPUTTING A DC BIAS VOLTAGE FROM THE UNKNOWN TERMINALS, EVEN IF DISPLAY C IS NOT DISPLAYING THE BIAS VOLTAGE.

- (2) Press the BLUE key and the BIAS OFF key to stop output of the internal dc bias voltage. The BIAS ON indicator lamp will go off.

Key strokes : Blue BIAS OFF 7

WARNING

WHEN A DC BIAS VOLTAGE EXCEEDING ±5V IS BEING OUTPUT AND THE BIAS OFF KEY IS PRESSED, THE BIAS ON INDICATOR LAMP GOES OFF BUT THE OUTPUT VOLTAGE DOES NOT IMMEDIATELY RETURN TO 0V. IT DECREASES LINEARLY (as shown graphically below) UNTIL IT REACHES ±5V. THE TRANSITION FROM ±5V TO 0V IS INSTANTANEOUS. THE DISCHARGE TIME IS CALCULATED AS FOLLOWS :

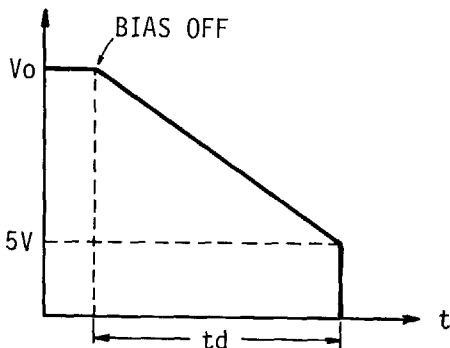

$$t_d = \frac{(|V_o| - 5) \times C_x}{I_d} \text{ (s)}$$

Where, t_d : Discharge Time (s)
 V_o : Output Voltage (V)
 C_x : DUT's Capacitance (F)
 I_d : Discharge Current (0.025A constant)

(ex.) $V_o = 35V, C_x = 1mF$

$$t_d = \frac{30 \times 0.001}{0.025} = 1.2 \text{ (s)}$$

Figure 3-32. Operating Instructions for Internal DC Bias Supply

3-103. Swept Bias Voltage Measurements

3-104. Basic operating instructions for swept-bias voltage impedance measurements are given in Figure 3-33.

Note: Before proceeding with the procedure given below, set the 4192A's controls as necessary for an impedance measurement. Refer to Figure 3-30.

(1) Setting Sweep Parameters

- a. Press the BLUE key and START BIAS key. Set the start (lower limit) voltage (initial setting is -35V) of the desired sweep bias voltage range with the DATA input keys (refer to paragraph 3-24) and press the appropriate ENTER key.


(Example) Start bias voltage = -5V

Key strokes : 

The start bias voltage setting, -5.00V , is displayed on DISPLAY C (Test Parameter Data Display).

- b. Press the BLUE key and STOP BIAS key. Set the stop (upper limit) voltage (initial setting is 35V) of the desired sweep bias voltage range with the DATA input keys (refer to paragraph 3-24) and press the appropriate ENTER key.

(Example) Stop bias voltage = 8.5V

Key strokes : 

The stop bias voltage setting, 8.50V , is displayed on DISPLAY C.

Note: The stop bias voltage should be higher than the start bias voltage. If not, error-code E-03 will be displayed on DISPLAY C when swept measurement is attempted and measurement will be not performed.

- c. Press the BLUE key and STEP BIAS key. Set the desired step bias voltage (initial setting is 1V) with the DATA input keys (refer to paragraph 3-24) and press the appropriate ENTER key.

(Example) Step bias voltage = 0.1V

Key strokes : 

The step bias voltage setting, 0.10V , is displayed on DISPLAY C.


Note: The LOG SWEEP cannot be performed for swept bias voltage measurements.

(2) Manual Sweep

In manual sweeps, the sweep begins at the spot bias voltage and the sweep range is determined by the start and stop bias voltages.



- a. Set the desired spot bias voltage (initial setting is 0V) with the DATA input keys (refer to paragraph 3-24) and press the appropriate ENTER key.

(Example) Spot bias voltage = 1V





Key strokes : 

The spot bias voltage, 1.00V , is displayed on DISPLAY C.



Figure 3-33. Operating Instructions for Swept-Bias Voltage Impedance Measurements (Sheet 1 of 2)

- b. Press the STEP UP  key or STEP DOWN  key to shift the bias voltage one step (determined by the step bias voltage setting) in the indicated direction.



Note: If the spot bias voltage is higher than the stop bias voltage or less than the start bias voltage, error-code E-04 will be displayed on DISPLAY C and the measurement will not be performed.



- c. Pressing and holding the STEP UP () key or STEP DOWN () key continuously advances swept bias voltage measurement.
- d. When X10 STEP key is pressed simultaneously with the STEP UP () or STEP DOWN () key, the step bias voltage is increased by a factor of ten. (This is for linear sweeps only.)

(3) Auto Sweep

- a. Press MAN/AUTO key to set to auto sweep mode (indicator lamp comes on).
- b. ① Pressing the START UP () key starts the bias voltage sweep from the programmed start bias voltage. The bias voltage sweep ends at the stop bias voltage.
- ② Pressing the START DOWN () key starts the bias voltage sweep from the stop bias voltage. The bias voltage sweep ends at the start bias voltage.

Note: Swept bias voltage is displayed on DISPLAY C.

- c. To temporarily stop a swept bias voltage measurement, press the PAUSE key. Start bias voltage, stop bias voltage, step bias voltage, sweep direction, and sweep mode (linear or logarithmic, auto or manual) can be changed when the PAUSE function is set. To restart the sweep, press the START UP () key or START DOWN () key.
- d. AUTO sweep measurement mode is automatically released when the swept measurement ends (reaches the stop bias voltage or start bias voltage). To stop the sweep before the measurement is completed, press BLUE key and then press the SWEEP ABORT key.

Key strokes :  

To return to normal spot bias voltage measurement, press the SWEEP AUTO key (indicator lamp goes off).

Figure 3-33. Operating Instructions for Swept-Bias Voltage Impedance Measurements (Sheet 2 of 2)

3-105. Measurement of Grounded Devices

3-106. The unique measuring circuitry of the 4192A provides direct, accurate impedance measurements of not only floated and but also grounded devices. Such measurement conditions are, for example, the distributed capacitance measurement of a coaxial cable with a grounded shield conductor or the input/output impedance measurement of a single ended amplifier. Low grounded measurement accuracy is unspecified, but typical measurement accuracy is provided in Table 1-21.

3-107. External DC Bias

3-108. The special biasing circuits and procedures for using external voltage or current bias, as needed for capacitance or inductance measurements, are provided in Figure 3-34. The figure shows sample circuits appropriate for 4192A applications. The biasing circuits prevent dc current from flowing into the 4192A, as dc current increases the measurement error and because the excess current may damage instrument. When applying a dc voltage to capacitors, be sure the applied voltage does not exceed the maximum specified voltage of the capacitor and that the capacitor is connected with correct polarity.

(1) External DC Bias Voltage ($\leq 200\text{ V}$)

- a. Press the LINE ON/OFF key to turn the 4192A off.
- b. Connect the external dc bias source to the 4192A as shown in the figure below:

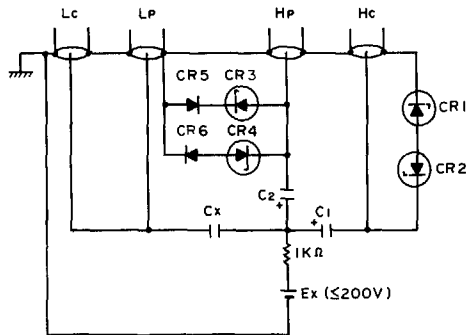


Figure A. Floating Measurement

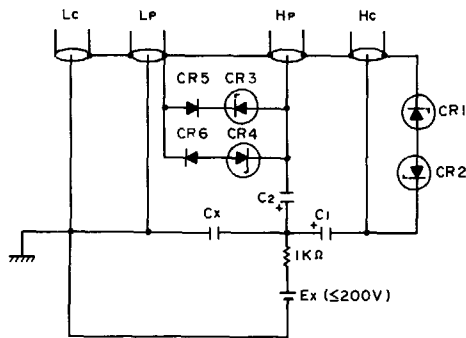


Figure B. Low-grounded Measurement

- where C_x : Sample capacitor
 Ex : External dc bias voltage ($\leq 200\text{ V}$)
 C_1 : Blocking capacitor
 Capacitance Value :

$$C_1 \geq \frac{1}{10\pi \cdot f}$$
 (f : measuring frequency (Hz))
 DC Withstand Voltage : $> Ex$.
 C_2 : Blocking capacitor
 Capacitance Value : $1\mu\text{F}$
 DC Withstand Voltage : $> Ex$.

- CR_1, CR_2 : HP Part No. : 1902-0176
 Diode-Zener, 47V5%, 1W
 CR_3, CR_4 : HP Part No. : 1902-1299
 Diode-Zener, 33V5%, 1W
 CR_5, CR_6 : HP Part No. : 1901-0646
 Diode-Zener, 3.3V5%, 1W

- Cautions:**
1. Never apply an external dc bias voltage of over 200V and never connect the H_{POT} terminal to the L_{CUR} or L_{POT} terminal. To do so may damage instrument. Make sure that the sample capacitor is not defective.
 2. When a positive bias voltage is used, positive poles of electrolytic capacitors (C_x , C_1 , and C_2) must be connected to the positive (+) terminal of the external dc bias source as shown in the figures above. A negative bias voltage can also be applied. In this arrangement, the negative poles of C_x , C_1 , and C_2 must be connected to the negative (-) terminal of the external dc bias source.

Note: Ripple or noise on external dc bias source should be as low as possible.

- c. Set the 4192A's controls as necessary for an impedance measurement. Refer to Figure 3-30, but following settings should be made.

DISPLAY A Function C
 BIAS OFF
 CIRCUIT MODE

- d. Apply desired dc bias voltage to the sample capacitor with the external dc bias source.
- e. Read the capacitance value — on DISPLAY A — after allowing time for bias voltage to settle.

Figure 3-34. External DC Voltage Supply (Sheet 1 of 2)

(2) External DC Bias Current

- a. Press the LINE ON/OFF key to turn the 4192A off.
- b. Connect the external dc bias source to the 4192A as shown in the figure below:

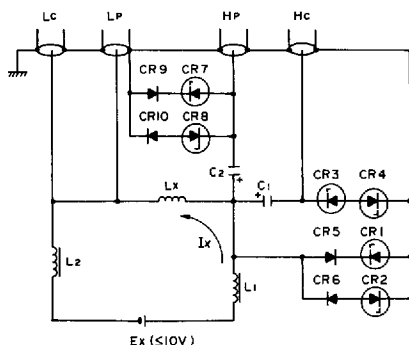


Figure C. Floating Measurement

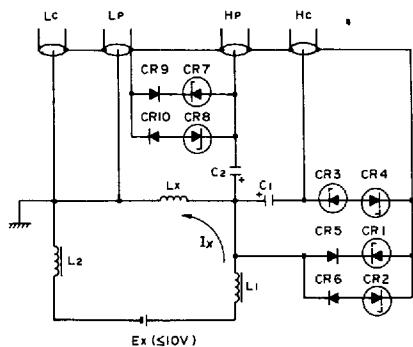


Figure D. Low-grounded Measurement

where L_x : Sample inductor
 L_1 : $(50 \sim 250) \times L_x$
 L_2 : $\approx L_1$
 E_x : External dc bias voltage ($\leq 10V$)
 I_x : External dc bias current
 Current Value:

$$I_x = \frac{E_x}{\text{Output Resistance of } E_x + \text{ESR of } L_1 + \text{ESR of } L_2}$$

C_1 : Blocking capacitor

Capacitance Value :

$$C_1 \geq \frac{1}{10\pi \cdot f} \text{ (f : measuring frequency (Hz))}$$

DC Withstand Voltage : $> E_x$.

C_2 : Blocking capacitor

Capacitance Value : $1\mu F$

DC Withstand Voltage : $> E_x$.

CR_1, CR_2 : HP Part No. : 1902-0202

Diode-Zener, 15V5%, 1W

CR_3, CR_4 : HP Part No. : 1902-0176

Diode-Zener, 47V5%, 1W

CR_5, CR_6 : HP Part No. : 1901-0646

Diode-Power, 200V, 1A

CR_7, CR_8 : HP Part No. : 1902-1299

Diode Zener, 3.3V5%, 1W

CR_9, CR_{10} : HP Part No. : 1901-0646

Diode-Power, 200V, 1A

CAUTION

NEVER apply an external dc bias current of over 1A and **NEVER** remove the DUT when a dc current of over 25mA is flowing. To do so may damage the instrument.

- c. Set the 4192A's controls as necessary for an impedance measurement. Refer to Figure 3-30, but following settings should be made.

DISPLAY A Function L

BIAS OFF

- d. Apply desired dc bias current to the sample inductor with external dc bias source.
- e. Read the inductance value – on DISPLAY A – after allowing time for bias voltage to settle.

Figure 3-34. External DC Voltage Supply (Sheet 2 of 2)

3-109. HP-IB INTERFACE

3-110. The 4192A can be remotely controlled via the HP-IB, a carefully defined instrument interface which simplifies integration of instruments and a calculator or computer into a system.

Note: HP-IB is Hewlett-Packard's implementation of IEEE Std. 488, Standard Digital Interface for Programmable Instrumentation.

3-111. Connection to HP-IB

3-112. The 4192A can be connected into an HP-IB bus configuration with or without a controller (i.e., with or without an HP calculator). In an HP-IB system without a controller, the instrument functions as a "talk only" device (refer to paragraph 3-117.)

3-113. HP-IB Status Indicators

3-114. The HP-IB Status Indicators are four LED lamps located on the front panel. When lit, these lamps show the existing status of the 4192A in the HP-IB system as follows:

- SRQ: SRQ signal from the 4192A to the controller is on the HP-IB line. Refer to paragraph 3-127.
- LISTEN: The 4192A is set to listener.
- TALK: The 4192A is set to talker.
- REMOTE: The 4192A is remotely controlled.

3-115. LOCAL Key

3-116. The LOCAL key releases the 4192A from HP-IB remote control and allows measurement conditions to be set from the front-panel. The REMOTE lamp will go off when this key is pressed. LOCAL control is not available when the 4192A is set to "local lockout" status by the controller.

3-117. HP-IB Control Switch

3-118. The HP-IB Control Switch, located on the rear panel, has seven bit switches as shown in Figure 3-35. Each bit switch has two settings: logical 0 (down position) and logical 1 (up position).

The left-most bit switch, bit 7, determines whether the instrument will be addressed by the controller in a multi-device system, or will function as a "talk only" device to output measurement data and/or instructions to an external "listener" e.g., printer. When bit switch

7 is set to 0, the instrument is in ADDRESSABLE mode and bit switches 1 through 5 determine the instrument address; when this bit switch is set to 1, the instrument is in TALK ONLY mode.

Bit switch 6 determines the output data delimiter. When this bit switch is set to 0, the delimiter is a comma (,); when set to 1, the delimiter is a carriage return and line feed (CR/LF). Refer to Figure 3-36 for the function of each delimiter.

Bit switches 1 through 5 are used to set the HP-IB address, in binary, of the 4192A when bit switch 7 is set to ADDRESSABLE.

Note: The HP-IB Control Switch, as set at the factory, is shown in Figure 3-35.

When the 4192A is turned on, the HP-IB address is displayed, in decimal, on DISPLAY A. For example, the factory-set address is displayed as "H-17".

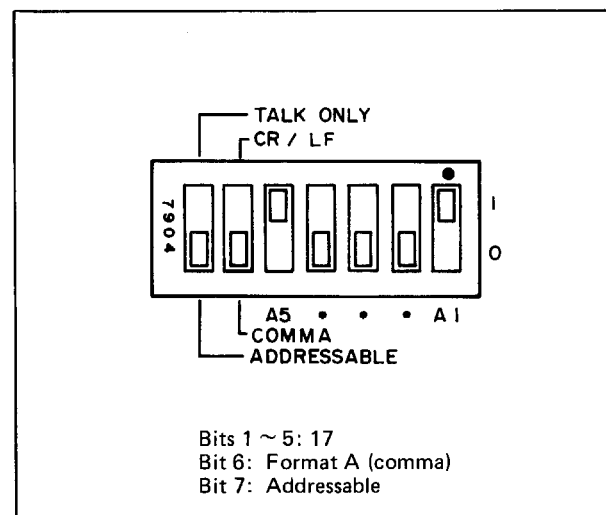


Figure 3-35. HP-IB Control Switch

3-119. HP-IB Interface Capabilities

3-120. The 4192A has eight HP-IB interface functions, as listed in Table 3-22.

3-121. Remote Program Code

3-122. Remote program codes for the 4192A are listed in Table 3-23.

Table 3-22. HP-IB Interface Capabilities

Code	Interface Function* (HP-IB Capabilities)
SH1**	Source Handshake
AH1	Acceptor Handshake
T5	Talker (basic talker, serial poll, talk only mode, unaddress to talk if addressed to listen)
L4	Listener (basic listener, unaddress to listen if addressed to talk)
SR1	Service Request
RL1	Remote/local (with local lockout)
DC1	Device Clear
DT1	Device Trigger

* Interface functions provide the means for a device to receive, process, and transmit messages over the bus.

** The suffix number of the interface code indicates the limitation of the function capability as defined in Appendix C of IEEE Std. 488.

Table 3-23. Remote Program Code (Sheet 1 of 3)

Item	Control	Program Code	Description																																
Deviation Measurement for DISPLAY A	OFF Δ Δ%	AN* ¹ AD AP																																	
Deviation Measurement for DISPLAY B	OFF Δ Δ%	BN* ¹ BD BP																																	
DISPLAY A Function	Z / Y R/G L C B-A (dB) A (dBm/dBV) B (dBm/dBV)	A1* ¹ A2 A3 A4 A5 A6 A7	Combinations of A and B are listed in the table below: <table border="1" style="margin: 10px auto;"> <thead> <tr> <th>A \ B</th> <th>1</th> <th>2</th> <th>3</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>$Z / Y - \theta$ (deg)</td> <td>$Z / Y - \theta$ (rad)</td> <td></td> </tr> <tr> <td>2</td> <td colspan="3" style="text-align: center;">R/G - X/B*</td> </tr> <tr> <td>3</td> <td>L - Q</td> <td>L - D</td> <td>L - R/G</td> </tr> <tr> <td>4</td> <td>C - Q</td> <td>C - D</td> <td>C - R/G</td> </tr> <tr> <td>5</td> <td>B - A (dB) - GROUP DELAY</td> <td>B - A (dB) - θ (deg)</td> <td>B - A (dB) - θ (rad)</td> </tr> <tr> <td>6</td> <td colspan="3" style="text-align: center;">A (dBm/dBV) *</td> </tr> <tr> <td>7</td> <td colspan="3" style="text-align: center;">B (dBm/dBV) *</td> </tr> </tbody> </table>	A \ B	1	2	3	1	$ Z / Y - \theta$ (deg)	$ Z / Y - \theta$ (rad)		2	R/G - X/B*			3	L - Q	L - D	L - R/G	4	C - Q	C - D	C - R/G	5	B - A (dB) - GROUP DELAY	B - A (dB) - θ (deg)	B - A (dB) - θ (rad)	6	A (dBm/dBV) *			7	B (dBm/dBV) *		
A \ B	1	2		3																															
1	$ Z / Y - \theta$ (deg)	$ Z / Y - \theta$ (rad)																																	
2	R/G - X/B*																																		
3	L - Q	L - D	L - R/G																																
4	C - Q	C - D	C - R/G																																
5	B - A (dB) - GROUP DELAY	B - A (dB) - θ (deg)	B - A (dB) - θ (rad)																																
6	A (dBm/dBV) *																																		
7	B (dBm/dBV) *																																		
DISPLAY B Function	θ (deg) θ (rad) X/B Q D R/G GROUP DELAY θ (deg) θ (rad)	B1* ¹ B2 B1 ~ B3 B1 B2 B3 B1 B2 B3																																	

* Program code for DISPLAY B IS not necessary.

Table 3-23. Remote Program Code (Sheet 2 of 3)

Item	Control	Program Code	Description
Recall Parameter	SPOT FREQ. STEP FREQ. START FREQ. STOP FREQ. SPOT BIAS STEP BIAS START BIAS STOP BIAS OSC LEVEL REF A REF B	FRR* ¹ SFR TFR PFR BIR SBR TBR PBR OLR RAR RBR	
TEST LEVEL MONITOR* ²	V mA	TV TA	
Key Status Save (Memory)	SAVE 0 SAVE 1 SAVE 2 SAVE 3 SAVE 4	SA0 SA1 SA2 SA3 SA4	
Saved Key Status Recall	RCL 0 RCL 1 RCL 2 RCL 3 RCL 4	RC0 RC1 RC2 RC3 RC4	
DC BIAS* ²	OFF	I0* ¹	
ZERO OPEN* ²	OFF ON	ZO0* ¹ ZO1	
ZERO SHORT* ²	OFF ON	ZS0* ¹ ZS1	
AVERAGE	OFF ON	V0* ¹ V1	
HIGH SPEED	OFF ON	H0* ¹ H1	
SELF TEST	ON	S1	
X-Y RECORDER	OFF ON Lower Left Upper Right	X0* ¹ X1 LL UR	“LL” and “UR” cannot be used when the X-Y Recorder function is set to ON (X1).

Table 3-23. Remote Program Code (Sheet 3 of 3)

Item	Control ¹	Program Code	Description
STORE DISPLAY A/B		SD	
LOG SWEEP	OFF ON	G0 ^{*1} G1	
SWEEP ABORT		AB	
SWEEP	MANUAL AUTO	W0 ^{*1} W1	
MANUAL SWEEP	STEP UP STEP DOWN	W2 W4	W2 and W4 act as STEP UP and STEP DOWN when the SWEEP mode is set to MANUAL (W0).
AUTO SWEEP	START UP PAUSE START DOWN	W2 W3 W4	W2 and W4 act as START UP and START DOWN when the SWEEP mode is set to AUTO (W1).
CIRCUIT MODE ^{*2}	AUTO Series Parallel	C1 ^{*1} C2 C3	
GAIN MODE	dBm dBV	N1 N2	These programming codes cannot be used when DISPLAY A function is set to A1, A2, A3, or A4.
ZY RANGE ^{*2}	1Ω/10S 10Ω/1S 100Ω/100mS 1kΩ/10mS 10kΩ/1mS 100kΩ/100μS 1MΩ/10μS AUTO	R1 R2 R3 R4 R5 R6 R7 R8 ^{*1}	Remote programming code R1 cannot be used with some SPOT FREQ/OSC LEVEL settings.
TRIGGER	INT EXT HOLD/MANUAL	T1 ^{*1} T2 T3	These code only set the TRIGGER mode; they do not trigger the instrument.
Data Ready	OFF ON	D0 ^{*1} D1	If Data Ready is set to ON, an SRQ signal is output when the measurement is completed.
Output Data Format	Displays A/B Displays A/B/C	F0 ^{*1} F1	Refer to paragraph 3-125 and Figure 3-36.
Execute		EX	This code is used to trigger the instrument.
<p>*1 : Default code. *2 : These programming codes cannot be used when DISPLAY A function is set to A5, A6, or A7.</p>			

3-123. Parameter Setting

3-124. The 4192A can be set to eleven parameters (refer to Table 3-24) by remote programming as follows:

$$\frac{XX \pm NNNN.NNNNEN}{(1) \quad (2) \quad (3)}$$

- (1) Program code for parameter setting (refer to Table 3-24).
- (2) Setting value (numeric or space). 8 digits, lesser digits are ignored.
- (3) Enter. Unit is kHz for SPOT FREQ, START FREQ, STEP FREQ, and STOP FREQ; V for SPOT BIAS, STEP BIAS, STOP BIAS, and OSC LEVEL. (REF A, REF B).

3-125. Data Output

3-126. The 4192A outputs measurement and status data to external devices in bit parallel, byte serial format via the eight DIO signal lines of the HP-IB. These data include status data, key status (function) data, deviation measurement mode data, and measurement data (including range) for DISPLAY A and DISPLAY B. When program code "F1" is used, DISPLAY C data (unit and value) are output with DISPLAY A and DISPLAY B data. The output format is shown in Figure 3-36. All characters are coded in accordance with ASCII coding conventions. To output DISPLAY A/B/C data without an HP-IB controller, internal Control Switch (A6S2 bit 4) must be set to 1. Refer to paragraph 3-139 and Table 3-28.

Table 3-24. Program Codes for Parameter Setting

Parameters	Program Code	Setting Value
SPOT FREQ	FR	Setting Range: 0.005000kHz ~ 13000.000kHz. Resolution: 0.000001 kHz (0.005000kHz ~ 9.999999kHz), 0.00001 kHz (10.00000kHz ~ 99.99999kHz), 0.0001 kHz (100.0000kHz ~ 999.9999kHz), 0.001 kHz (1000.000kHz ~ 13000.000kHz).
START FREQ	TF	
STOP FREQ	PF	
STEP FREQ	SF	Setting Range: 0.000001 kHz ~ 13000.000kHz. Resolution: 0.000001 kHz (0.000001 kHz ~ 9.999999kHz), 0.00001 kHz (10.00000kHz ~ 99.99999kHz), 0.0001 kHz (100.0000kHz ~ 999.9999kHz), 0.001 kHz (1000.000kHz ~ 13000.000kHz).
SPOT BIAS	BI	Setting Range: -35.00V ~ +35.00V Resolution: 0.01 V
START BIAS	TB	
STOP BIAS	PB	
STEP BIAS	SB	Setting Range: 0.01 V ~ 35.00 V Resolution: 0.01 V
OSC LEVEL	OL	Setting Range: 0.005 V ~ 1.100 V Resolution: 0.001 V (0.005 V ~ 0.100 V), 0.005 V (0.100 V ~ 1.100 V).
REF A REF B	RA RB	Setting Range: -19999 ~ +19999. Resolution: The position of the decimal point depends on the value displayed on the corresponding display. For example, if the value displayed on DISPLAY A is 1.9999, any value between 0.0001 and 1.9999 can be entered as the REF A (RA) value.

① DISPLAY A/B (Default mode or set using HP-IB remote program code "F0")
 $\underline{X\ X\ X\ X} \pm \underline{N\ N\ N} . \underline{N\ N\ E} \pm \underline{N\ N} , \underline{X\ X\ X\ X} \pm \underline{N\ N\ N} . \underline{N\ N\ E} \pm \underline{N\ N}$ CR LF
 (1) (2) (3) (4) (5) (6)(7) (8) (9) (10) (11) (12)

② DISPLAY A/B/C (Set using HP-IB remote program code "F1")
 $\underline{X\ X\ X\ X} \pm \underline{N\ N\ N} . \underline{N\ N\ E} \pm \underline{N\ N} , \underline{X\ X\ X\ X} \pm \underline{N\ N\ N} . \underline{N\ N\ E} \pm \underline{N\ N} , \underline{X} \pm \underline{N\ N\ N\ N\ N\ N} . \underline{N\ N\ N}$ CR LF
 (1) (2) (3) (4) (5) (6)(7) (8) (9) (10) (11) (6)(13) (14) (12)

(1) Status of DISPLAY A
 (2) Function of DISPLAY A
 (3) Deviation measurement mode of DISPLAY A
 (4) Value of DISPLAY A (position of decimal point is coincident with display)
 (5) Unit of DISPLAY A
 (6) Comma (data delimiter)
 (7) Status of DISPLAY B
 (8) Function of DISPLAY B
 (9) Deviation measurement mode of DISPLAY B
 (10) Value of DISPLAY B (position of decimal point is coincident with display)
 (11) Unit of DISPLAY B
 (12) Data Terminator
 (13) Unit of DISPLAY C (Test Parameter Data Display)
 (14) Value of DISPLAY C

Notes: 1. The data delimiter, bit switch 6 on the HP-IB Control Switch (Figure 3-30), is set at the factory to comma (.). This causes the 4192A to output all data (DISPLAY A data, DISPLAY B data, and, if program code F1 is used, DISPLAY C data) as a continuous string. When the data delimiter is set to CR/LF, a carriage return and line feed signal is output after each field. This is useful when outputting data to certain peripherals, such as a printer.





2. Status, function, and deviation measurement mode data of DISPLAY A and DISPLAY B, and the units of DISPLAY C are output as one or two alphabetic characters, as listed in Table 3-25.

3. Ranges of DISPLAY A and DISPLAY B are expressed as an exponent as follows:

10 ⁻¹² (p)	E-12
10 ⁻⁹ (n)	E-09
10 ⁻⁶ (μ)	E-06
10 ⁻³ (m)	E-03
10 ⁰	E+00
10 ³ (k)	E+03
10 ⁶ (M)	E+06

Figure 3-36. Data Output Format for the 4192A

Table 3-25. Data Output Codes

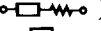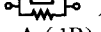Item	Information	Code
Data Status of DISPLAY A/B	Normal Overflow Uncalibration	N O U
Function of DISPLAY A	Z Y R G L () L () C () C () B - A (dB) A (dBV) B (dBV) A (dBm) B (dBm)	ZF YF RF GF LS LP CS CP BA AV BV AM BM
Deviation Measurement Mode of DISPLAY A/B	Normal Measurement Deviation Measurement Deviation Measurement in Percent	N D P
Function of DISPLAY B	θ (deg) θ (rad) X B Q D R G GROUP DELAY Unmeasure	TD TR XF BF QF DF RF GF GD UM
Unit of DISPLAY C	kHz V mA Reference Data	K V M R

3-127. Service Request Status Byte

3-128. The 4192A outputs an RQS (Request Service) signal whenever bit 1, 2, 3, 4, or 6 of Service Request Status Byte is set. The make-up of the Status Byte is shown in Figure 3-37.

Bit	8	7	6	5	4	3	2	1
Information	0	0/1	0/1	0/1	0/1	0/1	0/1	0/1

Bit 7 (RQS) indicates whether or not a service request exists. Bit 8 is always zero (0). Bits 1 thru 4 and 6 identify the type of service request. Following are the service request states of the 4192A.

Bit 1: ① If Data Ready is set to ON, this bit is set when measurement data is provided.

② If Self Test is set to ON, this bit is set when the instrument passes the Self Test.

Bit 2: This bit is set when the 4192A receives an erroneous remote program code.

Bit 3: This bit is set when the 4192A receives an illegal front-panel control setting via the program.

Bit 4: This bit is set when the 4192A receives a trigger signal before the last measurement is completed.

Bit 6: ① This bit is set when the 4192A has a hardware error.

② If Self Test is set to ON, this bit is set when the instrument fails the Self Test.

Bit 5 is independent of bit 7 (RQS signal). This bit is set when auto sweep measurement, self test, or zero offset adjustment is being performed and is reset when the next trigger comes.

Figure 3-37. Status Byte for the 4192A

3-129. Programming Guide for 4192A

3-130. Sample programs for HP Model 9825A/9835A Desktop Computers are provided in Figures 3-38 and 3-39. These programs are listed in Table 3-26.

Notes:

1. Specific information for HP-IB programming with the 9825A or 9835A are provided in the 9825A or 9835A programming manual.

2. Equipment required for these sample programs includes:

- 4192A LF Impedance Analyzer
- 98034A HP-IB Interface Card
- 9825A Desktop Computer with 98210A String-Advanced Programming ROM 98213A General I/O + Extended I/O ROM.
- or
- 9835A Desktop Computer with 98332A General I/O ROM

Table 3-26. Sample Program using 9825A/9835A

Sample Program	Figure	Description
1	3-38	Remote control and data output in spot measurement.
2	3-39	Remote control and data output in auto sweep measurement.

Sample Program 1

Description:

This program is a remote control, data output program for spot measurements.
The program has three capabilities:

- (1) Control of the 4192A via HP-IB
- (2) Trigger of the 4192A via HP-IB
- (3) Data output from the 4192A in spot measurement via HP-IB

9825A Program

```

0: flt4
1: wrt717, "A1B1T3 F1"
      (1) (2) (3)
2: wrt717, "FR10EN"
      (4) (5)
3: wrt717, "EX"
      (6)
4: red717, A, B, C
5: dspA, B, C
6: prtA, B, C
7: end
    
```

9835A Program

```

10 FLOAT4
20 OUTPUT717; "A1B1T3 F1"
      (1) (2) (3)
30 OUTPUT717; "FR10EN"
      (4) (5)
40 OUTPUT717; "EX"
      (6)
50 ENTER717; A, B, C
60 DISP A, B, C
70 PRINT A, B, C
80 END
    
```

- (1) Select Code of 98034A.
- (2) Address of 4192A.
- (3) Program codes of the 4192A (refer to Table 3-23).
- (4) Program codes for parameter setting of the 4192A (refer to Table 3-24).
- (5) Parameter terminator of the 4192A (refer to paragraph 3-123).
- (6) This is equivalent to

```

9825A: trg717
9835A: TRIGGER717
    
```

By using string variables, complete output information from the 4192A is stored by the following programs:

9825A Program:

```

0: clr 717
1: dimA$[50]
2: wrt717, "A1B1T3 F1"
3: wrt717, "FR10EN"
4: wrt717, "EX"
5: red717, A$
6: dspA$
7: prtA$
8: end
    
```

9835A Program:

```

5 CLEAR 717
10 DIMA$[50]
20 OUTPUT717; "A1B1T3 F1"
30 OUTPUT717; "FR10EN"
40 OUTPUT717; "EX"
50 ENTER717; A$
60 DISP A$
70 PRINT A$
80 END
    
```

Figure 3-38. Sample Program 1 Using 9825A/9835A

Sample Program 2

Description:

This program is a remote control, data output program for auto sweep measurements.

The program has three capabilities:

- (1) Control of auto sweep measurement of the 4192A via HP-IB
- (2) Auto sweep of the 4192A via HP-IB
- (3) Data output from the 4192A via HP-IB

9825A Program:

```

0 : dimA$(100,50)
      (1)
1 : wrt 717, "A1BIT3 F1"
2 : wrt 717, "SF1ENTF1ENPF100EN"
3 : wrt 717, "W1 W 2 "
4 : 0 → I
5 : I+1 → I
6 : wrt 717, "EX"
7 : rds (717) → A
      (2)
8 : if bit (4, A) ≠ 1; gto 12
      (3)
9 : red 717, A$(I)
10 : dsp A$(I)
11 : gto 5
12 : end

```

9835A Program:

```

10 DIMA$(100) [50]
      (1)
20 OUTPUT 717; "A1BIT3 F1"
30 OUTPUT 717; "SF1ENTF1ENPF100EN"
40 OUTPUT 717; "W1 W 2 "
50 I=0
60 I=I+1
70 OUTPUT 717; "EX"
80 STATUS717; A
      (2)
90 IF BIT (A, 4) ≠ 1 THEN 130
      (3)
100 ENTER 717; A$(I)
110 DISP A$(I)
120 GOTO 60
130 END

```

- (1) Dimensions a string variable array that has more elements than the number of measurement points.
- (2) Inputs 4192A SRQ Status Byte to variable A.
- (3) When AUTO SWEEP is being performed, bit 4 of variable A (bit 5 of the SRQ Status Byte) is set to "1" (refer to Figure 3-37).

Note: If the 9835A program is used with high speed controller, wait command should be put between lines 70 and 80.

Figure 3-39. Sample Program 2 Using 9825A/9835A

3-131. X-Y RECORDER OUTPUT

3-132. The 4192A is equipped with three analog RECORDER OUTPUT connectors on the rear-panel. These connectors output accurate voltages for recording measured sample values as functions of frequency or bias. A PEN LIFT connector is also provided on the rear-panel to control the X-Y recorder's pen. The procedures for using the 4192A's X-Y recorder capability are given in Figure 3-40.

3-133. Analog Outputs

3-134. The analog output voltage of DISPLAY A, DISPLAY B, and FREQ/BIAS are provided in the following manner. The output accuracy is $\pm 0.5\%$ of output voltage $+20\text{mV}$.

- (1) DISPLAY A connector
 Outputs voltage proportional to the value displayed on DISPLAY A. Normalized value is 1V (depends on function as follows):
 - ① Z, Y, R and G : (Full Scale Value of Display Range) $\times 1.3$
 - ② L and C : (Full Scale Value of Display Range) $\times 2.0$
 - ③ B - A, A and B : 100dB
 - ④ $\Delta\%$: 100%
 - ⑤ Δ : Full Scale Value of Setting Function Range
- (2) DISPLAY B connector
 Outputs voltage proportional to the value displayed on DISPLAY B. Normalized value is 1V (depends of function as follows):
 - ① θ (deg) : 180°
 - ② θ (rad) : π
 - ③ X and B : (Full Scale Value of Display Range) $\times 1.3$
 - ④ D, Q, R, G and GROUP DELAY : (Full Scale Value of Display Range) $\times 2.0$
 - ⑤ $\Delta\%$: 100%
 - ⑥ Δ : Full Scale Value of Setting Function Range

Note: When OF1, OF2, UCL, or - - - is displayed on DISPLAY A or DISPLAY B, 1V is output from the corresponding RECORDER OUTPUT connector on the rear-panel.

- (3) FREQ/BIAS connector
 Outputs voltage proportional to the test frequency or internal dc bias voltage and normalized by following equations (1Vmax):

- ① Bias Voltage:

$$\frac{\text{SPOT BIAS} - \text{START BIAS}}{\text{STOP BIAS} - \text{START BIAS}}$$

- ② Measuring Frequency (Linear Sweep):

$$\frac{\text{SPOT FREQ} - \text{START FREQ}}{\text{STOP FREQ} - \text{START FREQ}}$$

- ③ Measuring Frequency (Logarithmic Sweep):

$$\frac{1 \log (\text{SPOT FREQ} - 10^m - 1)}{1 \log (10^n - 10^m - 1)}$$

$$\text{where } 10^{m-1} \leq \text{START FREQ} < 10^m, \\ 10^{n-1} \leq \text{STOP FREQ} < 10^n.$$

Notes:

1. When the parameter displayed on the Test Parameter Data Display is not the measuring frequency or internal dc bias voltage, the output voltage from the FREQ/BIAS connector does not change.
2. Figure 3-41 shows the plot areas for all parameter settings of DISPLAY A, DISPLAY B and FREQ/BIAS connectors.

3-135. Control Capabilities for Analog Output

3-136. The X-Y RECORDER OUTPUTS function of the 4192A provides the following control capabilities to plot the characteristics curve of the sample easily, quickly and clearly.

- (1) Control of Pen Position on the X-Y Recorder
 Zero adjustment and sensitivity adjustment of the X-Y recorder can be performed using the following control keys on the front-panel of the 4192A.
 - ① $\downarrow \leftarrow$ LL : DISPLAY A, DISPLAY B and FREQ/BIAS connectors output 0V.
 - ② UR $\rightarrow \uparrow$: DISPLAY A, DISPLAY B and FREQ/BIAS connectors output 1V.

Notes:

1. The X-Y RECORDER ON/OFF key should be set to OFF (indicator lamp off) when the X-Y recorder zero adjustment or sensitivity adjustment is performed. In this case, $\downarrow\leftarrow LL$ is set automatically.
2. Figure 3-41 shows the positions of $\downarrow\leftarrow LL$ and $UR \rightarrow\uparrow$ in the plot areas for all parameter settings of DISPLAY A, DISPLAY B, and FREQ/BIAS connectors.

(2) Control Signals for X-Y Recorder Pen Lift TTL Controls

When the X-Y recorder is equipped with pen lift TTL controls, pen lift can be done automatically by the TTL level output from the PEN lift connector on the 4192A's rear-panel. When the pen lift signal is LOW (TTL), the X-Y recorder pen is down. When the pen lift signal is HIGH (TTL), the X-Y recorder pen is up.

Note: When the SWEEP ABORT, $\downarrow\leftarrow LL$ or $UR \rightarrow\uparrow$ key is pressed, the X-Y recorder pen is up.

(3) Interpolation

The X-Y recorder function of the 4192A provides automatic interpolation of all three RECORDER OUTPUTS to ensure distortion free, accurate plots on the X-Y recorder. Maximum interpolation time, the time required for the three RECORDER OUTPUTS to go from 0V ($\downarrow\leftarrow LL$) to 1V ($UR \rightarrow\uparrow$), is approximately 30 seconds.

Note: Interpolation is performed for all three RECORDER OUTPUTS, even though only two are connected to the X-Y recorder. Actual interpolation time is determined by the largest change among the three outputs. Consequently, if the unconnected RECORDER OUTPUT has the largest change, interpolation time is determined by this RECORDER OUTPUT, not the other two, whose change may be very small.

EQUIPMENT:

- X-Y Recorder HP7046A
- BNC (Male) – Dual Banana Plug Cable HP11001A (3 ea.)

PROCEDURE:

- (1) Turn the 4192A and X-Y recorder off.
- (2) Connect the X-axis connector and Y-axis connector (Y1-axis and Y2-axis for two-pen X-Y recorders) of the X-Y recorder to the appropriate RECORDER OUTPUT connectors on the 4192A rear-panel with the BNC (Male) – Dual Banana Plug Cable. Refer to Table 3-27 for cabling method of the RECORDER OUTPUTS.
- (3) When X-Y recorder is provided with pen lift TTL controls, connect PEN LIFT connector on the 4192A rear-panel to the X-Y recorder connector.
- (4) Set the 4192A's controls for the desired swept measurement in accordance with the procedures given in the following figures:
 - Figure 3-11. Operating Instructions for Swept-frequency Amplitude-phase Measurements
 - Figure 3-31. Operating Instructions for Swept-frequency Impedance Measurement
 - Figure 3-33. Operating Instructions for Swept-bias Voltage Impedance Measurement
- (5) Turn the 4192A and X-Y recorder on.
- (6) Place recording paper on X-Y recorder platen and set the paper hold down function (if provided).

Figure 3-40. X-Y Recorder Output (Sheet 1 of 2)

- (7) Confirm that the 4192A X-Y RECORDER OUTPUT function is set to off (X-Y RECORDER ON/OFF indicator on the front-panel should be off). If it is set to on (indicator lamp on), turn it off by pressing the BLUE key and X-Y RECORDER ON/OFF key.
- (8) Select the appropriate plot area for parameters to be recorded from illustrations in Figure 3-41 (refer to Table 3-27).
- (9) Press the BLUE key and the LL key on the front-Panel of the 4192A.
- (10) Adjust X-Y recorder zero adjustment controls for X and Y channels so that the recorder pen is positioned just above the chart paper coordinates denoted by the black spot () in the illustration.
- (11) Press the BLUE key and the UR key on the front-panel of the 4192A.
- (12) Adjust the X-Y recorder controls for the X and Y channels so the the recorder pen is positioned just above the chart paper coordinates denoted by circle (A) in the illustration.

Note: X-Y recorder zero adjustment and sensitivity adjustment may be interactive. So, repeat steps (9) (12) to satisfy both adjustments.
- (13) Perform an auto sweep measurement with the X-Y RECORDER OUTPUT function off. Note the frequency (or bias voltage) at which the measured value displayed on DISPLAY A is highest.

Note: Step (13) is not necessary when making a manual sweep.
- (14) Set the SPOT FREQ (or SPOT BIAS) to the value noted in step (13). (For manual sweep, set the SPOT value to the START value.)

Note: Steps (13) and (14) insure that the DISPLAY A X-Y RECORDER OUTPUT is correctly scaled for the highest DISPLAY A range that will be used during the auto sweep measurement. When the AUTO SWEEP START key is pressed, DISPLAY A ranging (Z-Y RANGE) is automatically set to AUTO mode, even if MANUAL mode is selected before pressing the AUTO SWEEP START key. The DISPLAY A range will change in accordance with the measured values. Scaling of the DISPLAY A X-Y RECORDER OUTPUT, however, will not change when the DISPLAY A range changes. It is automatically set to the DISPLAY A range in effect when the AUTO SWEEP function is turned on. If steps (13) and (14) are not performed, it may be impossible obtain an accurate plot of the measured values.
- (15) Press the BLUE key and the X-Y RECORDER ON/OFF key to set the X-Y RECORDER OUTPUT function to on (the indicator lamp will come on).
- (16) Press the AUTO SWEEP key. If the recorder is equipped with remote pen-lift control, go to step (17). If not, set the SPOT FREQ (BIAS) to the sweep START FREQ (BIAS) and then manually lower the pen onto the paper.
- (17) Perform the swept measurement in accordance with the procedure given in the figure selected in step (4).
- (18) When the sweep is completed and the X-Y recorder stops, manually lift the pen from the paper. If the recorder is equipped with remote pen-lift control, the pen is raised automatically when the sweep is completed (or when the X-Y RECORDER OUTPUT function is turned off after a manual sweep).
- (19) To repeat the measurement, repeat steps (14) through (18).

Figure 3-40. X-Y Recorder Output (Sheet 2 of 2)

Table 3-27. Connections of Recorder Output

FREQ/BIAS	RECORDER OUTPUTS		Plot Area*1
	DISPLAY B	DISPLAY A	
Measurement Frequency/ Bias Voltage	/	Z / Y /R/G	①
	/	L/C	②
	θ (deg)	/	③
	θ (rad)	/	④
	X/B	/	⑤
	Q/D	/	②
	R/G	/	①
/	X/B	R/G	⑥
Measurement Frequency	/	B - A (dB)	⑦
	/	A/B (dBm)	⑧
	/	A/B (dBV)	⑨
	θ (deg)	/	③
	θ (rad)	/	④
	GROUP DELAY	/	②
Measurement Frequency/ Bias Voltage	/	Δ	⑩
	/	$\Delta\%$	⑪
	Δ	/	⑩
	$\Delta\%$	/	⑪

* : These numbers match the numbers of the illustrations in Figure 3-41.

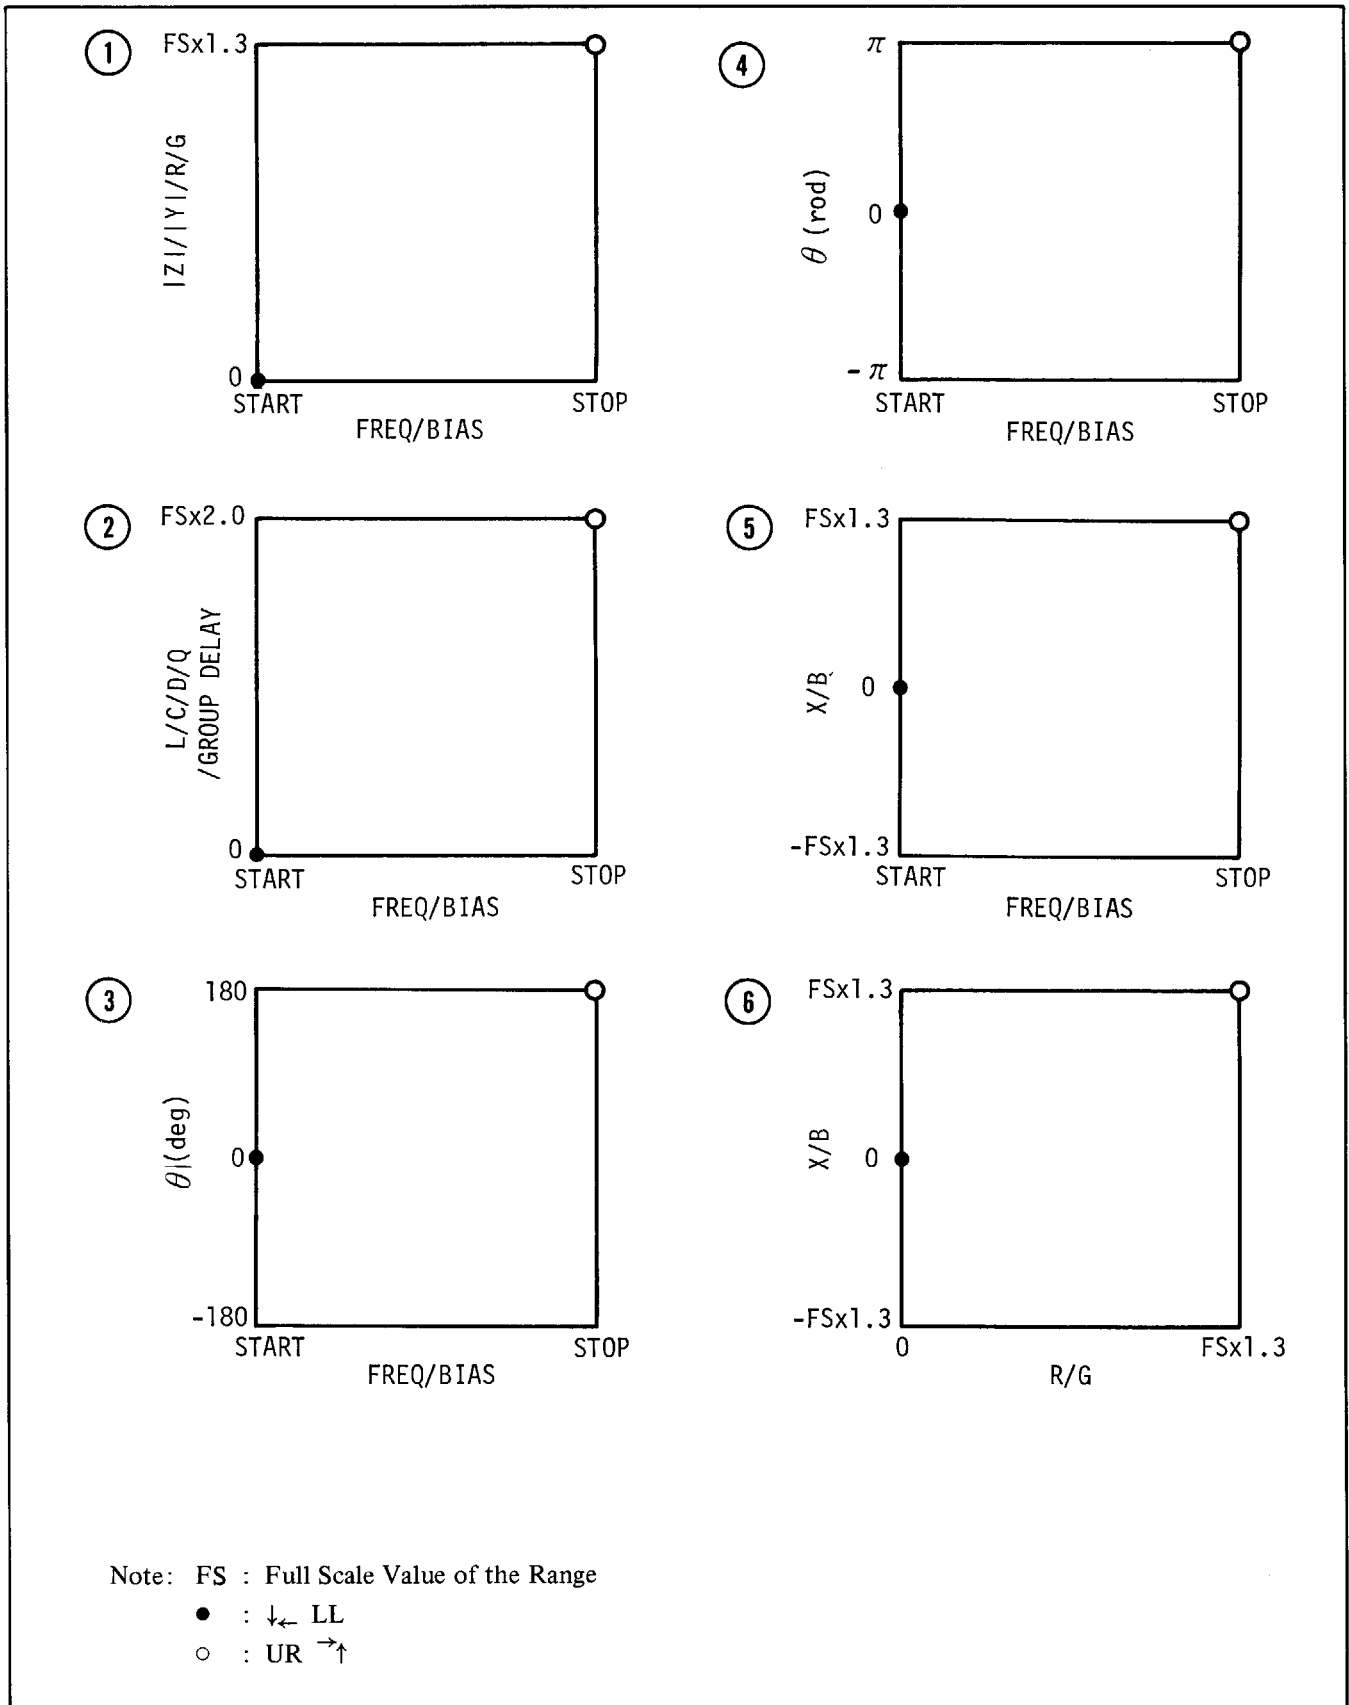


Figure 3-41. Plot Areas of RECORDER OUTPUTS (sheet 1 of 2)


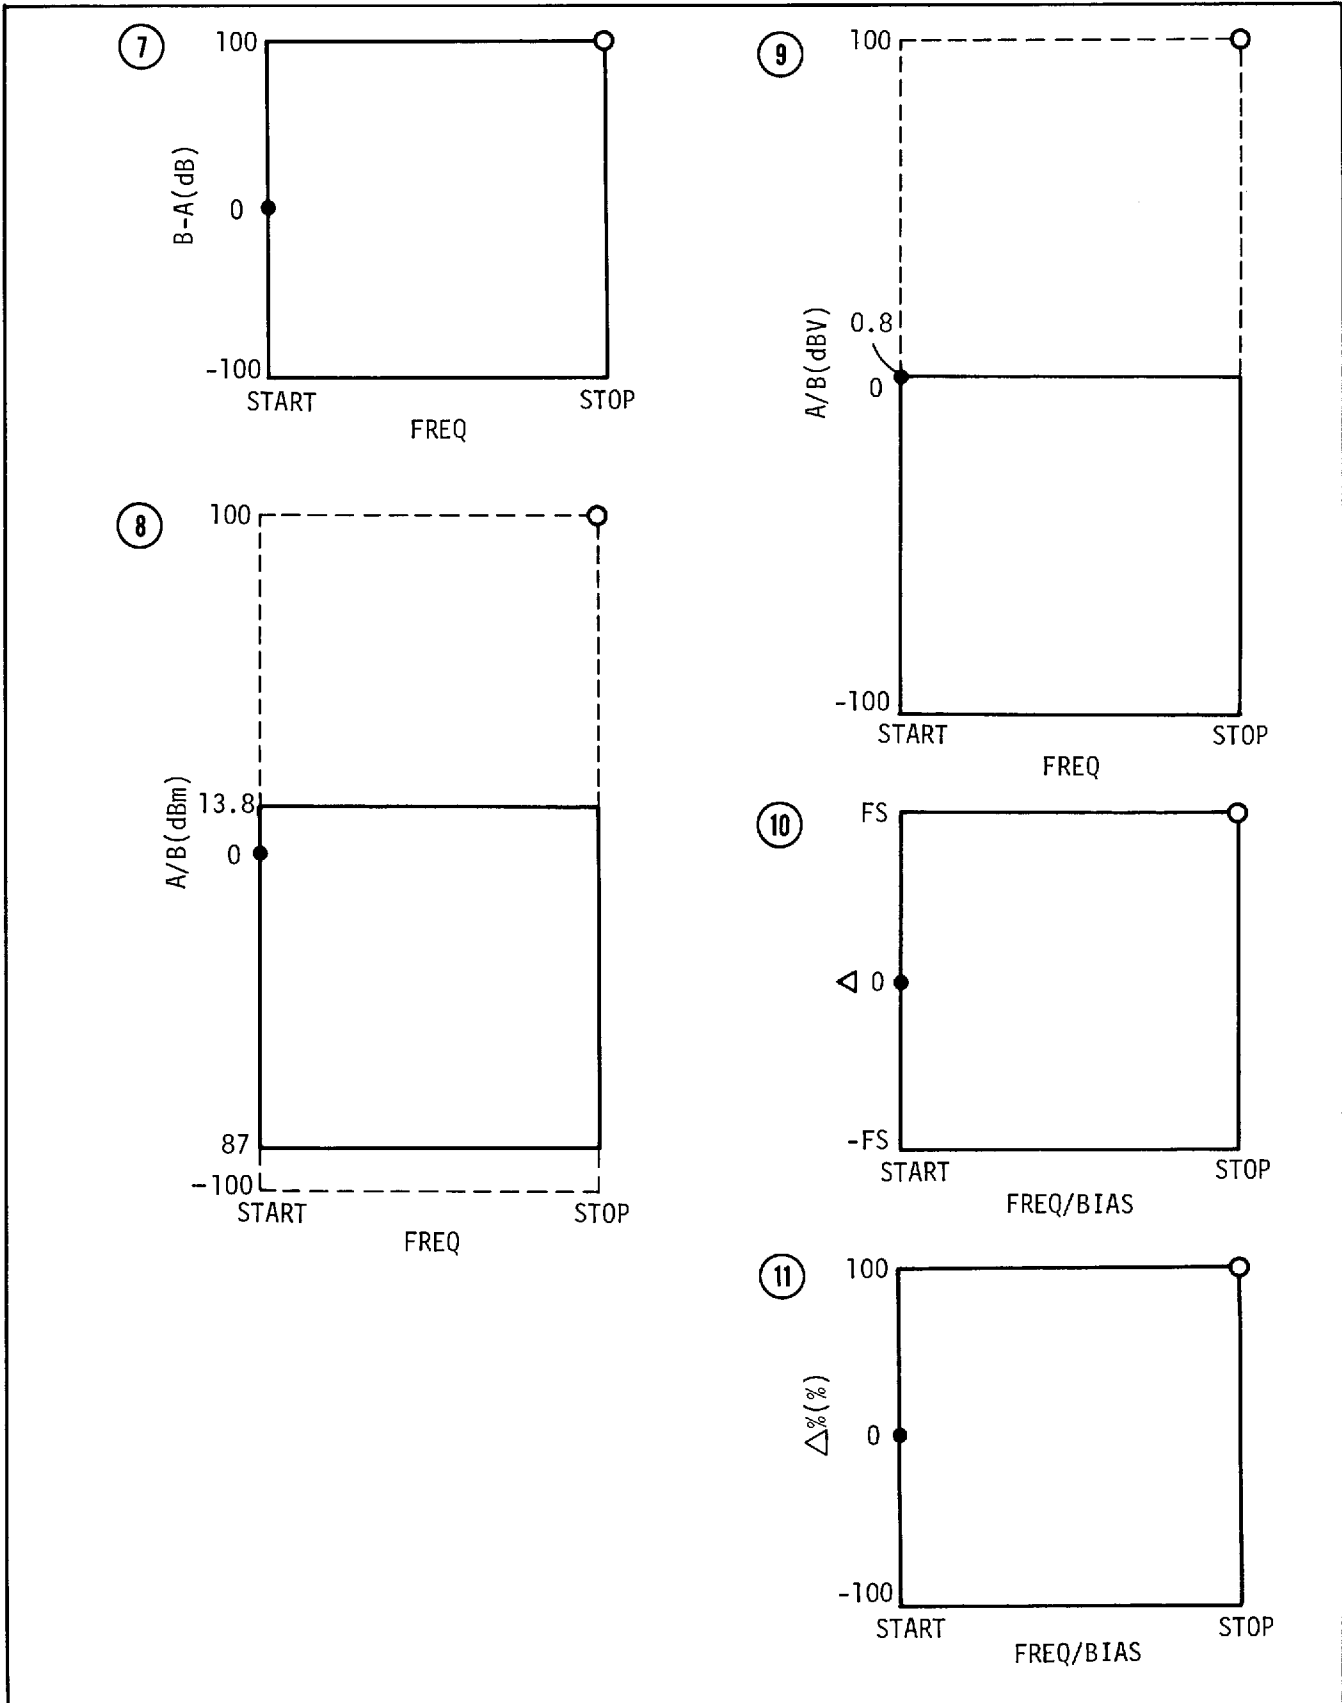


Figure 3-41. Plot Areas of RECORDER OUTPUTS (sheet 2 of 2)

3-137. EXTERNAL SYNTHESIZER

3-138. The 4192A can be connected to an external frequency synthesizer via the EXT VCO connector on the rear-panel instead of built-in frequency synthesizer to obtain a more accurate, stable test signal. Using this technique, a frequency resolution of 1mHz over the full frequency range, from 5Hz to 13MHz, can be obtained. In addition, a high stability reference (1MHz or 10MHz) can be connected to EXT REFERENCE connector on the rear-panel to obtain an even more stable test signal. This capability permits stable measurements of the intrinsic characteristics of high Q devices. Such devices include crystals whose impedance change drastically with changes in frequency of only a few Hz.

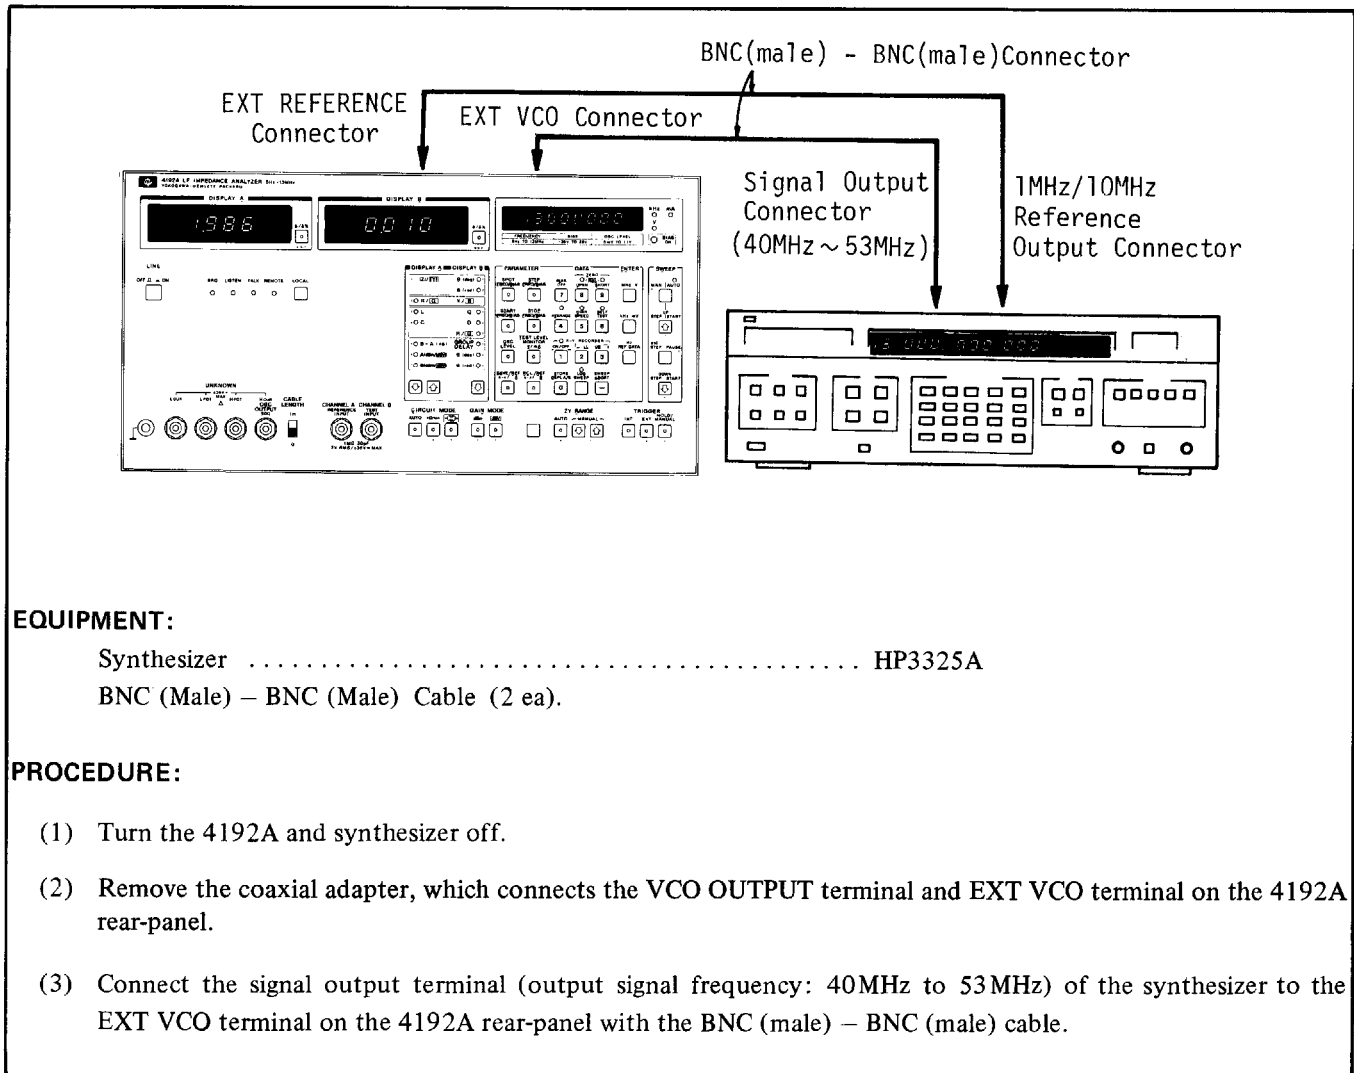

EQUIPMENT:

- Synthesizer HP3325A
- BNC (Male) – BNC (Male) Cable (2 ea).

PROCEDURE:

- (1) Turn the 4192A and synthesizer off.
- (2) Remove the coaxial adapter, which connects the VCO OUTPUT terminal and EXT VCO terminal on the 4192A rear-panel.
- (3) Connect the signal output terminal (output signal frequency: 40MHz to 53MHz) of the synthesizer to the EXT VCO terminal on the 4192A rear-panel with the BNC (male) – BNC (male) cable.

Figure 3-42. External Synthesizer (Sheet 1 of 2)

- (4) Connect the 1 MHz (or 10MHz) reference signal output terminal of the synthesizer to the EXT REFERENCE terminal on the 4192A rear-panel with the BNC (male) – BNC (male) cable.
- (5) Set 4192A's controls for the desired measurement in accordance with procedures provided in the following figures:
 - Figure 3-10. Basic Operating Instructions of the Amplitude-phase Measurements
 - Figure 3-30. Basic Operating Instructions of the Impedance Measurements
- (6) Turn on the synthesizer.
- (7) Set the output signal of the synthesizer to 40MHz + desired measuring frequency.
- (8) Set the SPOT FREQ of the 4192A to the desired measuring frequency.

Notes: 1. Resolution of the test signal at the OSC OUTPUT terminal of the 4192A is 1mHz (at 5 Hz to 10kHz), 10mHz (at 10kHz to 100kHz), 100mHz (at 100kHz to 1MHz), and 1Hz (at 1MHz to 13MHz). However, when an external synthesizer is used, resolution is 1mHz at all frequencies. Thus, to set a test frequency with a resolution higher than is normally possible (without external synthesizer), set the 4192A's SPOT FREQ as near to the desired frequency as possible. For example, for a test signal frequency of 50.000001kHz, set the external synthesizer to 50.000001kHz +40MHz and set the 4192A's SPOT FREQ to 50.00000kHz. The frequency of the test signal of the OSC OUTPUT terminal will be the frequency of the external synthesizer; however, the SPOT FREQ setting is used to calculate measurement parameter values (L, C, etc.), offset adjustment data, etc.

- 2. Values displayed on the 4192A's displays will fluctuate when measurement is made at frequencies set with 1mHz resolution at 10kHz to 78.125kHz.*

Figure 3-42. External Synthesizer (Sheet 2 of 2)

3-139. INTERNAL CONTROL SWITCH

3-140. Basic operation of the 4192A can be altered by changing the bit-switch settings of the internal control switch, A6S2. Refer to Table 3-28 for a description of the function of each bit-switch. Use the following procedure to gain access to the internal control switch:

- (1) Turn off the instrument and disconnect the power cable.
- (2) Remove the two plastic instrument-feet located at the upper corners of the rear-panel.
- (3) Fully loosen the top cover retaining screw located at the rear of the top cover.
- (4) Slide the top cover towards the rear and lift off.

WARNING

POTENTIAL SHCOK HAZARD! DO NOT TOUCH ANY OF THE EXPOSED COMPONENTS! CAPACITORS MAY STILL BE CHARGED WITH HAZARDOUS VOLTAGE LEVELS, EVEN THOUGH POWER IS REMOVED FROM THE INSTRUMENT.

- (5) With the top cover removed, the A7, A8, and A10 board assemblies are visible. These boards are on a single mounting-plate which opens much like the hood of an automobile. The A6 board assembly, upon which the internal control switch is located, is mounted on the underside of this mounting-plate. To raise the mounting-plate, remove the six retaining screws and pull up the two plastic fasteners located toward the front of the mounting plate.
- (6) Raise the mounting plate until it comes to rest at the rear of the instrument. Be sure that the safety catch locks in place.
- (7) The internal control switch is located as shown in Figure 3-43. All bit-switches of A6S2 are normally set to 0. Set the switch as desired. Refer to Table 3-28.

Note: Don't change the setting of A6S1. This switch is used for cable length compensation.

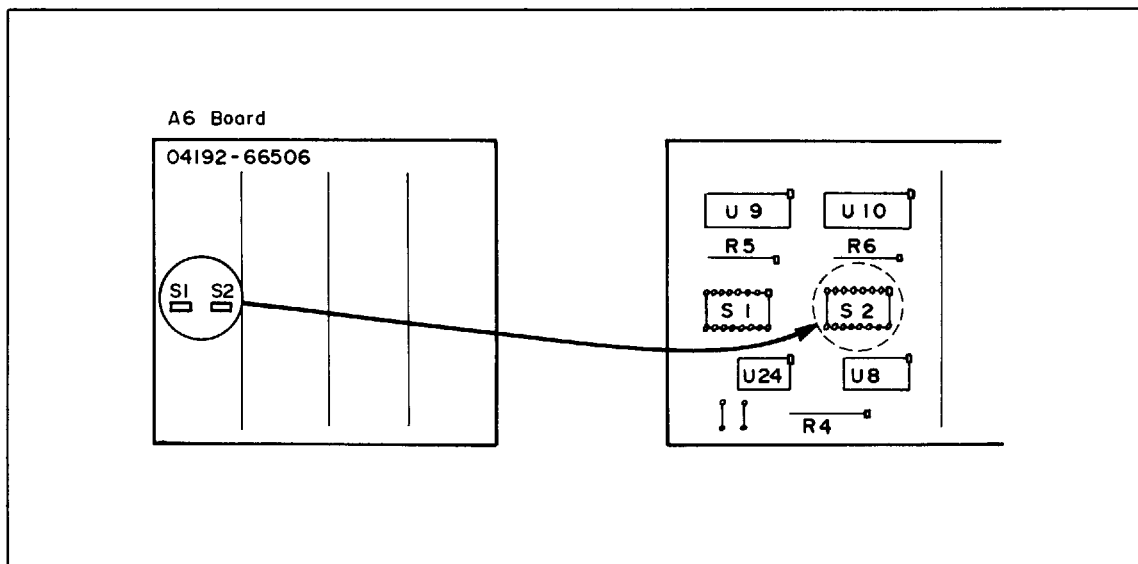


Figure 3-43. A6S2 Internal Control Switch

Table 3-28. Internal Control Switch

Bit	Description
0	This bit-switch is related to the operation of the multi-slope integrator; it should be always set to 0.
1	When this bit is set to 1, DISPLAY B function is inhibited and measuring speed is increased. Measuring speed in this mode is given in paragraph 3-55 for amplitude/phase measurements and in paragraph 3-89 for impedance measurements.
2	This bit-switch is related to the operation of the multi-slope integrator; it should be always set to 0.
3	An HP-IB system, without controller, can be configured by connecting the 4192A to a (HP-IB control switch must be set to TALK ONLY and CR/LF*) printer (HP-IB control switch must be set to LISTEN ONLY), e.g., HP5150A Thermal Printer, with an HP-IB cable (refer to paragraph 3-117). When this bit is set to 1, the 4192A is triggered by the operation of the printer.
4	This bit is used to change the data output format from DISPLAY A/B to DISPLAY A/B/C, in the HP-IB system without controller (refer to paragraph 3-125). When this bit is set to 1 (4192A must be turned off and then back on after setting this bit-switch), data output format is set to DISPLAY A/B/C.
5, 6	These bit-switches are not used.
7	In normal operation, the number of display digits depends on the selected measurement function, measurement range, measurement frequency, OSC level, etc. When this bit is set to 1, however, all measured values are displayed with the maximum number of digits.
* After changing the setting of the HP-IB control switch, turn the instrument off and then back on.	

Table 4-1. Recommended Test Equipment

Equipment	Critical Specifications	Recommended Model	Use
Capacitance Standards	1 pF ± 0.03% 10 pF ± 0.03% 100 pF ± 0.03% 1000 pF ± 0.03% Useable frequency: Up to 13 MHz	HP16381A HP16382A HP16383A HP16384A	P, A
Resistance Standards	0 Ω 0 S 100 Ω ± 0.03% 1 k Ω ± 0.03% 10 k Ω ± 0.03% 100 k Ω ± 0.03% Useable frequency: Up to 13 MHz	HP16074A Standard Resistor Set	P, A
Universal Counter	Maximum frequency: > 40 MHz Resolution: 10 Hz at 40 MHz Accuracy: 0.001% (1 × 10 ⁻⁵)	HP5314A	P, A
Digital DC Voltmeter	Voltage range: 10 mV to 100 V f.s. Sensitivity: 100 μV Accuracy: 0.05% Input impedance: > 10 M Ω	HP3465A	P, A, T
Digital RF Voltmeter	Voltage range: 10 mV to 10 V rms f.s. Bandwidth: 5 Hz to 13 MHz Accuracy: 2%	HP3403C W/OPT 001	P, A
Spectrum analyzer	Frequency range: 100 Hz to 300 kHz Noise: > 70 dB below reference	HP 141 T DISPLAY SECTION 8556A LF SEC- TION 8552B IF SEC- TION	A
Resistor	1 k Ω, 1/8 W		A
Oscilloscope	Bandwidth: 100 MHz Vertical sensitivity: 0.005 Volt/DIV	HP1740A	A, T
Cables	BNC (m)-to-BNC (m), 30 cm, 2 ea.	HP11170A	P, A
	BNC (m)-to-BNC (m), 61 cm, 2 ea.	HP11170B	P
	BNC (m)-to-BNC (m), 10 cm, 4 ea.		P
	BNC (m)-to-BNC (m), 1 m		P, A
	BNC (m)-to-SMB		A
	Dual Banana Plug-to-Alligator Clip	HP11002A	A, T
	Alligator Clip-to-Alligator Clip lead		A
BNC (m)-to-Dual Banana Plug Cable	HP11001A	A	

Table 4-1. Recommended Test Equipment (Continued)

Equipment	Critical Specifications	Recommended Model	Use
Phase Standard	1 MHz	HP16344A	A
Probe	1 : 1	HP10007B	A
	10MHz, 10 : 1	HP10006D	A, T
Coaxial Step Attenuator	Attenuation range: 0dB to -70dB Attenuation step: 10dB Calibration Accuracy at 50kHz, 1MHz, and 10MHz: -10dB ±0.03dB -30dB ±0.05dB -50dB ±0.07dB -70dB ±0.09dB	HP355D (Calibrated)*	P
Test Fixture		HP16047A	P
Adapter	BNC (m) (f) (f) Tee	hp P/N 1250-0781	P, A
	BNC (m)-to-Dual Banana Plug	hp P/N 1250-1264	A
Coaxial Termination	50Ω Feedthrough Termination BNC (m)-to-BNC (f), 2 ea.	HP11048C	P, A
Desk top Computer		HP9825A	P
I/O ROM's		HP98210A HP98213A	
Interface, w/cable		HP98034A	
Sample Capacitor	1000pF ~ 1000 nF		
Signature Analyzer		HP5004A	T
Logic Test Box w/Test ROM's		HP16343A	T

P: Performance Test, A: Adjustment, T: Troubleshooting

* Calibration service for the 355D at the frequencies listed above is provided by Hewlett-Packard's Stanford Park Division in US.
A new 355D, calibrated to meet the Critical Specifications listed above, can be purchased as a special option: Order 355D option J09.
For more information, contact the nearest Hewlett-Packard Sales Office.

SECTION IV

PERFORMANCE TESTS

4-1. INTRODUCTION

4-2. This section describes the tests and procedures used to verify the instrument specifications listed in Table 1-1. All tests can be performed without access to the interior of the instrument. A simpler, automatic operational test is presented in Section III under Self Test (paragraph 3-7). The performance tests described here can also be used to perform incoming inspection of the instrument and to verify that the instrument meets specified performance after troubleshooting and/or adjustment. If the performance tests indicate that the instrument is operating outside specified limits, check that the controls on the instruments used in the test and the test set-up itself are correct, then proceed with adjustments and/or troubleshooting.

Notes: 1. To ensure proper test results and instrument operation, Hewlett-Packard suggest a 60 minute warm-up and stabilization period before performing any of the performance tests.

2. Initial control settings described in paragraph 3-9 must be used for each performance test. Exceptions to these settings will be noted as they occur. After completing a performance test, return 4192A controls to the initial control settings.

4-3. EQUIPMENT REQUIRED

4-4. Equipment required to perform all of the performance tests is listed in Table 4-1. Any equipment that satisfies or exceeds the critical specifications listed in the table may be used as a substitute for the recommend models. Accuracy checks described in this section use the HP Model 16344A 1MHz PASE Standard. The characteristics of the equipment satisfy the performance requirements for the accuracy checks and are especially suited for use as the 4192A's accuracy test standards.

Note: Components used as standards should be calibrated by an instrument whose accuracy is traceable to NBS or an equivalent standards group; or calibrated directly by an authorized calibration organization such as NBS. The calibration cycle should be in accordance with stability specifications of each component.

4-5. TEST RECORD

4-6. Performance test results can be recorded on the Test Record at the completion of the test. The Test Record is at the end of this section. It lists all the tested specifications and their acceptable limits. The results recorded at incoming inspection can be used for comparison in periodic maintenance, troubleshooting, and after repairs or adjustments.

4-7. CALIBRATION CYCLE

4-8. This instrument requires periodic verification of performance. Depending on the conditions under which the instrument is used, e.g., environmental conditions or frequency of use, the instrument should be checked with the performance tests described here, at least once a year. To keep instrument down-time to a minimum and to insure optimum operation, preventive maintenance should be performed at least twice a year.

PERFORMANCE TESTS

4-9. MEASUREMENT SIGNAL FREQUENCY ACCURACY TEST

4-10. This test verifies that test signal frequencies are within specifications.

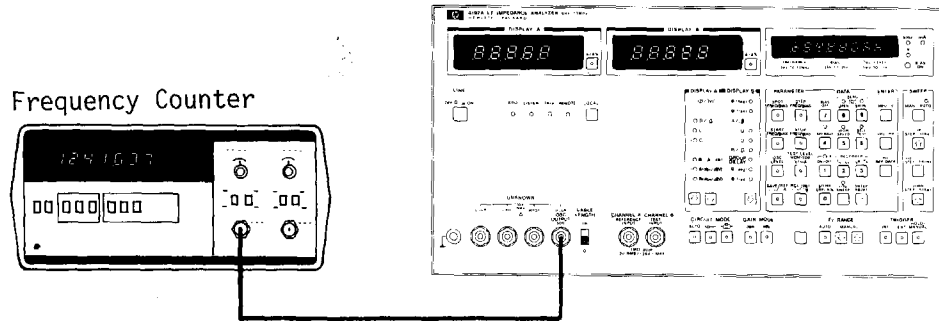


Figure 4-1. Measurement Signal Frequency Accuracy Test Setup

EQUIPMENT:

- Universal Counter HP5314A
- BNC-to-BNC Cable HP11170B

PROCEDURE:

- a. Connect the input of the 5314A to the OSC OUTPUT (H_{CUR}) terminal of the 4192A as shown in Figure 4-1.
- b. Set the 4192A's controls as follows:
 - SPOT FREQ. 1MHz
 - Other Controls Initial Settings
- c. Set the 5314A's controls for 10Hz resolution. Frequency readout must be between 0.99995MHz and 1.00005 MHz.
- d. Change the 4192A's SPOT FREQ. to 10MHz. Readout on the 5314A must be between 9.9995MHz and 10.005MHz.
- e. Disconnect BNC-to-BNC cable from OSC OUTPUT and connect it to 1MHz OUTPUT terminal on the rear panel. Readout on the 5314A must be between 0.99995 MHz and 1.00005 MHz.

Table 4-2. Measurement Signal Frequency Accuracy Test

Frequency setting	Test point	Test limits
1 MHz	OSC OUTPUT (H_{CUR})	0.99995 – 1.00005 MHz
10MHz	OSC OUTPUT (H_{CUR})	9.9995 – 10.0005 MHz
	1MHz OUTPUT	0.99995 – 1.00005 MHz

PERFORMANCE TESTS

4-11. MEASUREMENT SIGNAL LEVEL ACCURACY TEST

4-12. This test verifies that variable OSC output level is within specifications.

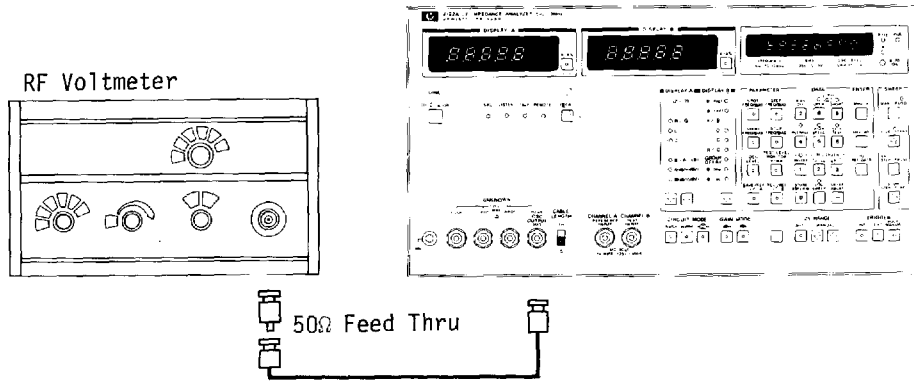


Figure 4-2. Measurement Signal Level Accuracy Test Setup.

EQUIPMENT:

- RF Voltmeter HP3403C W/OPT 001
- BNC-to-BNC Cable HP11170A
- 50Ω Feedthrough Termination HP11048C

Note: Warm up the voltmeter at least 1 hour.

PROCEDURE:

- a. Connect the H_{CUR} terminal of the 4192A to the input of the 3403C through the 50Ω termination as shown in Figure 4-2.
- b. Set the 4192A's controls as follows:
 - DISPLAY A B-A (dB)
 - SPOT FREQ. 100Hz
 - OSC LEVEL 5 mV
 - Other Controls Initial Settings
- c. Set the 3403C's controls as follows:
 - FUNCTION ACV
 - RANGE AUTO
 - RESPONSE TIME.....SLOW (for 5Hz only)
- d. Readout on the 3403C must be between 2.75mV and 7.26mV.
- e. Set the 4192A's SPOT FREQ. to the test frequencies listed in Table 4-3 (a). Readout on the 3403C at each frequency must be within the limits given in the table.
- f. Set the 4192A's OSC LEVEL and SPOT FREQ. in accordance with Table 4-3 (b), (c), and (d). Readout on the 3403C at each frequency must be within the limits given in the table.

PERFORMANCE TESTS

Table 4-3. Measurement Signal Level Accuracy Test

OSC LEVEL setting : 5 mV		OSC LEVEL setting : 100 mV	
Test frequency	Test limits	Test frequency	Test limits
100Hz	2.75 – 7.26 mV	5Hz	91.0 – 109.0 mV
1kHz	2.75 – 7.26 mV	100Hz	92.9 – 107.1 mV
10kHz	2.75 – 7.25 mV	1kHz	93.0 – 107.0 mV
100kHz	2.75 – 7.25 mV	10kHz	93.0 – 107.0 mV
1MHz	2.73 – 7.27 mV	100kHz	93.0 – 107.0 mV
		1MHz	93.0 – 107.0 mV
		13MHz	74.5 – 125.5 mV

OSC LEVEL setting : 105 mV		OSC LEVEL setting : 1.1V	
Test frequency	Test limits	Test frequency	Test limits
5Hz	87.7 – 122.35 mV	5Hz	1.013 – 1.187 V
100Hz	89.7 – 120.3 mV	100Hz	1.034 – 1.166 V
1kHz	89.8 – 120.2 mV	1kHz	1.035 – 1.165 V
10kHz	89.8 – 120.2 mV	10kHz	1.035 – 1.165 V
100kHz	89.8 – 120.2 mV	100kHz	1.035 – 1.165 V
1MHz	89.8 – 120.2 mV	1MHz	1.035 – 1.165 V
13MHz	70.4 – 139.6 mV	13MHz	0.832 – 1.368 V

4-13. CAPACITANCE ACCURACY TEST

4-14. This test checks the accuracy of full scale capacitance measurements over the full frequency range (constant test signal level). The capacitance accuracy checks are made by connecting a standard capacitor to the instrument and comparing the measurement readouts with the calibrated value of the standard to verify that the instrument meets specifications. Accuracies for dissipation factors of nearly zero are also checked in this test.

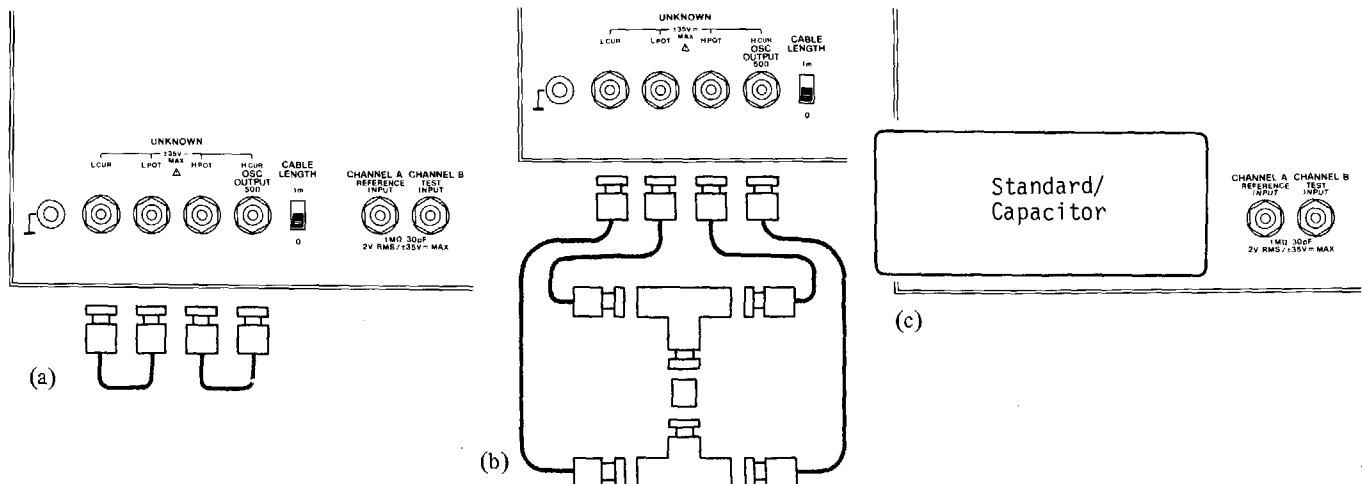


Figure 4-3. Capacitance Accuracy Test Setups

PERFORMANCE TESTS

EQUIPMENT:

Standard Capacitors	1 pF : HP16381A
		10 pF : HP16382A
		100 pF : HP16383A
		1000 pF : HP16384A
Terminations	OPEN } HP16074A
		SHORT } Standard
		Resistor Set

PROCEDURE:

- a. Set the 4192A's controls as follows:

DISPLAY A	C
DISPLAY B	D
OSC LEVEL	300mV
SPOT FREQ.	1MHz
AVERAGE	ON
Other Controls	Initial Settings

Note: If the OPEN and SHORT terminations are not available, use the test setups shown in Figure 4-3 (a) and (b) for steps b and d, respectively. Equipment required for these alternate test setups is as follows:

BNC-to-BNC Cable	10cm long, 4 ea.
BNC Tee Adapter	HP P/N 1250-0781, 2 ea.
BNC (f)-to-BNC(f) Adapter	HP P/N 1250-0080

The BNC-to-BNC cables must be no longer than 10cm. Using longer cables will affect the test results.

- b. Connect the OPEN termination directly to the UNKNOWN terminals as shown in Figure 4-3 (c).
- c. Press **Blue** and **8**^{OPEN} to perform ZERO (OPEN) calibration (CAL will be displayed on DISPLAY A for a few seconds and the OPEN indicator lamp will come on).
- d. Connect the SHORT termination directly to the UNKNOWN terminals as shown in Figure 4-3 (c).
- e. Press **Blue** and **9**^{SHORT} to perform ZERO (SHORT) calibration (CAL will be displayed on DISPLAY A for a few seconds and the SHORT indicator lamp will come on).
- f. Connect the 1pF Standard Capacitor directly to the UNKNOWN terminals as shown in Figure 4-3 (c).
- g. Set the 4192A's SPOT FREQ. in accordance with Table 4-4 (a). Capacitance and dissipation factor readouts should be within the test limits given in the table.
- h. Using the 10pF, 100pF, and 1000pF standard capacitors, repeat step g for Table 4-4 (b) thru (d).

PERFORMANCE TESTS

Table 4-4. Capacitance Accuracy Test

(a)

Standard capacitor : 1pF		
Test frequency	C test limits	D test limits
100kHz	C.V. \pm 6 fF	0 \pm 0.0191
500kHz	C.V. \pm 3 fF	0 \pm 0.0055
1MHz	C.V. \pm 2.6 fF	0 \pm 0.0038
5MHz	C.V. \pm 13 fF	0 \pm 0.0113
10MHz	C.V. \pm 21.6 fF	0 \pm 0.0216
13MHz	C.V. \pm 28.0 fF	0 \pm 0.0279

(b)

Standard capacitor : 10pF		
Test frequency	C test limits	D test limits
10kHz	C.V. \pm 0.06pF	0 \pm 0.0191
50kHz	C.V. \pm 0.03pF	0 \pm 0.0055
100kHz	C.V. \pm 26fF	0 \pm 0.0038
500MHz	C.V. \pm 40fF	0 \pm 0.0016
1K Hz	C.V. \pm 13fF	0 \pm 0.0012
5MHz	C.V. \pm 110fF	0 \pm 0.0092
10MHz	C.V. \pm 163 fF	0 \pm 0.0174
13MHz	C.V. \pm 211 fF	0 \pm 0.0224

(c)

Standard capacitor : 100pF		
Test frequency	C test limist	D test limits
1kHz	C.V. \pm 0.6 pF	0 \pm 0.0191
5kHz	C.V. \pm 0.3 pF	0 \pm 0.0055
10kHz	C.V. \pm 0.26 pF	0 \pm 0.0038
50kHz	C.V. \pm 0.4pF	0 \pm 0.0016
100kHz	C.V. \pm 0.13 pF	0 \pm 0.0012
500kHz	C.V. \pm 0.4pF	0 \pm 0.0016
1MHz	C.V. \pm 0.13 pF	0 \pm 0.0012
5MHz	C.V. \pm 1.1 pF	0 \pm 0.0107
10MHz	C.V. \pm 2.91 pF	0 \pm 0.0354
13MHz	C.V. \pm 4.74 pF	0 \pm 0.0580

(d)

Standard capacitor : 1000pF		
Test frequency	C test limits	D test limits
100Hz	C.V. \pm 13 pF	0 \pm 0.025
400Hz	C.V. \pm 3 pF	0 \pm 0.006
1kHz	C.V. \pm 2.6 pF	0 \pm 0.0038
5kHz	C.V. \pm 4pF	0 \pm 0.0016
10kHz	C.V. \pm 1.3 pF	0 \pm 0.0012
50kHz	C.V. \pm 4pF	0 \pm 0.0016
100kHz	C.V. \pm 1.3 pF	0 \pm 0.0012
500kHz	C.V. \pm 4pF	0 \pm 0.0016
1MHz	C.V. \pm 1.3 pF	0 \pm 0.0012

C.V. = Calibrated Value

4-15. RESISTANCE ACCURACY TEST

4-16. This test checks the accuracy of full scale resistance measurements over the full frequency range (constant test signal level). The resistance accuracy checks are made by connecting a standard resistor to the instrument and comparing measurement readouts with the calibrated value of the standard to verify that the instrument meets specifications.

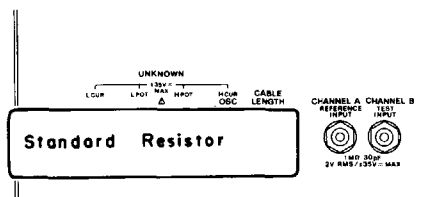


Figure 4-4. Resistance Accuracy Test Setup

PERFORMANCE TESTS


EQUIPMENT:

Standard Resistors	100Ω	} HP16074A Standard Resistor Set
	1kΩ	
	10kΩ	
	100kΩ	

PROCEDURE:

Note: If the Capacitance Accuracy Test (paragraph 4-13) has not been performed, perform the ZERO (SHORT) offset adjustment described in steps a, d, and e of paragraph 4-13 before proceeding with this test.

a. Set the 4192A's controls as follows:

DISPLAY A	R/G
OSC LEVEL	300mV
CIRCUIT MODE	 (series mode)
AVERAGE	ON
Other Controls	Initial Settings

- b. Connect the 100Ω standard resistor directly to the UNKNOWN terminals as shown in Figure 4-4.
- c. Set the 4192A's SPOT FREQ. in accordance with Table 4-5. Resistance readouts should be within the test limits given in the table.
- d. Repeat step c for the 1kΩ, 10kΩ, and 100kΩ standard resistors.

Table 4-5. Resistance Accuracy Test

Test frequency	Test limits			
	100Ω	1kΩ	10kΩ	100kΩ
5Hz	C.V. ±1.29 Ω	C.V. ±22.6 Ω	C.V. ±0.206 kΩ	C.V. ±2.43 kΩ
10Hz	C.V. ±0.71 Ω	C.V. ±12.9 Ω	C.V. ±0.119 kΩ	C.V. ±1.38 kΩ
50Hz	C.V. ±0.25 Ω	C.V. ±5.23 Ω	C.V. ±0.050 kΩ	C.V. ±0.54 kΩ
100Hz	C.V. ±0.13 Ω	C.V. ±4.2 Ω	C.V. ±0.041 kΩ	C.V. ±0.43 kΩ
500Hz	C.V. ±0.15 Ω	C.V. ±3.5 Ω	C.V. ±0.033 kΩ	C.V. ±0.33 kΩ
1kHz	C.V. ±0.13 Ω	C.V. ±3.3 Ω	C.V. ±0.033 kΩ	C.V. ±0.33 kΩ
5kHz	C.V. ±0.13 Ω	C.V. ±3.3 Ω	C.V. ±0.033 kΩ	C.V. ±0.33 kΩ
10kHz	C.V. ±0.13 Ω	C.V. ±3.3 Ω	C.V. ±0.033 kΩ	C.V. ±0.33 kΩ
50kHz	C.V. ±0.13 Ω	C.V. ±3.3 Ω	C.V. ±0.033 kΩ	C.V. ±0.33 kΩ
100kHz	C.V. ±0.13 Ω	C.V. ±3.3 Ω	C.V. ±0.033 kΩ	C.V. ±0.33 kΩ
500kHz	C.V. ±0.13 Ω	C.V. ±3.3 Ω	C.V. ±0.033 kΩ	————
1MHz	C.V. ±0.13 Ω	C.V. ±3.3 Ω	C.V. ±0.033 kΩ	————
5MHz	C.V. ±0.41 Ω	C.V. ±10.7 Ω	————	————
10MHz	C.V. ±2.91 Ω	C.V. ±31.0 Ω	————	————
13MHz	C.V. ±4.74 Ω	C.V. ±49.3 Ω	————	————

C.V. = Calibrated Value

PERFORMANCE TESTS

4-17. FREQUENCY/PHASE ACCURACY TEST

4-18. This test verifies that vector measurements are made with optimum phase detection accuracy over the full frequency range.

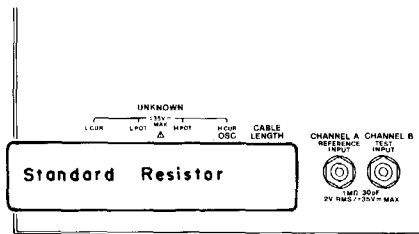


Figure 4-5. Frequency/Phase Accuracy Test Setup

EQUIPMENT:

- Resistor 10 Ω } HP16074A
- 10 Ω } Standard Resistor Set

PROCEDURE:

- a. Set the 4192A's controls as follows:
 - DISPLAY A R/G
 - SPOT FREQ. 1MHz
 - OSC LEVEL 300mV
 - CIRCUIT MODE (series mode)
 - AVERAGE ON
 - Other Controls Initial Settings
- b. Connect the 0Ω standard resistor directly to the 4192A's UNKNOWN terminals as shown in Figure 4-5.
- c. Press and keys to perform the ZERO (SHORT) offset adjustment.

Note: If the Capacitance Accuracy Test or the Resistance Accuracy Test have been performed (The SHORT indicator lamp is lit), perform step c twice to invalidate the previous ZERO offset data.
- d. Connect the 10Ω standard resistor directly to the UNKNOWN terminals as shown in Figure 4-5.
- e. Set the 4192A's SPOT FREQ. in accordance with Table 4-6. Reactance readouts (Display B) should be within the test limits given in the table.

Table 4-6. Frequency/Phase Accuracy Test

Test frequency	Reactance test limits	Test frequency	Reactance test limits
100Hz	C.V. ± 0.033Ω	100kHz	C.V. ± 0.026Ω
400Hz	C.V. ± 0.028Ω	500kHz	C.V. ± 0.026Ω
1kHz	C.V. ± 0.026Ω	1MHz	C.V. ± 0.032Ω
5kHz	C.V. ± 0.026Ω	5MHz	C.V. ± 0.127Ω
10kHz	C.V. ± 0.026Ω	10MHz	C.V. ± 0.399Ω
50kHz	C.V. ± 0.026Ω	13MHz	C.V. ± 0.644Ω

PERFORMANCE TESTS

4-19. AMPLITUDE/PHASE ACCURACY TEST

4-20. This test checks the accuracy of amplitude and phase measurements over the full frequency range (constant test signal level). One signal is applied to both CHANNEL A and CHANNEL B; if the instrument is operating within specifications, the measured amplitude and phase should be 0dB and 0°, respectively.

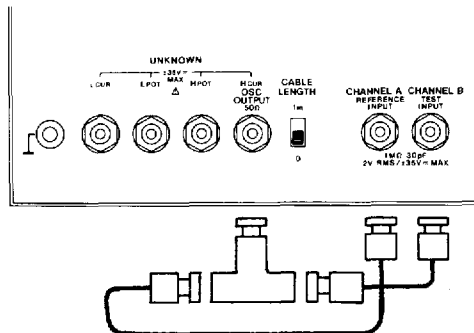


Figure 4-6. Amplitude/Phase (0dB) Accuracy Test Setup

EQUIPMENT:

- BNC-to-BNC Cable HP11170A, 2 ea.*
- BNC Tee Adapter hp P/N 1250-0781

*Both cables must be of the same length.

PROCEDURE:

- a. Interconnect OSC OUTPUT (H_{CUR}), CHANNEL A and CHANNEL B as shown in Figure 4-6.
- b. Set the 4192A's controls as follows:
 - DISPLAY A B-A (dB)
 - DISPLAY B θ (deg)
 - SPOT FREQ. 5 Hz
 - OSC LEVEL 500 mV
 - Other Controls Initial Settings
- c. Check the readouts on both DISPLAY A and B (Amplitude/Phase). They should be within ± 0.096 dB and ± 0.48 deg., respectively.
- d. Change the 4192A's SPOT FREQ. in accordance with Table 4-7. Amplitude and Phase readouts should be within test limits given in the table.

PERFORMANCE TESTS

Table 4-7. Amplitude/Phase (0dB) Accuracy Test

Test frequency	Amplitude test limits	Phase test limits
5 Hz	0 ± 0.096 dB	0 ± 0.48 deg
10 Hz	0 ± 0.056 dB	0 ± 0.28 deg
50 Hz	0 ± 0.024 dB	0 ± 0.12 deg
100 Hz	0 ± 0.020 dB	0 ± 0.10 deg
500 Hz	0 ± 0.020 dB	0 ± 0.10 deg
1 kHz	0 ± 0.020 dB	0 ± 0.10 deg
5 kHz	0 ± 0.020 dB	0 ± 0.10 deg
10 kHz	0 ± 0.020 dB	0 ± 0.10 deg
50 kHz	0 ± 0.090 dB	0 ± 0.16 deg.
100 kHz	0 ± 0.090 dB	0 ± 0.16 deg
500 kHz	0 ± 0.090 dB	0 ± 0.16 deg
1 MHz	0 ± 0.090 dB	0 ± 0.16 deg
5 MHz	0 ± 0.250 dB	0 ± 0.80 deg
10 MHz	0 ± 0.450 dB	0 ± 1.60 deg
13 MHz	0 ± 0.570 dB	0 ± 2.08 deg

4-21. AMPLITUDE ACCURACY TEST

4-22. This test checks amplitude measurement accuracy at three spot frequencies. An attenuated (-10dB, -30dB, -50dB, and -70dB) signal is applied to CHANNEL B, and an unattenuated reference signal is applied to CHANNEL A. The measured attenuation is then compared with the calibrated value of the attenuator.

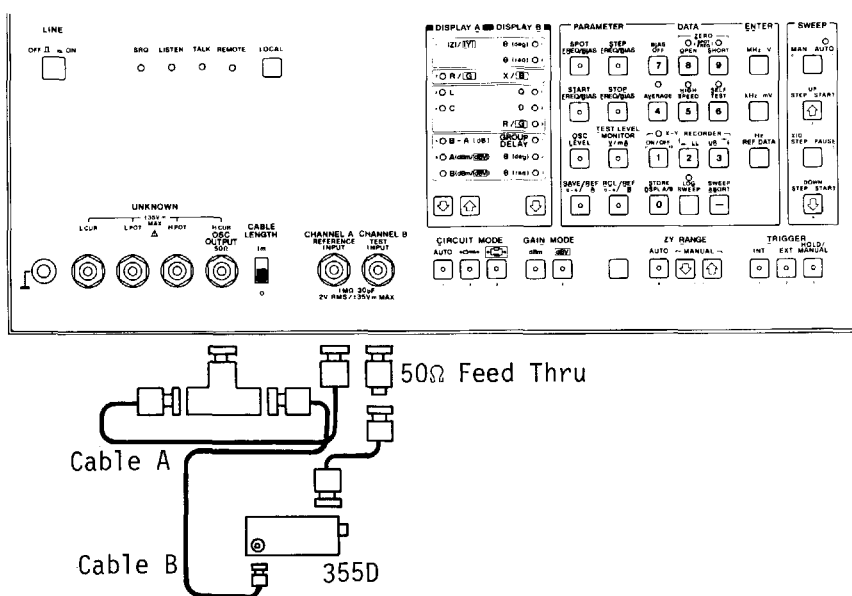


Figure 4-7. Amplitude Accuracy Test Setup.

PERFORMANCE TESTS

EQUIPMENT:

- Attenuator HP355D (calibrated)
- 50Ω Feedthrough Termination HP 11048C
- BNC-to-BNC Cable HP11170A, 2 ea.
- BNC-to-BNC Cable 10cm long
- BNC Tee Adapter hp P/N 1250-0781

- Notes: 1. Cables A and B should be 11170A and of the same length.
2. The 355D must be calibrated for use at 50kHz, 1MHz and 10MHz (see page 4-B, Table 4-1). If necessary, contact the nearest Hewlett-Packard Office for calibration.

PROCEDURE:

- a. Connect the attenuator, termination, adapter, and cables to the 4192A as shown in Figure 4-7.
- b. Set the 4192A's controls as follows:
 - DISPLAY A B-A (dB)
 - SPOT FREQ. 50kHz
 - OSC LEVEL 1V
 - Other Controls Initial Settings
- c. Set the attenuator to 0dB. The value displayed on DISPLAY A is the Insertion Loss of the attenuator.
- d. Press **Blue** and **o** keys to store the values displayed on DISPLAY A. Press the **o** key of DISPLAY A. DISPLAY A indicates the effective value of the attenuator.
- e. Change the attenuator's setting to -10dB.
- f. Check the readout on DISPLAY A. It should be within the attenuator's calibrated value ±0.090dB.
- g. Change the attenuator's setting to -30dB, -50dB and -70dB. Tolerances should be within the test limits given in Table 4-8.
- h. Change the 4192A's SPOT FREQ. to 1MHz. Release the deviation measurement function.
- i. Repeat steps d to g, and check that the readouts on DISPLAY A are in accordance with the table.
- j. Change the 4192A's SPOT FREQ. to 10MHz and repeat to check.

Table 4-8. Amplitude Accuracy Test

Test frequency	Test limits			
	-10dB	-30dB	-50dB	-70dB
50kHz	C.V. ± 0.09 dB	C.V. ± 0.16dB	C.V. ± 0.24 dB	C.V. ± 2.04dB
1MHz	C.V. ± 0.09 dB	C.V. ± 0.16dB	C.V. ± 0.24dB	C.V. ± 2.04dB
10MHz	C.V. ± 0.45 dB	C.V. ± 0.88dB	C.V. ± 1.32dB	C.V. ± 11.22dB

C.V. = Calibrated Value

PERFORMANCE TESTS

4-23. ABSOLUTE AMPLITUDE ACCURACY TEST

4-24. This test checks absolute gain measurement accuracy over the full frequency range. A signal is applied to CHANNEL A through a 50Ω termination and to a voltmeter. The reading on the voltmeter is compared with the DISPLAY A reading to verify that the instrument has accurately measured the amplitude of the signal.

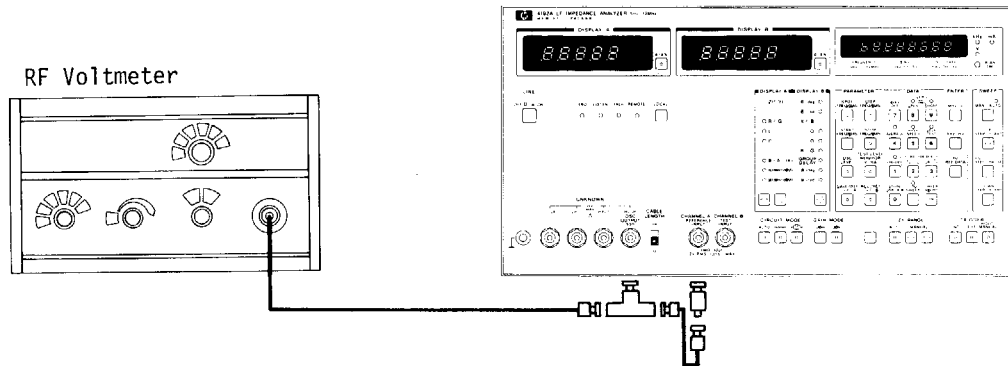


Figure 4-8. Absolute Amplitude Accuracy Test Setup.

EQUIPMENT:

RF Voltmeter	HP3403C W/OPT 001
50Ω Feedthrough Termination	HP11048C
BNC-to-BNC Cable	HP11170A, 2 ea.
BNC Tee Adapter	hp P/N 1250-0781

PROCEDURE:

- a. Connect the OSC OUTPUT (H_{CUR}) terminal to both the 3403C Input and CHANNEL A (REFERENCE INPUT) as shown in Figure 4-8.
- b. Set the 4192A's controls as follows:

DISPLAY A	A (dBm/dBV)
OSC LEVEL	500mV
SPOT FREQ.	5 Hz
GAIN MODE	dBV
Other Controls	Initial Settings
- c. Set the 3403C's controls as follows:

FUNCTION	AC
RANGE	AUTO
- d. Translate the voltage reading on the 3403C to a dBV value using the following equation:

$$\text{dBV value} = 20 \log_{10} (\text{3403C voltage reading}) \quad \text{..... (eq. 4-1)}$$

Note: If the 3403C is equipped with option 006 (dB display), set 3403C's FUNCTION to AC dB. The readings are dBV values, and no calculation is necessary.

PERFORMANCE TESTS

- e. Compare the readout on Display A with the value calculated in step d. The difference should be within the test limits given in Table 4-9.
- f. Change the 4192A's SPOT FREQ. in accordance with Table 4-9 and repeat steps d and e.

Table 4-9. Absolute Amplitude Accuracy Test

Test frequency	Test limits	Test frequency	Test limits
5Hz	C.V. \pm 0.60dBV	30kHz	C.V. \pm 0.40dBV
10Hz	C.V. \pm 0.50dBV	75kHz	C.V. \pm 0.40dBV
30Hz	C.V. \pm 0.43dBV	100kHz	C.V. \pm 0.40dBV
100Hz	C.V. \pm 0.40dBV	300Hz	C.V. \pm 0.40dBV
300Hz	C.V. \pm 0.40dBV	1MHz	C.V. \pm 0.40dBV
1kHz	C.V. \pm 0.40dBV	3MHz	C.V. \pm 0.64dBV
3kHz	C.V. \pm 0.40dBV	10MHz	C.V. \pm 1.20dBV
10kHz	C.V. \pm 0.40dBV	13MHz	C.V. \pm 1.44dBV

C.V. = dBV value (measured or calculated in step d).

4-25. PHASE ACCURACY TEST

4-26. This test checks the accuracy of phase measurements. A calibrated phase standard, which generates two sine waves of the same frequency and amplitude, is connected to the instrument's CHANNEL B (TEST INPUT) and CHANNEL A (REFERENCE INPUT). The phase of the signal applied to CHANNEL B is shifted in 22.5° steps in reference to the signal applied to CHANNEL A. The measured phase shift, displayed on DISPLAY B, is then compared with the actual phase shift.

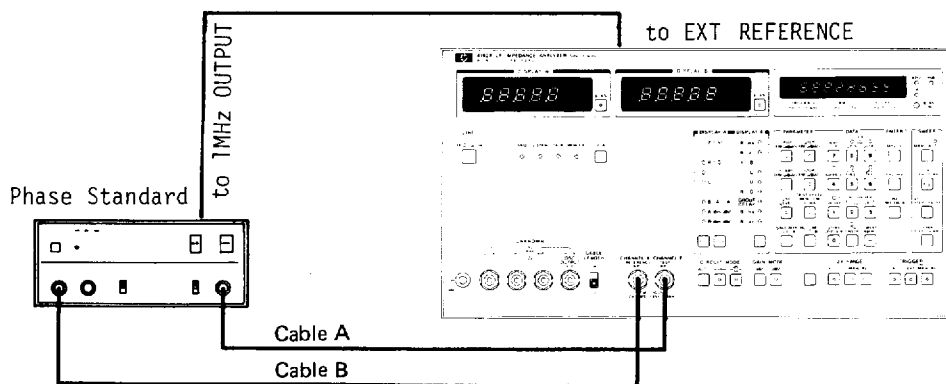


Figure 4-9. Phase Accuracy Test Setup.



PERFORMANCE TESTS

EQUIPMENT:

- 1MHz Phase Standard HP16344A
- BNC-to-BNC Cable HP11170B, 2 ea.
- BNC-to-BNC Cable 1 meter

Note: Cables A and B in Figure 4-9 should be the same length.

PROCEDURE:

- a. Connect the 16344A Phase Standard to the 4192A as shown in Figure 4-9.
- b. Set the 4192A's controls as follows:
 - DISPLAY A B-A (dB)
 - DISPLAY B θ (deg)
 - SPOT FREQ. 1MHz
 - Other Controls Initial Settings
- c. Press the RESET key on the 16344A.
- d. Press **Blue**, , keys to store the value displayed on DISPLAY B. Press the  key of DISPLAY B.
- e. Observe DISPLAY B, the reading should be 0 degrees.
- f. Press the SET key on the 16344A. (Shifts the phase 22.5°.)
- g. The reading on DISPLAY B should be -22.5 ± 0.16 degrees
- h. Repeatedly press the SET key and check that the measured phase is within the test limits given in Table 4-10.

Note: When the RESET key on the 16344A is pressed, the phase difference between the two output signals returns to 0°.

Table 4-10. Phase Accuracy Test

Phase setting	Test limits	Phase setting	Test limits
$\pm 0.0^\circ$	0 deg	$\pm 180.0^\circ$	$\pm 180.0^\circ \pm 0.16$ deg
-22.5°	$-22.5^\circ \pm 0.16$ deg	$+157.5^\circ$	$157.5^\circ \pm 0.16$ deg
-45.0°	$-45.0^\circ \pm 0.16$ deg	$+135.0^\circ$	$135.0^\circ \pm 0.16$ deg
-67.5°	$-67.5^\circ \pm 0.16$ deg	$+112.5^\circ$	$112.5^\circ \pm 0.16$ deg
-90.0°	$-90.0^\circ \pm 0.16$ deg	$+90.0^\circ$	$90.0^\circ \pm 0.16$ deg
-112.5°	$-112.5^\circ \pm 0.16$ deg	$+67.5^\circ$	$67.5^\circ \pm 0.16$ deg
-135.0°	$-135.0^\circ \pm 0.16$ deg	$+45.0^\circ$	$45.0^\circ \pm 0.16$ deg
-157.5°	$-157.5^\circ \pm 0.16$ deg	$+22.5^\circ$	$22.5^\circ \pm 0.16$ deg

PERFORMANCE TESTS

4-27. DC BIAS VOLTAGE ACCURACY TEST

4-28. This test checks the accuracy of the DC bias voltage output by the instrument.

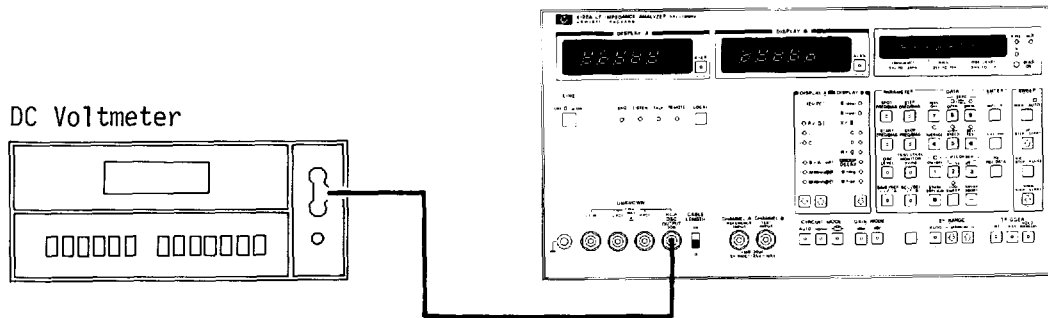


Figure 4-10. DC Bias Voltage Accuracy Test Setup

EQUIPMENT:

- DC Voltmeter HP3465A
- BNC-to-Dual Banana Plug Cable HP11001A

PRODUCE:

- a. Connect the 3465A to the 4192A as shown in Figure 4-10. Set the 4192A's controls to Initial Settings .
- b. Set the 4192A's SPOT BIAS to 0V (press **Blue**, **0**, **0**, **0**). Other controls should be set to their Initial Settings.
- c. Set the 3465A for DCV measurements. Voltage readout should be 0V ± 5mV.
- d. Change the 4192A's SPOT BIAS in accordance with Table 4-11. Check that the measured voltages are within the test limits given in the Table.
- e. Press **Blue**, **7** (BIAS on Indicator will go off).

Table 4-11. DC Bias Voltage Accuracy Test

Bias voltage setting	Test limits
0V	0V ± 5mV
10mV	10mV ± 5mV
100mV	100mV ± 5mV
1V	1V ± 10mV
10V	10V ± 55mV
35V	35V ± 180mV
-10mV	-10mV ± 5mV
-100mV	-100mV ± 5mV
-1V	1V ± 10mV
-10V	-10V ± 55mV
-35V	-35V ± 180mV

PERFORMANCE TESTS

4-29. RECORDER OUTPUT VOLTAGE ACCURACY TEST

4-30. This test verifies that recorder output voltage for the 4192A meets specifications.

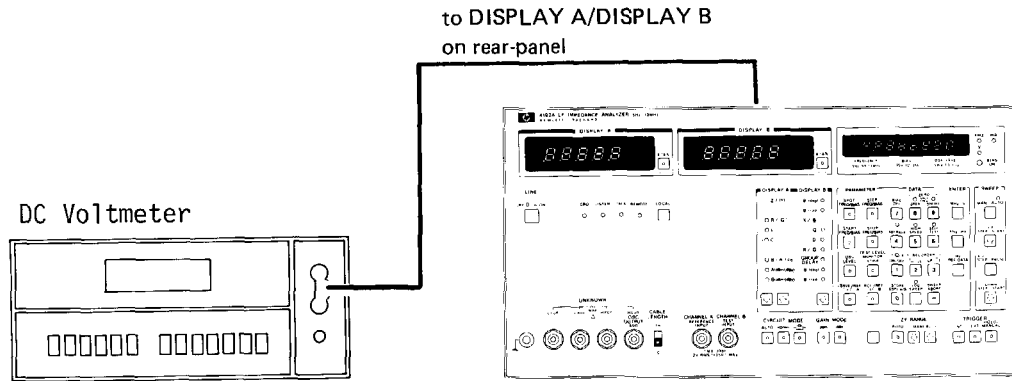


Figure 4-11. Recorder Output Voltage Accuracy Test Setup.

EQUIPMENT:

- DC Voltmeter HP3465A
- BNC-to-Dual Banana Plug Cable HP11001A

PROCEDURE:

- a. Connect the INPUT of the 3455A to the DISPLAY A terminal on the rear panel of the 4192A as shown in Figure 4-11.
- b. Press **Blue** and \downarrow LL $\left[\begin{smallmatrix} 2 \\ 2 \end{smallmatrix} \right]$. The readout on the 3465A should be $0V \pm 20mV$.
- c. Press **Blue** and \rightarrow UR $\left[\begin{smallmatrix} 3 \\ 3 \end{smallmatrix} \right]$. The readout on the 3465A should be $1V \pm 5mV$ higher than the voltage measured in step b.
- d. Press **Blue**, $\left[\begin{smallmatrix} 6 \\ 6 \end{smallmatrix} \right]$ (SELF TEST 6), and quickly $\left[\begin{smallmatrix} 7 \\ 7 \end{smallmatrix} \right]$ (SELF TEST 7). The readout on the 3265A should be $1V \pm 5mV$ less than the voltage measured in step b.
- e. Connect the INPUT of the 3465A to the DISPLAY B terminal.
- f. Repeat steps b, c, and d.
- g. Press **Blue** and $\left[\begin{smallmatrix} 6 \\ 6 \end{smallmatrix} \right]$ to release the SELF TEST function.

Table 4-12. Recorder Output Voltage Accuracy Test

Panel setting (Output Voltage)	Test limits
\downarrow LL (0V)	$0V \pm 20mV$
UR \rightarrow (+1V)	$1 + (\text{readout in step b.}) \pm 5mV$
SELF TEST 7 (-1V)	$-1 + (\text{readout in step b.}) \pm 5mV$

PERFORMANCE TESTS

4-31. HP-IB INTERFACE TEST

4-32. This test verifies the instrument's HP-IB capabilities (listed in Table 3-22).

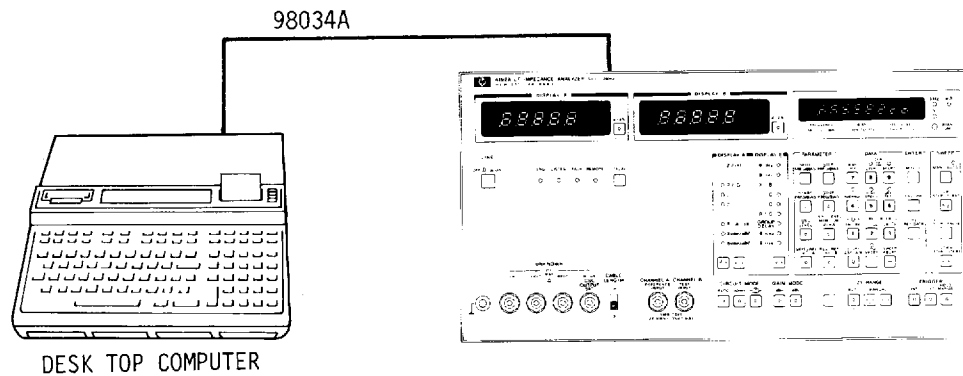


Figure 4-12. HP-IB Interface Test Setup.

EQUIPMENT:

Calculator	HP9825A
I/O ROM's	HP98210A, 98213A
Interface Cable	HP98034A
Sample Capacitor	1000pF ~ 1000nF
Test Fixture	HP16047A

PROCEDURE:

- a. Turn both the 4192A and the 9825A off.
- b. Connect the 98034A between the 9825A and 4192A as shown in Figure 4-12, and install the I/O ROM's in the ROM slots.
- c. Connect the 16047A Test Fixture to the UNKNOWN terminals.
- d. Set the 4192A's HP-IB control switch, located on the rear panel, as follows:
 - bits 1 ~ 5 : 10001 (17₁₀)
 - bit 6 : 0
 - bit 7 : 0
- e. Turn the 4192A and the 9825A on.
- f. Load one of the five test programs into the calculator.
- g. Execute the program and follow the prompts and instructions that are output by the 9825A. Details on the controller's (calculator) instructions and the appropriate operator response are given in Tables 4-13 through 4-17.

PERFORMANCE TESTS

TEST PROGRAM 1

[PURPOSE]

This test verifies that the 4192A has the following HP-IB capabilities:

- (1) Remote/Local Capability
- (2) Local Lockout
- (3) Talk Disable
- (4) Listen Disable

[PROGRAM LISTING]

```
0: "REMOTE/LOCAL TEST":
1: dim A$(1)
2: 0)N
3: rds(717)}S
4: prt "REMOTE/LOCAL TEST";spc 3
5: rem 7
6: wrt 717,"T1";ent "LISTEN=1, TALK=0, REMOTE=1",A$
7: if A$="n";1)N
8: cli 7;ent "LISTEN=0, TALK=0, REMOTE=1",A$
9: if A$="n";1)N
10: lcl 7;ent "LISTEN=0, TALK=0, REMOTE=0",A$
11: if A$="n";1)N
12: rem 7;ent "LISTEN=1, TALK=0, REMOTE=1",A$
13: if A$="n";1)N
14: llo 7
15: lcl 717;ent "LISTEN=1, TALK=0, REMOTE=0",A$
16: if A$="n";1)N
17: rem 7;wrt 717,"T1";ent "LISTEN=1, TALK=0, REMOTE=1",A$
18: if A$="n";1)N
19: if N=1;prt "REMOTE/LOCAL TEST FAIL";spc 3;jmp 2
20: prt "REMOTE/LOCAL TEST PASS";spc 3
21: 0)N
22: prt "LISTEN/TALK TEST";spc 3
23: red 717,A.B;ent "LISTEN=0, TALK=1, REMOTE=1",A$
24: if A$="n";1)N
25: wrt 717,"T1";ent "LISTEN=1, TALK=0, REMOTE=1",A$
26: if A$="n";1)N
27: if N=1;prt "LISTEN/TALK TEST FAIL";spc 3;jmp 2
28: prt "LISTEN/TALK TEST PASS";spc 3
29: prt "END";spc 3
30: cli 7
31: lcl 7
32: end
*5544
```


PERFORMANCE TESTS

Table 4-13. Controller Instructions and Operator Responses for Test Program 1

Controller Instructions		Operator Response
Displays	Printout	
	REMOTE/LOCAL TEST	
LISTEN = 1*, TALK = 0, REMOTE = 1		If the 4192A HP-IB Status Indicators and Controller Display are the same, press <input type="checkbox"/> Y , and <input type="checkbox"/> CONTINUE . If not, press <input type="checkbox"/> N and <input type="checkbox"/> CONTINUE .
LISTEN = 0, TALK = 0, REMOTE = 1		
LISTEN = 0, TALK = 0, REMOTE = 0		
LISTEN = 1, TALK = 0, REMOTE = 1		
LESTEN = 1, TALD = 0, REMOTE = 0		
LISTEN = 1, TALK = 0, REMOTE = 1		
	REMOTE/LOCAL TEST PASS	If all steps are correct, this message is output.
	REMOTE/TALK TEST FAIL	If any step fails, this message is output.
	LISTEN/TALK TEST	
LISTEN = 0, TALK = 1, REMOTE = 1		If the 4192A HP-IB Status Indicators and Controller Display are the same, press <input type="checkbox"/> Y , and <input type="checkbox"/> CONTINUE . If not, press <input type="checkbox"/> N and <input type="checkbox"/> CONTINUE .
LISTEN = 0, TALK = 0, REMOTE = 1		
	LISTEN/TALK TEST PASS	If both steps are correct, this message is output.
	LISTEN/TALK TEST FAIL	If any step fails, this message is output.
	END	

*1 indicates ON; 0 indicates OFF.

PERFORMANCE TESTS

TEST PROGRAM 2

[PURPOSE]

This test verifies that the 4192A has the following HP-IB capabilities:

- (1) Listener
- (2) Device Clear

[PROGRAM LISTING]

```

0: "LISTENER TEST-1":
1: dim P$[10]
2: prt "LISTENER TEST-1";spc 3
3: rem 7
4: cli 7
5: clr 717
6: enp "Display A ? (1 thru 7)",P$;spc 1
7: if P$="e";jmp 2
8: wrt 717,"A",P$;jmp -2
9: wrt 717,"A1"
10: enp "Display B ? (1 thru 2)",P$;spc 1
11: if P$="e";jmp 2
12: wrt 717,"B",P$;jmp -2
13: wrt 717,"A3"
14: enp "Display B ? (1 thru 3)",P$;spc 1
15: if P$="e";jmp 2
16: wrt 717,"B",P$;jmp -2
17: wrt 717,"A5"
18: enp "Display B ? (1 thru 3)",P$;spc 1
19: if P$="e";jmp 2
20: wrt 717,"B",P$;jmp -2
21: clr 717
22: enp "Circuit Mode ? (1 thru 3)",P$;spc 1
23: if P$="e";jmp 2
24: wrt 717,"C",P$;jmp -2
25: enp "Gain Mode ? (1 thru 2)",P$;spc 1
26: if P$="e";jmp 2
27: wrt 717,"A5H",P$;jmp -2
28: enp "ZY Range ? (1 thru 8)",P$;spc 1
29: if P$="e";jmp 2
30: wrt 717,"A102R",P$;jmp -2
31: enp "Trigger Mode ? (1 thru 3)",P$;spc 1
32: if P$="e";jmp 2
33: wrt 717,"T",P$;jmp -2
34: prt "END";spc 3
35: clr 717
36: cli 7
37: lcl 7
38: end
*20186

```

Input the numeric portion* (suffix) of the HP-IB program code (listed in Table 3-23) for each panel function of the indicated display (A or B) or mode keys (CIRCUIT MODE, GAIN MODE, ZY RANGE, TRIGGER MODE). Press and verify that the 4192A is set to the appropriate function or mode. For example, when Display A ? (1 thru 7) is displayed on the 9825A, inputting and will set the 4192A to impedance measurement, and the |Z|/|Y| indicator lamp on the front-panel will come one; inputting and will set the 4192A to resistance measurement, and the R/G indicator lamp will come on.

Press (end) and after each step, e.g., after all seven functions of DISPLAY A have been checked.

*This number is printed on the front-panel, next to the indicator lamp or key.

PERFORMANCE TESTS

TEST PROGRAM 3

[PURPOSE]

This test verifies that the 4192A has the following HP-IB capabilities:

- (1) Listener
- (2) Device Clear

[PROGRAM LISTING]

```

0: "LISTENER TEST-2":
1: dim P$[10]
2: prt "LISTENER TEST-2",spc 3
3: rem 7
4: cli 7
5: clr 717
6: fxd 6
7: enp "Spot Freq. (KHZ) ?",P$,spc 1
8: if P$="e";jmp 2
9: wrt 717,"FR",P$,"EN";jmp -2
10: enp "Step Freq. (KHZ) ?",P$,spc 1
11: if P$="e";jmp 2
12: wrt 717,"SF",P$,"EN";jmp -2
13: enp "Start Freq. (KHZ) ?",P$,spc 1
14: if P$="e";jmp 2
15: wrt 717,"TF",P$,"EN";jmp -2
16: enp "Stop Freq. (KHZ) ?",P$,spc 1
17: if P$="e";jmp 2
18: wrt 717,"PF",P$,"EN";jmp -2
19: enp "Spot Bias(V) ?",P$,spc 1
20: if P$="e";jmp 2
21: wrt 717,"BI",P$,"EH";jmp -2
22: enp "Step Bias(V)",P$,spc 1
23: if P$="e";jmp 2
24: wrt 717,"SB",P$,"EN";jmp -2
25: enp "Start Bias(V) ?",P$,spc 1
26: if P$="e";jmp 2
27: wrt 717,"TB",P$,"EN";jmp -2
28: enp "Stop Bias(V) ?",P$,spc 1
29: if P$="e";jmp 2
30: wrt 717,"PB",P$,"EN";jmp -2
31: wrt 717,"I0"
32: enp "OSC Level(V) ?",P$,spc 1
33: if P$="e";jmp 2
34: wrt 717,"OL",P$,"EN";jmp -2
35: prt "END";spc 3
36: clr 717
37: cli 7
38: lcl 7
39: end
*348

```

Input a value for the indicated test parameter, and press . The indicator lamp for the test parameter should come on and the value that was input should be correctly displayed on the test parameter display (DISPLAY C). Press and after each step.

PERFORMANCE TESTS

TEST PROGRAM 4

[PURPOSE]

This test verifies that the 4192A has the following HP-IB capabilities:

- (1) Talker
- (2) Device Trigger

[PROGRAMMING]

```
0: "TALKER TEST";
1: prt "TALKER TEST";spc 3
2: dso "Insert sample cap. into 16047A";stp
3: prt "DATA OUTPUT TEST"
4: dim A$(1),D$(50)
5: rds(717)}S
6: rem 7
7: cli 7
8: clr 717
9: wrt 717,"A4T3"
10: trg 717
11: red 717,A,B
12: flt 4
13: prt A,B;spc 2
14: ent "Is output data correct?(y or n)",A$
15: if A$="n";prt "DATA OUTPUT TEST FAIL";spc 3;jmp 2
16: prt "DATA OUTPUT TEST PASS";spc 3
17: prt "COMPLETE DATA OUTPUT TEST-1"
18: trg 717
19: red 717,D$
20: prt D$;spc 2
21: ent "Is output data correct?(y or n)",A$
22: if A$="n";prt "COMPLETE DATA OUTPUT TEST-1 FAIL";spc 3;jmp 2
23: prt "COMPLETE DATA OUTPUT TEST-1 PASS";spc 3
24: prt "COMPLETE DATA OUTPUT TEST-2"
25: wrt 717,"F1FRR"
26: trg 717
27: red 717,D$
28: prt D$;spc 2
29: ent "Is output data correct?(y or n)",A$
30: if A$="n";prt "COMPLETE DATA OUTPUT TEST-2 FAIL";spc 3;jmp 2
31: prt "COMPLETE DATA OUTPUT TEST-2 PASS";spc 3
32: prt "COMPLETE DATA OUTPUT TEST-3"
33: wrt 717,"OLR"
34: trg 717
35: red 717,D$
36: wrt 717,"F0"
37: prt D$;spc 2
38: ent "Is output data correct?(y or n)",A$
39: if A$="n";prt "COMPLETE DATA OUTPUT TEST-3 FAIL";spc 3;jmp 2
40: prt "COMPLETE DATA OUTPUT TEST-3 PASS";spc 3
41: prt "END";spc 3
42: clr 717
43: cli 7
44: lcl 7
45: end
*19288
```

PERFORMANCE TESTS

Table 4-14. Controller Instructions and Operator Responses for Test Program 4

Controller Instructions		Operator Response
Displays	Printout	
	TALKER TEST	
Connect a capacitor to 16047A		Connect a capacitor (1000pF ~ 1000 nF) to 16047A Test Fixture. Then press <input type="button" value="CONTINUE"/> .
	DATA OUTPUT TEST	
	1.0244e - 09 1.0000e - 04	DISPLAY A and DISPLAY B measurement data is output to the 9825A's thermal printer.
Is output data correct? (y or n)		If the output data is the same as the values displayed on DISPLAYs A and B, press <input type="button" value="Y"/> and <input type="button" value="CONTINUE"/> . If not, press <input type="button" value="N"/> and <input type="button" value="CONTINUE"/> .
	DATA OUTPUT TEST PASS	
	DATA OUTPUT TEST FAIL	
	COMPLETE DATA OUTPUT TEST - 1	
	NCPN + 1.0244E - 09, NDFN + 0.0001E + 00	Complete data of DISPLAY A and DISPLAY B is output.
Is output data correct? (y or n)		If the output data is correct, press <input type="button" value="Y"/> and <input type="button" value="CONTINUE"/> . If not, press <input type="button" value="N"/> and <input type="button" value="CONTINUE"/> . (See paragraph 3-125.)
	COMPLETE DATA OUTPUT TEST - 1 PASS	
	COMPLETE DATA OUTPUT TEST - 1 FAIL	
	COMPLETE DATA OUTPUT TEST - 2	
	NCPN + 1.0245E - 09, NDFN + 0.0001E + 00, K + 0100.0000	Complete data of DISPLAY A, DISPLAY B, and SPOT FREQ. is output.
Is output data correct? (y or n)		If the output data is the same as the values displayed on DISPLAY's A and B and DISPLAY C (Test Parameter data display), press <input type="button" value="Y"/> and <input type="button" value="CONTINUE"/> . If not, press <input type="button" value="N"/> and <input type="button" value="CONTINUE"/> . (See paragraph 3-125.)
	COMPLETE DATA OUTPUT TEST - 2 PASS	
	COMPLETE DATA OUTPUT TEST - 2 FAIL	

PERFORMANCE TESTS

Controller Instructions		Operator Response
Displays	Printout	
	COMPLETE DATA OUTPUT TEST - 3	
	NCPN + 1.0245E - 09, NDFN + 0.0000E + 00, V + 00001.000	Complete data of DISPLAY A, DISPLAY B, and OSC LEVEL is output.
Is output data correct? (y or n)		If the output data is the same as the values displayed on DISPLAY's A and B and DISPLAY C (Test Parameter data display), press <input type="radio"/> Y and <input type="radio"/> CONTINUE. If not, press <input type="radio"/> N and <input type="radio"/> CONTINUE. (See paragraph 3-125.)
	COMPLETE DATA OUTPUT TEST - 3 PASS	
	COMPLETE DATA OUTPUT TEST - 3 FAIL	
	END	

TEST PROGRAM 5

[PURPOSE]

This test program verifies that the 4192A has the following HP-IB capabilities:

- (1) Service Request
- (2) Serial Poll

[PROGRAM LISTING]

```

0: "SRQ TEST":
1: prt "SRQ TEST";spc 3
2: fxd 0
3: oni 7,"SRQ"
4: rem 7
5: cli 7
6: clr 717
7: 0}S;prt "DATA READY";wrt 717,"D1T2";trg 717;gsb "LOOP"
8: 0}S;prt "SYNTAX ERROR";wrt 717,"D0A8";gsb "LOOP"
9: 0}S;prt "PROG. ERROR";wrt 717,"FR14000EN";gsb "LOOP"
10: 0}S;prt "TRG. TOO FAST";trg 717;wait 50;trg 717;gsb "LOOP"
11: 0}S;prt "BUSY"
12: wrt 717,"T1W1W4";wait 1000
13: rds(717)}S;prt S;spc 3
14: wrt 717,"AB"
15: prt "END";spc 3
16: cli 7
17: lcl 7
18: end

```

PERFORMANCE TESTS

```

19: "LOOP":eir 7,128
20: if bit(0,S)=1;prt S;spc 3;ret
21: if bit(1,S)=1;prt S;spc 3;ret
22: if bit(2,S)=1;prt S;spc 3;ret
23: if bit(3,S)=1;prt S;spc 3;ret
24: gto "LOOP"
25: "SRQ":rds(717)}S
26: if bit(6,S)=1;jmp 2
27: prt "OTHER DEVICE SRQ";spc 3
28: "IRET":eir 7,128
29: iret
*31908
    
```

Table 4-15. Controller Instruction and Operator Responses for Test Program 5

Controller Instructions		Operator Response
Displays	Printout	
	SRQ TEST	
	DATA READY	SRQ Status Byte data should be 65 (= 01000001).
	65	
	SYNTAX ERROR	SRQ Status Byte data should be 66 (= 01000010).
	66	
	PROG. ERROR	SRQ Status Byte data should be 68 (= 01000100).
	68	
	TRG. TOO FAST	SRQ Status Byte data should be 72 (= 01001000).
	72	
	BUSY	SRQ Status Byte data should be 16 (= 00010000).
	16	
	END	

PERFORMANCE TESTS

APPENDIX

The following are HP-IB Interface Test for the 4192A that can be run on the HP85 Personal Computer. They are functionally identical to the HP 9825B programs given in paragraph 4-31. Equipment required to execute these Programs is as follows:

Personal Computer HP85
I/O ROM hp P/N 00085-15003
ROM DRAWER HP82936A
HP-IB Interface Module HP82937A
Sample Capacitor 1000pF 1000nF
Test Fixture HP16047A

PERFORMANCE TESTS

TEST PROGRAM 1

[PROGRAM LISTING]

```

10 ! REMOTE/LOCAL TEST
20 OPTION BASE 1
30 DIM B$(20),C$(25)
40 A1=717 @ A=7
50 B$="REMOTE/LOCAL TEST "
60 C$="LISTEN* TALK* REMOTE = "
70 N=0
80 S=SPOLL(A1)
90 PRINT B$
100 REMOTE A
110 OUTPUT A1 ;"T1"
120 C1$="1" @ C2$="0" @ C3$="1"
130 GOSUB 460
140 ABORTIO A
150 C1$="0" @ C2$="0" @ C3$="1"
160 GOSUB 460
170 LOCAL A
180 C1$="0" @ C2$="0" @ C3$="0"
190 GOSUB 460
200 REMOTE A1
210 C1$="1" @ C2$="0" @ C3$="1"
220 GOSUB 460
230 LOCAL LOCKOUT A
240 LOCAL A1
250 C1$="1" @ C2$="0" @ C3$="0"
260 GOSUB 460
270 REMOTE A
280 OUTPUT A1 ;"T1"
290 C1$="1" @ C2$="0" @ C3$="1"
300 GOSUB 460
310 GOSUB 530
320 N=0
330 B$="LISTEN/TALK TEST "
340 PRINT B$
350 ENTER A1 ; X,Y
360 C1$="0" @ C2$="1" @ C3$="1"
370 GOSUB 460
380 OUTPUT A1 ;"T1"
390 C1$="1" @ C2$="0" @ C3$="1"
400 GOSUB 460
410 GOSUB 530
420 ABORTIO A
430 LOCAL A
440 PRINT "END"
450 END
460 ! ***** SUB A$ *****
470 C$(8,8)=C1$ @ C$(15,15)=C2$
480 C$(24,24)=C3$
490 DISP C$;
500 INPUT A$
510 IF A$="N" THEN N=1
520 RETURN
530 ! ***** SUB PRT *****
540 PRINT B$;
550 IF N=1 THEN PRINT "FAIL" ELSE PRINT "PASS"
560 RETURN

```

PERFORMANCE TESTS

Controller Instructions and Operator Responses for Test Program 1

Controller Instructions		Operator Response
Displays	Printout	
	REMOTE/LOCAL TEST	
LISTEN=1 TALK=0 REMOTE=1 ? LISTEN=0 TALK=0 REMOTE=1 ? LISTEN=0 TALK=0 REMOTE=0 ? LISTEN=1 TALK=0 REMOTE=1 ? LISTEN=1 TALK=0 REMOTE=0 ? LISTEN=1 TALK=0 REMOTE=1 ?		If the 4192A HP-IB Status Indicators and Controller Display are the same, press [Y] , and [END LINE] . If not, press [N] , and [END LINE] .
	REMOTE/LOCAL TEST PASS	If all steps are correct, this message is output.
	REMOTE/LOCAL TEST FAIL	If any step fails, this message is output.
	LISTEN/TALK TEST	
LISTEN=0 TALK=1 REMOTE=1 ? LISTEN=0 TALK=0 REMOTE=1 ?		If the 4192A HP-IB Status Indicators and Controller Display are the same, press [Y] , and [END LINE] . If not, press [N] , and [END LINE] .
	LISTEN/TALK TEST PASS	If both steps are correct, this message is output.
	LISTEN/TALK TEST FAIL	If any step fails, this message is output.
	END	

PERFORMANCE TESTS

TEST PROGRAM 2

[PROGRAM LISTING]

```

10 | LISTENER TEST-1
20 DIM P$(10)
30 A1=717 @ A=7
40 DISP "LISTENER TEST-1"
50 REMOTE A
60 ABORTIO A
70 CLEAR A1
80 DISP "DISPLAY A(1 thru 7)";
90 INPUT P$
100 IF P$="E" THEN 120
110 OUTPUT A1 ;"A",P$ @ GOTO 80
120 OUTPUT A1 ;"A1"
130 DISP "DISPLAY B(1 thru 2)";
140 INPUT P$
150 IF P$="E" THEN 170
160 OUTPUT A1 ;"B",P$ @ GOTO 130
170 OUTPUT A1 ;"A3"
180 DISP "DISPLAY B(1 thru 3)";
190 INPUT P$
200 IF P$="E" THEN 220
210 OUTPUT A1 ;"B",P$ @ GOTO 180
220 OUTPUT A1 ;"A5"
230 DISP "DISPLAY B(1 thru 3)";
240 INPUT P$
250 IF P$="E" THEN 270
260 OUTPUT A1 ;"B",P$ @ GOTO 230
270 CLEAR A1
280 DISP "CIRCUIT MODE(1 thru 3)";
290 INPUT P$
300 IF P$="E" THEN 320
310 OUTPUT A1 ;"C",P$ @ GOTO 280
320 DISP "GAIN MODE(1 thru 2)";
330 INPUT P$
340 IF P$="E" THEN 360
350 OUTPUT A1 ;"A5N",P$ @ GOTO 320
360 DISP "ZY RANGE(1 thru 8)";
370 INPUT P$
380 IF P$="E" THEN 400
390 OUTPUT A1 ;"A1C2R",P$ @ GOTO 360
400 DISP "TRIGGER MODE(1 thru 3)";
410 INPUT P$
420 IF P$="E" THEN 440
430 OUTPUT A1 ;"T",P$ @ GOTO 400
440 DISP "END"
450 ABORTIO A
460 LOCAL A
470 END

```

Input the numeric portion* (suffix) of the HP-IB program code for each panel function of the indicated display (A or B) or mode keys (CIRCUIT MODE, GAIN MODE, ZY RANGE, TRIGGER MODE). Press **END LINE** and verify that the 4192A is set to the appropriate function or mode. For example, when Display A ? (1 thru 7) is displayed on the HP85, inputting **1** and **END LINE** will set the 4192A to impedance measurement, and the $|Z|/|Y|$ indicator lamp on the front-panel will come on; inputting **2** and **END LINE** will set the 4192A to resistance measurement, and the R/G indicator lamp will come on. Press **E** (end) and **END LINE** after each step, e.g., after all seven functions of DISPLAY A have been checked.

*This number is printed on the front-panel, next to the indicator lamp or key.

PERFORMANCE TESTS

TEST PROGRAM 3

[PROGRAM LISTING]

```
10 | LISTENER TEST-2
20 DIM P$[10]
30 A1=717 @ A=7
40 DISP "LISTENER TEST-2"
50 REMOTE A
60 ABORTIO A
70 CLEAR A1
80 DISP "SPOT FREQ.(kHz)";
90 INPUT P$
100 IMAGE K,7A,K
110 IF P$="E" THEN 130
120 OUTPUT A1 USING 100 ; "FR",P$,"EN" @ GOTO 80
130 DISP "STEP FREQ.(kHz)";
140 INPUT P$
150 IF P$="E" THEN 170
160 OUTPUT A1 USING 100 ; "SF",P$,"EN" @ GOTO 130
170 DISP "START FREQ.(kHz)";
180 INPUT P$
190 IF P$="E" THEN 210
200 OUTPUT A1 USING 100 ; "TF",P$,"EN" @ GOTO 170
210 DISP "STOP FREQ.(kHz)";
220 INPUT P$
230 IF P$="E" THEN 250
240 OUTPUT A1 USING 100 ; "PF",P$,"EN" @ GOTO 210
250 DISP "SPOT BIAS(V)";
260 INPUT P$
270 IF P$="E" THEN 290
280 OUTPUT A1 USING 100 ; "BI",P$,"EN" @ GOTO 250
290 DISP "STEP BIAS(V)";
300 INPUT P$
310 IF P$="E" THEN 330
320 OUTPUT A1 USING 100 ; "SB",P$,"EN" @ GOTO 290
330 DISP "START BIAS(V)";
340 INPUT P$
350 IF P$="E" THEN 370
360 OUTPUT A1 USING 100 ; "TB",P$,"EN" @ GOTO 330
370 DISP "STOP BIAS(V)";
380 INPUT P$
390 IF P$="E" THEN 410
400 OUTPUT A1 USING 100 ; "PB",P$,"EN" @ GOTO 370
410 OUTPUT A1 ;"IO"
420 DISP "OSC LEVEL(V)";
430 INPUT P$
440 IF P$="E" THEN 460
450 OUTPUT A1 USING 100 ; "OL",P$,"EN" @ GOTO 420
460 DISP "END"
470 ABORTIO A
480 LOCAL A
490 END
```

Input a value for the indicated test parameter, and press **END LINE**. The indicator lamp for the test parameter should come on and the value that was input should be correctly displayed on the test parameter display (DISPLAY C). Press **E** and **END LINE** after each step.

PERFORMANCE TESTS

TEST PROGRAM 4

[PROGRAM LISTING]

```

10 ! TALKER TEST
20 OPTION BASE 1
30 DIM D$(50),B$(30)
40 B$="DATA OUTPUT TEST "
50 A1=717 @ A=7
60 PRINT "TALKER TEST"
70 DISP "CONNECT A CAPACITOR TO 16047A"
80 DISP TAB(15);"PRESS [CONT] KEY"
90 PAUSE
100 PRINT B$
110 S=SPOLL(A1)
120 REMOTE A
130 ABORTIO A
140 CLEAR A1
150 OUTPUT A1 ;"A4T3"
160 TRIGGER A1
170 ENTER A1 ; X,Y
180 IMAGE 2(D.4DE,5X)
190 PRINT USING 180 ; X,Y
200 GOSUB 470
210 B$="COMPLETE "&B$
220 B$(26)="-1 "
230 PRINT B$
240 TRIGGER A1
250 ENTER A1 ; D$
260 PRINT D$
270 GOSUB 470
280 B$(26)="-2 "
290 PRINT B$
300 OUTPUT A1 ;"F1FRR"
310 TRIGGER A1
320 ENTER A1 ; D$
330 PRINT D$
340 GOSUB 470
350 B$(26)="-3 "
360 PRINT B$
370 OUTPUT A1 ;"OLR"
380 TRIGGER A1
390 ENTER A1 ; D$
400 OUTPUT A1 ;"FO"
410 PRINT D$
420 GOSUB 470
430 PRINT "END"
440 ABORTIO A
450 LOCAL A
460 END
470 ! ***** SUB *****
480 DISP "IS OUTPUT DATA CORRECT(Y or N)";
490 INPUT A$
500 PRINT B$;
510 IF A$="N" THEN PRINT "FAIL" ELSE PRINT "PASS"
520 RETURN

```

PERFORMANCE TESTS

Controller Instructions and Operator Responses for Test Program 4

Controller Instructions		Operator Response
Displays	Printout	
	TALKER TEST	
CONNECT A CAPACITOR TO 16047A PRESS [CONT] KEY		Connect a capacitor (1000pF -- 1000nF) to 16047A Test Fixture. Then press [CONT] .
	DATA OUTPUT TEST	
	1.0117E-008 1.2300E-002	DISPLAY A and DISPLAY B measurement data is output to the HP85's printer.
IS OUTPUT DATA CORRECT (Y or N) ?	DATA OUTPUT TEST PASS DATA OUTPUT TEST FAIL	If the output data is the same as the values displayed on DISPLAYs A and B, press [Y] and [END LINE] . If not, press [N] and [END LINE] .
	COMPLETE DATA OUTPUT TEST-1	
	NCSN+10.106E-09, NDFC+0.0125E+00	Complete data of DISPLAY A AND DISPLAY B is output.
IS OUTPUT DATA CORRECT (Y or N) ?	COMPLETE DATA OUTPUT TEST-1 PASS COMPLETE DATA OUTPUT TEST-1 FAIL	If the output data is correct, press [Y] and [END LINE] . If not, press [N] and [END LINE] .
	COMPLETE DATA OUTPUT TEST-2	
	NCSN+10.100E-09, NDFN+0.0127E+00, K+0100.0000	Complete data of DISPLAY A, DISPLAY B and SPOT FREQ. is output.

PERFORMANCE TESTS

Controller Instructions and Operator Responses for Test Program 4

Controller Instructions		Operator Response
Displays	Printout	
IS OUTPUT DATA CORRECT (Y or N) ?	COMPLETE DATA OUTPUT TEST-2 PASS	If the output data is the same as the values displayed on DISPLAYs A and B and DISPLAY C (Test Parameter data display), press Y and END LINE . If not, press N and END LINE .
	COMPLETE DATA OUTPUT TEST-2 FAIL	
	COMPLETE DATA OUTPUT TEST-3	
	NCSN+10.100E-09, NDFN+0.0127E+00, V+00001.000	Complete data of DISPLAY A, DISPLAY B and OSC LEVEL is output.
IS OUTPUT DATA CORRECT (Y or N) ?	COMPLETE DATA OUTPUT TEST-3 PASS	If the output data is the same as the values displayed on DISPLAYs A and B and DISPLAY C (Test Parameter data display), press Y and END LINE . If not, press N and END LINE .
	COMPLETE DATA OUTPUT TEST-3 FAIL	
		END

PERFORMANCE TESTS

TEST PROGRAM 5

[PROGRAM LISTING]

```
10 ! SRQ TEST
20 A1=717 @ A=7
30 PRINT "SRQ TEST"
40 ON INTR 7 GOSUB 430
50 REMOTE A
60 ABORTIO A
70 CLEAR A1
80 S=0
90 PRINT "DATA READY"
100 OUTPUT A1 ;"D1T2"
110 TRIGGER A1
120 GOSUB 380
130 S=0
140 PRINT "SYNTAX ERROR"
150 OUTPUT A1 ;"DOAB"
160 GOSUB 380
170 S=0
180 PRINT "PROG. ERROR"
190 OUTPUT A1 ;"FR14000EN"
200 GOSUB 380
210 S=0
220 PRINT "TRG. TOO FAST"
230 TRIGGER A1
240 WAIT 50
250 TRIGGER A1
260 GOSUB 380
270 S=0
280 PRINT "BUSY"
290 OUTPUT A1 ;"T1W1W4"
300 WAIT 1000
310 S=SPOLL(A1)
320 PRINT S
330 OUTPUT A1 ;"AB"
340 PRINT "END"
350 ABORTIO A
360 LOCAL A
370 END
380 ! ***** SUB LOOP *****
390 ENABLE INTR 7;8
400 B=BIT(S,0) OR BIT(S,1) OR BIT(S,2) OR BIT(S,3)
410 IF B=1 THEN PRINT S @ RETURN
420 GOTO 380
430 ! ***** SUB SRQ *****
440 S=SPOLL(A1)
450 STATUS 7,1 ; S1
460 IF BIT(S,6)=0 THEN DISP "OTHER DEVICE SRQ"
470 ENABLE INTR 7;8
480 RETURN
```


PERFORMANCE TESTS

Controller Instruction and Operator Responses for Test Program 5

Controller Instructions		Operator Response
Displays	Printout	
	SRQ TEST	
	DATA READY	SRQ Status Byte data should be 65 (= 01000001).
	65	
	SYNTAX ERROR	SRQ Status Byte data should be 66 (= 01000010).
	66	
	PROG. ERROR	SRQ Status Byte data should be 68 (= 01000100).
	68	
	TRIG. TOO FAST	SRQ Status Byte data should be 72 (= 01001000).
	72	
	BUSY	SRQ Status Byte data should be 16 (= 00010000).
	16	
	END	

PERFORMANCE TEST RECORD

Hewlett-Packard Model 4192A LF IMPEDANCE ANALYZER Serial No. _____	Tested by _____ Date _____
---	-----------------------------------

Paragraph Number	Test	Minimum	Result Actual	Maximum
4-9	Measurement Signal Frequency Accuracy Test <div style="margin-left: 100px;"> 1MHz (H_{CUR}) 10MHz (H_{CUR}) 1MHz (1MHz Output) </div>	 0.99995 MHz 9.9995 MHz 0.99995 MHz	 _____ _____ _____	 1.00005 MHz 10.0005 MHz 1.00005 MHz
4-11	Measurement Signal Level Accuracy Test OSC Level : 5 mV	 5 Hz 2.65 mV 100Hz 2.75 mV 1 kHz 2.75 mV 10 kHz 2.75 mV 100kHz 2.75 mV 1 MHz 2.75 mV 13 MHz 1.83 mV	 _____ _____ _____ _____ _____ _____ _____	 7.35 mV 7.26 mV 7.26 mV 7.26 mV 7.26 mV 7.26 mV 8.18 mV
	OSC Level : 100 mV	 5 Hz 91.0 mV 100Hz 92.9 mV 1 kHz 93.0 mV 10 kHz 93.0 mV 100kHz 93.0 mV 1 MHz 93.0 mV 13 MHz 74.5 mV	 _____ _____ _____ _____ _____ _____ _____	 109.0 mV 107.1 mV 107.0 mV 107.0 mV 107.0 mV 107.0 mV 125.5 mV
	OSC Level : 105 mV	 5 Hz 87.7 mV 100Hz 89.7 mV 1 kHz 89.7 mV 10 kHz 89.7 mV 100kHz 89.7 mV 1 MHz 89.7 mV 13 MHz 70.3 mV	 _____ _____ _____ _____ _____ _____ _____	 122.35 mV 120.4 mV 120.3 mV 120.3 mV 120.3 mV 120.3 mV 139.7 mV

Paragraph Number	Test	Minimum	Result Actual	Maximum
4-11 (continued)	Measurement Signal Level Accuracy Test OSC Level : 1.1V			
	5 Hz	1.013 V	_____	1.187 V
	100 Hz	1.034 V	_____	1.166 V
	1 kHz	1.035 V	_____	1.165 V
	10 kHz	1.035 V	_____	1.165 V
	100 kHz	1.035 V	_____	1.165 V
	1 MHz	1.035 V	_____	1.165 V
	13 MHz	0.832 V	_____	1.369 V
4-13	Capacitance Accuracy Test Standard Capacitor : 1pF			
	Capacitance			
	100 kHz	C.V. - 5 fF	_____	C.V. + 5 fF
	500 kHz	C.V. - 5 fF	_____	C.V. + 5 fF
	1 MHz	C.V. - 2.4 fF	_____	C.V. + 2.4 fF
	5 MHz	C.V. - 10 fF	_____	C.V. + 10 fF
	10 MHz	C.V. - 21.6 fF	_____	C.V. + 21.6 fF
	13 MHz	C.V. - 28.0 fF	_____	C.V. + 28.0 fF
	Dissipation			
	100 kHz	- 0.0191	_____	+ 0.0191
	500 kHz	- 0.0078	_____	+ 0.0078
	1 MHz	- 0.0038	_____	+ 0.0038
	5 MHz	- 0.0075	_____	+ 0.0075
	10 MHz	- 0.0217	_____	+ 0.0217
	13 MHz	- 0.0280	_____	+ 0.0280
	Standard Capacitor : 10pF			
	Capacitance			
	10 kHz	C.V. - 50 fF	_____	C.V. + 50 fF
	50 kHz	C.V. - 50 fF	_____	C.V. + 50 fF
	100 kHz	C.V. - 24 fF	_____	C.V. + 24 fF
	500 kHz	C.V. - 40 fF	_____	C.V. + 40 fF
	1 MHz	C.V. - 14 fF	_____	C.V. + 14 fF
	5 MHz	C.V. - 80 fF	_____	C.V. + 80 fF
	10 MHz	C.V. - 163 fF	_____	C.V. + 163 fF
	13 MHz	C.V. - 211 fF	_____	C.V. + 211 fF
	Dissipation			
	10 kHz	- 0.0191	_____	+ 0.0191
	50 kHz	- 0.0078	_____	+ 0.0078
100 kHz	- 0.0038	_____	+ 0.0038	
500 kHz	- 0.0021	_____	+ 0.0021	
1 MHz	- 0.0013	_____	+ 0.0013	
5 MHz	- 0.0063	_____	+ 0.0063	
10 MHz	- 0.0174	_____	+ 0.0174	
13 MHz	- 0.0224	_____	+ 0.0224	

C.V. = Calibrated Value

Paragraph Number	Test	Minimum	Result Actual	Maximum
4-13 (continued)	Capacitance Accuracy Test			
	Standard Capacitor : 100pF			
	Capacitance			
	1 kHz	C.V. - 0.5pF	————	C.V. + 0.5pF
	5 kHz	C.V. - 0.5pF	————	C.V. + 0.5pF
	10kHz	C.V. - 0.24pF	————	C.V. + 0.24pF
	50kHz	C.V. - 0.4pF	————	C.V. + 0.4pF
	100kHz	C.V. - 0.14pF	————	C.V. + 0.14pF
	500kHz	C.V. - 0.4pF	————	C.V. + 0.4pF
	1 MHz	C.V. - 0.14pF	————	C.V. + 0.14pF
	5 MHz	C.V. - 0.7pF	————	C.V. + 0.7pF
	10MHz	C.V. - 2.91pF	————	C.V. + 2.91pF
	13 MHz	C.V. - 4.74pF	————	C.V. + 4.74pF
	Dissipation			
	1 kHz	- 0.0191	————	+ 0.0191
	5 kHz	- 0.0078	————	+ 0.0078
	10 kHz	- 0.0038	————	+ 0.0038
	50 kHz	- 0.0021	————	+ 0.0021
	100 kHz	- 0.0013	————	+ 0.0013
	500 kHz	- 0.0021	————	+ 0.0021
	1 MHz	- 0.0013	————	+ 0.0013
	5 MHz	- 0.0056	————	+ 0.0056
	10MHz	- 0.0354	————	+ 0.0354
	13 MHz	- 0.0581	————	+ 0.0581
	Standard Capacitor : 1000pF			
	Capacitance			
	100Hz	C.V. - 50pF	————	C.V. + 50pF
	400Hz	C.V. - 40pF	————	C.V. + 40pF
	1 kHz	C.V. - 2.4pF	————	C.V. + 2.4pF
	5 kHz	C.V. - 4pF	————	C.V. + 4pF
	10kHz	C.V. - 1.4pF	————	C.V. + 1.4pF
	50kHz	C.V. - 4pF	————	C.V. + 4pF
	100kHz	C.V. - 1.4pF	————	C.V. + 1.4pF
	500kHz	C.V. - 4pF	————	C.V. + 4pF
	1 MHz	C.V. - 1.4pF	————	C.V. + 1.4pF
	Dissipation			
	100Hz	- 0.026	————	+ 0.026
	400Hz	- 0.009	————	+ 0.009
	1 kHz	- 0.0038	————	+ 0.0038
	5 kHz	- 0.0021	————	+ 0.0021
	10kHz	- 0.0014	————	+ 0.0014
	50 kHz	- 0.0021	————	+ 0.0021
100 kHz	- 0.0013	————	+ 0.0013	
500 kHz	- 0.0021	————	+ 0.0021	
1 MHz	- 0.0013	————	+ 0.0013	

C.V. = Calibrated Value

Paragraph Number	Test	Minimum	Result Actual	Maximum	
4-15	Resistance Accuracy Test				
	Standard Resistor : 100Ω				
	5 Hz	C.V. - 1.30Ω	———	C.V. + 1.30Ω	
	10Hz	C.V. - 0.72Ω	———	C.V. + 0.72Ω	
	50Hz	C.V. - 0.32Ω	———	C.V. + 0.32Ω	
	100Hz	C.V. - 0.19Ω	———	C.V. + 0.19Ω	
	400Hz	C.V. - 0.15Ω	———	C.V. + 0.15Ω	
	1 kHz	C.V. - 0.13Ω	———	C.V. + 0.13Ω	
	5 kHz	C.V. - 0.13Ω	———	C.V. + 0.13Ω	
	10kHz	C.V. - 0.13Ω	———	C.V. + 0.13Ω	
	50kHz	C.V. - 0.13Ω	———	C.V. + 0.13Ω	
	100kHz	C.V. - 0.13Ω	———	C.V. + 0.13Ω	
	500kHz	C.V. - 0.13Ω	———	C.V. + 0.13Ω	
	1 MHz	C.V. - 0.13Ω	———	C.V. + 0.13Ω	
	5 MHz	C.V. - 0.41Ω	———	C.V. + 0.41Ω	
	10MHz	C.V. - 2.91Ω	———	C.V. + 2.91Ω	
	13MHz	C.V. - 4.74Ω	———	C.V. + 4.74Ω	
	Standard Resistor : 1 kΩ				
	5 Hz	C.V. - 23.0Ω	———	C.V. + 23.0Ω	
	10Hz	C.V. - 14.0Ω	———	C.V. + 14.0Ω	
	50Hz	C.V. - 7.0Ω	———	C.V. + 7.0Ω	
	100Hz	C.V. - 5.0Ω	———	C.V. + 5.0Ω	
	400Hz	C.V. - 4.0Ω	———	C.V. + 4.0Ω	
	1 kHz	C.V. - 3.3Ω	———	C.V. + 3.3Ω	
	5 kHz	C.V. - 3.3Ω	———	C.V. + 3.3Ω	
	10kHz	C.V. - 3.3Ω	———	C.V. + 3.3Ω	
	50kHz	C.V. - 3.3Ω	———	C.V. + 3.3Ω	
	100kHz	C.V. - 3.3Ω	———	C.V. + 3.3Ω	
	500kHz	C.V. - 3.3Ω	———	C.V. + 3.3Ω	
	1 MHz	C.V. - 3.3Ω	———	C.V. + 3.3Ω	
	5 MHz	C.V. - 6.2Ω	———	C.V. + 6.2Ω	
	10MHz	C.V. - 31.0Ω	———	C.V. + 31.0Ω	
	13MHz	C.V. - 49.3Ω	———	C.V. + 49.3Ω	

Paragraph Number	Test	Minimum	Result Actual	Maximum		
4-15 (continued)	Resistance Accuracy Test Standard Resistor : 10kΩ	5 Hz	C.V. - 0.204kΩ	————	C.V. + 0.204kΩ	
		10Hz	C.V. - 0.117kΩ	————	C.V. + 0.117kΩ	
		50Hz	C.V. - 0.059kΩ	————	C.V. + 0.059kΩ	
		100Hz	C.V. - 0.039kΩ	————	C.V. + 0.039kΩ	
		400Hz	C.V. - 0.034kΩ	————	C.V. + 0.034kΩ	
		1 kHz	C.V. - 0.031kΩ	————	C.V. + 0.031kΩ	
		5 kHz	C.V. - 0.031kΩ	————	C.V. + 0.031kΩ	
		10kHz	C.V. - 0.031kΩ	————	C.V. + 0.031kΩ	
		50kHz	C.V. - 0.031kΩ	————	C.V. + 0.031kΩ	
		100kHz	C.V. - 0.031kΩ	————	C.V. + 0.031kΩ	
		500kHz	C.V. - 0.031kΩ	————	C.V. + 0.031kΩ	
		1 MHz	C.V. - 0.031kΩ	————	C.V. + 0.031kΩ	
		Standard Resistor : 100kΩ	5 Hz	C.V. - 2.41kΩ	————	C.V. + 2.41kΩ
			10Hz	C.V. - 1.36kΩ	————	C.V. + 1.36kΩ
			50Hz	C.V. - 0.66kΩ	————	C.V. + 0.66kΩ
			100Hz	C.V. - 0.42kΩ	————	C.V. + 0.42kΩ
			400Hz	C.V. - 0.35kΩ	————	C.V. + 0.35kΩ
			1 kHz	C.V. - 0.31kΩ	————	C.V. + 0.31kΩ
			5 kHz	C.V. - 0.31kΩ	————	C.V. + 0.31kΩ
			10kHz	C.V. - 0.31kΩ	————	C.V. + 0.31kΩ
			50kHz	C.V. - 0.31kΩ	————	C.V. + 0.31kΩ
			100kHz	C.V. - 0.31kΩ	————	C.V. + 0.31kΩ
		4-17	Frequency Phase Accuracy Test	100Hz	C.V. - 0.033Ω	————
400Hz	C.V. - 0.029Ω			————	C.V. + 0.029Ω	
1 kHz	C.V. - 0.026Ω			————	C.V. + 0.026Ω	
5 kHz	C.V. - 0.026Ω			————	C.V. + 0.026Ω	
10kHz	C.V. - 0.026Ω			————	C.V. + 0.026Ω	
50kHz	C.V. - 0.026Ω			————	C.V. + 0.026Ω	
100kHz	C.V. - 0.026Ω			————	C.V. + 0.026Ω	
500kHz	C.V. - 0.026Ω			————	C.V. + 0.026Ω	
1 MHz	C.V. - 0.026Ω			————	C.V. + 0.026Ω	
5 MHz	C.V. - 0.067Ω			————	C.V. + 0.067Ω	
10MHz	C.V. - 0.400Ω			————	C.V. + 0.400Ω	
13 MHz	C.V. - 0.645Ω			————	C.V. + 0.645Ω	

C.V. = Calibrated Value

Paragraph Number	Test	Minimum	Result Actual	Maximum	
4-19	Amplitude/Phase (0dB) Accuracy Test				
	Amplitude				
		5 Hz	- 0.096 dB	————	+ 0.096 dB
		10Hz	- 0.056 dB	————	+ 0.056 dB
		50Hz	- 0.029 dB	————	+ 0.029 dB
		100Hz	- 0.020 dB	————	+ 0.020 dB
		500Hz	- 0.020 dB	————	+ 0.020 dB
		1 kHz	- 0.020 dB	————	+ 0.020 dB
		5 kHz	- 0.020 dB	————	+ 0.020 dB
		10kHz	- 0.020 dB	————	+ 0.020 dB
		50kHz	- 0.090 dB	————	+ 0.090 dB
		100kHz	- 0.090 dB	————	+ 0.090 dB
		500kHz	- 0.090 dB	————	+ 0.090 dB
		1 MHz	- 0.090 dB	————	+ 0.090 dB
		5 MHz	- 0.170 dB	————	+ 0.170 dB
		10MHz	- 0.450 dB	————	+ 0.450 dB
		13MHz	- 0.570 dB	————	+ 0.570 dB
		Phase			
		5 Hz	- 0.48 deg	————	+ 0.48 deg
		10Hz	- 0.28 deg	————	+ 0.28 deg
		50Hz	- 0.15 deg	————	+ 0.15 deg
		100Hz	- 0.10 deg	————	+ 0.10 deg
		500Hz	- 0.10 deg	————	+ 0.10 deg
		1 kHz	- 0.10 deg	————	+ 0.10 deg
		10kHz	- 0.10 deg	————	+ 0.10 deg
		50kHz	- 0.16 deg	————	+ 0.16 deg
		100kHz	- 0.16 deg	————	+ 0.16 deg
		500kHz	- 0.16 deg	————	+ 0.16 deg
	1 MHz	- 0.16 deg	————	+ 0.16 deg	
	5 MHz	- 0.48 deg	————	+ 0.48 deg	
	10MHz	- 1.60 deg	————	+ 1.60 deg	
	13MHz	- 2.08 deg	————	+ 2.08 deg	
4-21	Amplitude Accuracy Test				
	Attenuator setting : - 10dB	10kHz	C.V. - 0.020 dB	————	C.V. + 0.020 dB
		1MHz	C.V. - 0.090 dB	————	C.V. + 0.090 dB
		10MHz	C.V. - 0.450 dB	————	C.V. + 0.450 dB
	Attenuator setting : - 30dB	10kHz	C.V. - 0.07 dB	————	C.V. + 0.07 dB
		1MHz	C.V. - 0.17 dB	————	C.V. + 0.17 dB
		10MHz	C.V. - 0.89 dB	————	C.V. + 0.89 dB
	Attenuator setting : - 50dB	10kHz	C.V. - 0.21 dB	————	C.V. + 0.21 dB
		1MHz	C.V. - 0.24 dB	————	C.V. + 0.24 dB
	10MHz	C.V. - 1.33 dB	————	C.V. + 1.33 dB	

C.V. = Calibrated Value

Paragraph Number	Test	Minimum	Result Actual	Maximum
4-21 (continued)	Amplitude Accuracy Test			
	Attenuator setting : - 70dB			
	10kHz	C.V. - 2.01 dB	————	C.V. + 2.01 dB
	1 MHz	C.V. - 2.04 dB	————	C.V. + 2.04 dB
	10MHz	C.V. - 11.23 dB	————	C.V. + 11.23 dB
4-23	Absolute Amplitude Accuracy Test			
	5 Hz	C.V. - 0.60 dBV	————	C.V. + 0.60 dBV
	10 Hz	C.V. - 0.50 dBV	————	C.V. + 0.50 dBV
	30 Hz	C.V. - 0.43 dBV	————	C.V. + 0.43 dBV
	100 Hz	C.V. - 0.40 dBV	————	C.V. + 0.40 dBV
	300 Hz	C.V. - 0.40 dBV	————	C.V. + 0.40 dBV
	1 kHz	C.V. - 0.40 dBV	————	C.V. + 0.40 dBV
	3 kHz	C.V. - 0.40 dBV	————	C.V. + 0.40 dBV
	10 kHz	C.V. - 0.40 dBV	————	C.V. + 0.40 dBV
	30 kHz	C.V. - 0.40 dBV	————	C.V. + 0.40 dBV
	75 kHz	C.V. - 0.40 dBV	————	C.V. + 0.40 dBV
	100 kHz	C.V. - 0.40 dBV	————	C.V. + 0.40 dBV
	300 kHz	C.V. - 0.40 dBV	————	C.V. + 0.40 dBV
	1 MHz	C.V. - 0.40 dBV	————	C.V. + 0.40 dBV
	3 MHz	C.V. - 0.64 dBV	————	C.V. + 0.64 dBV
	10 MHz	C.V. - 1.20 dBV	————	C.V. + 1.20 dBV
		13 MHz	C.V. - 1.44 dBV	————
4-25	Phase Accuracy Test			
	0 deg		————	
	- 22.5 deg	- 22.56 deg	————	- 22.44 deg
	- 45 deg	- 45.06 deg	————	- 44.94 deg
	- 67.5 deg	- 67.56 deg	————	- 67.44 deg
	- 90 deg	- 90.06 deg	————	- 89.94 deg
	- 112.5 deg	- 112.56 deg	————	- 112.44 deg
	- 135 deg	- 135.06 deg	————	- 134.94 deg
	- 157.5 deg	- 157.56 deg	————	- 157.44 deg
	- 180 deg	- 179.94 deg	————	+ 179.94 deg
	+ 157.5 deg	+ 157.44 deg	————	+ 157.56 deg
	+ 135 deg	+ 134.94 deg	————	+ 135.06 deg
	+ 112.5 deg	+ 112.44 deg	————	+ 112.56 deg
	+ 90 deg	+ 89.94 deg	————	+ 90.06 deg
	+ 67.5 deg	+ 67.44 deg	————	+ 67.56 deg
+ 45 deg	+ 44.94 deg	————	+ 45.06 deg	
	+22.5 deg	+ 22.44 deg	————	+ 22.56 deg

C.V. = Calibrated Value

Paragraph Number	Test	Minimum	Result Actual	Maximum
4-27	DC Bias Voltage Accuracy Test			
	0V	- 5 mV	_____	+ 5 mV
	10mV	+ 5 mV	_____	+ 15 mV
	100mV	+ 95 mV	_____	+ 105 mV
	1V	+ 0.990 V	_____	+ 1.010 V
	10V	+ 9.945 V	_____	+ 10.055 V
	35V	+ 34.82 V	_____	+ 35.18 V
	- 10mV	- 15 mV	_____	- 5 mV
	- 100mV	- 105 mV	_____	- 95 mV
	- 1V	- 1.010 V	_____	- 0.990 V
	- 10V	- 10.055 V	_____	- 9.945 V
	- 35V	- 35.18 V	_____	- 34.82 V
4-29	Recorder Output Voltage Accuracy Test			
	0V (LL)	- 20mV	_____	+ 20mV
	+ 1V (UR)	+ 0.995 V + 0V*	_____	+ 1.005 V + 0V*
	- 1V (SELFTEST 7)	- 1.005 V + 0V*	_____	- 0.995 V + 0V*
	*D.C. OFFSET [= Actual voltage of 0V (LL)]			
4-31	HP-IB Test			
	Remote/Local Test	<input type="checkbox"/> PASS	_____	<input type="checkbox"/> FAIL
	Listen/Talk Test	<input type="checkbox"/> PASS	_____	<input type="checkbox"/> FAIL
	Listener Test - 1	<input type="checkbox"/> PASS	_____	<input type="checkbox"/> FAIL
	Listener Test - 2	<input type="checkbox"/> PASS	_____	<input type="checkbox"/> FAIL
	Talker Test	<input type="checkbox"/> PASS	_____	<input type="checkbox"/> FAIL
	Data Output Test	<input type="checkbox"/> PASS	_____	<input type="checkbox"/> FAIL
	Complete Data Output Test - 1	<input type="checkbox"/> PASS	_____	<input type="checkbox"/> FAIL
	Complete Data Output Test - 2	<input type="checkbox"/> PASS	_____	<input type="checkbox"/> FAIL
	Complete Data Output Test - 3	<input type="checkbox"/> PASS	_____	<input type="checkbox"/> FAIL
SRQ Test	<input type="checkbox"/> PASS	_____	<input type="checkbox"/> FAIL	

SECTION V ADJUSTMENT

5-1. INTRODUCTION

5-2. This section describes the adjustments and checks required to return the 4192A to the specifications listed in Table 1-1 after repairs have been made. These adjustments and checks can also be performed along with periodic maintenance to keep the instrument in optimum operating condition. The recommended adjustment cycle for the 4192A is twice a year. All adjustable components referred to in the adjustment procedures are listed in Table 5-1. If proper performance cannot be achieved after adjustment, refer to the troubleshooting procedures described in Section VIII.

Note: To ensure proper results and instrument operation, Hewlett-Packard suggests a 60 minute warm-up and stabilization period before performing any of the adjustments described here.

5-3. SAFETY REQUIREMENTS

5-4. Although the 4192A was designed in accordance with international safety standards, this manual contains information, cautions, and warnings which must be followed to ensure operator safety and to keep the instrument in a safe and serviceable condition. Adjustments described in this section should be performed by qualified service personnel only.

WARNING

ANY INTERRUPTION OF THE PROTECTIVE (GROUNDED) CONDUCTOR (INSIDE OR OUTSIDE THE INSTRUMENT) OR DISCONNECTION OF THE PROTECTIVE EARTH TERMINAL IS LIKELY TO MAKE THE INSTRUMENT DANGEROUS. INTENTIONAL INTERRUPTION, FOR ANY REASON, IS PROHIBITED.

5-5. The removal or opening of covers for removal or adjustment of parts other than those which are accessible by hand will expose live parts.

5-6. Capacitors in the instrument may still be charged even if the instrument has been disconnected from the power source (AC line) for an extended period of time.

WARNING

ADJUSTMENTS DESCRIBED IN THIS SECTION ARE PERFORMED WITH POWER SUPPLIED AND PROTECTIVE COVERS REMOVED. ENERGY EXISTING AT MANY POINTS MAY, IF CONTACTED, RESULT IN SERIOUS PERSONAL INJURY.

5-7. EQUIPMENT REQUIRED

5-8. All the equipment required to perform the adjustments described in this section are listed in Table 4-1. Each piece of equipment listed in Table 4-1 should be calibrated to satisfy its own specifications, as well as those of the required characteristics. If the recommended model is not available, any instrument whose specifications equal or surpass those of the recommended model may be used instead.

5-9. FACTORY SELECTED COMPONENTS

5-10. Factory selected components are identifiable by an asterisk (*) adjacent to the reference designator on the schematic diagrams in Section VIII (only nominal values are given). Table 5-2 lists the reference designators of all factory selected components. Also listed in Table 5-2 are the nominal value range of each component and a brief description of how each component affects instrument performance.

Adjustable components, with reference designators, are listed in Table 5-1. This table also lists the name of the adjustment and its purpose.

5-11. ADJUSTMENT RELATIONSHIPS

5-12. The adjustment procedures described in this section, beginning with paragraph 5-17, are interactive and therefore should be performed in the sequence given. Ignoring or changing the order of the procedures may make it impossible to obtain optimum instrument performance. Table 5-3 lists the necessary adjustment procedures to follow after the instrument has been repaired.

5-13. ADJUSTMENT LOCATIONS

5-14. To help locate the appropriate adjustment points, the locations of the components to be adjusted are shown in Figure 5-20. The locations of factory selected components, connectors, and other components related to the adjustments are shown in the individual board assembly-component illustrations (fold out service sheets) in Section VIII.

5-15. INITIAL OPERATING PROCEDURE

5-16. Before proceeding with the adjustments described starting in paragraph 5-17, perform the following three preliminary procedures. These procedures provide access to the various adjustment points and facilitate a thorough-going adjustment. Initial Control Settings, described in paragraph 3-9, must be used for each adjustment. Exceptions to these settings will be noted as they occur. After completing an adjustment, return the 4192A's controls to the initial control settings.

[BASIC OPERATING CHECK]

Check that the instrument's line voltage selector switches, located on the rear panel, are set to the positions appropriate for the local line voltage. This should be performed before proceeding with any of the adjustments.

After the recommended 3 minute warm-up period, the instrument should pass the SELF TEST (no error message should appear), and the initial control settings listed in Figure 3-5 should be automatically set in preparation for measurements. If the instrument displays an error message or does not have the correct initial control settings, refer to the troubleshooting procedures given in Section VIII.

In several of the adjustment, Manual Operating Self-Tests (SELFTEST 1 to 8) are used. The key settings for these Self-Tests are given in the procedure for each adjustment and are listed in Table 5-4 on page 5-30. To release each SELF TEST, press BLUE key and SELF TEST key.

[TOP/BOTTOM COVER REMOVAL]

- a. Remove the two plastic instrument-feet located at the upper corners of the rear panel.
- b. Fully loosen the top cover retaining screw located at the rear of the top cover.
- c. Slide the top cover towards the rear and lift off.

[BOARD ASSEMBLY ACCESS]

The A6, A7, and A8 boards are mounted on a plate that is hinged at the rear and opens much like the hood of an automobile. It is secured by six screws and two plastic fasteners.

- a. Fully loosen the six screws locating at the side of the plate.
- b. Release the fasteners by grasping them between thumb and forefinger and pulling up.
- c. Raise the mounting plate until it comes to rest at the rear of the instrument. Be sure that the safety catch at the left-rear of the plate is locked in place. The internal shield-plate that covers the A2, A3, A4, and A9 boards will be visible.

CAUTION

Allowing the mounting plate to slam down when opening or closing can damage the instrument.

- d. Remove the internal shield-plate by loosening the three screws.

WARNING

AS A SAFETY PRECAUTION AGAINST POSSIBLE ELECTRICAL SHOCK HAZARDS AND RESULTANT INJURY, USE INSULATED TOOLS FOR ALL ADJUSTMENTS.

Table 5-1. Adjustable Components

Reference Designation	Name of Control	Adjustment Purpose
A7R66 (Para 5-17)	F-ADJ	Sets the frequency of the power supply switching driver.
A7R62 (Para 5-17)	V-ADJ	Sets the power supply voltage by adjusting the switching duty cycle.
A8R71 (Para 5-19)	ZERO ADJ	Sets the bias output voltage to zero.
A8R54 (Para 5-19)	GAIN ADJ	Sets the gain of the bias amplifier.
A3R49 (Para 5-21)	40M ADJ	Sets the frequency of the 40 MHz VCXO.
A4R79 R80 R83 (Para 5-23)	VR1 VR2 VR4	Minimize the level of the 3kHz, 300Hz, and 3Hz spurious' from the API.
A4R31 (Para 5-25)	VR5	Minimizes the level of the 100kHz and 200kHz spurious' from S/H.
A12R34 R28 (Para 5-27)	1V ADJ 105mV ADJ	Set the Test Signal Oscillator level.
A11R67 C32 R119 C52 (Para 5-31)	MF TRACKING HF ϕ LF TRACKING HF MAG	Set the trackability of the VRD.
A11R100 C71 R105 C74 R81 C64 (Para 5-33)	ATT1 MAG ATT1 ϕ ATT2 MAG ATT2 ϕ ATT3 MAG ATT3 ϕ	Properly set the VRD attenuators.
A11R45 R46 (Para 5-35)	IF1 GAIN IF2 GAIN	Set the gain of the IF amplifier for two intermediate frequencies.
A1R101 R104 (Para 5-37)		Eliminate DC offset voltage from the phase detector.
A1R183 R182 (Para 5-39)		Set the amplitude of L_{CUR} amplifier.
A1C5 (Para 5-41)		Minimizes residual phase offset.
A1S1 (Para 5-43)		Sets the phase difference of the two phase detectors to 90°.
A1C20 C22 (Para 5-45)	ϕ ADJ (10k Ω) ϕ ADJ (1 k Ω)	Range resistor compensation at 10MHz.

Table 5-1 Adjustable Components (cont'd)

Reference Designator	Name of Control	Adjustment Purpose
A9R6 (Para 5- 7)	+2V ADJ	Sets the analog output reference voltage.
A9R5 R24 R25 (Para 5-47)	DISP A ADJ DISP B ADJ DISP C ADJ	Set the +1V analog output voltage.

Table 5-2. Factory Selected Components

Component	Nominal Value Range	Effect on Performance
	At the time this manual was printed, there were no factory selected components. Refer to Manual Changes sheet supplement for a list of the factory selected components that may have been added after publication.	

Table 5-3. Adjustment Requirements

Assembly repaired or replaced	Required adjustments
A1 Range Resistor/Null Detector (P/N 04192-66501)	Para 5-37 thru 5-45 (A1) Para 5-27 (A12)
A2 Phase Detector/A-D Converter (P/N 04192-66502)	Para 5-29 thru 5-35 (A11)
A3 Reference Frequency Generator (P/N 04192-66503)	Para 5-21 (A3) Para 5-37 thru 5-45 (A1)
A4 Fractional N Loop (P/N 04192-66504)	Para 5-23 and 5-25 (A4)
A5 Display and Keyboard Control (P/N 04192-66505)	None
A6 Microprocessor Digital Control (P/N 04192-66506)	None
A7 Power Supply (P/N 04192-66507)	Para 5-17 (A7) Para 5-23 and 5-25 (A4) Para 5-47 (A9)
A8 Floating Power Supply/Bias Supply (P/N 04192-66508)	Para 5-19 (A8)
A9 Analog Recorder Output (P/N 04192-66509)	Para 5-47 (A9)
A10 Battery and Charger (P/N 04192-66510)	None
A11 Process Amplifier (P/N 04192-66511)	Para 5-29 thru 5-35 (A11) Para 5-37 thru 5-45 (A1)
A12 Modulator (P/N 04192-66512)	Para 5-27 (A12) Para 5-37 thru 5-45 (A1)

ADJUSTMENTS

5-17. A7 POWER SUPPLY ADJUSTMENT

5-18. This adjustment is divided into two parts: (1) OSC (Power Supply Drive Control Oscillator) Frequency Adjustment and (2) Output Voltage Adjustment.

PURPOSE:

This adjustment accurately sets the frequency of the Power Supply Drive Control Oscillator and the Power Supply Output Voltage.

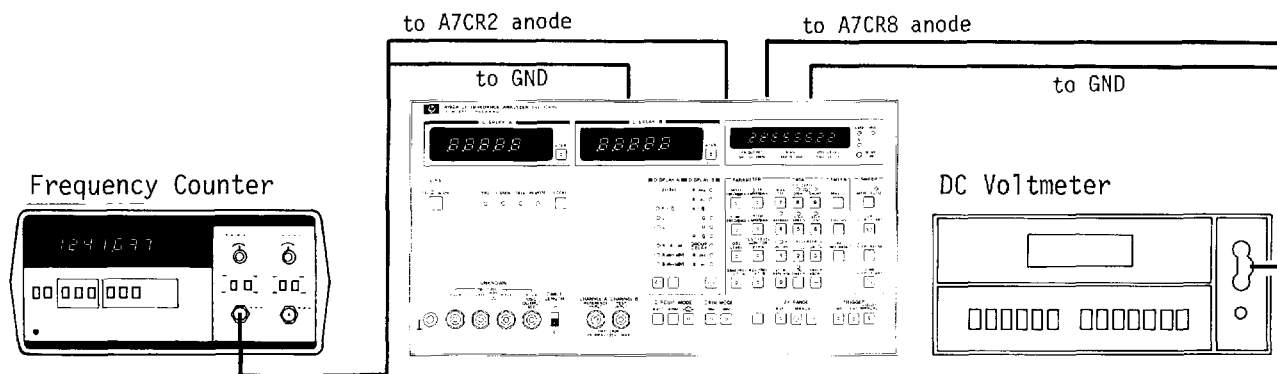


Figure 5-1. A7 Power Supply Adjustment Setup.

EQUIPMENT:

- Frequency Counter HP5314A
- DC Voltmeter HP3465A
- Dual Banana Plug-to-Alligator Clip Cable HP11002A
- BNC (m)-to-Dual Banana Plug Adapter HP P/N 1250-1264

PROCEDURE:

- (1) OSC Frequency Adjustment
 - a. Connect the dual banana-to-alligator clip cable to the 5314A using the BNC-to-dual banana plug adapter.
 - b. Connect the high lead to the anode of either A7CR2 or CR3 and connect the low lead to the chassis as shown in Figure 5-1.
 - c. Adjust A7R66 (F-ADJ) until the reading on the 5314A is 29.5 kHz \pm 0.1 kHz.
- (2) Output Voltage Adjustment
 - a. Connect the dual banana plug-to-alligator clip cable to the 3465A.
 - b. Set the 3465A's controls as follows:
 - FUNCTION $\overline{\text{V}}$
 - RANGE AUTO
 - Other Controls Any setting
 - c. Connect the high lead to the anode of A7CR8 and the low lead to the chassis.
 - d. Adjust A7R62 (V-ADJ) until the reading on the 3465A is 5.00V \pm 0.01V.

ADJUSTMENT

5-19. A8 DC BIAS CHECK AND ADJUSTMENT

5-20. This check and adjustment is divided into four parts: (1) $\pm 40V$ Unregulated Bias Check, (2) Zero Bias Adjustment, (3) Gain Adjustment, and (4) Full Scale Check.

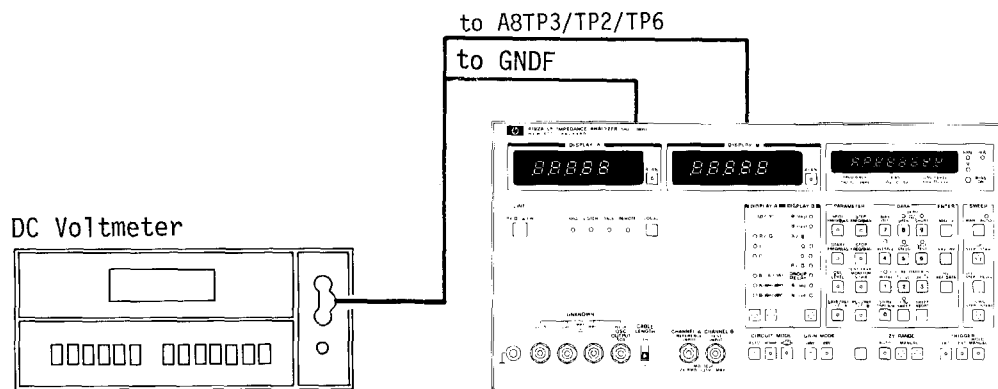


Figure 5-2. A8 DC Bias Check and Adjustment Setup.

PURPOSE:

This adjustment properly sets the DC Bias Supply output voltage.

EQUIPMENT:

- DC Voltmeter HP3465A
- Dual Banana Plug-to-Alligator Clip Cable HP11002A

PROCEDURE:

- (1) $\pm 40V$ Unregulated Bias Check
 - a. Set the 3465A's controls as follows:

FUNCTION	$\approx V$
RANGE	AUTO
Other Controls	Any setting
 - b. Connect the dual banana-to-alligator clip cable to the 3465A.
 - c. Connect the high lead to A8TP3 and the low lead to "GNDF" next to A8TP3 as shown in Figure 5-2.
 - d. Check that the reading on the 3465A is between +38V and +45V.
 - e. Connect the high lead to A8TP2 and check that the reading on the 3465A is between -38V and -45V.

ADJUSTMENT

(2) Zero Bias Adjustment

- a. Remove the smaller of the two shield covers from the A8 board.
- b. Connect the high lead to A8TP6.
- c. Set the 4192A's SPOT BIAS to 0V (**Blue** ENTER).
- d. Adjust A8R71 (ZERO ADJ) until the reading on the 3465A is 0V \pm 2 mV.

(3) Gain Adjustment

- a. Set the 4192A's SPOT BIAS to -10V (**Blue** ENTER). Leave the high lead connected to A8TP6.
- b. Adjust A8R54 (GAIN ADJ) until the reading on the 3465A is -10V \pm 20 mV.

(4) Full Scale Check

- a. Set the 4192A's SPOT BIAS to +35V (**Blue** ENTER). Leave the high lead connected to A8TP6.
- b. Check that the reading on the 3465A is +35.0V \pm 0.1V.
- c. Set the 4192A's SPOT BIAS to -35V (**Blue** ENTER).
- d. Check that the reading on the 3465A is -35.0V \pm 0.1V.

ADJUSTMENT

5-21. A3 40MHz VCXO ADJUSTMENT/40MHz-IF VCO ADJUSTMENT

5-22. This adjustment is divided into two parts: (1) 40MHz VCXO Adjustment and (2) 40MHz-IF VCO Adjustment.

PURPOSE:

This adjustment sets the frequency of the 40MHz VCXO to an accurate 40MHz.

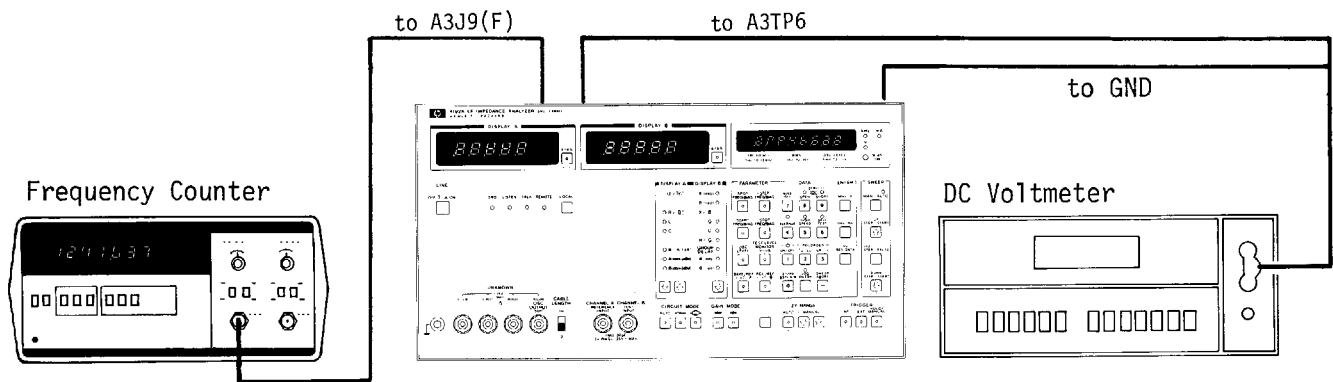


Figure 5-3. A3 40MHz VCXO Adjustment/40MHz-IF VCO Adjustment Setup.

EQUIPMENT:

- Frequency Counter HP5314A
- DC Voltmeter HP3465A
- BNC-to-SMB Cable
- Dual Banana Plug-to-Alligator Clip Cable HP11002A

ADJUSTMENT

PROCEDURE:

(1) 40MHz VCXO Adjustment

- a. Disconnect the SMB cable from A3J9 (F).
- b. Connect A3J9 (F) to the input terminal of the 5314A with the BNC-to-SMB cable as shown in Figure 5-3.
- c. Set the 5314A to measure a 40MHz signal with 10Hz resolution.
- d. Adjust A3R49 (40M ADJ) until the reading on the 5314A is 40MHz ± 100Hz.
- e. Disconnect the BNC-to-SMB cable from A3J9 and reconnect the original SMB cable.

(2) 40MHz-IF VCO Adjustment

Note: This adjustment is necessary only when a component that affects the VCO output frequency has been replaced.

- a. Remove the A3 board assembly, then remove the top and bottom shield covers that house the 40MHz-IF VCO.
- b. Remove the permalloy shield from A3L12.
- c. Connect the dual banana plug-to-alligator clip cable to the 3465A.
- d. Set the 3465A's controls as follows:
 FUNCTION $\overline{=}$ V
 RANGE AUTO
 Other Controls Any setting
- e. Connect the high lead to A3TP6 (VCO CTL) and the low lead to the chassis as shown in Figure 5-3.
- f. Adjust A3L12 until the reading on the 3465A is 0V ± 100mV.
- g. Replace the permalloy shield and check that the voltage measured in step f is still within limits.

ADJUSTMENTS

5-23. A4 API ADJUSTMENT

5-24. **PURPOSE:** To obtain appropriate API (Analog Phase Interpolator) output.

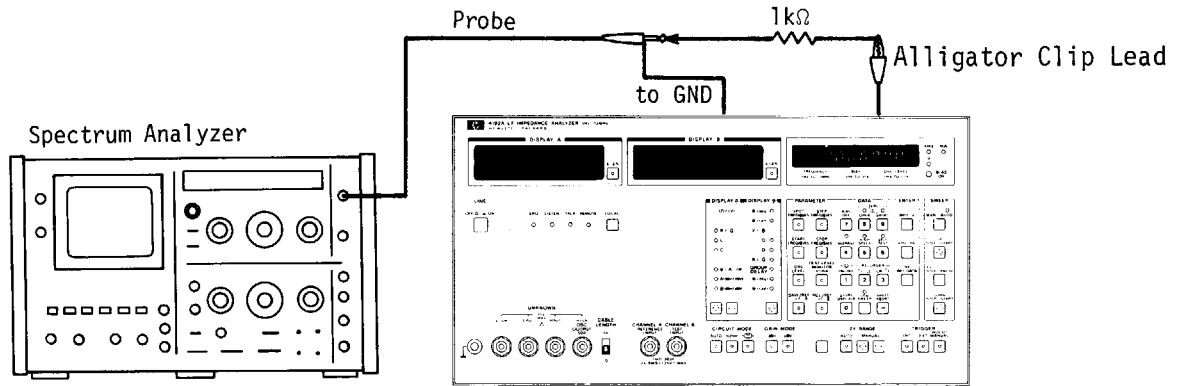


Figure 5-4. A4 API Adjustment Setup.

EQUIPMENT:

- Spectrum Analyzer
- Display Section HP141T
- LF Section HP8556A
- IF Section HP8552B
- 1 : 1 Probe HP10007B
- Resistor 1kΩ 1/8W
- Alligator Clip-to-Alligator Clip Lead

PROCEDURE:

- a. Connect the high input of the Spectrum Analyzer to A4TP1 through the 1kΩ resistor and connect the low input to the chassis as shown in Figure 5-4.
- b. Press the **Blue** key, **6** key, and **5** key (SELF TEST 5) on the 4192A.

ADJUSTMENT

c. Set the Spectrum Analyzer's controls as follows:


8556A LF Section –

RANGE 0 – 30kHz
 INPUT dBV
 CENTER FREQUENCY 5 kHz
 BANDWIDTH 100Hz
 SCANWIDTH 1 kHz/DIV
 INPUT LEVEL -40dBV


8552B IF Section –

SCAN TIME 0.1 sec/DIV
 LOG REF LEVEL -40dBV LOG
 VIDEO FILTER 10kHz
 SCAN MODE INT
 SCAN TRIGGER AUTO

- d. Set the 4192A's SPOT FREQ. to 3kHz.
- e. Adjust A4R79 (VR1) to minimize three peaks as shown in Figure 5-5.
- f. Change the 4192A's SPOT FREQ. to 300Hz. Do not change the Spectrum Analyzer's control settings.
- g. Adjust A4R80 (VR2) to minimize three peaks.
- h. Change the 4192A's SPOT FREQ. to 3Hz. Do not change the Spectrum Analyzer's control settings.
- i. Adjust A4R83 (VR4) to minimize three peaks.

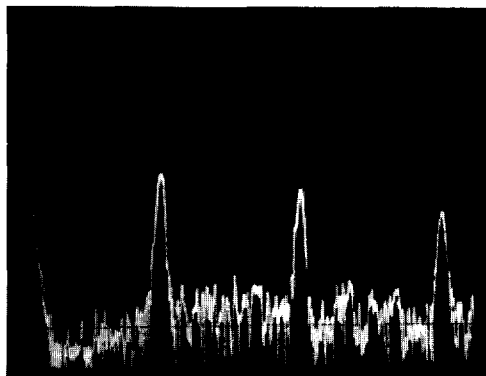

(a) poorly adjusted

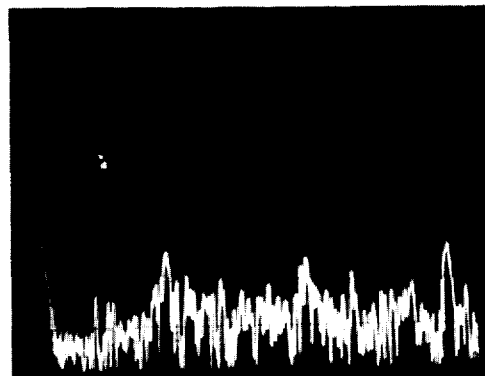

(b) well adjusted

Figure 5-5. Waveforms at A4 TP1 (1kHz/div., REF: -40dBV LOG).

ADJUSTMENT

5-25. A4 S/H 100kHz SPURIOUS ADJUSTMENT

5-26. **PURPOSE:** This adjustment minimizes the 100kHz switching noise generated by the S/H (Sample and Hold) Section.

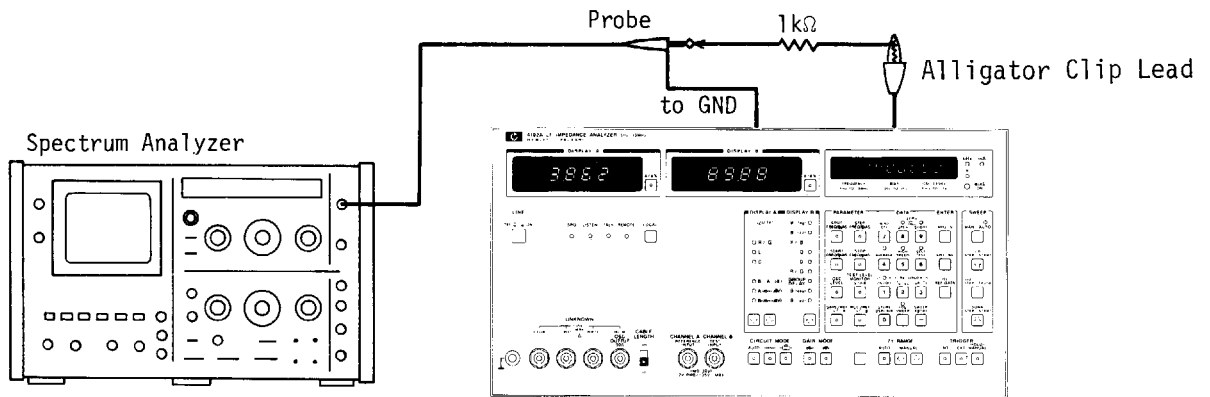


Figure 5-6. A4 S/H 100kHz Spurious Adjustment Setup.

EQUIPMENT:

- Spectrum Analyzer
- Display Section HP141T
- LF Section HP8556A
- IF Section HP8552B
- 1 : 1 Probe HP10007B
- Resistor 1kΩ 1/8W
- Alligator Clip-to-Alligator Clip Lead

ADJUSTMENT

PROCEDURE:

- a. Connect the input of the Spectrum Analyzer to A4TP1 through the 1kΩ resistor as shown in Figure 5-6.
- b. Set the 4192A to its Initial Control Settings.
- c. Set the Spectrum Analyzer's controls as follows:


8556A LF Section —

RANGE 0 – 300kHz
 INPUT dBV
 CENTER FREQUENCY 120kHz
 BANDWIDTH 3kHz
 SCANWIDTH 20kHz/DIV.
 INPUT LEVEL -50dBV

8552B IF Section —

SCAN TIME 5msec/DIV.
 LOG REF LEVEL -10dBV LOG
 VIDEO FILTER OFF
 SCAN MODE INT
 SCAN TRIGGER AUTO

- d. Adjust A4R31 (VR5) until the peak of the 100kHz and 200kHz spurious, shown in Figure 5-7 (a), are minimized as shown in Figure 5-7 (b).

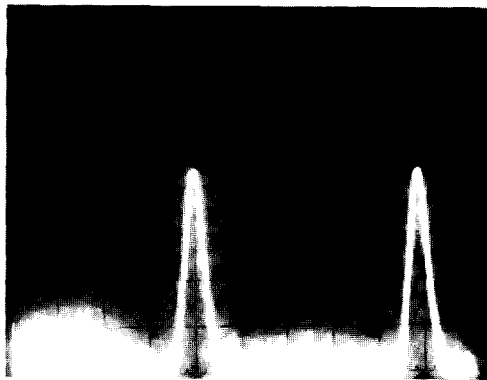

(a) poorly adjusted



(b) well adjusted

Figure 5-7. Waveforms at A4TP1 (20kHz/div., REF: -10dBV LOG).

ADJUSTMENT

5-27. A12 OSC LEVEL ADJUSTMENT

5-28. PURPOSE: This adjustment precisely sets the output level of the Test Signal Oscillator.

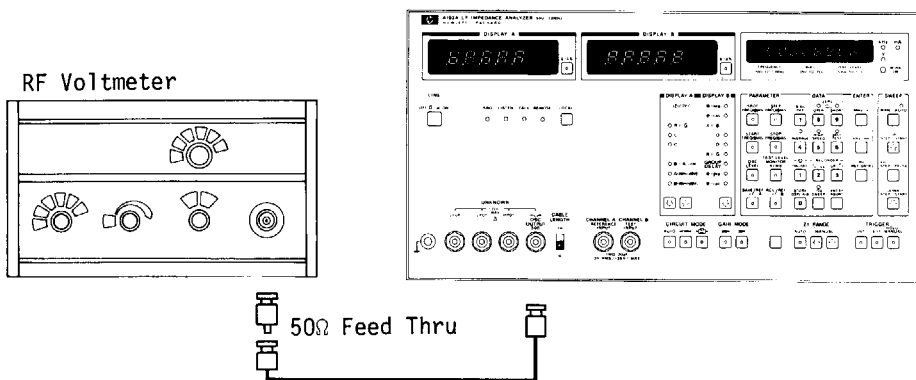


Figure 5-8. A12 OSC Level Adjustment Setup.

EQUIPMENT:

- RF Voltmeter HP3403C W/OPT 001
- BNC-to-BNC Cable HP11170A
- 50Ω Feedthrough Termination HP11048C

PROCEDURE:

- a. Set the 4192A's controls as follows:
 - DISPLAY A B-A (dB)
 - Other Controls Initial Settings
- b. Set the 3403C's controls as follows:
 - FUNCTION AC
 - RANGE AUTO
- c. Connect the 50Ω termination to the OSC OUTPUT 50Ω connector on the 4192A; connect the INPUT of the 3403C to the 50Ω termination using the BNC-to-BNC cable as shown in Figure 5-8.
- d. Adjust A12R34 (1V ADJ) until the reading on the 3403C is 1V ± 5 mV.
- e. Set the 4192A's OSC LEVEL to 105 mV.
- f. Adjust A12R28 (105 mV ADJ) until the reading on the 3403C is 105 mV ± 5 mV.
- g. Set the OSC LEVEL to 1V and repeat steps d thru f.

ADJUSTMENT

5-29. A11 INPUT CHANNEL ISOLATION CHECK

5-30. **PURPOSE:** This test checks that CHANNEL A and CHANNEL B are properly isolated. There are no adjustable components.

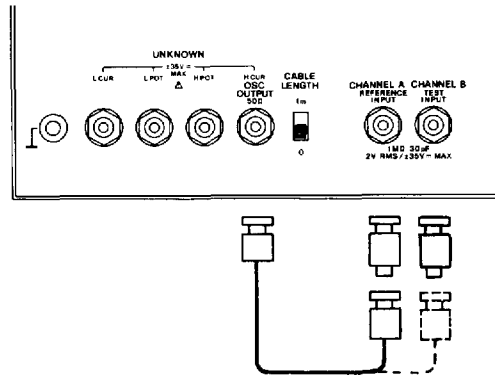


Figure 5-9. A11 Input Channel Isolation Check Setup.

Note: Connect a 50Ω feedthrough to each channel (CHANNEL A and CHANNEL B).

EQUIPMENT:

- 50Ω Feedthrough Termination HP11048C, 2ea
- BNC-to-BNC Cable HP11170A

PROCEDURE:

- a. Set the 4192A's controls as follows:
 - DISPLAY A B (dBm/dBV)
 - GAIN MODE dBm
 - Other Controls Initial Settings
- b. Connect the two 50Ω terminations to CHANNEL A and CHANNEL B.
- c. Connect the OSC OUT (H_{CUR}) terminal to the 50Ω termination on CHANNEL A using the BNC-to-BNC cable as shown in Figure 5-9.
- d. Check that the reading on DISPLAY A is less than -80dB. The displayed value will fluctuate slightly.
- e. Disconnect the cable from CHANNEL A and connect it to the termination on CHANNEL B as shown in Figure 5-9.
- f. Set the 4192A's DISPLAY A to A (dBm/dBV).
- g. Repeat step d.

ADJUSTMENT

5-31. A11 INPUT CHANNEL TRACKING ADJUSTMENT

5-32. PURPOSE: To obtain the correct amplitude and phase relation between CHANNEL A and CHANNEL B.

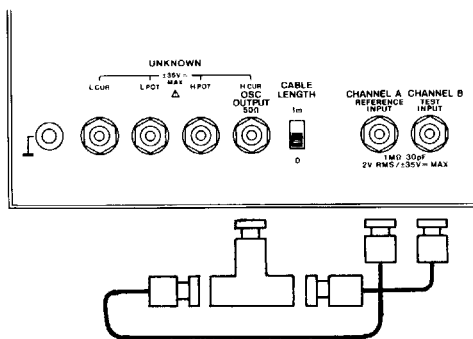


Figure 5-10. A11 Input Channel Tracking Adjustment Setup.

EQUIPMENT:

- BNC-to-BNC Cable HP11170A, 2 ea.*
- BNC Tee Adapter HP P/N 1250-0781

*Both cables must be of the same length.

PROCEDURE:

- a. Connect the BNC-to-BNC cables and BNC Tee Adapter as shown in Figure 5-10.
- b. Press the **Blue**, **6** (with SELF TEST above it), and **1** keys (SELF TEST 1). DISPLAY A and DISPLAY B will indicate nearly 100.00 and 0.00, respectively.
- c. Adjust A11R67 (MF TRACKING) until the reading on DISPLAY A is 100.00 ± 1 count. DISPLAY B should be 0.00 ± 2 counts. If not, adjust A11C32 (HF ϕ).
- d. Set the 4192A's SPOT FREQ. to 5 Hz.
- e. Adjust A11R119 (LF TRACKING) until the reading on DISPLAY B is 0.00 ± 3 counts. DISPLAY A should be 100.00 ± 35 counts. If not, adjust A11R119 again – keeping DISPLAY B at 0.00 ± 3 count – until DISPLAY A is 100.00 ± 35 counts.
- f. Set the 4192A's SPOT FREQ. to 10 MHz.
- g. Adjust A11C52 (HF MAG TRACKING) and A11C32 (HF ϕ) until the readings on DISPLAY A and DISPLAY B are 100.00 ± 10 counts and 0.00 ± 10 counts, respectively.

ADJUSTMENT

5-33. A11 IF ATTENUATOR ADJUSTMENT

5-34. PURPOSE: To obtain accurate 1/10, 1/100, and 1/1000 attenuation.

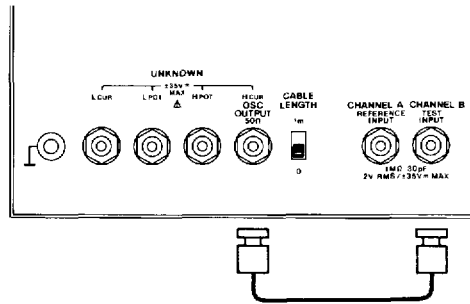


Figure 5-11. A11 IF Attenuator Adjustment Setup.

EQUIPMENT:

BNC-to-BNC Cable HP11170A

PROCEDURE:

- a. Connect OSC OUT (H_{CUR}) to CHANNEL B using the BNC-to-BNC cable as shown in Figure 5-11.
- b. Press the **Blue**, **6**, and **2** keys (SELF TEST 2).
- c. Adjust A11R100 (ATT 1 MAG) and A11C71 (ATT 1 ϕ) until the readings on DISPLAY A and DISPLAY B are 100.00 ± 2 counts and 0.00 ± 2 counts, respectively.
- d. Release the SELF TEST 2 function. Press the **Blue**, **6**, and **3** keys (SELF TEST 3).
- e. Adjust A11R105 (ATT 2 MAG) and A11C74 (ATT 2 ϕ) until the readings on DISPLAY A and DISPLAY B are 100.00 ± 2 counts and 0.00 ± 2 counts, respectively.
- f. Release the SELF TEST 3 function. Press the **Blue**, **6**, and **4** keys (SELF TEST 4).
- g. Adjust A11R81 (ATT 3 MAG) and A11C64 (ATT 3 ϕ) until the readings on DISPLAY A and DISPLAY B are 100.00 ± 2 counts and 0.00 ± 2 counts, respectively.

ADJUSTMENT

5-35. A11 IF AMPLIFIER ADJUSTMENT

5-36. PURPOSE: To adjust the gain of the IF amplifier.

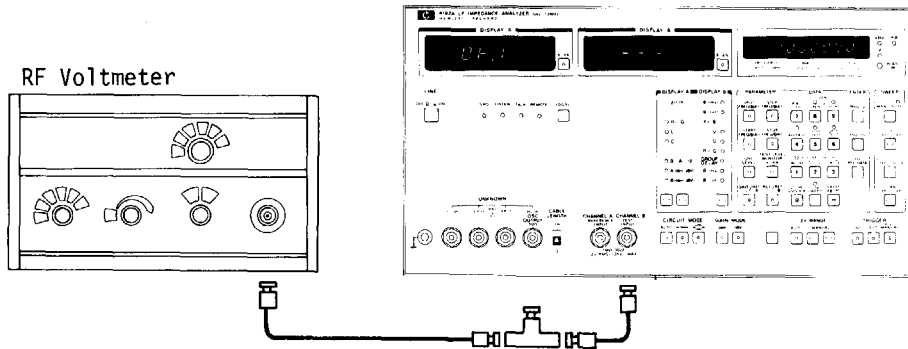


Figure 5-12. A11 IF Amplifier Adjustmne Setup.

EQUIPMENT:

- RF Voltmeter HP3403C W/OPT 001
- BNC-to-BNC Cable HP11170A, 2 ea.
- BNC Tee Adapter HP P/N: 1250-0781

PROCEDURE:

- a. Connect the 3403C to the 4192A as shown in Figure 5-12.
- b. Set the 3403C's controls as follows:
 FUNCTION AC
 RANGE AUTO
- c. Press the **Blue** , **6** , and **1** keys (SELF TEST 1) on the 4192A. OF-1 will be displayed on DISPLAY A.
- d. Press the TEST LEVEL MONITOR key. DISPLAY C will indicate approximately 1V.
- e. Adjust A11R45 (IF 1 GAIN) until the reading on DISPLAY C is ± 1 count of the reading on the 3403C.
- f. Set the 4192A's SPOT FREQ. to 78kHz.
- g. Press the TEST LEVEL MONITOR key.
- h. Adjust A11R46 (IF 2 GAIN) until the reading on DISPLAY C is ± 1 count of the reading on the 3403C.
- i. Set the 4192A's SPOT FREQ. to 100kHz and set the OSC LEVEL to the levels listed in the table below.
- j. For each OSC LEVEL setting, check that the reading on DISPLAY C – when compared to the reading on the 3403C – is within the test limits given in the table.

OSC LEVEL	Test Limits
500mV	± 10 counts
300mV	± 6 counts
200mV	± 4 counts
100mV	± 1 counts

ADJUSTMENT

5-37. A1 NULL DETECTOR DC OFFSET ADJUSTMENT

5-38. PURPOSE: To provide correct DC offset for the 0° and 90° Phase Detectors in the Null Detector.

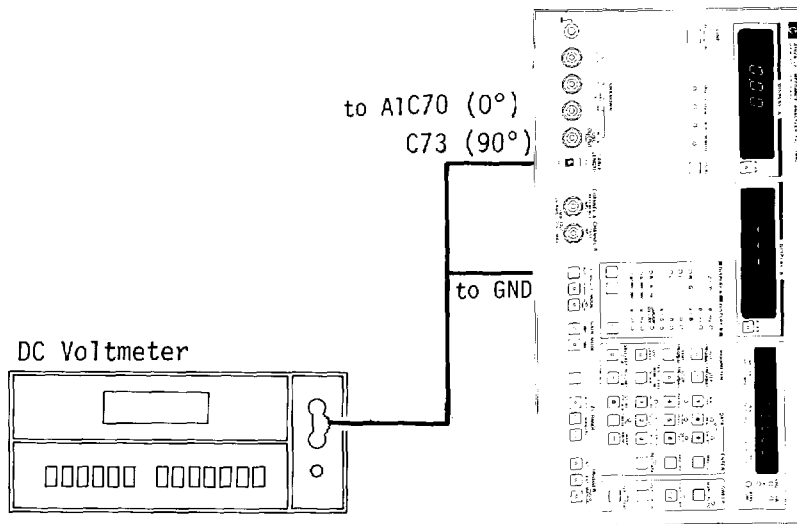


Figure 5-13. A1 Null Detector DC Offset Adjustment Setup.

EQUIPMENT:

- DC Voltmeter HP3465A
- Dual Banana Plug-to-Alligator Clip Cable HP11002A

PROCEDURE:

- a. Set the 4192A's controls as follows:
 - ZY RANGE 100Ω Full Scale
 - Other Controls Initial Settings
- b. Set A1J10 and J11 to "T" (TEST).
- c. Set the 3455A's controls as follows:
 - FUNCTION $\overline{\text{V}}$
 - RANGE AUTO
 - Other Controls Any setting
- d. Connect the dual banana plug-to-alligator clip cable to the 3465A; connect the high lead to the one lead (0°) of A1C70 and the low lead to the chassis as shown in Figure 5-13;
- e. Adjust A1R101 until the reading on the 3465A is 0V ±1 mV.
- f. Connect the high lead to the one lead (90°) of A1C73.
- g. Adjust A1R104 until the reading on the 3465A is 0V ±1 mV.
- h. Replace A1J10 and J11 to NORMAL.

ADJUSTMENT

5-39. A1 L_{CUR} AMPLIFIER OUTPUT LEVEL ADJUSTMENT

5-40. PURPOSE: To adjust the gain of the L_{CUR} Power Amplifier.

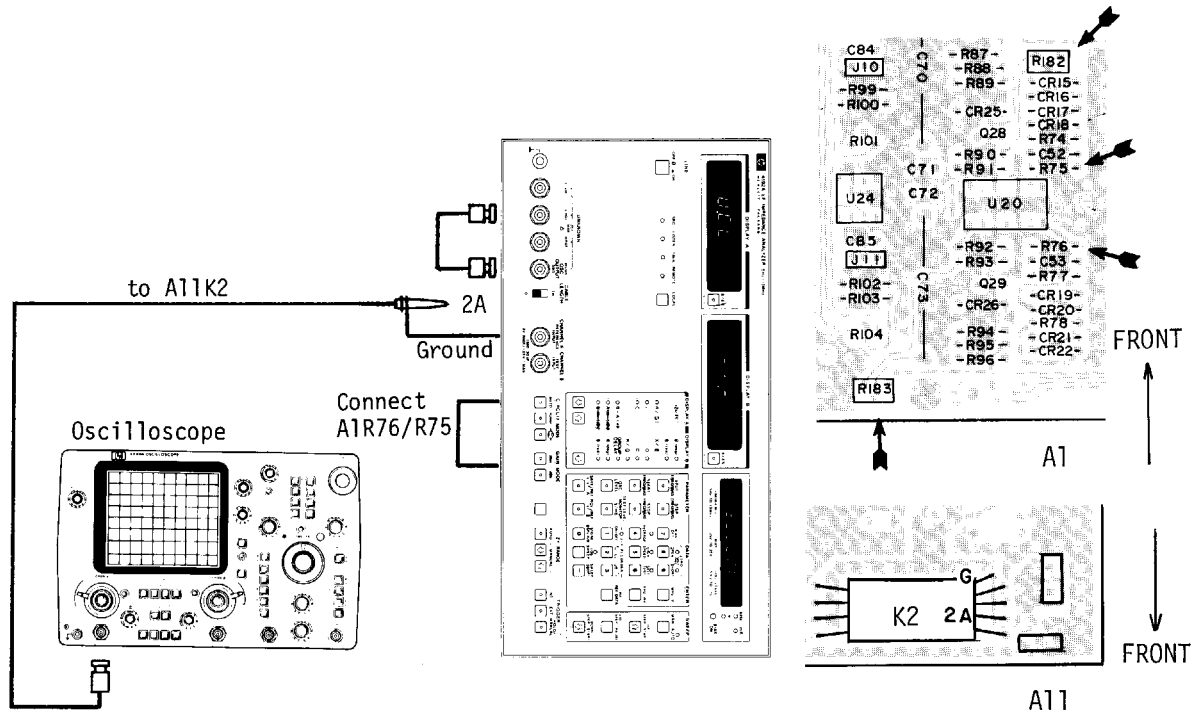


Fig. 5-14 A1 L_{CUR} Amplifier Output Level Adjustment Setup.

EQUIPMENT:

Oscilloscope	HP1740A
Probe 10 : 1	HP10006D
BNC-to-BNC Cable	HP11170A
Alligator Clip-to-Alligator Clip Lead	

ADJUSTMENT

PROCEDURE:

- a. Set the 4192A's controls as follows:

SPOT FREQ. 13 MHz
 OSC LEVEL 70mV
 Other Controls Initial Settings

- b. Connect the L_{POT} terminal to the H_{CUR} terminal using the BNC-to-BNC cable, and connect the oscilloscope high input to pin 2A of A11K2 and low lead to the ground (G) pin as shown in Figure 5-14.

- c. Set 1740A's controls as follows:

VOLTS/DIV1
 TIME/DIV05 μsec
 TRIGGER INT
 SWEEP MODE AUTO

- d. Connect the Alligator Clip lead across (short) A1R76.
- e. Adjust A1R182 until the amplitude of the waveform displayed on the 1740A is 4.0 ± 0.3 volts (div) peak-to-peak.
- f. Set bit 4 (MSB) of A1S1 to OFF and observe that the waveform is at least 4.0 volts p-p. If not, adjust A1R182 to maximize the waveform to 4.0 volt p-p. Leave the bit 4 of A1S1 set to OFF.
- g. Disconnect the Alligator Clip lead and connect it across (short) A1R75.
- h. Adjust A1R183 until the waveform displayed on the 1740A is 4.0 ± 0.3 volts p-p.
- i. Set bit 4 of A1S1 to ON and observe that the waveform is at least 4.0 volts p-p. If not, adjust A1R182 to maximize the waveform to 4.0 volts p-p. Leave the bit 4 of A1S1 set to ON.

ADJUSTMENT

5-41. A1 L_{CUR} AMPLIFIER PHASE ADJUSTMENT

5-42. PURPOSE: To minimize the residual phase offset that occurs at high frequency.

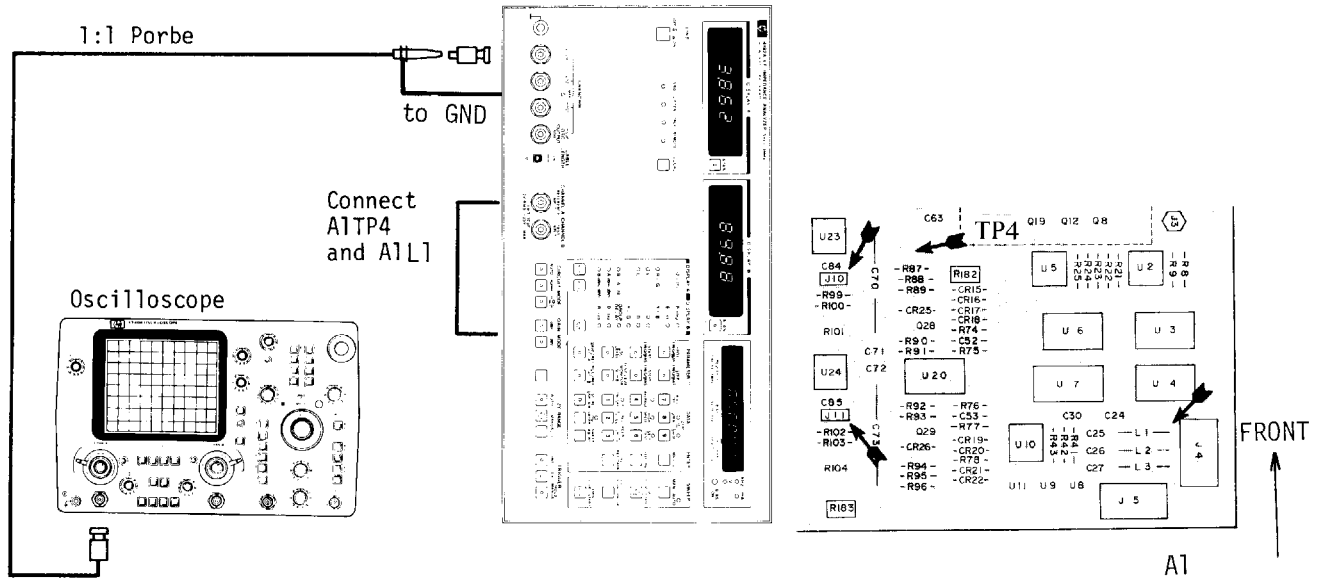


Figure 5-15. A1 L_{CUR} Amplifier Phase Adjustment Setup.

EQUIPMENT:

Oscilloscope	HP1740A
Probe 1 : 1	HP10007B
50Ω Feedthrough Termination	HP11048C
Alligator Clip-to-Alligator Clip Lead	


ADJUSTMENT

PROCEDURE:


- a. Set the 4192A's controls as follows:

SPOT FREQ.	10MHz
ZY RANGE	100k Ω
Other Controls	Initial Settings
- b. Set A1J10 and J11 to "T" (TEST).
- c. Connect the alligator clip lead between A1TP4 and either lead of A1L1.
- d. Connect the 50 Ω termination to the L_{CUR} terminal on the 4192A and connect oscilloscope input to the outer conductor of the 50 Ω termination as shown in Figure 5-15.
- e. Set the 1740A's controls as follows:

VOLTS/DIV005
TIME/DIV1 μ sec
TRIGGER	INT
SWEEP MODE	Auto
- f. Adjust A1C5 to minimize the amplitude of the 10MHz signal as shown in Figure 5-16.
- g. Replace A1J10 and J11 to NORMAL.

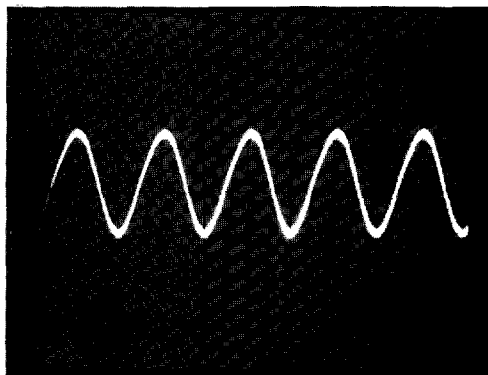

(a) poorly adjusted

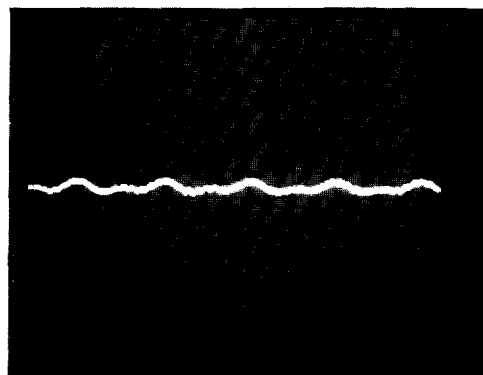

(b) well adjusted

Figure 5-16. Waveforms at Outer Conductor of Feedthrough Termination (0.1 μ sec/div., 0.005 volt/div)

ADJUSTMENT

5-43. A1 PHASE TRACKING ADJUSTMENT

5-44. **PURPOSE:** To adjust the phase difference between the 0° and 90° phase detectors to 90°.

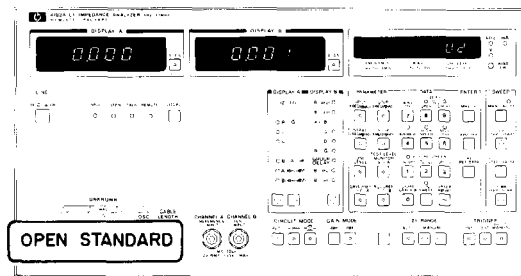


Figure 5-17. A1 Phase Tracking Adjustment Setup.

Note: This adjustment must be performed only when the A1 or A12 board has been repaired.

EQUIPMENT:

- SHORT Standard
- OPEN Standard HP16074A


PROCEDURE:

- a. Directly connect the OPEN Standard to the UNKNOWN terminals of the 4192A as shown in Figure 5-17.
- b. Set all bit switches on A1S1 (Phase Tracking Adjust Switch) to ON.
- c. Press the **Blue** , **6** , and **6** keys (SELF TEST 6).
- d. Set the 4192A's controls as follows:
 - CIRCUIT MODE AUTO
 - ZY RANGE AUTO
- e. Repeatedly press the TRIGGER HOLD/MANUAL key. The value on DISPLAY C will increase by 1 each time the key is pressed. The count sequence is 01, 02, . . . 14, 15, 00, 01,
- f. Observe DISPLAY A and DISPLAY B each time the TRIGGER HOLD/MANUAL key is pressed. Each time the values on both DISPLAY A and DISPLAY B are 0 ± 2 counts, make a note of the number displayed on DISPLAY C.
- g. Set A1S1 to the middle number of the numbers noted in step f. For example, if the numbers noted in step f were 03, 04, and 05, A1S1 should be set to 04 (0100); if the numbers noted in step f were 15, 00, 01, and 02, A1S1 should be set to 00, the lower of the two middle numbers. A special case arises when 15 and 00 are the middle numbers. In this case, set A1S1 to 15.

Note: Bit switches on A1S1 are labeled, on the switch, 1 through 4. Bit 4 is the MSB (Most Significant Bit). This means that to represent 01, A1S1 must be set to 1000; to represent 02, 0100.

[Phase Tracking Adjustment Confirmation Check]

The following procedure can be used to verify that the Phase Tracking is properly set.

- a. Release the SELF TEST 6 function.
Leave the OPEN Standard connected to the UNKNOWN terminals.
- b. Set the 4192A's DISPLAY A to R/G.
- c. Check that the readings on both DISPLAY A and DISPLAY B are within $0 \pm 0.002\mu\text{S}$.
- d. Add 1 to the number set on A1S1 in step g of the adjustment procedure; set A1S1 to this number. For example, if it was set to 13 (1101) in step g of the adjustment procedure, set it to 14 (1110); if it was set to 15 (1111), set it to 0 (0000).
- e. Set ZY RANGE to 1mS (in step i, 100Ω) full scale, and check that the readings are stable.
- f. Set ZY RANGE to 10mS (in step i, $1\text{k}\Omega$) full scale, and check that the readings are stable.
- g. Press ZY RANGE , and check that the readings are stable.
- h. Change the SPOT FREQ. to 5Hz and 13MHz, and repeat steps e thru g.
- i. Connect the SHORT Standard to the UNKNOWN terminals and repeat steps e thru h.
- j. Disconnect the SHORT Standard, and connect the OPEN Standard.
- k. Subtract 2 from the number set on A1S1 in step d of this confirmation check. Set A1S1 to this number. For example, if A1S1 was set to 14 (1110) in step d, set it to 12 (1100); if it was set to 0 (0000), set it to 14 (1110).

Note: If readings are not stable in any step, try to adjust to set the middle number again.


- l. Reset A1S1 to the number used in step g of the adjustment procedure (on page 5-24).

ADJUSTMENT

5-45. A1 10MHz PHASE ADJUSTMENT

5-46. PURPOSE:

To provide high frequency compensation for the Range Resistors.

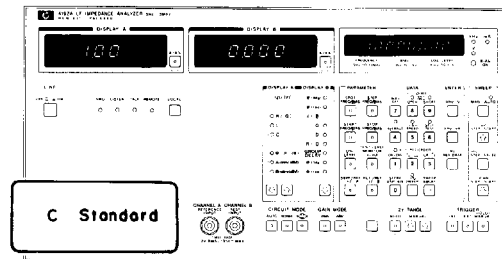

Phase Adjustment

Figure 5-18. 10MHz Phase Adjustment Setups

EQUIPMENT:

- 1pF Capacitance Standard HP16381A
- 10pF Capacitance Standard HP16382A

ADJUSTMENT

PROCEDURE:

- a. Set the 4192A's controls as follows:

- DISPLAY A C
- DISPLAY B D
- SPOT FREQ. 10MHz
- Other Controls Initial Settings

- b. Directly connect the 1pF C standard to the UNKNOWN terminals of the 4192A as shown in Figure 5-18 (a).
- c. Adjust A1C20 ϕ ADJ (10 K Ω) until the D value displayed on DISPLAY B is 0 \pm 10 counts.
- d. Remove the 1pF C standard and connect the 10pF C standard in its place.
- e. Adjust A1C22 ϕ ADJ (1 K Ω) until the D value displayed on DISPLAY B is 0 \pm 10 counts.

Note: If the correct DISPLAY B values cannot be obtained, reperform the A11 Input Channel Tracking Adjustment (paragraph 5-31) and try this adjustment again.

ADJUSTMENT

5-47. A9 ANALOG RECORDER OUTPUT CHECK AND ADJUSTMENT

5-48. This check and adjustment is divided into four parts: (1) +2V D-A Converter Reference Voltage Adjustment, (2) 0V Reference Voltage Check, (3) +1V Analog Output Adjustment, and (4) -1V Check.

PURPOSE:

To accurately adjust the D-A Converter Reference Voltage and Analog Output Voltage to +2V and +1V, respectively.

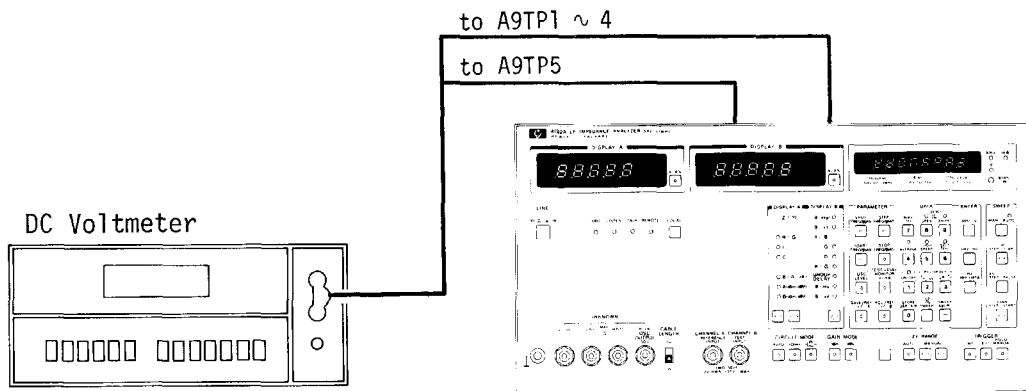


Figure 5-19. A9 Analog Recorder Output Check and Adjustment Setup.

EQUIPMENT:

- DC Voltmeter HP3465A
- Dual Banana Plug-to-Alligator Clip Cable HP11002A

PROCEDURE:

- (1) +2V D-A Converter Reference Voltage Adjustment
 - a. Connect the high input of the 3465A to A9TP1 and the low input to A9TP5 as shown in Figure 5-19.
 - b. Set the 3465A's controls as follows:
 - FUNCTION $\overline{\text{V}}$
 - RANGE AUTO
 - Other Controls Any setting
 - c. Press the **Blue** and **2** keys on the 4192A.
 - d. Adjust A9R6 (+2V ADJ) until the reading on the 3465A is +2V \pm 10mV.
- (2) 0V Reference Voltage Check

Successively connect the high lead to A9TP2, TP4, and TP3 and note the measured values as V_A , V_B , and V_C , respectively.

ADJUSTMENTS

(3) +1V Analog Output Adjustment

- a. Press the **Blue** and $\overline{3}$ keys on the 4192A.
- b. Connect the high lead to A9TP2 and adjust A9R5 (DISP A ADJ) until the reading on the 3465A is equal to $V_A + 1V \pm 1mV$.
- c. Connect the high lead to A9TP4 and adjust A9R24 (DISP B ADJ) until the reading on the 3465A is equal to $V_B + 1V \pm 1mV$.
- d. Connect the high lead to A9TP3 and adjust A9R25 (DISP C ADJ) until the reading on the 3465A is equal to $V_C + 1V \pm 1mV$.

(4) -1V Check

- a. Press the **Blue**, $\overline{6}$ and $\overline{7}$ keys (SELF TEST 7) on the 4192A.
- b. Connect the high lead to A9TP2 and check that the voltage is equal to $V_A - 1V \pm 2mV$.
- c. Connect the high lead to A9TP4 and check that the voltage is equal to $V_B - 1V \pm 2mV$.

[Analog Recorder Output Confirmation Check]

The following procedure can be used to verify that the Analog Recorder Output is functioning properly.

- a. Release the SELF TEST 7 function. Connect the DISPLAY A and FREQ/BIAS Recorder Outputs, located on the rear panel of the 4192A, to the X and Y inputs of the X-Y Recorder.
- b. Place paper on the platen of the X-Y Recorder.
- c. Press the **Blue** and $\overline{3}$ keys on the 4192A and adjust the recorder controls to position the pen to the upper-right.
- d. Press the **Blue** and $\overline{2}$ keys on the 4192A and adjust the recorder controls to position the pen to the lower-center.
- e. Press the **Blue**, $\overline{6}$, and $\overline{8}$ keys (SELF TEST 8) on the 4192A; the Test Pattern shown below will be drawn on the X-Y Recorder.

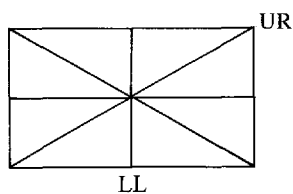


Table 5-4. Manual Operating Self-Test Item

Key setting	Item	Para	Adjustable component
Blue ^{SELF TEST} 6 1 (SELF TEST 1)	A11 IF AMPLIFIER ADJUSTMENT	5-35	A11R45 R46
(SELF TEST 1)	A11 INPUT CHANNEL TRACKING ADJUSTMENT	5-31	A11R67 R119 C32 C52
Blue ^{SELF TEST} 6 2 (SELF TEST 2)	A11 IF ATTENUATOR ADJUSTMENT	5-33	A11R100 C71
Blue ^{SELF TEST} 6 3 (SELF TEST 3)		5-33	A11R105 C74
Blue ^{SELF TEST} 6 4 (SELF TEST 4)		5-33	A11R81 C64
Blue ^{SELF TEST} 6 5 (SELF TEST 5)		5-23	A4R79 R80 R83
Blue ^{SELF TEST} 6 6 (SELF TEST 6)	A1 PHASE TRACKING ADJUSTMENT	5-43	A1 S1
Blue ^{SELF TEST} 6 7 (SELF TEST 7)	A9 ANALOG RECORDER OUTPUT CHECK AND ADJUSTMENT	5-47	None
Blue ^{SELF TEST} 6 8 (SELF TEST 8)		5-47	None

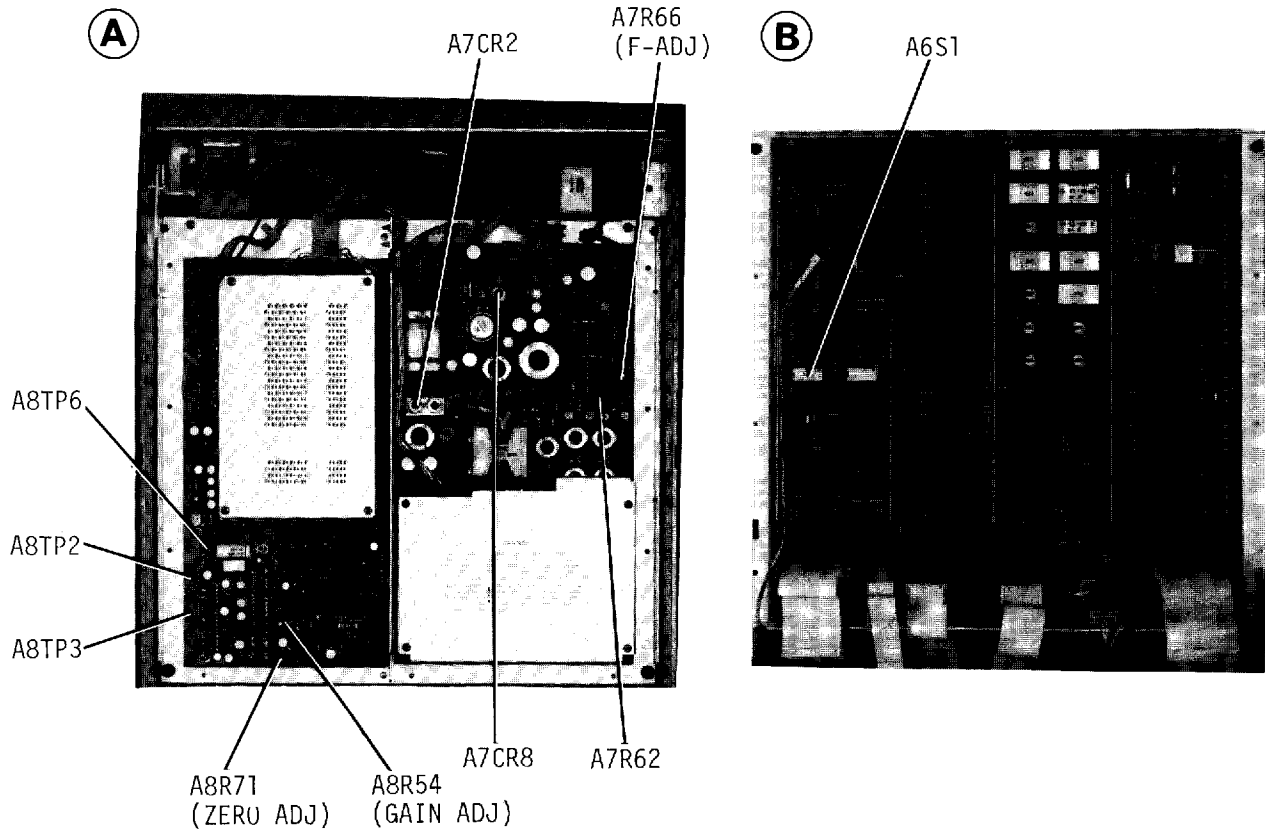
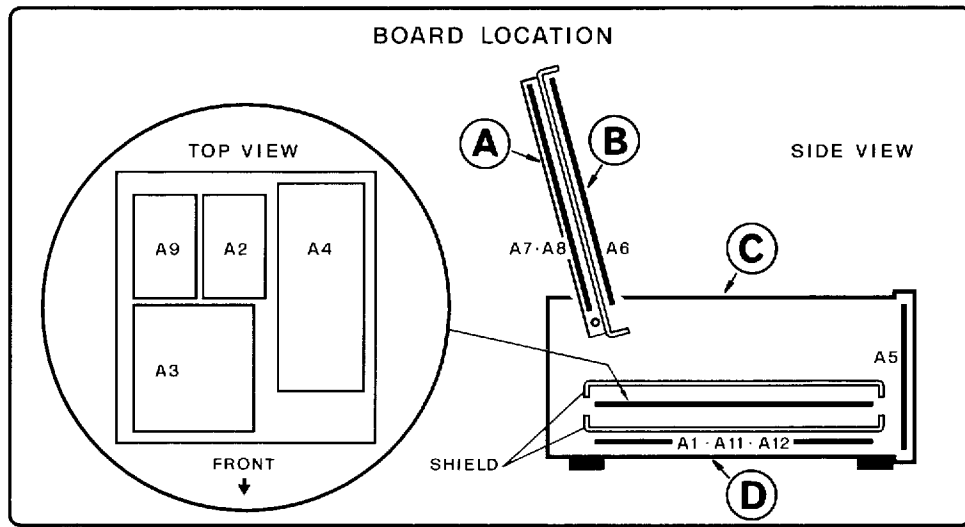


Figure 5-20. Adjustment Locations.

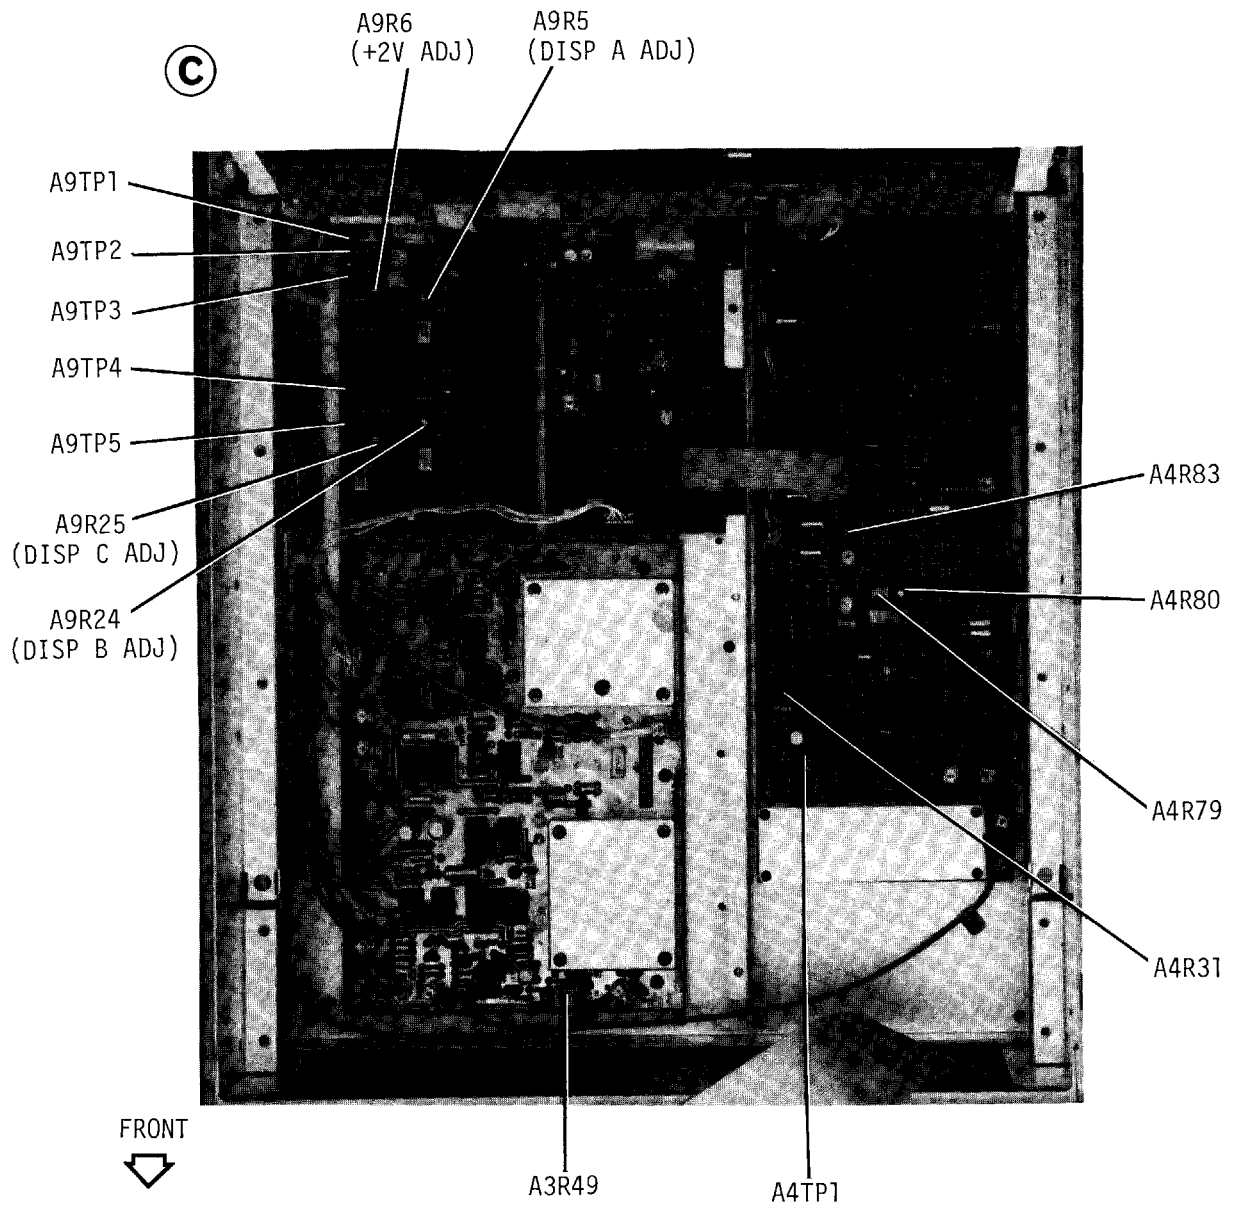


Figure 5-20. Adjustment Locations (cont'd).

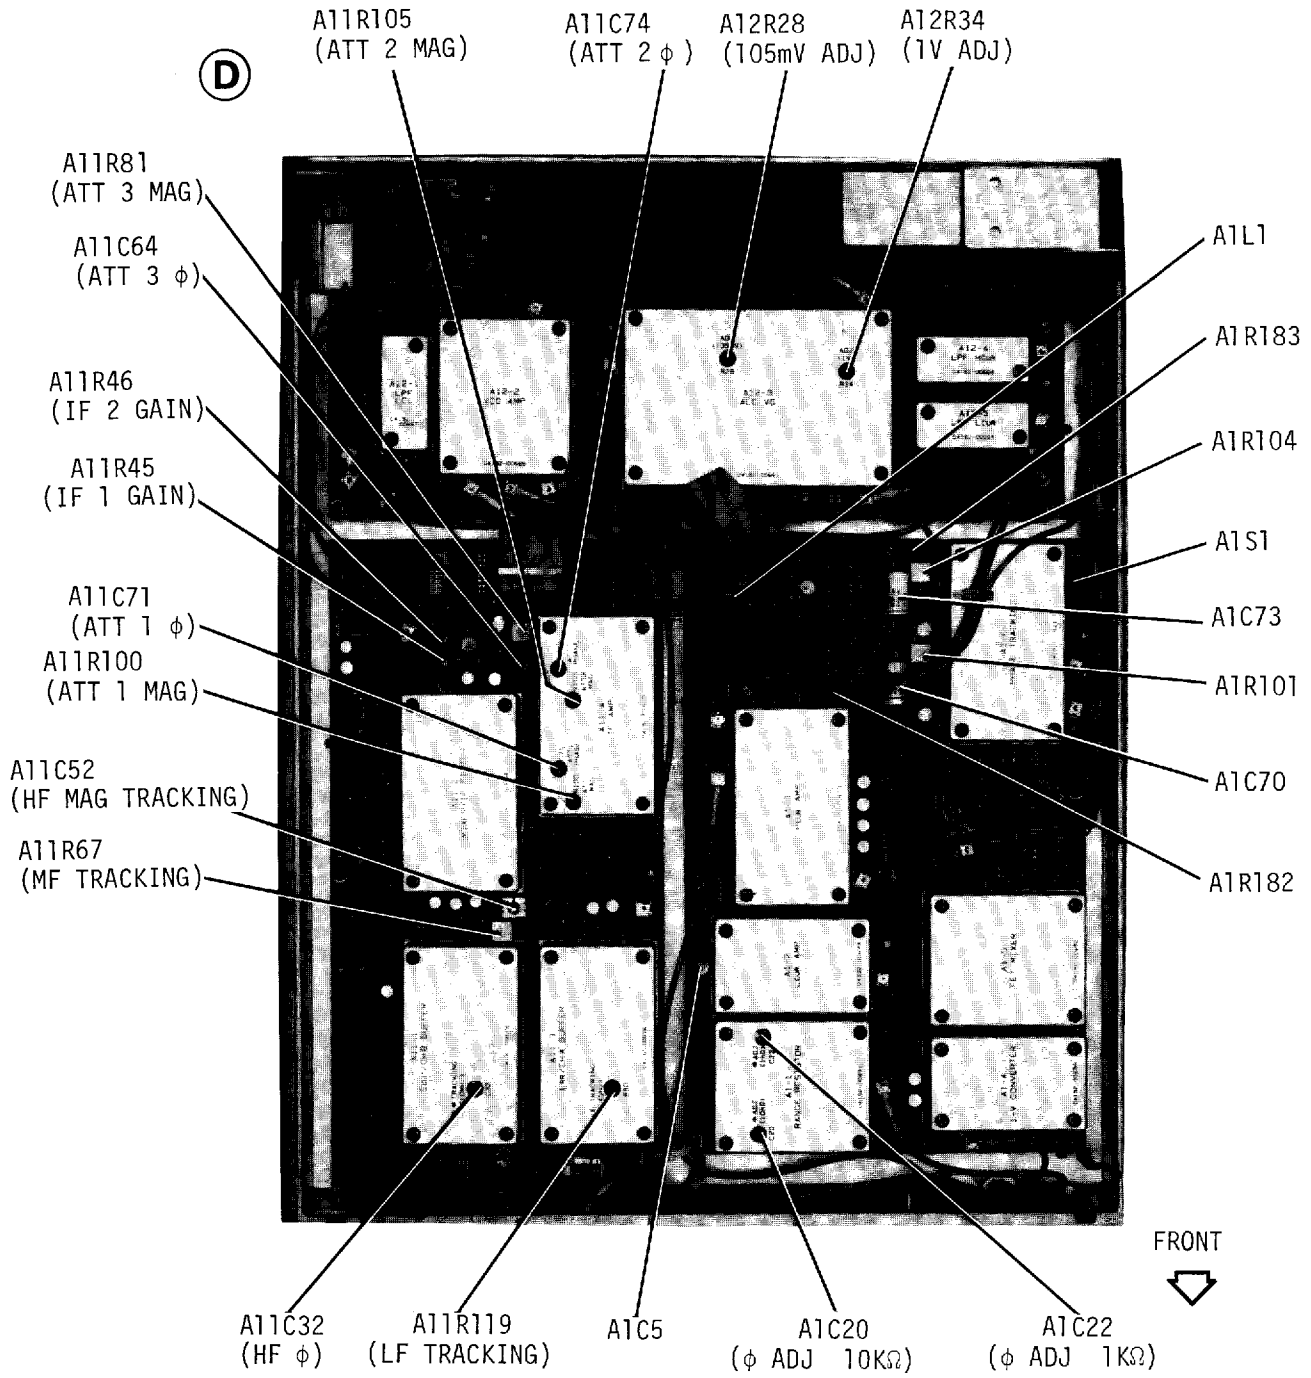


Figure 5-20. Adjustment Locations (cont'd).

SECTION VI REPLACEABLE PARTS

6-1. INTRODUCTION.

6-2. This section contains information for ordering parts. Table 6-1 lists abbreviations used in the parts list and throughout the manual. Table 6-3 lists all replaceable parts in reference designator order. Table 6-2 contains the names and addresses that correspond to the manufacturer's code numbers.

6-3. ABBREVIATIONS.

6-4. Table 6-1 lists abbreviations used in parts list, schematics and throughout the manual. In some cases, two forms of abbreviations are used, one in all capital letters, and one in partial capitals or no capitals. This occurs because the abbreviations in parts list are always all capitals. However, in the schematic and in other parts of the manual, other abbreviation forms with both lower case and upper case letters are used.

6-5. REPLACEABLE PARTS LIST.

6-6. Table 6-3 is a list of replaceable parts and is organized as follows:

- a. Electrical assemblies and their components in alphanumeric order by reference designation.
- b. Chassis-mounted parts in alphanumeric order by reference designation.
- c. Miscellaneous parts.
- d. Illustrated parts breakdowns, if appropriate.

The information for each part includes:

- a. The Hewlett-Packard part number.
- b. The total quantity (Qty) in the instrument.
- c. A description of the part.
- d. A typical manufacturer of the part in a five-digit code.
- e. The manufacturer's number for the part.

Table 6-1. List of Reference Designators and Abbreviations.

REFERENCE DESIGNATORS																																																																																																																																																																																																																																																									
<table style="width: 100%; border: none;"> <tr><td>A</td><td>= assembly</td></tr> <tr><td>B</td><td>= motor</td></tr> <tr><td>BT</td><td>= battery</td></tr> <tr><td>C</td><td>= capacitor</td></tr> <tr><td>CP</td><td>= coupler</td></tr> <tr><td>CR</td><td>= diode</td></tr> <tr><td>DL</td><td>= delay line</td></tr> <tr><td>DS</td><td>= device signaling (lamp)</td></tr> </table>	A	= assembly	B	= motor	BT	= battery	C	= capacitor	CP	= coupler	CR	= diode	DL	= delay line	DS	= device signaling (lamp)	<table style="width: 100%; border: none;"> <tr><td>E</td><td>= misc electronic part</td></tr> <tr><td>F</td><td>= fuse</td></tr> <tr><td>FL</td><td>= filter</td></tr> <tr><td>J</td><td>= jack</td></tr> <tr><td>K</td><td>= relay</td></tr> <tr><td>L</td><td>= inductor</td></tr> <tr><td>M</td><td>= meter</td></tr> <tr><td>MP</td><td>= mechanical part</td></tr> </table>	E	= misc electronic part	F	= fuse	FL	= filter	J	= jack	K	= relay	L	= inductor	M	= meter	MP	= mechanical part	<table style="width: 100%; border: none;"> <tr><td>P</td><td>= plug</td></tr> <tr><td>Q</td><td>= transistor</td></tr> <tr><td>R</td><td>= resistor</td></tr> <tr><td>RT</td><td>= thermistor</td></tr> <tr><td>S</td><td>= switch</td></tr> <tr><td>T</td><td>= transformer</td></tr> <tr><td>TB</td><td>= terminal board</td></tr> <tr><td>TP</td><td>= test point</td></tr> </table>	P	= plug	Q	= transistor	R	= resistor	RT	= thermistor	S	= switch	T	= transformer	TB	= terminal board	TP	= test point	<table style="width: 100%; border: none;"> <tr><td>U</td><td>= integrated circuit</td></tr> <tr><td>V</td><td>= vacuum, tube, neon bulb, photocell, etc.</td></tr> <tr><td>VR</td><td>= voltage regulator</td></tr> <tr><td>W</td><td>= cable</td></tr> <tr><td>X</td><td>= socket</td></tr> <tr><td>Y</td><td>= crystal</td></tr> </table>	U	= integrated circuit	V	= vacuum, tube, neon bulb, photocell, etc.	VR	= voltage regulator	W	= cable	X	= socket	Y	= crystal																																																																																																																																																																																										
A	= assembly																																																																																																																																																																																																																																																								
B	= motor																																																																																																																																																																																																																																																								
BT	= battery																																																																																																																																																																																																																																																								
C	= capacitor																																																																																																																																																																																																																																																								
CP	= coupler																																																																																																																																																																																																																																																								
CR	= diode																																																																																																																																																																																																																																																								
DL	= delay line																																																																																																																																																																																																																																																								
DS	= device signaling (lamp)																																																																																																																																																																																																																																																								
E	= misc electronic part																																																																																																																																																																																																																																																								
F	= fuse																																																																																																																																																																																																																																																								
FL	= filter																																																																																																																																																																																																																																																								
J	= jack																																																																																																																																																																																																																																																								
K	= relay																																																																																																																																																																																																																																																								
L	= inductor																																																																																																																																																																																																																																																								
M	= meter																																																																																																																																																																																																																																																								
MP	= mechanical part																																																																																																																																																																																																																																																								
P	= plug																																																																																																																																																																																																																																																								
Q	= transistor																																																																																																																																																																																																																																																								
R	= resistor																																																																																																																																																																																																																																																								
RT	= thermistor																																																																																																																																																																																																																																																								
S	= switch																																																																																																																																																																																																																																																								
T	= transformer																																																																																																																																																																																																																																																								
TB	= terminal board																																																																																																																																																																																																																																																								
TP	= test point																																																																																																																																																																																																																																																								
U	= integrated circuit																																																																																																																																																																																																																																																								
V	= vacuum, tube, neon bulb, photocell, etc.																																																																																																																																																																																																																																																								
VR	= voltage regulator																																																																																																																																																																																																																																																								
W	= cable																																																																																																																																																																																																																																																								
X	= socket																																																																																																																																																																																																																																																								
Y	= crystal																																																																																																																																																																																																																																																								
ABBREVIATIONS																																																																																																																																																																																																																																																									
<table style="width: 100%; border: none;"> <tr><td>A</td><td>= amperes</td></tr> <tr><td>A. F. C.</td><td>= automatic frequency control</td></tr> <tr><td>AMPL</td><td>= amplifier</td></tr> <tr><td>B. F. O.</td><td>= beat frequency oscillator</td></tr> <tr><td>BE CU</td><td>= beryllium copper</td></tr> <tr><td>BH</td><td>= binder head</td></tr> <tr><td>BP</td><td>= bandpass</td></tr> <tr><td>BRS</td><td>= brass</td></tr> <tr><td>BWO</td><td>= backward wave oscillator</td></tr> <tr><td>CCW</td><td>= counter-clockwise</td></tr> <tr><td>CER</td><td>= ceramic</td></tr> <tr><td>CMO</td><td>= cabinet mount only</td></tr> <tr><td>COEF</td><td>= coefficient</td></tr> <tr><td>COM</td><td>= common</td></tr> <tr><td>COMP</td><td>= composition</td></tr> <tr><td>COMPL</td><td>= complete</td></tr> <tr><td>CONN</td><td>= connector</td></tr> <tr><td>CP</td><td>= cadmium plate</td></tr> <tr><td>CRT</td><td>= cathode-ray tube</td></tr> <tr><td>CW</td><td>= clockwise</td></tr> <tr><td>DEPC</td><td>= deposited carbon</td></tr> <tr><td>DR</td><td>= drive</td></tr> <tr><td>ELECT</td><td>= electrolytic</td></tr> <tr><td>ENCAP</td><td>= encapsulated</td></tr> <tr><td>EXT</td><td>= external</td></tr> <tr><td>F</td><td>= farads</td></tr> <tr><td>f</td><td>= femto = 10⁻¹⁵</td></tr> <tr><td>FH</td><td>= flat head</td></tr> <tr><td>FIL H</td><td>= fillister head</td></tr> <tr><td>FXD</td><td>= fixed</td></tr> <tr><td>G</td><td>= giga = 10⁹</td></tr> <tr><td>GE</td><td>= germanium</td></tr> <tr><td>GL</td><td>= glass</td></tr> <tr><td>GRD</td><td>= ground(ed)</td></tr> </table>	A	= amperes	A. F. C.	= automatic frequency control	AMPL	= amplifier	B. F. O.	= beat frequency oscillator	BE CU	= beryllium copper	BH	= binder head	BP	= bandpass	BRS	= brass	BWO	= backward wave oscillator	CCW	= counter-clockwise	CER	= ceramic	CMO	= cabinet mount only	COEF	= coefficient	COM	= common	COMP	= composition	COMPL	= complete	CONN	= connector	CP	= cadmium plate	CRT	= cathode-ray tube	CW	= clockwise	DEPC	= deposited carbon	DR	= drive	ELECT	= electrolytic	ENCAP	= encapsulated	EXT	= external	F	= farads	f	= femto = 10 ⁻¹⁵	FH	= flat head	FIL H	= fillister head	FXD	= fixed	G	= giga = 10 ⁹	GE	= germanium	GL	= glass	GRD	= ground(ed)	<table style="width: 100%; border: none;"> <tr><td>H</td><td>= henries</td></tr> <tr><td>HEX</td><td>= hexagonal</td></tr> <tr><td>HG</td><td>= mercury</td></tr> <tr><td>HR</td><td>= hour(s)</td></tr> <tr><td>Hz</td><td>= hertz</td></tr> <tr><td>IF</td><td>= intermediate freq.</td></tr> <tr><td>IMPG</td><td>= impregnated</td></tr> <tr><td>INCD</td><td>= incandescent</td></tr> <tr><td>INCL</td><td>= include(s)</td></tr> <tr><td>INS</td><td>= insulation(ed)</td></tr> <tr><td>INT</td><td>= internal</td></tr> <tr><td>k</td><td>= kilo = 1000</td></tr> <tr><td>LH</td><td>= left hand</td></tr> <tr><td>LJN</td><td>= linear taper</td></tr> <tr><td>LK WASH</td><td>= lock washer</td></tr> <tr><td>LOG</td><td>= logarithmic taper</td></tr> <tr><td>LPF</td><td>= low pass filter</td></tr> <tr><td>m</td><td>= milli = 10⁻³</td></tr> <tr><td>M</td><td>= meg = 10⁶</td></tr> <tr><td>MET FLM</td><td>= metal film</td></tr> <tr><td>MET OX</td><td>= metallic oxide</td></tr> <tr><td>MFR</td><td>= manufacturer</td></tr> <tr><td>MINAT</td><td>= miniature</td></tr> <tr><td>MOM</td><td>= momentary</td></tr> <tr><td>MTG</td><td>= mounting</td></tr> <tr><td>MY</td><td>= "mylar"</td></tr> <tr><td>n</td><td>= nano = 10⁻⁹</td></tr> <tr><td>N/C</td><td>= normally closed</td></tr> <tr><td>NE</td><td>= neon</td></tr> <tr><td>NI PL</td><td>= nickel plate</td></tr> <tr><td>N/O</td><td>= normally open</td></tr> <tr><td>NPO</td><td>= negative positive zero (zero temperature coefficient)</td></tr> </table>	H	= henries	HEX	= hexagonal	HG	= mercury	HR	= hour(s)	Hz	= hertz	IF	= intermediate freq.	IMPG	= impregnated	INCD	= incandescent	INCL	= include(s)	INS	= insulation(ed)	INT	= internal	k	= kilo = 1000	LH	= left hand	LJN	= linear taper	LK WASH	= lock washer	LOG	= logarithmic taper	LPF	= low pass filter	m	= milli = 10 ⁻³	M	= meg = 10 ⁶	MET FLM	= metal film	MET OX	= metallic oxide	MFR	= manufacturer	MINAT	= miniature	MOM	= momentary	MTG	= mounting	MY	= "mylar"	n	= nano = 10 ⁻⁹	N/C	= normally closed	NE	= neon	NI PL	= nickel plate	N/O	= normally open	NPO	= negative positive zero (zero temperature coefficient)	<table style="width: 100%; border: none;"> <tr><td>NPN</td><td>= negative-positive-negative</td></tr> <tr><td>NRFR</td><td>= not recommended for field replacement</td></tr> <tr><td>NSR</td><td>= not separately replaceable</td></tr> <tr><td>OBD</td><td>= order by description</td></tr> <tr><td>OH</td><td>= oval head</td></tr> <tr><td>OX</td><td>= oxide</td></tr> <tr><td>P</td><td>= peak</td></tr> <tr><td>PC</td><td>= printed circuit</td></tr> <tr><td>p</td><td>= pico = 10⁻¹²</td></tr> <tr><td>PH BRZ</td><td>= phosphor bronze</td></tr> <tr><td>PHL</td><td>= Phillips</td></tr> <tr><td>PIV</td><td>= peak inverse voltage</td></tr> <tr><td>PNP</td><td>= positive-negative-positive</td></tr> <tr><td>P/O</td><td>= part of</td></tr> <tr><td>POLY</td><td>= polystyrene</td></tr> <tr><td>PORC</td><td>= porcelain</td></tr> <tr><td>POS</td><td>= position(s)</td></tr> <tr><td>POT</td><td>= potentiometer</td></tr> <tr><td>PP</td><td>= peak-to-peak</td></tr> <tr><td>PT</td><td>= point</td></tr> <tr><td>PWV</td><td>= peak working voltage</td></tr> <tr><td>RECT</td><td>= rectifier</td></tr> <tr><td>RF</td><td>= radio frequency</td></tr> <tr><td>RH</td><td>= round head or right hand</td></tr> <tr><td>RMO</td><td>= rack mount only</td></tr> <tr><td>RMS</td><td>= root-mean square</td></tr> </table>	NPN	= negative-positive-negative	NRFR	= not recommended for field replacement	NSR	= not separately replaceable	OBD	= order by description	OH	= oval head	OX	= oxide	P	= peak	PC	= printed circuit	p	= pico = 10 ⁻¹²	PH BRZ	= phosphor bronze	PHL	= Phillips	PIV	= peak inverse voltage	PNP	= positive-negative-positive	P/O	= part of	POLY	= polystyrene	PORC	= porcelain	POS	= position(s)	POT	= potentiometer	PP	= peak-to-peak	PT	= point	PWV	= peak working voltage	RECT	= rectifier	RF	= radio frequency	RH	= round head or right hand	RMO	= rack mount only	RMS	= root-mean square	<table style="width: 100%; border: none;"> <tr><td>RWV</td><td>= reverse working voltage</td></tr> <tr><td>S-B</td><td>= slow-blow</td></tr> <tr><td>SCR</td><td>= screw</td></tr> <tr><td>SE</td><td>= selenium</td></tr> <tr><td>SECT</td><td>= section(s)</td></tr> <tr><td>SEMICON</td><td>= semiconductor</td></tr> <tr><td>SI</td><td>= silicon</td></tr> <tr><td>SIL</td><td>= silver</td></tr> <tr><td>SL</td><td>= slide</td></tr> <tr><td>SPG</td><td>= spring</td></tr> <tr><td>SPL</td><td>= special</td></tr> <tr><td>SST</td><td>= stainless steel</td></tr> <tr><td>SR</td><td>= split ring</td></tr> <tr><td>STL</td><td>= steel</td></tr> <tr><td>TA</td><td>= tantalum</td></tr> <tr><td>TD</td><td>= time delay</td></tr> <tr><td>TGL</td><td>= toggle</td></tr> <tr><td>THD</td><td>= thread</td></tr> <tr><td>TI</td><td>= titanium</td></tr> <tr><td>TOL</td><td>= tolerance</td></tr> <tr><td>TRIM</td><td>= trimmer</td></tr> <tr><td>TWT</td><td>= traveling wave tube</td></tr> <tr><td>μ</td><td>= micro = 10⁻⁶</td></tr> <tr><td>VAR</td><td>= variable</td></tr> <tr><td>VDCW</td><td>= dc working volts</td></tr> <tr><td>W/</td><td>= with</td></tr> <tr><td>W</td><td>= watts</td></tr> <tr><td>WIV</td><td>= working inverse voltage</td></tr> <tr><td>WW</td><td>= wirewound</td></tr> <tr><td>W/O</td><td>= without</td></tr> </table>	RWV	= reverse working voltage	S-B	= slow-blow	SCR	= screw	SE	= selenium	SECT	= section(s)	SEMICON	= semiconductor	SI	= silicon	SIL	= silver	SL	= slide	SPG	= spring	SPL	= special	SST	= stainless steel	SR	= split ring	STL	= steel	TA	= tantalum	TD	= time delay	TGL	= toggle	THD	= thread	TI	= titanium	TOL	= tolerance	TRIM	= trimmer	TWT	= traveling wave tube	μ	= micro = 10 ⁻⁶	VAR	= variable	VDCW	= dc working volts	W/	= with	W	= watts	WIV	= working inverse voltage	WW	= wirewound	W/O	= without		
A	= amperes																																																																																																																																																																																																																																																								
A. F. C.	= automatic frequency control																																																																																																																																																																																																																																																								
AMPL	= amplifier																																																																																																																																																																																																																																																								
B. F. O.	= beat frequency oscillator																																																																																																																																																																																																																																																								
BE CU	= beryllium copper																																																																																																																																																																																																																																																								
BH	= binder head																																																																																																																																																																																																																																																								
BP	= bandpass																																																																																																																																																																																																																																																								
BRS	= brass																																																																																																																																																																																																																																																								
BWO	= backward wave oscillator																																																																																																																																																																																																																																																								
CCW	= counter-clockwise																																																																																																																																																																																																																																																								
CER	= ceramic																																																																																																																																																																																																																																																								
CMO	= cabinet mount only																																																																																																																																																																																																																																																								
COEF	= coefficient																																																																																																																																																																																																																																																								
COM	= common																																																																																																																																																																																																																																																								
COMP	= composition																																																																																																																																																																																																																																																								
COMPL	= complete																																																																																																																																																																																																																																																								
CONN	= connector																																																																																																																																																																																																																																																								
CP	= cadmium plate																																																																																																																																																																																																																																																								
CRT	= cathode-ray tube																																																																																																																																																																																																																																																								
CW	= clockwise																																																																																																																																																																																																																																																								
DEPC	= deposited carbon																																																																																																																																																																																																																																																								
DR	= drive																																																																																																																																																																																																																																																								
ELECT	= electrolytic																																																																																																																																																																																																																																																								
ENCAP	= encapsulated																																																																																																																																																																																																																																																								
EXT	= external																																																																																																																																																																																																																																																								
F	= farads																																																																																																																																																																																																																																																								
f	= femto = 10 ⁻¹⁵																																																																																																																																																																																																																																																								
FH	= flat head																																																																																																																																																																																																																																																								
FIL H	= fillister head																																																																																																																																																																																																																																																								
FXD	= fixed																																																																																																																																																																																																																																																								
G	= giga = 10 ⁹																																																																																																																																																																																																																																																								
GE	= germanium																																																																																																																																																																																																																																																								
GL	= glass																																																																																																																																																																																																																																																								
GRD	= ground(ed)																																																																																																																																																																																																																																																								
H	= henries																																																																																																																																																																																																																																																								
HEX	= hexagonal																																																																																																																																																																																																																																																								
HG	= mercury																																																																																																																																																																																																																																																								
HR	= hour(s)																																																																																																																																																																																																																																																								
Hz	= hertz																																																																																																																																																																																																																																																								
IF	= intermediate freq.																																																																																																																																																																																																																																																								
IMPG	= impregnated																																																																																																																																																																																																																																																								
INCD	= incandescent																																																																																																																																																																																																																																																								
INCL	= include(s)																																																																																																																																																																																																																																																								
INS	= insulation(ed)																																																																																																																																																																																																																																																								
INT	= internal																																																																																																																																																																																																																																																								
k	= kilo = 1000																																																																																																																																																																																																																																																								
LH	= left hand																																																																																																																																																																																																																																																								
LJN	= linear taper																																																																																																																																																																																																																																																								
LK WASH	= lock washer																																																																																																																																																																																																																																																								
LOG	= logarithmic taper																																																																																																																																																																																																																																																								
LPF	= low pass filter																																																																																																																																																																																																																																																								
m	= milli = 10 ⁻³																																																																																																																																																																																																																																																								
M	= meg = 10 ⁶																																																																																																																																																																																																																																																								
MET FLM	= metal film																																																																																																																																																																																																																																																								
MET OX	= metallic oxide																																																																																																																																																																																																																																																								
MFR	= manufacturer																																																																																																																																																																																																																																																								
MINAT	= miniature																																																																																																																																																																																																																																																								
MOM	= momentary																																																																																																																																																																																																																																																								
MTG	= mounting																																																																																																																																																																																																																																																								
MY	= "mylar"																																																																																																																																																																																																																																																								
n	= nano = 10 ⁻⁹																																																																																																																																																																																																																																																								
N/C	= normally closed																																																																																																																																																																																																																																																								
NE	= neon																																																																																																																																																																																																																																																								
NI PL	= nickel plate																																																																																																																																																																																																																																																								
N/O	= normally open																																																																																																																																																																																																																																																								
NPO	= negative positive zero (zero temperature coefficient)																																																																																																																																																																																																																																																								
NPN	= negative-positive-negative																																																																																																																																																																																																																																																								
NRFR	= not recommended for field replacement																																																																																																																																																																																																																																																								
NSR	= not separately replaceable																																																																																																																																																																																																																																																								
OBD	= order by description																																																																																																																																																																																																																																																								
OH	= oval head																																																																																																																																																																																																																																																								
OX	= oxide																																																																																																																																																																																																																																																								
P	= peak																																																																																																																																																																																																																																																								
PC	= printed circuit																																																																																																																																																																																																																																																								
p	= pico = 10 ⁻¹²																																																																																																																																																																																																																																																								
PH BRZ	= phosphor bronze																																																																																																																																																																																																																																																								
PHL	= Phillips																																																																																																																																																																																																																																																								
PIV	= peak inverse voltage																																																																																																																																																																																																																																																								
PNP	= positive-negative-positive																																																																																																																																																																																																																																																								
P/O	= part of																																																																																																																																																																																																																																																								
POLY	= polystyrene																																																																																																																																																																																																																																																								
PORC	= porcelain																																																																																																																																																																																																																																																								
POS	= position(s)																																																																																																																																																																																																																																																								
POT	= potentiometer																																																																																																																																																																																																																																																								
PP	= peak-to-peak																																																																																																																																																																																																																																																								
PT	= point																																																																																																																																																																																																																																																								
PWV	= peak working voltage																																																																																																																																																																																																																																																								
RECT	= rectifier																																																																																																																																																																																																																																																								
RF	= radio frequency																																																																																																																																																																																																																																																								
RH	= round head or right hand																																																																																																																																																																																																																																																								
RMO	= rack mount only																																																																																																																																																																																																																																																								
RMS	= root-mean square																																																																																																																																																																																																																																																								
RWV	= reverse working voltage																																																																																																																																																																																																																																																								
S-B	= slow-blow																																																																																																																																																																																																																																																								
SCR	= screw																																																																																																																																																																																																																																																								
SE	= selenium																																																																																																																																																																																																																																																								
SECT	= section(s)																																																																																																																																																																																																																																																								
SEMICON	= semiconductor																																																																																																																																																																																																																																																								
SI	= silicon																																																																																																																																																																																																																																																								
SIL	= silver																																																																																																																																																																																																																																																								
SL	= slide																																																																																																																																																																																																																																																								
SPG	= spring																																																																																																																																																																																																																																																								
SPL	= special																																																																																																																																																																																																																																																								
SST	= stainless steel																																																																																																																																																																																																																																																								
SR	= split ring																																																																																																																																																																																																																																																								
STL	= steel																																																																																																																																																																																																																																																								
TA	= tantalum																																																																																																																																																																																																																																																								
TD	= time delay																																																																																																																																																																																																																																																								
TGL	= toggle																																																																																																																																																																																																																																																								
THD	= thread																																																																																																																																																																																																																																																								
TI	= titanium																																																																																																																																																																																																																																																								
TOL	= tolerance																																																																																																																																																																																																																																																								
TRIM	= trimmer																																																																																																																																																																																																																																																								
TWT	= traveling wave tube																																																																																																																																																																																																																																																								
μ	= micro = 10 ⁻⁶																																																																																																																																																																																																																																																								
VAR	= variable																																																																																																																																																																																																																																																								
VDCW	= dc working volts																																																																																																																																																																																																																																																								
W/	= with																																																																																																																																																																																																																																																								
W	= watts																																																																																																																																																																																																																																																								
WIV	= working inverse voltage																																																																																																																																																																																																																																																								
WW	= wirewound																																																																																																																																																																																																																																																								
W/O	= without																																																																																																																																																																																																																																																								

0001-9700

The total quantity for each part is given only once — at the first appearance of the part number in the list.

Part numbers for the shield cases, screws, cable clamps, and cables (except for wiring on a board) on each board assembly, are not listed in Table 6-3. If required these parts must be ordered separately when ordering a complete board assembly. They are listed in Table 6-4 and 6-5 as Board Mounted Hardware and Cable Assemblies respectively.

6-7. ORDERING INFORMATION.

6-8. To order a part listed in the replaceable parts table, give the Hewlett-Packard part number, indicate the quantity required, and address the order to the nearest Hewlett-Packard office.

6-9. To order a part that is not listed in the replaceable parts table, state the full instrument model and serial number, the description and function of the part, and the number of parts required. Address your order to the nearest Hewlett-Packard office.

6-10. DIRECT MAIL ORDER SYSTEM.

6-11. Within the USA, Hewlett-Packard can supply parts through a direct mail order system. Advantages of using the system are:

- a. Direct ordering and shipment from the HP Parts Center in Mountain View, California.
- b. No maximum or minimum on any mail order (there is a minimum order amount for parts ordered through a local HP Office when the orders require billing and invoicing).
- c. Prepaid transportation (there is a small handling charge for each order).
- d. No invoices — to provide these advantages, a check or money order must accompany each order.

6-12. Mail order forms and specific ordering information is available through your local HP Office. Addresses and phone numbers are located at the back of this manual.

Table 6-2. Manufacturers Code Lists.

MFR NO.	MANUFACTURER NAME	ADDRESS	ZIP CODE
00000	ANY SATISFACTORY SUPPLIER		
00033	NIPPON ELECTRIC CO		
01121	ALLEN-BRADLEY CO		
01295	TEXAS INSTR INC SEMICOND CMPNT DIV	MILWAUKEE WI	53204
01924	RCA CORP SOLID STATE DIV	DALLAS TX	75222
02114	FERROXCUBE CORP	SOMERVILLE NJ	08876
03888	KDI PYROFILM CORP	SAUGERTIES NY	12477
04713	MOTOROLA SEMICONDUCTOR PRODUCTS	WHIPPANY NJ	07981
04383	PANDUIT CORP	PHOENIX AZ	85062
06565	PRECISION MONOLITHICS INC	TINLEY PARK IL	60477
07263	FAIRCHILD SEMICONDUCTOR DIV	SANTA CLARA CA	95050
07716	TRW INC BURLINGTON DIV	MOUNTAIN VIEW CA	94042
0859C	NO M/F DESCRIPTION FOR THIS MFG NUMBER	BURLINGTON IA	52601
14936	GENERAL INSTR CORP SEMIDON PROD GP		
18324	SIGNETICS CORP	HICKSVILLE NY	11802
19701	MEPCO/ELECTRA CORP	SUNNYVALE CA	94086
24546	CORNING GLASS WORKS (BRADFORD)	MINERAL WELLS TX	76067
27014	NATIONAL SEMICONDUCTOR CORP	BRADFORD PA	16701
27777	VARO SEMICONDUCTOR INC	SANTA CLARA CA	95051
28480	HEWLETT-PACKARD CO CORPORATE HQ	GARLAND TX	75040
29832	TELEDYNE PHILBRICK NEXUS	PALO ALTO CA	94304
30161	AAVID ENGINEERING INC	DEDHAM MA	02026
32293	INTERSIL INC	LACONIA NH	03246
32997	BOURNS INC TRIMPOT PROD DIV	CUPERTINO CA	95014
34335	ADVANCED MICRO DEVICES INC	RIVERSIDE CA	92507
52763	STETTNER-TRUSH INC	SUNNYVALE CA	94086
56289	SPRAGUE ELECTRIC CO	CAZENOVIA NY	13035
72136	ELECTRO MOTIVE CORP SUB IEC	NORTH ADAMS MA	01247
74970	JOHNSON E F CO	WILLIMANTIC CT	06226
75042	TRW INC PHILADELPHIA DIV	WASECA MN	56093
75915	LITTELFUSE INC	PHILADELPHIA PA	19108
8E175	BURR BROWN CO	DES PLAINES IL	60016
98291	SEAELECTRO CORP	HUNTSVILLE AL	35801
		MAMARONECK NY	10544

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A1	04192-66501	9	1	RANGE RESISTOR/NULL DETECTOR (NOT INCLUDING THE SHIELD CASES)	28480	04192-66501
A1C1	0160-3456	6	61	CAPACITOR-FXD 1000PF +-10% 1KVDC CER	28480	0160-3456
A1C2	0160-3456	6		CAPACITOR-FXD 1000PF +-10% 1KVDC CER	28480	0160-3456
A1C3	0160-3456	6		CAPACITOR-FXD 1000PF +-10% 1KVDC CER	28480	0160-3456
A1C4	0160-3456	6		CAPACITOR-FXD 1000PF +-10% 1KVDC CER	28480	0160-3456
A1C5	0121-0046	2	1	CAPACITOR-V TRMR-CER 9-35PF 200V PC-MTG	52763	304322 9/35PF N650
A1C6	0160-3456	6		CAPACITOR-FXD 1000PF +-10% 1KVDC CER	28480	0160-3456
A1C7	0160-3456	6		CAPACITOR-FXD 1000PF +-10% 1KVDC CER	28480	0160-3456
A1C8	0160-3466	8	25	CAPACITOR-FXD 100PF +-10% 1KVDC CER	28480	0160-3466
A1C9	0160-3466	8		CAPACITOR-FXD 100PF +-10% 1KVDC CER	28480	0160-3466
A1C10	0160-0128	3	5	CAPACITOR-FXD 2.2UF +-20% 50VDC CER	28480	0160-0128
A1C12	0160-2150	5	7	CAPACITOR-FXD 33PF +-5% 300VDC MICA	28480	0160-2150
A1C14	0160-2234	6	4	CAPACITOR-FXD .51PF +- .25PF 500VDC CER	28480	0160-2234
A1C15	0150-0059	5	5	CAPACITOR-FXD 3.3PF 500VDC CER		
A1C16	0160-2265	1	1	CAPACITOR-FXD 22P 500VDC CER		
A1C17	0180-1085	5	85	CAPACITOR-FXD 4.7UF 16VDC TA	28480	0180-1085
A1C18	0180-1085	5		CAPACITOR-FXD 4.7UF 16VDC TA	28480	0180-1085
A1C19	0180-1085	5		CAPACITOR-FXD 4.7UF 16VDC TA	28480	0180-1085
A1C20	0121-0127	0	1	CAPACITOR-V TRMR-AIR 2.1-13.3PF 350V	74970	189-0505-028
A1C21	0160-0127	2	21	CAPACITOR-FXD 1UF +-20% 25VDC CER	28480	0160-0127
A1C22	0121-0127	6	2	CAPACITOR-V TRMR-AIR 1.7-14.1P 350V PC-MTG		
A1C23	0160-4835	8		CAPACITOR-FXD .1UF 10% 50VDC CER		
A1C24	0160-2940	1	7	CAPACITOR-FXD 470PF +-5% 300VDC MICA	28480	0160-2940
A1C25	0180-1085	5		CAPACITOR-FXD 4.7UF 16VDC TA	28480	0180-1085
A1C26	0180-1085	5		CAPACITOR-FXD 4.7UF 16VDC TA	28480	0180-1085
A1C27	0180-1085	5		CAPACITOR-FXD 4.7UF 16VDC TA	28480	0180-1085
A1C28	0160-2236	8	1	CAPACITOR-FXD 1PF +- .25PF 500VDC CER	28480	0160-2236
A1C29	0180-1077	5	9	CAPACITOR-FXD 10 UF 20VDC TA	28480	0180-1077
A1C30	0140-0210	2	11	CAPACITOR-FXD 270PF +-5% 300VDC MICA	72136	DM15F271J0300WV1CR
A1C31	0160-4835	8		CAPACITOR-FXD .1UF 10% 50VDC CER		
A1C32	0160-3456	6		CAPACITOR-FXD 1000PF +-10% 1KVDC CER	28480	0160-3456
A1C33	0180-1085	5		CAPACITOR-FXD 4.7UF 16VDC TA	28480	0180-1085
A1C34	0160-4835	8		CAPACITOR-FXD .1UF 10% 50VDC CER		
A1C35	0160-2238	0	2	CAPACITOR-FXD 1.5PF +- .25PF 500VDC CER	28480	0160-2238
A1C36	0160-2238	0		CAPACITOR-FXD 1.5PF +- .25PF 500VDC CER	28480	0160-2238
A1C37	0160-3456	6		CAPACITOR-FXD 1000PF +-10% 1KVDC CER	28480	0160-3456
A1C38	0160-3456	6		CAPACITOR-FXD 1000PF +-10% 1KVDC CER	28480	0160-3456
A1C39	0160-3456	6		CAPACITOR-FXD 1000PF +-10% 1KVDC CER	28480	0160-3456
A1C40	0180-1077	5		CAPACITOR-FXD 10 UF 20VDC TA	28480	0180-1077
A1C41	0160-3456	6		CAPACITOR-FXD 1000PF +-10% 1KVDC CER	28480	0160-3456
A1C42	0160-3456	6		CAPACITOR-FXD 1000PF +-10% 1KVDC CER	28480	0160-3456
A1C43	0160-2249	3	1	CAPACITOR-FXD 4.7PF +- .25PF 500VDC CER	28480	0160-2249
A1C44	0160-3456	6		CAPACITOR-FXD 1000PF +-10% 1KVDC CER	28480	0160-3456
A1C45	0160-3456	6		CAPACITOR-FXD 1000PF +-10% 1KVDC CER	28480	0160-3456
A1C46	0140-0191	8	6	CAPACITOR-FXD 56PF +-5% 300VDC MICA	72136	DM15E560J0300WV1CR
A1C47	0160-0128	3		CAPACITOR-FXD 2.2UF +-20% 50VDC CER	28480	0160-0128
A1C48	0160-0128	3		CAPACITOR-FXD 2.2UF +-20% 50VDC CER	28480	0160-0128
A1C49	0160-2204	0	17	CAPACITOR-FXD 100PF +-5% 300VDC MICA	28480	0160-2204
A1C50	0160-0128	3		CAPACITOR-FXD 2.2UF +-20% 50VDC CER	28480	0160-0128
A1C51	0160-0128	3		CAPACITOR-FXD 2.2UF +-20% 50VDC CER	28480	0160-0128
A1C52	0160-3847	9	92	CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A1C53	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A1C54	0160-3466	8		CAPACITOR-FXD 100PF +-10% 1KVDC CER	28480	0160-3466
A1C55	0160-3466	8		CAPACITOR-FXD 100PF +-10% 1KVDC CER	28480	0160-3466
A1C56	0180-1085	5		CAPACITOR-FXD 4.7UF 16VDC TA	28480	0180-1085
A1C57	0180-1085	5		CAPACITOR-FXD 4.7UF 16VDC TA	28480	0180-1085
A1C58	0180-1077	5		CAPACITOR-FXD 10 UF 20VDC TA	28480	0180-1077
A1C59	0180-1077	5		CAPACITOR-FXD 10 UF 20VDC TA	28480	0180-1077
A1C60	0180-1077	5		CAPACITOR-FXD 10 UF 20VDC TA	28480	0180-1077
A1C61	0180-1077	5		CAPACITOR-FXD 10 UF 20VDC TA	28480	0180-1077
A1C62	0180-1085	5		CAPACITOR-FXD 4.7UF 16VDC TA	28480	0180-1085
A1C63	0180-1085	5		CAPACITOR-FXD 4.7UF 16VDC TA	28480	0180-1085
A1C64	0180-1085	5		CAPACITOR-FXD 4.7UF 16VDC TA	28480	0180-1085
A1C65	0180-1085	5		CAPACITOR-FXD 4.7UF 16VDC TA	28480	0180-1085
A1C66	0160-3466	8		CAPACITOR-FXD 100PF +-10% 1KVDC CER	28480	0160-3466
A1C67	0180-1085	5		CAPACITOR-FXD 4.7UF 16VDC TA	28480	0180-1085
A1C68	0180-1085	5		CAPACITOR-FXD 4.7UF 16VDC TA	28480	0180-1085
A1C69	0160-3456	6		CAPACITOR-FXD 1000PF +-10% 1KVDC CER	28480	0160-3456
A1C70	0160-3501	2	2	CAPACITOR-FXD 4UF +-10% 50VDC MET-POLYC	28480	0160-3501
A1C71	0180-1085	5		CAPACITOR-FXD 4.7UF 16VDC TA	28480	0180-1085

See introduction to this section for ordering information
*Indicates factory selected value

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A1C72	0180-1085	5		CAPACITOR-FXD 4.7UF 16VDC TA	28480	0180-1085
A1C73	0160-3501	2		CAPACITOR-FXD 4UF +-10% 50VDC MET-POLYC	28480	0160-3501
A1C74	0180-1077	5		CAPACITOR-FXD 10 UF 20VDC TA	28480	0180-1077
A1C75	0180-1077	5		CAPACITOR-FXD 10 UF 20VDC TA	28480	0180-1077
A1C76	0180-1085	5		CAPACITOR-FXD 4.7UF 16VDC TA	28480	0180-1085
A1C77	0180-1085	5		CAPACITOR-FXD 4.7UF 16VDC TA	28480	0180-1085
A1C78	0160-3456	6		CAPACITOR-FXD 1000PF +-10% 1KVDC CER	28480	0160-3456
A1C79	0180-1085	5		CAPACITOR-FXD 4.7UF 16VDC TA	28480	0180-1085
A1C80	0180-1085	5		CAPACITOR-FXD 4.7UF 16VDC TA	28480	0180-1085
A1C81	0160-3456	6		CAPACITOR-FXD 1000PF +-10% 1KVDC CER	28480	0160-3456
A1C82	0180-1085	5		CAPACITOR-FXD 4.7UF 16VDC TA	28480	0180-1085
A1C83	0180-1085	5		CAPACITOR-FXD 4.7UF 16VDC TA	28480	0180-1085
A1C84	0160-2204	0		CAPACITOR-FXD 100PF +-5% 300VDC MICA	28480	0160-2204
A1C85	0160-2204	0		CAPACITOR-FXD 100PF +-5% 300VDC MICA	28480	0160-2204
A1C86	0160-3466	8		CAPACITOR-FXD 100PF +-10% 1KVDC CER	28480	0160-3466
A1C87	0160-3466	8		CAPACITOR-FXD 100PF +-10% 1KVDC CER	28480	0160-3466
A1C88	0180-1083	3	81	CAPACITOR-FXD 33UF 25VDC AL	28480	0180-1083
A1C89	0160-2204	0		CAPACITOR-FXD 100PF +-5% 300VDC MICA	28480	0160-2204
A1C90	0180-1079	7	2	CAPACITOR-FXD 2200UF 6.3V AL	28480	0180-1079
A1C91	0180-1085	5		CAPACITOR-FXD 4.7UF 16VDC TA	28480	0180-1085
A1C92	0180-1085	5		CAPACITOR-FXD 4.7UF 16VDC TA	28480	0180-1085
A1C93	0180-1085	5		CAPACITOR-FXD 4.7UF 16VDC TA	28480	0180-1085
A1C94	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A1C95	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A1C96	0180-1085	5		CAPACITOR-FXD 4.7UF 16VDC TA	28480	0180-1085
A1C97	0160-2150	5		CAPACITOR-FXD 33PF +-5% 300VDC MICA	28480	0160-2150
A1C98	0160-2150	5		CAPACITOR-FXD 33PF +-5% 300VDC MICA	28480	0160-2150
A1C99	0160-4835	8		CAPACITOR-FXD .1UF 10% 50VDC CER	28480	0160-4835
A1C100	0180-1079	7		CAPACITOR-FXD 2200UF 6.3V AL	28480	0180-1079
A1C101	0160-3456	6		CAPACITOR-FXD 1000PF +-10% 1KVDC CER	28480	0160-3456
A1C102	0180-0374	3	4	CAPACITOR-FXD 10UF+-10% 20VDC TA	56289	150D106X9020B2
A1C103	0180-0374	3		CAPACITOR-FXD 10UF+-10% 20VDC TA	56289	150D106X9020B2
A1C104	0180-1085	5		CAPACITOR-FXD 4.7UF 16VDC TA	28480	0180-1085
A1C105	0180-1085	5		CAPACITOR-FXD 4.7UF 16VDC TA	28480	0180-1085
A1C106	0180-1085	5		CAPACITOR-FXD 4.7UF 16VDC TA	28480	0180-1085
A1C107	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A1C108	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A1C109	0160-2940	1		CAPACITOR-FXD 470PF +-5% 300VDC MICA	28480	0160-2940
A1C110	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A1C111	0160-2940	1		CAPACITOR-FXD 470PF +-5% 300VDC MICA	28480	0160-2940
A1C112	0160-2249	3	6	CAPACITOR-FXD 4.7PF +- .25PF 500VDC CER	28480	0160-2249
A1C113	0160-2307	3		CAPACITOR-FXD 47PF +-5% 300VDC MICA	28480	0160-2249
A1C114	0160-4835	8		CAPACITOR-FXD .1UF 10% 50VDC CER	28480	0160-4835
A1C115	0160-3456	6		CAPACITOR-FXD 1000PF +-10% 1KVDC CER	28480	0160-3456
A1C116	0140-0210	2		CAPACITOR-FXD 270PF +-5% 300VDC MICA	72136	DM15F271J0300WV1CR
A1C117	0160-0127	2		CAPACITOR-FXD 1UF +-20% 25VDC CER	28480	0160-0127
A1C118	0160-0300	3	2	CAPACITOR-FXD 2700PF +-10% 200VDC POLYE	28480	0160-0300
A1C119	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A1C120	0180-1085	5		CAPACITOR-FXD 4.7UF 16VDC TA	28480	0180-1085
A1C121	0180-0374	3		CAPACITOR-FXD 10UF+-10% 20VDC TA	56289	150D106X9020B2
A1C122	0180-0374	3		CAPACITOR-FXD 10UF+-10% 20VDC TA	56289	150D106X9020B2
A1C123	0180-1085	5		CAPACITOR-FXD 4.7UF 16VDC TA	28480	0180-1085
A1C124	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A1C125	0180-1085	5		CAPACITOR-FXD 4.7UF 16VDC TA	28480	0180-1085
A1C126	0160-4835	8		CAPACITOR-FXD .1UF 10% 50VDC CER	28480	0160-4835
A1C127	0160-4835	8		CAPACITOR-FXD .1UF 10% 50VDC CER	28480	0160-4835
A1C128	0160-3466	8		CAPACITOR-FXD 100PF +-10% 1KVDC CER	28480	0160-3466
A1C129	0180-1077	5		CAPACITOR-FXD 10 UF 20VDC TA	28480	0180-1077
A1C130	0160-0127	2		CAPACITOR-FXD 1UF +-20% 25VDC CER	28480	0160-0127
A1C131	0160-0299	9	2	CAPACITOR-FXD 1800PF +-10% 200VDC POLYE	28480	0160-0299
A1C132	0160-0300	3		CAPACITOR-FXD 2700PF +-10% 200VDC POLYE	28480	0160-0300
A1C133	0160-0299	9		CAPACITOR-FXD 1800PF +-10% 200VDC POLYE	28480	0160-0299
A1C134	0180-1085	5		CAPACITOR-FXD 4.7UF 16VDC TA	28480	0180-1085
A1C135	0160-2204	0		CAPACITOR-FXD 100PF		
A1CR1	1901-0050	3	72	DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A1CR2	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A1CR3	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A1CR4	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A1CR5	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A1CR6	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A1CR7	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A1CR8	1902-0041	4	11	DIODE-ZNR 5.11V 5% DO-35 PD=.4W	28480	1902-0041
A1CR9	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A1CR10	1902-0041	4		DIODE-ZNR 5.11V 5% DO-35 PD=.4W	28480	1902-0041
A1CR11	1902-3036	3	3	DIODE-ZNR 3.16V 5% DO-7 PD=.4W TC=-.064%	28480	1902-3036
A1CR12	1902-3036	3		DIODE-ZNR 3.16V 5% DO-7 PD=.4W TC=-.064%	28480	1902-3036
A1CR13	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A1CR14	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A1CR15	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050

See introduction to this section for ordering information
*Indicates factory selected value

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A1CR16	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A1CR17	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A1CR18	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A1CR19	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A1CR20	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A1CR21	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A1CR22	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A1CR23	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A1CR24	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A1CR25	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A1CR26	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A1CR27	1902-0041	4		DIODE-ZNR 5.11V 5% DO-35 PD=.4W	28480	1902-0041
A1CR28	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A1CR29	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A1CR30	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A1CR31	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A1CR32	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A1CR33	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A1CR34	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A1CR35	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A1CR36	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A1CR37	1902-0041	4		DIODE-ZNR 5.11V 5% DO-35 PD=.4W	28480	1902-0041
A1CR38	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A1CR39	1902-3136	3		DIODE-ZNR 8.06V 12.5MA DO-35	28480	1902-3136
A1CR40	1902-3136	3		DIODE-ZNR 8.06V 12.5MA DO-35	28480	1902-3136
A1CR41	1902-3136	3		DIODE-ZNR 8.06V 12.5MA DO-35	28480	1902-3136
A1CR42	1902-3136	3		DIODE-ZNR 8.06V 12.5MA DO-35	28480	1902-3136
A1F1	2110-0650			FUSE .125A 125V		
A1J1	1251-4938	5	2	CONNECTOR 3-PIN M METRIC POST TYPE	28480	1251-4938
A1J2	1250-0257	1	40	CONNECTOR-RF SMB M PC 50-OHM	28480	1250-0257
A1J3	1250-0257	1		CONNECTOR-RF SMB M PC 50-OHM	28480	1250-0257
A1J4	1200-0607	0	20	SOCKET-IC 16-CONT DIP DIP-SLDR	28480	1200-0607
A1J5	1200-0607	0		SOCKET-IC 16-CONT DIP DIP-SLDR	28480	1200-0607
A1J6	1250-0257	1		CONNECTOR-RF SMB M PC 50-OHM	28480	1250-0257
A1J7	1250-0257	1		CONNECTOR-RF SMB M PC 50-OHM	28480	1250-0257
A1J8	1250-0257	1		CONNECTOR-RF SMB M PC 50-OHM	28480	1250-0257
A1J9	1251-3197	6	3	CONNECTOR 12-PIN M POST TYPE	28480	1251-3197
A1J10	1251-4822	6	7	CONNECTOR 3-PIN M POST TYPE	28480	1251-4822
A1J11	1251-4822	6		CONNECTOR 3-PIN M POST TYPE	28480	1251-4822
A1J12	1250-0257	1		CONNECTOR-RF SMB M PC 50-OHM	28480	1250-0257
A1J13	1250-0257	1		CONNECTOR-RF SMB M PC 50-OHM	28480	1250-0257
A1J14	1250-0257	1		CONNECTOR-RF SMB M PC 50-OHM	28480	1250-0257
A1J15	1250-0257	1		CONNECTOR-RF SMB M PC 50-OHM	28480	1250-0257
A1J16	1251-1636			CONNECTOR-SGL CONT SKT .04-IN-BSC-SZ RND		
A1J17	1251-1636			CONNECTOR-SGL CONT SKT .04-IN-BSC-SZ RND		
A1K1	0490-1269	4	3	RELAY 1C 12VDC-COIL .66A 30VDC	28480	0490-1269
A1K2	0490-0240	9	2	RELAY-REED 1A	28480	0490-0240
A1K3	0490-0240	9		RELAY-REED 1A	28480	0490-0240
A1K4	0490-0237	4	2	RELAY-REED 2A	28480	0490-0237
A1K5	0490-0237	4		RELAY-REED 2A	28480	0490-0237
A1K6	0490-1269	4		RELAY 1C 12VDC-COIL .66A 30VDC	28480	0490-1269
A1L1	9140-0114	4	34	INDUCTOR RF-CH-MLD 10UH 10% .166DX.385LG	28480	9140-0114
A1L2	9140-0114	4		INDUCTOR RF-CH-MLD 10UH 10% .166DX.385LG	28480	9140-0114
A1L3	9140-0114	4		INDUCTOR RF-CH-MLD 10UH 10% .166DX.385LG	28480	9140-0114
A1L4	9140-0158	6	9	INDUCTOR RF-CH-MLD 1UH 10% .105DX.26LG	28480	9140-0158
A1L5	9140-0129	1	16	INDUCTOR RF-CH-MLD 220UH 5% .166DX.385LG	28480	9140-0129
A1L6	9140-0129	1		INDUCTOR RF-CH-MLD 220UH 5% .166DX.385LG	28480	9140-0129
A1L7	9140-0098	3	6	INDUCTOR RF-CH-MLD 2.2UH 10%	28480	9140-0098
A1L8	9140-0131	5	1	INDUCTOR RF-CH-MLD 10MH 5% .25DX.75LG	28480	9140-0131
A1L9	9140-0114	4		INDUCTOR RF-CH-MLD 10UH 10% .166DX.385LG	28480	9140-0114
A1L10	9100-1665	8	2	INDUCTOR RF-CH-MLD 3.3MH 5% .23DX.57LG	28480	9100-1665
A1L11	9100-1665	8		INDUCTOR RF-CH-MLD 3.3MH 5% .23DX.57LG	28480	9100-1665
A1Q1	1853-0354	7	19	TRANSISTOR PNP SI TO-92 PD=350MW	28480	1853-0354
A1Q2	1854-0215	1	32	TRANSISTOR NPN SI PD=350MW FT=300MHZ	04713	2N3904
A1Q3	1854-0215	1		TRANSISTOR NPN SI PD=350MW FT=300MHZ	04713	2N3904
A1Q4	1853-0354	7		TRANSISTOR PNP SI TO-92 PD=350MW	28480	1853-0354
A1Q5	1854-0247	9	11	TRANSISTOR NPN SI TO-39 PD=1W FT=800MHZ	28480	1854-0247
A1Q6	1853-0012	4	5	TRANSISTOR PNP 2N2904A SI TO-39 PD=600MW	01295	2N2904A
A1Q7	1854-0247	9		TRANSISTOR NPN SI TO-39 PD=1W FT=800MHZ	28480	1854-0247
A1Q8	1854-0215	1		TRANSISTOR NPN SI PD=350MW FT=300MHZ	04713	2N3904
A1Q9	1853-0354	7		TRANSISTOR PNP SI TO-92 PD=350MW	28480	1853-0354
A1Q10	1853-0036	2	17	TRANSISTOR PNP SI PD=310MW FT=250MHZ	28480	1853-0036
A1Q11	1853-0036	2		TRANSISTOR PNP SI PD=310MW FT=250MHZ	28480	1853-0036
A1Q12	1854-0215	1		TRANSISTOR NPN SI PD=350MW FT=300MHZ	04713	2N3904
A1Q13	1853-0354	7		TRANSISTOR PNP SI TO-92 PD=350MW	28480	1853-0354
A1Q14	1854-0247	9		TRANSISTOR NPN SI TO-39 PD=1W FT=800MHZ	28480	1854-0247
A1Q15	1854-0215	1		TRANSISTOR NPN SI PD=350MW FT=300MHZ	04713	2N3904
A1Q16	1853-0036	2		TRANSISTOR PNP SI PD=310MW FT=250MHZ	28480	1853-0036
A1Q17	1853-0036	2		TRANSISTOR PNP SI PD=310MW FT=250MHZ	28480	1853-0036
A1Q18	1854-0247	9		TRANSISTOR NPN SI TO-39 PD=1W FT=800MHZ	28480	1854-0247
A1Q19	1854-0129	6	5	TRANSISTOR-NPN 2SC1636	28480	1854-0129
A1Q20	1854-0628	0	9	TRANSISTOR NPN SI TO-92 PD=625MW	04713	MPS-H17

See introduction to this section for ordering information
*Indicates factory selected value

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A1Q21	1854-0215	1	13	TRANSISTOR NPN SI PD=350MW FT=300MHZ	04713	2N3904
A1Q22	1855-0125	4		TRANSISTOR-FET 2SK185	28480	1855-0125
A1Q23	1854-0247	9		TRANSISTOR NPN SI TO-39 PD=1W FT=800MHZ	28480	1854-0247
A1Q24	1854-0247	9		TRANSISTOR NPN SI TO-39 PD=1W FT=800MHZ	28480	1854-0247
A1Q25	1854-0247	9		TRANSISTOR NPN SI TO-39 PD=1W FT=800MHZ	28480	1854-0247
A1Q26	1854-0129	6	11	TRANSISTOR-NPN 2SC1636	28480	1854-0129
A1Q27	1853-0354	7		TRANSISTOR PNP SI TO-92 PD=350MW	28480	1853-0354
A1Q28	1855-0406	4		TRANSISTOR J-FET P-CHAN D-MODE SI	32293	IT110
A1Q29	1855-0406	4		TRANSISTOR J-FET P-CHAN D-MODE SI	32293	IT110
A1Q30	1853-0354	7		TRANSISTOR PNP SI TO-92 PD=350MW	28480	1853-0354
A1Q31	1854-0628	0	0	TRANSISTOR NPN SI TO-92 PD=625MW	04713	MPS-H17
A1Q32	1854-0215	1		TRANSISTOR NPN SI PD=350MW FT=300MHZ	04713	2N3904
A1Q33	1855-0125	4		TRANSISTOR-FET 2SK185	28480	1855-0125
A1Q34	1855-0125	4		TRANSISTOR-FET 2SK185	28480	1855-0125
A1Q35	1855-0125	4		TRANSISTOR-FET 2SK185	28480	1855-0125
A1Q36	1855-0125	4	0	TRANSISTOR-FET 2SK185	28480	1855-0125
A1Q37	1854-0628	0		TRANSISTOR NPN SI TO-92 PD=625MW	04713	MPS-H17
A1Q38	1855-0125	4		TRANSISTOR-FET 2SK185	28480	1855-0125
A1Q39	1853-0354	7		TRANSISTOR PNP SI TO-92 PD=350MW	28480	1853-0354
A1Q40	1854-0628	0		TRANSISTOR NPN SI TO-92 PD=625MW	04713	MPS-H17
A1Q41	1854-0628	0	0	TRANSISTOR NPN SI TO-92 PD=625MW	04713	MPS-H17
A1Q42	1854-0215	1		TRANSISTOR NPN SI PD=350MW FT=300MHZ	04713	2N3904
A1Q43	1854-0215	1		TRANSISTOR NPN SI PD=350MW FT=300MHZ	04713	2N3904
A1Q44	1855-0406	4		TRANSISTOR J-FET P-CHAN D-MODE SI	32293	IT110
A1Q45	1855-0406	4		TRANSISTOR J-FET P-CHAN D-MODE SI	32293	IT110
A1R1	0757-1094	9	22	RESISTOR 1.47K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1471-F
A1R2	0698-3444	1		RESISTOR 316 1% .125W F TC=0+-100	24546	C4-1/8-T0-316R-F
A1R3	0698-3444	1		RESISTOR 316 1% .125W F TC=0+-100	24546	C4-1/8-T0-316R-F
A1R4	0757-0279	0		RESISTOR 3.16K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3161-F
A1R5	0757-0279	0		RESISTOR 3.16K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3161-F
A1R6	0757-0279	0	34	RESISTOR 3.16K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3161-F
A1R7	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1001-F
A1R8	0698-0082	7		RESISTOR 464 1% .125W F TC=0+-100	24546	C4-1/8-T0-4640-F
A1R9	0698-0082	7		RESISTOR 464 1% .125W F TC=0+-100	24546	C4-1/8-T0-4640-F
A1R10	0757-0401	0		RESISTOR 100 1% .125W F TC=0+-100	24546	C4-1/8-T0-101-F
A1R11	0757-0401	0	13	RESISTOR 100 1% .125W F TC=0+-100	24546	C4-1/8-T0-101-F
A1R12	0757-0397	3		RESISTOR 68.1 1% .125W F TC=0+-100	24546	C4-1/8-T0-68R1-F
A1R13	0757-1094	9		RESISTOR 1.47K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1471-F
A1R14	0699-0559	5		RESISTOR-FXD 9K OHM .02%	28480	0699-0559
A1R15	0699-0561	9		RESISTOR-FXD 101 OHM .01.2%	28480	0699-0561
A1R16	0699-0562	0	1	RESISTOR-FXD 211.1 OHM .05%	28480	0699-0562
A1R17	0698-3428	1		RESISTOR 14.7 1% .125W F TC=0+-100	03888	PME55-1/8-T0-14R7-F
A1R18	0757-1094	9		RESISTOR 1.47K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1471-F
A1R19	0757-0401	0		RESISTOR 100 1% .125W F TC=0+-100	24546	C4-1/8-T0-101-F
A1R20	0757-1094	9		RESISTOR 1.47K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1471-F
A1R21	0698-3160	8	7	RESISTOR 31.6K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3162-F
A1R22	0698-3160	8		RESISTOR 31.6K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3162-F
A1R23	0698-3162	0		RESISTOR 46.4K 1% .125W F TC=0+-100	24546	C4-1/8-T0-4642-F
A1R24	0698-0082	7		RESISTOR 464 1% .125W F TC=0+-100	24546	C4-1/8-T0-4640-F
A1R25	0757-0280	0		RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-101-F
A1R26	0698-3155	1	27	RESISTOR 4.64K 1% .125W F TC=0+-100	24546	C4-1/8-T0-4641-F
A1R27	0757-0439	4		RESISTOR 6.81K 1% .125W F TC=0+-100	24546	C4-1/8-T0-6811-F
A1R28	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1001-F
A1R29	0698-2208	3		RESISTOR-FXD 1K OHM 0.05% 1/8W MF	28480	0698-2208
A1R30	0699-0560	8		RESISTOR-FXD 900 OHM .02%	28480	0699-0560
A1R31	0757-0401	0	0	RESISTOR 100 1% .125W F TC=0+-100	24546	C4-1/8-T0-101-F
A1R32	0757-0401	0		RESISTOR 100 1% .125W F TC=0+-100	24546	C4-1/8-T0-101-F
A1R33	0698-0082	7		RESISTOR 464 1% .125W F TC=0+-100	24546	C4-1/8-T0-4640-F
A1R34	0757-0279	0		RESISTOR 3.16K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3161-F
A1R35	0757-1094	9		RESISTOR 1.47K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1471-F
A1R36	0698-3428	1	0	RESISTOR 14.7 1% .125W F TC=0+-100	03888	PME55-1/8-T0-14R7-F
A1R37	0757-0279	0		RESISTOR 3.16K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3161-F
A1R38	0698-3428	1		RESISTOR 14.7 1% .125W F TC=0+-100	03888	PME55-1/8-T0-14R7-F
A1R39	0757-0441	8		RESISTOR 8.25K 1% .125W F TC=0+-100	24546	C4-1/8-T0-8251-F
A1R40	0757-0421	4		RESISTOR 825 1% .125W F TC=0+-100	24546	C4-1/8-T0-825R-F
A1R41	0757-0442	9	34	RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A1R42	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A1R43	0757-0279	0		RESISTOR 3.16K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3161-F
A1R44	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1001-F
A1R45	0757-0417	8		RESISTOR 562 1% .125W F TC=0+-100	24546	C4-1/8-T0-562R-F
A1R46	0757-0280	3	1	RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1001-F
A1R47	0698-3444	1		RESISTOR 316 1% .125W F TC=0+-100	24546	C4-1/8-T0-316R-F
A1R48	0698-4383	9		RESISTOR 53.6 1% .125W F TC=0+-100	24546	C4-1/8-T0-53R6-F
A1R49	0698-3444	1		RESISTOR 316 1% .125W F TC=0+-100	24546	C4-1/8-T0-316R-F
A1R50	0757-0279	0		RESISTOR 3.16K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3161-F

See introduction to this section for ordering information
*Indicates factory selected value

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A1R51	0757-0276	7	1	RESISTOR 61.9 1% .125W F TC=0+-100	24546	C4-1/8-T0-6192-F
A1R52	0698-3334	8	2	RESISTOR 178 1% .5W F TC=0+-100	28480	0698-3334
A1R53	0698-3334	8		RESISTOR 178 1% .5W F TC=0+-100	28480	0698-3334
A1R54	0698-3260	9	17	RESISTOR 464K 1% .125W F TC=0+-100	28480	0698-3260
A1R55	0757-1094	9		RESISTOR 1.47K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1471-F
A1R56	0757-0465	6	8	RESISTOR 100K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1003-F
A1R57	0757-0465	6		RESISTOR 100K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1003-F
A1R58	0757-0419	0	15	RESISTOR 681 1% .125W F TC=0+-100	24546	C4-1/8-T0-681R-F
A1R59	0698-3156	2	11	RESISTOR 14.7K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1472-F
A1R60	0698-3156	2		RESISTOR 14.7K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1472-F
A1R61	0698-3438	3	13	RESISTOR 147 1% .125W F TC=0+-100	24546	C4-1/8-T0-147R-F
A1R62	0757-0439	4		RESISTOR 6.81K 1% .125W F TC=0+-100	24546	C4-1/8-T0-6811-F
A1R63	0698-3156	2		RESISTOR 14.7K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1472-F
A1R64	0698-3444	1		RESISTOR 316 1% .125W F TC=0+-100	24546	C4-1/8-T0-316R-F
A1R65	0757-0395	1	8	RESISTOR 56.2 1% .125W F TC=0+-100	24546	C4-1/8-T0-56R2-F
A1R66	0698-4037	0	7	RESISTOR 46.4 1% .125W F TC=0+-100	24546	C4-1/8-T0-46R4-F
A1R67	0757-0279	0		RESISTOR 3.16K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3161-F
A1R68	0757-0465	6		RESISTOR 100K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1003-F
A1R69	0757-0395	1		RESISTOR 56.2 1% .125W F TC=0+-100	24546	C4-1/8-T0-56R2-F
A1R70	0698-4037	0		RESISTOR 46.4 1% .125W F TC=0+-100	24546	C4-1/8-T0-46R4-F
A1R71	0757-1094	9		RESISTOR 1.47K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1471-F
A1R72	0757-0465	6		RESISTOR 100K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1003-F
A1R73	0698-3260	9		RESISTOR 464K 1% .125W F TC=0+-100	28480	0698-3260
A1R74	0757-0419	0		RESISTOR 681 1% .125W F TC=0+-100	24546	C4-1/8-T0-681R-F
A1R75	0698-3260	9		RESISTOR 464K 1% .125W F TC=0+-100	28480	0698-3260
A1R76	0698-3260	9		RESISTOR 464K 1% .125W F TC=0+-100	28480	0698-3260
A1R77	0757-0419	0		RESISTOR 681 1% .125W F TC=0+-100	24546	C4-1/8-T0-681R-F
A1R78	0698-3443	0	3	RESISTOR 287 1% .125W F TC=0+-100	24546	C4-1/8-T0-287R-F
A1R79	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A1R80	0698-3428	1		RESISTOR 14.7 1% .125W F TC=0+-100	03888	PME55-1/8-T0-14R7-F
A1R81	0698-3428	1		RESISTOR 14.7 1% .125W F TC=0+-100	03888	PME55-1/8-T0-14R7-F
A1R82	0757-0465	6		RESISTOR 100K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1003-F
A1R83	0698-3428	1		RESISTOR 14.7 1% .125W F TC=0+-100	03888	PME55-1/8-T0-14R7-F
A1R84	0698-3428	1		RESISTOR 14.7 1% .125W F TC=0+-100	03888	PME55-1/8-T0-14R7-F
A1R85	0698-3428	1		RESISTOR 14.7 1% .125W F TC=0+-100	03888	PME55-1/8-T0-14R7-F
A1R86	0698-3428	1		RESISTOR 14.7 1% .125W F TC=0+-100	03888	PME55-1/8-T0-14R7-F
A1R87	0698-3443	0		RESISTOR 287 1% .125W F TC=0+-100	24546	C4-1/8-T0-287R-F
A1R88	0698-3444	1		RESISTOR 316 1% .125W F TC=0+-100	24546	C4-1/8-T0-316R-F
A1R89	0698-3156	2		RESISTOR 14.7K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1472-F
A1R90	0757-0442	2		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1472-F
A1R91	0757-0279	0		RESISTOR 3.16K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3161-F
A1R92	0757-0279	0		RESISTOR 3.16K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3161-F
A1R93	0757-0442	2		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1472-F
A1R94	0698-3156	2		RESISTOR 14.7K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1472-F
A1R95	0757-0199	3	15	RESISTOR 21.5K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2152-F
A1R96	0698-3444	1		RESISTOR 316 1% .125W F TC=0+-100	24546	C4-1/8-T0-316R-F
A1R97	0698-3428	1		RESISTOR 14.7 1% .125W F TC=0+-100	03888	PME55-1/8-T0-14R7-F
A1R98	0698-3428	1		RESISTOR 14.7 1% .125W F TC=0+-100	03888	PME55-1/8-T0-14R7-F
A1R99	0757-0439	4		RESISTOR 6.81K 1% .125W F TC=0+-100	24546	C4-1/8-T0-6811-F
A1R100	0698-3260	9		RESISTOR 464K 1% .125W F TC=0+-100	28480	0698-3260
A1R101	2100-3213	9	2	RESISTOR-TRMR 200K 10% C TOP-ADJ 1-TRN	28480	2100-3213
A1R102	0757-0439	4		RESISTOR 6.81K 1% .125W F TC=0+-100	24546	C4-1/8-T0-6811-F
A1R103	0698-3260	9		RESISTOR 464K 1% .125W F TC=0+-100	28480	0698-3260
A1R104	2100-3213	9		RESISTOR-TRMR 200K 10% C TOP-ADJ 1-TRN	28480	2100-3213
A1R105	0757-0395	1		RESISTOR 56.2 1% .125W F TC=0+-100	24546	C4-1/8-T0-56R2-F
A1R106	0757-0439	4		RESISTOR 6.81K 1% .125W F TC=0+-100	24546	C4-1/8-T0-6811-F
A1R107	0698-3155	1		RESISTOR 4.64K 1% .125W F TC=0+-100	24546	C4-1/8-T0-4641-F
A1R108	0698-0082	7		RESISTOR 464 1% .125W F TC=0+-100	24546	C4-1/8-T0-4640-F
A1R109	0757-0397	3		RESISTOR 68.1 1% .125W F TC=0+-100	24546	C4-1/8-T0-68R1-F
A1R110	0698-3438	3		RESISTOR 147 1% .125W F TC=0+-100	24546	C4-1/8-T0-147R-F
A1R111	0698-3438	3		RESISTOR 147 1% .125W F TC=0+-100	24546	C4-1/8-T0-147R-F
A1R112	0698-0082	7		RESISTOR 464 1% .125W F TC=0+-100	24546	C4-1/8-T0-4640-F
A1R113	0698-0082	7		RESISTOR 464 1% .125W F TC=0+-100	24546	C4-1/8-T0-4640-F
A1R114	0698-3438	3		RESISTOR 147 1% .125W F TC=0+-100	24546	C4-1/8-T0-147R-F
A1R115	0698-3446	3	3	RESISTOR 383 1% .125W F TC=0+-100	24546	C4-1/8-T0-383R-F
A1R116	0757-1094	9		RESISTOR 1.47K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1471-F
A1R117	0698-3160	8		RESISTOR 31.6K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3162-F
A1R118	0757-0439	4		RESISTOR 6.81K 1% .125W F TC=0+-100	24546	C4-1/8-T0-6811-F
A1R119	0757-0279	0		RESISTOR 3.16K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3161-F
A1R120	0698-3155	1		RESISTOR 4.64K 1% .125W F TC=0+-100	24546	C4-1/8-T0-4641-F
A1R121	0698-0084	9	34	RESISTOR 2.15K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2151-F
A1R122	0757-0180	2	9	RESISTOR 31.6 1% .125W F TC=0+-100	28480	0757-0180
A1R123	0698-3260	9		RESISTOR 464K 1% .125W F TC=0+-100	28480	0698-3260
A1R124	0698-3260	9		RESISTOR 464K 1% .125W F TC=0+-100	28480	0698-3260
A1R125	0757-0180	2		RESISTOR 31.6 1% .125W F TC=0+-100	28480	0757-0180

See introduction to this section for ordering information
*Indicates factory selected value

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A1R126	0698-3260	9		RESISTOR 464K 1% .125W F TC=0+-100	28480	0698-3260
A1R127	0698-3260	9		RESISTOR 464K 1% .125W F TC=0+-100	28480	0698-3260
A1R128	0698-0084	9		RESISTOR 2.15K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2151-F
A1R129	0698-0084	9		RESISTOR 2.15K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2151-F
A1R130	0698-0084	9		RESISTOR 2.15K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2151-F
A1R131	0698-0084	9		RESISTOR 2.15K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2151-F
A1R132	0698-3444	1		RESISTOR 316 1% .125W F TC=0+-100	24546	C4-1/8-T0-316R-F
A1R133	0757-0419	0		RESISTOR 681 1% .125W F TC=0+-100	24546	C4-1/8-T0-681R-F
A1R134	0698-3444	1		RESISTOR 316 1% .125W F TC=0+-100	24546	C4-1/8-T0-316R-F
A1R135	0757-0279	0		RESISTOR 3.16K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3161-F
A1R136	0757-0279	0		RESISTOR 3.16K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3161-F
A1R137	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A1R138	0698-3260	9		RESISTOR 464K 1% .125W F TC=0+-100	28480	0698-3260
A1R139	0757-0439	4		RESISTOR 6.81K 1% .125W F TC=0+-100	24546	C4-1/8-T0-6811-F
A1R140	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1001-F
A1R141	0757-0279	0		RESISTOR 3.16K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3161-F
A1R142	0698-0084	9		RESISTOR 2.15K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2151-F
A1R143	0698-0084	9		RESISTOR 2.15K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2151-F
A1R144	0757-0180	2		RESISTOR 31.6 1% .125W F TC=0+-100	28480	0757-0180
A1R145	0757-0421	4		RESISTOR 825 1% .125W F TC=0+-100	24546	C4-1/8-T0-825R-F
A1R146	0698-0082	7		RESISTOR 464 1% .125W F TC=0+-100	24546	C4-1/8-T0-4640-F
A1R147	0698-0082	7		RESISTOR 464 1% .125W F TC=0+-100	24546	C4-1/8-T0-4640-F
A1R148	0757-0180	2		RESISTOR 31.6 1% .125W F TC=0+-100	28480	0757-0180
A1R149	0698-0084	9		RESISTOR 2.15K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2151-F
A1R150	0757-0465	6		RESISTOR 100K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1003-F
A1R151	0698-3155	1		RESISTOR 4.64K 1% .125W F TC=0+-100	24546	C4-1/8-T0-4641-F
A1R152	0698-0084	9		RESISTOR 2.15K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2151-F
A1R153	0757-1094	9		RESISTOR 1.47K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1471-F
A1R154	0698-3444	1		RESISTOR 316 1% .125W F TC=0+-100	24546	C4-1/8-T0-316R-F
A1R155	0698-0082	7		RESISTOR 464 1% .125W F TC=0+-100	24546	C4-1/8-T0-4640-F
A1R156	0757-0279	0		RESISTOR 3.16K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3161-F
A1R157	0757-0279	0		RESISTOR 3.16K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3161-F
A1R158	0757-0395	1		RESISTOR 56.2 1% .125W F TC=0+-100	24546	C4-1/8-T0-56R2-F
A1R159	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A1R160	0757-1094	9		RESISTOR 1.47K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1471-F
A1R161	0698-3441	8	7	RESISTOR 215 1% .125W F TC=0+-100	24546	C4-1/8-T0-215R-F
A1R162	0757-0421	4		RESISTOR 825 1% .125W F TC=0+-100	24546	C4-1/8-T0-825R-F
A1R163	0698-3155	1		RESISTOR 4.64K 1% .125W F TC=0+-100	24546	C4-1/8-T0-4641-F
A1R164	0757-1094	9		RESISTOR 1.47K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1471-F
A1R165	0698-3444	1		RESISTOR 316 1% .125W F TC=0+-100	24546	C4-1/8-T0-316R-F
A1R166	0698-3444	1		RESISTOR 316 1% .125W F TC=0+-100	24546	C4-1/8-T0-316R-F
A1R167	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1001-F
A1R168	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1001-F
A1R169	0757-0401	0		RESISTOR 100 1% .125W F TC=0+-100	24546	C4-1/8-T0-101-F
A1R170	0757-0279	0		RESISTOR 3.16K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3161-F
A1R171	0757-0465	6		RESISTOR 100K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1003-F
A1R172	0757-0279	0		RESISTOR 3.16K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3161-F
A1R173	0698-3155	1		RESISTOR 4.64K 1% .125W F TC=0+-100	24546	C4-1/8-T0-4641-F
A1R174	0698-0084	9		RESISTOR 2.15K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2151-F
A1R175	0698-3155	1		RESISTOR 4.64K 1% .125W F TC=0+-100	24546	C4-1/8-T0-4641-F
A1R176	0757-0419	0		RESISTOR 681 1% .125W F TC=0+-100	24546	C4-1/8-T0-681R-F
A1R177	0757-1094	9		RESISTOR 1.47K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1471-F
A1R178	0757-0199	3		RESISTOR 21.5K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2152-F
A1R179	0757-0199	3		RESISTOR 21.5K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2152-F
A1R180	0757-1094	9		RESISTOR 1.47K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1471-F
A1R181	0698-0084	9		RESISTOR 2.15K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2151-F
A1R182	2100-3354			RESISTOR-TRMR 50K 10% C SIDE-ADJ 1-TRN		
A1R183	2100-3354			RESISTOR-TRMR 50K 10% C SIDE-ADJ 1-TRN		
A1R184	0683-3315			RESISTOR 330Ω 5% .25W TC=0-400		
A1R185	0683-3315			RESISTOR 330Ω 5% .25W TC=0-400		
A1R186	0683-3315			RESISTOR 330Ω 5% .25W TC=0-400		
A1R187	0683-3315			RESISTOR 330Ω 5% .25W TC=0-400		
A1S1	3101-0299			SWITCH-SLIDE 4-SPST	28480	3101-0299
A1T1	9100-0822	8	1	TRANSFORMER:PULSE(11307)	28480	9100-0822
A1T2	9100-0855	7	16	TRANSFORMER-PULSE 113G1	28480	9100-0855
A1T3	9100-0855	6	15	TRANSFORMER-PULSE 113G1	28480	9100-0855
A1T4	9100-0855	6		TRANSFORMER-PULSE 113G1	28480	9100-0855
A1T5	9100-0822	7		TRANSFORMER:PULSE(11307)	28480	9100-0822
A1T6	9100-0822	7		TRANSFORMER:PULSE(11307)	28480	9100-0822
A1T7	9100-0822	7		TRANSFORMER:PULSE(11307)	28480	9100-0822
A1U1	1826-0139	9	3	IC OP AMP GP DUAL 8-DIP-P PKG	0192B	CA1458G
A1U2	1990-0577	6	2	OPTO-ISOLATOR LED-PDIO/XSTR IF=50MA-MAX	28480	S082-4355
A1U3	1820-1433	6	11	IC SHF-RCTR TTL LS R-S SERIAL-IN PRL-OUT	01295	SN74LS164N
A1U4	1820-1433	6		IC SHF-RCTR TTL LS R-S SERIAL-IN PRL-OUT	01295	SN74LS164N
A1U5	1990-0577	6		OPTO-ISOLATOR LED-PDIO/XSTR IF=50MA-MAX	28480	S082-4355
A1U6	1820-1433	6		IC SHF-RCTR TTL LS R-S SERIAL-IN PRL-OUT	01295	SN74LS164N
A1U7	1826-0188	1	1	IC CONV 8-B-D/A 16-DIP-C	04713	MC1408L-6
A1U8	1826-0933	4	15	IC NJM78L12A V RGLTR TO-92		NJM78L12A
A1U9	1826-0282	3	13	IC V RGLTR TO-92	04713	MC79L12ACP
A1U10	1826-0043	4	7	IC OP AMP GP TO-99 PKG	0192B	CA307T

See introduction to this section for ordering information
*Indicates factory selected value

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A1U11	1826-0282	3		IC V RGLTR TO-92	04713	MC79L12ACP
A1U12	1826-0035	4	8	IC OP AMP LOW-DRIFT TO-99 PKG	27014	LM308AH
A1U13	1826-0043	4		IC OP AMP GP TO-99 PKG	0192B	CA307T
A1U14	1826-0933	4		IC NJM78L12A V RGLTR TO-92		NJM78L12A
A1U15	1826-0282	3		IC V RGLTR TO-92	04713	MC79L12ACP
A1U16	1826-0282	3		IC V RGLTR TO-92	04713	MC79L12ACP
A1U17	1826-0933	4		IC NJM78L12A V RGLTR TO-92		NJM78L12A
A1U18	1826-0933	4		IC NJM78L12A V RGLTR TO-92		NJM78L12A
A1U19	1826-0282	3		IC V RGLTR TO-92	04713	MC79L12ACP
A1U20	1826-0600	4	6	IC OP AMP QUAD 14-DIP-P	01295	TL074CN
A1U21	1826-0933	4		IC NJM78L12A V RGLTR TO-92		NJM78L12A
A1U22	1826-0282	3		IC V RGLTR TO-92	04713	MC79L12ACP
A1U23	1826-0035	4		IC OP AMP LOW-DRIFT TO-99 PKG	27014	LM308AH
A1U24	1826-0035	4		IC OP AMP LOW-DRIFT TO-99 PKG	27014	LM308AH
A1U25	1821-0001	4	3	TRANSISTOR ARRAY 14-PIN PLSTC DIP	0192B	CA3046
A1U26	1826-0522	4		IC OP AMP QUAD 14-DIP-P PKG	01295	TL074CN
A1U27	1820-1433	6		IC SHF-RGTR TTL LS R-S SERIAL-IN PRL-OUT	01295	SN74LS164N
A1U28	1826-0522	4		IC OP AMP QUAD 14-DIP-P PKG	01295	TL074CN
A1U29	1820-1197	9	9	IC GATE TTL LS NAND QUAD 2-INP	01295	SN74LS00N
A1U30	1820-1112	8	11	IC FF TTL LS D-TYPE POS-EDGE-TRIG	01295	SN74LS74AN
A1U31	1820-1194	6	1	IC CNTR TTL LS BIN UP/DOWN SYNCHRD	01295	SN74LS193N
A1U32	1820-0910	2	1	IC ADDR TTL LS BIN FULL ADDR 4-BIT	01295	SN74LS83AN
A1 MISCELLANEOUS PARTS						
	0340-0220	8	116		28480	0340-0220
	1205-0095	0	4	HEAT SINK SGL TO-5/TO-39-CS	30161	3225B
	1258-0141	8	7	JUMPER-REM	28480	1258-0141
	3050-0082	8	45	WASHER-FL NM NO. 4 .116-IN-ID .188-IN-OD	28480	3050-0082
	0890-0006	3		TUBING-FLEX .204-ID PVC .02-WALL	28480	0890-0006
A2	04192-66502	0	1	PHASE DETECTOR/A-D CONVERTER	28480	04192-66502
A2C1	0180-1085	5		CAPACITOR-FXD 4.7UF 16VDC TA	28480	0180-1085
A2C2	0180-1083	3		CAPACITOR-FXD 33UF 25VDC AL	28480	0180-1083
A2C3	0180-1083	3		CAPACITOR-FXD 33UF 25VDC AL	28480	0180-1083
A2C4	0180-1085	5		CAPACITOR-FXD 4.7UF 16VDC TA	28480	0180-1085
A2C5	0180-1050	4	9	CAPACITOR-FXD 100UF 25VDC	28480	0180-1050
A2C6	0160-4835	8		CAPACITOR-FXD .1UF 10% 50VDC CER		
A2C7	0160-4835	8		CAPACITOR-FXD .1UF 10% 50VDC CER		
A2C8	0160-4835	8		CAPACITOR-FXD .1UF 10% 50VDC CER		
A2C9	0160-4835	8		CAPACITOR-FXD .1UF 10% 50VDC CER		
A2C10	0180-1085	5		CAPACITOR-FXD 4.7UF 16VDC TA	28480	0180-1085
A2C11	0180-1085	5		CAPACITOR-FXD 4.7UF 16VDC TA	28480	0180-1085
A2C12	0160-5139	6	1		28480	0160-5139
A2C13	0160-3456	6		CAPACITOR-FXD 1000PF +-10% 1KVDC CER	28480	0160-3456
A2C14	0160-3456	6		CAPACITOR-FXD 1000PF +-10% 1KVDC CER	28480	0160-3456
A2C15	0160-4835	8		CAPACITOR-FXD .1UF 10% 50VDC CER		
A2C16	0160-4835	8		CAPACITOR-FXD .1UF 10% 50VDC CER		
A2C17	0160-2257	3	3	CAPACITOR-FXD 10PF +-5% 500VDC CER 0+-60	28480	0160-2257
A2C18	0180-1085	5		CAPACITOR-FXD 4.7UF 16VDC TA	28480	0180-1085
A2C19	0180-1085	5		CAPACITOR-FXD 4.7UF 16VDC TA	28480	0180-1085
A2C20	0180-1085	5		CAPACITOR-FXD 4.7UF 16VDC TA	28480	0180-1085
A2C21	0180-1085	5		CAPACITOR-FXD 4.7UF 16VDC TA	28480	0180-1085
A2CR1	1902-3129	5	1	DIODE-ZNR 7.5V 2% DO-35 PD=.4W TC=+.05%	28480	1902-3129
A2CR2	1901-0040	1	18	DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A2CR3	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A2CR4	1901-1011	8	1	DIODE-ARRAY VF DIFF=5MV	28480	1901-1011
A2CR5	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A2CR6	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A2CR7	1902-3136	1		DIODE-ZNR 8.06V 12.5MA DO-35		
A2J1	1251-0513	4	6	CONNECTOR 5-PIN M POST TYPE	28480	1251-0513
A2J2	1200-0541	1	19	SOCKET-IC 24-CONT DIP DIP-SLDR	28480	1200-0541
A2J3	1250-0257	1		CONNECTOR-RF SMB M PC 50-OHM	28480	1250-0257
A2J4	1200-0607	0		SOCKET-IC 16-CONT DIP DIP-SLDR	28480	1200-0607
A2J5	1251-6527	2	3	CONNECTOR 6-PIN M METRIC POST TYPE	28480	1251-6527
A2L1	9140-1788	6	5	CHOKE-WIDE BAND ZMAX=680 OHM@ 180 MHZ	02114	VK200 20/48
A2L2	9140-0179	1	6	INDUCTOR RF-CH-MLD 22UH 10% .166DX.385LG	28480	9140-0179
A2L3	9140-0179	1		INDUCTOR RF-CH-MLD 22UH 10% .166DX.385LG	28480	9140-0179
A2Q1	1855-0406	4		TRANSISTOR J-FET P-CHAN D-MODE SI	32293	IT110
A2Q2	1855-0406	4		TRANSISTOR J-FET P-CHAN D-MODE SI	32293	IT110
A2Q3	1855-0406	4		TRANSISTOR J-FET P-CHAN D-MODE SI	32293	IT110
A2Q4	1855-0406	4		TRANSISTOR J-FET P-CHAN D-MODE SI	32293	IT110
A2Q5	1855-0406	4		TRANSISTOR J-FET P-CHAN D-MODE SI	32293	IT110
A2Q6	1855-0406	4		TRANSISTOR J-FET P-CHAN D-MODE SI	32293	IT110
A2Q7	1855-0406	4		TRANSISTOR J-FET P-CHAN D-MODE SI	32293	IT110

See introduction to this section for ordering information
*Indicates factory selected value

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A2R1	0683-1525	4	12	RESISTOR 1.5K 5% .25W FC TC=-400/+700	01121	CB1525
A2R2	0683-6845	1	1	RESISTOR 680K 5% .25W FC TC=-800/+900	01121	CB6845
A2R3	0683-1525	4		RESISTOR 1.5K 5% .25W FC TC=-400/+700	01121	CB1525
A2R4	0698-3155	1		RESISTOR 4.64K 1% .125W F TC=0+-100	24546	C4-1/8-T0-4641-F
A2R5	0683-1525	4		RESISTOR 1.5K 5% .25W FC TC=-400/+700	01121	CB1525
A2R6	0683-1525	4		RESISTOR 1.5K 5% .25W FC TC=-400/+700	01121	CB1525
A2R7	0683-1525	4		RESISTOR 1.5K 5% .25W FC TC=-400/+700	01121	CB1525
A2R8	0683-4725	2	27	RESISTOR 4.7K 5% .25W FC TC=-400/+700	01121	CB4725
A2R9	0683-4725	2		RESISTOR 4.7K 5% .25W FC TC=-400/+700	01121	CB4725
A2R10	0683-1525	4		RESISTOR 1.5K 5% .25W FC TC=-400/+700	01121	CB1525
A2R11	0683-4725	2		RESISTOR 4.7K 5% .25W FC TC=-400/+700	01121	CB4725
A2R12	0683-4725	2		RESISTOR 4.7K 5% .25W FC TC=-400/+700	01121	CB4725
A2R13	0698-3157	3	3	RESISTOR 19.6K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1962-F
A2R14	0698-3155	1		RESISTOR 4.64K 1% .125W F TC=0+-100	24546	C4-1/8-T0-4641-F
A2R15	0698-3155	1		RESISTOR 4.64K 1% .125W F TC=0+-100	24546	C4-1/8-T0-4641-F
A2R16	0698-0084	9		RESISTOR 2.15K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2151-F
A2R17	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A2R18	0757-0199	3		RESISTOR 21.5K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2152-F
A2R19	0757-0441	8		RESISTOR 8.25K 1% .125W F TC=0+-100	24546	C4-1/8-T0-8251-F
A2R20	0698-8649	8	1	RESISTOR 1.28M 1% .25W F TC=0+-25	28480	0698-8649
A2R21	0698-2214	1	1	RESISTOR:FXD 10.0K OHM 0.05% 1/8W MF	28480	0698-2214
A2R22	0698-0084	9		RESISTOR 2.15K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2151-F
A2R23	0757-0465	6		RESISTOR 100K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1003-F
A2R24	0698-3155	1		RESISTOR 4.64K 1% .125W F TC=0+-100	24546	C4-1/8-T0-4641-F
A2R25	0698-3153	9	6	RESISTOR 3.83K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3831-F
A2R26	0698-3153	9		RESISTOR 3.83K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3831-F
A2R27	0683-2225	3	14	RESISTOR 2.2K 5% .25W FC TC=-400/+700	01121	CB2225
A2R28	0683-2225	3		RESISTOR 2.2K 5% .25W FC TC=-400/+700	01121	CB2225
A2R29	0698-3155	1		RESISTOR 4.64K 1% .125W F TC=0+-100	24546	C4-1/8-T0-4641-F
A2R30	0757-0199	3		RESISTOR 21.5K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2152-F
A2R31	0757-0199	3		RESISTOR 21.5K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2152-F
A2R32	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A2R33	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A2R34	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1001-F
A2R35	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1001-F
A2R36	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A2R37	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A2R38	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1001-F
A2R39	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1001-F
A2R40	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1001-F
A2R41	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1001-F
A2R42	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1001-F
A2R43	0683-3315	3		RESISTOR 330Ω 5% .25W TC=0-400		
A2U1	1826-0282	3		IC V RGLTR TO-92	04713	MC79L12ACP
A2U2	1826-0933	4		IC NJM78L12A V RGLTR TO-92		NJM78L12A
A2U3	1826-0522	4		IC OP AMP QUAD 14-DIP-P PKG	01295	TL074CN
A2U4	1826-0138	8	6	IC COMPARATOR GP QUAD 14-DIP-P PKG	01295	LM339N
A2U5	1826-0013	8	1	IC OP AMP LOW-NOISE TO-99 PKG	06665	SSS741CJ
A2U6	1826-0081	0	1	IC OP AMP WB TO-99 PKG	27014	LM318H
A2U7	1826-0043	4		IC OP AMP GP TO-99 PKG	01928	CA307T
A2U8	1820-1112	8		IC FF TTL LS D-TYPE POS-EDGE-TRIG	01295	SN74LS74AN
A2U9	1820-1197	9		IC GATE TTL LS NAND QUAD 2-INP	01295	SN74LS00N
A2U10	1820-1112	8		IC FF TTL LS D-TYPE POS-EDGE-TRIG	01295	SN74LS74AN
A2U11	1820-1469	8	1	IC FF TTL LS J-K NEG-EDGE-TRIG CLEAR	01295	SN74LS107AN
				A2 MISCELLANEDUS PARTS		
	0340-0220	8			28480	0340-0220
	3050-0082	8		WASHER-FL NH NO. 4 .116-IN-ID .188-IN-OD	28480	3050-0082
A3	04192-66503	1	1	REFERENCE FREQUENCY GENERATOR BOARD ASSEMBLY (NOT INCLUDING THE SHIELD CASES)	28480	04192-66503
A3C1	0160-4835	8		CAPACITOR-FXD .1UF 10% 50VDC CER		
A3C2	0160-4835	8		CAPACITOR-FXD .1UF 10% 50VDC CER		
A3C3	0180-1085	5		CAPACITOR-FXD 4.7UF 16VDC TA	28480	0180-1085
A3C4	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A3C5	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A3C6	0160-4835	8		CAPACITOR-FXD .1UF 10% 50VDC CER		
A3C7	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A3C8	0180-0100	3	2	CAPACITOR-FXD 4.7UF+-10% 35VDC TA	56289	150D475X9035B2
A3C9	0180-1050	4		CAPACITOR-FXD 100UF 25VDC	28480	0180-1050
A3C10	0180-0100	3		CAPACITOR-FXD 4.7UF+-10% 35VDC TA	56289	150D475X9035B2
A3C11	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A3C12	0180-2207	5	3	CAPACITOR-FXD 100UF+-10% 10VDC TA	56289	150D107X9010R2
A3C13	0160-0134	1	4	CAPACITOR-FXD 220PF +-5% 300VDC MICA	28480	0160-0134
A3C14	0180-2951	6	3	CAPACITOR-FXD 33UF+-20% 16VDC AL	28480	0180-2951
A3C15	0180-2207	5		CAPACITOR-FXD 100UF+-10% 10VDC TA	56289	150D107X9010R2

See introduction to this section for ordering information
*Indicates factory selected value

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A3C16	0180-1050	4		CAPACITOR-FXD 100UF 25VDC	28480	0180-1050
A3C17	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A3C18	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A3C19	0160-0127	2		CAPACITOR-FXD 1UF +-20% 25VDC CER	28480	0160-0127
A3C20	0160-4835	8		CAPACITOR-FXD .1UF 10% 50VDC CER		
A3C21	0160-4835	8		CAPACITOR-FXD .1UF 10% 50VDC CER		
A3C22	0160-2264	2	2	CAPACITOR-FXD 20PF +-5% 500VDC CER 0+-30	28480	0160-2264
A3C23	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A3C24	0160-2307	4	7	CAPACITOR-FXD 47PF +-5% 300VDC MICA	28480	0160-2307
A3C25	0140-0191	8		CAPACITOR-FXD 56PF +-5% 300VDC MICA	72136	DM15E560J0300WV1CR
A3C26	0160-0134	1		CAPACITOR-FXD 220PF +-5% 300VDC MICA	28480	0160-0134
A3C27	0160-0134	1		CAPACITOR-FXD 220PF +-5% 300VDC MICA	28480	0160-0134
A3C28	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A3C29	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A3C30	0160-3456	6		CAPACITOR-FXD 1000PF +-10% 1KVDC CER	28480	0160-3456
A3C31	0160-3456	6		CAPACITOR-FXD 1000PF +-10% 1KVDC CER	28480	0160-3456
A3C32	0160-4835	8		CAPACITOR-FXD .1UF 10% 50VDC CER		
A3C33	0160-0127	2		CAPACITOR-FXD 1UF +-20% 25VDC CER	28480	0160-0127
A3C34	0160-0160	3	1	CAPACITOR-FXD 8200PF +-10% 200VDC POLYE	28480	0160-0160
A3C35	0160-0134	1		CAPACITOR-FXD 220PF +-5% 300VDC MICA	28480	0160-0134
A3C36	0160-0127	2		CAPACITOR-FXD 1UF +-20% 25VDC CER	28480	0160-0127
A3C37	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A3C38	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A3C39	0160-0194	3	1	CAPACITOR-FXD .015UF +-10% 200VDC POLYE	28480	0160-0194
A3C40	0160-4835	8		CAPACITOR-FXD .1UF 10% 50VDC CER		
A3C41	0160-4835	8		CAPACITOR-FXD .1UF 10% 50VDC CER		
A3C42	0180-1085	5		CAPACITOR-FXD 4.7UF 16VDC TA	28480	0180-1085
A3C43	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A3C44	0160-2307	4		CAPACITOR-FXD 47PF +-5% 300VDC MICA	28480	0160-2307
A3C45	0160-2253	9	6	CAPACITOR-FXD 6.8PF +--.25PF 500VDC CER	28480	0160-2253
A3C46	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A3C47	0180-2207	5		CAPACITOR-FXD 100UF+-10% 10VDC TA	56289	150D107X9010R2
A3C48	0160-3456	6		CAPACITOR-FXD 1000PF +-10% 1KVDC CER	28480	0160-3456
A3C49	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A3C50	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A3C51	0160-4835	8		CAPACITOR-FXD .1UF 10% 50VDC CER		
A3C52	0180-1085	5		CAPACITOR-FXD 4.7UF 16VDC TA	28480	0180-1085
A3C53	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A3C54	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A3C55	0160-3456	6		CAPACITOR-FXD 1000PF +-10% 1KVDC CER	28480	0160-3456
A3C56	0160-2264	2		CAPACITOR-FXD 20PF +-5% 500VDC CER 0+-30	28480	0160-2264
A3C57	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A3C58	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A3C59	0160-3456	6		CAPACITOR-FXD 1000PF +-10% 1KVDC CER	28480	0160-3456
A3C60	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A3C61	0160-3456	6		CAPACITOR-FXD 1000PF +-10% 1KVDC CER	28480	0160-3456
A3C62	0160-2261	9	1	CAPACITOR-FXD 15PF +-5% 500VDC CER 0+-30	28480	0160-2261
A3C63	0160-2150	5		CAPACITOR-FXD 33PF +-5% 300VDC MICA	28480	0160-2150
A3C64	0180-2951	6		CAPACITOR-FXD 33UF+-20% 16VDC AL	28480	0180-2951
A3C65	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A3C66	0180-1085	5		CAPACITOR-FXD 4.7UF 16VDC TA	28480	0180-1085
A3C67	0160-4835	8		CAPACITOR-FXD .1UF 10% 50VDC CER		
A3C68	0160-2253	9		CAPACITOR-FXD 6.8PF +--.25PF 500VDC CER	28480	0160-2253
A3C69	0160-2263	1	1	CAPACITOR-FXD 18PF +-5% 500VDC CER 0+-30	28480	0160-2263
A3C70	0160-3456	6		CAPACITOR-FXD 1000PF +-10% 1KVDC CER	28480	0160-3456
A3C71	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A3C72	0160-2204	0		CAPACITOR-FXD 100PF +-5% 300VDC MICA	28480	0160-2204
A3C73	0160-3456	6		CAPACITOR-FXD 1000PF +-10% 1KVDC CER	28480	0160-3456
A3C74	0160-2307	4		CAPACITOR-FXD 47PF +-5% 300VDC MICA	28480	0160-2307
A3C75	0160-2150	5		CAPACITOR-FXD 33PF +-5% 300VDC MICA	28480	0160-2150
A3C76	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A3C77	0160-0127	9		CAPACITOR-FXD 1UF +-20% 25VDC CER	28480	0160-0127
A3C78	0180-2951	6		CAPACITOR-FXD 33UF+-20% 16VDC AL	28480	0180-2951
A3C79	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A3C80	0180-1050	4		CAPACITOR-FXD 100UF -10+50%		
A3CR1	1901-0518	8	8	DIODE-9M SIG SCHOTTKY	28480	1901-0518
A3CR2	1901-0518	8		DIODE-9M SIG SCHOTTKY	28480	1901-0518
A3CR3	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A3CR4	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A3CR5	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A3CR6	1901-0376	6	8	DIODE-GEN PRP 35V 50MA DO-35	28480	1901-0376
A3CR7	1901-0376	6		DIODE-GEN PRP 35V 50MA DO-35	28480	1901-0376
A3CR8	1902-3059	0	6	DIODE-ZNR 3.83V 5% DO-35 PD=.4W	28480	1902-3059
A3CR9	0122-0109	0	2	DIODE-VVC	28480	0122-0109
A3CR10	0122-0109	0		DIODE-VVC	28480	0122-0109

See introduction to this section for ordering information
*Indicates factory selected value

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A3J1	1251-0513	4		CONNECTOR 5-PIN M POST TYPE	28480	1251-0513
A3J2	1251-6527	2		CONNECTOR 6-PIN M METRIC POST TYPE	28480	1251-6527
A3J3	1250-0257	1		CONNECTOR-RF SMB M PC 50-OHM	28480	1250-0257
A3J4	1250-0257	1		CONNECTOR-RF SMB M PC 50-OHM	28480	1250-0257
A3J5	1250-0257	1		CONNECTOR-RF SMB M PC 50-OHM	28480	1250-0257
A3J6	1250-0257	1		CONNECTOR-RF SMB M PC 50-OHM	28480	1250-0257
A3J7	1250-0257	1		CONNECTOR-RF SMB M PC 50-OHM	28480	1250-0257
A3J8	1250-0257	1		CONNECTOR-RF SMB M PC 50-OHM	28480	1250-0257
A3J9	1250-0257	1		CONNECTOR-RF SMB M PC 50-OHM	28480	1250-0257
A3J10	1250-0257	1		CONNECTOR-RF SMB M PC 50-OHM	28480	1250-0257
A3L1	9100-1788	6		CHOKE-WIDE BAND ZMAX=680 OHM@ 180 MHZ	02114	VK200 20/48
A3L2	9140-0114	4		INDUCTOR RF-CH-MLD 10UH 10% .166DX.385LG	28480	9140-0114
A3L3	9140-0179	1		INDUCTOR RF-CH-MLD 22UH 10% .166DX.385LG	28480	9140-0179
A3L4	9140-0179	1		INDUCTOR RF-CH-MLD 22UH 10% .166DX.385LG	28480	9140-0179
A3L5	9140-0098	3		INDUCTOR RF-CH-MLD 2.2UH 10%	28480	9140-0098
A3L6	9140-0179	1		INDUCTOR RF-CH-MLD 22UH 10% .166DX.385LG	28480	9140-0179
A3L7	9140-0179	1		INDUCTOR RF-CH-MLD 22UH 10% .166DX.385LG	28480	9140-0179
A3L8	9100-1661	4	2	INDUCTOR RF-CH-MLD 2.2MH 5% .23DX.57LG	28480	9100-1661
A3L9	9100-1661	4		INDUCTOR RF-CH-MLD 2.2MH 5% .23DX.57LG	28480	9100-1661
A3L10	9100-1618	1	2	INDUCTOR RF-CH-MLD 5.6UH 10%	28480	9100-1618
A3L11	9100-1618	1		INDUCTOR RF-CH-MLD 5.6UH 10%	28480	9100-1618
A3L12	9140-0466	9	2	COIL-VAR 475NH-525NH Q=80 PC-MTG	28480	9140-0466
A3L13	9100-2255	4	1	INDUCTOR RF-CH-MLD 470NH 10% .105DX.26LG	28480	9100-2255
A3L14	9140-0158	6		INDUCTOR RF-CH-MLD 1UH 10% .105DX.26LG	28480	9140-0158
A3L15	9140-0158	6		INDUCTOR RF-CH-MLD 1UH 10% .105DX.26LG	28480	9140-0158
A3L16	9140-0158	6		INDUCTOR RF-CH-MLD 1UH 10% .105DX.26LG	28480	9140-0158
A3L17	9140-0158	6		INDUCTOR RF-CH-MLD 1UH 10% .105DX.26LG	28480	9140-0158
A3L18	9100-2259			INDUCTOR 1.5UH		
A3L19	9100-2259			INDUCTOR 1.5UH		
A3Q1	1854-0215	1		TRANSISTOR NPN SI PD=350MW FT=300MHZ	04713	2N3904
A3Q2	1853-0036	2		TRANSISTOR PNP SI PD=310MW FT=250MHZ	28480	1853-0036
A3Q3	1853-0354	7		TRANSISTOR NPN SI TO-92 PD=350MW	28480	1853-0354
A3Q4	1854-0215	1		TRANSISTOR NPN SI PD=350MW FT=300MHZ	04713	2N3904
A3Q5	1853-0036	2		TRANSISTOR PNP SI PD=310MW FT=250MHZ	28480	1853-0036
A3Q6	1855-0119	6	3	TRANSISTOR-FET 2SK43	28480	1855-0119
A3Q7	1854-0215	1		TRANSISTOR NPN SI PD=350MW FT=300MHZ	04713	2N3904
A3Q8	1854-0215	1		TRANSISTOR NPN SI PD=350MW FT=300MHZ	04713	2N3904
A3Q9	1854-0215	1		TRANSISTOR NPN SI PD=350MW FT=300MHZ	04713	2N3904
A3Q10	1853-0036	2		TRANSISTOR PNP SI PD=310MW FT=250MHZ	28480	1853-0036
A3Q11	1853-0036	2		TRANSISTOR PNP SI PD=310MW FT=250MHZ	28480	1853-0036
A3Q12	1854-0628	0		TRANSISTOR NPN SI TO-92 PD=625MW	04713	MPS-H17
A3Q13	1853-0354	7		TRANSISTOR PNP SI TO-92 PD=350MW	28480	1853-0354
A3Q14	1853-0354	7		TRANSISTOR PNP SI TO-92 PD=350MW	28480	1853-0354
A3Q15	1853-0354	7		TRANSISTOR PNP SI TO-92 PD=350MW	28480	1853-0354
A3Q16	1854-0810	1		TRANSISTOR NPN SI PD=625MW FT=200MHZ	04713	2N3904
A3Q17	1854-0628	0		TRANSISTOR NPN SI TO-92 PD=625MW	04713	MPS-H17
A3Q18	1853-0354	7		TRANSISTOR PNP SI TO-92 PD=350MW	28480	1853-0354
A3R1	0757-0397	3		RESISTOR 68.1 1% .125W F TC=0+-100	24546	C4-1/8-T0-68R1-F
A3R2	0757-0401	0		RESISTOR 100 1% .125W F TC=0+-100	24546	C4-1/8-T0-101-F
A3R3	0683-3305	2	1	RESISTOR 33 5% .25W FC TC=-400/+500	01121	CB3305
A3R4	0683-4735	4	5	RESISTOR 47K 5% .25W FC TC=-400/+800	01121	CB4735
A3R5	0683-1035	1	34	RESISTOR 10K 5% .25W FC TC=-400/+700	01121	CB1035
A3R6	0683-1035	1		RESISTOR 10K 5% .25W FC TC=-400/+700	01121	CB1035
A3R7	0683-1025	9	39	RESISTOR 1K 5% .25W FC TC=-400/+600	01121	CB1025
A3R8	0683-1035	1		RESISTOR 10K 5% .25W FC TC=-400/+700	01121	CB1035
A3R9	0683-1025	9		RESISTOR 1K 5% .25W FC TC=-400/+600	01121	CB1025
A3R10	0683-1025	9		RESISTOR 1K 5% .25W FC TC=-400/+600	01121	CB1025
A3R11	0683-1025	9		RESISTOR 1K 5% .25W FC TC=-400/+600	01121	CB1025
A3R12	0683-6815	5	2	RESISTOR 680 5% .25W FC TC=-400/+600	01121	CB6815
A3R13	0683-1035	1		RESISTOR 10K 5% .25W FC TC=-400/+700	01121	CB1035
A3R14	0683-1035	1		RESISTOR 10K 5% .25W FC TC=-400/+700	01121	CB1035
A3R15	0683-1045	3	11	RESISTOR 100K 5% .25W FC TC=-400/+800	01121	CB1045
A3R16	0757-0398	4	2	RESISTOR 75 1% .125W F TC=0+-100	24546	C4-1/8-T0-75R0-F
A3R17	0698-4037	0		RESISTOR 46.4 1% .125W F TC=0+-100	24546	C4-1/8-T0-46R4-F
A3R18	0757-0279	0		RESISTOR 3.16K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3161-F
A3R19	0757-0199	3		RESISTOR 21.5K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2152-F
A3R20	0757-0199	3		RESISTOR 21.5K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2152-F
A3R21	0698-3444	8		RESISTOR 316 1% .125W F TC=0+-100	24546	
A3R22	0683-1035	1		RESISTOR 10K 5% .25W FC TC=-400/+700	01121	CB1035
A3R23	0757-0279	0		RESISTOR 3.16K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3161-F
A3R24	0683-2225	3		RESISTOR 2.2K 5% .25W FC TC=-400/+700	01121	CB2225
A3R25	0683-3325	6	17	RESISTOR 3.3K 5% .25W FC TC=-400/+700	01121	CB3325
A3R26	0757-0428	1	1	RESISTOR 1.62K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1621-F
A3R27	0683-1045	3		RESISTOR 100K 5% .25W FC TC=-400/+800	01121	CB1045
A3R28	0683-4715	0	12	RESISTOR 470 5% .25W FC TC=-400/+600	01121	CB4715
A3R29	0683-4715	0		RESISTOR 470 5% .25W FC TC=-400/+600	01121	CB4715
A3R30	0683-4715	0		RESISTOR 470 5% .25W FC TC=-400/+600	01121	CB4715

See introduction to this section for ordering information
*Indicates factory selected value

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A3R33	0683-1035	1		RESISTOR 10K 5% .25W FC TC=-400/+700	01121	CB1035
A3R34	0683-4725	2		RESISTOR 4.7K 5% .25W FC TC=-400/+700	01121	CB4725
A3R35	0683-4715	0		RESISTOR 470 5% .25W FC TC=-400/+600	01121	CB4715
A3R36	0683-4725	2		RESISTOR 4.7K 5% .25W FC TC=-400/+700	01121	CB4725
A3R37	0683-1035	1		RESISTOR 10K 5% .25W FC TC=-400/+700	01121	CB1035
A3R38	0683-2725	8	2	RESISTOR 2.7K 5% .25W FC TC=-400/+700	01121	CB2725
A3R39	0698-3444	8		RESISTOR 316 1% .125W F TC=0+-100		
A3R40	0683-2225	3		RESISTOR 2.2K 5% .25W FC TC=-400/+700	01121	CB2225
A3R41	0683-1035	1		RESISTOR 10K 5% .25W FC TC=-400/+700	01121	CB1035
A3R42	0683-1025	9		RESISTOR 1K 5% .25W FC TC=-400/+600	01121	CB1025
A3R43	0683-1525	4		RESISTOR 1.5K 5% .25W FC TC=-400/+700	01121	CB1525
A3R44	0683-1525	4		RESISTOR 1.5K 5% .25W FC TC=-400/+700	01121	CB1525
A3R45	0683-4715	0		RESISTOR 470 5% .25W FC TC=-400/+600	01121	CB4715
A3R46	0757-0199	3		RESISTOR 21.5K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2152-F
A3R47	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1001-F
A3R48	0698-0082	3		RESISTOR 464 1% .125W F TC=0+-100		
A3R49	2100-3210	6	1	RESISTOR-TRMR 10K 10% C TOP-ADJ 1-TRN	28480	2100-3210
A3R50	0683-2225	3		RESISTOR 2.2K 5% .25W FC TC=-400/+700	01121	CB2225
A3R51	0683-1025	9		RESISTOR 1K 5% .25W FC TC=-400/+600	01121	CB1025
A3R52	0683-1025	9		RESISTOR 1K 5% .25W FC TC=-400/+600	01121	CB1025
A3R53	0683-2225	3		RESISTOR 2.2K 5% .25W FC TC=-400/+700	01121	CB2225
A3R54	0683-1025	9		RESISTOR 1K 5% .25W FC TC=-400/+600	01121	CB1025
A3R55	0683-4715	0		RESISTOR 470 5% .25W FC TC=-400/+600	01121	CB4715
A3R56	0683-1025	9		RESISTOR 1K 5% .25W FC TC=-400/+600	01121	CB1025
A3R57	0683-2725	0		RESISTOR 2.7K 5% .25W FC TC=-400/+700	01121	CB2725
A3R58	0698-3444	1		RESISTOR 316 1% .125W F TC=0+-100	24546	C4-1/8-T0-316R-F
A3R59	0757-0401	0		RESISTOR 100 1% .125W F TC=0+-100	24546	C4-1/8-T0-101-F
A3R60	0698-0082	7		RESISTOR 464 1% .125W F TC=0+-100	24546	C4-1/8-T0-4640-F
A3R61	0698-0082	7		RESISTOR 464 1% .125W F TC=0+-100	24546	C4-1/8-T0-4640-F
A3R62	0757-0439	4		RESISTOR 6.81K 1% .125W F TC=0+-100	24546	C4-1/8-T0-6811-F
A3R63	0757-0439	4		RESISTOR 6.81K 1% .125W F TC=0+-100	24546	C4-1/8-T0-6811-F
A3R64	0683-6815	5		RESISTOR 680 5% .25W FC TC=-400/+600	01121	CB6815
A3R65	0698-3132	4	1	RESISTOR 261 1% .125W F TC=0+-100	24546	C4-1/8-T0-2610-F
A3R66	0683-5625	3	2	RESISTOR 5.6K 5% .25W FC TC=-400/+700	01121	CB5625
A3R67	0757-0199	3		RESISTOR 21.5K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2152-F
A3R68	0757-0290	5	2	RESISTOR 6.19K 1% .125W F TC=0+-100	19701	MF4C1/8-T0-6191-F
A3R69	0757-0401	0		RESISTOR 100 1% .125W F TC=0+-100	24546	C4-1/8-T0-101-F
A3R70	0757-0199	3		RESISTOR 21.5K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2152-F
A3R71	0698-3154	0	1	RESISTOR 4.22K 1% .125W F TC=0+-100	24546	C4-1/8-T0-4221-F
A3R72	0698-3444	1		RESISTOR 316 1% .125W F TC=0+-100	24546	C4-1/8-T0-316R-F
A3R73	0757-0279	0		RESISTOR 3.16K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3161-F
A3R74	0757-0403	0	1	RESISTOR 121 1% .125W F TC=0+-100		
A3R75	0683-2205	9		RESISTOR 22 5% .25W FC TC=-400/+500	01121	CB2205
A3R76	0757-0278	9	4	RESISTOR 1.78K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1781-F
A3R77	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1001-F
A3R78	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1001-F
A3R79	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1001-F
A3R80	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1001-F
A3R81	0757-0397	3		RESISTOR 68.1 1% .125W F TC=0+-100	24546	C4-1/8-T0-6811-F
A3R82	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1001-F
A3R83	0698-0084	9		RESISTOR 2.15K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2151-F
A3R84	0698-3155	1		RESISTOR 4.64K 1% .125W F TC=0+-100	24546	C4-1/8-T0-4641-F
A3R85	0757-0200	7	4	RESISTOR 5.62K 1% .125W F TC=0+-100	24546	C4-1/8-T0-5621-F
A3R86	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A3R87	0757-0401			RESISTOR 100 1% .125W		
A3U1	1820-1199	1	8	IC INV TTL LS HEX 1-INP	01295	SN74LS04N
A3U2	1820-1197	9		IC GATE TTL LS NAND QUAD 2-INP	01295	SN74LS00N
A3U3	1820-1430	3	2	IC CNTR TTL LS BIN SYNCHRO POS-EDGE-TRIG	01295	SN74LS161AN
A3U4	1820-1074	1	2	IC DRVR TTL NOR QUAD 2-INP	01295	SN74128N
A3U5	1820-1431	4	2	IC CNTR TTL LS DECD SYNCHRO	01295	SN74LS162AN
A3U6	5080-3832	3	1	IC MISC TTL	04713	MC4044P
A3U7	1826-0522	4		IC OP AMP QUAD 14-DIP-P PKG	01295	TL074CN
A3U8	1820-1431	4		IC CNTR TTL LS DECD SYNCHRO	01295	SN74LS162AN
A3U9	1820-1251	6	1	IC CNTR TTL LS DECD ASYNCHRO	01295	SN74LS196N
A3U10	1820-1425	6	1	IC SCHMITT-TRIG TTL LS NAND QUAD 2-INP	01295	SN74LS132N
A3U11	1820-1144	6	2	IC GATE TTL LS NOR QUAD 2-INP	01295	SN74LS02N
A3U12	1820-0693	8	4	IC FF TTL S D-TYPE POS-EDGE-TRIG	01295	SN74S74N
A3U13	1820-0693	8		IC FF TTL S D-TYPE POS-EDGE-TRIG	01295	SN74S74N
A3U14	1820-0802	1	2	IC GATE ECL NOR QUAD 2-INP	04713	MC10102P
A3U15	1826-0043	4		IC OP AMP GP TO-99 PKG	0192B	CA307T
A3U16	1826-0282	3		IC V RGLTR TO-92	04713	MC79L12ACP
A3U17	1826-0933	4		IC NJM78L12A V RGLTR TO-92	04713	NJM78L12A
A3U18	1820-1924	0	1	IC INV TTL S HEX		
A3U19	1826-0933	4		IC RGLTR-FXD-POS 11.4/12V		

See introduction to this section for ordering information
*Indicates factory selected value

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A3Y1	0410-1287	8	1	CRYSTAL 40.0 MHZ A3 MISCELLANEOUS PARTS	28480	0410-1287
	0340-0220	8			28480	0340-0220
	1400-0249	0	1	CABLE TIE .062-.625-DIA .091-WD NYL	06383	PLT1M-B
	3050-0082	8		WASHER-FL NM NO. 4 .116-IN-ID .188-IN-OD	28480	3050-0082
	9170-0029	3		CORE-SHIELDING BEAD	28480	9170-0029
	04192-00651	2	2	SHIELD	28480	04192-00651
A4	04192-66504	2	1	FRACTIONAL N LOOP BOARD ASSEMBLY (NOT INCLUDING THE SHIELD CASES)	28480	04192-66504
A4C1	0160-2204	0		CAPACITOR-FXD 100PF +-5% 300VDC MICA	28480	0160-2204
A4C2	0180-0376	5	1	CAPACITOR-FXD .47UF+-10% 35VDC TA	56289	150D474X9035A2
A4C3	0160-2220	0	1	CAPACITOR-FXD 1200PF +-5% 300VDC MICA	28480	0160-2220
A4C4	0160-2940	1		CAPACITOR-FXD 470PF +-5% 300VDC MICA	28480	0160-2940
A4C5	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A4C6	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A4C7	0160-2204	0		CAPACITOR-FXD 100PF +-5% 300VDC MICA	28480	0160-2204
A4C8	0160-2204	0		CAPACITOR-FXD 100PF +-5% 300VDC MICA	28480	0160-2204
A4C9	0160-4835	8		CAPACITOR-FXD .1UF 10% 50VDC CER		
A4C10	0180-0228	6	3	CAPACITOR-FXD 22UF+-10% 15VDC TA	56289	150D226X9015B2
A4C11	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A4C12	0180-0229	7	5	CAPACITOR-FXD 33UF+-10% 10VDC TA	56289	150D336X9010B2
A4C13	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A4C14	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A4C15	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A4C16	0160-4835	8		CAPACITOR-FXD .1UF 10% 50VDC CER		
A4C20	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A4C21	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A4C22	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A4C23	0160-2251	7	1	CAPACITOR-FXD 5.6PF +- .25PF 500VDC CER	28480	0160-2251
A4C24	0160-2940	1		CAPACITOR-FXD 470PF +-5% 300VDC MICA	28480	0160-2940
A4C25	0160-2208	4	1	CAPACITOR-FXD 330PF +-5% 300VDC MICA	28480	0160-2208
A4C27	0180-1083	8		CAPACITOR-FXD 33U -10+50%		
A4C28	0180-1746	5	3	CAPACITOR-FXD 15UF+-10% 20VDC TA	56289	150D156X9020B2
A4C30	0160-4640	2	1	CAPACITOR-FXD .1UF +-10% 100VDC	28480	0160-4640
A4C31	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A4C32	0160-2250	6	1	CAPACITOR-FXD 5.1PF +- .25PF 500VDC CER	28480	0160-2250
A4C33	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A4C34	0160-2222	2	2	CAPACITOR-FXD 1500PF +-5% 300VDC MICA	28480	0160-2222
A4C35	0160-4835	8		CAPACITOR-FXD .1UF 10% 50VDC CER		
A4C36	0160-4461	5	1	CAPACITOR-FXD 150PF +-2.5% 160VDC POLYP	28480	0160-4461
A4C37	0160-2257	3		CAPACITOR-FXD 10PF +-5% 500VDC CER 0+-60	28480	0160-2257
A4C38	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A4C39	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A4C40	0180-0229	7		CAPACITOR-FXD 33UF+-10% 10VDC TA	56289	150D336X9010B2
A4C41	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A4C42	0140-0191	8		CAPACITOR-FXD 56PF +-5% 300VDC MICA	72136	DM15E56J0300WV1CR
A4C43	0140-0191	8		CAPACITOR-FXD 56PF +-5% 300VDC MICA	72136	DM15E56J0300WV1CR
A4C44	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A4C45	0180-0229	7		CAPACITOR-FXD 33UF+-10% 10VDC TA	56289	150D336X9010B2
A4C46	0180-0228	6		CAPACITOR-FXD 22UF+-10% 15VDC TA	56289	150D226X9015B2
A4C47	0160-0127	2		CAPACITOR-FXD 1UF +-20% 25VDC CER	28480	0160-0127
A4C48	0160-4835	8		CAPACITOR-FXD .1UF 10% 50VDC CER		
A4C50	0180-0228	6		CAPACITOR-FXD 22UF+-10% 15VDC TA	56289	150D226X9015B2
A4C51	0160-2204	0		CAPACITOR-FXD 100PF +-5% 300VDC MICA	28480	0160-2204
A4C52	0160-2204	0		CAPACITOR-FXD 100PF +-5% 300VDC MICA	28480	0160-2204
A4C53	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A4C56	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A4C57	0140-0206	6	1	CAPACITOR-FXD 270PF +-5% 500VDC MICA	72136	DM15F271J0500WV1CR
A4C58	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A4C59	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A4C60	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A4C61	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A4C62	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A4C63	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A4C64	0140-0191	8		CAPACITOR-FXD 56PF +-5% 300VDC MICA	72136	DM15E56J0300WV1CR
A4C65	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A4C66	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A4C67	0160-4835	8		CAPACITOR-FXD .1UF 10% 50VDC CER		
A4C68	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A4C69	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A4C73 ~ C79	0180-1083			CAPACITOR-FXD 33U -10+50%		
A4C80, C82	0180-1050			CAPACITOR-FXD 100U -10+50%		
A4C81, C83	0180-1085			CAPACITOR-FXD 4.7U +-20%		
A4C84	0160-0127			CAPACITOR-FXD 1UF +80-20% 50VDC CER		
A4C85	0160-4832			CAPACITOR-FXD 0.01UF		

See introduction to this section for ordering information
*Indicates factory selected value

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A4CR1	1901-0518	8	2	DIODE-SM SIG SCHOTTKY	28480	1901-0518
A4CR2	0122-0109	6		DIODE-VVC 2.2PF 5% C3/C25-MIN=4.5	04713	8B105B
A4CR3	0122-0109	6		DIODE-VVC 2.2PF 5% C3/C25-MIN=4.5	04713	8B105B
A4CR4	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A4CR10	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A4CR11	1902-3036	3	4	DIODE-ZNR 3.16V 5% DO-7 PD=.4W TC=-.064%	28480	1902-3036
A4CR12	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A4CR13	1901-0535	9		DIODE-SM SIG SCHOTTKY	28480	1901-0535
A4CR14	1901-0535	9		DIODE-SM SIG SCHOTTKY	28480	1901-0535
A4CR15	1901-0535	9		DIODE-SM SIG SCHOTTKY	28480	1901-0535
A4CR16	1901-0040	1	1	DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A4CR17	1901-0535	9		DIODE-SM SIG SCHOTTKY	28480	1901-0535
A4CR18	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A4CR19	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A4CR20	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A4CR21	1902-0041	4	1	DIODE-ZNR 5.11V 5% DO-35 PD=.4W	28480	1902-0041
A4CR23	1901-0040	1	1	DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A4CR24	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A4CR30	1901-0025	7		DIODE		
A4CR31	1902-3059			DIODE-ZNR 3.83V		
A4J1	1250-0257	1		CONNECTOR-RF SMB M PC 50-OHM	28480	1250-0257
A4J2	1250-0257	1		CONNECTOR-RF SMB M PC 50-OHM	28480	1250-0257
A4J3	1251-0513	4		CONNECTOR 5-PIN M POST TYPE	28480	1251-0513
A4J4	1251-4822	6		CONNECTOR 3-PIN M POST TYPE	28480	1251-4822
A4J5	1250-0257	1		CONNECTOR-RF SMB M PC 50-OHM	28480	1250-0257
A4J6	1250-0257	1		CONNECTOR-RF SMB M PC 50-OHM	28480	1250-0257
A4J7	1200-0607	0	2	SOCKET-IC 16-COND DIP DIP-SLDR	28480	1200-0607
A4J8	1250-0257	1		CONNECTOR-RF SMB M PC 50-OHM	28480	1250-0257
A4J9	1250-0257	1		CONNECTOR-RF SMB M PC 50-OHM	28480	1250-0257
A4J10	1200-0567			SKT-IC 28-CONT		
A4L1	9140-0137	1		INDUCTOR RF-CH-MLD 1MH 5% .2DX.45LG Q=60	28480	9140-0137
A4L2	9140-0137	1		INDUCTOR RF-CH-MLD 1MH 5% .2DX.45LG Q=60	28480	9140-0137
A4L3	9140-0466	9		COIL-VAR 475NH-525NH Q=80 PC-MTG	28480	9140-0466
A4L4	9140-0114	4		INDUCTOR RF-CH-MLD 10UH 10% .166DX.385LG	28480	9140-0114
A4L5	9100-1788	6		CHOKE-WIDE BAND ZMAX=680 OHM@ 180 MHZ	02114	UK200 20/48
A4L6	9140-0210	6		TRANSFORMER		
A4L7	9140-0210	6	TRANSFORMER			
A4L8	9100-3559	3	1	INDUCTOR RF-CH-MLD 5.1UH 5% .166DX.385LG	28480	9100-3559
A4L9	9100-1788			CHOKE-WIDE		
A4L10	9100-3139			INDUCTOR 75UH 15%		
A4Q1	1854-0296	8	13	TRANSISTOR NPN SI TO-92 PD=310MW	28480	1854-0296
A4Q2	1855-0122	1		TRANSISTOR-FET 2SK43-1	28480	1855-0122
A4Q3	1854-0296	8		TRANSISTOR NPN SI TO-92 PD=310MW	28480	1854-0296
A4Q4	1855-0119	6		TRANSISTOR-FET 2SK43	28480	1855-0119
A4Q5	1855-0119	6		TRANSISTOR-FET 2SK43	28480	1855-0119
A4Q6	1854-0296	8	9	TRANSISTOR NPN SI TO-92 PD=310MW	28480	1854-0296
A4Q7	1854-0296	8		TRANSISTOR NPN SI TO-92 PD=310MW	28480	1854-0296
A4Q8	1854-0296	8		TRANSISTOR NPN SI TO-92 PD=310MW	28480	1854-0296
A4Q9	1854-0296	8		TRANSISTOR NPN SI TO-92 PD=310MW	28480	1854-0296
A4Q10	1853-0089	5		TRANSISTOR PNP 2N4917 SI PD=200MW	07263	2N4917
A4Q11	1853-0089	5		TRANSISTOR PNP 2N4917 SI PD=200MW	07263	2N4917
A4Q12	1853-0089	5		TRANSISTOR PNP 2N4917 SI PD=200MW	07263	2N4917
A4Q13	1854-0215	8		TRANSISTOR NPN SI		
A4Q14	1854-0215	8		TRANSISTOR NPN SI		
A4Q15	1853-0089	5		TRANSISTOR PNP 2N4917 SI PD=200MW	07263	2N4917
A4Q16	1854-0296	8	1	TRANSISTOR NPN SI TO-92 PD=310MW	28480	1854-0296
A4Q17	1853-0089	5		TRANSISTOR PNP 2N4917 SI PD=200MW	07263	2N4917
A4Q18	1854-0296	8		TRANSISTOR NPN SI TO-92 PD=310MW	28480	1854-0296
A4Q19	1854-0296	8		TRANSISTOR NPN SI TO-92 PD=310MW	28480	1854-0296
A4Q20	1854-0296	8		TRANSISTOR NPN SI TO-92 PD=310MW	28480	1854-0296
A4Q21	1855-0308	5		TRANSISTOR J-FET DUAL N-CHAN D-MODE SI	28480	1855-0308
A4Q22	1855-0082	2		TRANSISTOR J-FET P-CHAN D-MODE SI	28480	1855-0082
A4Q23	1854-0830	9		TRANSISTOR-DUAL NPN PD=750MW	28480	1854-0221
A4Q25	1854-0215	1		TRANSISTOR NPN SI PD=350MW FT=300MHZ	04713	2N3904
A4Q26	1854-0215	1		TRANSISTOR NPN SI PD=350MW FT=300MHZ	04713	2N3904
A4Q27	1855-0081	1	2	TRANSISTOR J-FET N-CHAN D-MODE SI	28480	1855-0081
A4Q28	1855-0081	1		TRANSISTOR J-FET N-CHAN D-MODE SI	28480	1855-0081
A4Q29	1854-0215	1		TRANSISTOR NPN SI PD=350MW FT=300MHZ	04713	2N3904
A4Q30	1853-0448	0		TRANSISTOR PNP SI TO-92 PD=625MW	04713	MP5H81
A4Q31	1853-0448	0	1	TRANSISTOR PNP SI TO-92 PD=625MW	04713	MP5H81
A4Q32	1853-0448	0		TRANSISTOR PNP SI TO-92 PD=625MW	04713	MP5H81
A4Q33	1854-0345	8		TRANSISTOR NPN 2N5179 SI TO-72 PD=200MW	04713	2N5179
A4Q35	1853-0089	5	TRANSISTOR PNP 2N4917 SI PD=200MW	07263	2N4917	
A4Q36	1853-0089	5	5	TRANSISTOR PNP 2N4917 SI PD=200MW	07263	2N4917
A4Q37	1853-0089	5		TRANSISTOR PNP 2N4917 SI PD=200MW	07263	2N4917
A4Q38	1853-0448	0		TRANSISTOR PNP SI TO-92 PD=625MW	04713	MP5H81
A4Q39	1854-0296	8		TRANSISTOR NPN SI TO-92 PD=310MW	28480	1854-0296
A4Q40	1854-0296	8		TRANSISTOR NPN SI TO-92 PD=310MW	28480	1854-0296

See introduction to this section for ordering information
*Indicates factory selected value

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A4R1	0757-0403	2	1	RESISTOR 121 1% .125W F TC=0+-100	24546	C4-1/8-T0-121R-F
A4R2	0757-0441	8		RESISTOR 8.25K 1% .125W F TC=0+-100	24546	C4-1/8-T0-8251-F
A4R3	0698-3136	8	1	RESISTOR 17.8K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1782-F
A4R4	0683-4705	8	25	RESISTOR 47 5% .25W FC TC=-400/+500	01121	CB4705
A4R5	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A4R6	0683-1035	1		RESISTOR 10K 5% .25W FC TC=-400/+700	01121	CB1035
A4R7	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A4R8	0683-4705	8		RESISTOR 47 5% .25W FC TC=-400/+500	01121	CB4705
A4R9	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A4R10	0683-2215	1	16	RESISTOR 220 5% .25W FC TC=-400/+600	01121	CB2215
A4R11	0698-3155	3		RESISTOR 4.64K 1% .125W F TC=0+-100		
A4R12	0757-1004	9		RESISTOR 100K 1% .25W F TC=0+-100		
A4R13	0698-0084	9		RESISTOR 2.15K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2151-F
A4R14	0683-1525	4		RESISTOR 1.5K 5% .25W FC TC=-400/+700	01121	CB1525
A4R15	0683-1025	9		RESISTOR 1K 5% .25W FC TC=-400/+600	01121	CB1025
A4R16	0683-3315	4	3	RESISTOR 330 5% .25W FC TC=-400/+600	01121	CB3315
A4R17	0683-3315	4		RESISTOR 330 5% .25W FC TC=-400/+600	01121	CB3315
A4R18	0683-4705	8		RESISTOR 47 5% .25W FC TC=-400/+500	01121	CB4705
A4R20	0683-1045	3		RESISTOR 100K 5% .25W FC TC=-400/+800	01121	CB1045
A4R21	0683-3935	4	2	RESISTOR 39K 5% .25W FC TC=-400/+800	01121	CB3935
A4R22	0683-3935	4		RESISTOR 39K 5% .25W FC TC=-400/+800	01121	CB3935
A4R23	0683-1045	3		RESISTOR 100K 5% .25W FC TC=-400/+800	01121	CB1045
A4R24	0683-1035	1		RESISTOR 10K 5% .25W FC TC=-400/+700	01121	CB1035
A4R25	0683-1025	9		RESISTOR 1K 5% .25W FC TC=-400/+600	01121	CB1025
A4R26	0698-3155	1		RESISTOR 4.64K 1% .125W F TC=0+-100	24546	C4-1/8-T0-4641-F
A4R27	0757-1094	9		RESISTOR 1.47K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1471-F
A4R28	0683-4705	8		RESISTOR 47 5% .25W FC TC=-400/+500	01121	CB4705
A4R29	0683-2235	5	3	RESISTOR 22K 5% .25W FC TC=-400/+800	01121	CB2235
A4R30	0683-1035	1		RESISTOR 10K 5% .25W FC TC=-400/+700	01121	CB1035
A4R31	2100-0567	0	1	RESISTOR-TRMR 2K 10% C TOP-ADJ 1-TRN	28480	2100-0567
A4R32	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1001-F
A4R33	0683-2215	1		RESISTOR 220 5% .25W FC TC=-400/+600	01121	CB2215
A4R34	0683-2215	1		RESISTOR 220 5% .25W FC TC=-400/+600	01121	CB2215
A4R35	0757-0421	4		RESISTOR 825 1% .125W F TC=0+-100	24546	C4-1/8-T0-825R-F
A4R36	0757-0416	7	2	RESISTOR 511 1% .125W F TC=0+-100	24546	C4-1/8-T0-511R-F
A4R37	0757-0416	7		RESISTOR 511 1% .125W F TC=0+-100	24546	C4-1/8-T0-511R-F
A4R38	0683-2215	1		RESISTOR 220 5% .25W FC TC=-400/+600	01121	CB2215
A4R39	0757-0200	7		RESISTOR 5.62K 1% .125W F TC=0+-100	24546	C4-1/8-T0-5621-F
A4R40	0757-0279	0		RESISTOR 3.16K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3161-F
A4R41	0757-0288	1	1	RESISTOR 9.09K 1% .125W F TC=0+-100	19701	HF4C1/8-T0-9091-F
A4R42	0757-0274	5	4	RESISTOR 1.21K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1211-F
A4R44	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1001-F
A4R45	0683-1025	9		RESISTOR 1K 5% .25W FC TC=-400/+600	01121	CB1025
A4R46	0683-2215	1		RESISTOR 220 5% .25W FC TC=-400/+600	01121	CB2215
A4R47	0683-2215	1		RESISTOR 220 5% .25W FC TC=-400/+600	01121	CB2215
A4R49	0698-3155	1		RESISTOR 4.64K 1% .125W F TC=0+-100	24546	C4-1/8-T0-4641-F
A4R50	0683-2225	3		RESISTOR 2.2K 5% .25W FC TC=-400/+700	01121	CB2225
A4R51	0683-2225	3		RESISTOR 2.2K 5% .25W FC TC=-400/+700	01121	CB2225
A4R52	0698-3156	2		RESISTOR 14.7K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1472-F
A4R53	0757-0200	7		RESISTOR 5.62K 1% .125W F TC=0+-100	24546	C4-1/8-T0-5621-F
A4R54	0683-4705	8		RESISTOR 47 5% .25W FC TC=-400/+500	01121	CB4705
A4R55	0757-0441	8		RESISTOR 8.25K 1% .125W F TC=0+-100	24546	C4-1/8-T0-8251-F
A4R56	0683-4705	8		RESISTOR 47 5% .25W FC TC=-400/+500	01121	CB4705
A4R57	0757-0422	5	1	RESISTOR 909 1% .125W F TC=0+-100	24546	C4-1/8-T0-909R-F
A4R58	0698-0084	9		RESISTOR 2.15K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2151-F
A4R59	0757-0444	1	3	RESISTOR 12.1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1212-F
A4R60	0698-0083	8	5	RESISTOR 1.96K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1961-F
A4R61	0757-0444	1		RESISTOR 12.1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1212-F
A4R62	0757-0444	1		RESISTOR 12.1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1212-F
A4R63	0698-3162	0		RESISTOR 46.4K 1% .125W F TC=0+-100	24546	C4-1/8-T0-4642-F
A4R64	0683-1025	9		RESISTOR 1K 5% .25W FC TC=-400/+600	01121	CB1025
A4R65	0683-2205	9		RESISTOR 22 5% .25W FC TC=-400/+500	01121	CB2205
A4R66	0683-4715	0		RESISTOR 470 5% .25W FC TC=-400/+600	01121	CB4715
A4R67	0683-4705	8		RESISTOR 47 5% .25W FC TC=-400/+500	01121	CB4705
A4R68	0757-0401	0		RESISTOR 100 1% .125W F TC=0+-100	24546	C4-1/8-T0-101-F
A4R69	0757-0401	0		RESISTOR 100 1% .125W F TC=0+-100	24546	C4-1/8-T0-101-F
A4R70	0683-4705	8		RESISTOR 47 5% .25W FC TC=-400/+500	01121	CB4705
A4R71	0698-0084	9		RESISTOR 2.15K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2151-F
A4R72	0683-4705	8		RESISTOR 47 5% .25W FC TC=-400/+500	01121	CB4705
A4R73	0698-3443	0		RESISTOR 287 1% .125W F TC=0+-100	24546	C4-1/8-T0-287R-F
A4R74	0757-0419	9	1	RESISTOR 619 1% .125W F TC=0+-100	24546	C4-1/8-T0-619R-F
A4R75	0683-4705	8		RESISTOR 47 5% .25W FC TC=-400/+500	01121	CB4705
A4R76	1810-0294	4	1	NETWORK-RESISTOR 16 PIN DIP; RES	28480	1810-0294
A4R77	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F

See introduction to this section for ordering information
*Indicates factory selected value

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A4R78	0683-4705	B		RESISTOR 47 5% .25W FC TC=-400/+500	01121	CB4705
A4R79	2100-3096	6		RESISTOR-TRMR 50K 10% C TOP-ADJ 17-TRN	32997	3292W-1-503
A4R80	2100-3211	7	1	RESISTOR-TRMR 1K 10% C TOP-ADJ 1-TRN	28480	2100-3211
A4R81	0757-0488	3	1	RESISTOR 909K 1% .125W F TC=0+-100	28480	0757-0488
A4R82	0683-1065	7	2	RESISTOR 10M 5% .25W CC TC=-900/+1100	01121	CB1065
A4R83	2100-3383	4	2	RESISTOR-TRMR 50 10% C TOP-ADJ 1-TRN	28480	2100-3383
A4R84	0757-0401	0		RESISTOR 100 1% .125W F TC=0+-100	24546	C4-1/8-T0-101-F
A4R85	0683-1035	1		RESISTOR 10K 5% .25W FC TC=-400/+700	01121	CB1035
A4R86	0683-5625	3		RESISTOR 5.6K 5% .25W FC TC=-400/+700	01121	CB5625
A4R87	0683-2225	3		RESISTOR 2.2K 5% .25W FC TC=-400/+700	01121	CB2225
A4R88	0757-0421	3		RESISTOR 825 1% .125W F TC=0+-100		
A4R89	0757-0421	3		RESISTOR 825 1% .125W F TC=0+-100		
A4R90	0698-0083	8		RESISTOR 1.96K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1961-F
A4R91	0757-0401	0		RESISTOR 100 1% .125W F TC=0+-100	24546	C4-1/8-T0-101-F
A4R92	0683-2215	1		RESISTOR 220 5% .25W FC TC=-400/+600	01121	CB2215
A4R93	0698-3150	6	3	RESISTOR 2.37K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2371-F
A4R94	0698-3150	6		RESISTOR 2.37K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2371-F
A4R95	0698-0083	8		RESISTOR 1.96K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1961-F
A4R96	0757-0279	7		RESISTOR 3.16K 1% .125W F TC=0+-100		
A4R97	0683-4705	8		RESISTOR 47 5% .25W FC TC=-400/+500	01121	CB4705
A4R98	0757-0419	3		RESISTOR 681 1% .125W F TC=0+-100		
A4R99	0698-3150	6		RESISTOR 2.37K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2371-F
A4R100	0698-0083	8		RESISTOR 1.96K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1961-F
A4R101	0757-0395	1		RESISTOR 56.2 1% .125W F TC=0+-100	24546	C4-1/8-T0-56R2-F
A4R102	0757-0274	5		RESISTOR 1.21K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1211-F
A4R103	0757-0274	5		RESISTOR 1.21K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1211-F
A4R104	0683-4705	8		RESISTOR 47 5% .25W FC TC=-400/+500	01121	CB4705
A4R105	0757-0395	1		RESISTOR 56.2 1% .125W F TC=0+-100	24546	C4-1/8-T0-56R2-F
A4R106	0757-0419	0		RESISTOR 681 1% .125W F TC=0+-100	24546	C4-1/8-T0-681R-F
A4R107	0757-0419	0		RESISTOR 681 1% .125W F TC=0+-100	24546	C4-1/8-T0-681R-F
A4R108	0683-4705	8		RESISTOR 47 5% .25W FC TC=-400/+500	01121	CB4705
A4R109	0683-3325	6		RESISTOR 3.3K 5% .25W FC TC=-400/+700	01121	CB3325
A4R110	0683-4715	0		RESISTOR 470 5% .25W FC TC=-400/+600	01121	CB4715
A4R111	0683-4705	8		RESISTOR 47 5% .25W FC TC=-400/+500	01121	CB4705
A4R112	0757-0419	0		RESISTOR 681 1% .125W F TC=0+-100	24546	C4-1/8-T0-681R-F
A4R113	0683-4715	0		RESISTOR 470 5% .25W FC TC=-400/+600	01121	CB4715
A4R114	0683-4705	8		RESISTOR 47 5% .25W FC TC=-400/+500	01121	CB4705
A4R115	0698-3155	1		RESISTOR 4.64K 1% .125W F TC=0+-100	24546	C4-1/8-T0-4641-F
A4R116	0698-3441	8		RESISTOR 215 1% .125W F TC=0+-100	24546	C4-1/8-T0-215R-F
A4R117	0683-2205	9		RESISTOR 22 5% .25W FC TC=-400/+500	01121	CB2205
A4R118	0698-3155	1		RESISTOR 4.64K 1% .125W F TC=0+-100	24546	C4-1/8-T0-4641-F
A4R119	0757-0439	4		RESISTOR 6.81K 1% .125W F TC=0+-100	24546	C4-1/8-T0-6811-F
A4R120	0757-0419	0		RESISTOR 681 1% .125W F TC=0+-100	24546	C4-1/8-T0-681R-F
A4R121	0757-0440	7	2	RESISTOR 7.5K 1% .125W F TC=0+-100	24546	C4-1/8-T0-7501-F
A4R121	0757-0440	7		RESISTOR 7.5K 1% .125W F TC=0+-100	24546	C4-1/8-T0-7501-F
A4R122	0757-0279	0		RESISTOR 3.16K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3161-F
A4R123	0698-3156	2		RESISTOR 14.7K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1472-F
A4R124	0698-0085	0		RESISTOR 2.61K 1% .125W F TC=0+-100		
A4R125	0683-4705	8		RESISTOR 47 5% .25W FC TC=-400/+500	01121	CB4705
A4R126	0757-0317	7	1	RESISTOR 1.33K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1331-F
A4R127	0757-0419			RESISTOR 681 1%		
A4R128	0683-1825	7	2	RESISTOR 1.8K 5% .25W FC TC=-400/+700	01121	CB1825
A4R130	0683-3325	6		RESISTOR 3.3K 5% .25W FC TC=-400/+700	01121	CB3325
A4R131	0683-2225	3		RESISTOR 2.2K 5% .25W FC TC=-400/+700	01121	CB2225
A4R132	0683-2225	6		RESISTOR 2.2K 5% .25W FC TC=-400/+700		
A4R133	0683-1035	1		RESISTOR 10K 5% .25W FC TC=-400/+700	01121	CB1035
A4R134	0683-1035	1		RESISTOR 10K 5% .25W FC TC=-400/+700	01121	CB1035
A4R135	0757-0420	3		RESISTOR 7500 5% .25W FC TC=-400/+700		
A4R136	0683-1035	1		RESISTOR 10K 5% .25W FC TC=-400/+700	01121	CB1035
A4R137	0683-1035	1		RESISTOR 10K 5% .25W FC TC=-400/+700	01121	CB1035
A4R138	0683-1035	1		RESISTOR 10K 5% .25W FC TC=-400/+700	01121	CB1035
A4R139	0698-3152	8		RESISTOR 3.48K 1% .125W F TC=0+-100	24546	C4-1/8-T0-8251-F
A4R140	0757-0317	1		RESISTOR 1.33K 1% .125W F TC=0+-100	24546	C4-1/8-T0-4641-F
A4R141	0683-1015	7	9	RESISTOR 100 5% .25W FC TC=-400/+500	01121	CB1015
A4R142	0683-1035	1		RESISTOR 10K 5% .25W FC TC=-400/+700	01121	CB1035
A4R143	0683-1035	1		RESISTOR 10K 5% .25W FC TC=-400/+700	01121	CB1035
A4R144	0683-1035	1		RESISTOR 10K 5% .25W FC TC=-400/+700	01121	CB1035
A4R145	0757-0398	4		RESISTOR 75 1% .125W F TC=0+-100	24546	C4-1/8-T0-75R0-F
A4R146	0698-4037	0		RESISTOR 46.4 1% .125W F TC=0+-100	24546	C4-1/8-T0-46R4-F
A4R147	0683-1035	1		RESISTOR 10K 5% .25W FC TC=-400/+700	01121	CB1035
A4R148	0698-3444	1		RESISTOR 316 1% .125W F TC=0+-100	24546	C4-1/8-T0-316R-F
A4R149	0683-4705	8		RESISTOR 47 5% .25W FC TC=-400/+500	01121	CB4705
A4R150	0757-0439	4		RESISTOR 6.81K 1% .125W F TC=0+-100	24546	C4-1/8-T0-6811-F
A4R151	0698-3155	1		RESISTOR 4.64K 1% .125W F TC=0+-100	24546	C4-1/8-T0-4641-F
A4R152	0757-0417	8		RESISTOR 562 1% .125W F TC=0+-100	24546	C4-1/8-T0-562R-F
A4R153	0683-4705	8		RESISTOR 47 5% .25W FC TC=-400/+500	01121	CB4705

See introduction to this section for ordering information
*Indicates factory selected value

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A4R154	0683-4705	8		RESISTOR 47 5% .25W FC TC=-400/+500	01121	CB4705
A4R155	0757-0279			RESISTOR 10K 1% .125W		
A4U1	1820-0802	1		IC GATE ECL NOR QUAD 2-INP	04713	MC10102P
A4U2	1826-0139	9		IC OP AMP GP DUAL 8-DIP-P PKG	0192B	CA1458G
A4U3	1826-0021	8	1	IC OP AMP GP TO-99 PKG	27014	LM310H
A4U4	5080-3846	3		IC V RGLTR POS 11.5/12.5V		
A4U5	5080-3847	4		IC V RGLTR NEG 12.4/11.6V		
A4U7	1820-1196	8	7	IC FF TTL LS D-TYPE POS-EDGE-TRIG COM	01295	SN74LS174N
A4U8	1821-0001	4		TRANSISTOR ARRAY 14-PIN PLSTC DIP	0192B	CA3046
A4U9	1820-0817	8	1	IC FF ECL D-M/S DUAL	04713	MC10131P
A4U10	1820-1112	8		IC FF TTL LS D-TYPE POS-EDGE-TRIG	01295	SN74LS74AN
A4U11	1820-0693	8		IC FF TTL S D-TYPE POS-EDGE-TRIG	01295	SN74S74N
A4U12	1820-0629	0	8	IC FF TTL S J-K NEG-EDGE-TRIG	01295	SN74S112N
A4U14	1820-0629	0		IC FF TTL S J-K NEG-EDGE-TRIG	01295	SN74S112N
A4U15	1820-1144	6		IC GATE TTL LS NOR QUAD 2-INP	01295	SN74LS02N
A4U16	1820-0629	0		IC FF TTL S J-K NEG-EDGE-TRIG	01295	SN74S112N
A4U17	1820-2004	9	1	IC MISC NMOS	28480	1820-2004
A4U18	1820-0629	0		IC FF TTL S J-K NEG-EDGE-TRIG	01295	SN74S112N
A4U19	1820-0693	8		IC FF TTL S D-TYPE POS-EDGE-TRIG	01295	SN74S74N
A4U20	1820-0629	0		IC FF TTL S J-K NEG-EDGE-TRIG	01295	SN74S112N
A4U21	1820-0683	6	2	IC INV TTL S HEX 1-INP	01295	SN74S04N
A4U22	1820-0681	4	3	IC GATE TTL S NAND QUAD 2-INP	01295	SN74S00N
A4U23	1820-0681	4		IC GATE TTL S NAND QUAD 2-INP	01295	SN74S00N
A4U24	1820-1196	8		IC FF TTL LS D-TYPE POS-EDGE-TRIG COM	01295	SN74LS174N
A4U25	1820-1196	8		IC FF TTL LS D-TYPE POS-EDGE-TRIG COM	01295	SN74LS174N
A4U26	1820-1322	2	1	IC GATE TTL S NOR QUAD 2-INP	01295	SN74S02N
A4U27	1820-0629	0		IC FF TTL S J-K NEG-EDGE-TRIG	01295	SN74S112N
A4U28	1820-1279	8	2	IC CNTR TTL LS DECD UP/DOWN SYNCHRO	01295	SN74LS190N
A4U29	1820-1279	8		IC CNTR TTL LS DECD UP/DOWN SYNCHRO	01295	SN74LS190N
A4U30	1820-0681	4		IC GATE TTL S NAND QUAD 2-INP	01295	SN74S00N
A4U31	1820-0629	0		IC FF TTL S J-K NEG-EDGE-TRIG	01295	SN74S112N
A4U32	1820-0629	0		IC FF TTL S J-K NEG-EDGE-TRIG	01295	SN74S112N
A4U33	1820-0683	6		IC INV TTL S HEX 1-INP	01295	SN74S04N
A4U34	1826-0275			IC 78L12A V RGLTR TO-92		
A4W1	8159-0005	0	6	WIRE 22AWG W PVC 1X22 80C	28480	8159-0005
A4W2	8159-0005	0		WIRE 22AWG W PVC 1X22 80C	28430	8159-0005
	04192-61681	0				
	04192-61682	6	1	CABLE ASSEMBLY-TRD 320MM WHT	28480	04192-61681
		7	1	CABLE ASSEMBLY 165MM RED	28480	04192-61682
	0340-0220	8			28480	0340-0220
	1258-0141	8		JUMPER-REM	28480	1258-0141
	3050-0082	8		WASHER-FL NM NO. 4 .116-IN-ID .188-IN-OD	28480	3050-0082
	9170-0029	3		CORE-SHIELDING BEAD	28480	9170-0029
	04192-00651	2		SHIELD	28480	04192-00651
A5	04192-66505	3	1	KEYBOARD & DISPLAY ASSEMBLY (NOT INCLUDING THE SHIELD CASES)	28480	04192-66505
A5C1	0180-1061	7	3	CAPACITOR-FXD 220 UF 16VDC M	28480	0180-1061
A5C2	0160-2055	9	11	CAPACITOR-FXD .01UF +80-20% 100VDC CER	28480	0160-2055
A5C3	0180-1061	7		CAPACITOR-FXD 220 UF 16VDC M	28480	0180-1061
A5C4	0160-2055	9		CAPACITOR-FXD .01UF +80-20% 100VDC CER	28480	0160-2055
A5C5	0180-1085	5		CAPACITOR-FXD 4.7UF 16VDC TA	28480	0180-1085
A5C6	0180-1085	5		CAPACITOR-FXD 4.7UF 16VDC TA	28480	0180-1085
A5C7	0180-1085	5		CAPACITOR-FXD 4.7UF 16VDC TA	28480	0180-1085
A5C8	0180-1085	5		CAPACITOR-FXD 4.7UF 16VDC TA	28480	0180-1085
A5C9	0180-1061	7		CAPACITOR-FXD 220 UF 16VDC M	28480	0180-1061
A5C10	0160-2055	9		CAPACITOR-FXD .01UF +80-20% 100VDC CER	28480	0160-2055
A5C11	0180-1085	5		CAPACITOR-FXD 4.7UF 16VDC TA	28480	0180-1085
A5C12	0180-1085	5		CAPACITOR-FXD 4.7UF 16VDC TA	28480	0180-1085
A5C13	0180-1085	5		CAPACITOR-FXD 4.7UF 16VDC TA	28480	0180-1085
A5C14	0160-4298	6	1	CAPACITOR-FXD 4700PF +-20% 250VDC CER	56289	C067F251H472MS22-CDH
A5C15	0160-0362	7	1	CAPACITOR-FXD 510PF +-5% 300VDC MICA	28480	0160-0362
A5C30	0180-1085	5		CAPACITOR-FXD 4.7UF 16VDC TA	28480	0180-1085
A5C31	0180-1085	5		CAPACITOR-FXD 4.7UF 16VDC TA	28480	0180-1085
A5C36	0180-1085	5		CAPACITOR-FXD 4.7UF 16VDC TA	28480	0180-1085
A5DS1	1990-0486	6	2	LED-VISIBLE LUM-INT=1MCD IF=20MA-MAX	28480	5082-4684
A5DS2	1990-0540	3	10	DISPLAY-NUM-SEG 1-CHAR .43-H	28480	5082-7650
A5DS3	1990-0540	3		DISPLAY-NUM-SEG 1-CHAR .43-H	28480	5082-7650
A5DS4	1990-0540	3		DISPLAY-NUM-SEG 1-CHAR .43-H	28480	5082-7650
A5DS5	1990-0540	3		DISPLAY-NUM-SEG 1-CHAR .43-H	28480	5082-7650
A5DS6	1990-0540	3		DISPLAY-NUM-SEG 1-CHAR .43-H	28480	5082-7650
A5DS7	1990-0517	4	25	LED-VISIBLE LUM-INT=3MCD IF=20MA-MAX	28480	5082-4655
A5DS8	1990-0517	4		LED-VISIBLE LUM-INT=3MCD IF=20MA-MAX	28480	5082-4655
A5DS9	1990-0517	4		LED-VISIBLE LUM-INT=3MCD IF=20MA-MAX	28480	5082-4655
A5DS10	1990-0517	4		LED-VISIBLE LUM-INT=3MCD IF=20MA-MAX	28480	5082-4655

See introduction to this section for ordering information
*Indicates factory selected value

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A5D586	1990-0670	0		LED-VISIBLE LUM-INT=1MCD IF=20MA-MAX	28480	1990-0670
A5D587	1990-0670	0		LED-VISIBLE LUM-INT=1MCD IF=20MA-MAX	28480	1990-0670
A5D588	1990-0670	0		LED-VISIBLE LUM-INT=1MCD IF=20MA-MAX	28480	1990-0670
A5D589	1990-0670	0		LED-VISIBLE LUM-INT=1MCD IF=20MA-MAX	28480	1990-0670
A5D590	1990-0670	0		LED-VISIBLE LUM-INT=1MCD IF=20MA-MAX	28480	1990-0670
A5D591	1990-0670	0		LED-VISIBLE LUM-INT=1MCD IF=20MA-MAX	28480	1990-0670
A5D592	1990-0670	0		LED-VISIBLE LUM-INT=1MCD IF=20MA-MAX	28480	1990-0670
A5D593	1990-0670	0		LED-VISIBLE LUM-INT=1MCD IF=20MA-MAX	28480	1990-0670
A5J1-18	1200-0638	7	24	SOCKET-IC 14-CONT DIP DIP-SLDR	28480	1200-0638
A5J19	0360-1705	8	1	CABLE TRANSITION 40-TERM INSUL DSPL TYPE	28480	0360-1705
A5R1	0683-5615	1	1	RESISTOR 560 5% .25W FC TC=-400/+600	01121	CB5615
A5R2	0683-3315	4		RESISTOR 330 5% .25W FC TC=-400/+600	01121	CB3315
A5R3	0683-1035	1		RESISTOR 10K 5% .25W FC TC=-400/+700	01121	CB1035
A5R4	0683-4725	2		RESISTOR 4.7K 5% .25W FC TC=-400/+700	01121	CB4725
A5R5	1810-0269	3	13	NETWORK-RES 9-SIP10.0K OHM X 8	28480	1810-0269
A5R6	1810-0247	7	5	NETWORK-RES 16-DIP220.0 OHM X 8	01121	316B221
A5R7	1810-0269	3		NETWORK-RES 9-SIP10.0K OHM X 8	28480	1810-0269
A5R8	1810-0269	3		NETWORK-RES 9-SIP10.0K OHM X 8	28480	1810-0269
A5R9	1810-0269	3		NETWORK-RES 9-SIP10.0K OHM X 8	28480	1810-0269
A5R10	1810-0247	7		NETWORK-RES 16-DIP220.0 OHM X 8	01121	316B221
A5R11	1810-0269	3		NETWORK-RES 9-SIP10.0K OHM X 8	28480	1810-0269
A5R12	1810-0275	1	2	NETWORK-RES 10-SIP1.0K OHM X 9	01121	210A102
A5R13	1810-0275	1		NETWORK-RES 10-SIP1.0K OHM X 9	01121	210A102
A5R14	1810-0301	4	3	NETWORK-RES 16-DIP51.0 OHM X 8	01121	316B510
A5R15	1810-0269	3		NETWORK-RES 9-SIP10.0K OHM X 8	28480	1810-0269
A5R16	1810-0269	3		NETWORK-RES 9-SIP10.0K OHM X 8	28480	1810-0269
A5R17	1810-0301	4		NETWORK-RES 16-DIP51.0 OHM X 8	01121	316B510
A5R18	1810-0269	3		NETWORK-RES 9-SIP10.0K OHM X 8	28480	1810-0269
A5S1-45	5060-9436	7	45	PUSHBUTTON SWITCH P.C. MOUNT	28480	5060-9436
A5S46	3101-2046	7	1	SWITCH-SL DPDT STD 1.5A 250VAC PC	28480	3101-2046
A5U1	1858-0038	4	4	TRANSISTOR ARRAY 14-PIN PLSTC DIP	28480	1858-0038
A5U2	1858-0038	4		TRANSISTOR ARRAY 14-PIN PLSTC DIP	28480	1858-0038
A5U3	1820-0495	8	1	IC DCDR TTL 4-TO-16-LINE 4-INP	01295	SN74LS14N
A5U4	1820-1416	5	4	IC SCHMITT-TRIG TTL LS INV HEX 1-INP	01295	SN74LS14N
A5U5	1820-0668	7	1	IC BFR TTL NON-INV HEX 1-INP	01295	SN7407N
A5U6	1858-0038	4		TRANSISTOR ARRAY 14-PIN PLSTC DIP	28480	1858-0038
A5U7	1858-0038	4		TRANSISTOR ARRAY 14-PIN PLSTC DIP	28480	1858-0038
A5U8	1820-1200	5	4	IC INV TTL LS HEX	01295	SN74LS05N
A5U9	1820-1200	5		IC INV TTL LS HEX	01295	SN74LS05N
A5U10	1820-1200	5		IC INV TTL LS HEX	01295	SN74LS05N
A5U11	1820-1278	7	15	IC CNTR TTL LS BIN UP/DOWN SYNCHRD	01295	SN74LS191N
A5U12	1820-1418	7	1	IC DCDR TTL LS BCD-TO-DEC 4-TO-10-LINE	01295	SN74LS42N
A5U13	1858-0033	9	4	TRANSISTOR	28480	1858-0033
A5U14	1858-0033	9		TRANSISTOR	28480	1858-0033
A5U15	1858-0033	9		TRANSISTOR	28480	1858-0033
A5U16	1858-0033	9		TRANSISTOR	28480	1858-0033
A5U17	1820-1202	7	3	IC GATE TTL LS NAND TPL 3-INP	01295	SN74LS10N
A5U18	1820-1851	2	1	IC ENCDR TTL LS	34335	AM74LS148N
	04192-61634	9	1	CABLE ASSEMBLY-FLAT	28480	04192-61634
	5040-3323	1	2	INSULATOR		
	5041-0276	5	1	KEY CAP-PEARL GRAY	28480	5041-0276
	5041-0342	6	4	KEY CAP	28480	5041-0342
	5041-0351	7	15	KEY CAP	28480	5041-0351
	5041-0375	5	1	KEY CAP-QUARTER, SMOKE	28480	5041-0375
	5041-0384	6	4	KEY CAP-SMOKE GRAY	28480	5041-0384
	5041-0441	6	1	KEY CAP-SMOKE BLUE	28480	5041-0441
	5041-0922	8	7	KEY CAP-EBY PEARL	28480	5041-0922
	5041-1755	7	1	KEY CAP (.)	28480	5041-1755
	5041-1756	8	1	KEY CAP-QUARTER (0)	28480	5041-1756
	5041-1757	9	1	KEY CAP-QUARTER (1)	28480	5041-1757
	5041-1758	0	1	KEY CAP-QUARTER (2)	28480	5041-1758
	5041-1759	1	1	KEY CAP-QUARTER (3)	28480	5041-1759
	5041-1760	4	1	KEY CAP-QUARTER (4)	28480	5041-1760
	5041-1761	5	1	KEY CAP-QUARTER (5)	28480	5041-1761
	5041-1762	6	2	KEY CAP QUARTER (6)	28480	5041-1762
	5041-1763	7	1	KEY CAP- (7)	28480	5041-1763
	5041-1764	8	1	KEY CAP-QUARTER (8)	28480	5041-1764
	5041-1770	6	1	KEY CAP-QUARTER (-)	28480	5041-1770
	04140-40002	9	2	INSULATOR	28480	04140-40002
	04191-40003	1	2	LAMP HOUSE	28480	04191-40003
	04262-25003	5	1	INSULATOR	28480	04262-25003
	04262-40001	5	1	INSULATOR	28480	04262-40001
	04274-40003	1	3	INSULATOR	28480	04274-40003

See introduction to this section for ordering information
*Indicates factory selected value

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A6	04192-66506	4	1	CONTROL LOGIC BOARD ASSEMBLY	28480	04192-66506
A6C1	0180-1085	5		CAPACITOR-FXD 4.7UF 16VDC TA	28480	0180-1085
A6C2	0180-1085	5		CAPACITOR-FXD 4.7UF 16VDC TA	28480	0180-1085
A6C3	0180-0291	3	5	CAPACITOR-FXD 1UF+-10% 35VDC TA	56289	150D105X9035A2
A6C4	0180-1085	5		CAPACITOR-FXD 4.7UF 16VDC TA	28480	0180-1085
A6C10	0160-0153	4	2	CAPACITOR-FXD 1000PF +-10% 200VDC POLYE	28480	0160-0153
A6C11	0180-1085	5		CAPACITOR-FXD 4.7UF 16VDC TA	28480	0180-1085
A6C12	0160-0153	4		CAPACITOR-FXD 1000PF +-10% 200VDC POLYE	28480	0160-0153
A6C20	0180-1057	1	1	CAPACITOR-FXD 2200 UF 16VDCW AL ELECT	28480	0180-1057
A6C21	0160-3456	6		CAPACITOR-FXD 1000PF +-10% 1KVDC CER	28480	0160-3456
A6C22	0180-1704	5	4	CAPACITOR-FXD 47UF+-10% 6VDC TA	56289	150D476X9006B2
A6C23	0180-1085	5		CAPACITOR-FXD 4.7UF 16VDC TA	28480	0180-1085
A6C24	0180-1085	5		CAPACITOR-FXD 4.7UF 16VDC TA	28480	0180-1085
A6C25	0180-1085	5		CAPACITOR-FXD 4.7UF 16VDC TA	28480	0180-1085
A6C32	0140-0197	4	1	CAPACITOR-FXD 180PF +-5% 300VDC MICA	72136	DW15F181J0300WV1CR
A6C33	0180-1704	5		CAPACITOR-FXD 47UF+-10% 6VDC TA	56289	150D476X9006B2
A6C34	0160-2150	5		CAPACITOR-FXD 33PF +-5% 300VDC MICA	28480	0160-2150
A6C35	0180-0291	3		CAPACITOR-FXD 1UF+-10% 35VDC TA	56289	150D105X9035A2
A6C37	0160-2150	5		CAPACITOR-FXD 33PF +-5% 300VDC MICA	28480	0160-2150
A6C38	0180-0291	3		CAPACITOR-FXD 1UF+-10% 35VDC TA	56289	150D105X9035A2
A6CR1	1902-0041	4		DIODE-ZNR 5.11V 5% DO-35 PD=.4W	28480	1902-0041
A6CR2	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A6CR3	1901-0040	1		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A6CR4	1901-0518	8		DIODE-5M SIG SCHOTTKY	28480	1901-0518
A6CR5	1901-0518	8		DIODE-5M SIG SCHOTTKY	28480	1901-0518
A6CR6	1901-0518	8		DIODE-5M SIG SCHOTTKY	28480	1901-0518
A6DS1	1990-0486	6		LED-VISIBLE LUM-INT=1MCD IF=20MA-MAX	28480	5082-4684
A6J1	1251-3025	9	1	CONNECTOR 34-PIN M RECTANGULAR	28480	1251-3025
A6J2	1200-0607	0		SOCKET-IC 16-CONT DIP DIP-SLDR	28480	1200-0607
A6J3	1200-0607	0		SOCKET-IC 16-CONT DIP DIP-SLDR	28480	1200-0607
A6J4	1200-0541	1		SOCKET-IC 24-CONT DIP DIP-SLDR	28480	1200-0541
A6J5	1200-0541	1		SOCKET-IC 24-CONT DIP DIP-SLDR	28480	1200-0541
A6J6	1251-3196	5	2	CONNECTOR 8-PIN M POST TYPE	28480	1251-3196
A6J7	1251-3004	4	1	CONNECTOR 40-PIN M RECTANGULAR	28480	1251-3004
A6J8	1250-0257	1		CONNECTOR-RF SMB M PC 50-OHM	28480	1250-0257
A6J9	1200-0654	7	2	SOCKET-IC 40-CONT DIP DIP-SLDR	28480	1200-0654
A6J10	1200-0607	0		SOCKET-IC 16-CONT DIP DIP-SLDR	28480	1200-0607
A6J11	1200-0638	7		SOCKET-IC 14-CONT DIP DIP-SLDR	28480	1200-0638
A6J12	1200-0639	8	5	SOCKET-IC 20-CONT DIP DIP-SLDR	28480	1200-0639
A6J13	1200-0638	7		SOCKET-IC 14-CONT DIP DIP-SLDR	28480	1200-0638
A6J14	1200-0638	7		SOCKET-IC 14-CONT DIP DIP-SLDR	28480	1200-0638
A6J15	1200-0607	0		SOCKET-IC 16-CONT DIP DIP-SLDR	28480	1200-0607
A6J16	1200-0638	7		SOCKET-IC 14-CONT DIP DIP-SLDR	28480	1200-0638
A6J17	1200-0639	8		SOCKET-IC 20-CONT DIP DIP-SLDR	28480	1200-0639
A6J18	1200-0639	8		SOCKET-IC 20-CONT DIP DIP-SLDR	28480	1200-0639
A6J19	1200-0639	8		SOCKET-IC 20-CONT DIP DIP-SLDR	28480	1200-0639
A6J20	1200-0607	0		SOCKET-IC 16-CONT DIP DIP-SLDR	28480	1200-0607
A6J21	1200-0639	8		SOCKET-IC 20-CONT DIP DIP-SLDR	28480	1200-0639
A6J22	1200-0539	7	4	SOCKET-IC 18-CONT DIP DIP-SLDR	28480	1200-0539
A6J23	1200-0539	7		SOCKET-IC 18-CONT DIP DIP-SLDR	28480	1200-0539
A6J24	1200-0539	7		SOCKET-IC 18-CONT DIP DIP-SLDR	28480	1200-0539
A6J25	1200-0539	7		SOCKET-IC 18-CONT DIP DIP-SLDR	28480	1200-0539
A6J26	1200-0541	1		SOCKET-IC 24-CONT DIP DIP-SLDR	28480	1200-0541
A6J37	1200-0541	1		SOCKET-IC 24-CONT DIP DIP-SLDR	28480	1200-0541
A6J40	1200-0607	0		SOCKET-IC 16-CONT DIP DIP-SLDR	28480	1200-0607
A6J41	1200-0607	0		SOCKET-IC 16-CONT DIP DIP-SLDR	28480	1200-0607
A6J42	1200-0607	0		SOCKET-IC 16-CONT DIP DIP-SLDR	28480	1200-0607
A6J43	1200-0607	0		SOCKET-IC 16-CONT DIP DIP-SLDR	28480	1200-0607
A6J44	1200-0607	0		SOCKET-IC 16-CONT DIP DIP-SLDR	28480	1200-0607
A6J45	1200-0654	7		SOCKET-IC 40-CONT DIP DIP-SLDR	28480	1200-0654
A6L1	9140-0401	2	1	COIL-FXD 64 OH	28480	9140-0401

See introduction to this section for ordering information
*Indicates factory selected value

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A6Q1	1854-0019	3	5	TRANSISTOR NPN SI TO-18 PD=360MW	28480	1854-0019
A6Q2	1853-0015	7	2	TRANSISTOR PNP SI PD=200MW FT=500MHZ	28480	1853-0015
A6Q3	1853-0015	7		TRANSISTOR PNP SI PD=200MW FT=500MHZ	28480	1853-0015
A6R1	1810-0269	3		NETWORK-RES 9-SIP10.0K OHM X 8	28480	1810-0269
A6R2	0683-4725	2		RESISTOR 4.7K 5% .25W FC TC=-400/+700	01121	CB4725
A6R3	0683-4725	2		RESISTOR 4.7K 5% .25W FC TC=-400/+700	01121	CB4725
A6R4	1810-0269	3		NETWORK-RES 9-SIP10.0K OHM X 8	28480	1810-0269
A6R5	1810-0269	3		NETWORK-RES 9-SIP10.0K OHM X 8	28480	1810-0269
A6R7	0683-4725	2		RESISTOR 4.7K 5% .25W FC TC=-400/+700	01121	CB4725
A6R8	0683-4725	2		RESISTOR 4.7K 5% .25W FC TC=-400/+700	01121	CB4725
A6R10	0683-4735	4		RESISTOR 47K 5% .25W FC TC=-400/+800	01121	CB4735
A6R11	0683-4735	4		RESISTOR 47K 5% .25W FC TC=-400/+800	01121	CB4735
A6R20	0683-1045	3		RESISTOR 100K 5% .25W FC TC=-400/+800	01121	CB1045
A6R21	0683-1045	3		RESISTOR 100K 5% .25W FC TC=-400/+800	01121	CB1045
A6R22	0683-1045	3		RESISTOR 100K 5% .25W FC TC=-400/+800	01121	CB1045
A6R30	0683-4725	2		RESISTOR 4.7K 5% .25W FC TC=-400/+700	01121	CB4725
A6R31	0683-4725	2		RESISTOR 4.7K 5% .25W FC TC=-400/+700	01121	CB4725
A6R32	0683-4725	2		RESISTOR 4.7K 5% .25W FC TC=-400/+700	01121	CB4725
A6R33	1810-0269	3		NETWORK-RES 9-SIP10.0K OHM X 8	28480	1810-0269
A6R34	0683-1015	7		RESISTOR 100 5% .25W FC TC=-400/+500	01121	CB1015
A6R35	0683-1025	9		RESISTOR 1K 5% .25W FC TC=-400/+600	01121	CB1025
A6R36	0683-4725	2		RESISTOR 4.7K 5% .25W FC TC=-400/+700	01121	CB4725
A6R37	0683-3325	6		RESISTOR 3.3K 5% .25W FC TC=-400/+700	01121	CB3325
A6R38	0683-3325	6		RESISTOR 3.3K 5% .25W FC TC=-400/+700	01121	CB3325
A6R39	0683-3325	6		RESISTOR 3.3K 5% .25W FC TC=-400/+700	01121	CB3325
A6R40	0683-1055	5	1	RESISTOR 1M 5% .25W FC TC=-800/+900	01121	CB1055
A6R41	0683-1065	7		RESISTOR 10M 5% .25W CC TC=-900/+1100	01121	CB1065
A6R42	0683-1025	9		RESISTOR 1K 5% .25W FC TC=-400/+600	01121	CB1025
A6R43	0683-1025	9		RESISTOR 1K 5% .25W FC TC=-400/+600	01121	CB1025
A6R44	0683-4725	2		RESISTOR 4.7K 5% .25W FC TC=-400/+700	01121	CB4725
A6R45	0683-4705	8		RESISTOR 47 5% .25W FC TC=-400/+500	01121	CB4705
A6R46	0698-0082			RESISTOR 464 1%		
A6S1	3101-1856	5	3	SWITCH-SL 8-1A DIP-SLIDE-ASSY .1A 50VDC	28480	3101-1856
A6S2	3101-1856	5		SWITCH-SL 8-1A DIP-SLIDE-ASSY .1A 50VDC	28480	3101-1856
A6S4	1251-4822	6		CONNECTOR 3-PIN M POST TYPE	28480	1251-4822
A6S5	1251-4822	6		CONNECTOR 3-PIN M POST TYPE	28480	1251-4822
A6S6	1251-4822	6		CONNECTOR 3-PIN M POST TYPE	28480	1251-4822
A6U1	1820-2058	3	4	IC MISC TTL S QUAD	28480	1820-2058
A6U2	1820-2058	3		IC MISC TTL S QUAD	28480	1820-2058
A6U3	1820-2058	3		IC MISC TTL S QUAD	28480	1820-2058
A6U4	1820-2058	3		IC MISC TTL S QUAD	28480	1820-2058
A6U5	1820-1199	1		IC INV TTL LS HEX 1-INP	01295	SN74LS04N
A6U6	1820-1759	9	8	IC BFR TTL LS NON-INV OCTL	27014	DM81LS97N
A6U7	1820-2549	5	1	IC-8291A	28480	
A6U8	1820-1216	3	6	IC DCDR TTL LS 3-TO-8-LINE 3-INP	01295	SN74LS138N
A6U9	1820-1759	9		IC BFR TTL LS NON-INV OCTL	27014	DM81LS97N
A6U10	1820-1759	9		IC BFR TTL LS NON-INV OCTL	27014	DM81LS97N
A6U11	1820-1196	8		IC FF TTL LS D-TYPE POS-EDGE-TRIG COM	01295	SN74LS174N
A6U13	1820-1278	7		IC CNTR TTL LS BIN UP/DOWN SYNCHRO	01295	SN74LS191N
A6U14	1820-1201	6	3	IC GATE TTL LS AND QUAD 2-INP	01295	SN74LS08N
A6U15	1820-1416	5		IC SCHMITT-TRIG TTL LS INV HEX 1-INP	01295	SN74LS14N
A6U16	1820-1197	9		IC GATE TTL LS NAND QUAD 2-INP	01295	SN74LS00N
A6U17	1820-1112	8		IC FF TTL LS D-TYPE POS-EDGE-TRIG	01295	SN74LS74AN
A6U18	1820-1478	9	1	IC CNTR TTL LS BIN ASYNCHRO	01295	SN74LS93N
A6U19	1820-1199	1		IC INV TTL LS HEX 1-INP	01295	SN74LS04N
A6U20	1820-1490	5	1	IC CNTR TTL LS DECD ASYNCHRO	01295	SN74LS90N
A6U21	1820-0751	9	1	IC CNTR TTL DECD NEG-EDGE-TRIG PRESET	01295	SN74196N
A6U23	1820-1430	3		IC CNTR TTL LS BIN SYNCHRO POS-EDGE-TRIG	01295	SN74LS161AN
A6U24	1820-1197	9		IC GATE TTL LS NAND QUAD 2-INP	01295	SN74LS00N
A6U30	1820-1730	6	5	IC FF TTL LS D-TYPE POS-EDGE-TRIG COM	01295	SN74LS273N
A6U31	1820-1730	6		IC FF TTL LS D-TYPE POS-EDGE-TRIG COM	01295	SN74LS273N
A6U32	1820-1759	9		IC BFR TTL LS NON-INV OCTL	27014	DM81LS97N
A6U33	1820-1730	6		IC FF TTL LS D-TYPE POS-EDGE-TRIG COM	01295	SN74LS273N
A6U34	1820-1199	1		IC INV TTL LS HEX 1-INP	01295	SN74LS04N
A6U35	1820-1201	6		IC GATE TTL LS AND QUAD 2-INP	01295	SN74LS08N
A6U36	1820-1197	9		IC GATE TTL LS NAND QUAD 2-INP	01295	SN74LS00N
A6U37	1820-1278	7		IC CNTR TTL LS BIN UP/DOWN SYNCHRO	01295	SN74LS191N
A6U38	1820-1278	7		IC CNTR TTL LS BIN UP/DOWN SYNCHRO	01295	SN74LS191N
A6U39	1820-1278	7		IC CNTR TTL LS BIN UP/DOWN SYNCHRO	01295	SN74LS191N
A6U40	1820-1423	4	1	IC MV TTL LS MONOSTBL RETRIG DUAL	01295	SN74LS123N
A6U41	1820-1112	8		IC FF TTL LS D-TYPE POS-EDGE-TRIG	01295	SN74LS74AN
A6U42	1820-1112	8		IC FF TTL LS D-TYPE POS-EDGE-TRIG	01295	SN74LS74AN
A6U43	1820-1112	8		IC FF TTL LS D-TYPE POS-EDGE-TRIG	01295	SN74LS74AN
A6U44	1820-1216	3		IC DCDR TTL LS 3-TO-8-LINE 3-INP	01295	SN74LS138N
A6U45	1820-1197	9		IC GATE TTL LS NAND QUAD 2-INP	01295	SN74LS00N
A6U46	1820-1278	7		IC CNTR TTL LS BIN UP/DOWN SYNCHRO	01295	SN74LS191N
A6U47	1820-1112	8		IC FF TTL LS D-TYPE POS-EDGE-TRIG	01295	SN74LS74AN

See introduction to this section for ordering information
*Indicates factory selected value

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A6U48	1820-1278	7		IC CNTR TTL LS BIN UP/DOWN SYNCHRO	01295	SN74LS191N
A6U49	1820-1278	7		IC CNTR TTL LS BIN UP/DOWN SYNCHRO	01295	SN74LS191N
A6U50	1820-1278	7		IC CNTR TTL LS BIN UP/DOWN SYNCHRO	01295	SN74LS191N
A6U51	1820-1278	7		IC CNTR TTL LS BIN UP/DOWN SYNCHRO	01295	SN74LS191N
A6U52	1820-1278	7		IC CNTR TTL LS BIN UP/DOWN SYNCHRO	01295	SN74LS191N
A6U53	1820-1278	7		IC CNTR TTL LS BIN UP/DOWN SYNCHRO	01295	SN74LS191N
A6U54	1820-1759	9		IC BFR TTL LS NON-INV OCTL	27014	DMB1LS97N
A6U55	1820-1278	7		IC CNTR TTL LS BIN UP/DOWN SYNCHRO	01295	SN74LS191N
A6U56	1820-1759	9		IC BFR TTL LS NON-INV OCTL	27014	DMB1LS97N
A6U57	1820-1278	7		IC CNTR TTL LS BIN UP/DOWN SYNCHRO	01295	SN74LS191N
A6U58	1820-1759	9		IC BFR TTL LS NON-INV OCTL	27014	DMB1LS97N
A6U60	1820-1240	3	1	IC DCDR TTL S 3-TO-8-LINE 3-INP	01295	SN74LS138N
A6U61	1820-1199	1		IC INV TTL LS HEX 1-INP	01295	SN74LS04N
A6U62	1820-1195	7	1	IC FF TTL LS D-TYPE POS-EDGE-TRIG COM	01295	SN74LS175N
A6U63	1820-1975	1	1	IC SHF-RCTR TTL LS NEG-EDGE-TRIG PRL-IN	01295	SN74LS165N
A6U64	1820-1278	7		IC CNTR TTL LS BIN UP/DOWN SYNCHRO	01295	SN74LS191N
A6U65	1820-1196	8		IC FF TTL LS D-TYPE POS-EDGE-TRIG COM	01295	SN74LS174N
A6U66	1820-1197	9		IC GATE TTL LS NAND QUAD 2-INP	01295	SN74LS00N
A6U67	1820-1199	1		IC INV TTL LS HEX 1-INP	01295	SN74LS04N
A6U68	1820-2075	4	1	IC MISC TTL LS	01295	SN74LS245N
A6U69	1820-1202	7		IC GATE TTL LS NAND TPL 3-INP	01295	SN74LS10N
A6U70	1818-1330	7	4	IC CMOS 4096 (4K) RAM STAT 300-NS 3-S	0003J	UPD444C-1
A6U71	1818-1330	7		IC CMOS 4096 (4K) RAM STAT 300-NS 3-S	0003J	UPD444C-1
A6U72	1818-1330	7		IC CMOS 4096 (4K) RAM STAT 300-NS 3-S	0003J	UPD444C-1
A6U73	1818-1330	7		IC CMOS 4096 (4K) RAM STAT 300-NS 3-S	0003J	UPD444C-1
A6U74	04192-85001	9	1	IC-PROM PROGRAMMED	28480	04192-85001
A6U75	04192-85002	9	1	IC-PROM PROGRAMMED	28480	04192-85002
A6U76	04192-85103	6	1	IC-PROM PROGRAMMED	28480	04192-85103
A6U77	04192-85004	8	1	IC-PROM PROGRAMMED	28480	04192-85004
A6U78	04192-85005	5	1	IC-PROM PROGRAMMED	28480	04192-85005
A6U79	04192-85006	7	1	IC-PROM PROGRAMMED	28480	04192-85006
A6U80	04192-85007	2	1	IC-PROM PROGRAMMED	28480	04192-85007
A6U81	04192-85008	6	1	IC-PROM PROGRAMMED	28480	04192-85008
A6U82	04192-85009	1	1	IC-PROM PROGRAMMED	28480	04192-85009
A6U83	04192-85010	5	1	IC-PROM PROGRAMMED	28480	04192-85010
A6U84	04192-85111	0	1	IC-PROM PROGRAMMED	28480	04192-85111
A6U85	04192-85012	4	1	IC-PROM PROGRAMMED	28480	04192-85012
A6U86	04192-85113	8	1	IC-PROM PROGRAMMED	28480	04192-85113
A6U87	04192-85114	7	1	IC-PROM PROGRAMMED	28480	04192-85114
A6U90	1820-0628	9	4	IC TTL 64-BIT RAM STAT 60-NS 0-C	01295	SN7489N
A6U91	1820-0628	9		IC TTL 64-BIT RAM STAT 60-NS 0-C	01295	SN7489N
A6U92	1820-0545	9	1	IC CNTR TTL BIN UP/DOWN SYNCHRO	01295	SN74191N
A6U93	1820-0628	9		IC TTL 64-BIT RAM STAT 60-NS 0-C	01295	SN7489N
A6U94	1820-0628	9		IC TTL 64-BIT RAM STAT 60-NS 0-C	01295	SN7489N
A6U95	1820-1074	1		IC DRVR TTL NOR QUAD 2-INP	01295	SN74128N
A6U96	1820-1202	7		IC GATE TTL LS NAND TPL 3-INP	01295	SN74LS10N
A6U97	1820-1199	1		IC INV TTL LS HEX 1-INP	01295	SN74LS04N
A6U98	1820-1416	5		IC SCHMITT-TRIG TTL LS INV HEX 1-INP	01295	SN74LS14N
A6U99	1820-1112	8		IC FF TTL LS D-TYPE POS-EDGE-TRIG	01295	SN74LS74AN
A6U100	1820-1201	6		IC GATE TTL LS AND QUAD 2-INP	01295	SN74LS08N
A6U101	1820-1759	9		IC BFR TTL LS NON-INV OCTL	27014	DMB1LS97N
A6U102	1820-1112	8		IC FF TTL LS D-TYPE POS-EDGE-TRIG	01295	SN74LS74AN
A6U103	1820-1200	5		IC INV TTL LS HEX	01295	SN74LS05N
A6U104	1820-1491	6	2	IC BFR TTL LS NON-INV HEX 1-INP	01295	SN74LS367AN
A6U105	1820-1216	3		IC DCDR TTL LS 3-TO-8-LINE 3-INP	01295	SN74LS138N
A6U106	1820-1207	2	1	IC GATE TTL LS NAND 8-INP	01295	SN74LS30N
A6U107	1820-1216	3		IC DCDR TTL LS 3-TO-8-LINE 3-INP	01295	SN74LS138N
A6U108	1820-1199	1		IC INV TTL LS HEX 1-INP	01295	SN74LS04N
A6U109	1820-1491	6		IC BFR TTL LS NON-INV HEX 1-INP	01295	SN74LS367AN
A6U110	1820-1216	3		IC DCDR TTL LS 3-TO-8-LINE 3-INP	01295	SN74LS138N
A6U111	1820-1216	3		IC DCDR TTL LS 3-TO-8-LINE 3-INP	01295	SN74LS138N
A6U112	1820-2024	3	2	IC DRVR TTL LS LINE DRVR OCTL	01295	SN74LS244N
A6U113	1820-2024	3		IC DRVR TTL LS LINE DRVR OCTL	01295	SN74LS244N
A6U114	1820-2358	6	1	IC-68800	28480	1820-2358
A6U115	1820-1416	5		IC SCHMITT-TRIG TTL LS INV HEX 1-INP	01295	SN74LS14N
A6U116	1820-1197	9		IC GATE TTL LS NAND QUAD 2-INP	01295	SN74LS00N
A6U117	1820-0661	0	1	IC GATE TTL OR QUAD 2-INP	01295	SN7432N
A6W1	8159-0005	0		WIRE 22AWG W PVC 1X22 80C	28480	8159-0005
A6W2	8159-0005	0		WIRE 22AWG W PVC 1X22 80C	28480	8159-0005
A6W3	1251-4787	2	2	SHUNT-DIP 8-POSITION	28480	1251-4787
A6W5	8159-0005	0		WIRE 22AWG W PVC 1X22 80C	28480	8159-0005
	0160-5186	3	5	NETWORK-CAPACITOR	28480	0160-5186
	0340-0220	8		BEADS	28480	0340-0220
	1258-0141	8		JUMPER-REM	28480	1258-0141
	3050-0082	8		WASHER-FL NM NO. 4 .116-IN-ID .188-IN-OD	28480	3050-0082
	8150-0143	9		WIRE 22AWG W/V 300V PVC 7X30 105C	28480	8150-0143

See introduction to this section for ordering information
*Indicates factory selected value

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A7	04192-66507	5	1	POWER SUPPLY BOARD ASSEMBLY (NOT INCLUDING THE SHIELD CASES)	28480	04192-66507
A7C1	0180-1075	3	3	CAPACITOR-FXD 2200 UF 16VDC AL	28480	0180-1075
A7C2	0180-1075	3		CAPACITOR-FXD 2200 UF 16VDC AL	28480	0180-1075
A7C3	0160-2055	9		CAPACITOR-FXD .01UF +80-20% 100VDC CER	28480	0160-2055
A7C4	0180-1050	4		CAPACITOR-FXD 100UF 25VDC	28480	0180-1050
A7C5	0180-1075	3		CAPACITOR-FXD 2200 UF 16VDC AL	28480	0180-1075
A7C6	0180-0291	3		CAPACITOR-FXD 1UF+-10% 35VDC TA	56289	150D105X9035A2
A7C7	0180-0229	7		CAPACITOR-FXD 33UF+-10% 10VDC TA	56289	150D336X9010B2
A7C8	0180-2980	1	4	CAPACITOR-FXD 1000UF+-20% 35VDC AL	28480	0180-2980
A7C9	0180-3036	0	4	CAPACITOR-FXD 220UF+100-10% 200VDC AL	28480	0180-3036
A7C10	0180-3036	0		CAPACITOR-FXD 220UF+100-10% 200VDC AL	28480	0180-3036
A7C11	0180-3036	0		CAPACITOR-FXD 220UF+100-10% 200VDC AL	28480	0180-3036
A7C12	0180-3036	0		CAPACITOR-FXD 220UF+100-10% 200VDC AL	28480	0180-3036
A7C13	0180-1050	4		CAPACITOR-FXD 100UF 25VDC	28480	0180-1050
A7C14	0180-2980	1		CAPACITOR-FXD 1000UF+-20% 35VDC AL	28480	0180-2980
A7C15	0180-0197	8	2	CAPACITOR-FXD 2.2UF+-10% 20VDC TA	56289	150D225X9020A2
A7C16	0160-3969	6	3	CAPACITOR-FXD .015UF +-20PF 250VAC(RMS)	28480	0160-3969
A7C17	0160-3456	6		CAPACITOR-FXD 1000PF +-10% 1KVDC CER	28480	0160-3456
A7C18	0160-3456	6		CAPACITOR-FXD 1000PF +-10% 1KVDC CER	28480	0160-3456
A7C19	0160-4834	2		CAPACITOR-FXD .047UF +-10% 100VDC CER	28480	0160-0127
A7C20	0160-0127	2		CAPACITOR-FXD 1UF +-20% 25VDC CER	28480	0160-0127
A7C21	0180-2980	1		CAPACITOR-FXD 1000UF+-20% 35VDC AL	28480	0180-2980
A7C22	0180-1050	4		CAPACITOR-FXD 100UF 25VDC	28480	0180-1050
A7C23	0180-1050	4		CAPACITOR-FXD 100UF 25VDC	28480	0180-1050
A7C24	0160-3969	6		CAPACITOR-FXD .015UF +-20PF 250VAC(RMS)	28480	0160-3969
A7C25	0160-3969	6		CAPACITOR-FXD .015UF +-20PF 250VAC(RMS)	28480	0160-3969
A7C26	0180-3035	9	4	CAPACITOR-FXD 10UF+100-10% 350VDC AL	28480	0180-3035
A7C27	0180-3035	9		CAPACITOR-FXD 10UF+100-10% 350VDC AL	28480	0180-3035
A7C28	0180-3035	9		CAPACITOR-FXD 10UF+100-10% 350VDC AL	28480	0180-3035
A7C29	0180-3035	9		CAPACITOR-FXD 10UF+100-10% 350VDC AL	28480	0180-3035
A7C30	0160-0127	2		CAPACITOR-FXD 1UF +-20% 25VDC CER	28480	0160-0127
A7C31	0160-3094	8	2	CAPACITOR-FXD .1UF +-10% 100VDC CER	28480	0160-3094
A7C32	0180-1704	5		CAPACITOR-FXD 47UF+-10% 6VDC TA	56289	150D476X9006B2
A7C33	0160-3914	1	1	CAPACITOR-FXD .01UF +-10% 100VDC CER	28480	0160-3914
A7C34	0180-1746	5		CAPACITOR-FXD 15UF+-10% 20VDC TA	56289	150D156X9020B2
A7C35	0180-1050	4		CAPACITOR-FXD 100UF 25VDC	28480	0180-1050
A7C36	0160-2055	9		CAPACITOR-FXD .01UF +80-20% 100VDC CER	28480	0160-2055
A7C37	0180-2980	1		CAPACITOR-FXD 1000UF+-20% 35VDC AL	28480	0180-2980
A7C38	0160-0127	2		CAPACITOR-FXD 1UF +-20% 25VDC CER	28480	0160-0127
A7C39	0160-3094	8		CAPACITOR-FXD .1UF +-10% 100VDC CER	28480	0160-3094
A7C40	0160-0945	2	1	CAPACITOR-FXD 910PF +-5% 100VDC MICA	28480	0160-0945
A7C41	0160-0157	8	1	CAPACITOR-FXD 4700PF +-10% 200VDC POLYE	28480	0160-0157
A7C42	0160-3694	4	1	CAPACITOR-FXD 330PF +-10% 100VDC CER	28480	0160-3694
A7C43	0180-1704	5		CAPACITOR-FXD 47UF+-10% 6VDC TA	56289	150D476X9006B2
A7CR1	1906-0080	9	1	DIODE-FW BRDG 600V 10A	28480	1906-0080
A7CR2	1901-1095	8	2	DIODE-PWR RECT 40V 15A DO-4	04713	MR1540
A7CR3	1901-1095	8		DIODE-PWR RECT 40V 15A DO-4	04713	MR1540
A7CR4	1902-1217	8	1	DIODE-ZNR 6.2V 5% DO-4 PD=10W TC=+.035%	28480	1902-1217
A7CR5	1902-3059	0		DIODE-ZNR 3.83V 5% DO-35 PD=.4W	28480	1902-3059
A7CR6	1901-0028	5	3	DIODE-PWR RECT 400V 750MA DO-29	28480	1901-0028
A7CR7	1902-0041	4		DIODE-ZNR 5.11V 5% DO-35 PD=.4W	28480	1902-0041
A7CR8	1902-1232	7	1	DIODE-ZNR 1N3997RA 5.6V 5% DO-4 PD=10W	04713	1N3997RA
A7CR9	1901-1086	7	6	DIODE-PWR RECT 50V 5A 200NS	04713	MR820
A7CR10	1901-1086	7		DIODE-PWR RECT 50V 5A 200NS	04713	MR820
A7CR11	1901-0685	7		DIODE-PWR RECT 200V 5A 200NS		
A7CR12	1901-0685	7		DIODE-PWR RECT 200V 5A 200NS		
A7CR13	1901-0685	7		DIODE-PWR RECT 200V 5A 200NS		
A7CR14	1901-0685	7		DIODE-PWR RECT 200V 5A 200NS		
A7CR15	1901-0662	3	2	DIODE-PWR RECT 100V 6A	04713	MR751
A7CR16	1901-0662	3		DIODE-PWR RECT 100V 6A	04713	MR751
A7CR17	1901-1065	2	4	DIODE-PWR RECT 1N4936 400V 1A 200NS	14936	1N4936
A7CR18	1901-0025	2	12	DIODE-GEN PRP 100V 200MA DO-7	28480	1901-0025
A7CR19	1901-0025	2		DIODE-GEN PRP 100V 200MA DO-7	28480	1901-0025
A7CR20	1901-0025	2		DIODE-GEN PRP 100V 200MA DO-7	28480	1901-0025
A7CR21	1901-0025	2		DIODE-GEN PRP 100V 200MA DO-7	28480	1901-0025
A7CR22	1902-0041	4		DIODE-ZNR 5.11V 5% DO-35 PD=.4W	28480	1902-0041
A7CR23	1902-0041	4		DIODE-ZNR 5.11V 5% DO-35 PD=.4W	28480	1902-0041
A7CR24	1901-0025	2		DIODE-GEN PRP 100V 200MA DO-7	28480	1901-0025
A7CR25	1901-0025	2		DIODE-GEN PRP 100V 200MA DO-7	28480	1901-0025
A7CR26	1901-0025	2		DIODE-GEN PRP 100V 200MA DO-7	28480	1901-0025
A7CR27	1902-3256	9	1	DIODE-ZNR 23.7V 5% DO-35 PD=.4W	28480	1902-3256
A7CR28	1901-0025	2		DIODE-GEN PRP 100V 200MA DO-7	28480	1901-0025
A7CR29	1901-0025	2		DIODE-GEN PRP 100V 200MA DO-7	28480	1901-0025
A7CR30	1901-1065	2		DIODE-PWR RECT 1N4936 400V 1A 200NS	14936	1N4936

See introduction to this section for ordering information
*Indicates factory selected value

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A7CR31	1901-1065	2	1	DIODE-PWR RECT 1N4936 400V 1A 200NS	14936	1N4936
A7CR32	1901-1065	2		DIODE-PWR RECT 1N4936 400V 1A 200NS	14936	1N4936
A7CR33	1906-0006	9		DIODE-FW BRDG 400V 1A	27777	VE48
A7CR34	1901-0025	2		DIODE-GEN PRP 100V 200MA DO-7	28480	1901-0025
A7CR35	1901-0025	2		DIODE-GEN PRP 100V 200MA DO-7	28480	1901-0025
A7CR36	1902-3171	7	1	DIODE-ZNR 11V 5% DO-35 PD=.4W TC=+.062%	28480	1902-3171
A7CR37	1902-0064	1		DIODE-ZNR 7.5V 5% DO-35 PD=.4W TC=+.05%	28480	1902-0064
A7CR38	1901-0025	2		DIODE-GEN PRP 100V 200MA DO-7	28480	1901-0025
A7CR39	1901-0025	1	DIODE-GEN PRP 100V 200MA DO-7	28480	1901-0025	
A7F1	2110-0304	4	1	FUSE 1.5A 250V TD 1.25X.25 UL	28480	2110-0304
A7F2	2110-0360	2		FUSE .75A 250V TD 1.25X.25 UL	75915	313.750
A7F3	2110-0012	1	1	FUSE .5A 250V NTD 1.25X.25 UL	28480	2110-0012
A7F4	2110-0651	1		FUSE .5A		
A7J1	1251-3837	1	1	CONNECTOR 4-PIN M UTILITY	28480	1251-3837
A7J2	1251-4246	8		CONNECTOR 3-PIN M POST TYPE	28480	1251-4246
A7J3	1251-3196	5		CONNECTOR 8-PIN M POST TYPE	28480	1251-3196
A7J4	1251-3197	6		CONNECTOR 12-PIN M POST TYPE	28480	1251-3197
A7J5	1251-3198	7		CONNECTOR 15-PIN M POST TYPE	28480	1251-3198
A7K1	0490-1312	9	1	RELAY 1C 6VDC-CDIL 1A 115VAC		
A7L1	9100-3139	5		INDUCTOR 75UH 15% .5DX.875LG	28480	9100-3139
A7L2	9140-0462	5	4	INDUCTOR 355UH	28480	9140-0462
A7L3	9100-3139	5		INDUCTOR 75UH 15% .5DX.875LG	28480	9100-3139
A7L4	9140-0464	7	1	INDUCTOR 446UH	28480	9140-0464
A7L5	9140-0465	8		INDUCTOR 833UH	28480	9140-0465
A7L6	9100-3139	5	5	INDUCTOR 75UH 15% .5DX.875LG	28480	9100-3139
A7L7	9100-3139	5		INDUCTOR 75UH 15% .5DX.875LG	28480	9100-3139
A7L8	9140-0463	6	1	INDUCTOR 10MH 6%	28480	9140-0463
A7L9	9140-0210	1		INDUCTOR RF-CH-MLD 100UH 5% .166DX.385LG	28480	9140-0210
A7L10	9140-0171	3	2	INDUCTOR RF-CH-MLD 40UH 10% .296DX.968LG	28480	9140-0171
A7L11	9140-0171	3		INDUCTOR RF-CH-MLD 40UH 10% .296DX.968LG	28480	9140-0171
A7Q1	1854-0215	1	1	TRANSISTOR NPN SI PD=350MW FT=300MHZ	04713	2N3904
A7Q2	1853-0012	4		TRANSISTOR PNP 2N2904A SI TO-39 PD=600MW	01295	2N2904A
A7Q3	1854-0215	1		TRANSISTOR NPN SI PD=350MW FT=300MHZ	04713	2N3904
A7Q4	1853-0344	5		TRANSISTOR PNP 2N5876 SI TO-3 PD=150W	04713	2N5876
A7Q5	1853-0012	4		TRANSISTOR PNP 2N2904A SI TO-39 PD=600MW	01295	2N2904A
A7Q6	1854-0624	6	2	TRANSISTOR NPN 2N6308 SI TO-3 PD=125W	04713	2N6308
A7Q7	1854-0624	6		TRANSISTOR NPN 2N6308 SI TO-3 PD=125W	04713	2N6308
A7Q8	1853-0012	4	2	TRANSISTOR PNP 2N2904A SI TO-39 PD=600MW	01295	2N2904A
A7Q9	1854-0013	7		TRANSISTOR NPN 2N2218A SI TO-5 PD=800MW	04713	2N2218A
A7Q10	1854-0389	0	1	TRANSISTOR NPN 2N4922 SI PD=30W FT=3MHZ	04713	2N4922
A7Q11	1854-0215	1	1	TRANSISTOR NPN SI PD=350MW FT=300MHZ	04713	2N3904
A7Q12	1854-0215	1		TRANSISTOR NPN SI PD=350MW FT=300MHZ	04713	2N3904
A7Q13	1854-0215	1		TRANSISTOR NPN SI PD=350MW FT=300MHZ	04713	2N3904
A7Q14	1853-0036	2		TRANSISTOR PNP SI PD=310MW FT=250MHZ	28480	1853-0036
A7Q15	1853-0012	4		TRANSISTOR PNP 2N2904A SI TO-39 PD=600MW	01295	2N2904A
A7Q16	1854-0013	7	1	TRANSISTOR NPN 2N2218A SI TO-5 PD=800MW	04713	2N2218A
A7Q17	1854-0215	1		TRANSISTOR NPN SI PD=350MW FT=300MHZ	04713	2N3904
A7R1	0690-1541	9	6	RESISTOR 150K 10% 1W CC TC=0+882	01121	CB1541
A7R2	0690-1541	9		RESISTOR 150K 10% 1W CC TC=0+882	01121	CB1541
A7R3	0813-0029	8	1	RESISTOR 1 3% 3W PW TC=0+-50	28480	0813-0029
A7R4	0699-1058	4		RESISTOR 22 5% 2W PW TC=0+-400		
A7R5	0699-1058	4	RESISTOR 22 5% 2W PW TC=0+-400			
A7R6	0683-1015	7	7	RESISTOR 100 5% .25W FC TC=-400/+500	01121	CB1015
A7R7	0683-1015	7		RESISTOR 100 5% .25W FC TC=-400/+500	01121	CB1015
A7R8	0683-1025	9	9	RESISTOR 1K 5% .25W FC TC=-400/+600	01121	CB1025
A7R9	0683-4705	8		RESISTOR 47 5% .25W FC TC=-400/+500	01121	CB4705
A7R10	0683-4705	8	RESISTOR 47 5% .25W FC TC=-400/+500	01121	CB4705	
A7R11	0757-0399	5	3	RESISTOR 82.5 1% .125W F TC=0+-100	24546	C4-1/8-T0-82R5-F
A7R12	0683-4735	4		RESISTOR 47K 5% .25W FC TC=-400/+800	01121	CB4735
A7R13	0683-1025	9		RESISTOR 1K 5% .25W FC TC=-400/+600	01121	CB1025
A7R14	0757-0401	0		RESISTOR 100 1% .125W F TC=0+-100	24546	C4-1/8-T0-101-F
A7R15	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A7R16	0757-0442	9	9	RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A7R17	0683-2225	1		RESISTOR 2.2K 5% .25W FC TC=-400/+700		
A7R18	0683-1025	9	1	RESISTOR 1K 5% .25W FC TC=-400/+600	01121	CB1025
A7R19	0683-3325	6		RESISTOR 3.3K 5% .25W FC TC=-400/+700	01121	CB3325
A7R20	0683-2225	3	RESISTOR 2.2K 5% .25W FC TC=-400/+700	01121	CB2225	
A7R21	0683-1035	1	1	RESISTOR 10K 5% .25W FC TC=-400/+700	01121	CB1035
A7R22	0683-1035	1		RESISTOR 10K 5% .25W FC TC=-400/+700	01121	CB1035
A7R23	0683-4715	0	1	RESISTOR 470 5% .25W FC TC=-400/+600	01121	CB4715
A7R24	0690-1541	9		RESISTOR 150K 10% 1W CC TC=0+882	01121	CB1541
A7R25	0690-1541	9	RESISTOR 150K 10% 1W CC TC=0+882	01121	CB1541	
A7R26	0683-1025	9	9	RESISTOR 1K 5% .25W FC TC=-400/+600	01121	CB1025
A7R27	0683-1005	5		RESISTOR 10 5% .25W FC TC=-400/+500	01121	CB1005
A7R28	0683-2215	1	1	RESISTOR 220 5% .25W FC TC=-400/+600	01121	CB2215
A7R29	0683-2215	1		RESISTOR 220 5% .25W FC TC=-400/+600	01121	CB2215
A7R30	0757-0401	0	1	RESISTOR 100 1% .125W F TC=0+-100	24546	C4-1/8-T0-101-F

See introduction to this section for ordering information
*Indicates factory selected value

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A7R31	0757-0401	0		RESISTOR 100 1% .125W F TC=0+-100	24546	C4-1/8-T0-101-F
A7R32	0764-0015	7	1	RESISTOR 560 5% 2W MO TC=0+-200	28480	0764-0015
A7R33	0683-0275	9	4	RESISTOR 2.7 5% .25W FC TC=-400/+500	01121	CB2765
A7R34	0683-0275	9		RESISTOR 2.7 5% .25W FC TC=-400/+500	01121	CB2765
A7R35	0683-0275	9		RESISTOR 2.7 5% .25W FC TC=-400/+500	01121	CB2765
A7R36	0683-2205	9		RESISTOR 22 5% .25W FC TC=-400/+500	01121	CB2205
A7R37	0683-1525	4		RESISTOR 1.5K 5% .25W FC TC=-400/+700	01121	CB1525
A7R38	0683-1525	4		RESISTOR 1.5K 5% .25W FC TC=-400/+700	01121	CB1525
A7R39	0683-2215	1		RESISTOR 220 5% .25W FC TC=-400/+600	01121	CB2215
A7R40	0683-1215	0		RESISTOR 120 5% .25W FC TC=-400/+600	01121	CB4715
A7R41	0690-1541	9		RESISTOR 150K 10% 1W CC TC=0+882	01121	GB1541
A7R42	0690-1541	9		RESISTOR 150K 10% 1W CC TC=0+882	01121	GB1541
A7R43	0683-1005	5		RESISTOR 10 5% .25W FC TC=-400/+500	01121	CB1005
A7R44	0683-0335	2	2	RESISTOR 3.3 5% .25W FC TC=-400/+500	01121	CB3365
A7R45	0683-1005	5		RESISTOR 10 5% .25W FC TC=-400/+500	01121	CB1005
A7R46	0683-0335	2		RESISTOR 3.3 5% .25W FC TC=-400/+500	01121	CB3365
A7R47	0698-4435	2	1	RESISTOR 2.49K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2491-F
A7R48	0698-0883	8		RESISTOR 1.96K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1961-F
A7R49	0683-4745	6	1	RESISTOR 470K 5% .25W FC TC=-800/+900	01121	CB4745
A7R50	0683-1025	9		RESISTOR 1K 5% .25W FC TC=-400/+600	01121	CB1025
A7R51	0683-1025	9		RESISTOR 1K 5% .25W FC TC=-400/+600	01121	CB1025
A7R52	0683-1025	9		RESISTOR 1K 5% .25W FC TC=-400/+600	01121	CB1025
A7R53	0683-1025	9		RESISTOR 1K 5% .25W FC TC=-400/+600	01121	CB1025
A7R54	0683-1025	3		RESISTOR 1K 5% .25W FC TC=-400/+700	01121	CB1025
A7R55	0683-1025	9		RESISTOR 1K 5% .25W FC TC=-400/+600	01121	CB1025
A7R56	0683-1025	9		RESISTOR 1K 5% .25W FC TC=-400/+600	01121	CB1025
A7R57	0683-1025	9		RESISTOR 1K 5% .25W FC TC=-400/+600	01121	CB1025
A7R58	0683-4725	2		RESISTOR 4.7K 5% .25W FC TC=-400/+700	01121	CB4725
A7R59	0683-0275	9		RESISTOR 2.7 5% .25W FC TC=-400/+500	01121	CB2765
A7R60	0683-1025	9		RESISTOR 1K 5% .25W FC TC=-400/+600	01121	CB1025
A7R61	0683-1025	9		RESISTOR 1K 5% .25W FC TC=-400/+600	01121	CB1025
A7R62	2100-3211	7		RESISTOR-TRMR 1K 10% C TOP-ADJ 1-TRN	28480	2100-3211
A7R63	0757-0402	1	1	RESISTOR 110 1% .125W F TC=0+-100	24546	C4-1/8-T0-111-F
A7R64	0683-1025	9		RESISTOR 1K 5% .25W FC TC=-400/+600	01121	CB1025
A7R65	0757-0401	0		RESISTOR 100 1% .125W F TC=0+-100	24546	C4-1/8-T0-101-F
A7R66	2100-0567	7		RESISTOR-TRMR 2K 10% C TOP-ADJ 1-TRN	24546	C4-1/8-T0-3011-F
A7R67	0757-0273	4	1	RESISTOR 3.01K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3011-F
A7R68	0683-4725	2		RESISTOR 4.7K 5% .25W FC TC=-400/+700	01121	CB4725
A7R69	0683-4735	4		RESISTOR 47K 5% .25W FC TC=-400/+800	01121	CB4735
A7R70	0683-1035	1		RESISTOR 10K 5% .25W FC TC=-400/+700	01121	CB1035
A7R71	0683-1025	9		RESISTOR 1K 5% .25W FC TC=-400/+600	01121	CB1025
A7R72	0683-1025	9		RESISTOR 1K 5% .25W FC TC=-400/+600	01121	CB1025
A7R73	0698-0085	0	1	RESISTOR 2.61K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2611-F
A7R74	0757-0439	4		RESISTOR 6.81K 1% .125W F TC=0+-100	24546	C4-1/8-T0-6811-F
A7R75	0683-2225	3		RESISTOR 2.2K 5% .25W FC TC=-400/+700	01121	CB2225
A7R76	0683-4725	2		RESISTOR 4.7K 5% .25W FC TC=-400/+700	01121	CB4725
A7R77	0683-4725	2		RESISTOR 4.7K 5% .25W FC TC=-400/+700	01121	CB4725
A7R78	0683-1025	9		RESISTOR 1K 5% .25W FC TC=-400/+600	01121	CB1025
A7R79	0811-1674			RESISTOR 4.7 2W		
A7R80	0683-1025			RESISTOR 1K		
A7RT1	0839-0247			THERMISTOR 10Ω		
A7RV1	0837-0106	2	2	VARIATOR	28480	0837-0106
A7RV2	0837-0106	2		VARIATOR	28480	0837-0106
A7T1	9100-0889	6	1	TRANSFORMER-PULSE	28480	9100-0889
A7T2	04192-61803	4	2	TRANSFORMER-PULSE	28480	04192-61803
A7T3	04192-61804	5	2	TRANSFORMER-PULSE	28480	04192-61804
A7T4	04192-61803	4		TRANSFORMER-PULSE	28480	04192-61803
A7T5	04192-61804	5		TRANSFORMER-PULSE	28480	04192-61804
A7U1	1826-0138	8		IC COMPARATOR GP QUAD 14-DIP-P PKG	01295	LM339N
A7U2	1826-0276	5	1	IC 78L05A V RGLTR TO-92	04713	MC78L05ACP
A7U3	1820-0493	6	1	IC OP AMP GP 8-DIP-P PKG	27014	LK307N
A7U4	1990-0663	1	1	OPTO-ISOLATOR LED-PXSTR IF=40MA-MAX	28480	1990-0663
A7U5	1826-0956	9	1	IC 3524 MODULATOR 16-DIP-C	01295	SG3524N
A7U6	1820-0196	6	1	IC 723 V RGLTR TO-100	04713	MC1723CG
	0340-0220	8		BEADS	28480	0340-0220
	0380-0744	5	4	SPACER-RND .093 LG	28480	0380-0744
	0590-0025	0	7	NUT-HEX-PLSTC LKG 6-32-THD .172-IN-THK	28480	0590-0025
	1205-0310	2	3	HEAT SINK SGL TO-3-CS	28480	1205-0310
	1400-0482	3	2	CABLE TIE .062-3-DIA .14-WD NYL	28480	1400-0482
A7Z20	2110-0269	0	6	FUSEHOLDER-CLIP TYPE.25D-FUSE	28480	2110-0269
	2190-0008	3	7	WASHER-LK EXT T NO. 6 .141-IN-ID	28480	2190-0008
	2360-0121	2	7	SCREW-MACH 6-32 .5-IN-LG PAN-HD-POZI	00000	ORDER BY DESCRIPTION
	2740-0003	5	4	NUT-HEX-W/LKWR 10-32-THD .125-IN-THK	00000	ORDER BY DESCRIPTION
	3050-0378	5	2	WASHER-FL NM NO. 10 .2-IN-ID .438-IN-OD	28480	3050-0378

See introduction to this section for ordering information
*Indicates factory selected value

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
	0150-0451	2		WIRE 24AWG Y 300V PVC 7X32 80C	28480	0150-0451
	04192-01207	6	1	HEAT SINK	28480	04192-01207
	04192-01208	7	1	HEAT SINK	28480	04192-01208
AB	04192-66508	6	1	FLOATING POWER SUPPLY/BIAS SUPPLY BOARD (NOT INCLUDING THE SHIELD CASES)	28480	04192-66508
ABC1	0180-1083	3		CAPACITOR-FXD 33UF 25VDC AL	28480	0180-1083
ABC2	0180-1083	3		CAPACITOR-FXD 33UF 25VDC AL	28480	0180-1083
ABC3	0180-1083	3		CAPACITOR-FXD 33UF 25VDC AL	28480	0180-1083
ABC4	0180-1083	3		CAPACITOR-FXD 33UF 25VDC AL	28480	0180-1083
ABC5	0180-1083	3		CAPACITOR-FXD 33UF 25VDC AL	28480	0180-1083
ABC6	0180-1083	3		CAPACITOR-FXD 33UF 25VDC AL	28480	0180-1083
ABC7	0180-1083	3		CAPACITOR-FXD 33UF 25VDC AL	28480	0180-1083
ABC8	0180-1083	3		CAPACITOR-FXD 33UF 25VDC AL	28480	0180-1083
ABC9	0180-1083	3		CAPACITOR-FXD 33UF 25VDC AL	28480	0180-1083
ABC10	0180-1083	3		CAPACITOR-FXD 33UF 25VDC AL	28480	0180-1083
ABC11	0180-1083	3		CAPACITOR-FXD 33UF 25VDC AL	28480	0180-1083
ABC12	0160-0127	2		CAPACITOR-FXD 1UF +-20% 25VDC CER	28480	0160-0127
ABC13	0180-1083	3		CAPACITOR-FXD 33UF 25VDC AL	28480	0180-1083
ABC14	0160-4299	7	4	CAPACITOR-FXD 2200PF +-20% 25VDC CER	56289	C067F251F222MS22-CDH
ABC15	0180-1083	3		CAPACITOR-FXD 33UF 25VDC AL	28480	0180-1083
ABC16	0150-0121	5	6	CAPACITOR-FXD .1UF +80-20% 50VDC CER	28480	0150-0121
ABC17	0180-1083	3		CAPACITOR-FXD 33UF 25VDC AL	28480	0180-1083
ABC18	0180-1083	3		CAPACITOR-FXD 33UF 25VDC AL	28480	0180-1083
ABC19	0180-1083	3		CAPACITOR-FXD 33UF 25VDC AL	28480	0180-1083
ABC20	0180-1083	3		CAPACITOR-FXD 33UF 25VDC AL	28480	0180-1083
ABC21	0180-1083	3		CAPACITOR-FXD 33UF 25VDC AL	28480	0180-1083
ABC22	0180-1083	3		CAPACITOR-FXD 33UF 25VDC AL	28480	0180-1083
ABC23	0160-3456	6		CAPACITOR-FXD 1000PF +-10% 1KVDC CER	28480	0160-3456
ABC24	0160-3455	5	10	CAPACITOR-FXD 470PF +-10% 1KVDC CER	28480	0160-3455
ABC25	0160-3455	5		CAPACITOR-FXD 470PF +-10% 1KVDC CER	28480	0160-3455
ABC26	0160-2055	9		CAPACITOR-FXD .01UF +80-20% 100VDC CER	28480	0160-2055
ABC27	0180-1083	3		CAPACITOR-FXD 33UF 25VDC AL	28480	0180-1083
ABC28	0180-1083	3		CAPACITOR-FXD 33UF 25VDC AL	28480	0180-1083
ABC29	0180-1083	3		CAPACITOR-FXD 33UF 25VDC AL	28480	0180-1083
ABC30	0160-3454	4	5	CAPACITOR-FXD 220PF +-10% 1KVDC CER	28480	0160-3454
ABC31	0160-0127	2		CAPACITOR-FXD 1UF +-20% 25VDC CER	28480	0160-0127
ABC32	0180-1083	3		CAPACITOR-FXD 33UF 25VDC AL	28480	0180-1083
ABC33	0160-4299	7		CAPACITOR-FXD 2200PF +-20% 25VDC CER	56289	C067F251F222MS22-CDH
ABC34	0180-1083	3		CAPACITOR-FXD 33UF 25VDC AL	28480	0180-1083
ABC35	0150-0121	5		CAPACITOR-FXD .1UF +80-20% 50VDC CER	28480	0150-0121
ABC36	0180-1083	3		CAPACITOR-FXD 33UF 25VDC AL	28480	0180-1083
ABC37	0180-1083	3		CAPACITOR-FXD 33UF 25VDC AL	28480	0180-1083
ABC38	0180-1083	3		CAPACITOR-FXD 33UF 25VDC AL	28480	0180-1083
ABC39	0180-1083	3		CAPACITOR-FXD 33UF 25VDC AL	28480	0180-1083
ABC40	0180-1083	3		CAPACITOR-FXD 33UF 25VDC AL	28480	0180-1083
ABC41	0180-1083	3		CAPACITOR-FXD 33UF 25VDC AL	28480	0180-1083
ABC42	0160-3456	6		CAPACITOR-FXD 1000PF +-10% 1KVDC CER	28480	0160-3456
ABC43	0160-3455	5		CAPACITOR-FXD 470PF +-10% 1KVDC CER	28480	0160-3455
ABC44	0160-3455	5		CAPACITOR-FXD 470PF +-10% 1KVDC CER	28480	0160-3455
ABC45	0160-2055	9		CAPACITOR-FXD .01UF +80-20% 100VDC CER	28480	0160-2055
ABC46	0180-1083	3		CAPACITOR-FXD 33UF 25VDC AL	28480	0180-1083
ABC47	0180-1083	3		CAPACITOR-FXD 33UF 25VDC AL	28480	0180-1083
ABC48	0180-1083	3		CAPACITOR-FXD 33UF 25VDC AL	28480	0180-1083
ABC49	0160-3454	4		CAPACITOR-FXD 220PF +-10% 1KVDC CER	28480	0160-3454
ABC50	0160-0127	2		CAPACITOR-FXD 1UF +-20% 25VDC CER	28480	0160-0127
ABC51	0180-1083	3		CAPACITOR-FXD 33UF 25VDC AL	28480	0180-1083
ABC52	0160-4299	7		CAPACITOR-FXD 2200PF +-20% 25VDC CER	56289	C067F251F222MS22-CDH
ABC53	0180-1083	3		CAPACITOR-FXD 33UF 25VDC AL	28480	0180-1083
ABC54	0150-0121	5		CAPACITOR-FXD .1UF +80-20% 50VDC CER	28480	0150-0121
ABC55	0180-1083	3		CAPACITOR-FXD 33UF 25VDC AL	28480	0180-1083
ABC56	0180-1083	3		CAPACITOR-FXD 33UF 25VDC AL	28480	0180-1083
ABC57	0180-1083	3		CAPACITOR-FXD 33UF 25VDC AL	28480	0180-1083
ABC58	0180-1083	3		CAPACITOR-FXD 33UF 25VDC AL	28480	0180-1083
ABC59	0180-1083	3		CAPACITOR-FXD 33UF 25VDC AL	28480	0180-1083
ABC60	0180-1083	3		CAPACITOR-FXD 33UF 25VDC AL	28480	0180-1083
ABC61	0160-3456	6		CAPACITOR-FXD 1000PF +-10% 1KVDC CER	28480	0160-3456
ABC62	0160-3454	4		CAPACITOR-FXD 220PF +-10% 1KVDC CER	28480	0160-3454
ABC63	0160-3455	5		CAPACITOR-FXD 470PF +-10% 1KVDC CER	28480	0160-3455
ABC64	0160-3455	5		CAPACITOR-FXD 470PF +-10% 1KVDC CER	28480	0160-3455
ABC65	0160-2055	9		CAPACITOR-FXD .01UF +80-20% 100VDC CER	28480	0160-2055
ABC66	0180-1083	3		CAPACITOR-FXD 33UF 25VDC AL	28480	0180-1083
ABC67	0180-1083	3		CAPACITOR-FXD 33UF 25VDC AL	28480	0180-1083
ABC68	0180-1081	1	12	CAPACITOR-FXD 47UF 50VDC AL	28480	0180-1081
ABC69	0160-3466	8		CAPACITOR-FXD 100PF +-10% 1KVDC CER	28480	0160-3466
ABC70	0180-1083	3		CAPACITOR-FXD 33UF 25VDC AL	28480	0180-1083

See introduction to this section for ordering information
*Indicates factory selected value

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
ABC71	0140-0196	1	1	CAPACITOR-FXD 150PF +-5% 300VDC MICA		
ABC72	0180-1081	1		CAPACITOR-FXD 47UF 50VDC AL	28480	0180-1081
ABC73	0180-1081	1		CAPACITOR-FXD 47UF 50VDC AL	28480	0180-1081
ABC74	0180-1081	1		CAPACITOR-FXD 47UF 50VDC AL	28480	0180-1081
ABC75	0180-1081	1		CAPACITOR-FXD 47UF 50VDC AL	28480	0180-1081
ABC76	0180-1081	1		CAPACITOR-FXD 47UF 50VDC AL	28480	0180-1081
ABC77	0180-1081	1		CAPACITOR-FXD 47UF 50VDC AL	28480	0180-1081
ABC78	0180-1081	1		CAPACITOR-FXD 47UF 50VDC AL	28480	0180-1081
ABC79	0160-3455	5		CAPACITOR-FXD 470PF +-10% 1KVDC CER	28480	0160-3455
ABC80	0180-1081	1		CAPACITOR-FXD 47UF 50VDC AL	28480	0180-1081
ABC81	0160-2055	9		CAPACITOR-FXD .01UF +80-20% 100VDC CER	28480	0160-2055
ABC82	0160-4299	7		CAPACITOR-FXD 2200PF +-20% 250VDC CER	56289	C067F251F222MS22-CDH
ABC83	0180-1083	3		CAPACITOR-FXD 33UF 25VDC AL	28480	0180-1083
ABC84	0160-0127	2		CAPACITOR-FXD 1UF +-20% 25VDC CER	28480	0160-0127
ABC85	0150-0121	5		CAPACITOR-FXD .1UF +80-20% 50VDC CER	28480	0150-0121
ABC86	0150-0121	5		CAPACITOR-FXD .1UF +80-20% 50VDC CER	28480	0150-0121
ABC87	0160-0127	2		CAPACITOR-FXD 1UF +-20% 25VDC CER	28480	0160-0127
ABC88	0160-2055	9		CAPACITOR-FXD .01UF +80-20% 100VDC CER	28480	0160-2055
ABC89	0180-1081	1		CAPACITOR-FXD 47UF 50VDC AL	28480	0180-1081
ABC90	0160-3466	8		CAPACITOR-FXD 100PF +-10% 1KVDC CER	28480	0160-3466
ABC91	0150-0121	5		CAPACITOR-FXD .1UF +80-20% 50VDC CER	28480	0150-0121
ABC92	0180-1083	3		CAPACITOR-FXD 33UF 25VDC AL	28480	0180-1083
ABC93	0180-1083	3		CAPACITOR-FXD 33UF 25VDC AL	28480	0180-1083
ABC94	0180-1083	3		CAPACITOR-FXD 33UF 25VDC AL	28480	0180-1083
ABC95	0180-1083	3		CAPACITOR-FXD 33UF 25VDC AL	28480	0180-1083
ABC96	0180-1083	3		CAPACITOR-FXD 33UF 25VDC AL	28480	0180-1083
ABC97	0180-1083	3		CAPACITOR-FXD 33UF 25VDC AL	28480	0180-1083
ABC98	0180-1083	3		CAPACITOR-FXD 33UF 25VDC AL	28480	0180-1083
ABC99	0180-1083	3		CAPACITOR-FXD 33UF 25VDC AL	28480	0180-1083
ABC100	0180-1083	3		CAPACITOR-FXD 33UF 25VDC AL	28480	0180-1083
ABC101	0180-1083	3		CAPACITOR-FXD 33UF 25VDC AL	28480	0180-1083
ABC102	0160-3455	5		CAPACITOR-FXD 470PF +-10% 1KVDC CER	28480	0160-3455
ABC103	0180-1083	3		CAPACITOR-FXD 33UF 25VDC AL	28480	0180-1083
ABC104	0180-1083	3		CAPACITOR-FXD 33UF 25VDC AL	28480	0180-1083
ABC105	0160-3455	5		CAPACITOR-FXD 470PF +-10% 1KVDC CER	28480	0160-3455
ABC106	0160-3455	5		CAPACITOR-FXD 470PF +-10% 1KVDC CER	28480	0160-3455
ABC107	0180-1083	3		CAPACITOR-FXD 33UF 25VDC AL	28480	0180-1083
ABC108	0180-1083	3		CAPACITOR-FXD 33UF 25VDC AL	28480	0180-1083
ABC109	0160-2055	9		CAPACITOR-FXD .01UF +80-20% 100VDC CER	28480	0160-2055
ABC110	0180-1083	3		CAPACITOR-FXD 33UF 25VDC AL	28480	0180-1083
ABC111	0180-1083	3	1	CAPACITOR-FXD 33UF 25VDC AL	28480	0180-1083
ABC112	0160-4344	3		CAPACITOR-FXD 6UF +-20% 75VDC MET-POLYLC	28480	0160-4344
ABC113	0180-1083	3		CAPACITOR-FXD 33UF 25VDC AL	28480	0180-1083
ABC114	0160-2307	4		CAPACITOR-FXD 47PF +-5% 300VDC MICA	28480	0160-2307
ABC115	0180-1081	1		CAPACITOR-FXD 47UF 50VDC AL	28480	0180-1081
ABC116	0180-1081	1	1	CAPACITOR-FXD 47UF 50VDC AL	28480	0180-1081
ABC117	0170-0040	9		CAPACITOR-FXD .047UF +-10% 200VDC POLYE	56289	292P47392
ABC120	0160-2204	0		28480	0160-2204	
ABC121	0180-1083	3		CAPACITOR-FXD 33UF 25VDC AL	28480	0180-1083
ABC122	0180-1083	3		CAPACITOR-FXD 33UF 25VDC AL	28480	0180-1083
ABC123	0180-1052	3		CAPACITOR-FXD 220UF 6.3V		
ABCR1	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
ABCR2	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
ABCR3	1901-0050	3	DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050	
ABCR4	1901-0050	3	DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050	
ABCR5	1901-0050	3	DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050	
ABCR5	1901-0050	3	DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050	
ABCR6	1901-0050	3	DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050	
ABCR7	1901-0050	3	DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050	
ABCR7	1901-0050	3	DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050	
ABCR8	1901-0050	3	DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050	
ABCR9	1901-0050	3	DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050	
ABCR10	1901-0050	3	4	DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
ABCR11	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
ABCR12	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
ABCR13	1902-3234	3		DIODE-ZNR 19.6V 5% DO-35 PD=.4W	28480	1902-3234
ABCR14	1902-3234	3		DIODE-ZNR 19.6V 5% DO-35 PD=.4W	28480	1902-3234
ABCR15	1902-3234	3		DIODE-ZNR 19.6V 5% DO-35 PD=.4W	28480	1902-3234
ABCR16	1902-3234	3		DIODE-ZNR 19.6V 5% DO-35 PD=.4W	28480	1902-3234
ABCR17	1901-0028	5		DIODE-PWR RECT 400V 750MA DO-29	28480	1901-0028
ABCR18	1901-0028	5		DIODE-PWR RECT 400V 750MA DO-29	28480	1901-0028
ABCR19	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
ABCR20	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
ABCR21	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
ABCR22	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
ABCR23	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
ABCR24	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050

See introduction to this section for ordering information
*Indicates factory selected value

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A8CR25	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A8CR26	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A8CR27	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A8CR28	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A8CR29	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A8CR30	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A8CR31	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A8CR32	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A8CR33	1902-0041			DIODE-SWITCHING 50V 500MA 30NS DO-7		
A8CR34	1902-0041			DIODE-SWITCHING 50V 500MA 30NS DO-7		
A8CR37	1902-3036			DIODE-ZNR 3.16V 5%		
A8CR38	1901-0050			DIODE-SWITCHING		
A8CR39	1901-0050			DIODE-SWITCHING		
ABJ1	1200-0607	0		SOCKET-IC 16-CONT DIP DIP-SLDR	28480	1200-0607
ABJ2	1251-0513	4		CONNECTOR 5-PIN M POST TYPE	28480	1251-0513
ABJ3	1251-3197	6		CONNECTOR 12-PIN M POST TYPE	28480	1251-3197
ABJ4	1250-0257	1		CONNECTOR-RF SMB M PC 50-OHM	28480	1250-0257
ABJ5	1251-1636	4	2	CONNECTOR-SGL CONT SKT .04-IN-BSC-SZ RND	28480	1251-1636
ABJ6	1251-1636	4		CONNECTOR-SGL CONT SKT .04-IN-BSC-SZ RND	28480	1251-1636
ABJ7	1200-0541	1		SOCKET-IC 24-CONT DIP DIP-SLDR	28480	1200-0541
ABK1	0490-1269	4		RELAY 1C 12VDC-COIL .66A 30VDC	28480	0490-1269
ABL1	9140-0114	4		INDUCTOR RF-CH-MLD 10UH 10% .166DX.385LG	28480	9140-0114
ABL2	9140-0098	4		INDUCTOR RF-CH-MLD 2.2UH 10% .166DX.385LG		
ABL3	9140-0098	4		INDUCTOR RF-CH-MLD 2.2UH 10% .166DX.385LG		
ABL4	9140-0114	4		INDUCTOR RF-CH-MLD 10UH 10% .166DX.385LG	28480	9140-0114
ABL5	9140-0114	4		INDUCTOR RF-CH-MLD 10UH 10% .166DX.385LG	28480	9140-0114
ABL6	9100-1629	4	10	INDUCTOR RF-CH-MLD 47UH 5% .166DX.385LG	28480	9100-1629
ABL7	9100-1629	4		INDUCTOR RF-CH-MLD 47UH 5% .166DX.385LG	28480	9100-1629
ABL8	9140-0210	1		INDUCTOR RF-CH-MLD 100UH 5% .166DX.385LG	28480	9140-0210
ABL9	9140-0114	4		INDUCTOR RF-CH-MLD 10UH 10% .166DX.385LG	28480	9140-0114
ABL10	9140-0114	4		INDUCTOR RF-CH-MLD 10UH 10% .166DX.385LG	28480	9140-0114
ABL11	9140-0114	4		INDUCTOR RF-CH-MLD 10UH 10% .166DX.385LG	28480	9140-0114
ABL12	9100-1629	4		INDUCTOR RF-CH-MLD 47UH 5% .166DX.385LG	28480	9100-1629
ABL13	9100-1629	4		INDUCTOR RF-CH-MLD 47UH 5% .166DX.385LG	28480	9100-1629
ABL14	9140-0210	1		INDUCTOR RF-CH-MLD 100UH 5% .166DX.385LG	28480	9140-0210
ABL15	9140-0114	4		INDUCTOR RF-CH-MLD 10UH 10% .166DX.385LG	28480	9140-0114
ABL16	9140-0114	4		INDUCTOR RF-CH-MLD 10UH 10% .166DX.385LG	28480	9140-0114
ABL17	9140-0114	4		INDUCTOR RF-CH-MLD 10UH 10% .166DX.385LG	28480	9140-0114
ABL18	9100-1629	4		INDUCTOR RF-CH-MLD 47UH 5% .166DX.385LG	28480	9100-1629
ABL19	9100-1629	4		INDUCTOR RF-CH-MLD 47UH 5% .166DX.385LG	28480	9100-1629
ABL20	9140-0210	1		INDUCTOR RF-CH-MLD 100UH 5% .166DX.385LG	28480	9140-0210
ABL21	9140-0114	4		INDUCTOR RF-CH-MLD 10UH 10% .166DX.385LG	28480	9140-0114
ABL22	9140-0114	4		INDUCTOR RF-CH-MLD 10UH 10% .166DX.385LG	28480	9140-0114
ABL23	9100-1629	4		INDUCTOR RF-CH-MLD 47UH 5% .166DX.385LG	28480	9100-1629
ABL24	9100-1629	4		INDUCTOR RF-CH-MLD 47UH 5% .166DX.385LG	28480	9100-1629
ABL25	9140-0210	1		INDUCTOR RF-CH-MLD 100UH 5% .166DX.385LG	28480	9140-0210
ABL26	9140-0114	4		INDUCTOR RF-CH-MLD 10UH 10% .166DX.385LG	28480	9140-0114
ABL27	9140-0114	4		INDUCTOR RF-CH-MLD 10UH 10% .166DX.385LG	28480	9140-0114
ABL28	9100-1629	4		INDUCTOR RF-CH-MLD 47UH 5% .166DX.385LG	28480	9100-1629
ABL29	9100-1629	4		INDUCTOR RF-CH-MLD 47UH 5% .166DX.385LG	28480	9100-1629
ABL30	9140-0210	1		INDUCTOR RF-CH-MLD 100UH 5% .166DX.385LG	28480	9140-0210
ABL31	9140-0114	4		INDUCTOR RF-CH-MLD 10UH 10% .166DX.385LG	28480	9140-0114
ABL32	9100-0880	7	1	COIL-22 UH 5%	28480	9100-0880
ABQ1	1854-0547	2	0	TRANSISTOR NPN 2N3725 SI TO-5 PD=800MW	01295	2N3725
ABQ2	1854-0547	2		TRANSISTOR NPN 2N3725 SI TO-5 PD=800MW	01295	2N3725
ABQ3	1854-0019	3		TRANSISTOR NPN SI TO-18 PD=360MW	28480	1854-0019
ABQ4	1853-0010	2	5	TRANSISTOR PNP SI TO-18 PD=360MW	28480	1853-0010
ABQ5	1854-0547	2		TRANSISTOR NPN 2N3725 SI TO-5 PD=800MW	01295	2N3725
ABQ6	1854-0547	2		TRANSISTOR NPN 2N3725 SI TO-5 PD=800MW	01295	2N3725
ABQ7	1854-0019	3		TRANSISTOR NPN SI TO-18 PD=360MW	28480	1854-0019
ABQ8	1853-0010	2		TRANSISTOR PNP SI TO-18 PD=360MW	28480	1853-0010
ABQ9	1854-0547	2		TRANSISTOR NPN 2N3725 SI TO-5 PD=800MW	01295	2N3725
ABQ10	1854-0547	2		TRANSISTOR NPN 2N3725 SI TO-5 PD=800MW	01295	2N3725
ABQ11	1854-0019	3		TRANSISTOR NPN SI TO-18 PD=360MW	28480	1854-0019
ABQ12	1853-0010	2		TRANSISTOR PNP SI TO-18 PD=360MW	28480	1853-0010
ABQ13	1853-0010	2		TRANSISTOR PNP SI TO-18 PD=360MW	28480	1853-0010
ABQ14	1854-0547	2		TRANSISTOR NPN 2N3725 SI TO-5 PD=800MW	01295	2N3725
ABQ15	1854-0547	2		TRANSISTOR NPN 2N3725 SI TO-5 PD=800MW	01295	2N3725
ABQ16	1854-0019	3		TRANSISTOR NPN SI TO-18 PD=360MW	28480	1854-0019
ABQ17	1853-0010	2		TRANSISTOR PNP SI TO-18 PD=360MW	28480	1853-0010
ABQ18	1853-0281	9	1	TRANSISTOR PNP 2N2907A SI TO-18 PD=400MW	04713	2N2907A
ABQ19	1853-0232	0	2	TRANSISTOR PNP SI TO-39 PD=1W FT=200MHZ	28480	1853-0232
ABQ20	1853-0232	0		TRANSISTOR PNP SI TO-39 PD=1W FT=200MHZ	28480	1853-0232
ABQ21	1854-0474	4	2	TRANSISTOR NPN SI PD=310MW FT=100MHZ	04713	2N5551
ABQ22	1854-0271	9	2	TRANSISTOR NPN SI TO-39 PD=1W FT=150MHZ	28480	1854-0271
ABQ23	1854-0271	9		TRANSISTOR NPN SI TO-39 PD=1W FT=150MHZ	28480	1854-0271
ABQ24	1853-0080	6	2	TRANSISTOR PNP SI PD=300MW FT=30MHZ	28480	1853-0080
ABQ25	1854-0474	4		TRANSISTOR NPN SI PD=310MW FT=100MHZ	04713	2N5551

See introduction to this section for ordering information
*Indicates factory selected value

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
ABQ26	1853-0080	6	6	TRANSISTOR PNP SI PD=300MW FT=30MHZ	28480	1853-0080
ABQ27	1855-0091	3		TRANSISTOR J-FET N-CHAN D-MODE SI	28480	1855-0091
ABQ28	1855-0091	3		TRANSISTOR J-FET N-CHAN D-MODE SI	28480	1855-0091
ABQ29	1854-0215			TRANSISTOR NPN SI PD=350MW FT=300MHZ		
ABQ30	1853-0036			TRANSISTOR PNP SI PD=310MW FT=250MHZ		
ABQ33, Q34	1854-0477			TRANSISTOR NPN SI 2N2222A		
ABR1	0683-2215	1		RESISTOR 220 5% .25W FC TC=-400/+600	01121	CB2215
ABR2	0683-3325	6		RESISTOR 3.3K 5% .25W FC TC=-400/+700	01121	CB3325
ABR3	0683-4725	2		RESISTOR 4.7K 5% .25W FC TC=-400/+700	01121	CB4725
ABR4	0683-4725	2		RESISTOR 4.7K 5% .25W FC TC=-400/+700	01121	CB4725
ABR5	0683-1005	5	RESISTOR 10 5% .25W FC TC=-400/+500	01121	CB1005	
ABR6	0683-1005	5	RESISTOR 10 5% .25W FC TC=-400/+500	01121	CB1005	
ABR7	0683-3325	6	RESISTOR 3.3K 5% .25W FC TC=-400/+700	01121	CB3325	
ABR8	0683-2215	1	RESISTOR 220 5% .25W FC TC=-400/+600	01121	CB2215	
ABR9	0683-3325	6	RESISTOR 3.3K 5% .25W FC TC=-400/+700	01121	CB3325	
ABR10	0683-4725	2	RESISTOR 4.7K 5% .25W FC TC=-400/+700	01121	CB4725	
ABR11	0683-4725	2	RESISTOR 4.7K 5% .25W FC TC=-400/+700	01121	CB4725	
ABR12	0683-1005	5	RESISTOR 10 5% .25W FC TC=-400/+500	01121	CB1005	
ABR13	0683-1005	5	RESISTOR 10 5% .25W FC TC=-400/+500	01121	CB1005	
ABR14	0683-3325	6	RESISTOR 3.3K 5% .25W FC TC=-400/+700	01121	CB3325	
ABR15	0683-2215	1	RESISTOR 220 5% .25W FC TC=-400/+600	01121	CB2215	
ABR16	0683-3325	6	RESISTOR 3.3K 5% .25W FC TC=-400/+700	01121	CB3325	
ABR17	0683-4725	2	RESISTOR 4.7K 5% .25W FC TC=-400/+700	01121	CB4725	
ABR18	0683-4725	2	RESISTOR 4.7K 5% .25W FC TC=-400/+700	01121	CB4725	
ABR19	0683-1005	5	RESISTOR 10 5% .25W FC TC=-400/+500	01121	CB1005	
ABR20	0683-1035	1	RESISTOR 10K 5% .25W FC TC=-400/+700	01121	CB1035	
ABR21	0683-1035	1	RESISTOR 10K 5% .25W FC TC=-400/+700	01121	CB1035	
ABR22	0683-1005	5	RESISTOR 10 5% .25W FC TC=-400/+500	01121	CB1005	
ABR23	0683-3325	6	RESISTOR 3.3K 5% .25W FC TC=-400/+700	01121	CB3325	
ABR24	0683-1015	7	RESISTOR 100 5% .25W FC TC=-400/+500	01121	CB1015	
ABR25	0683-4715	0	RESISTOR 470 5% .25W FC TC=-400/+600	01121	CB4715	
ABR26	0683-2215	1	RESISTOR 220 5% .25W FC TC=-400/+600	01121	CB2215	
ABR27	0683-3325	6	RESISTOR 3.3K 5% .25W FC TC=-400/+700	01121	CB3325	
ABR28	0683-2215	1	RESISTOR 220 5% .25W FC TC=-400/+600	01121	CB2215	
ABR29	0683-1005	5	RESISTOR 10 5% .25W FC TC=-400/+500	01121	CB1005	
ABR30	0683-1005	5	RESISTOR 10 5% .25W FC TC=-400/+500	01121	CB1005	
ABR31	0683-3325	6	RESISTOR 3.3K 5% .25W FC TC=-400/+700	01121	CB3325	
ABR32	0683-4725	2	RESISTOR 4.7K 5% .25W FC TC=-400/+700	01121	CB4725	
ABR33	0683-3325	6	RESISTOR 3.3K 5% .25W FC TC=-400/+700	01121	CB3325	
ABR34	0683-1825	7	RESISTOR 1.8K 5% .25W FC TC=-400/+700	01121	CB1825	
ABR35	0683-2215	1	RESISTOR 220 5% .25W FC TC=-400/+600	01121	CB2215	
ABR36	0683-1035	1	RESISTOR 10K 5% .25W FC TC=-400/+700	01121	CB1035	
ABR37	0683-1015	7	RESISTOR 100 5% .25W FC TC=-400/+500	01121	CB1015	
ABR38	0683-1525	4	RESISTOR 1.5K 5% .25W FC TC=-400/+700	01121	CB1525	
ABR39	0683-4705	8	RESISTOR 47 5% .25W FC TC=-400/+500	01121	CB4705	
ABR40	0683-0475	1	RESISTOR 4.7 5% .25W FC TC=-400/+500	01121	CB4705	
ABR41	0683-6805	3	RESISTOR 68 5% .25W FC TC=-400/+500	01121	CB6805	
ABR42	0683-6805	3	RESISTOR 68 5% .25W FC TC=-400/+500	01121	CB6805	
ABR43	0683-1015	7	RESISTOR 100 5% .25W FC TC=-400/+500	01121	CB1015	
ABR44	0683-1215	9	RESISTOR 120 5% .25W FC TC=-400/+600	01121	CB1215	
ABR45	0698-4431	8	RESISTOR 2.05K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2051-F	
ABR46	0683-4705	8	RESISTOR 47 5% .25W FC TC=-400/+500	01121	CB4705	
ABR47	0757-0280	3	RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1001-F	
ABR48	0683-2235	5	RESISTOR 22K 5% .25W FC TC=-400/+800	01121	CB2235	
ABR49	0683-6805	3	RESISTOR 68 5% .25W FC TC=-400/+500	01121	CB6805	
ABR50	0683-6805	3	RESISTOR 68 5% .25W FC TC=-400/+500	01121	CB6805	
ABR51	0683-1045	3	RESISTOR 100K 5% .25W FC TC=-400/+800	01121	CB1045	
ABR52	0683-1215	9	RESISTOR 120 5% .25W FC TC=-400/+600	01121	CB1215	
ABR53	0683-1045	3	RESISTOR 100K 5% .25W FC TC=-400/+800	01121	CB1045	
ABR54	2100-3211	8	RESISTOR-TRMR 1K 10% C TOP-ADJ 1-TRN			
ABR55	0698-6943	1	RESISTOR 20K .1% .125W F TC=0+-50	28480	0698-6943	
ABR56	0698-4431	8	RESISTOR 2.05K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2051-F	
ABR57	0757-0280	3	RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1001-F	
ABR58	0683-2235	5	RESISTOR 22K 5% .25W FC TC=-400/+800	01121	CB2235	
ABR59	0683-1045	3	RESISTOR 100K 5% .25W FC TC=-400/+800	01121	CB1045	
ABR60	0698-6320	8	RESISTOR 5K .1% .125W F TC=0+-25	03888	PHE55-1/8-T9-5001-B	
ABR61	0757-0346	4	RESISTOR 10 1% .125W F TC=0+-100			
ABR62	0683-1025	9	RESISTOR 1K 5% .25W FC TC=-400/+600	01121	CB1025	
ABR63	0698-3156	2	RESISTOR 14.7K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1472-F	
ABR64	0683-1025	9	RESISTOR 1K 5% .25W FC TC=-400/+600	01121	CB1025	
ABR65	0698-3156	2	RESISTOR 14.7K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1472-F	
ABR66	0698-6320	8	RESISTOR 5K .1% .125W F TC=0+-25	03888	PHE55-1/8-T9-5001-B	
ABR67	0698-6320	8	RESISTOR 5K .1% .125W F TC=0+-25	03888	PHE55-1/8-T9-5001-B	
ABR68	0698-6320	8	RESISTOR 5K .1% .125W F TC=0+-25	03888	PHE55-1/8-T9-5001-B	
ABR69	0683-1015	7	RESISTOR 100 5% .25W FC TC=-400/+500	01121	CB1015	
ABR70	0683-1535	6	RESISTOR 15K 5% .25W FC TC=-400/+800	01121	CB1535	
ABR71	2100-3212	8	RESISTOR-TRMR 200 10% C TOP-ADJ 1-TRN	28480	2100-3212	
ABR72	0683-1045	3	RESISTOR 100K 5% .25W FC TC=-400/+800	01121	CB1045	
ABR73	0683-1015	7	RESISTOR 100 5% .25W FC TC=-400/+500	01121	CB1015	
ABR74	0683-1535	6	RESISTOR 15K 5% .25W FC TC=-400/+800	01121	CB1535	
ABR76	0683-4735		RESISTOR 47K 5% .25W FC TC=-400/+800			
ABR77, R78	0683-1015		RESISTOR 100 5% .25W			
ABR79	0683-1025		RESISTOR 1K 5% .25W			
ABR80	0683-3335		RESISTOR 33K 5% .25W			

See introduction to this section for ordering information
*Indicates factory selected value

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A8T1	9100-0822	7	2	TRANSFORMER:PULSE(11307)	28480	9100-0822
A8T2	9100-0822	7		TRANSFORMER:PULSE(11307)	28480	9100-0822
A8T3	9100-0857	8		TRANSFORMER-PULSE 114H1	28480	9100-0857
A8T4	9100-0857	8		TRANSFORMER-PULSE 114H1	28480	9100-0857
A8T5	9100-0822	7		TRANSFORMER:PULSE(11307)	28480	9100-0822
A8T6	04192-61801	2	3	TRANSFORMER-PULSE	28480	04192-61801
A8T7	9100-0855	6		TRANSFORMER-PULSE 113G1	28480	9100-0855
A8T8	9100-0855	6		TRANSFORMER-PULSE 113G1	28480	9100-0855
A8T9	9100-0822	7		TRANSFORMER:PULSE(11307)	28480	9100-0822
A8T10	04192-61801	2		TRANSFORMER-PULSE	28480	04192-61801
A8T11	9100-0855	6	6	TRANSFORMER-PULSE 113G1	28480	9100-0855
A8T12	9100-0855	6		TRANSFORMER-PULSE 113G1	28480	9100-0855
A8T13	9100-0822	7		TRANSFORMER:PULSE(11307)	28480	9100-0822
A8T14	04192-61801	2		TRANSFORMER-PULSE	28480	04192-61801
A8T15	9100-0855	6		TRANSFORMER-PULSE 113G1	28480	9100-0855
A8T16	9100-0855	6	6	TRANSFORMER-PULSE 113G1	28480	9100-0855
A8T17	9100-0855	6		TRANSFORMER-PULSE 113G1	28480	9100-0855
A8T18	9100-0855	6		TRANSFORMER-PULSE 113G1	28480	9100-0855
A8T19	9100-0855	6		TRANSFORMER-PULSE 113G1	28480	9100-0855
A8T20	9100-0822	7		TRANSFORMER:PULSE(11307)	28480	9100-0822
A8T21	04192-61802	3	1	TRANSFORMER-PULSE	28480	04192-61802
A8T22	9100-0855	6		TRANSFORMER-PULSE 113G1	28480	9100-0855
A8T23	9100-0855	6		TRANSFORMER-PULSE 113G1	28480	9100-0855
A8T24	9100-0855	6		TRANSFORMER-PULSE 113G1	28480	9100-0855
A8U1	1820-0567	5	1	IC MV TTL DUAL	04713	MC4824P
A8U2	1826-0274	3		IC 78L15A V RGLTR TO-92	04713	MC78L15ACP
A8U3	1826-0281	2		IC V RGLTR TO-92	04713	MC79L15ACP
A8U4	1826-0122	0		IC 7805 V RGLTR TO-220	07263	7805UC
A8U5	1820-1433	6		IC SHF-RGTR TTL LS R-S SERIAL-IN PRL-OUT	01295	SN74LS164N
A8U6	1820-1433	6	4	IC SHF-RGTR TTL LS R-S SERIAL-IN PRL-OUT	01295	SN74LS164N
A8U7	1820-1196	8		IC FF TTL LS D-TYPE POS-EDGE-TRIG COM	01295	SN74LS174N
A8U8	1820-1196	8		IC FF TTL LS D-TYPE POS-EDGE-TRIG COM	01295	SN74LS174N
A8U9	1826-0161	7		IC OP AMP GP QUAD 14-DIP-P PKG	04713	MLM324P
A8U10	1826-0161	7		IC OP AMP GP QUAD 14-DIP-P PKG	04713	MLM324P
A8U11	1826-0161	7	1	IC OP AMP GP QUAD 14-DIP-P PKG	04713	MLM324P
A8U12	1826-0161	7		IC OP AMP GP QUAD 14-DIP-P PKG	04713	MLM324P
A8U13	5080-3848	2		IC CONV 12-B-D/A 24-DIP-C PKG	8E175	DAC80-CBI-V
A8U14	1826-0266	4		IC OP AMP LOW-DRIFT TO-99 PKG	06665	OP-05EJ
A8U15	1826-0266	4		IC OP AMP LOW-DRIFT TO-99 PKG	06665	OP-05EJ
A8U16	1826-0035	4	8	IC OP AMP LOW-DRIFT TO-99 PKG	27014	LM308AH
	3050-0082	0		WASHER-FL NM NO. 4 .116-IN-ID .188-IN-OD	28480	3050-0082
A9	04192-66509	7	1	ANALOG RECORDER OUTPUT BOARD ASSEMBLY	28480	04192-66509
A9C1	0180-1050	4	2	CAPACITOR-FXD 100UF 25VDC	28480	0180-1050
A9C2	0180-1066	2		CAPACITOR, FXD 47 MF AL	28480	0180-1066
A9C3	0180-1066	2		CAPACITOR, FXD 47 MF AL	28480	0180-1066
A9C4	0160-0127	9		CAPACITOR-FXD 1U 20% 50VDC CER		
A9C5	0160-0127	9		CAPACITOR-FXD 1U 20% 50VDC CER		
A9C6	0160-0127	9	2	CAPACITOR-FXD 1U 20% 50VDC CER		
A9C7	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A9C8	0160-2009	3		CAPACITOR-FXD 820PF +-5% 300VDC MICA	28480	0160-2009
A9C9	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A9C10	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A9C11	0160-3847	9	3	CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A9C12	0160-2009	3		CAPACITOR-FXD 820PF +-5% 300VDC MICA	28480	0160-2009
A9C13	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A9C14	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A9CR1	1902-0777	3	1	DIODE-ZNR 1N825 6.2V 5% DO-7 PD=.4W	04713	1N825
A9CR2	1902-0041	4		DIODE-ZNR 5.11V 5% DO-35 PD=.4W	28480	1902-0041
A9J1	1200-0607	0	2	SOCKET-IC 16-CONT DIP DIP-SLDR	28480	1200-0607
A9J2	1251-0513	4		CONNECTOR 5-PIN M POST TYPE	28480	1251-0513
A9J3	1251-6527	2		CONNECTOR-6-PIN MALE	28480	1251-6527
A9L1	9140-0114	4	1	INDUCTOR RF-CH-MLD 10UH 10% .166DX.385LG	28480	9140-0114
A9L2	9140-0129	1		INDUCTOR RF-CH-MLD 220UH 5% .166DX.385LG	28480	9140-0129
A9L3	9140-0129	1		INDUCTOR RF-CH-MLD 220UH 5% .166DX.385LG	28480	9140-0129
A9R1	0683-1025	9	7	RESISTOR 1K 5% .25W FC TC=-400/+600	01121	CB1025
A9R2	0683-1025	9		RESISTOR 1K 5% .25W FC TC=-400/+600	01121	CB1025
A9R3	0698-3153	9		RESISTOR 3.83K 1% .125W F TC=0+-100	24546	C4-1/B-T0-3831-F
A9R4	0757-0279	0		RESISTOR 3.16K 1% .125W F TC=0+-100	24546	C4-1/B-T0-3161-F
A9R5	2100-3211	7		RESISTOR-TRMR 1K 10% C TOP-ADJ 1-TRN	28480	2100-3211
A9R6	2100-0554	5	3	RESISTOR-TRMR 500 10% C TOP-ADJ 1-TRN	28480	2100-0554
A9R7	0757-0274	5		RESISTOR 1.21K 1% .125W F TC=0+-100	24546	C4-1/B-T0-1211-F
A9R8	0683-1025	9		RESISTOR 1K 5% .25W FC TC=-400/+600	01121	CB1025
A9R9	0757-0421	4		RESISTOR 825 1% .125W F TC=0+-100	24546	C4-1/B-T0-825R-F
A9R10	0698-5453	6		RESISTOR 900 .1% .125W F TC=0+-50	03888	PME55 T-2-900R-B

See introduction to this section for ordering information
*Indicates factory selected value

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A9R11	0698-5453	6		RESISTOR 900 .1% .125W F TC=0+-50	03888	PME55 T-2-900R-B
A9R12	0757-0278	9		RESISTOR 1.78K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1781-F
A9R13	0757-0290	5		RESISTOR 6.19K 1% .125W F TC=0+-100	19701	MF4C1/8-T0-6191-F
A9R14	0683-1035	1		RESISTOR 10K 5% .25W FC TC=-400/+700	01121	CB1035
A9R15	0683-1035	1		RESISTOR 10K 5% .25W FC TC=-400/+700	01121	CB1035
A9R16	0683-1035	1		RESISTOR 10K 5% .25W FC TC=-400/+700	01121	CB1035
A9R17	0683-1035	1		RESISTOR 10K 5% .25W FC TC=-400/+700	01121	CB1035
A9R18	0757-0421	4		RESISTOR 825 1% .125W F TC=0+-100	24546	C4-1/8-T0-825R-F
A9R19	0698-5453	6		RESISTOR 900 .1% .125W F TC=0+-50	03888	PME55 T-2-900R-B
A9R20	0698-5453	6		RESISTOR 900 .1% .125W F TC=0+-50	03888	PME55 T-2-900R-B
A9R21	0698-5453	6		RESISTOR 900 .1% .125W F TC=0+-50	03888	PME55 T-2-900R-B
A9R22	0698-3153	9		RESISTOR 3.83K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3831-F
A9R23	0757-0279	0		RESISTOR 3.16K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3161-F
A9R24	2100-3211	7		RESISTOR-TRMR 1K 10% C TOP-ADJ 1-TRN	28480	2100-3211
A9R25	2100-3211	7		RESISTOR-TRMR 1K 10% C TOP-ADJ 1-TRN	28480	2100-3211
A9R26	0757-0279	0		RESISTOR 3.16K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3161-F
A9R27	0698-3153	9		RESISTOR 3.83K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3831-F
A9R28	0757-04vn	0		RESISTOR 6.81K 1% .125W F TC=0+-100	24546	C4-1/8-T0-6811-F
A9R29	0757-0279	4		RESISTOR 3.16K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3161-F
A9U1	1820-1433	6		IC SHF-RCTR TTL LS R-S SERIAL-IN PRL-OUT	01295	SN74LS164N
A9U2	1820-1433	6		IC SHF-RCTR TTL LS R-S SERIAL-IN PRL-OUT	01295	SN74LS164N
A9U3	1820-1730	6		IC FF TTL LS D-TYPE POS-EDGE-TRIG COM	01295	SN74LS273N
A9U4	1826-0462	1	3	IC CONV 10-B-D/A 16-DIP-C PKG	04713	MC3410CL
A9U5	1826-0502	0	3	IC SWITCH ANLG QUAD 14-DIP-P PKG	04713	MC14066BCP
A9U6	1826-0522	4		IC OP AMP QUAD 14-DIP-P PKG	01295	TL074CN
A9U7	1820-1433	6		IC SHF-RCTR TTL LS R-S SERIAL-IN PRL-OUT	01295	SN74LS164N
A9U8	1826-0138	8		IC COMPARTOR GP QUAD 14-DIP-P PKG	01295	LM339N
A9U9	1820-1433	6		IC SHF-RCTR TTL LS R-S SERIAL-IN PRL-OUT	01295	SN74LS164N
A9U10	1820-1730	6		IC FF TTL LS D-TYPE POS-EDGE-TRIG COM	01295	SN74LS273N
A9U11	1826-0462	1		IC CONV 10-B-D/A 16-DIP-C PKG	04713	MC3410CL
A9U12	1826-0462	1		IC CONV 10-B-D/A 16-DIP-C PKG	04713	MC3410CL
A10	04192-66510	0		BATTERY AND CHARGER BOARD ASSEMBLY	28480	04192-66510
A10BT1	1420-0126	4	2	BATTERY-NI-CD	28480	1420-0126
A10BT2	1420-0126	4		BATTERY-NI-CD	28480	1420-0126
A10R1	0683-1025	9		RESISTOR 1K 5% .25W FC TC=-400/+600	01121	CB1025
	1400-0493	6	1	CABLE TIE	28480	1400-0493
A11	04192-66511	1	1	PROCESS AMPLIFIER BOARD ASSEMBLY (NOT INCLUDING THE SHIELD CASES)	28480	04192-66511
A11C1	0180-1083	3		CAPACITOR-FXD 33UF 25VDC AL	28480	0180-1083
A11C2	0180-1083	3		CAPACITOR-FXD 33UF 25VDC AL	28480	0180-1083
A11C3	0180-0291	3		CAPACITOR-FXD 1UF+-10% 35VDC TA	56289	150D105X9035A2
A11C4	0160-4835	8		CAPACITOR-FXD .1UF 10% 50VDC CER		
A11C5	0160-4835	8		CAPACITOR-FXD .1UF 10% 50VDC CER		
A11C6	0180-1085	5		CAPACITOR-FXD 4.7UF 16VDC TA	28480	0180-1085
A11C7	0180-1083	3		CAPACITOR-FXD 33UF 25VDC AL	28480	0180-1083
A11C8	0180-1085	5		CAPACITOR-FXD 4.7UF 16VDC TA	28480	0180-1085
A11C9	0180-1085	5		CAPACITOR-FXD 4.7UF 16VDC TA	28480	0180-1085
A11C10	0180-1085	5		CAPACITOR-FXD 4.7UF 16VDC TA	28480	0180-1085
A11C11	0160-2241	5		CAPACITOR-FXD 2.2PF +- .25PF 500VDC CER	28480	0160-2241
A11C12	0180-1085	5		CAPACITOR-FXD 4.7UF 16VDC TA	28480	0180-1085
A11C13	0160-4835	8		CAPACITOR-FXD .1UF 10% 50VDC CER		
A11C14	0160-4835	8		CAPACITOR-FXD .1UF 10% 50VDC CER		
A11C15	0160-2234	6		CAPACITOR-FXD .51PF +- .25PF 500VDC CER	28480	0160-2234
A11C16	0160-4835	8		CAPACITOR-FXD .1UF 10% 50VDC CER		
A11C17	0160-4835	8		CAPACITOR-FXD .1UF 10% 50VDC CER		
A11C18	0160-2265	3		CAPACITOR-FXD 22PF +-5% 500VDC CER 0+-30	28480	0160-2265
A11C19	0160-5138	5	2	CAPACITOR-FXD 0.022UF	28480	0160-5138
A11C20	0160-2241	5		CAPACITOR-FXD 2.2PF +- .25PF 500VDC CER	28480	0160-2241
A11C21	0160-4835	8		CAPACITOR-FXD .1UF 10% 50VDC CER		
A11C22	0180-1083	3		CAPACITOR-FXD 33UF 25VDC AL	28480	0180-1083
A11C23	0180-1083	3		CAPACITOR-FXD 33UF 25VDC AL	28480	0180-1083
A11C24	0160-4835	8		CAPACITOR-FXD .1UF 10% 50VDC CER		
A11C25	0160-4835	8		CAPACITOR-FXD .1UF 10% 50VDC CER		
A11C26	0160-2253	9		CAPACITOR-FXD 6.8PF +- .25PF 500VDC CER	28480	0160-2253
A11C27	0160-2253	9		CAPACITOR-FXD 6.8PF +- .25PF 500VDC CER	28480	0160-2253
A11C28	0160-2265	3		CAPACITOR-FXD 22PF +-5% 500VDC CER 0+-30	28480	0160-2265
A11C29	0160-2234	6		CAPACITOR-FXD .51PF +- .25PF 500VDC CER	28480	0160-2234
A11C30	0160-2222	2		CAPACITOR-FXD 1500PF +-5% 300VDC MICA	28480	0160-2222
A11C31	0160-0161	4	4	CAPACITOR-FXD .01UF +-10% 200VDC POLYE	28480	0160-0161
A11C32	0121-0131	6		CAPACITOR-V TRMR-AIR 1.5-4PF 350V PC-MTG	74970	189-0501-028
A11C33	0150-0059	8	7	CAPACITOR-FXD 3.3PF +- .25PF 500VDC CER	28480	0150-0059
A11C34	0180-1085	5		CAPACITOR-FXD 4.7UF 16VDC TA	28480	0180-1085
A11C35	0160-3466	8		CAPACITOR-FXD 100PF +-10% 1KVDC CER	28480	0160-3466

See introduction to this section for ordering information
*Indicates factory selected value

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A11C36	0160-3456	6		CAPACITOR-FXD 1000PF +-10% 1KVDC CER	28480	0160-3456
A11C37	0160-4835	8		CAPACITOR-FXD .1UF 10% 50VDC CER		
A11C38	0180-1083	3		CAPACITOR-FXD 33UF 25VDC AL	28480	0180-1083
A11C39	0160-2234	6		CAPACITOR-FXD .51PF +- .25PF 500VDC CER	28480	0160-2234
A11C40	0150-0059	8		CAPACITOR-FXD 3.3PF +- .25PF 500VDC CER	28480	0150-0059
A11C41	0160-0161	4		CAPACITOR-FXD .01UF +-10% 200VDC POLYE	28480	0160-0161
A11C42	0180-1083	3		CAPACITOR-FXD 33UF 25VDC AL	28480	0180-1083
A11C43	0160-4835	8		CAPACITOR-FXD .1UF 10% 50VDC CER		
A11C44	0160-4835	8		CAPACITOR-FXD .1UF 10% 50VDC CER		
A11C45	0150-0059	8		CAPACITOR-FXD 3.3PF +- .25PF 500VDC CER	28480	0150-0059
A11C46	0160-3454	4		CAPACITOR-FXD 220PF +-10% 1KVDC CER	28480	0160-3454
A11C47	0160-3454	4		CAPACITOR-FXD 220PF +-10% 1KVDC CER	28480	0160-3454
A11C48	0180-1085	5		CAPACITOR-FXD 4.7UF 16VDC TA	28480	0180-1085
A11C49	0160-3094	8		CAPACITOR-FXD .1UF ±10% 50VDC CER		
A11C50	0160-0127	2		CAPACITOR-FXD 1UF +-20% 25VDC CER	28480	0160-0127
A11C51	0160-5140	9	2	CAPACITOR-FXD 2.2 UF 2%	28480	0160-5140
A11C52	0121-0162	3	1	CAPACITOR-V TRMR-AIR 1.2-3.5PF 350V	0859C	10-1326-25004-910
A11C53	0160-4835	8		CAPACITOR-FXD .1UF 10% 50VDC CER		
A11C54	0160-4835	8		CAPACITOR-FXD .1UF 10% 50VDC CER		
A11C55	0160-2253	9		CAPACITOR-FXD 6.8PF +- .25PF 500VDC CER	28480	0160-2253
A11C56	0160-2253	9		CAPACITOR-FXD 6.8PF +- .25PF 500VDC CER	28480	0160-2253
A11C57	0160-2265	3		CAPACITOR-FXD 22PF +-5% 500VDC CER 0+-30	28480	0160-2265
A11C58	0160-2265	3		CAPACITOR-FXD 22PF +-5% 500VDC CER 0+-30	28480	0160-2265
A11C59	0160-2218	6	1	CAPACITOR-FXD 1000PF +-5% 300VDC MICA	28480	0160-2218
A11C60	0140-0190	7	1	CAPACITOR-FXD 39PF +-5% 300VDC MICA	72136	DM15E390J0300WV1CR
A11C61	0160-4835	8		CAPACITOR-FXD .1UF 10% 50VDC CER		
A11C62	0160-4835	8		CAPACITOR-FXD .1UF 10% 50VDC CER		
A11C63	0180-1083	3		CAPACITOR-FXD 33UF 25VDC AL	28480	0180-1083
A11C64	0121-0061	1	3	CAPACITOR-V TRMR-CER 5.5-18PF 350V	52763	304322 5.5/18PF NPO
A11C65	0180-1085	5		CAPACITOR-FXD 4.7UF 16VDC TA	28480	0180-1085
A11C66	0160-2241	5		CAPACITOR-FXD 2.2PF +- .25PF 500VDC CER	28480	0160-2241
A11C67	0180-1085	5		CAPACITOR-FXD 4.7UF 16VDC TA	28480	0180-1085
A11C68	0160-4835	8		CAPACITOR-FXD .1UF 10% 50VDC CER		
A11C69	0160-4835	8		CAPACITOR-FXD .1UF 10% 50VDC CER		
A11C70	0180-1085	5		CAPACITOR-FXD 4.7UF 16VDC TA	28480	0180-1085
A11C71	0121-0061	1		CAPACITOR-V TRMR-CER 5.5-18PF 350V	52763	304322 5.5/18PF NPO
A11C72	0150-0059	8		CAPACITOR-FXD 3.3PF +- .25PF 500VDC CER	28480	0150-0059
A11C73	0160-0161	4		CAPACITOR-FXD .01UF +-10% 200VDC POLYE	28480	0160-0161
A11C74	0121-0061	1		CAPACITOR-V TRMR-CER 5.5-18PF 350V	52763	304322 5.5/18PF NPO
A11C75	0150-0059	8		CAPACITOR-FXD 3.3PF +- .25PF 500VDC CER	28480	0150-0059
A11C76	0160-5138	5		CAPACITOR-FXD 0.022UF	28480	0160-5138
A11C77	0150-0059	8		CAPACITOR-FXD 3.3PF +- .25PF 500VDC CER	28480	0150-0059
A11C78	0160-2241	5		CAPACITOR-FXD 2.2PF +- .25PF 500VDC CER	28480	0160-2241
A11C79	0160-4835	8		CAPACITOR-FXD .1UF 10% 50VDC CER		
A11C80	0150-0059	8		CAPACITOR-FXD 3.3PF +- .25PF 500VDC CER	28480	0150-0059
A11C81	0180-1085	5		CAPACITOR-FXD 4.7UF 16VDC TA	28480	0180-1085
A11C82	0160-3466	8		CAPACITOR-FXD 100PF +-10% 1KVDC CER	28480	0160-3466
A11C83	0160-3466	6		CAPACITOR-FXD 1000PF +-10% 1KVDC CER	28480	0160-3466
A11C84	0160-4835	8		CAPACITOR-FXD .1UF 10% 50VDC CER		
A11C85	0180-1083	3		CAPACITOR-FXD 33UF 25VDC AL	28480	0180-1083
A11C86	0180-1083	3		CAPACITOR-FXD 33UF 25VDC AL	28480	0180-1083
A11C87	0160-2306	3	1	CAPACITOR-FXD 27PF +-5% 300VDC MICA	28480	0160-2306
A11C88	0140-0191	8		CAPACITOR-FXD 56PF +-5% 300VDC MICA	72136	DM15E560J0300WV1CR
A11C89	0160-4835	8		CAPACITOR-FXD .1UF 10% 50VDC CER		
A11C90	0160-4835	8		CAPACITOR-FXD .1UF 10% 50VDC CER		
A11C91	0160-4835	8		CAPACITOR-FXD .1UF 10% 50VDC CER		
A11C92	0160-4835	8		CAPACITOR-FXD .1UF 10% 50VDC CER		
A11C93	0160-0161	4		CAPACITOR-FXD .01UF +-10% 200VDC POLYE	28480	0160-0161
A11C94	0180-1085	5		CAPACITOR-FXD 4.7UF 16VDC TA	28480	0180-1085
A11C95	0160-3094	8		CAPACITOR-FXD .1UF ±10% 50VDC CER		
A11C96	0160-0127	2		CAPACITOR-FXD 1UF +-20% 25VDC CER	28480	0160-0127
A11C97	0160-5140	9		CAPACITOR-FXD 2.2 UF 2%	28480	0160-5140
A11C98	0160-4835	8		CAPACITOR-FXD .1UF 10% 50VDC CER		
A11C99	0180-1085	5		CAPACITOR-FXD 4.7UF 16VDC TA	28480	0180-1085
A11C100	0180-0197	8		CAPACITOR-FXD 2.2UF+-10% 20VDC TA	56289	150D225X9020A2
A11C101	0180-1083	3		CAPACITOR-FXD 33UF 25VDC AL	28480	0180-1083
A11C102	0180-1083	3		CAPACITOR-FXD 33UF 25VDC AL	28480	0180-1083
A11C103	0180-1083	3		CAPACITOR-FXD 33UF 25VDC AL	28480	0180-1083
A11C104	0180-1083	3		CAPACITOR-FXD 33UF 25VDC AL	28480	0180-1083
A11C105	0160-3466	8		CAPACITOR-FXD 100PF +-10% 1KVDC CER	28480	0160-3466
A11C106	0160-3466	8		CAPACITOR-FXD 100PF +-10% 1KVDC CER	28480	0160-3466
A11C107	0160-3466	8		CAPACITOR-FXD 100PF +-10% 1KVDC CER	28480	0160-3466
A11C108	0160-3466	8		CAPACITOR-FXD 100PF +-10% 1KVDC CER	28480	0160-3466
A11C109	0160-3466	8		CAPACITOR-FXD 100PF +-10% 1KVDC CER	28480	0160-3466
A11C110	0160-3466	8		CAPACITOR-FXD 100PF +-10% 1KVDC CER	28480	0160-3466
A11C111	0160-3466	8		CAPACITOR-FXD 100PF +-10% 1KVDC CER	28480	0160-3466

See introduction to this section for ordering information
*Indicates factory selected value

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A11CR1	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A11CR2	1902-0064	1		DIODE-ZNR 7.5V 5% DO-35 PD=.4W TC=+.05%	28480	1902-0064
A11CR3	1902-0064	1		DIODE-ZNR 7.5V 5% DO-35 PD=.4W TC=+.05%	28480	1902-0064
A11CR4	1902-3059	0		DIODE-ZNR 3.83V 5% DO-35 PD=.4W	28480	1902-3059
A11CR5	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A11CR6	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A11CR7	1901-0376	6		DIODE-GEN PRP 35V 50MA DO-35	28480	1901-0376
A11CR8	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A11CR9	1902-3037	4	2	DIODE-ZNR 3.16V 2% DO-7 PD=.4W TC=-.064%	28480	1902-3037
A11CR10	1901-0376	6		DIODE-GEN PRP 35V 50MA DO-35	28480	1901-0376
A11CR11	1901-0376	6		DIODE-GEN PRP 35V 50MA DO-35	28480	1901-0376
A11CR12	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A11CR13	1902-3059	0		DIODE-ZNR 3.83V 5% DO-35 PD=.4W	28480	1902-3059
A11CR14	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A11CR15	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A11CR16	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A11CR17	1902-3059	0		DIODE-ZNR 3.83V 5% DO-35 PD=.4W	28480	1902-3059
A11CR18	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A11CR19	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A11CR20	1901-0376	6		DIODE-GEN PRP 35V 50MA DO-35	28480	1901-0376
A11CR21	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A11CR22	1902-3037	4		DIODE-ZNR 3.16V 2% DO-7 PD=.4W TC=-.064%	28480	1902-3037
A11CR23	1901-0376	6		DIODE-GEN PRP 35V 50MA DO-35	28480	1901-0376
A11CR24	1901-0376	6		DIODE-GEN PRP 35V 50MA DO-35	28480	1901-0376
A11CR25	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A11CR26	1902-3059	0		DIODE-ZNR 3.83V 5% DO-35 PD=.4W	28480	1902-3059
A11CR27	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A11CR28/CR31	1901-0050	3		DIODE-SWITCHING 80V 200MA 2NS DO-35	28480	1901-0050
A11J1	1251-4822	6		CONNECTOR 3-PIN M POST TYPE	28480	1251-4822
A11J2	1251-0513	4		CONNECTOR 5-PIN M POST TYPE	28480	1251-0513
A11J3	1250-0257	1		CONNECTOR-RF SMB M PC 50-OHM	28480	1250-0257
A11J4	1200-0607	0		SOCKET-IC 16-CONT DIP DIP-SLDR	28480	1200-0607
A11J6	1250-0257	1		CONNECTOR-RF SMB M PC 50-OHM	28480	1250-0257
A11J7	1200-0607	0		SOCKET-IC 16-CONT DIP DIP-SLDR	28480	1200-0607
A11J8	1200-0541	1		SOCKET-IC 24-CONT DIP DIP-SLDR	28480	1200-0541
A11J9	1251-5066	2	1	CONNECTOR 2-PIN M METRIC POST TYPE	28480	1251-5066
A11J11	1251-4938	5		CONNECTOR 3-PIN M METRIC POST TYPE	28480	1251-4938
A11J12	1250-0257	1		CONNECTOR-RF SMB M PC 50-OHM	28480	1250-0257
A11J13	1200-0607	0		SOCKET-IC 16-CONT DIP DIP-SLDR	28480	1200-0607
A11J14	1200-0796	8	2	SOCKET-IC 8-CONT DIP DIP-SLDR	28480	1200-0796
A11J15	1200-0638	7		SOCKET-IC 14-CONT DIP DIP-SLDR	28480	1200-0638
A11J16	1200-0796	8		SOCKET-IC 8-CONT DIP DIP-SLDR	28480	1200-0796
A11J17	1200-0638	7		SOCKET-IC 14-CONT DIP DIP-SLDR	28480	1200-0638
A11K1	0490-1268	3	2	RELAY-REED 2C 100MA 28VDC 12VDC-COIL 4VA	28480	0490-1268
A11K2	0490-1268	3		RELAY-REED 2C 100MA 28VDC 12VDC-COIL 4VA	28480	0490-1268
A11L1	9140-0129	1		INDUCTOR RF-CH-MLD 220UH 5% .166DX.385LG	28480	9140-0129
A11L2	9140-0129	1		INDUCTOR RF-CH-MLD 220UH 5% .166DX.385LG	28480	9140-0129
A11L3	9140-0129	1		INDUCTOR RF-CH-MLD 220UH 5% .166DX.385LG	28480	9140-0129
A11L4	9140-0098	3		INDUCTOR RF-CH-MLD 2.2UH 10%	28480	9140-0098
A11L5	9140-0098	3		INDUCTOR RF-CH-MLD 2.2UH 10%	28480	9140-0098
A11L6	9140-0098	3		INDUCTOR RF-CH-MLD 2.2UH 10%	28480	9140-0098
A11L7	9140-0098	3		INDUCTOR RF-CH-MLD 2.2UH 10%	28480	9140-0098
A11L8	9140-0129	1		INDUCTOR RF-CH-MLD 220UH 5% .166DX.385LG	28480	9140-0129
A11L9	9140-0129	1		INDUCTOR RF-CH-MLD 220UH 5% .166DX.385LG	28480	9140-0129
A11L10	9140-0129	1		INDUCTOR RF-CH-MLD 220UH 5% .166DX.385LG	28480	9140-0129
A11L11	9140-0129	1		INDUCTOR RF-CH-MLD 220UH 5% .166DX.385LG	28480	9140-0129
A11L12	9140-0129	1		INDUCTOR RF-CH-MLD 220UH 5% .166DX.385LG	28480	9140-0129
A11L13	9140-0129	1		INDUCTOR RF-CH-MLD 220UH 5% .166DX.385LG	28480	9140-0129
A11L14	9140-0112	2	2	INDUCTOR RF-CH-MLD 4.7UH 10%	28480	9140-0112
A11L15	9140-0112	2		INDUCTOR RF-CH-MLD 4.7UH 10%	28480	9140-0112
A11L16	9140-0129	1		INDUCTOR RF-CH-MLD 220UH 5% .166DX.385LG	28480	9140-0129
A11L17	9140-0129	1		INDUCTOR RF-CH-MLD 220UH 5% .166DX.385LG	28480	9140-0129
A11L18	9140-0129	1		INDUCTOR RF-CH-MLD 220UH 5% .166DX.385LG	28480	9140-0129
A11Q1	1854-0215	1		TRANSISTOR NPN SI PD=350MW FT=300MHZ	04713	2N3904
A11Q2	1853-0036	2		TRANSISTOR PNP SI PD=310MW FT=250MHZ	28480	1853-0036
A11Q3	1853-0354	7		TRANSISTOR PNP SI TO-92 PD=350MW	28480	1853-0354
A11Q4	1853-0354	7		TRANSISTOR PNP SI TO-92 PD=350MW	28480	1853-0354
A11Q5	1855-0091	3		TRANSISTOR J-FET N-CHAN D-MODE SI	28480	1855-0091
A11Q6	1853-0036	2		TRANSISTOR PNP SI PD=310MW FT=250MHZ	28480	1853-0036
A11Q7	1855-0125	4		TRANSISTOR-FET 2SK185	28480	1855-0125
A11Q8	1854-0129	6		TRANSISTOR-NPN 2SC1636	28480	1854-0129
A11Q9	1854-0129	6		TRANSISTOR-NPN 2SC1636	28480	1854-0129
A11Q10	1854-0129	6		TRANSISTOR-NPN 2SC1636	28480	1854-0129
A11Q11	1855-0125	4		TRANSISTOR-FET 2SK185	28480	1855-0125
A11Q12	1853-0354	7		TRANSISTOR PNP SI TO-92 PD=350MW	28480	1853-0354
A11Q13	1855-0091	3		TRANSISTOR J-FET N-CHAN D-MODE SI	28480	1855-0091
A11Q14	1855-0125	4		TRANSISTOR-FET 2SK185	28480	1855-0125
A11Q15	1853-0036	2		TRANSISTOR PNP SI PD=310MW FT=250MHZ	28480	1853-0036

See introduction to this section for ordering information
*Indicates factory selected value

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A11Q16	1855-0125	4		TRANSISTOR-FET 2SK185	28480	1855-0125
A11Q17	1853-0354	7		TRANSISTOR PNP SI T0-92 PD=350MW	28480	1853-0354
A11Q18	1853-0354	7		TRANSISTOR PNP SI T0-92 PD=350MW	28480	1853-0354
A11Q19	1855-0091	3		TRANSISTOR J-FET N-CHAN D-MODE SI	28480	1855-0091
A11Q20	1855-0125	4		TRANSISTOR-FET 2SK185	28480	1855-0125
A11Q21	1853-0354	7		TRANSISTOR PNP SI T0-92 PD=350MW	28480	1853-0354
A11Q22	1855-0091	3		TRANSISTOR J-FET N-CHAN D-MODE SI	28480	1855-0091
A11Q23	1853-0036	2		TRANSISTOR PNP SI PD=310MW FT=250MHZ	28480	1853-0036
A11Q24	1853-0036	2		TRANSISTOR PNP SI PD=310MW FT=250MHZ	28480	1853-0036
A11Q25	1855-0125	4		TRANSISTOR-FET 2SK185	28480	1855-0125
A11Q26	1855-0125	4		TRANSISTOR-FET 2SK185	28480	1855-0125
A11R1	0698-3438	3		RESISTOR 147 1% .125W F TC=0+-100	24546	C4-1/8-T0-147R-F
A11R2	0698-3440	7	7	RESISTOR 196 1% .125W F TC=0+-100	24546	C4-1/8-T0-196R-F
A11R3	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A11R4	0757-0199	3		RESISTOR 21.5K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2152-F
A11R5	0698-0084	9		RESISTOR 2.15K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2151-F
A11R6	0757-0419	0		RESISTOR 681 1% .125W F TC=0+-100	24546	C4-1/8-T0-681R-F
A11R7	0757-0419	0		RESISTOR 681 1% .125W F TC=0+-100	24546	C4-1/8-T0-681R-F
A11R8	1810-0207	9	1	NETWORK-RES 8-SIP22.0K OHM X 7	01121	208A223
A11R9	0757-1094	9		RESISTOR 1.47K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1471-F
A11R10	0698-0084	9		RESISTOR 2.15K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2151-F
A11R11	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A11R12	0757-0279	0		RESISTOR 3.16K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3161-F
A11R13	1810-0231	9	1	NETWORK-RES 8-SIP2.2K OHM X 7	01121	208A222
A11R14	0698-0084	9		RESISTOR 2.15K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2151-F
A11R15	0757-0401	0		RESISTOR 100 1% .125W F TC=0+-100	24546	C4-1/8-T0-101-F
A11R16	0698-6624	5	8	RESISTOR 2K .1% .125W F TC=0+-25	28480	0698-6624
A11R17	0698-6624	5		RESISTOR 2K .1% .125W F TC=0+-25	28480	0698-6624
A11R18	0698-3440	7		RESISTOR 196 1% .125W F TC=0+-100	24546	C4-1/8-T0-196R-F
A11R19	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A11R20	0757-0278	9		RESISTOR 1.78K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1781-F
A11R21	0757-1094	9		RESISTOR 1.47K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1471-F
A11R22	0757-0487	2	20	RESISTOR 825K 1% .125W F TC=0+-100	28480	0757-0487
A11R23	0757-0487	2		RESISTOR 825K 1% .125W F TC=0+-100	28480	0757-0487
A11R24	0698-3161	9	2	RESISTOR 38.3K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3832-F
A11R25	0698-3155	1		RESISTOR 4.64K 1% .125W F TC=0+-100	24546	C4-1/8-T0-4641-F
A11R26	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A11R27	0698-3440	7		RESISTOR 196 1% .125W F TC=0+-100	24546	C4-1/8-T0-196R-F
A11R28	0698-6362	8	4	RESISTOR 1K .1% .125W F TC=0+-25	28480	0698-6362
A11R29	0698-6624	5		RESISTOR 2K .1% .125W F TC=0+-25	28480	0698-6624
A11R30	0698-6624	5		RESISTOR 2K .1% .125W F TC=0+-25	28480	0698-6624
A11R31	0698-3440	7		RESISTOR 196 1% .125W F TC=0+-100	24546	C4-1/8-T0-196R-F
A11R32	0698-6362	8		RESISTOR 1K .1% .125W F TC=0+-25	28480	0698-6362
A11R33	0757-0401	0		RESISTOR 100 1% .125W F TC=0+-100	24546	C4-1/8-T0-101-F
A11R34	0698-3260	9		RESISTOR 464K 1% .125W F TC=0+-100	28480	0698-3260
A11R35	0698-3260	9		RESISTOR 464K 1% .125W F TC=0+-100	28480	0698-3260
A11R36	0757-0487	2		RESISTOR 825K 1% .125W F TC=0+-100	28480	0757-0487
A11R37	0757-0487	2		RESISTOR 825K 1% .125W F TC=0+-100	28480	0757-0487
A11R38	0698-3155	1		RESISTOR 4.64K 1% .125W F TC=0+-100	24546	C4-1/8-T0-4641-F
A11R39	0698-3155	1		RESISTOR 4.64K 1% .125W F TC=0+-100	24546	C4-1/8-T0-4641-F
A11R40	0698-3155	1		RESISTOR 4.64K 1% .125W F TC=0+-100	24546	C4-1/8-T0-4641-F
A11R41	0757-0459	8	2	RESISTOR 56.2K 1% .125W F TC=0+-100	24546	C4-1/8-T0-5622-F
A11R42	0698-3160	8		RESISTOR 31.6K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3162-F
A11R43	0698-3157	3		RESISTOR 19.6K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1962-F
A11R44	0757-0443	0	2	RESISTOR 11K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1102-F
A11R45	2100-0554	5		RESISTOR-TRMR 500 10% C TOP-ADJ 1-TRN	28480	2100-0554
A11R46	2100-0554	5		RESISTOR-TRMR 500 10% C TOP-ADJ 1-TRN	28480	2100-0554
A11R47	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A11R48	0698-8827	4	3	RESISTOR 1M 1% .125W F TC=0+-100	28480	0698-8827
A11R49	0698-0084	9		RESISTOR 2.15K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2151-F
A11R50	0698-3444	1		RESISTOR 316 1% .125W F TC=0+-100	24546	C4-1/8-T0-316R-F
A11R51	0698-3155	1		RESISTOR 4.64K 1% .125W F TC=0+-100	24546	C4-1/8-T0-4641-F
A11R52	0757-0199	3		RESISTOR 21.5K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2152-F
A11R53	0698-3161	9		RESISTOR 38.3K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3832-F
A11R54	0698-3155	1		RESISTOR 4.64K 1% .125W F TC=0+-100	24546	C4-1/8-T0-4641-F
A11R55	0757-0279	0		RESISTOR 3.16K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3161-F
A11R56	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A11R57	0698-3153	9		RESISTOR 3.83K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3831-F
A11R58	0698-0084	9		RESISTOR 2.15K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2151-F
A11R59	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A11R60	1810-0205	7	1	NETWORK-RES 8-SIP4.7K OHM X 7	01121	208A472
A11R61	0698-0084	9		RESISTOR 2.15K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2151-F
A11R62	0698-8827	4		RESISTOR 1M 1% .125W F TC=0+-100	28480	0698-8827
A11R63	0698-0084	9		RESISTOR 2.15K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2151-F
A11R64	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A11R65	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F

See introduction to this section for ordering information
*Indicates factory selected value

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A11R66	0757-0442	9	1	RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A11R67	2100-3383	5		RESISTOR-TRMR 50 10% C TOP-ADJ 1-TRN		
A11R68	0698-3155	1		RESISTOR 4.64K 1% .125W F TC=0+-100	24546	C4-1/8-T0-4641-F
A11R69	0757-0459	8		RESISTOR 56.2K 1% .125W F TC=0+-100	24546	C4-1/8-T0-5622-F
A11R70	0698-3160	8		RESISTOR 31.6K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3162-F
A11R71	0698-3157	3	3	RESISTOR 19.6K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1962-F
A11R72	0757-0443	0		RESISTOR 11K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1102-F
A11R73	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A11R74	0683-2255	9		RESISTOR 2.2M 5% .25W FC TC=-900/+1100	01121	C82255
A11R75	0757-0487	2		RESISTOR 825K 1% .125W F TC=0+-100	28480	0757-0487
A11R76	0757-0487	2	3	RESISTOR 825K 1% .125W F TC=0+-100	28480	0757-0487
A11R77	0757-0487	2		RESISTOR 825K 1% .125W F TC=0+-100	28480	0757-0487
A11R78	0757-0487	2		RESISTOR 825K 1% .125W F TC=0+-100	28480	0757-0487
A11R79	0698-3444	1		RESISTOR 316 1% .125W F TC=0+-100	24546	C4-1/8-T0-316R-F
A11R80	0699-0535	7		RESISTOR-FXD 330 OHM 0.1%	28480	0699-0535
A11R81	2100-3345	8	3	RESISTOR-TRMR 10 10% C TOP-ADJ 1-TRN	28480	2100-3345
A11R82	0698-2297	0		RESISTOR-FXD 3.01K OHM .05%	28480	0698-2297
A11R83	0698-0084	9		RESISTOR 2.15K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2151-F
A11R84	0757-0401	0		RESISTOR 100 1% .125W F TC=0+-100	24546	C4-1/8-T0-101-F
A11R85	0698-6624	5		RESISTOR 2K .1% .125W F TC=0+-25	28480	0698-6624
A11R86	0698-6624	5	7	RESISTOR 2K .1% .125W F TC=0+-25	28480	0698-6624
A11R87	0698-3440	7		RESISTOR 196 1% .125W F TC=0+-100	24546	C4-1/8-T0-196R-F
A11R88	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A11R89	0757-0278	9		RESISTOR 1.78K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1781-F
A11R90	0757-1094	9		RESISTOR 1.47K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1471-F
A11R91	0698-3444	1	3	RESISTOR 316 1% .125W F TC=0+-100	24546	C4-1/8-T0-316R-F
A11R92	0698-3438	3		RESISTOR 147 1% .125W F TC=0+-100	24546	C4-1/8-T0-147R-F
A11R93	0698-3438	3		RESISTOR 147 1% .125W F TC=0+-100	24546	C4-1/8-T0-147R-F
A11R94	0757-0487	2		RESISTOR 825K 1% .125W F TC=0+-100	28480	0757-0487
A11R95	0757-0487	2		RESISTOR 825K 1% .125W F TC=0+-100	28480	0757-0487
A11R96	0757-0442	9	1	RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A11R97	0757-0438	3		RESISTOR 5.11K 1% .125W F TC=0+-100	24546	C4-1/8-T0-5111-F
A11R98	0698-3444	1		RESISTOR 316 1% .125W F TC=0+-100	24546	C4-1/8-T0-316R-F
A11R99	0698-3438	3		RESISTOR 147 1% .125W F TC=0+-100	24546	C4-1/8-T0-147R-F
A11R100	2100-3345	8		RESISTOR-TRMR 10 10% C TOP-ADJ 1-TRN	28480	2100-3345
A11R101	0698-2297	0	9	RESISTOR-FXD 3.01K OHM .05%	28480	0698-2297
A11R102	0683-2255	9		RESISTOR 2.2M 5% .25W FC TC=-900/+1100	01121	C82255
A11R103	0698-0084	9		RESISTOR 2.15K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2151-F
A11R104	0757-0199	3		RESISTOR 21.5K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2152-F
A11R105	2100-3345	8		RESISTOR-TRMR 10 10% C TOP-ADJ 1-TRN	28480	2100-3345
A11R106	0699-0535	7	9	RESISTOR-FXD 330 OHM 0.1%	28480	0699-0535
A11R107	0683-2255	9		RESISTOR 2.2M 5% .25W FC TC=-900/+1100	01121	C82255
A11R108	0698-0084	9		RESISTOR 2.15K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2151-F
A11R109	0757-0199	3		RESISTOR 21.5K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2152-F
A11R110	0698-3440	7		RESISTOR 196 1% .125W F TC=0+-100	24546	C4-1/8-T0-196R-F
A11R111	0757-0401	0	2	RESISTOR 100 1% .125W F TC=0+-100	24546	C4-1/8-T0-101-F
A11R112	0698-3260	9		RESISTOR 464K 1% .125W F TC=0+-100	28480	0698-3260
A11R113	0698-3260	9		RESISTOR 464K 1% .125W F TC=0+-100	28480	0698-3260
A11R114	0757-0487	2		RESISTOR 825K 1% .125W F TC=0+-100	28480	0757-0487
A11R115	0757-0487	2		RESISTOR 825K 1% .125W F TC=0+-100	28480	0757-0487
A11R116	0698-3155	1	1	RESISTOR 4.64K 1% .125W F TC=0+-100	24546	C4-1/8-T0-4641-F
A11R117	0698-3260	9		RESISTOR 464K 1% .125W F TC=0+-100	28480	0698-3260
A11R118	0698-7962	6		RESISTOR 976K 1% .125W F TC=0+-100	07716	CEA-1/8-T0-9763-F
A11R119	2100-3253	7		RESISTOR-TRMR 50K 10% C TOP-ADJ 1-TRN	28480	2100-3253
A11R120	0698-6362	8		RESISTOR 1K .1% .125W F TC=0+-25	28480	0698-6362
A11R121	0698-6624	5	7	RESISTOR 2K .1% .125W F TC=0+-25	28480	0698-6624
A11R122	0698-6624	5		RESISTOR 2K .1% .125W F TC=0+-25	28480	0698-6624
A11R123	0698-3440	7		RESISTOR 196 1% .125W F TC=0+-100	24546	C4-1/8-T0-196R-F
A11R124	0698-6362	8		RESISTOR 1K .1% .125W F TC=0+-25	28480	0698-6362
A11R125	0698-0084	9		RESISTOR 2.15K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2151-F
A11R126	0698-3444	1	1	RESISTOR 316 1% .125W F TC=0+-100	24546	C4-1/8-T0-316R-F
A11R127	0698-3444	1		RESISTOR 316 1% .125W F TC=0+-100	24546	C4-1/8-T0-316R-F
A11R128	0757-0421	4		RESISTOR 825 1% .125W F TC=0+-100	24546	C4-1/8-T0-825R-F
A11R129	0698-3444	1		RESISTOR 316 1% .125W F TC=0+-100	24546	C4-1/8-T0-316R-F
A11R130	0698-3438	3		RESISTOR 147 1% .125W F TC=0+-100	24546	C4-1/8-T0-147R-F
A11R131	0757-0280	3	7	RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1001-F
A11R132	0699-0535	7		RESISTOR-FXD 330 OHM 0.1%	28480	0699-0535
A11R133	0757-0487	2		RESISTOR 825K 1% .125W F TC=0+-100	28480	0757-0487
A11R134	0757-0487	2		RESISTOR 825K 1% .125W F TC=0+-100	28480	0757-0487
A11R135	0757-0487	2		RESISTOR 825K 1% .125W F TC=0+-100	28480	0757-0487
A11R136	0757-0487	2	2	RESISTOR 825K 1% .125W F TC=0+-100	28480	0757-0487
A11R137	0698-2297	0		RESISTOR-FXD 3.01K OHM .05%	28480	0698-2297
A11R138	0757-0487	2		RESISTOR 825K 1% .125W F TC=0+-100	28480	0757-0487
A11R139	0757-0487	2		RESISTOR 825K 1% .125W F TC=0+-100	28480	0757-0487
A11R140	0757-0487	2		RESISTOR 825K 1% .125W F TC=0+-100	28480	0757-0487

See introduction to this section for ordering information
*Indicates factory selected value

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A11R141	0757-0487	2		RESISTOR 825K 1% .125W F TC=0+-100	28480	0757-0487
A11R142	0698-0084	9		RESISTOR 2.15K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2151-F
A11R143	0698-8827	4		RESISTOR 1M 1% .125W F TC=0+-100	28480	0698-8827
A11R144	0698-0084	9		RESISTOR 2.15K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2151-F
A11R145	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A11R146	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A11R147	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A11R148	1810-0301	4		NETWORK-RES 16-DIP51.0 OHM X B	01121	316B510
A11R149	0757-0280	4		RESISTOR 1K		
A11R150	0757-0280	4		RESISTOR 1K		
A11S1	3101-1856	5		SWITCH-SL 8-1A DIP-SLIDE-ASSY .1A 50VDC	28480	3101-1856
A11U1	1826-0138	8		IC COMPARATOR GP QUAD 14-DIP-P PKG	01295	LM339N
A11U2	1820-1433	6		IC SHF-RCTR TTL LS R-S SERIAL-IN PRL-OUT	01295	SN74LS164N
A11U3	1826-0138	8		IC COMPARATOR GP QUAD 14-DIP-P PKG	01295	LM339N
A11U4	1826-0933	4		IC NJM78L12A V RGLTR T0-92		NJM78L12A
A11U5	1826-0089	8	7	IC OP AMP WB T0-99 PKG	29832	1322
A11U6	1826-0502	0		IC SWITCH ANLG QUAD 14-DIP-P PKG	04713	MC14066BCP
A11U7	1826-0089	8		IC OP AMP WB T0-99 PKG	29832	1322
A11U8	1826-0043	4		IC OP AMP GP T0-99 PKG	0192B	CA307T
A11U9	1826-0035	4		IC OP AMP LOW-DRIFT T0-99 PKG	27014	LM308AH
A11U10	1826-0282	3		IC V RGLTR T0-92	04713	MC79L12ACP
A11U11	1826-0089	8		IC OP AMP WB T0-99 PKG	29832	1322
A11U12	1826-0502	0		IC SWITCH ANLG QUAD 14-DIP-P PKG	04713	MC14066BCP
A11U13	1826-0089	8		IC OP AMP WB T0-99 PKG	29832	1322
A11U14	1826-0089	8		IC OP AMP WB T0-99 PKG	29832	1322
A11U15	1826-0933	4		IC NJM78L12A V RGLTR T0-92		NJM78L12A
A11U16	1821-0001	4		TRANSISTOR ARRAY 14-PIN PLSTC DIP	0192B	CA3046
A11U17	5080-3077	8		IC OP AMP HA 2525 SEL		
A11U18	5080-3077	8		IC OP AMP HA 2525 SEL		
A11U19	1826-0043	4		IC OP AMP GP T0-99 PKG	0192B	CA307T
A11U20	1826-0035	4		IC OP AMP LOW-DRIFT T0-99 PKG	27014	LM308AH
A11U21	1826-0282	3		IC V RGLTR T0-92	04713	MC79L12ACP
A11U22	1826-0138	8		IC COMPARATOR GP QUAD 14-DIP-P PKG	01295	LM339N
A11W1	1251-4787	2		SHUNT-DIP 8-POSITION	28480	1251-4787
	0340-0060	4	4	TERMINAL-STUD SPCL-FDTHRU PRESS-MTG	98291	011-6809 000 209
	0340-0220	8		BEADS	28480	0340-0220
	1258-0141	8		JUMPER-REM	28480	1258-0141
	3050-0082	8		WASHER-FL NM NO. 4 .116-IN-ID .188-IN-OD	28480	3050-0082
	3050-0082	8		WASHER-FL NM NO. 4 .116-IN-ID .188-IN-OD	28480	3050-0082
	9170-0029	3		CORE-SHIELDING BEAD	28480	9170-0029
A12	04192-66512	2	1	MODULATOR BOARD ASSEMBLY (NOT INCLUDING THE SHIELD CASES)	28480	04192-66512
A12C1	0180-1085	5		CAPACITOR-FXD 4.7UF 16VDC TA	28480	0180-1085
A12C2	0160-3456	6		CAPACITOR-FXD 1000PF +-10% 1KVDC CER	28480	0160-3456
A12C3	0160-0127	2		CAPACITOR-FXD 1UF +-20% 25VDC CER	28480	0160-0127
A12C4	0160-4835	8		CAPACITOR-FXD .1UF 10% 50VDC CER		
A12C5	0160-2204	0		CAPACITOR-FXD 100PF +-5% 300VDC MICA	28480	0160-2204
A12C6	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A12C7	0160-3456	6		CAPACITOR-FXD 1000PF +-10% 1KVDC CER	28480	0160-3456
A12C8	0160-3456	6		CAPACITOR-FXD 1000PF +-10% 1KVDC CER	28480	0160-3456
A12C9	0160-3456	6		CAPACITOR-FXD 1000PF +-10% 1KVDC CER	28480	0160-3456
A12C10	0160-3456	6		CAPACITOR-FXD 1000PF +-10% 1KVDC CER	28480	0160-3456
A12C11	0160-3456	6		CAPACITOR-FXD 1000PF +-10% 1KVDC CER	28480	0160-3456
A12C12	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A12C13	0160-3466	8		CAPACITOR-FXD 100PF +-10% 1KVDC CER	28480	0160-3466
A12C14	0160-3466	8		CAPACITOR-FXD 100PF +-10% 1KVDC CER	28480	0160-3466
A12C15	0180-1085	5		CAPACITOR-FXD 4.7UF 16VDC TA	28480	0180-1085
A12C16	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A12C17	0160-3466	8		CAPACITOR-FXD 100PF +-10% 1KVDC CER	28480	0160-3466
A12C18	0160-3466	8		CAPACITOR-FXD 100PF +-10% 1KVDC CER	28480	0160-3466
A12C19	0140-0210	2		CAPACITOR-FXD 270PF +-5% 300VDC MICA	72136	DM15F271J0300WV1CR
A12C20	0140-0210	2		CAPACITOR-FXD 270PF +-5% 300VDC MICA	72136	DM15F271J0300WV1CR
A12C21	0160-3456	6		CAPACITOR-FXD 1000PF +-10% 1KVDC CER	28480	0160-3456
A12C22	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A12C23	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A12C24	0180-1085	5		CAPACITOR-FXD 4.7UF 16VDC TA	28480	0180-1085
A12C25	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A12C27	0180-1085	5		CAPACITOR-FXD 4.7UF 16VDC TA	28480	0180-1085
A12C28	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A12C29	0140-0192	9		CAPACITOR-FXD 68PF +-5% 300VDC MICA	72136	DM15E680J0300WV1CR
A12C30	0160-2207	3		CAPACITOR-FXD 300PF +-5% 300VDC MICA	28480	0160-2207
A12C31	0140-0210	2	3	CAPACITOR-FXD 270PF +-5% 300VDC MICA	72136	DM15F271J0300WV1CR
A12C32	0160-2207	3		CAPACITOR-FXD 300PF +-5% 300VDC MICA	28480	0160-2207
A12C33	0160-3456	6		CAPACITOR-FXD 1000PF +-10% 1KVDC CER	28480	0160-3456
A12C34	0160-3456	6		CAPACITOR-FXD 1000PF +-10% 1KVDC CER	28480	0160-3456
A12C35	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A12C36	0160-3456	6		CAPACITOR-FXD 1000PF +-10% 1KVDC CER	28480	0160-3456

See introduction to this section for ordering information
*Indicates factory selected value

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A12C37	0140-0192	9		CAPACITOR-FXD 68PF +-5% 300VDC MICA	72136	DM15E680J0300WV1CR
A12C38	0140-0192	9		CAPACITOR-FXD 68PF +-5% 300VDC MICA	72136	DM15E680J0300WV1CR
A12C39	0160-2307	4		CAPACITOR-FXD 47PF +-5% 300VDC MICA	28480	0160-2307
A12C40	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A12C41	0160-3456	6		CAPACITOR-FXD 1000PF +-10% 1KVDC CER	28480	0160-3456
A12C42	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A12C43	0180-1085	5		CAPACITOR-FXD 4.7UF 16VDC TA	28480	0180-1085
A12C44	0180-1085	5		CAPACITOR-FXD 4.7UF 16VDC TA	28480	0180-1085
A12C45	0140-0210	2		CAPACITOR-FXD 270PF +-5% 300VDC MICA	72136	DM15F271J0300WV1CR
A12C46	0140-0192	9		CAPACITOR-FXD 68PF +-5% 300VDC MICA	72136	DM15E680J0300WV1CR
A12C47	0160-3456	6		CAPACITOR-FXD 1000PF +-10% 1KVDC CER	28480	0160-3456
A12C48	0160-3456	6		CAPACITOR-FXD 1000PF +-10% 1KVDC CER	28480	0160-3456
A12C49	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A12C50	0160-2940	1		CAPACITOR-FXD 470PF +-5% 300VDC MICA	28480	0160-2940
A12C51	0160-3456	6		CAPACITOR-FXD 1000PF +-10% 1KVDC CER	28480	0160-3456
A12C52	0140-0210	2		CAPACITOR-FXD 270PF +-5% 300VDC MICA	72136	DM15F271J0300WV1CR
A12C53	0140-0210	2		CAPACITOR-FXD 270PF +-5% 300VDC MICA	72136	DM15F271J0300WV1CR
A12C54	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A12C55	0160-2307	4		CAPACITOR-FXD 47PF +-5% 300VDC MICA	28480	0160-2307
A12C56	0180-1085	5		CAPACITOR-FXD 4.7UF 16VDC TA	28480	0180-1085
A12C57	0140-0210	2		CAPACITOR-FXD 270PF +-5% 300VDC MICA	72136	DM15F271J0300WV1CR
A12C58	0160-3456	6		CAPACITOR-FXD 1000PF +-10% 1KVDC CER	28480	0160-3456
A12C59	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A12C60	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A12C61	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A12C62	0160-4835	8		CAPACITOR-FXD .1UF 10% 50VDC CER		
A12C63	0160-2307	4		CAPACITOR-FXD 47PF +-5% 300VDC MICA	28480	0160-2307
A12C64	0160-3456	6		CAPACITOR-FXD 1000PF +-10% 1KVDC CER	28480	0160-3456
A12C65	0140-0192	9		CAPACITOR-FXD 68PF +-5% 300VDC MICA	72136	DM15E680J0300WV1CR
A12C66	0140-0192	9		CAPACITOR-FXD 68PF +-5% 300VDC MICA	72136	DM15E680J0300WV1CR
A12C67	0160-2207	3		CAPACITOR-FXD 300PF +-5% 300VDC MICA	28480	0160-2207
A12C68	0160-3456	6		CAPACITOR-FXD 1000PF +-10% 1KVDC CER	28480	0160-3456
A12C69	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A12C70	0160-3466	8		CAPACITOR-FXD 100PF +-10% 1KVDC CER	28480	0160-3466
A12C71	0160-3466	8		CAPACITOR-FXD 100PF +-10% 1KVDC CER	28480	0160-3466
A12C72	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A12C73	0180-1085	5		CAPACITOR-FXD 4.7UF 16VDC TA	28480	0180-1085
A12C74	0140-0210	2		CAPACITOR-FXD 270PF +-5% 300VDC MICA	72136	DM15F271J0300WV1CR
A12C75	0160-3456	6		CAPACITOR-FXD 1000PF +-10% 1KVDC CER	28480	0160-3456
A12C76	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A12C77	0160-0127	2		CAPACITOR-FXD 1UF +-20% 25VDC CER	28480	0160-0127
A12C78	0160-4835	8		CAPACITOR-FXD .1UF 10% 50VDC CER		
A12C79	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A12C80	0180-1085	5		CAPACITOR-FXD 4.7UF 16VDC TA	28480	0180-1085
A12C81	0140-0210	2		CAPACITOR-FXD 270PF +-5% 300VDC MICA	72136	DM15F271J0300WV1CR
A12C82	0160-2204	0		CAPACITOR-FXD 100PF +-5% 300VDC MICA	28480	0160-2204
A12C83	0160-2204	0		CAPACITOR-FXD 100PF +-5% 300VDC MICA	28480	0160-2204
A12C84	0160-2940	1		CAPACITOR-FXD 470PF +-5% 300VDC MICA	28480	0160-2940
A12C85	0160-3456	6		CAPACITOR-FXD 1000PF +-10% 1KVDC CER	28480	0160-3456
A12C86	0160-2204	0		CAPACITOR-FXD 100PF +-5% 300VDC MICA	28480	0160-2204
A12C87	0160-0127	2		CAPACITOR-FXD 1UF +-20% 25VDC CER	28480	0160-0127
A12C88	0160-4835	8		CAPACITOR-FXD .1UF 10% 50VDC CER		
A12C89	0160-3456	6		CAPACITOR-FXD 1000PF +-10% 1KVDC CER	28480	0160-3456
A12C90	0160-3456	6		CAPACITOR-FXD 1000PF +-10% 1KVDC CER	28480	0160-3456
A12C91	0160-3456	6		CAPACITOR-FXD 1000PF +-10% 1KVDC CER	28480	0160-3456
A12C92	0160-3456	6		CAPACITOR-FXD 1000PF +-10% 1KVDC CER	28480	0160-3456
A12C93	0160-2257	3		CAPACITOR-FXD 10PF +-5% 500VDC CER 0+-60	28480	0160-2257
A12C94	0160-4835	8		CAPACITOR-FXD .1UF 10% 50VDC CER		
A12C95	0160-3847	9		CAPACITOR-FXD .01UF +100-0% 50VDC CER	28480	0160-3847
A12CR1	1901-0518	8		DIODE-SM SIG SCHOTTKY	28480	1901-0518
A12CR2	1901-0518	8		DIODE-SM SIG SCHOTTKY	28480	1901-0518
A12CR3	1901-0639	4	9	DIODE-PIN	28480	5082-3080
A12CR4	1901-0639	4		DIODE-PIN	28480	5082-3080
A12CR5	1901-0639	4		DIODE-PIN	28480	5082-3080
A12CR6	1901-0639	4		DIODE-PIN	28480	5082-3080
A12CR7	1901-0639	4		DIODE-PIN	28480	5082-3080
A12CR8	1901-0639	4		DIODE-PIN	28480	5082-3080
A12CR9	1901-0639	4		DIODE-PIN	28480	5082-3080
A12CR10	1901-0639	4		DIODE-PIN	28480	5082-3080
A12CR11	1901-0639	4		DIODE-PIN	28480	5082-3080
A12E1	1906-0235	6	3	DIODE	28480	1906-0235
A12E2	1906-0235	6		DIODE	28480	1906-0235
A12E3	1906-0235	6		DIODE	28480	1906-0235

See introduction to this section for ordering information
*Indicates factory selected value

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A12J1	1250-0257	1		CONNECTOR-RF SMB M PC 50-OHM	28480	1250-0257
A12J2	1250-0257	1		CONNECTOR-RF SMB M PC 50-OHM	28480	1250-0257
A12J3	1250-0257	1		CONNECTOR-RF SMB M PC 50-OHM	28480	1250-0257
A12J4	1250-0257	1		CONNECTOR-RF SMB M PC 50-OHM	28480	1250-0257
A12J5	1250-0257	1		CONNECTOR-RF SMB M PC 50-OHM	28480	1250-0257
A12J6	1250-0257	1		CONNECTOR-RF SMB M PC 50-OHM	28480	1250-0257
A12J7	1250-0257	1		CONNECTOR-RF SMB M PC 50-OHM	28480	1250-0257
A12J8	1250-0257	1		CONNECTOR-RF SMB M PC 50-OHM	28480	1250-0257
A12J9	1250-0257	1		CONNECTOR-RF SMB M PC 50-OHM	28480	1250-0257
A12J10	1250-0257	1		CONNECTOR-RF SMB M PC 50-OHM	28480	1250-0257
A12J11	1200-0607	0		SOCKET-IC 16-CONT DIP DIP-SLDR	28480	1200-0607
A12J12	1250-0257	1		CONNECTOR-RF SMB M PC 50-OHM	28480	1250-0257
A12L1	9140-0114	4		INDUCTOR RF-CH-MLD 10UH 10% .166DX.385LG	28480	9140-0114
A12L2	9140-0114	4		INDUCTOR RF-CH-MLD 10UH 10% .166DX.385LG	28480	9140-0114
A12L3	9140-0114	4		INDUCTOR RF-CH-MLD 10UH 10% .166DX.385LG	28480	9140-0114
A12L4	9100-2259	8	5	INDUCTOR RF-CH-MLD 1.5UH 10% .105DX.26LG	28480	9100-2259
A12L5	9100-2259	8		INDUCTOR RF-CH-MLD 1.5UH 10% .105DX.26LG	28480	9100-2259
A12L6	9140-0114	4		INDUCTOR RF-CH-MLD 10UH 10% .166DX.385LG	28480	9140-0114
A12L7	9100-2259	8		INDUCTOR RF-CH-MLD 1.5UH 10% .105DX.26LG	28480	9100-2259
A12L8	9140-0141	7	6	INDUCTOR RF-CH-MLD 680NH 10% .105DX.26LG	28480	9140-0141
A12L9	9140-0158	8		INDUCTOR RF-CH-MLD 1UH 10% .105DX.26LG	28480	9140-0158
A12L10	9100-2259	6		INDUCTOR RF-CH-MLD 1.5UH 10% .105DX.26LG	28480	9100-2259
A12L11	9140-0141	7		INDUCTOR RF-CH-MLD 680NH 10% .105DX.26LG	28480	9140-0141
A12L12	9100-2258	7	6	INDUCTOR RF-CH-MLD 1.2UH 10% .105DX.26LG	28480	9100-2258
A12L13	9100-2258	7		INDUCTOR RF-CH-MLD 1.2UH 10% .105DX.26LG	28480	9100-2258
A12L14	9140-0141	7		INDUCTOR RF-CH-MLD 680NH 10% .105DX.26LG	28480	9140-0141
A12L15	9100-2258	7		INDUCTOR RF-CH-MLD 1.2UH 10% .105DX.26LG	28480	9100-2258
A12L16	9140-0158	6		INDUCTOR RF-CH-MLD 1UH 10% .105DX.26LG	28480	9140-0158
A12L17	9140-0158	6		INDUCTOR RF-CH-MLD 1UH 10% .105DX.26LG	28480	9140-0158
A12L18	9140-0114	4		INDUCTOR RF-CH-MLD 10UH 10% .166DX.385LG	28480	9140-0114
A12L19	9100-2251	0	3	INDUCTOR RF-CH-MLD 220NH 10% .105DX.26LG	28480	9100-2251
A12L20	9100-2258	7		INDUCTOR RF-CH-MLD 1.2UH 10% .105DX.26LG	28480	9100-2258
A12L21	9100-2249	6	5	INDUCTOR RF-CH-MLD 150NH 10% .105DX.26LG	28480	9100-2249
A12L22	9100-2259	8		INDUCTOR RF-CH-MLD 1.5UH 10% .105DX.26LG	28480	9100-2259
A12L23	9100-2247	4	3	INDUCTOR RF-CH-MLD 100NH 10% .105DX.26LG	28480	9100-2247
A12L24	9140-0141	7		INDUCTOR RF-CH-MLD 680NH 10% .105DX.26LG	28480	9140-0141
A12L25	9140-0158	6		INDUCTOR RF-CH-MLD 1UH 10% .105DX.26LG	28480	9140-0158
A12L26	9100-2249	6		INDUCTOR RF-CH-MLD 150NH 10% .105DX.26LG	28480	9100-2249
A12L27	9100-2251	0		INDUCTOR RF-CH-MLD 220NH 10% .105DX.26LG	28480	9100-2251
A12L28	9140-0141	7		INDUCTOR RF-CH-MLD 680NH 10% .105DX.26LG	28480	9140-0141
A12L29	9100-2258	7		INDUCTOR RF-CH-MLD 1.2UH 10% .105DX.26LG	28480	9100-2258
A12L30	9100-2258	7		INDUCTOR RF-CH-MLD 1.2UH 10% .105DX.26LG	28480	9100-2258
A12L31	9140-0141	7		INDUCTOR RF-CH-MLD 680NH 10% .105DX.26LG	28480	9140-0141
A12L32	9100-2249	6		INDUCTOR RF-CH-MLD 150NH 10% .105DX.26LG	28480	9100-2249
A12L33	9100-2249	6		INDUCTOR RF-CH-MLD 150NH 10% .105DX.26LG	28480	9100-2249
A12L34	9100-2247	4		INDUCTOR RF-CH-MLD 100NH 10% .105DX.26LG	28480	9100-2247
A12L35	9100-2249	6		INDUCTOR RF-CH-MLD 150NH 10% .105DX.26LG	28480	9100-2249
A12L36	9100-2247	4		INDUCTOR RF-CH-MLD 100NH 10% .105DX.26LG	28480	9100-2247
A12L37	9140-0114	4		INDUCTOR RF-CH-MLD 10UH 10% .166DX.385LG	28480	9140-0114
A12L38	9140-0114	4		INDUCTOR RF-CH-MLD 10UH 10% .166DX.385LG	28480	9140-0114
A12L39	9100-2251	0		INDUCTOR RF-CH-MLD 220NH 10% .105DX.26LG	28480	9100-2251
A12L40	9100-0368	6	1	INDUCTOR RF-CH-MLD 330NH 10% .105DX.26LG	28480	9100-0368
A12L41	9140-0114	4		INDUCTOR RF-CH-MLD 10UH 10% .166DX.385LG	28480	9140-0114
A12L42	9140-0114	4		INDUCTOR RF-CH-MLD 10UH 10% .166DX.385LG	28480	9140-0114
A12L43	9140-0114	4		INDUCTOR RF-CH-MLD 10UH 10% .166DX.385LG	28480	9140-0114
A12L44	9140-0114	4		INDUCTOR RF-CH-MLD 10UH 10% .166DX.385LG	28480	9140-0114
A12Q1	1853-0354	7		TRANSISTOR PNP SI TO-92 PD=350MW	28480	1853-0354
A12Q2	1854-0215	1		TRANSISTOR NPN SI PD=350MW FT=300MHZ	04713	2N3904
A12Q3	1854-0215	1		TRANSISTOR NPN SI PD=350MW FT=300MHZ	04713	2N3904
A12Q4	1854-0628	0		TRANSISTOR NPN SI TO-92 PD=625MW	04713	MPS-H17
A12Q5	1854-0215	1		TRANSISTOR NPN SI PD=350MW FT=300MHZ	04713	2N3904
A12Q6	1853-0036	2		TRANSISTOR PNP SI PD=310MW FT=250MHZ	28480	1853-0036
A12Q7	1854-0247	9		TRANSISTOR NPN SI TO-39 PD=1W FT=800MHZ	28480	1854-0247
A12Q8	1854-0215	1		TRANSISTOR NPN SI PD=350MW FT=300MHZ	04713	2N3904
A12Q9	1854-0628	0		TRANSISTOR NPN SI TO-92 PD=625MW	04713	MPS-H17
A12Q10	1853-0036	2		TRANSISTOR PNP SI PD=310MW FT=250MHZ	28480	1853-0036
A12Q11	1854-0215	1		TRANSISTOR NPN SI PD=350MW FT=300MHZ	04713	2N3904
A12Q12	1854-0247	9		TRANSISTOR NPN SI TO-39 PD=1W FT=800MHZ	28480	1854-0247
A12Q13	1854-0247	9		TRANSISTOR NPN SI TO-39 PD=1W FT=800MHZ	28480	1854-0247
A12Q14	1854-0247	9		TRANSISTOR NPN SI TO-39 PD=1W FT=800MHZ	28480	1854-0247
A12Q15	1854-0215	1		TRANSISTOR NPN SI PD=350MW FT=300MHZ	04713	2N3904
A12R1	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1001-F
A12R2	0698-0082	7		RESISTOR 464 1% .125W F TC=0+-100	24546	C4-1/8-T0-4640-F
A12R3	0698-3438	3		RESISTOR 147 1% .125W F TC=0+-100	24546	C4-1/8-T0-147R-F
A12R4	0757-0397	3		RESISTOR 68.1 1% .125W F TC=0+-100	24546	C4-1/8-T0-68R1-F
A12R5	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1001-F

See introduction to this section for ordering information
*Indicates factory selected value

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A12R6	0757-0395	1		RESISTOR 56.2 1% .125W F TC=0+-100	24546	C4-1/8-T0-56R2-F
A12R7	0757-1094	9		RESISTOR 1.47K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1471-F
A12R8	0698-3438	3		RESISTOR 147 1% .125W F TC=0+-100	24546	C4-1/8-T0-147R-F
A12R9	0698-0084	9		RESISTOR 2.15K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2151-F
A12R10	0757-0279	0		RESISTOR 3.16K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3161-F
A12R11	0757-0401	0		RESISTOR 100 1% .125W F TC=0+-100	24546	C4-1/8-T0-101-F
A12R12	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1001-F
A12R13	0757-0421	4		RESISTOR 825 1% .125W F TC=0+-100	24546	C4-1/8-T0-825R-F
A12R14	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1001-F
A12R15	0698-3160	8		RESISTOR 31.6K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3162-F
A12R16	0698-0084	9		RESISTOR 2.15K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2151-F
A12R17	0757-0397	3		RESISTOR 68.1 1% .125W F TC=0+-100	24546	C4-1/8-T0-68R1-F
A12R18	0698-3444	1		RESISTOR 316 1% .125W F TC=0+-100	24546	C4-1/8-T0-316R-F
A12R19	0698-3438	3		RESISTOR 147 1% .125W F TC=0+-100	24546	C4-1/8-T0-147R-F
A12R20	0698-3438	3		RESISTOR 147 1% .125W F TC=0+-100	24546	C4-1/8-T0-147R-F
A12R21	0757-1094	9		RESISTOR 1.47K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1471-F
A12R22	0757-0442	9		RESISTOR 10K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1002-F
A12R23	0757-0419	0		RESISTOR 681 1% .125W F TC=0+-100	24546	C4-1/8-T0-681R-F
A12R24	0757-0421	4		RESISTOR 825 1% .125W F TC=0+-100	24546	C4-1/8-T0-825R-F
A12R25	0757-0397	3		RESISTOR 68.1 1% .125W F TC=0+-100	24546	C4-1/8-T0-68R1-F
A12R26	0698-0084	9		RESISTOR 2.15K 1% .125W F TC=0+-100	24546	C4-1/8-T0-2151-F
A12R27	0698-3160	8		RESISTOR 31.6K 1% .125W F TC=0+-100	24546	C4-1/8-T0-3162-F
A12R28	2100-0580	7	1	RESISTOR-TRMR 500K 10% C TOP-ADJ 1-TRN	28480	2100-0580
A12R29	0698-3260	9		RESISTOR 464K 1% .125W F TC=0+-100	28480	0698-3260
A12R30	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1001-F
A12R31	0698-4037	0		RESISTOR 46.4 1% .125W F TC=0+-100	24546	C4-1/8-T0-46R4-F
A12R32	0757-0419	0		RESISTOR 681 1% .125W F TC=0+-100	24546	C4-1/8-T0-681R-F
A12R33	0757-0395	1		RESISTOR 56.2 1% .125W F TC=0+-100	24546	C4-1/8-T0-56R2-F
A12R34	2100-3383	4		RESISTOR-TRMR 50 10% C TOP-ADJ 1-TRN	28480	2100-3383
A12R35	0698-0082	7		RESISTOR 464 1% .125W F TC=0+-100	24546	C4-1/8-T0-4640-F
A12R36	0757-0419	0		RESISTOR 681 1% .125W F TC=0+-100	24546	C4-1/8-T0-681R-F
A12R37	0698-3444	1		RESISTOR 316 1% .125W F TC=0+-100	24546	C4-1/8-T0-316R-F
A12R38	0757-1094	9		RESISTOR 1.47K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1471-F
A12R39	0757-0421	4		RESISTOR 825 1% .125W F TC=0+-100	24546	C4-1/8-T0-825R-F
A12R40	0757-0401	0		RESISTOR 100 1% .125W F TC=0+-100	24546	C4-1/8-T0-101-F
A12R41	0698-3441	8		RESISTOR 215 1% .125W F TC=0+-100	24546	C4-1/8-T0-215R-F
A12R42	0698-3444	1		RESISTOR 316 1% .125W F TC=0+-100	24546	C4-1/8-T0-316R-F
A12R43	0757-0397	3		RESISTOR 68.1 1% .125W F TC=0+-100	24546	C4-1/8-T0-68R1-F
A12R44	0757-0280	3		RESISTOR 1K 1% .125W F TC=0+-100	24546	C4-1/8-T0-1001-F
A12R45	0698-3444	1		RESISTOR 316 1% .125W F TC=0+-100	24546	C4-1/8-T0-316R-F
A12R46	0757-0401	0		RESISTOR 100 1% .125W F TC=0+-100	24546	C4-1/8-T0-101-F
A12R47	0757-0397	3		RESISTOR 68.1 1% .125W F TC=0+-100	24546	C4-1/8-T0-68R1-F
A12R48	0698-3441	8		RESISTOR 215 1% .125W F TC=0+-100	24546	C4-1/8-T0-215R-F
A12R49	0698-0082	7		RESISTOR 464 1% .125W F TC=0+-100	24546	C4-1/8-T0-4640-F
A12R50	0698-3444	1		RESISTOR 316 1% .125W F TC=0+-100	24546	C4-1/8-T0-316R-F
A12R51	0698-3439	4	6	RESISTOR 178 1% .125W F TC=0+-100	24546	C4-1/8-T0-178R-F
A12R52	0698-3444	1		RESISTOR 316 1% .125W F TC=0+-100	24546	C4-1/8-T0-316R-F
A12R53	0757-0419	0		RESISTOR 681 1% .125W F TC=0+-100	24546	C4-1/8-T0-681R-F
A12R54	0698-3428	1		RESISTOR 14.7 1% .125W F TC=0+-100	03888	PME55-1/8-T0-14R7-F
A12R55	0698-3439	4		RESISTOR 178 1% .125W F TC=0+-100	24546	C4-1/8-T0-178R-F
A12R56	0698-0082	7		RESISTOR 464 1% .125W F TC=0+-100	24546	C4-1/8-T0-4640-F
A12R57	0757-0397	3		RESISTOR 68.1 1% .125W F TC=0+-100	24546	C4-1/8-T0-68R1-F
A12R58	0757-0180	2		RESISTOR 31.6 1% .125W F TC=0+-100	28480	0757-0180
A12R59	0698-4037	0		RESISTOR 46.4 1% .125W F TC=0+-100	24546	C4-1/8-T0-46R4-F
A12R60	0757-0397	3		RESISTOR 68.1 1% .125W F TC=0+-100	24546	C4-1/8-T0-68R1-F
A12R61	0757-0401	0		RESISTOR 100 1% .125W F TC=0+-100	24546	C4-1/8-T0-101-F
A12R62	0757-0180	2		RESISTOR 31.6 1% .125W F TC=0+-100	28480	0757-0180
A12R63	0698-4037	0		RESISTOR 46.4 1% .125W F TC=0+-100	24546	C4-1/8-T0-46R4-F
A12R64	0698-3439	4		RESISTOR 178 1% .125W F TC=0+-100	24546	C4-1/8-T0-178R-F
A12R65	0698-3444	1		RESISTOR 316 1% .125W F TC=0+-100	24546	C4-1/8-T0-316R-F
A12R66	0757-0397	3		RESISTOR 68.1 1% .125W F TC=0+-100	24546	C4-1/8-T0-68R1-F
A12R67	0757-0401	0		RESISTOR 100 1% .125W F TC=0+-100	24546	C4-1/8-T0-101-F
A12R68	0757-0180	2		RESISTOR 31.6 1% .125W F TC=0+-100	28480	0757-0180
A12R69	0698-3439	4		RESISTOR 178 1% .125W F TC=0+-100	24546	C4-1/8-T0-178R-F
A12R70	0698-3444	1		RESISTOR 316 1% .125W F TC=0+-100	24546	C4-1/8-T0-316R-F
A12R71	0757-0399	5		RESISTOR 82.5 1% .125W F TC=0+-100	24546	C4-1/8-T0-82R5-F
A12R72	0757-0180	2		RESISTOR 31.6 1% .125W F TC=0+-100	28480	0757-0180
A12R73	0757-0401	0		RESISTOR 100 1% .125W F TC=0+-100	24546	C4-1/8-T0-101-F
A12R74	0698-3439	4		RESISTOR 178 1% .125W F TC=0+-100	24546	C4-1/8-T0-178R-F
A12R75	0698-0082	7		RESISTOR 464 1% .125W F TC=0+-100	24546	C4-1/8-T0-4640-F
A12R76	0757-0399	5		RESISTOR 82.5 1% .125W F TC=0+-100	24546	C4-1/8-T0-82R5-F
A12R77	0757-0397	3		RESISTOR 68.1 1% .125W F TC=0+-100	24546	C4-1/8-T0-68R1-F
A12R78	0698-3439	4		RESISTOR 178 1% .125W F TC=0+-100	24546	C4-1/8-T0-178R-F
A12R79	0698-3444	1		RESISTOR 316 1% .125W F TC=0+-100	24546	C4-1/8-T0-316R-F
A12R80	0757-0180	2		RESISTOR 31.6 1% .125W F TC=0+-100	28480	0757-0180

See introduction to this section for ordering information
*Indicates factory selected value

Table 6-3. Replaceable Parts

Reference Designation	HP Part Number	C D	Qty	Description	Mfr Code	Mfr Part Number
A12T1	9100-0822	7		TRANSFORMER:PULSE(11307)	28480	9100-0822
A12T2	9100-0822	7		TRANSFORMER:PULSE(11307)	28480	9100-0822
A12T3	9100-0822	7		TRANSFORMER:PULSE(11307)	28480	9100-0822
A12T4	9100-0822	7		TRANSFORMER:PULSE(11307)	28480	9100-0822
A12T5	9100-0822	7		TRANSFORMER:PULSE(11307)	28480	9100-0822
A12T6	9100-0822	7		TRANSFORMER:PULSE(11307)	28480	9100-0822
A12U1	1826-0933	4		IC NJM78L12A V RGLTR TO-92		NJM78L12A
A12U2	1826-0139	9		IC OP AMP GP DUAL 8-DIP-P PKG	0192B	CA1458G
A12U3	1826-0282	3		IC V RGLTR TO-92	04713	MC79L12ACP
A12U4	1826-0933	4		IC NJM78L12A V RGLTR TO-92		NJM78L12A
A12U5	1826-0933	4		IC NJM78L12A V RGLTR TO-92		NJM78L12A
A12U6	1826-0933	4		IC NJM78L12A V RGLTR TO-92		NJM78L12A
A12U7	1826-0282	3		IC V RGLTR TO-92	04713	MC79L12ACP
	04192-61683	8	1	CABLE ASSEMBLY 240MM WHT	28480	04192-61683
	04192-61684	9	1	CABLE ASSEMBLY-CDAX 180MM RED	28480	04192-61684
	0340-0220	8		BEADS	28480	0340-0220
	3050-0082	8		WASHER-FL NM NO. 4 .116-IN-ID .188-IN-OD	28480	3050-0082
	9170-0029	3		CORE-SHIELDING BEAD	28480	9170-0029
	04192-00671	6	1	SHIELD	28480	04192-00671
	04192-00672	7	1	SHIELD	28480	04192-00672
A13	04262-66503		1	HP-1B CONNECTOR BOARD ASSEMBLY		

See introduction to this section for ordering information
*Indicates factory selected value

Table 6-4. Board Mounted Hardware


Board Name	Part Number	Q'ty	Description	Location	
A1 Range Resistor/Null Detector Board Assembly (04192-66501)	04192-00691	1	SHIELD CASE (A1-1)	Component Side	
	04192-00693	1	SHIELD CASE (A1-2)		
	04192-00613	1	SHIELD CASE (A1-3)		
	04192-00694	1	SHIELD CASE (A1-4)		
	04192-00692	1	SHIELD CASE (A1-5)		
	04192-00611	1	SHIELD CASE (A1-6)		
	1400-0115	24	SCREW		
	1400-0866	1	CABLE CLAMP		
	A3 Reference Frequency Generator Board (04192-66503)	04192-00612	2	SHIELD CASE	Pattern Side
		04192-00695	2	SHIELD CASE	
04192-00696		2	SHIELD CASE		
2360-0121		16	SCREW		
2360-0123		8	SCREW		
A4 Fractional N Loop Board Assembly (04192-66504)	04192-20001	1	SHIELD	Component Side	
	04192-00604	1	SHIELD PLATE		
	2200-0123	4	SCREW		
	2190-0226	4	WASHER		
A5 Display and Keyboard Control Board Assembly (04192-66505)	04192-20002	1	SHIELD	Pattern Side	
	0624-0077	2	SCREW		
A7 Power Supply Board Assembly (04192-66507)	04192-00642	1	SHIELD	Pattern Side	
	2360-0123	6	SCREW		
A8 Floating Power Supply/Bias Supply Board Assembly (04192-66508)	04192-00621	1	SHIELD CASE	Component Side	
	2360-0115	4	SCREW		
A8 Floating Power Supply/Bias Supply Board Assembly (04192-66508)	04192-00622	1	SHIELD CASE	Pattern Side	
	2360-0202	4	SCREW		
	04192-00623	1	SHIELD CASE (OUTER)		
	04192-00625	1	SHIELD CASE (INNER)		
	04192-00627	1	SHIELD CASE		
	2360-0115	10	SCREW		
	1400-0866	1	CABLE CLAMP		
	04192-00624	1	SHIELD CASE (OUTER)		
	04192-00626	1	SHIELD CASE (INNER)		
	04192-00628	1	SHIELD CASE		
2360-0200	4	SCREW			
2360-0202	4	SCREW			
2360-0121	2	SCREW			
6960-0016	1	PLUG HOLE			

Table 6-4. Board Mounting Hardware (cont'd)

Board Name	Part Number	Q'ty	Description	Location
A11 Process Amplifier Board Assembly (04192-66511)	04192-00615	1	SHIELD CASE (A11-1)	Component Side
	04192-00614	1	SHIELD CASE (A11-2)	
	04192-00616	1	SHIELD CASE (A11-3)	
	04192-00619	1	SHIELD CASE (A11-4)	
	2360-0115	16	SCREW	
	04192-00612	4	SHIELD CASE	Pattern Side
2360-0121	6	SCREW		
A12 Modulator Board Assembly (04192-66512)	04192-00667	1	SHIELD CASE (A12-1)	Component Side
	04192-00666	1	SHIELD CASE (A12-2)	
	04192-00661	1	SHEILD CASE (A12-3)	
	04192-00668	1	SHIELD CASE (A12-4)	
	04192-00669	1	SHIELD CASE (A12-5)	
	2360-0115	14	SCREW	
	1400-0866	2	CABLE CLAMP	
	04192-00663	1	SHIELD CASE	Pattern Side
	04192-00664	1	SHIELD CASE (OUTER)	
	04192-00665	2	SHIELD CASE (INNER)	
	2360-0123	4	SCREW	
	2360-0202	6	SCREW	
	2360-0200	4	SCREW	
6960-0016	2	PLUG HOLE		
	2360-0115	57	SCREW-MOUNTING	

Table 6-5. Interconnecting Cable Assemblies

Part Number	Description	From	To
04192-61601		A4J3/A11J2/A8J2	A7J5
04192-61602		A2J1/A3J1/A9J2	A7J4
04192-61603	6 WIRES	A6J7	A7J3
04192-61604		A1J9	A8J3
04192-61611		A2J5	A3J2
04192-61612	5 WIRES	RECORDER OUTPUT	A9J3
04192-61613	2 WIRES	EXT TRIGGER	A11J9
04192-61614	3 WIRES	A1J1	A11J11
04192-61621	POWER LINE CABLE 3 WIRES	LINE MODULE	A7J1
04192-61631	FLAT CABLE	A2J2	A6J5
04192-61632	FLAT CABLE	A6J4	A11J8
04192-61633	FLAT CABLE	A2J4	A4J7
04192-61633	FLAT CABLE	A6J3	A8J1
04192-61633	FLAT CABLE	A6J2	A9J1
04192-61635	FLAT CABLE	A1J4	A11J12
04192-61635	FLAT CABLE	A1J5	A12J11
04192-61641	COAXIAL CABLE	L _{CUR}	A1J7
04192-61642	COAXIAL CABLE	H _{POT}	A11J6
04192-61643	COAXIAL CABLE	H _{CUR}	A1J2
04192-61644	COAXIAL CABLE	L _{POT}	A1J12
04192-61651	COAXIAL CABLE	CHANNEL A	A11J10
04192-61652	COAXIAL CABLE	CHANNEL B	A11J5
04192-61653	COAXIAL CABLE H (SHORT)	EXT VCO	A12J1
04192-61654	COAXIAL CABLE H (LONG)	VCO OUTPUT	A4J1
04192-61657	COAXIAL CABLE L	A1J8	A12J5
04192-61658	COAXIAL CABLE M	A1J6	A12J4
04192-61659	COAXIAL CABLE N	A11J12	A12J7
04192-61660	COAXIAL CABLE O	A1J13	A12J6
04192-61661	COAXIAL CABLE A	A2J3	A11J3
04192-61662	COAXIAL CABLE B	A1J15	A3J5
04192-61663	COAXIAL CABLE C	A1J14	A3J6
04192-61664	COAXIAL CABLE D	A1J3	A8J4
04192-61665	COAXIAL CABLE E	A3J8	A4J5
04192-61666	COAXIAL CABLE F	A3J9	A12J3
04192-61667	COAXIAL CABLE G	A3J4	A6J8
04192-61668	COAXIAL CABLE I	A3J10	A12J8
04192-61671	COAXIAL CABLE K	EXT REFERENCE	A3J7
04192-61672	COAXIAL CABLE J	1MHz OUTPUT	A3J3
04192-61691	1 WIRE	GND TERMINAL	A1GND
	FRONT PANEL CONTROL CABLE	A5	A6J7
04192-61609	HP-IB CABLE	A13	A6J1
	TRANSFORMER CABLE	TRANSFORMER	A7J2

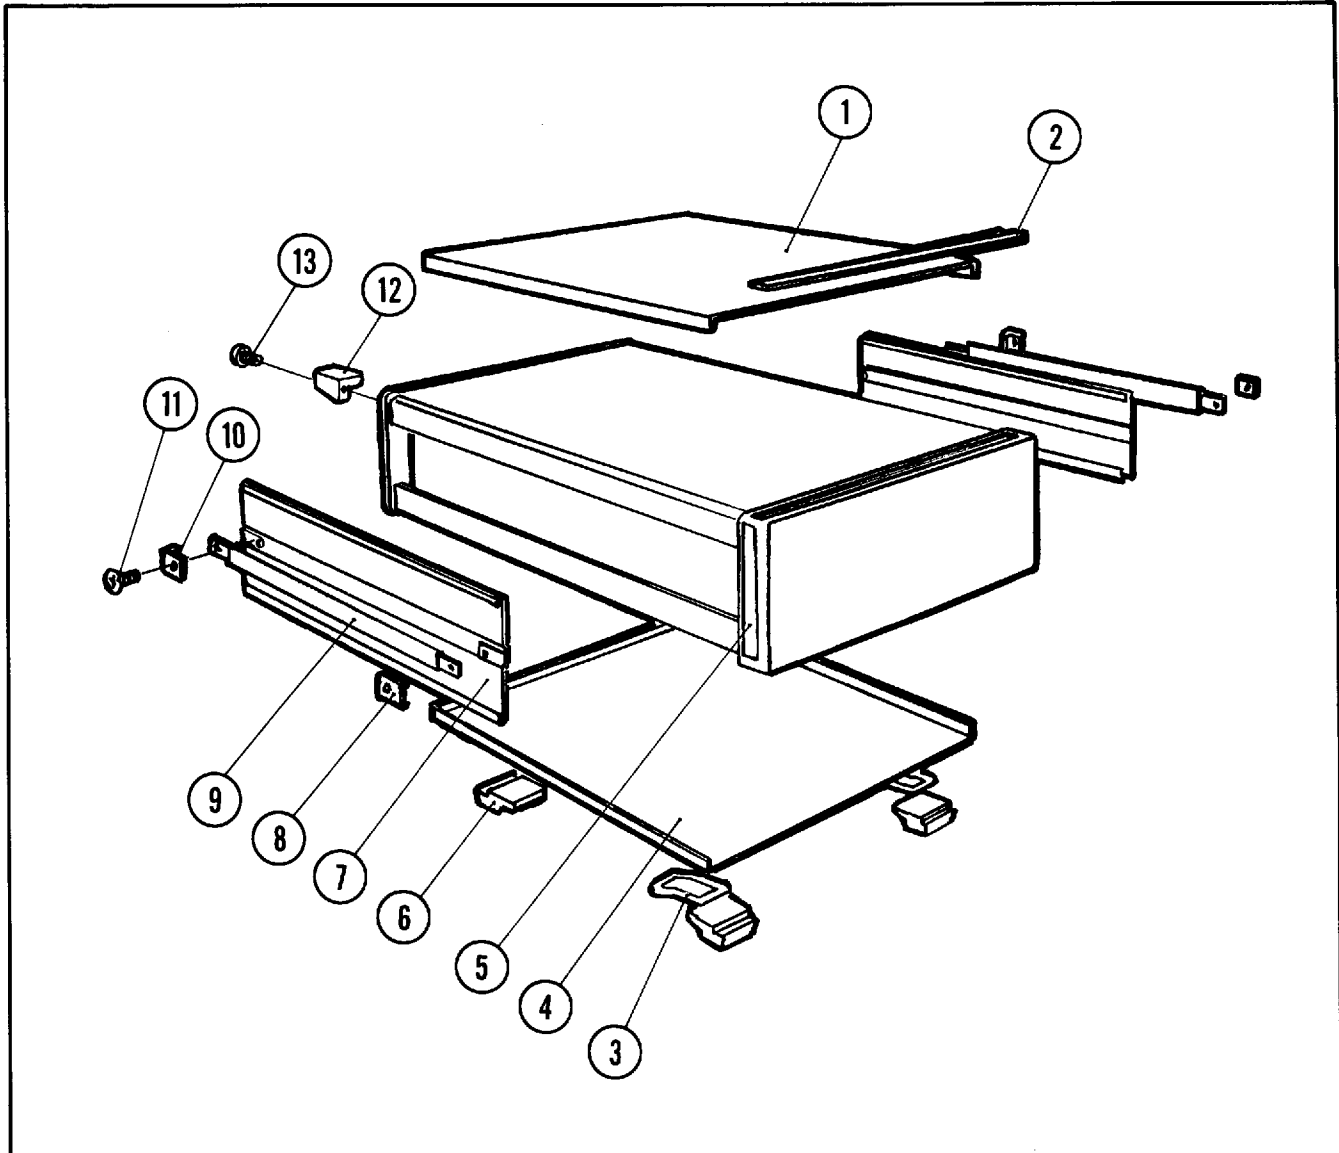

Reference	HP Part No.	Qty	Description
1	5060-9836	1	TOP COVER
2	5040-7202	1	TOP TRIM
3	1460-1345	2	STAND
4	5060-9848	1	BOTTOM COVER
5	5001-0441	2	SIDE TRIM
6	5040-7201	4	FOOT (BOTTOM)
7	5060-9948	2	SIDE COVER
8	5040-7219	2	STRAP HANDLE CAP (FRONT)
9	5060-9805	2	STRAP HANDLE
10	5040-7220	2	STRAP HANDLE CAP (REAR)
11	2680-0172	4	SCREW
12	5040-7221	4	FOOT (REAR)
13	2360-0195	4	SCREW

Figure 6-1. Major Mechanical Parts on the Instrument Exterior
- Exploded View.

Table 6-6. Parts Identification

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
1	5040-7219	2	STRAP HANDLE CAP (FRONT)		
2	2680-0172	4	SCREW		
3	5060-9805	2	STRAP HANDLE		
4	1400-1051	4	CABLE CLAMP		
5	2510-0192	16	SCREW		
6	5020-8838	4	STRUT		
7	04192-60002	1	SIDE PLATE (L)		
8	5060-9948	2	SIDE COVER		
9	04192-00605	1	HOOK		
	04192-08000	1	SPRING		
10	04192-40002	1	COUPLER		
11	3101-2216	1	LINE SWITCH		
	3050-0235	2	WASHER		
	2910-0025	2	WASHER		
	0515-0150	2	SCREW		
12	5040-7220	2	STRAP HANDLE CAP (REAR)		
13	04192-01203	1	ANGLE		
14	2110-0564	1	FUSEHOLDER BODY		
	2110-0569	1	FUSEHOLDER NUT		
15	2110-0305	1	FUSE 1.25A 250V (198 ~ 250V)		
	2110-0016	1	FUSE 0.6A 250V (90 ~ 126V)		
16	2110-0565	1	FUSEHOLDER CAP		
17	1250-0118	7	CONNECTOR-BNC		
	1250-0252	2	CONNECTOR-BNC		
18	0360-1190	3	SOLDER TERMINAL		
19	2190-0016	10	WASHER		
20	2950-0001	7	NUT		
	2950-0035	2	NUT		
21	3160-0311	1	FAN		
22	1250-1499	1	ADAPTER-COAXIAL		
23	9100-4223	1	TRANSFORMER		
24	04192-00205	1	REAR PANEL		
25	2360-0113	17	SCREW		
26	1400-0611	3	CABLE CLAMP		
27	5020-8808	1	REAR FRAME		
28	1400-0866	24	CABLE CLAMP		
29	1390-0281	2	FASTENER-PLUNGER		
30	1390-0104	2	FASTENER-GROMMET		
31	04192-60004	1	SUB CHASSIS		
	2360-0115	6	SCREW		
	6960-0016	4	PLUG HOLE		
32	04192-60003	1	MAIN CHASSIS		
33	04192-00641	1	SHIELD		
	1400-0611	2	CABLE CLAMP		
	2360-0113	3	SCREW		
34	5060-9836	1	TOP COVER		
35	04192-60001	1	SIDE PLATE (R)		
36	2360-0333	6	SCREW		
37	5020-8807	1	FRONT FRAME		
38	04192-00203	1	SUB PANEL		
39	04192-00201	1	FRONT PANEL (HP)		
	04192-00202	1	FRONT PANEL (YHP)		
40	04192-25002	3	WINDOW		
	04192-85101	1	UNIT FILM (DISPLAY A)		
	04192-85102	1	UNIT FILM (DISPLAY B)		
41	7120-1254	1	NAME PLATE (HP)		
	7120-0478	1	NAME PLATE (YHP)		
42	04192-40001	1	GUIDE		
43	1250-0252	6	CONNECTOR-BNC		
44	04271-50025	6	INSULATOR-BNC		
45	04271-50024	6	INSULATOR-BNC		
46	2950-0035	6	NUT		
47	1510-0130	1	BINDING POST		
48	04192-40001	2	INSULATOR		
49	3050-0028	2	WASHER		
50	04192-61691	1	TERMINAL (CABLE ASSY)		
51	2190-0084	1	WASHER		
52	2950-0006	1	NUT		
53	5060-9848	1	BOTTOM COVER		
54	5041-0564	1	KEY CAP		
55	5040-7201	4	FOOT (BOTTOM)		
56	1460-1345	2	STAND		
57	04192-25003	1	RDD		

See introduction to this section for ordering information

SECTION VII MANUAL CHANGES

7-1. INTRODUCTION.

7-2. This section contains information for adapting this manual to instruments to which the contents do not directly apply. The following paragraphs explain how to adapt this manual to apply to older instruments with a lower serial prefix.

7-3. MANUAL CHANGES.

7-4. To adapt this manual to your particular instrument, refer to Table 7-1 and make all of the manual changes listed opposite your instrument serial number. Perform these changes in the summary by assembly.

7-5. If your instrument serial number is not listed on the title page of this manual or in Table 7-1 to the right, it may be documented in a yellow MANUAL CHANGES supplement. For additional information about serial number coverage, refer to INSTRUMENT COVERED BY MANUAL in Section I.

Table 7-1. Manual Changes by Serial Number.

Serial Prefix or Number	Make Manual Changes
2045J00253 and below	1, 2, 3, 4, 5, 6, 7, 9, 10, 12, 13, 15, 16, 17, 18, 19, 20, 21, 22
2045J00272 and below	2, 3, 4, 5, 6, 7, 9, 10, 12, 13, 15, 16, 17, 18, 19, 20, 21, 22
2045J00307 and below	3, 4, 5, 6, 7, 8, 9, 10, 12, 13, 15, 16, 17, 18, 19, 20, 21, 22
2045J00317 and below	4, 5, 6, 7, 8, 9, 10, 12, 13, 15, 16, 17, 18, 19, 20, 21, 22
2045J00325 and below	5, 6, 7, 8, 9, 10, 12, 13, 15, 16, 17, 18, 19, 20, 21, 22
2045J00357 and below	6, 7, 8, 9, 10, 12, 13, 15, 16, 17, 18, 19, 20, 21, 22
2045J00363 and below	7, 8, 9, 10, 12, 13, 15, 16, 17, 18, 19, 20, 21, 22
2045J00422 and below	8, 9, 10, 12, 13, 15, 16, 17, 18, 19, 20, 21, 22
2045J00472 and below	9, 10, 12, 13, 15, 16, 17, 18, 19, 20, 21, 22
2045J00522 and below	10, 11, 12, 13, 15, 16, 17, 18, 19, 20, 21, 22
2045J00547 and below	11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22
2045J00572 and	12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22
2150J00753 and below	13, 14, 15, 16, 17, 18, 19, 20, 21, 22
2150J00772 and below	14, 15, 16, 17, 18, 19, 20, 21, 22,
2150J01322 and below	15, 16, 17, 18, 19, 20, 21, 22
2150J01536 and below	15, 16, 18, 19, 20, 21, 22
2150J01572 and below	15, 16, 19, 20, 21, 22
2150J01673 and below	16, 19, 20, 21, 22
2150J01732 and below	19, 20, 21, 22
2150J01797 and below	20, 21, 22
2150J01977 and below	21, 22
2150J02322 and below	22

CHANGE 1


Page 8-127, Figure 8-80, A7 Board Schematic Diagram :
 Change the value of A7R66 to 1kΩ

Page 8-129, Figure 8-82, A8 Board Schematic Diagram :
 Change the value of A8C71 to 110pF


Page 6-26 and 6-28, Table 6-3, Replaceable Parts :
 See Table 7-2, Parts Information.

CHANGE 2

Page 8-85, Figure 8-47, A1 Board Schematic Diagram :
 Partially change the schematic as shown below :

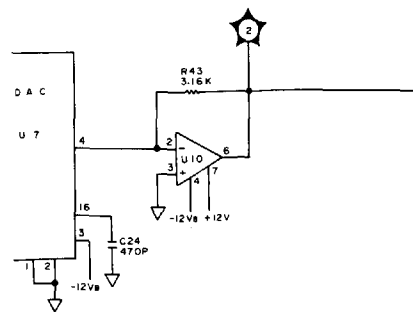

Page 8-78 and Page 8-84, Page 8-90, Figure 8-43, A1 Board Component Locations :
 Partially change the component locations as shown below :

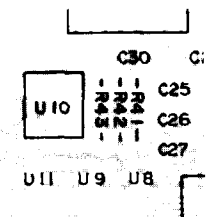


Page 6-4, Table 6-3, Replaceable Parts :
 See Table 7-2, Parts Information.

CHANGE 3


Page 8-113, Figure 8-69, A4 Board Schematic Diagram:
Change the values of A4R11 and R12 as follows:

- R11: 383Ω
- R12: 147kΩ

Partially change the schematic as shown below:

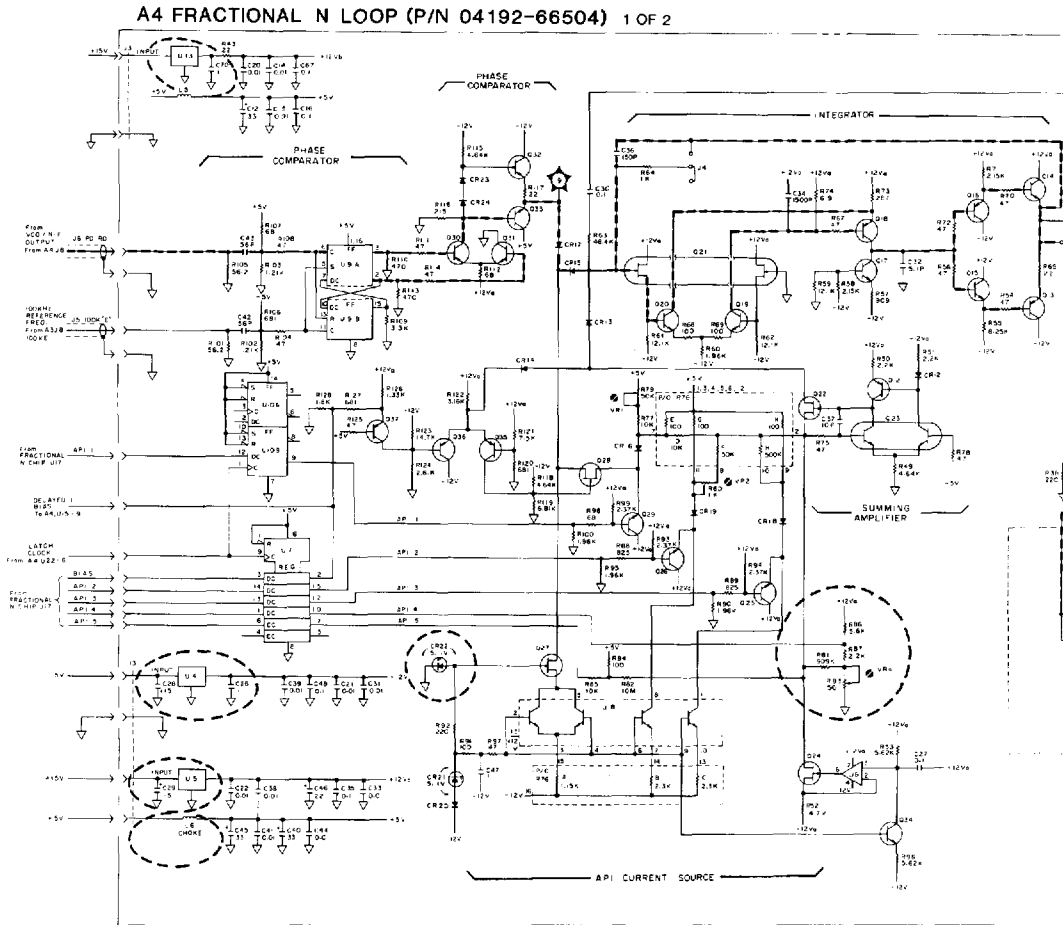

Page 8-112 and Page 8-115, Figure 8-68, A4 Board Component Locations:
Partially change the component locations as shown below:

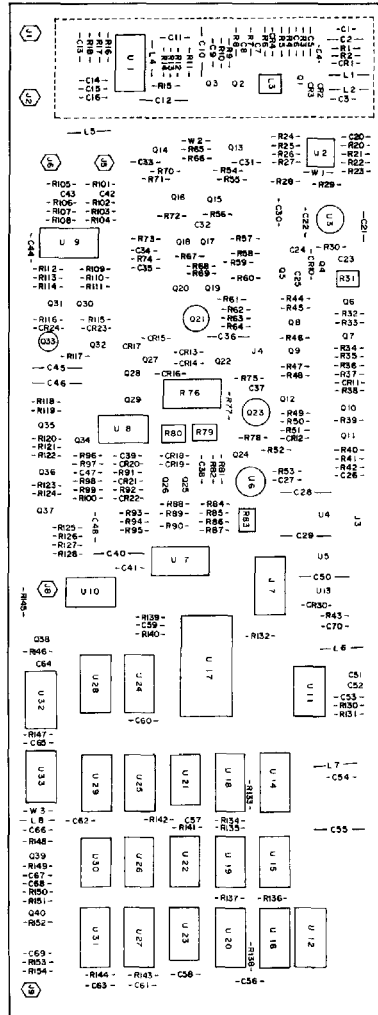

Page 8-103, Figure 8-60, A3 Board Schematic Diagram:
Partially change the schematic as shown in Figure 7-1.

Page 8-115, Figure 8-71, A4 Board Schematic Diagram:
Partially change the schematic as shown in Figures 7-3 and 7-4.

Page 8-127, Figure 8-80, A7 Board Schematic Diagram:
Change the value of A7R54 to 2.2k Ω

Page 8-137, Figure 8-87, A9 Board Schematic Diagram:
Change the values of A9C4, A9C5 and A9C6 to 0.01 μ F.

Pages 6-11, 6-13, 6-14, 6-15, 6-16, 6-17, 6-18, 6-26 and 6-31, Table 6-3 Replaceable Parts:
See Table 7-2, Parts Information.

CHANGE 4

Page 8-133, Figure 8-84, A8 Board Schematic Diagram:
Change the value of A8R61 to 422Ω

Change the value of A8R54 to 200Ω

Page 6-30, Table 6-3, Replaceable Parts:
See Table 7-2, Parts, Information.

CHANGE 5


Page 8-91, Figure 8-49, A1 Board Schematic Diagram:
Change the values of A1C15, C16 and C22 as follows:

- C15: 2.2pF
- C16: 8.2pF
- C22: 1.2pF - 4.2pF

Page 6-3, Table 6-3, Replaceable Parts:
See Table 7-2, Parts, Information.

CHANGE 6


Page 8-112 and Page 8-115, Figure 8-68, A4 Board Component Locations:
Partially change the component location as shown below:



Page 6-15, Table 6-3 Replaceable Parts.
See Table 7-2, Parts Information.

CHANGE 7

Page 8-133, Figure 8-84, A8 Board Schematic Diagram:
Partially change the schematic as shown below:

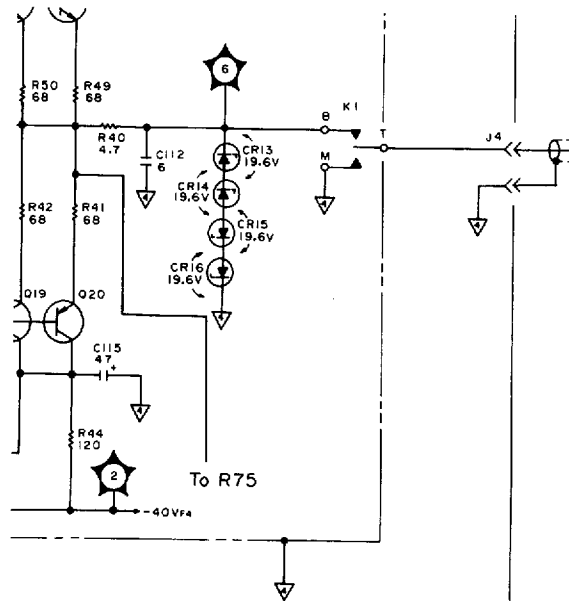

CHANGE 8

Page 8-103, Figure 8-60, A3 Board Schematic Diagram:
Partially change the schematic as shown in Figure 7-1.

Page 8-113, Figure 8-69, A4 Board Schematic Diagram:
Change the values of A4R11 and R12 as follows:

R11: 383Ω
R12: $147k\Omega$

Partially change the schematic as shown in Figure 7-2.

Page 8-115, Figure 8-71, A4 Board Schematic Diagram:
Partially change the schematic as shown in Figures 7-3 and 7-4.

Page 8-112 and Page 8-115, Figure 8-68, A4 Board Component Locations:
Change the component location as shown in Figure 7-5.

Pages 6-11, 6-13, 6-14, 6-15, 6-16, 6-17 and 6-18, Table 6-3, Replaceable Parts:
See Table 7-2, Parts Information.

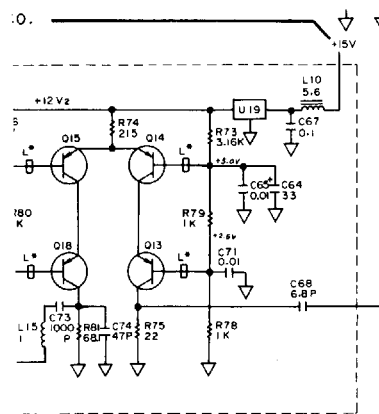


Figure 7-1.

A4 FRACTIONAL N LOOP (P/N 04192-66504) 1 OF 2

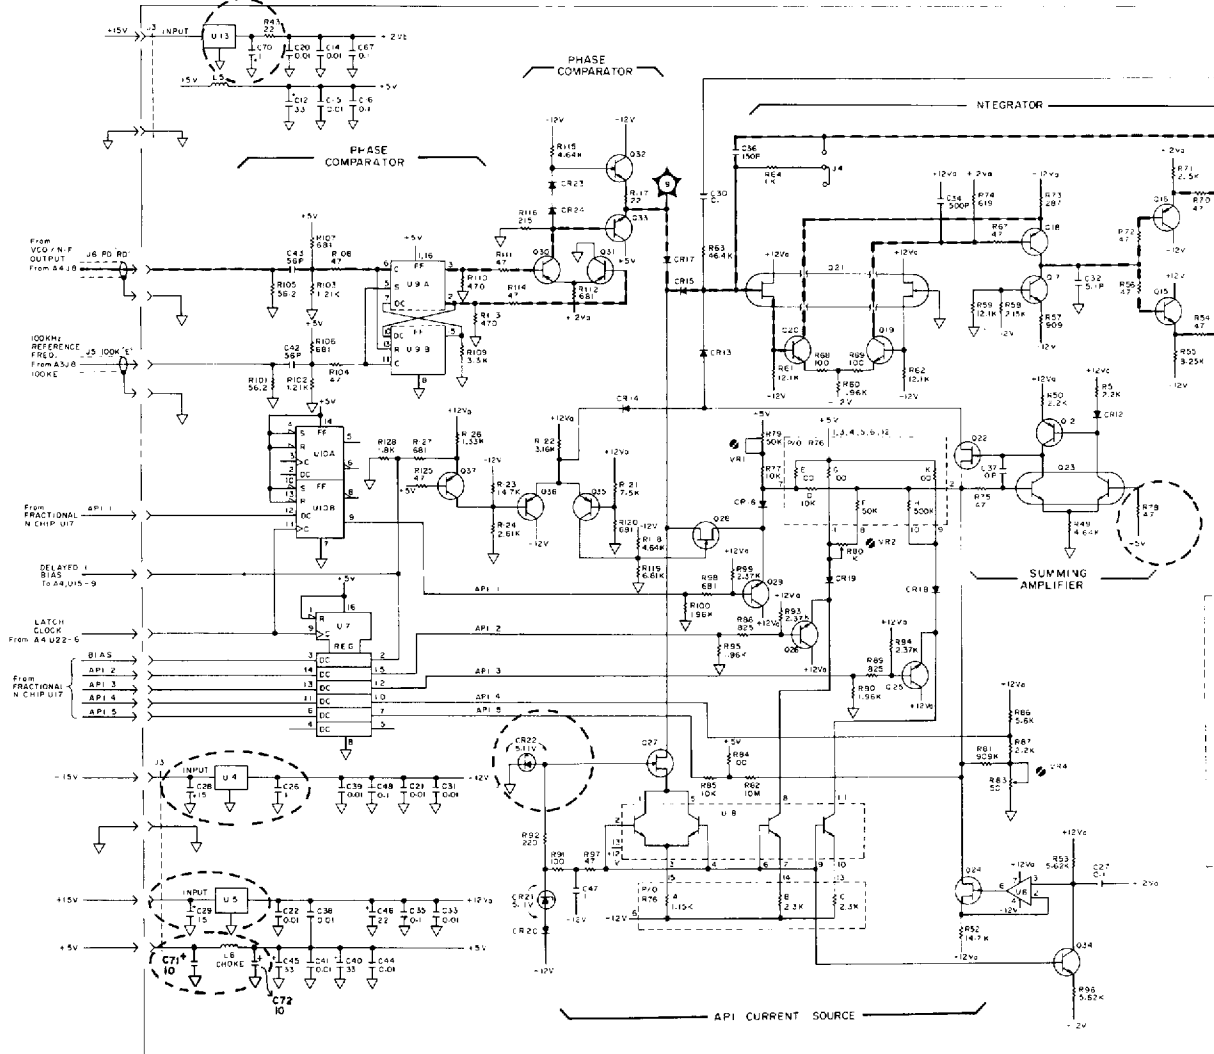


Figure 7-2.

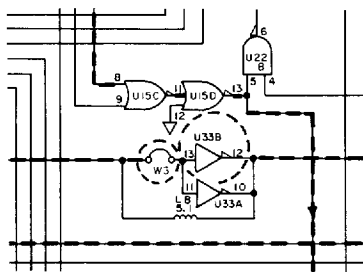


Figure 7-3.

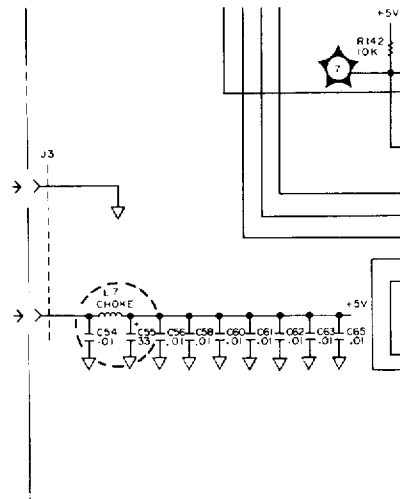


Figure 7-4.


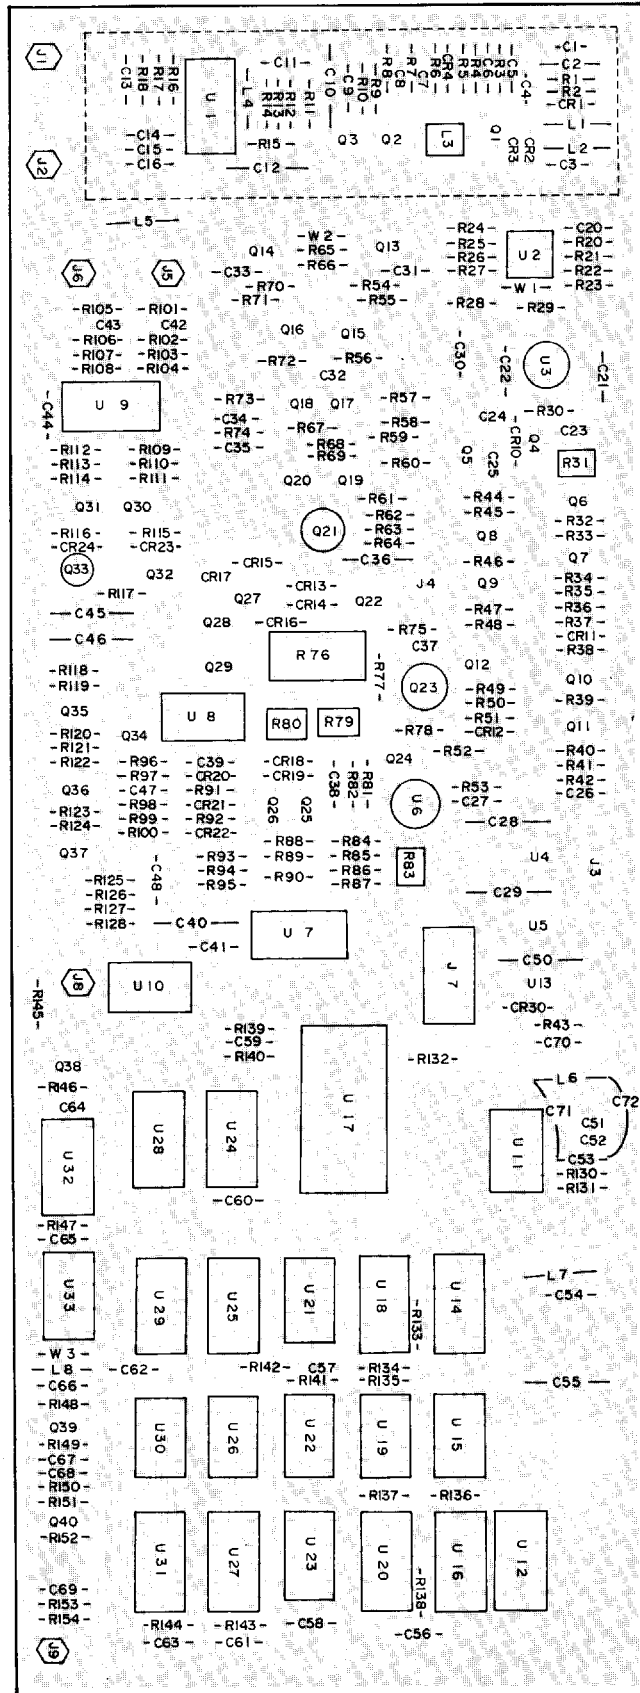


Figure 7-5.


CHANGE 9

Page 8-133, Figure 8-84, A8 Board Schematic Diagram:
Partially change the schematic as shown below:

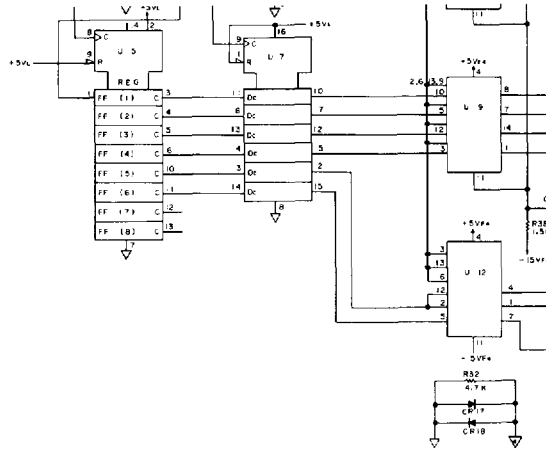


Pages 6-28, 6-29 and 6-30, Table 6-3, Replaceable Parts:
See Table 7-2, Parts Information.

Page 8-129 and Page 8-132, Figure 8-81, A8 Board Component Locations:
Change the component locations as shown below:

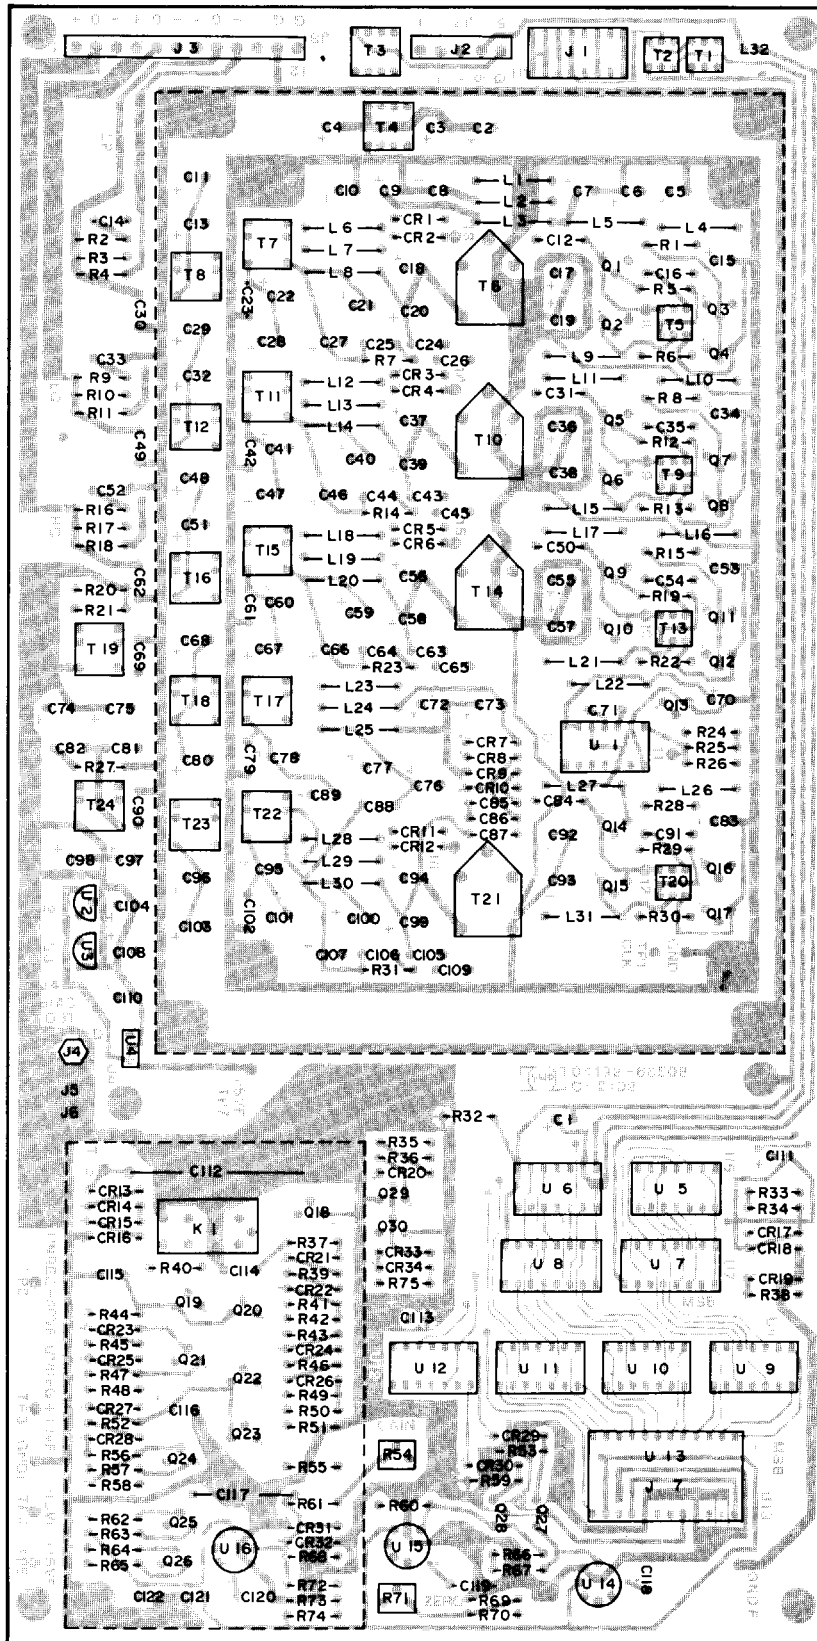


CHANGE 10

Page 8-112 and Page 8-115, Figure 8-68, A4 Board Component Locations:
Partially change the component locations as shown below:

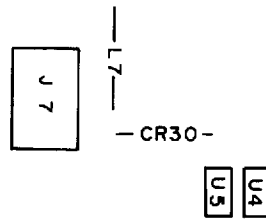


Page 8-115, Figure 8-71, A4 Board Schematic Diagram:
Partially change the schematic as shown below:

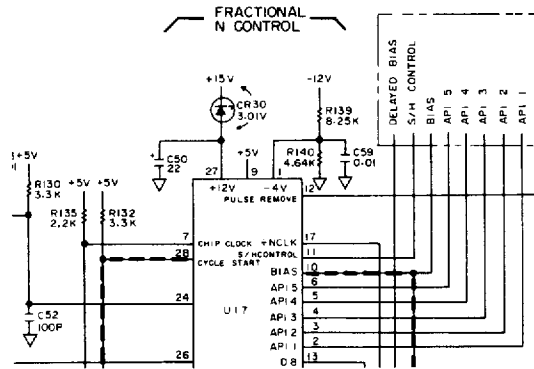


Page 6-15, Table 6-3, Replaceable Parts:
See Table 7-2, Parts Information.

CHANGE 11

Page 8-129 and Page 8-132, Figure 8-81, A8 Board Component Locations:
Partially change the component locations as shown below :

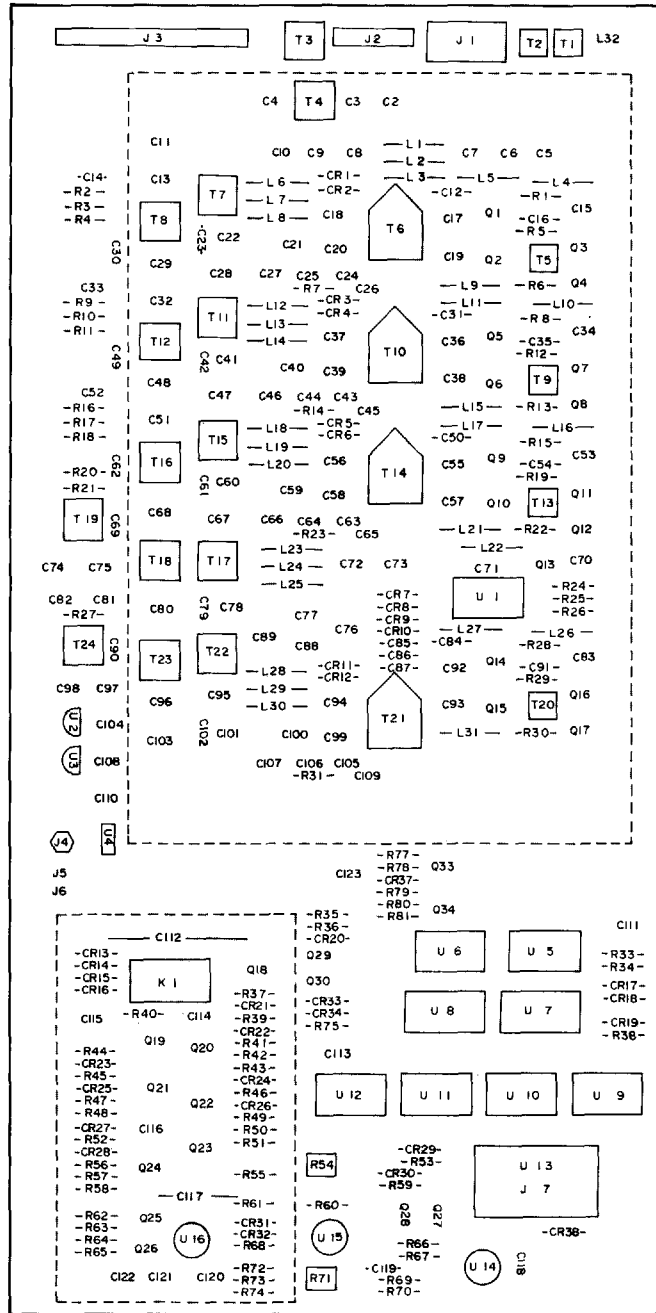

Page 8-133, Figure 8-84, A8 Board Schematic Diagram :
Partially change the schematic as shown below :

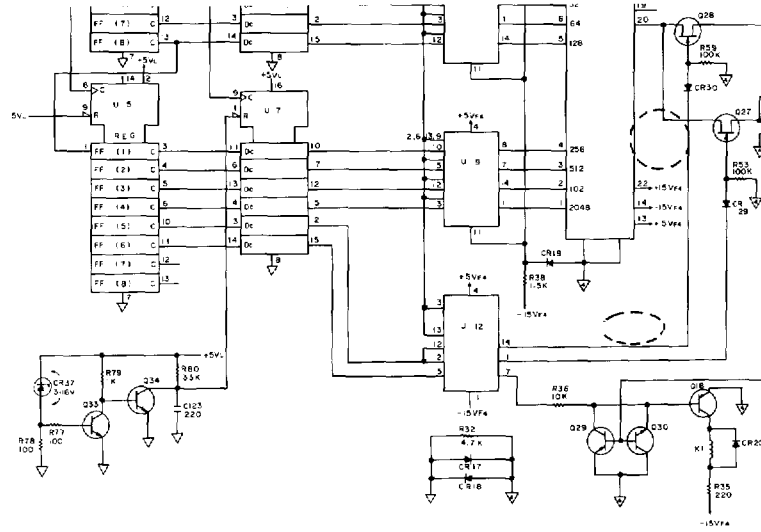


Page 6-29, Table 6-3, Replaceable Parts :
See Table 7-2, Parts Information.


CHANGE 12

Page 6-46, Table 6-6, Parts Identification :
See Table 7-2, Parts Information.

Page 2-2, Figure 2-1, Line Voltage and Fuse Selection :
Change the figure as shown below :

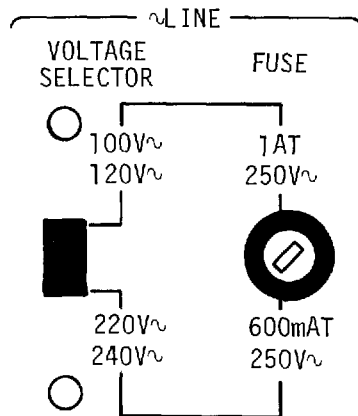

Page 8-127, Figure 8-80, A7 Board Schematic Diagram:
Partially change the schematic as shown below:

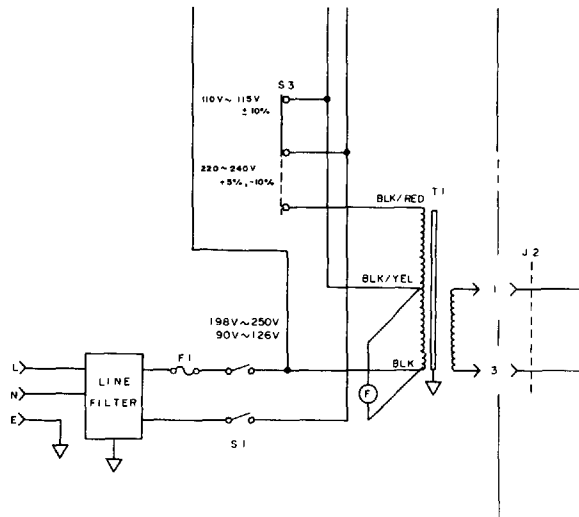


CHANGE 13

Page 8-85, Figure 8-47, A1 Board Schematic Diagram:
Change the value of A1R182 and A1R183 to 20kΩ

See Table 7-2, Parts Information.

CHANGE 14


Page 8-112 and Page 8-115, Figure 8-68 A4 Board Component Locations:
Partially change the component locations as shown below:

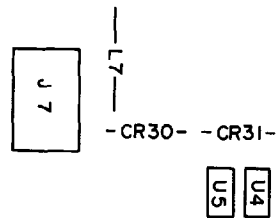


CHANGE 15

Figure 6-3, Replaceable Parts:
See Table 7-2. Parts Information.

Page 8-129 and 8-132, Figure 8-81, A8 Board Component Locations:
Partially change the figure as shown below:

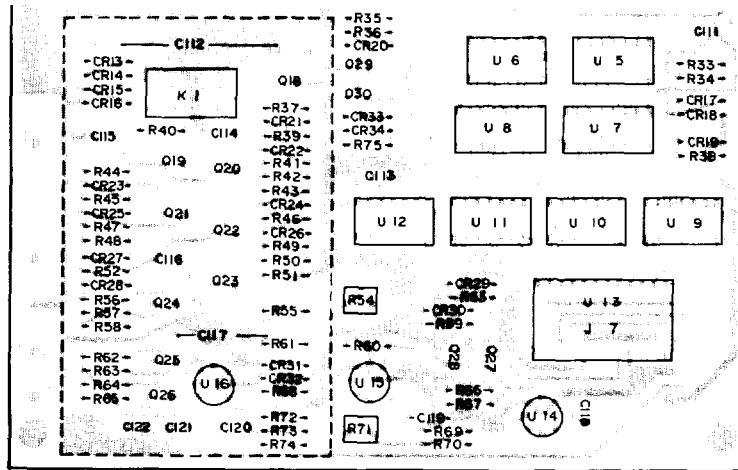

Page 8-133, Figure 8-84, A8 Board Schematic Diagram:
Partially change the figure as shown below:

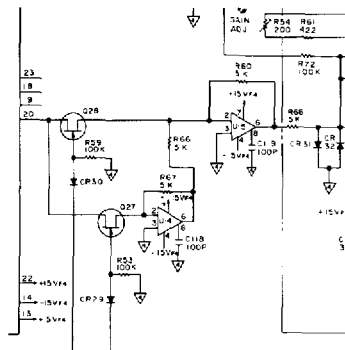


CHANGE 16

Table 6-3, Replaceable Parts:
See Table 7-2, Parts Information.


Page 8-96, Figure 8-54, A2 Phase Detector/A-D Converter Board Assembly Component Locations:

Change the Component Locations as shown below :

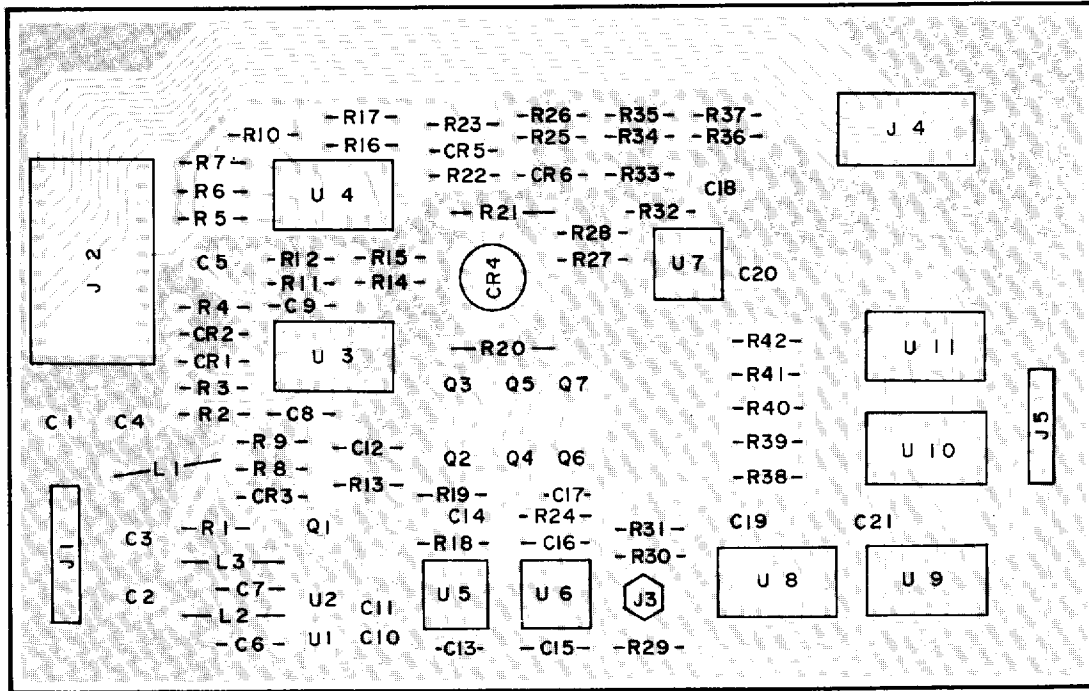


Page 8-85, Figure 8-47, A1 Range Resistor/Null Detector Board Assembly Schematic Diagram :

Change the diagram as shown below :

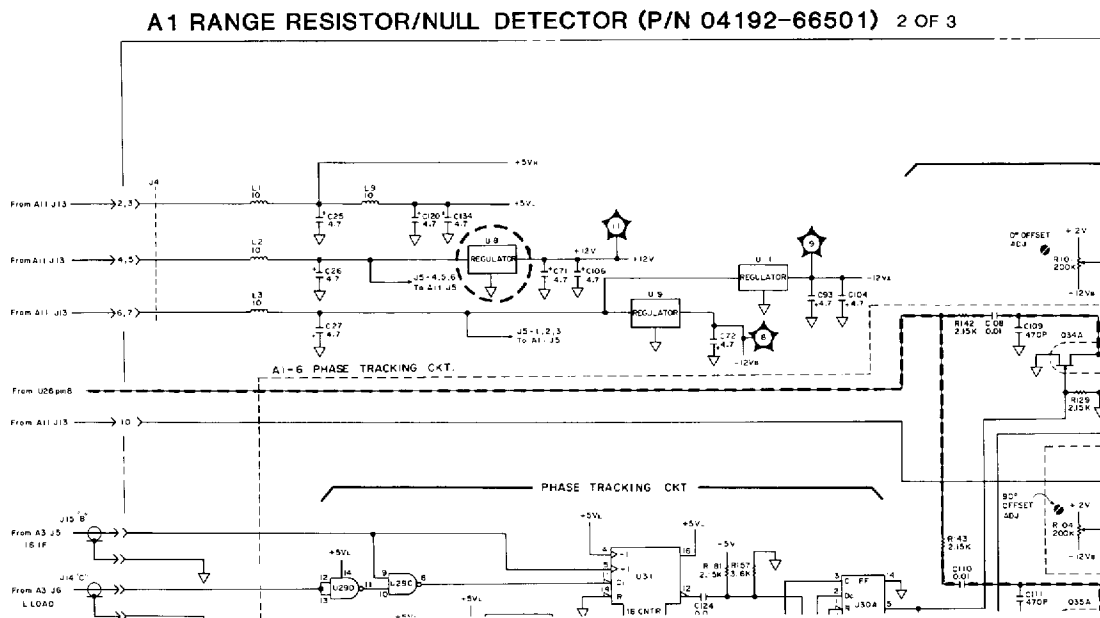


Page 8-91, Figure 8-49, A1 Range Resistor/Null Detector Board Assembly Schematic Diagram :

Change the diagram as shown below :

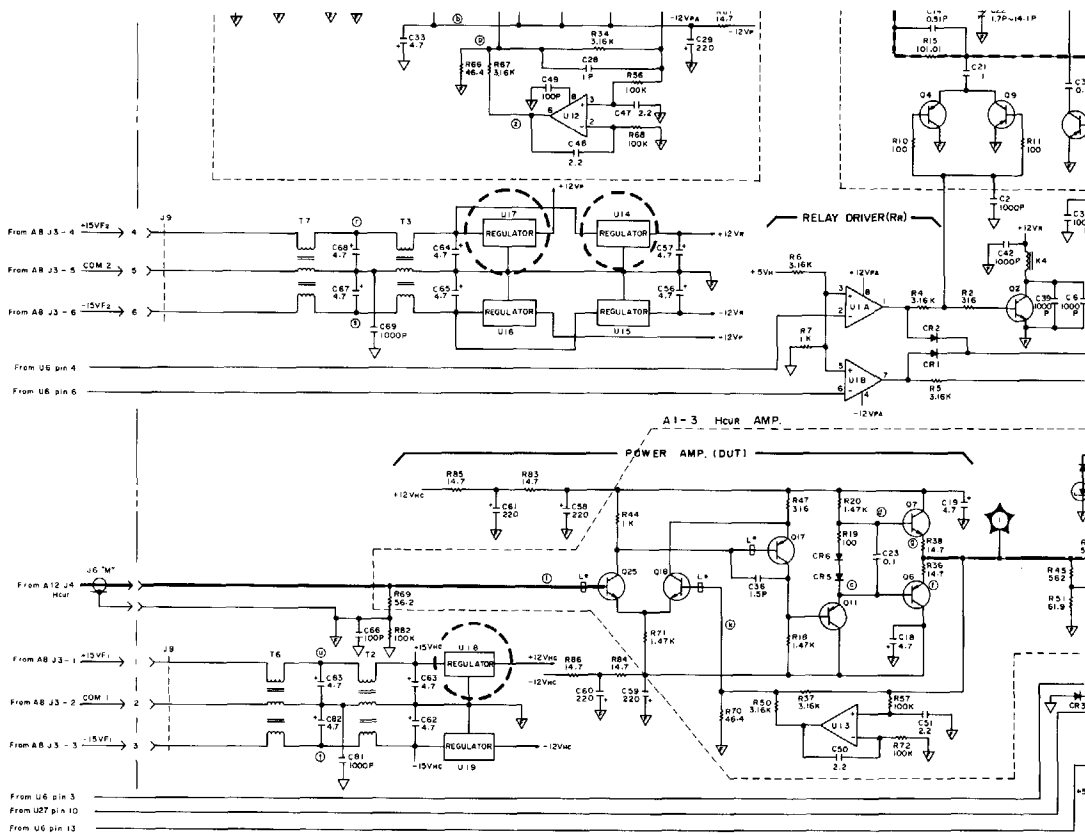

Page 8-97, Figure 8-55, A2 Phase Detector/A-D Converter Board Assembly Schematic Diagram :

Change the diagram as shown below :

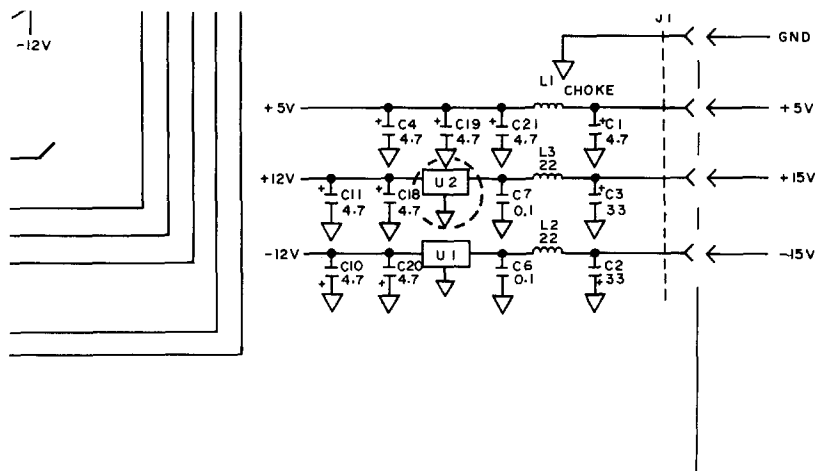


CHANGE 18

Page 6-28 and 6-31, Table 6-3 Replaceable Parts:
See Table 7-2, Parts Information.

Page 8-133, Figure 8-84, A8 Floating Power Supply/Bias Supply Board Assembly
Schematic Diagram:


Change the diagram as shown below :

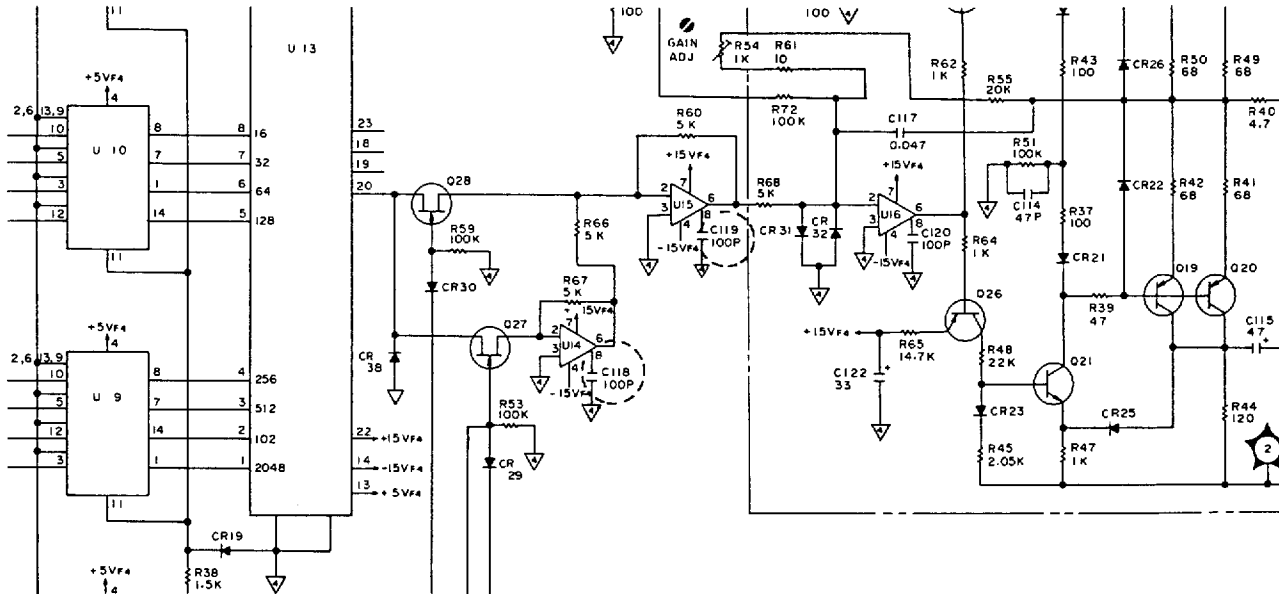

CHANGE 19

Page 6-17, Table 6-3, Replaceable Parts:
See Table 7-2, Parts Information.

Page 8-115, Figure 8-71, A4 Fractional N Loop Board Assembly Schematic Diagram:
Change the diagram as shown below:

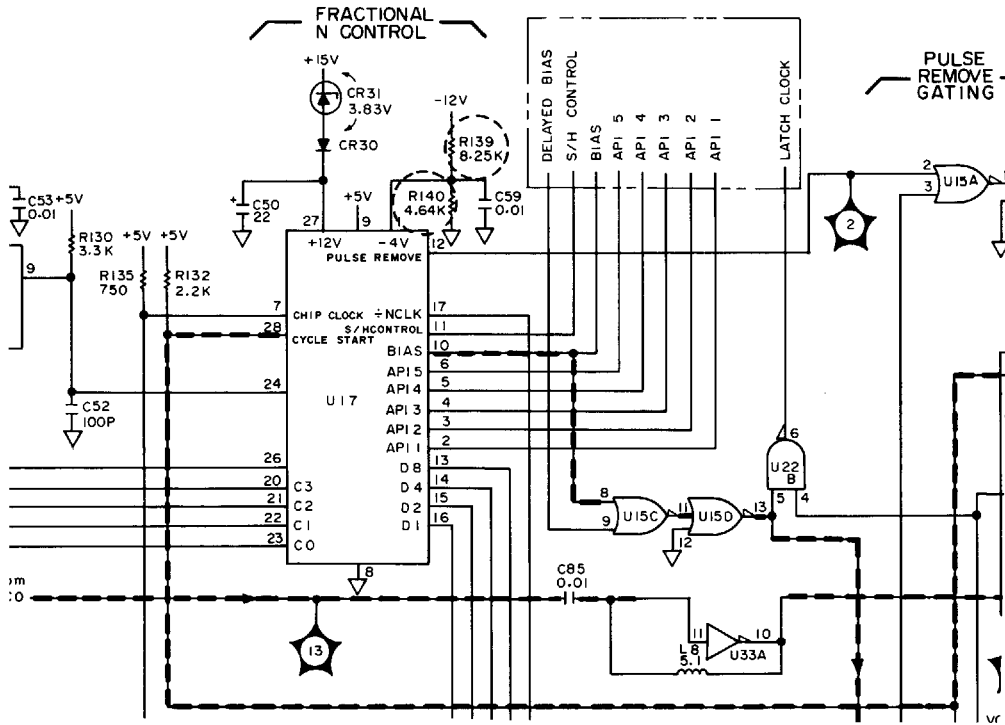


CHANGE 20

Page 6-21, Table 6-3, Replaceable Parts:
See Table 7-2, Parts Information.

Page 8-118, 8-120 and 8-122, Figure 8-74, A6 Microprocessor Digital Control Board
Assembly Component Locations:

Add 24-pin IC sockets to the locations shown below :

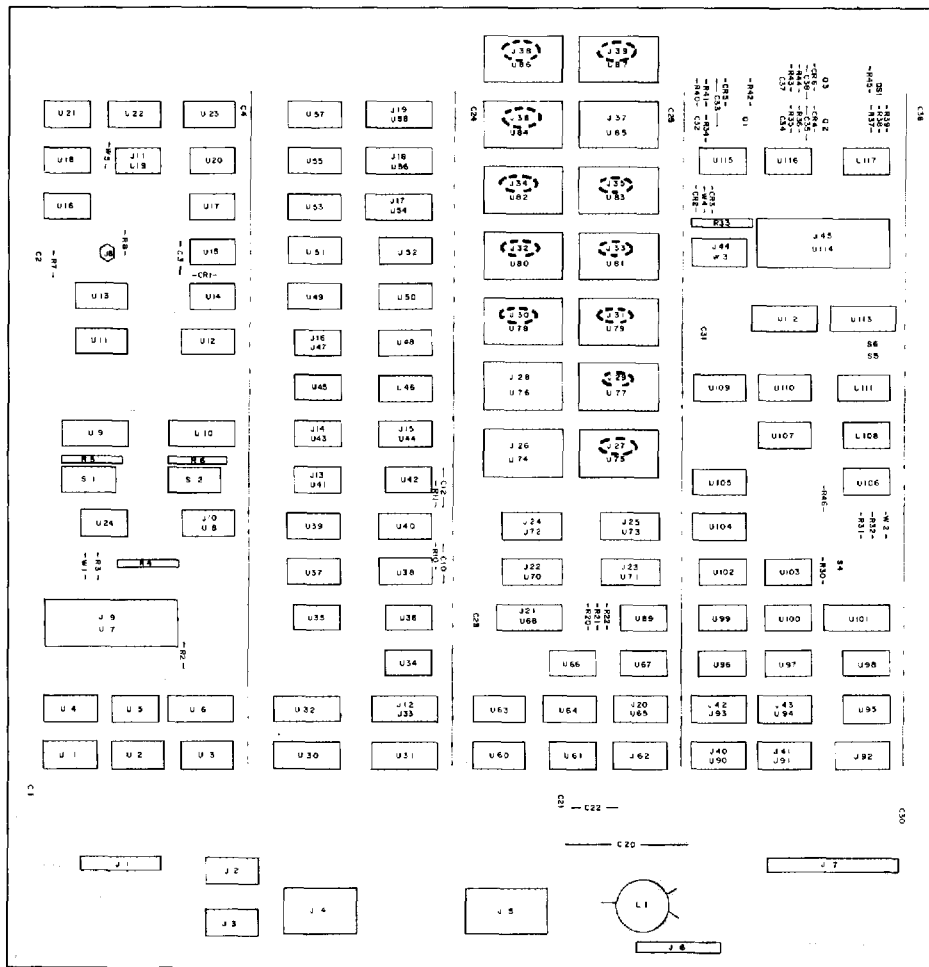

CHANGE 21

Page 8-127, Figure 8-80, A7 Power Supply Board and A10 Battery and Charger Board Assembly Schematic Diagram:

Change the diagram as shown below:

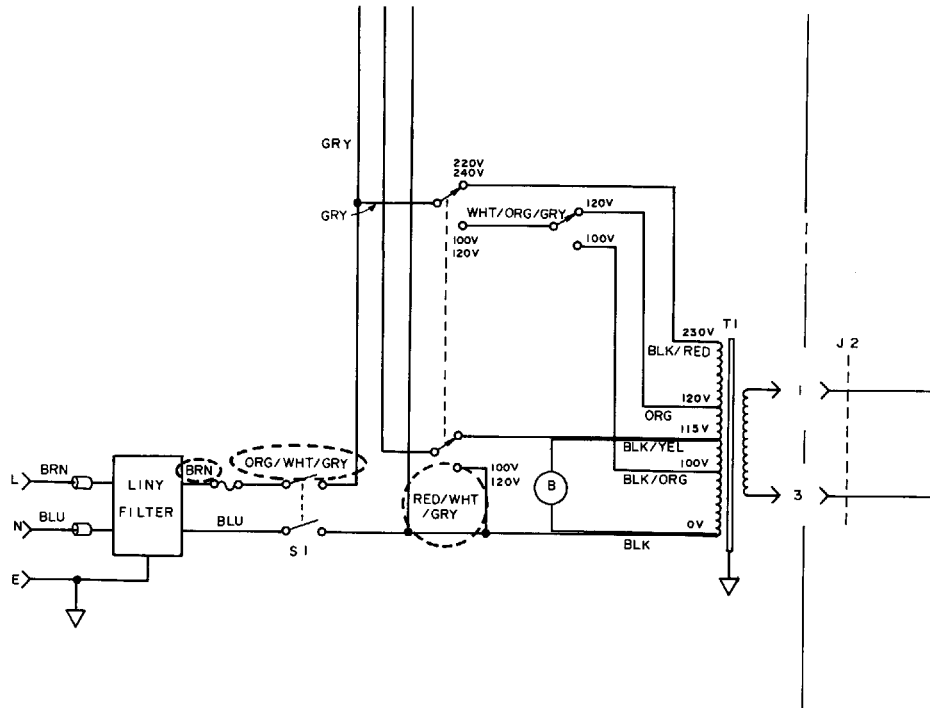


Table 7-2. Parts Information (Sheet 1 of 3)

CHANGE	Page	Note	Reference Designation	HP Part Number	Description
1	6-26	C	A7R66	2100-3211	RESISTOR-TRMR 1K 10% 1 TRN
	6-28	C	A8C71	0140-0194	CAPACITOR-FXD 110pF
2	6-4	C	A1C135	0160-2204	CAPACITOR-FXD 100pF
3 and 8	6-14	A	A4C26	0160-0127	CAPACITOR-FXD 1μF 50VDC
		C	A4C27	0160-4571	CAPACITOR-FXD .1μF 50VDC
		C	A4C28	0180-1746	CAPACITOR-FXD 15μF 20VDC
		A	A4C29	0180-1746	CAPACITOR-FXD 15μF 20VDC
		A	A4C54	0160-3847	CAPACITOR-FXD .01μF 50VDC
		A	A4C55	0180-0229	CAPACITOR-FXD 33μF 10VDC
		A	A4C70	0160-0127	CAPACITOR-FXD 1μF 50VDC
		D	A4C74	0180-1083	CAPACITOR-FXD 33μF
		D	A4C75	0180-1083	
		D	A4C76	0180-1083	
		D	A4C77	0180-1083	
		D	A4C78	0180-1083	
		D	A4C79	0180-1083	
		D	A4C80	0180-1050	CAPACITOR-FXD 100μF
	D	A4C81	0180-1085	CAPACITOR-FXD 4.7μF	
	D	A4C82	0180-1050	CAPACITOR-FXD 100μF	
	D	A4C83	0180-1085	CAPACITOR-FXD 4.7μF	
	D	A4C84	0160-0127		
	D	A4C85	0160-4832		
	6-15	A	A4CR22	1902-0041	DIODE-ZNR 5.11V 5%
		C	A4L7	9100-1788	CHOKE-WIDE BAND ZMAX=600
		D	A4L9	9100-1788	CHOKE-WIDE BAND ZMAX=600
		D	A4L10	9100-3139	INDVCTOR 75μA 15%
		A	A4Q24	1855-0082	TRANSISTORJ-FET P-CHAN
		A	A4Q34	1854-0215	TRANSISTOR NPN
	6-16	C	A4R11	0698-3446	RESISTOR 383 1%
		C	A4R12	0757-1094	RESISTOR 1.47K 1%
		A	A4R43	0683-2205	RESISTOR 22 5%
6-17	C	A4R96	0757-0200	RESISTOR 5.62K 1%	
6-18	A	A4U6	1826-0043	IC OP AMP	
	A	A4U13	5080-3070	IC DRUR TTL LS	
	A	A4W3	8159-0005	WIRE 22AWG	
3	6-26	C	A7R54	0683-2225	RESISTOR 2.2K 5%
	6-31	C	A9C4	0160-3847	CAPACITOR-FXD .01μF 50VDC
		C	A9C5	0160-3847	CAPACITOR-FXD .01μF 50VDC
C		A9C6	0160-3847	CAPACITOR-FXD .01μF 50VDC	
3 and 8	6-11	D	A3C80	0180-1050	CAPACITOR-FXD 100μF
	6-13	C	A3R74	0698-3401	RESISTOR 215 1% .5W
A		A3R87	0757-0401	RESISTOR 100 1%	
4	6-30	C	A8R54	2100-3212	RESISTOR-TRMR 200 10%
		C	A8R61	0698-3447	RESISTOR 422 1%
5	6-3	C	A1C15	0160-2241	CAPACITOR-FXD 2.2pF 500VDC
		C	A1C16	0160-2265	CAPACITOR-FXD 8.2pF 500VDC
		C	A1C22	0121-0127	CAPACITOR-V TRMR-AIR 1.5-4pF
6	6-15	D	A4J10	1200-0567	SKT-IC 28-CONT
8	6-14	A	A4C71	0180-0374	CAPACITOR-FXD 100μF 20V
		A	A4C72	0180-0374	CAPACITOR-FXD 100μF 20V

A: Add D: Delet C: Change

Table 7-2. Parts Information (Sheet 2 of 3)

CHANGE	Page	Note	Reference Designation	HP Part Number	Description
9	6-28	D	A8C123	0180-1052	CAPACITOR-FXD 220 μ F 6.3V
	6-29	D	A8CR37	1902-3036	DIODE-ZNR 3.16V 5%
	6-30	D	A8Q33	1854-0477	TRANSISTOR NPN 2N2222A
		D	A8Q34	1854-0477	TRANSISTOR NPN 2N2222A
		D	A8R77	0683-1015	RESISTOR 100 5% .25W
		D	A8R78	0683-1015	RESISTOR 100 5% .25W
D		A8R79	0683-1025	RESISTOR 1K 5% .25W	
D	A8R80	0683-3835	RESISTOR 33K 5% .25W		
10	6-15	C	A4CR30	1902-3030	DIODE-ZNR 3.01V 5%
		D	A4CR31	1902-3059	DIODE-ZNR 3.83V
11	6-29	D	A8CR38	1901-0050	DIOD-SWITCHING
		D	A8CR39	1901-0050	DIODE-SWITCHING
12	6-46	C	23	9100-0890	TRANSFORMET
		C	24	04192-00204	REAR PANEL
13	6-8	C	A1R182	2100-3353	RESISTOR-TRMR 20K
		C	A1R183	2100-3353	RESISTOR-TRMR 20K
15	6-28	A	A8C118	0160-2204	CAPACITOR-FXD 100pF
		A	A8C119	0160-2204	CAPACITOR-FXS 100pF
	6-31	C	A8U14	1826-0035	IC OP AMP
C		A8U15	1826-0035	IC OP AMP	
16	6-20	A	A5 M/P	1251-1998	CONNECTOR-SGL CONT SKT
		D	A5 M/P	5040-3323	INSULATOR
17	6-5	D	A1CR39	1902-3136	DIODE-ZNR 8.06V 12.5MA DO-35
		D	A1CR40	1902-3136	DIODE-ZNR 8.06V 12.5MA DO-35
		D	A1CR41	1902-3136	DIODE-ZNR 8.06V 12.5MA DO-35
		D	A1CR42	1902-3136	DIODE-ZNR 8.06V 12.5MA DO-35
	6-8	D	A1R184	0683-3315	RESISTOR 330 Ω 5% .25W TC=0-400
		D	A1R185	0683-3315	RESISTOR 330 Ω 5% .25W TC=0-400
		D	A1R186	0683-3315	RESISTOR 330 Ω 5% .25W TC=0-400
		D	A1R187	0683-3315	RESISTOR 330 Ω 5% .25W TC=0-400
	6-9	D	A2CR7	1902-3136	DIODE-ZNR 8.06V 12.5MA DO35
	6-10	D	A2R43	0683-3315	RESISTOR 330% 5% .25W TC=0-400
	6-28	A	A8C118	0160-2204	CAPACIOTO-FXD 100pF \pm 5% 330VDC MICA
A		A8C119	0160-2204	CAPACITOR-FXD 100pF \pm 5% 300VDC MICA	
18	6-31	C	A8U14	1826-0035	IC OP AMP LOW-DRIFT TO-99 PKG
		C	A8U15	1826-0035	IC OP AMP LOW-DRIFT TO-99 PKG
	6-17	C	A4R139	0757-0441	RESISTOR 8.25K 1% .125W
C		A4R140	0698-3155	RESISTOR 4.64K 1% .125W	

A: Add D: Delete C: Change

Table 7-2. Parts Information (Sheet 3 of 3)

CHANGE	Page	Note	Reference Designation	HP Part Number	Description
20	6-21	A	A6J27	1200-0541	SOCKET-IC 24-CONT DIP
		A	A6J28	1200-0541	SOCKET-IC 24-CONT DIP
		A	A6J29	1200-0541	SOCKET-IC 24-CONT DIP
		A	A6J30	1200-0541	SOCKET-IC 24-CONT DIP
		A	A6J31	1200-0541	SOCKET-IC 24-CONT DIP
		A	A6J32	1200-0541	SOCKET-IC 24-CONT DIP
		A	A6J33	1200-0541	SOCKET-IC 24-CONT DIP
		A	A6J34	1200-0541	SOCKET-IC 24-CONT DIP
		A	A6J35	1200-0541	SOCKET-IC 24-CONT DIP
		A	A6J36	1200-0541	SOCKET-IC 24-CONT DIP
		A	A6J37	1200-0541	SOCKET-IC 24-CONT DIP
		A	A6J38	1200-0541	SOCKET-IC 24-CONT DIP
		A	A6J39	1200-0541	SOCKET-IC 24-CONT DIP

A: Add D: Delete C: Change

